



YARIS SEDAN

2 0 1 9



QUICK REFERENCE GUIDE



TOYOTA

2019

Yaris Sedan

This Quick Reference Guide is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The Quick Reference Guide is not intended as a substitute for the Owner's Manual located in your vehicle's glove box. We strongly encourage you to review the Owner's Manual and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor North America, Inc. wish you many years of satisfied driving in your new Yaris Sedan.

A word about safe vehicle operations

This Quick Reference Guide is not a full description of Yaris Sedan operations. Every Yaris Sedan owner should review the Owner's Manual that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the Owner's Manual. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this Quick Reference Guide is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

INDEX

OVERVIEW

Engine maintenance	7
Fuel tank door release and cap	8
Hood release	8
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Keyless entry*	6
Smart Key system	7
Trip information/ Instrument panel light control	8

FEATURES & OPERATIONS

Air conditioning/heating	14
Audio/navigation	17
Automatic transmission	9
AUX port/USB media port	17
Bottle holders/cup holders	9
Cruise control	15
Door locks	13
Drive selection	19
Lights & turn signals	11
Manual transmission	9
Parking brake	13
Power outlet	16
Rear view monitor system	18
Seat-Folding down rear seat	10
Seat adjustments-Front	10
Seat heaters	15
Seats-Head restraints	10
Low-Speed Pre-Collision System (Smart City Brake Support)	19
Steering wheel switches	16
TCS (Traction Control System)/DSC (Dynamic Stability Control) OFF switch	18
Tilt & telescopic steering wheel	16
Windows-Power	13
Windshield wipers & washers	12

SAFETY & EMERGENCY FEATURES

Floor mat installation	24
Rear door child safety locks	20
Safety System	23-24
Seat belts	21
Seat belts-Shoulder belt anchor	20
Spare tire & tools	22
Tire Pressure Monitoring (warning) System (TPMS)	21

PAIRING BLUETOOTH® PHONE FOR THE FIRST TIME 26-27


* Visit your Toyota dealer for information on customizing this feature.

Instrument panel


Audio control and telephone switches

Cruise control switches


¹ If equipped.

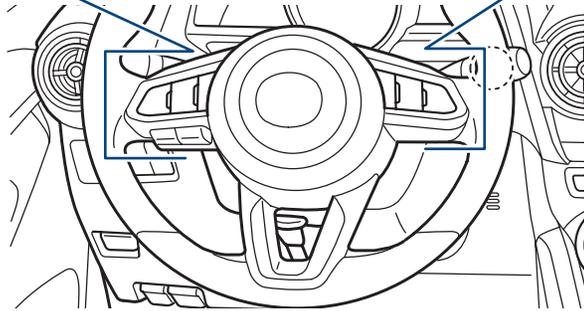

Steering wheel controls

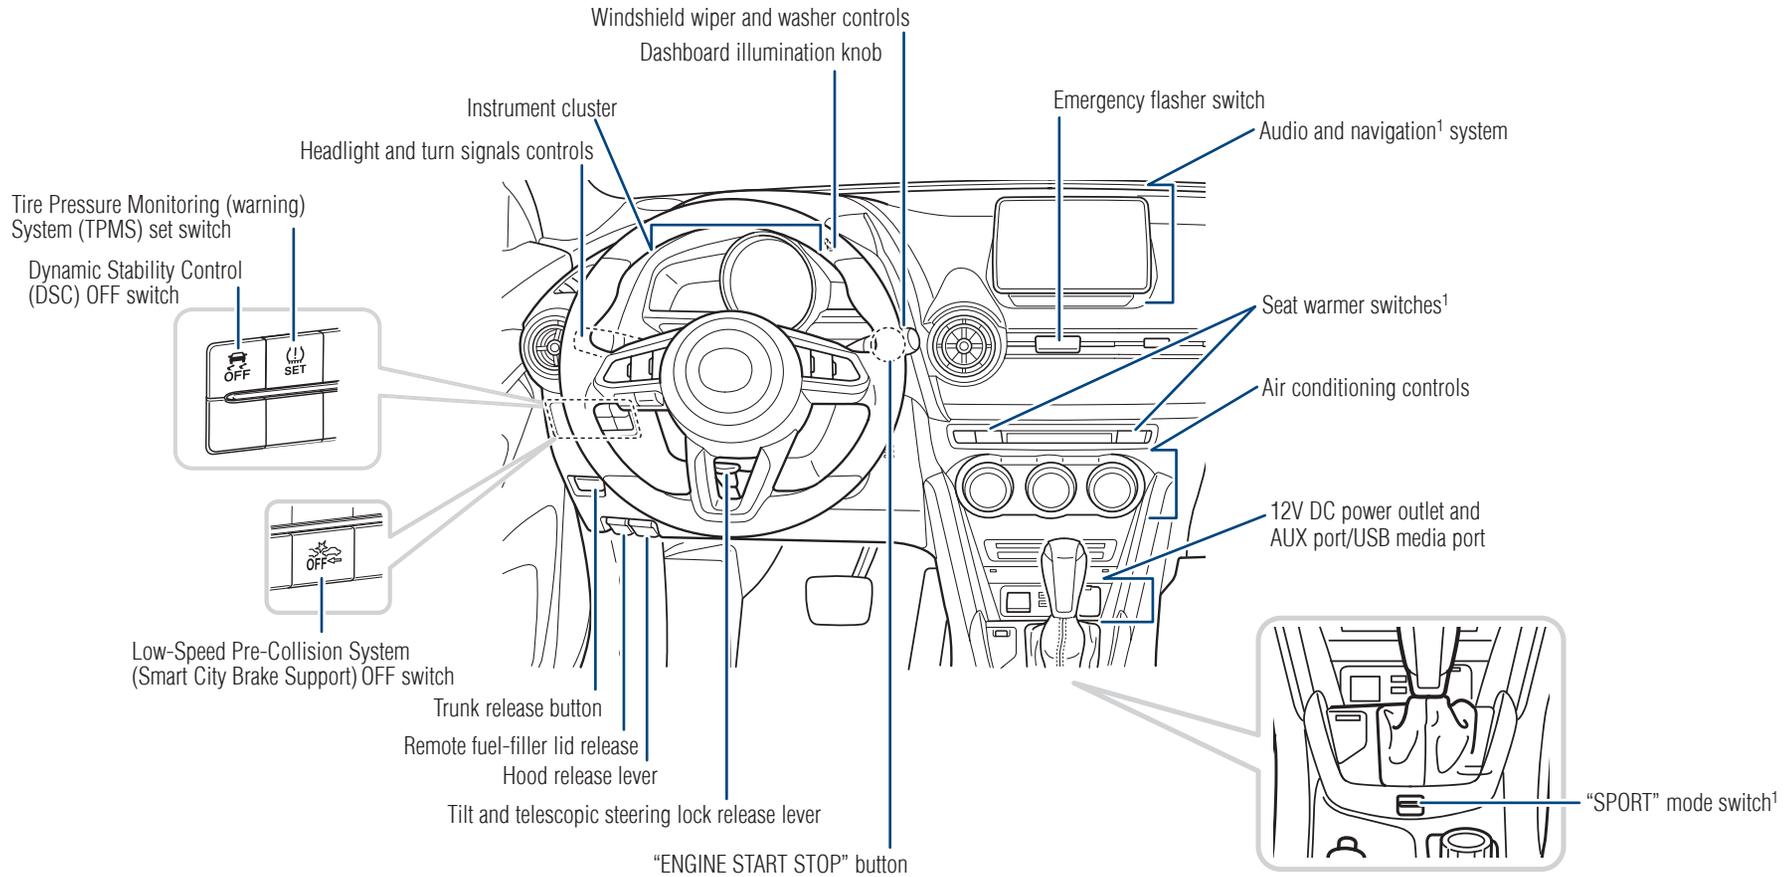

Instrument cluster

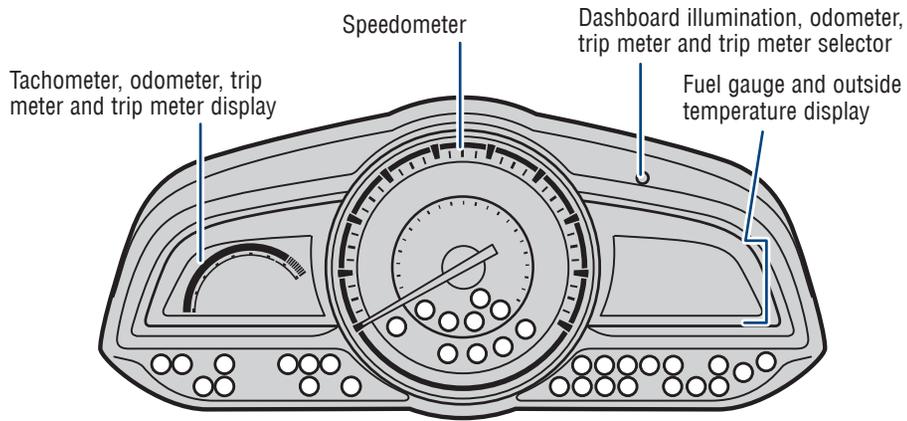

○ Service indicators and reminders

Indicator symbols

For details, refer to "Indicators and warning lights," Section 3-2, 2019 Owner's Manual.

-  ABS warning¹
-  Air Bag SRS/Front Seat Belt Pretensioner System warning¹
-  **AT** Automatic Transaxle warning^{1,4}
-  **BRAKE** Brake System warning^{1,3}
-  Charging system warning¹
-  Check Fuel Cap warning¹
-  Cruise control main indicator [White]
-  Cruise control set indicator [Green/White]
-  **OFF** DSC OFF indicator¹
-  Door-Ajar warning

-  **PASS AIRBAG OFF** Front Passenger Air Bag Deactivation indicator¹
-  Headlight High-Beam indicator
-  High Engine Coolant Temperature warning [Red]¹
-  **KEY** Warning [Red]¹ or indicator [Green]
-  LED Headlight warning^{1,4}
-  Lights-On indicator
-  Low engine oil pressure warning¹
-  Low Fuel warning
-  Low Engine Coolant Temperature indicator [Blue]¹
-  Low-Speed Pre-Collision System (Smart City Brake Support) warning [Amber] or indicator [Red]¹
-  Low-Speed Pre-Collision System (Smart City Brake Support) OFF indicator¹
-  Low Washer Fluid Level warning⁴
-  Malfunction/Check Engine indicator¹
-  Master warning¹
-  Power Steering Malfunction indicator^{1,2}
-  **PASS** Seat Belt warning (Front seat)
-  Security indicator¹
-  **SPORT** Select Mode indicator⁴
-  Shift Position indicator⁴
-  TSC/DSC indicator¹
-  Tire Pressure Monitoring System warning^{1,2}
-  Turn Signal/Hazard warning
-  Wrench indicator^{1,4}

¹ If the indicator does not turn off within a few seconds of starting the engine, there may be a malfunction. Have the vehicle inspected by your Toyota dealer.

² If the indicator flashes, there may be a malfunction. Refer to the Owner's Manual.

³ The light turns on continuously when the parking brake is applied.


⁴ If equipped.

Keyless entry (if equipped)

UNLOCKING OPERATION



Push
ONCE: Driver door
TWICE: All doors

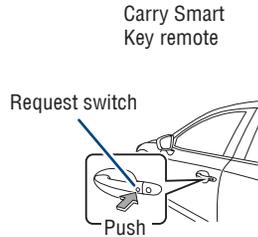


NOTE: If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.


LOCKING OPERATION



Push

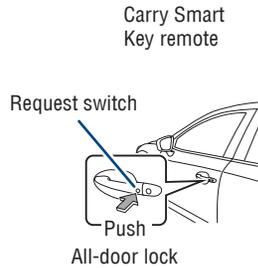


TRUNK BUTTON

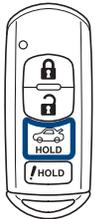

HOLD
Push and hold


PANIC BUTTON

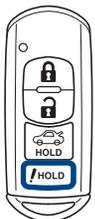

! HOLD
Push and hold



Smart Key system

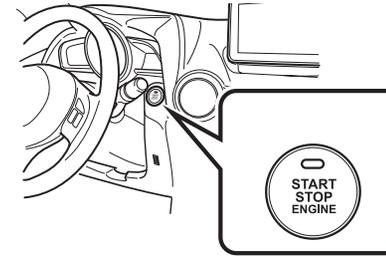


NOTE: The Smart Key must be carried to enable the start function. With gear shift lever in Park and the brake pedal depressed (automatic transmission)/ with the gear shift lever in N and the clutch pedal depressed (manual transmission), push the “ENGINE START STOP” switch.

POWER (WITHOUT STARTING ENGINE)

Without depressing the brake pedal, pressing the engine switch will change the operation mode in succession from:


ACCESSORY	Accessory – Some electrical components can be used.
ON	On - All electrical components can be used.
OFF	Off - All systems OFF. Emergency flashers can be used.

Engine maintenance

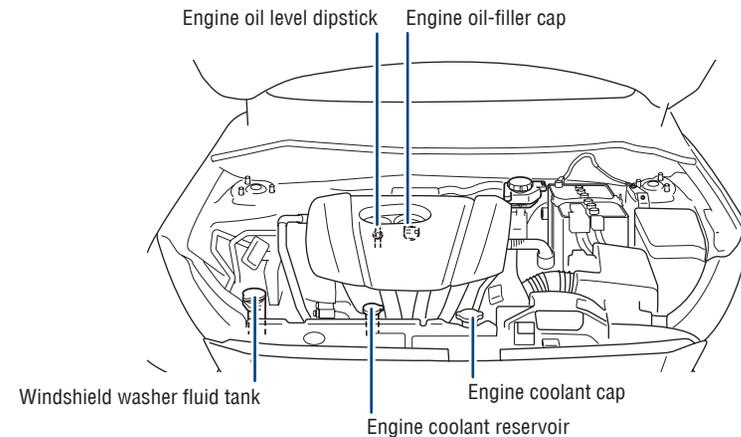


NOTE: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. *Please refer to the “Warranty Maintenance Guide.”*


Fuel tank door release and cap

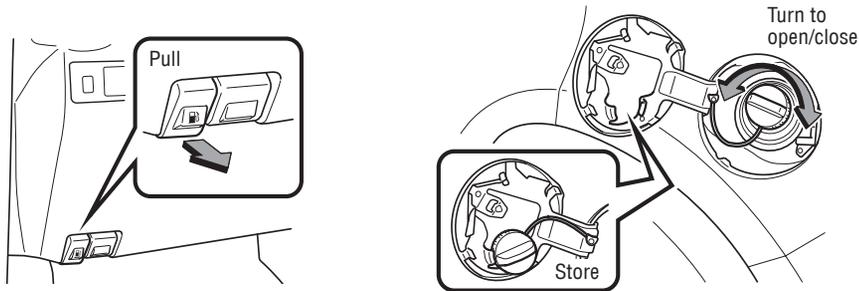


Hood release

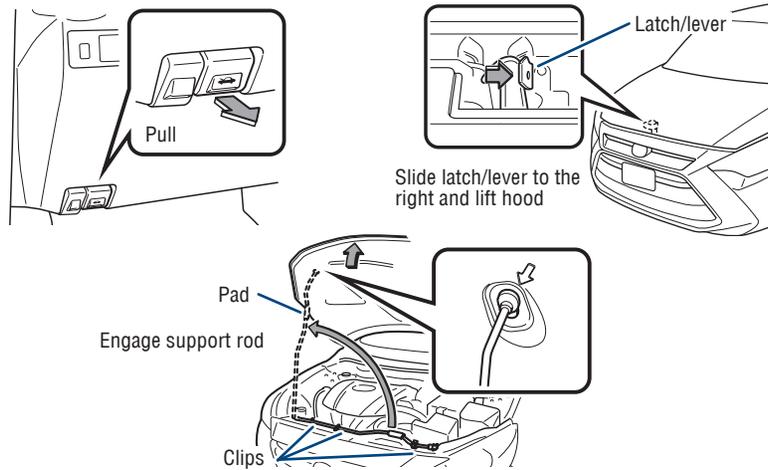

Trip information / Instrument panel light control

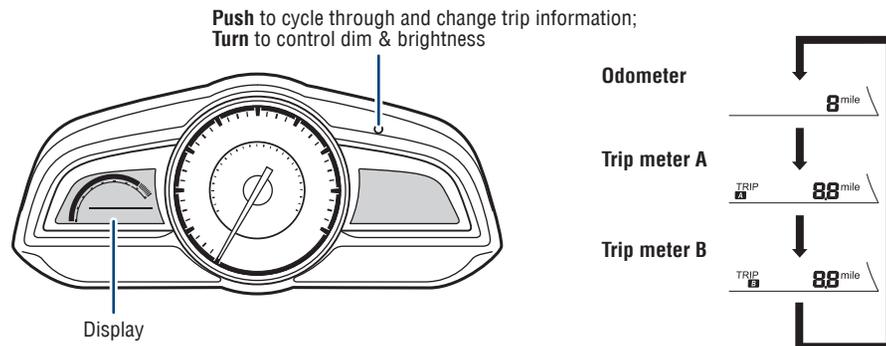

Automatic transmission (if equipped)

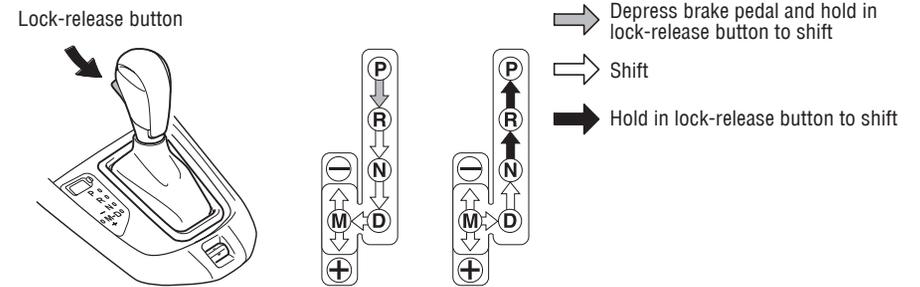

The engine switch must be "ON."

"M" 6-SPEED SPORT SEQUENTIAL SHIFTMATIC MODE

Push shift lever to the left from "D" position, to "M" position.

- +: Upshift (pull and release)
- : Downshift (push and release)

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.


Manual transmission (if equipped)




For safety, Push entire shift lever down to shift into R

Bottle holders/cup holders


Bottle holders

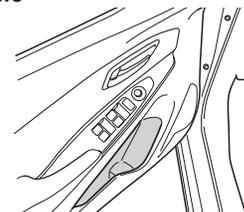


Cup holders

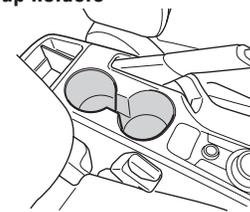

Seat adjustments-Front

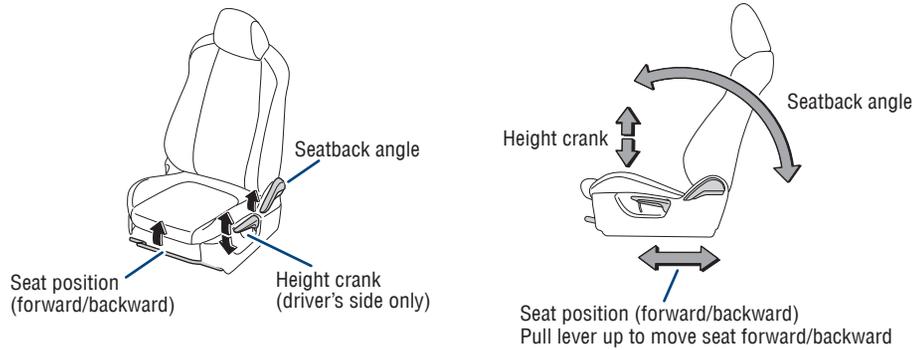




Seats-Head restraints

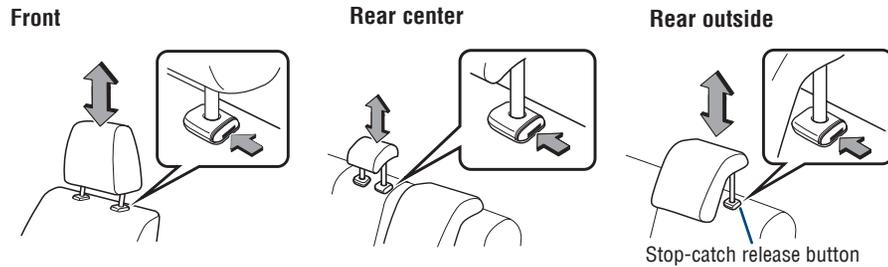

Seat-Folding down rear seat

Tip. To fold rear seats, the release button is located in the trunk


(1) Push to open the trunk door

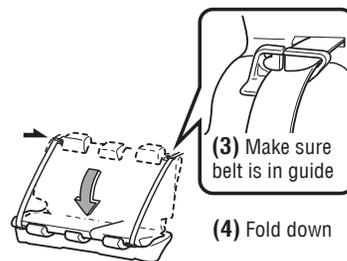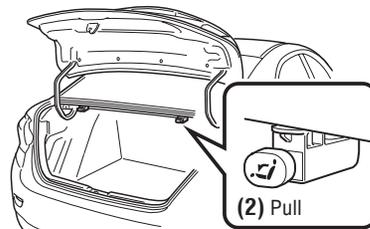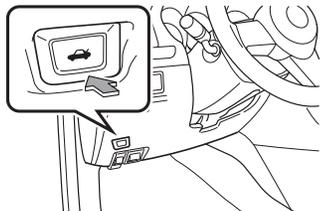


Lights & turn signals

HEADLIGHTS

Without auto-light control

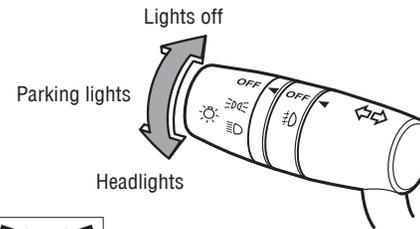


High beam

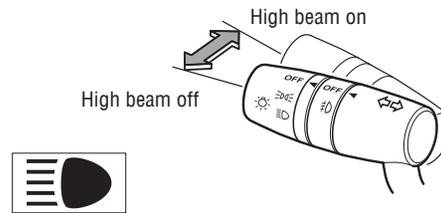

When the headlights are turned off, the high beams will only operate in the flasher mode.


With auto-light control

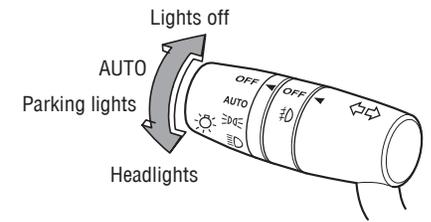

FOG LIGHTS (IF EQUIPPED)




TURN SIGNALS

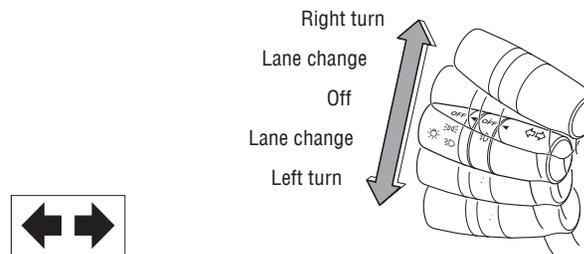


Windshield wipers & washers

INTERMITTENT WIPER (IF EQUIPPED)

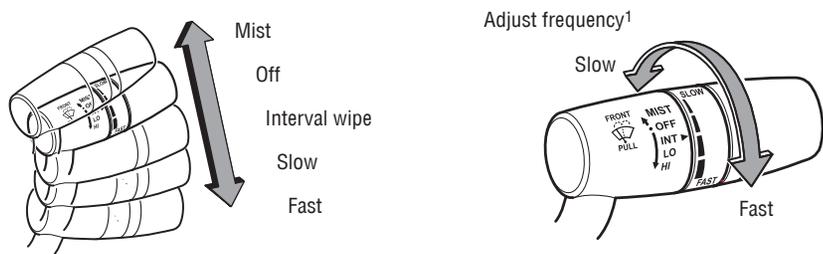


¹ **Intermittent windshield wiper frequency adjustment** Rotate to increase/decrease wipe frequency.

AUTO (RAIN-SENSING) WIPER (IF EQUIPPED)

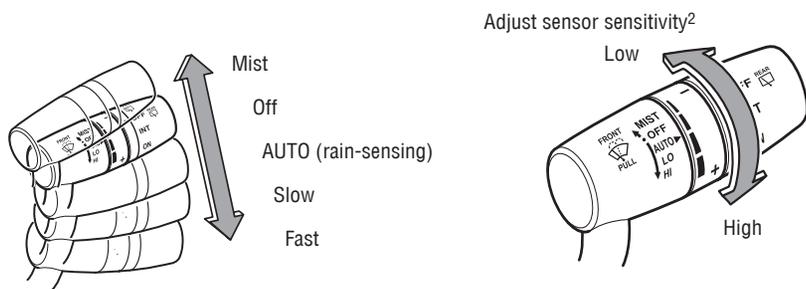

² **Rain-sensing windshield wiper** Rotate to increase/decrease sensor sensitivity.



WASHER

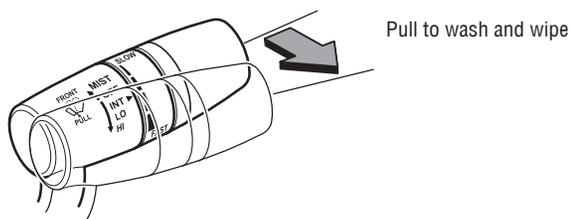

With the wiper lever in the OFF or INT position, the wipers will operate continuously until the lever is released.

Windows-Power

Driver's side

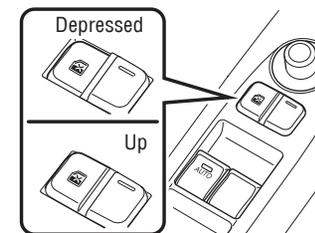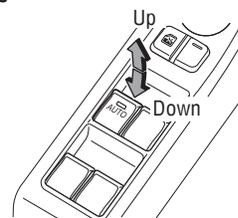


Window lock switch

All window auto up/down Push the switch completely down or pull it completely up and release to fully open or close. To stop the window partway, operate the switch in the opposite direction.


Window lock switch Deactivates all passenger windows. Driver's window remains operable.

Door locks

Driver's side

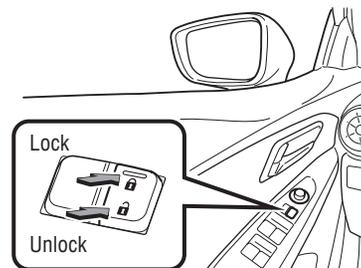


Passenger's side

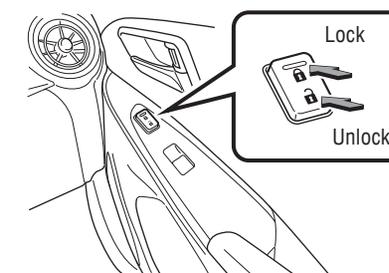


Parking brake

Set

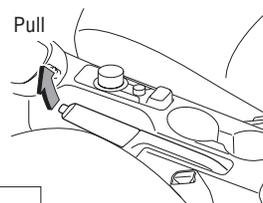


BRAKE

Release

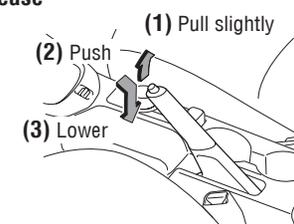


Air conditioning/heating


MANUAL TYPE (IF EQUIPPED)

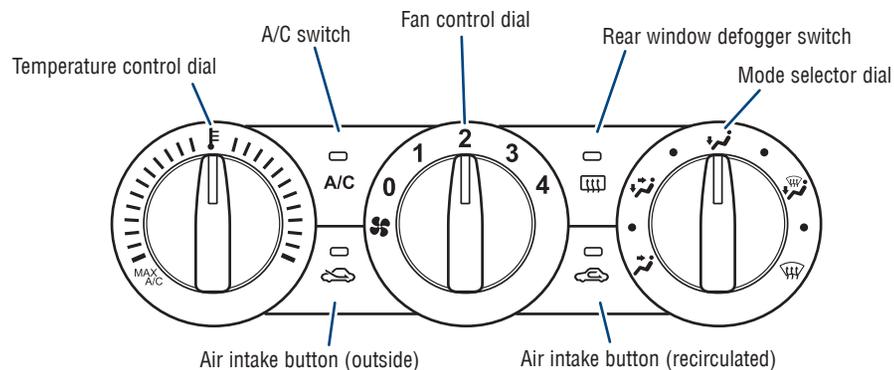

FULLY AUTOMATIC TYPE (IF EQUIPPED)

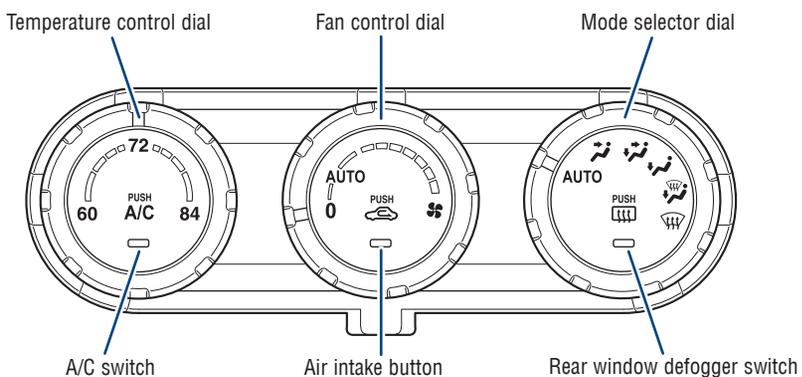


Seat heaters (if equipped)

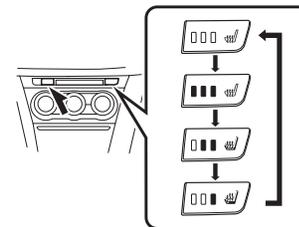

The engine switch must be in the "ON" mode.

Cruise control

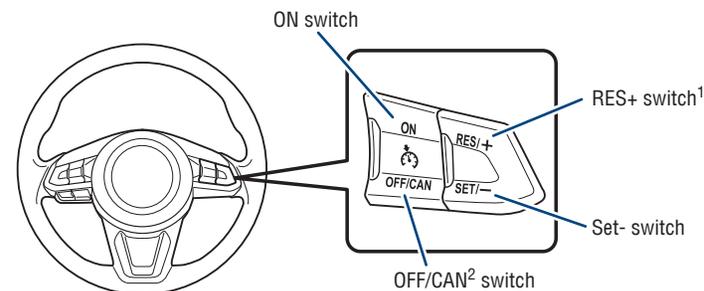


White indicator - system is activated



White indicator - system is activated
Green indicator - cruising speed is set

- ¹ The set speed may be resumed once vehicle speed reaches approximately 16 mph.
² The set speed may also be cancelled by depressing the brake pedal or the clutch pedal (manual transmission only).

Tilt & telescopic steering wheel

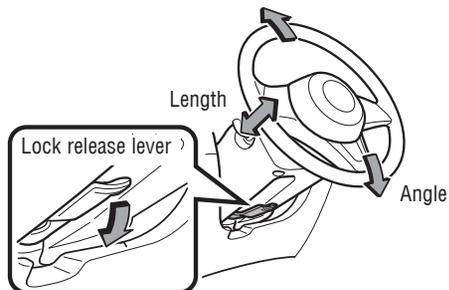


Hold wheel, push lever down, set angle and return lever.

NOTE: Do not attempt to adjust while the vehicle is in motion.


Steering wheel switches (if equipped)

Multimedia controls

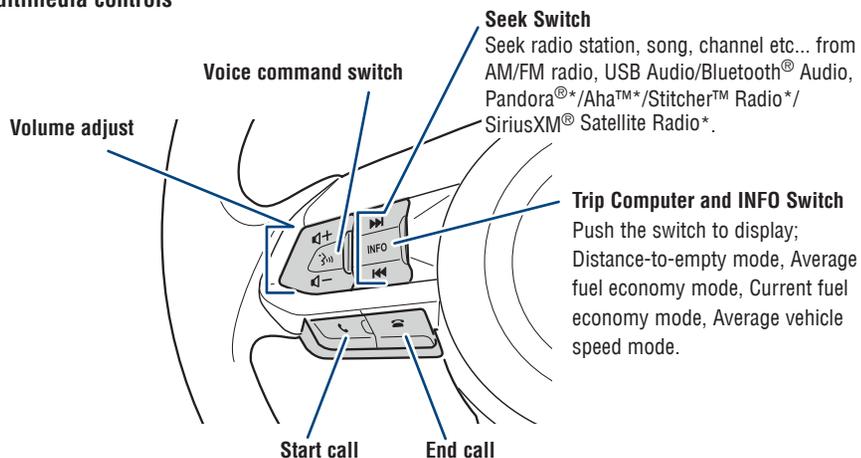


Power outlet

With CD player

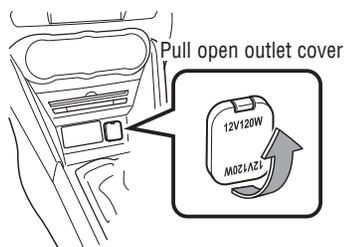


Without CD player

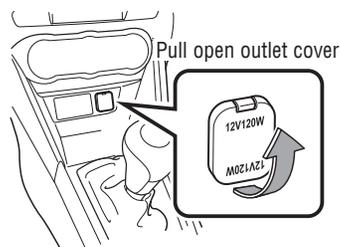

Designed for car accessories. Ignition switch must be in the “ACC” or “ON” position to use.

AUX port/USB media port

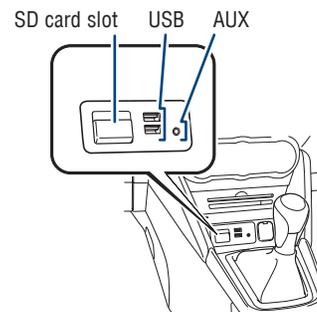


Ignition switch must be in the “ACC” or “ON” position to use.

Use these ports to connect a portable audio device and listen to it through the vehicle’s speakers.

Availability & accuracy of the information provided by the navigation system is dependent upon many factors. Use common sense when relying on information provided. Services & programming subject to change. Services not available in every city or roadway. See *Owner’s Manual* for details. Map updates may be available for download, visit Toyota.com/Owners, select “Yaris Sedan”, then “Resources”, then “Multimedia System” for details.

Audio/navigation (if equipped)

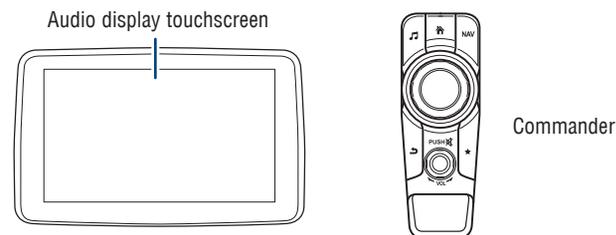


Audio Set has three different human interfaces.

- Commander switch
- Touch panel
- Steering wheel switches


For SD card slot location, see *AUX/USB port* section above in this guide.

COMMANDER SWITCH

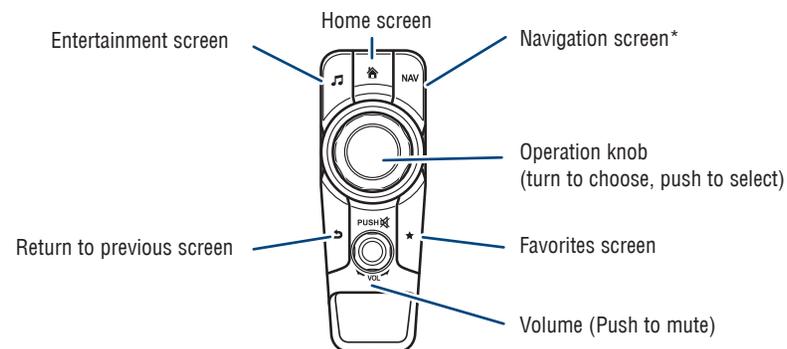

*If equipped

Rear view monitor system

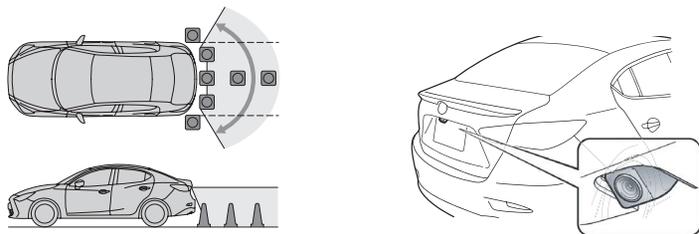


The rear view monitor system displays an image of the view from the bumper of the rear area of the vehicle. The camera for the rear view monitor system is located above the license plate.

Picture quality adjustment can be done while the shift lever is in reverse (R). There are four settings which can be adjusted including, brightness, contrast, tint, and color. When adjusting, pay sufficient attention to the vehicle surroundings.

Do not over rely on the system when backing up. Pay attention to the vehicle surroundings.

Refer to the Owner's Manual for limitations and more details on this system.

TCS (Traction Control System)/ DSC (Dynamic Stability Control) OFF switch

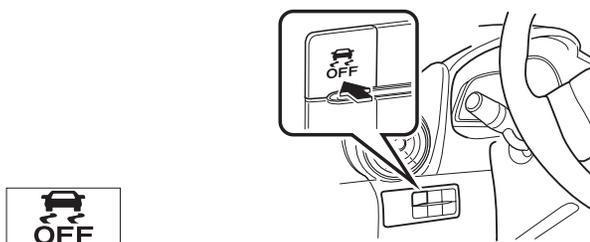


The Dynamic Stability Control (DSC) automatically controls braking and engine torque in conjunction with systems such as ABS and TCS to help control side slip when driving on slippery surfaces, or during sudden or evasive maneuvering, enhancing vehicle safety.

To disable both TCS and DSC systems, press the switch.

Refer to the Owner's Manual for limitations and more details on this system.


Low-Speed Pre-Collision System (Smart City Brake Support)

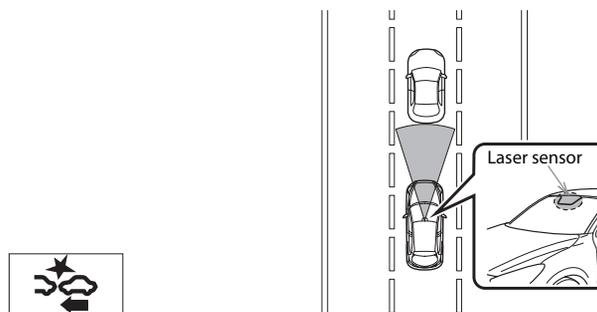

Low-Speed Pre-Collision System (Smart City Brake Support) operates at speeds of 18 mph or less and is designed to reduce damage in the event of a collision by operating the brakes when the system's laser sensor detects a vehicle ahead and determines that a collision with a vehicle ahead is unavoidable.

Refer to the "Smart City Brake Support" section of the Owner's Manual for limitations and more details on this system.

Drive mode select (if equipped)

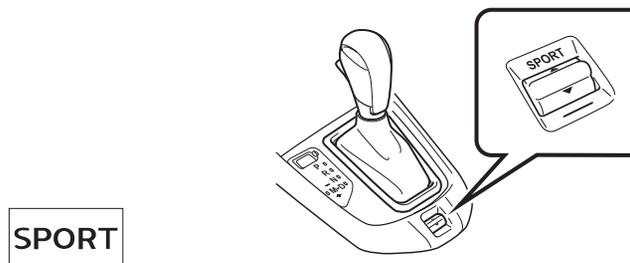


SPORT mode

Use for additional quick acceleration which may be needed to safely make maneuvers such as lane changes, merging onto free ways, or passing other vehicles.

Refer to the Owner's Manual for limitations and more details on this system.


Rear door child safety locks

Rear door

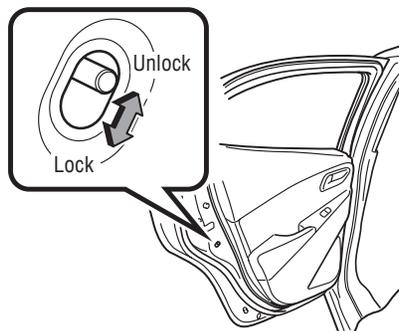


Moving the lever to the lock position will allow the door to be opened only from the outside.

Seat belts-Shoulder belt anchor

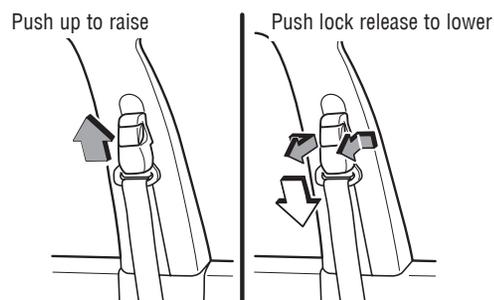


Seat belts

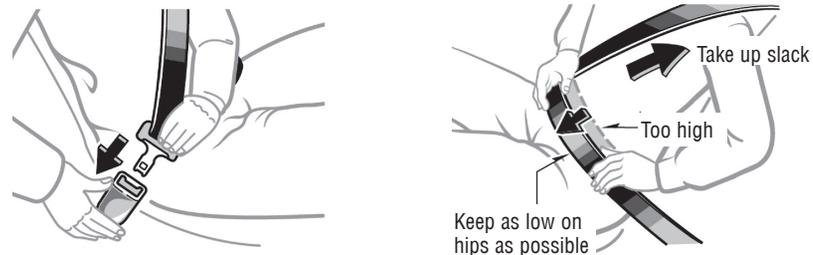

NOTE: If a passenger's seat belt is fully extended, then retracted even slightly, the Automatic locking retractor (ALR) will prevent it from being re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the Owner's Manual.

Tire Pressure Monitoring (warning) System (TPMS)

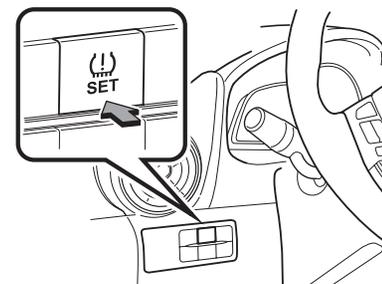

If tire pressure indicator is on, check/adjust each tire.

After adjusting tire pressures, or after tires have been rotated or replaced, turn the ignition switch to "ON" and press and hold the "(!) SET" button until indicator blinks twice and a beep sound once. Let the vehicle sit for a few minutes to allow initialization to complete.


Refer to the load label on the door jamb or the Owner's Manual for tire inflation specifications.

If the tire pressure indicator flashes for more than 60 seconds and then remains on, take the vehicle to your local Toyota dealer.


NOTE: The warning light may come on due to temperature changes or changes in tire pressure from natural air leakage. If the system has not been initialized recently, setting the tire pressures to factory specifications should turn off the light.

Spare tire & tools

TOOL AND SPARE TIRE LOCATION

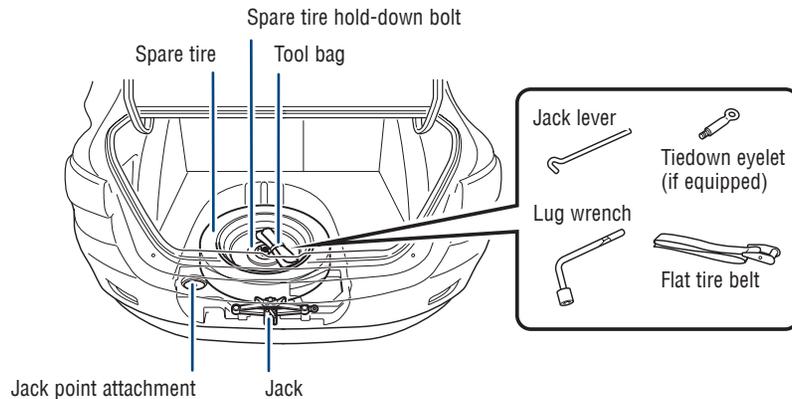

REMOVING THE JACK AND SPARE TIRE

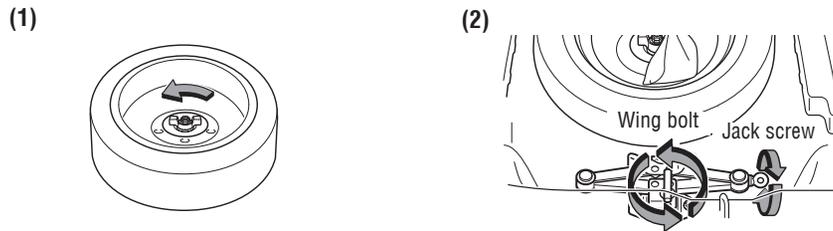

- (1) Loosen the spare tire hold-down bolt.
- (2) Turn the wing bolt and jack screw counterclockwise.

Refer to the Owner's Manual for jack positioning and tire changing procedures.

Safety System

Your vehicle comes standard with a Safety System, which combines Anti-lock Brake System (ABS), Brake Assist (BA), Brake Over-Ride System (BOS), Dynamic Stability Control (DSC), Electronic Brake-force Distribution (EBD) and Traction Control System (TCS). Thus, your vehicle is equipped with safety systems similar to each of those that together comprise Toyota's Star Safety System.

Refer to the Owner's Manual for more details and important information on limitations to these systems.

ANTI-LOCK BRAKE SYSTEM (ABS)

ABS control unit continuously monitors the speed of each wheel. If one wheel is about to lock up, the ABS responds by automatically releasing and reapplying that wheel's brake.

BRAKE ASSIST (BA)

During emergency braking situations when it is necessary to depress the brake pedal with greater force, the brake assist system provides braking assistance, thus enhancing braking performance.

When the brake pedal is depressed hard or depressed more quickly than for non-emergency stops, the system applies the brakes more firmly.

BRAKE OVER-RIDE SYSTEM (BOS)

Brake Over-ride System automatically reduces driving torque when the accelerator and brake pedals are pressed simultaneously under certain conditions.

BOS doesn't engage if the brake pedal is depressed before the accelerator pedal, allowing vehicles to start on a steep hill and safely accelerate without rolling backward.

DYNAMIC STABILITY CONTROL (DSC)

DSC automatically controls braking and engine torque in conjunction with systems such as ABS and TCS to help control side slip when driving on slippery surfaces, or during sudden or evasive maneuvering, enhancing vehicle safety.

ELECTRONIC BRAKE-FORCE DISTRIBUTION (EBD)

EBD makes it easier to maintain vehicle control and shortens the stopping distance when there is a large load on the rear wheels, such as when the car is carrying a full load of passengers. EBD optimally distributes the braking power between the front and rear wheels depending on the load in order to increase the effectiveness of the rear-wheel braking and minimize the difference in stopping distance between when the car is fully loaded and when it is not.

SAFETY & EMERGENCY FEATURES

TRACTION CONTROL SYSTEM (TCS)

TCS enhances traction and safety by controlling engine torque and braking. When the TCS detects driving wheel slippage, it lowers engine torque and operates the brakes to prevent loss of traction.


This means that on a slick surface, the engine adjusts automatically to provide optimum power to the drive wheels, limiting wheel spin and loss of traction.

Floor mat installation

There are two types of Toyota floor mats: carpeted and all-weather. Each vehicle has model-specific floor mats. Installation is easy.

To keep your floor mat properly positioned, follow these steps:

- Only use Toyota floor mats designed for your specific model.
- Use only one floor mat at a time, using the retaining hooks to keep the mat in place.
- Install floor mats right side up.

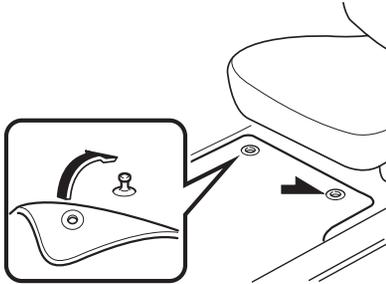

PAIRING BLUETOOTH® PHONE FOR THE FIRST TIME

Yaris Sedan Display Audio and Display Audio with Navigation¹

To use the hands-free³ features of the Yaris Sedan Display Audio system, it is necessary to first pair a compatible Bluetooth^{®2} mobile device to the vehicle. This operation cannot be performed while driving. You can pair up to 7 devices.

1. Activate the Bluetooth^{®2} connection setting of your mobile device. [See Figures 1 & 2]

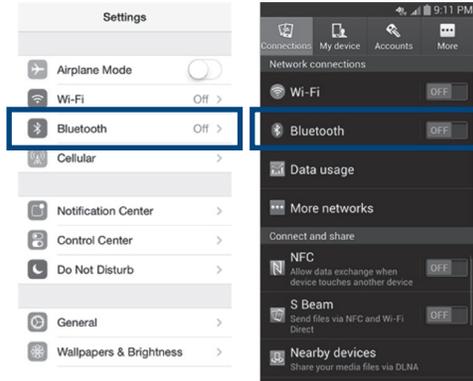


Figure 1: iOS

Figure 2: Android

2. Using the remote commander knob or touch-screen, select "Settings"  from the home screen of the vehicle display (far right circle)



Figure 3

3. Within "Settings", you will see tabs on the top. Hit the >> arrow until the "Devices" tab is available. Select "Devices". [See Figure 3]

4. Within the "Devices" tab, select "Bluetooth". [See Figure 3]

5. Within the "Bluetooth" menu, select "Add New Device". [See Figure 4]



Figure 4

6. On your mobile device, find and select "My Toyota" or your vehicle within the Bluetooth[®] device list.

7. Verify the PIN. Select "Pair" on your device and select "Yes" on the head unit. [See Figure 5]



Figure 5

8. To enable text message notification on your mobile device, follow the appropriate directions below:

iPhone⁴: Select the  icon next to the paired vehicle on your phone, and switch the "Show Notifications" toggle to on. [See Figure 6]

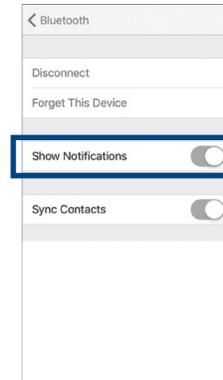


Figure 6: iOS

Android: Your device might pop up two messages asking to allow the vehicle head unit to access your contacts and messages. You may choose to select "Yes" to both. [See Figure 7]

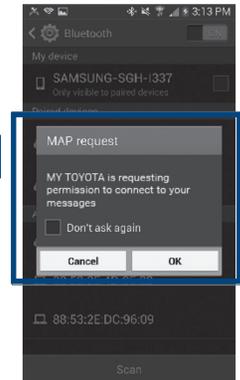


Figure 7: Android

1. Availability & accuracy of the information provided by the navigation system is dependent upon many factors. Use common sense when relying on information provided. Services & programming subject to change. Services not available in every city or roadway. See Owner's Manual for details. Map updates may be available for download, visit Toyota.com/Owners, select "Yaris Sedan", then "Resources", then "Multimedia System" for details.

2. The Bluetooth[®] word mark and logos are registered trademarks owned by Bluetooth[®] SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth[®] enabled phone must first be paired. Phone performance depends on software, coverage & carrier.

3. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.

4. iPhone[®] is not included. iPhone[®] is registered trademarks of Apple, Inc.

NOTES

NOTES



www.toyota.com/owners

CUSTOMER EXPERIENCE CENTER

1-800-331-4331



Printed in U.S.A. 6/18
18-MKG-11944



00505QRG19YAR