

Customer Experience Center
1-800-331-4331

www.toyota.com



moving forward ▶



2006
Pocket Reference Guide

MN 00452-PRG06-SOL
Printed in USA 02/05

2006 Camry Solara

This Pocket Reference Guide is a summary guide for basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The Pocket Reference Guide is not intended as a substitute for the Owner's Manual located in the vehicle's glove box. We strongly encourage you to review the Owner's Manual and supplementary manuals so you will have a better understanding of the vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc., wish you many years of satisfied driving in your new Camry Solara.

! A word about safe vehicle operations


This Pocket Reference Guide is not a full guide to Camry Solara operations. Every Camry Solara owner should review the Owner's Manual that accompanies this vehicle.

Pay special attention to the boxed information highlighted in yellow throughout the Owner's Manual. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.


All information in this Pocket Reference Guide is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

Spare tire & tools

Tool location

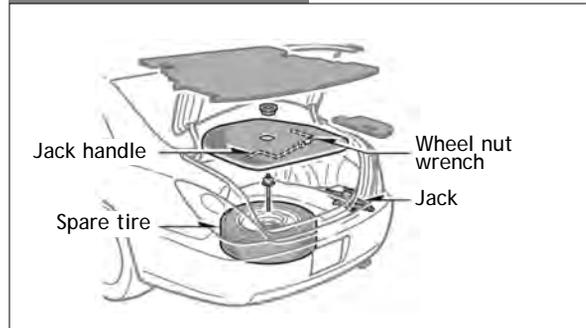


Removing the spare tire

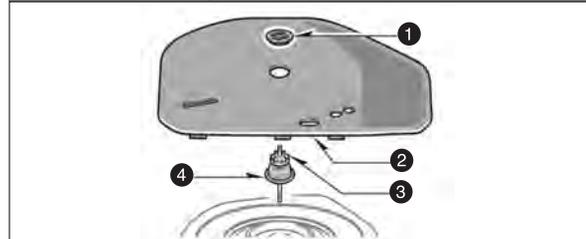

- 1 Loosen and remove the nut.
- 2 Remove the spare tire cover.
- 3 Loosen and remove the bolt.
- 4 Remove the spacer.

Refer to the Owner's Manual for jack positioning and tire changing procedures.

Trunk-Internal release

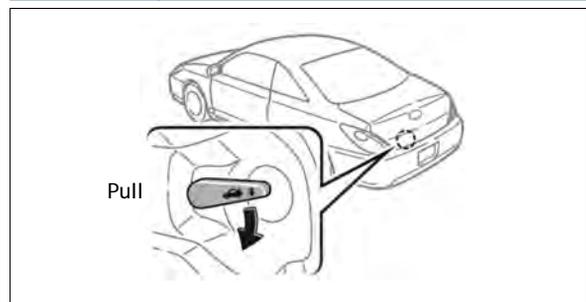

INDEX

Item	Page no.
OVERVIEW	
Engine maintenance	8
Fuel tank door opener and cap	6
Hood release	7
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Keyless entry-Programmable ¹	7
Trunk release lever	6
FEATURES/OPERATIONS	
Air conditioning/Heating	18
Audio	16-17
Auto lock functions-Programmable ¹	9
Automatic transmission	9
Clock	17
Cruise control	14
Convertible top operation	15
Cup holders	11
Door locks	15
Garage door opener (HomeLink [®]) ³	19
Light control-Instrument panel	11
Lights & turn signals-Programmable ²	12
Moonroof	14
Parking brake	9
Power outlets	19
Seat adjustments-Front	10
Seat adjustments-Rear	10
Seats-Head restraints	11
Tilt and telescopic steering wheel	11
Windows	13
Windshield wiper & washer	13
SAFETY AND EMERGENCY FEATURES	
Seat belt hangers	20
Seat belts	20
Spare tire & tools	21
Tire Pressure Warning System	20
Trunk-Internal release	21

OVERVIEW

FEATURES/OPERATIONS

SAFETY AND EMERGENCY FEATURES



¹ Programmable by consumer. Refer to the Owner's Manual for instructions and more information.

² Auto light sensitivity is programmable. Visit your Toyota dealer for information on customizing this feature.

³ HomeLink[®] is a registered trademark of Johnson Controls, Inc.

OVERVIEW

Instrument panel

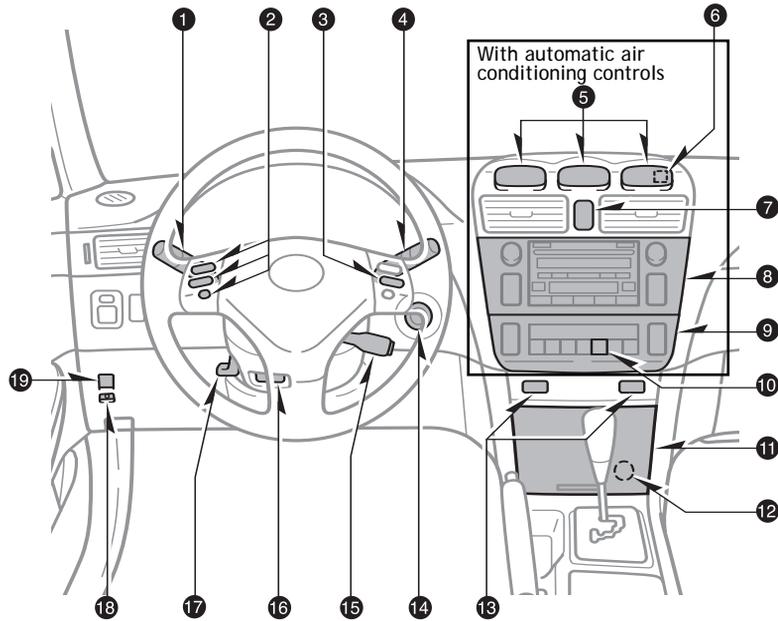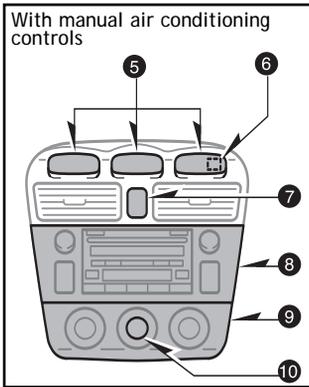


- ① Headlight, turn signal and front fog light controls
- ② Audio steering wheel switches
- ③ Multi-information display switch
- ④ Wiper and washer controls
- ⑤ Multi-information displays
- ⑥ Front passenger occupant classification indicator light/front passenger seat belt reminder light
- ⑦ Emergency flasher switch
- ⑧ Audio or navigation system^{1, 2}
- ⑨ Air conditioning controls
- ⑩ Rear window and outside rearview mirror defogger¹ switch
- ⑪ Auxiliary box
- ⑫ 12V Power outlet

- ⑬ Seat heater switches¹
- ⑭ Ignition
- ⑮ Cruise control
- ⑯ Tilt steering lock release
- ⑰ Telescopic steering lock release
- ⑱ Tire Pressure Warning System reset
- ⑲ "TRAC OFF" (Traction Control "OFF")¹

¹If equipped

²For details, refer to the Navigation System Owner's Manual.

Instrument cluster

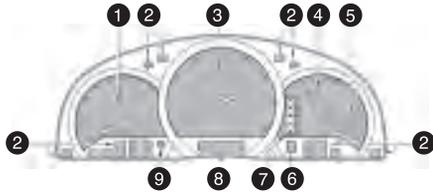

- 1 Tachometer
- 2 Service reminder and indicator
- 3 Speedometer
- 4 Engine coolant temperature
- 5 Fuel
- 6 Automatic transmission shift range position
- 7 Automatic transmission shift position
- 8 Odometer and two trip meters
- 9 Trip meter reset knob/Dimmer control knob

Indicator symbols

	Brake system warning ¹
	Driver seat belt reminder ¹
	Front passenger seat belt reminder ¹
	Battery warning ¹
	Malfunction/Check Engine indicator ¹
	Low engine oil pressure warning ¹
	Low fuel level warning ¹
	Open door warning ¹
	Airbag SRS warning ¹
	Low Tire Pressure Warning ¹
	Vehicle Stability Control/Traction Control warning ¹
	Low windshield washer fluid level warning ¹

	Engine oil replacement reminder ¹
	Front passenger occupant classification indicator
	Turn signal indicator
	Headlight high beam indicator
	Slip indicator
	Traction Control "OFF" indicator
	Cruise control indicator ²
	Anti-lock Brake System warning ¹


CAUTION

When the Anti-lock Brake System (ABS) function is in action, you may feel the brake pedal pulsating and hear a noise. In this situation, to let the Anti-lock Brake System work for you, just hold the brake pedal down more firmly. Do not pump the brake as this will result in reduced braking performance.

¹ For details, refer to "Service reminder indicators and warning buzzers," Section 1-6, 2006 Owner's Manual.


² If this light flashes, refer to "Cruise control," Section 1-7, 2006 Owner's Manual.

Fuel tank door opener and cap

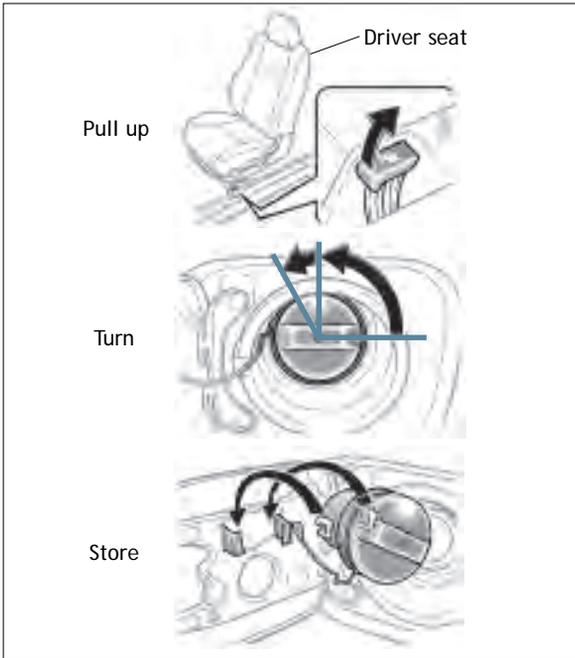

NOTE: If the cap is not tightened enough, Check Engine “” indicator may illuminate.


Trunk release lever

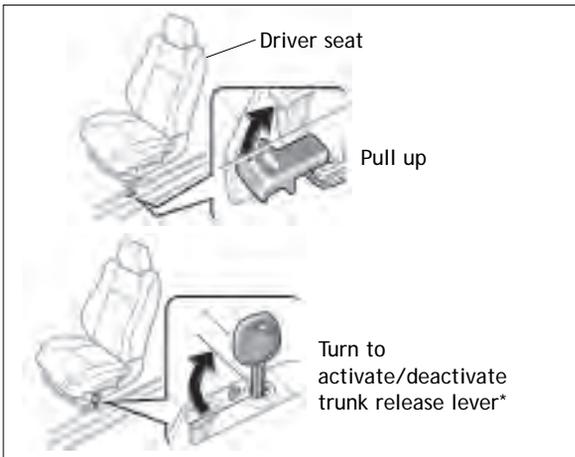


*Master/Black key only

Keyless entry


Beep sound can be switched “ON” or “OFF.”

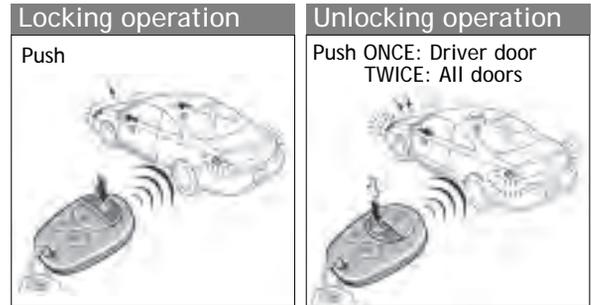

NOTE: After unlocking, if a door is not opened within thirty (30) seconds, all doors will relock for safety.

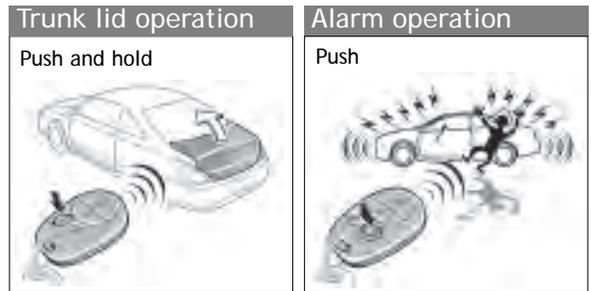


Hood release

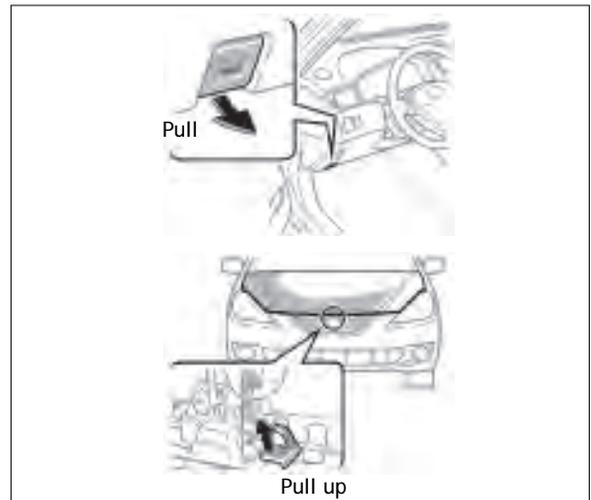


Engine maintenance

4 cylinder (2AZ-FE) engine

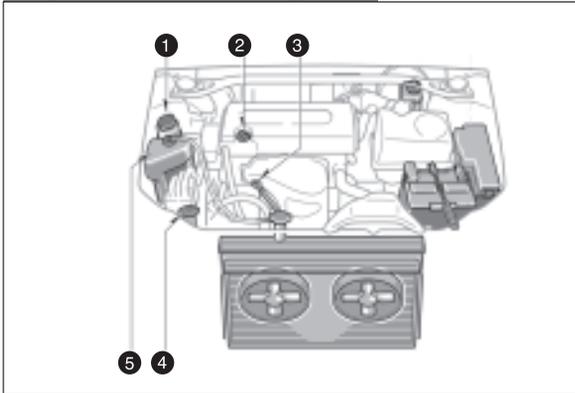

6 cylinder (3MZ-FE) engine

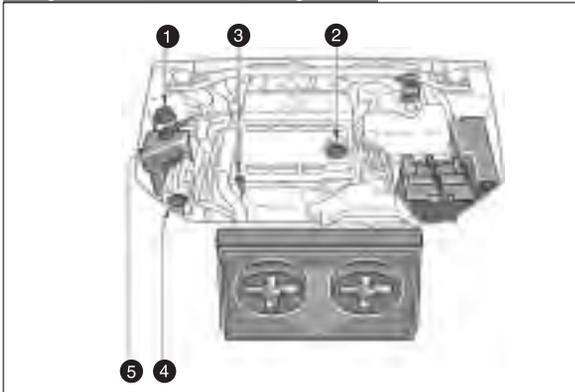

- 1 Power steering fluid reservoir
- 2 Engine oil filler cap
- 3 Engine oil level dipstick
- 4 Windshield washer fluid tank
- 5 Engine coolant reservoir

Note: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the "Owner's Warranty Information Booklet," "Scheduled Maintenance Guide" or "Owner's Manual Supplement."


Auto lock functions (if equipped)

Automatic door locks can be programmed to operate in 3 different modes.

- Doors lock when shifting from Park.
- Doors unlock when shifting into Park.
- Doors unlock when the ignition key is turned to the "ACC" or "LOCK" position and driver's door is opened.

Automatic transmission (if equipped)

5-speed models

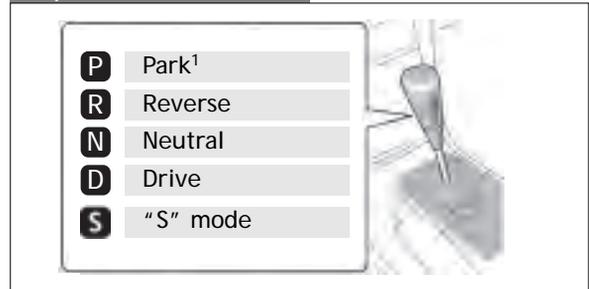

¹The ignition switch must be ON, and the brake pedal depressed.

"S" (Sequential) mode


Push to shift lever to the left from "D" position.

"S" position:


- +: Upshift (Push and release)
- : Downshift (Pull and release)

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.

Parking brake

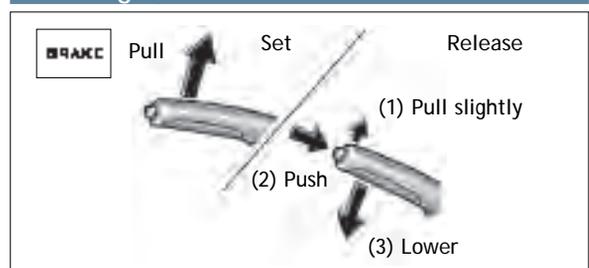


Seat adjustments-Front

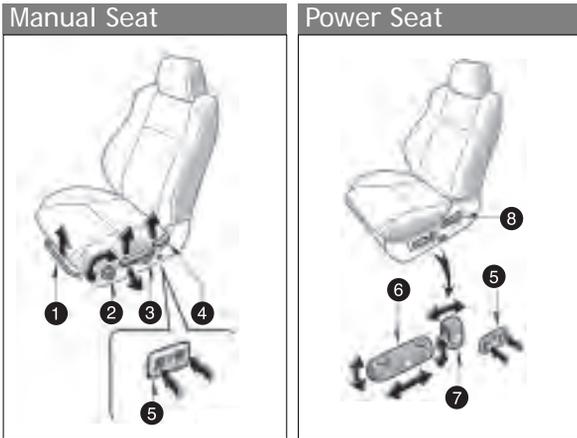


- ① Position
- ② Cushion angle
- ③ Height crank (driver side only)
- ④ Seatback angle
- ⑤ Lumbar support
- ⑥ Position, cushion angle and height
- ⑦ Seatback angle
- ⑧ Seatback lock release


Seat adjustments-Rear (coupe only)

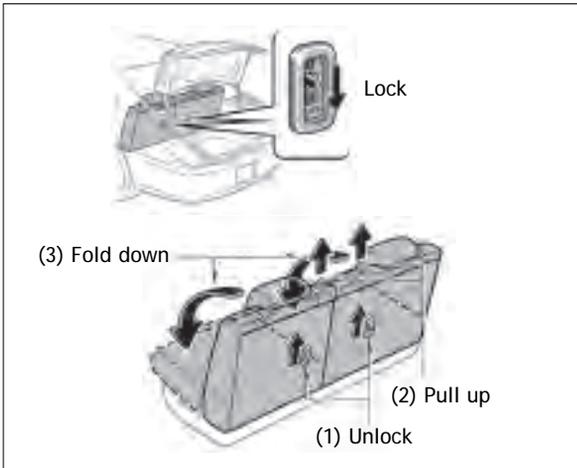

Seats-Head restraints

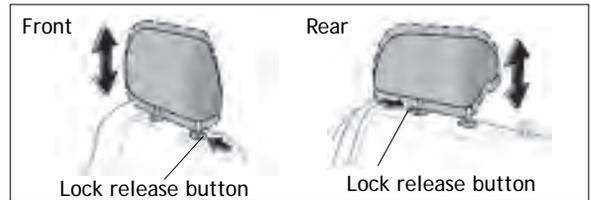


Tilt and telescopic steering wheel

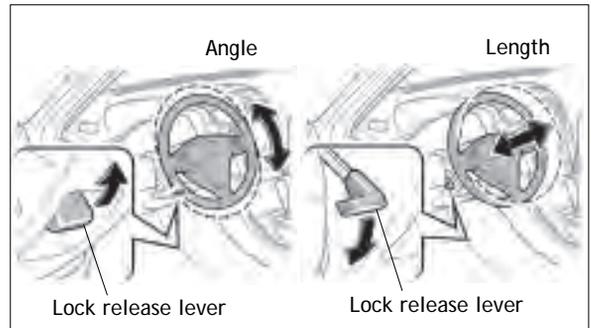


Note: Do not attempt to adjust while the vehicle is in motion.

Light control-Instrument panel

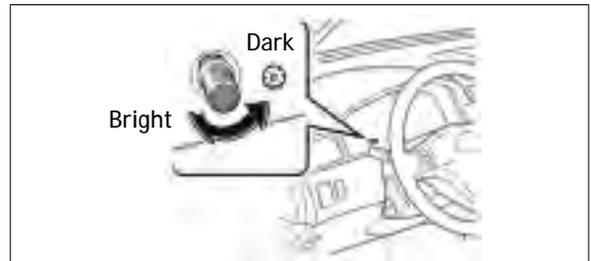


Cup holders

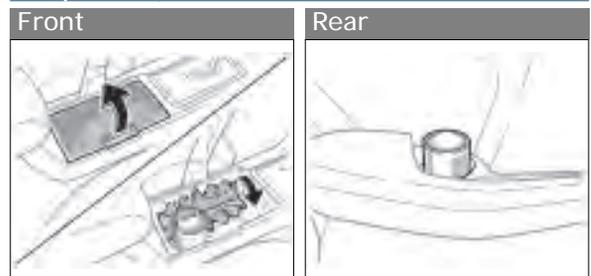

Lights & turn signals


Headlights

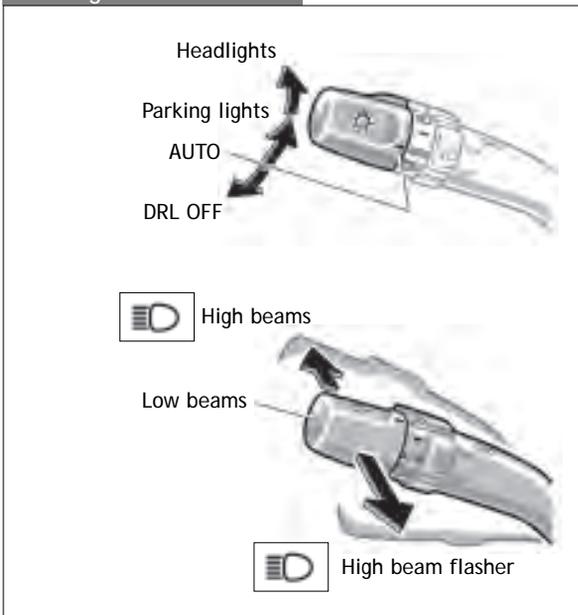


-Automatic light cutoff system Automatically turns lights off after 30 seconds when any of the doors are opened and closed with the engine off. Lights may also be turned off by pushing lock button on remote.

-Daytime Running Light system Automatically turns on the headlights at a reduced intensity.


Turn signals

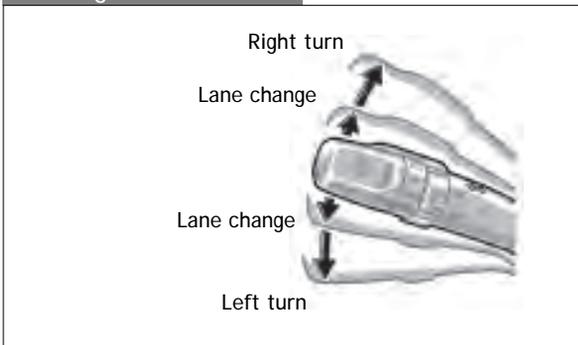

Windshield wiper & washer

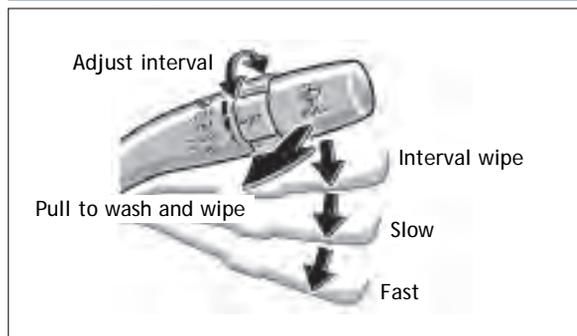


Windows

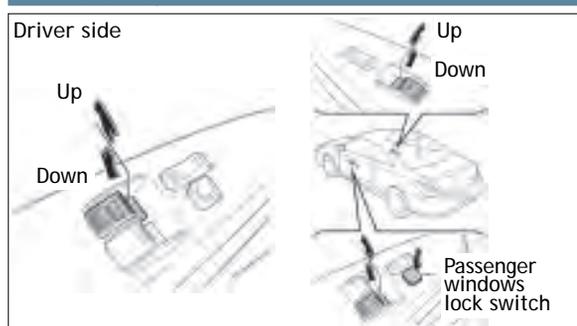

Window operation


Automatic operation (Driver side only) Push the switch completely down or pull it completely up and release to fully open or close. To stop window mid-way, lightly push the switch in the opposite direction.

All windows (convertible only)

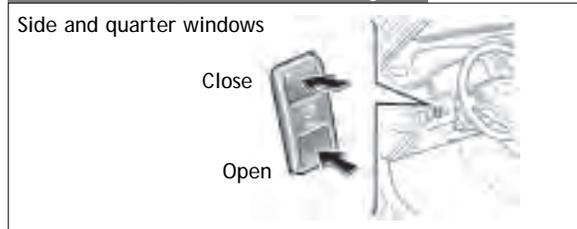


Moonroof (if equipped)

Sliding operation

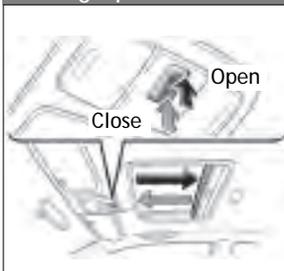

Tilting operation

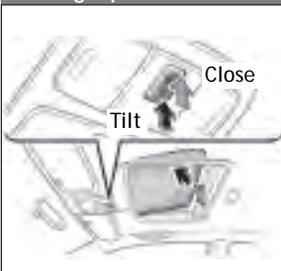


Push briefly to fully open/close. To stop moonroof midway, lightly push the switch in the opposite direction.


NOTE: If battery is disconnected, the moonroof needs to be reinitialized. Refer to the Owner's Manual for more details.

Cruise control

Turning system ON/OFF

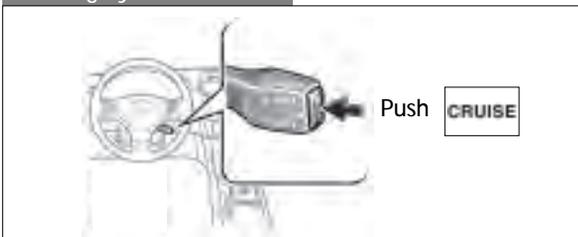

Functions

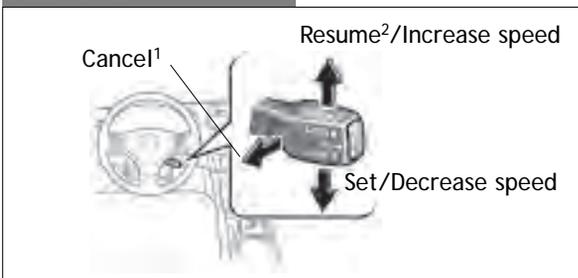


¹ The set speed may also be cancelled by depressing the brake pedal.

² If vehicle speed falls below 25 mph, the set speed will not be resumed.


Convertible top operation (if equipped)

Lowering the convertible top

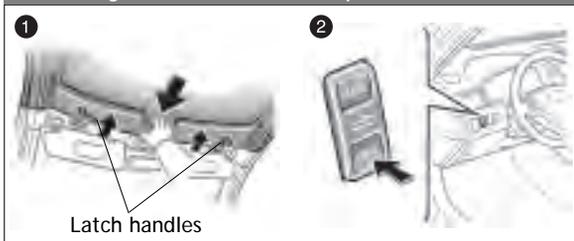

- 1 Lower the sun visors and pull the latch release handles fully backward.
- 2 Push and hold the switch on the "OPEN" side until the convertible top is completely lowered.


Raising the convertible top

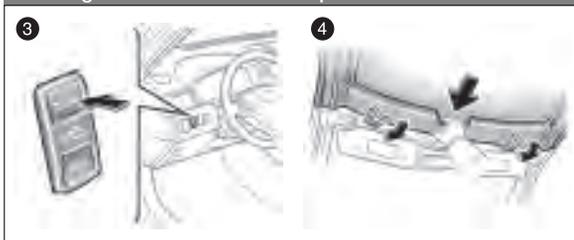


- 3 Lower the sun visors. Push the switch on the "CLOSE" side until the top stops moving.
- 4 Pull down the convertible top and push the latch handles fully forward until they are hooked.

Refer to the Owner's Manual for more details.

Door locks

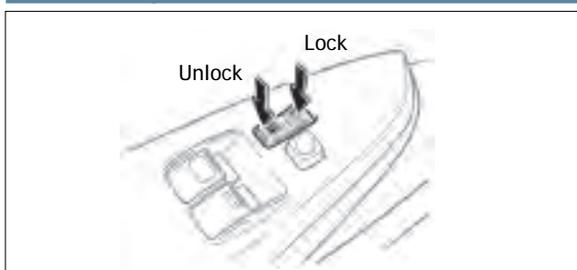

Audio

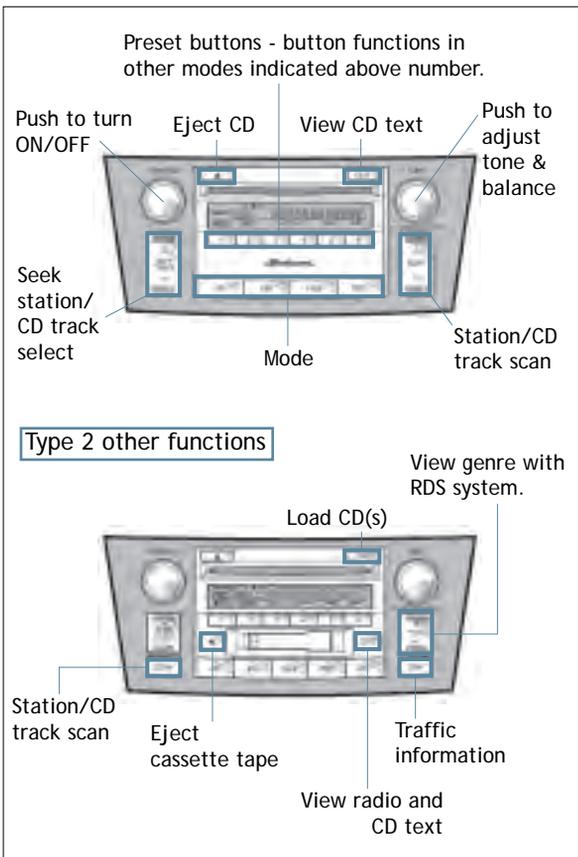

CASSETTE TAPE PLAYER

To fast forward Push "▶▶."

To rewind Push "◀◀."

To select a direction Push "◀▶."

CD PLAYER

To scan tracks on a disc Push either side of "SCAN."
Push again to hold selection.

CD Changer (Type 2 only)

-To load one disc Push "LOAD" and insert 1 disc.

-To load multiple discs Push and hold "LOAD" until you hear a beep. Insert one disc. Wait until the green indicator illuminates and shutter opens to insert next disc.

RADIO

To scan stations Push "SCAN." Push and hold to scan preset stations. Push again to hold selection.

To preset stations Tune in the desired station and press a preset button (1-6) until you hear a beep. Push desired preset button (1-6) to select.


RDS (Radio Data System-FM only)(Type 2 only)

-Push TYPE "∧" or "∨" to view current program genre. Push again within 6 seconds to select new genre.

-Push "SEEK/TRACK" or "SCAN" to find same genre programs.

-Push "TEXT" to receive information transmitted from radio stations.

Steering wheel switches

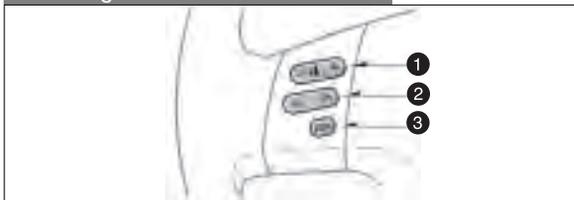

① "- +"

Volume control

② "∧ ∨"

-In radio mode Push to select a preset station, push and hold to seek the next strong station.

-In tape mode Push to skip up or down to a next/previous track, push and hold to fast forward or reverse.

-In CD mode Push to skip up or down to a next/previous track.

③ "MODE"

Push to turn audio "ON" and select an audio mode. Push and hold to turn the audio system "OFF."


Clock



H-Hour set
M-Minutes set


Air conditioning/Heating

Manual air conditioning

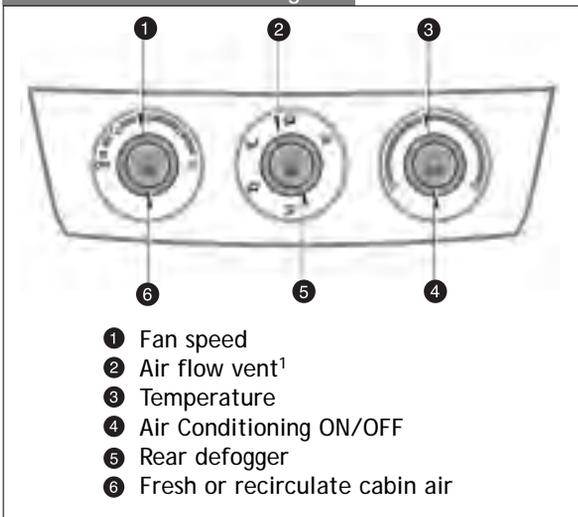

¹ " " or " ", use fresh air to reduce window fogging (" " indicator light "OFF").

Automatic air conditioning

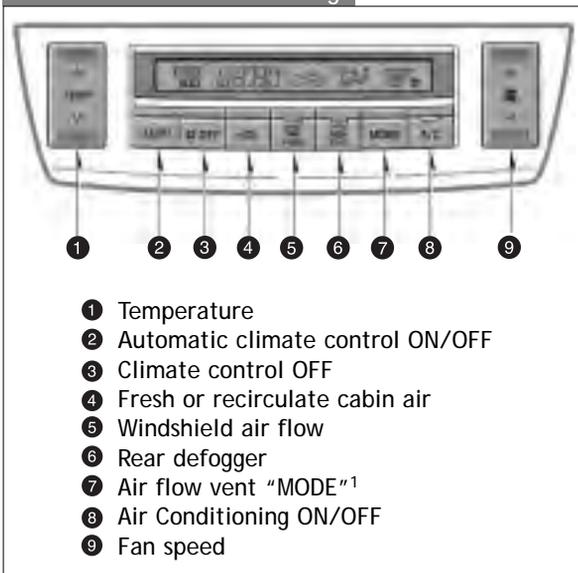

¹ " " or " ", use fresh air to reduce window fogging (" " indicator).

Garage door opener (HomeLink®)* (if equipped)

Coupe



Convertible



Garage door openers manufactured under license from HomeLink®* can be programmed to operate garage doors, estate gates, security lighting, etc.

Refer to the Owner's Manual for more details. For programming assistance, contact the Toyota Customer Experience Center at 1-800-331-4331, or visit <http://www.homelink.com>

*HomeLink® is a registered trademark of Johnson Controls, Inc.

Power outlets

Auxiliary box (12V)




Console box (12V)



Designed for car accessories. Key must be in the "ACC" or "ON" position to be used.

SAFETY AND EMERGENCY FEATURES


Seat belts

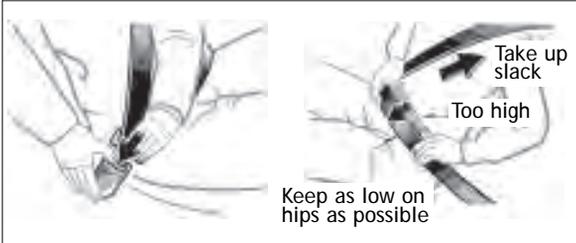


If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the Owner's Manual.

Seat belt hangers

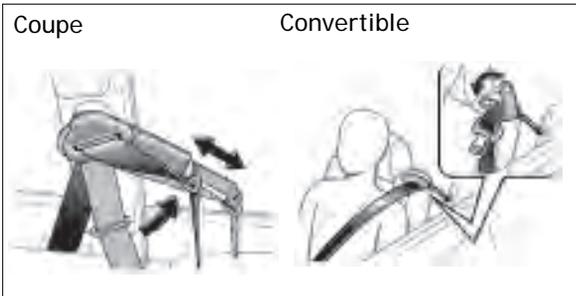

Tire Pressure Warning System

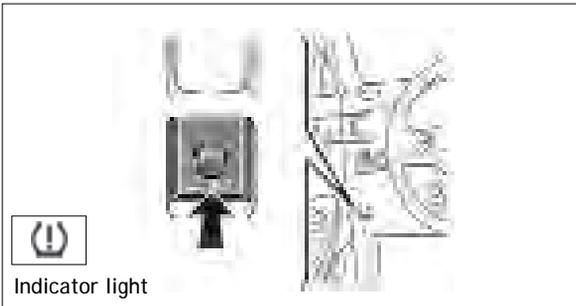

If indicator is "ON", check tire pressure then push and hold "  SET." If light remains "ON" or blinks, refer to the Owner's Manual, Section 1-6 for more details or visit a Toyota dealer.