

Customer Experience Center
1-800-331-4331




www.toyotaownersonline.com

moving forward ▶

PRIUS

POWERED BY  HYBRID SYNERGY DRIVE

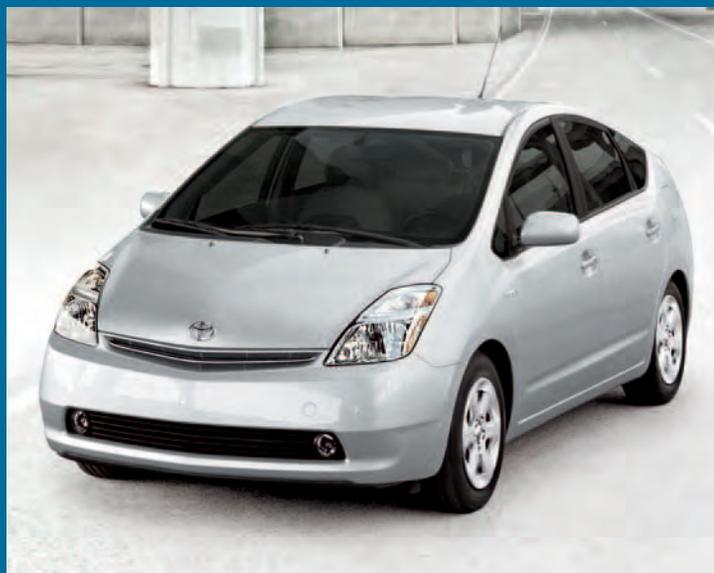

2006
Pocket Reference Guide

2006 Prius

This Pocket Reference Guide is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The Pocket Reference Guide is not intended as a substitute for the Owner's Manual located in the vehicle's glove box. We strongly encourage you to review the Owner's Manual and supplementary manuals so you will have a better understanding of the vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Prius.

! A word about safe vehicle operations


This Pocket Reference Guide is not a full description of Prius operations. Every Prius owner should review the Owner's Manual that accompanies this vehicle.

Pay special attention to the boxed information highlighted in yellow throughout the Owner's Manual. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.


All information in this Pocket Reference Guide is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

Spare tire & tools

Tool location

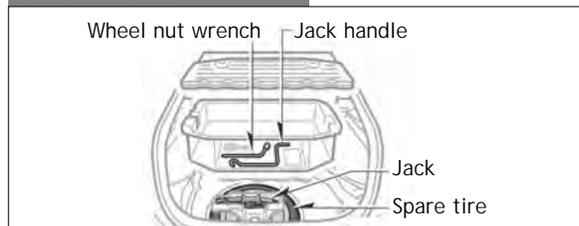

Removing the spare tire

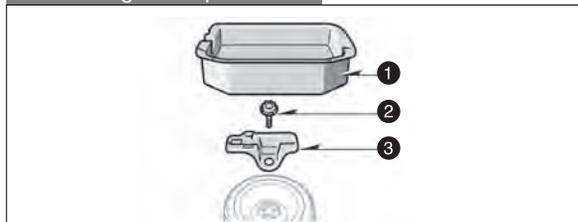

- 1 Remove the luggage storage box.
- 2 Loosen the bolt and remove it.
- 3 Remove the jack box.

Refer to the Owner's Manual for jack positioning and tire changing procedures.

24-Hour Roadside Assistance

Complimentary Roadside Assistance for 3 years/36,000 miles. Ask your dealer for details.

Prius 24-Hour Roadside Assistance includes:

- 1 Towing for mechanical breakdown and jump start
12V battery only
- 2 Toll-free number, 24-hours, 7 days a week
- 3 Lockout protection
- 4 Flat tire changes
- 5 Fluid delivery
- 6 Road hazard
- 7 Concierge service
- 8 Mechanical first aid

Toyota Prius Roadside Assistance
1-877-304-6495

INDEX

Item	Page no.
BASIC HYBRID VEHICLE OPERATION	
Hybrid Synergy Drive System	2
Keyless entry	4
Key fob	3
Parking & turning OFF the Hybrid System	9
Shifting	8
Smart Key system (Smart entry and start)	5-6
Smart Key unlock functions ¹	6
Turning the Hybrid System ON	7
OVERVIEW	
Rear hatch	14
Engine maintenance	15
Fuel tank door opener and cap	14
Hood release	15
Indicator symbols	12-13
Instrument cluster	12
Instrument panel	10-11
FEATURES/OPERATIONS	
Air Conditioning/Heating	20-21
Audio	22-23
AUX audio jack	24
Clock	24
Cruise control	21
Cup and bottle holders	25
Garage door opener (HomeLink [®]) ²	17
Light Control-Instrument panel	24
Lights & turn signals	16
Luggage storage box	24
Parking brake	25
Power outlets	25
Seat adjustments-Front	18
Seat adjustments-Rear	18
Seats-Head restraints	18
Tilt steering wheel	19
Window wiper & washer	17
Windows	19
SAFETY AND EMERGENCY FEATURES	
24-Hour Roadside Assistance	29
Door locks	26
Doors-Child safety locks	26
Emergency flashers	27
Jump starting	28
Rear air vent	27
Seat belts	26
Seat belts-Shoulder belt anchor	26
Spare tire & tools	29
Tire Pressure Warning System	27

¹ Programmable by customer. For dealer-programmable features, please visit your Toyota dealer.

² HomeLink[®] is a registered trademark of Johnson Controls, Inc.

BASIC HYBRID VEHICLE OPERATION

Hybrid Synergy Drive System

The Hybrid Synergy Drive System utilizes a computer controlled gasoline engine and electric motor to provide the most efficient combination of power for the vehicle. To conserve energy, when the brakes are applied, braking force generates electricity which is then sent to the battery. In addition, the engine shuts off when the vehicle is stopped. The benefits are better fuel economy, reduced vehicle emissions and improved performance.

Note: Fuel consumption and energy information of the Hybrid System are shown on the multi-information display.

Tips for improved fuel economy


- 1 Ensure tire pressures are maintained at levels specified in the Owner's Manual.
- 2 Link trips, if possible, to reduce engine cold starts.
- 3 Avoid driving at speeds that are higher than necessary, especially on the highway.
- 4 When possible, avoid sudden stops to maximize regenerative braking energy.
- 5 Minimize use of the air conditioning.

CAUTION

- The vehicle has both high voltage DC and AC systems as well as a 12-volt system. DC and AC high voltage are both very dangerous and can cause death, severe burns, electric shock or other serious injuries.
- In order to avoid personal injuries, do not touch, remove or replace high voltage cables which are colored orange, and/or their connectors, high voltage parts such as the inverter unit, Hybrid vehicle battery, etc.

Refer to the Owner's Manual for more details.

Key fob

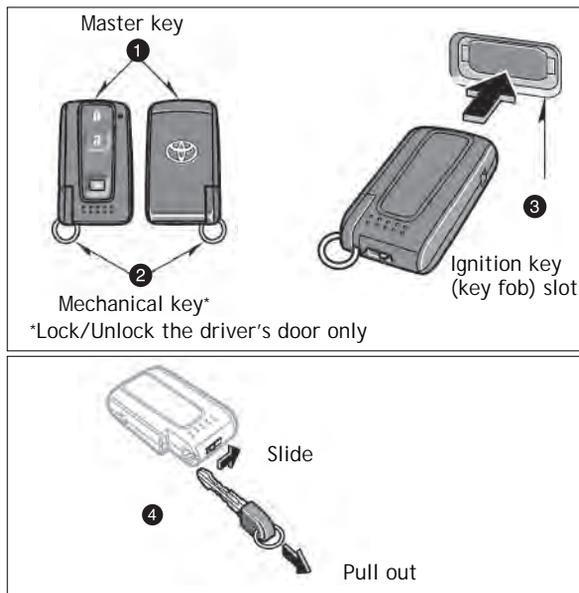

- 1 Master key Ignition key & wireless remote.
- 2 Mechanical key Fits into master key and can be removed to manually lock/unlock driver's door only.
- 3 Ignition key slot When inserting, push completely in. When removing, gently pull, it will be pushed out by a spring. DO NOT FORCE THE KEY; if it cannot be removed, push it all the way in again, then pull it out.
- 4 To remove or replace mechanical key Slide the lock knob in the direction of the arrow.

Keyless entry

Locking operation



Unlocking operation

Push ONCE: Driver door
 TWICE: All doors




NOTE: After unlocking, if a door is not opened within thirty (30) seconds, all doors will relock for safety.

Alarm operation



Smart Key system (if equipped)

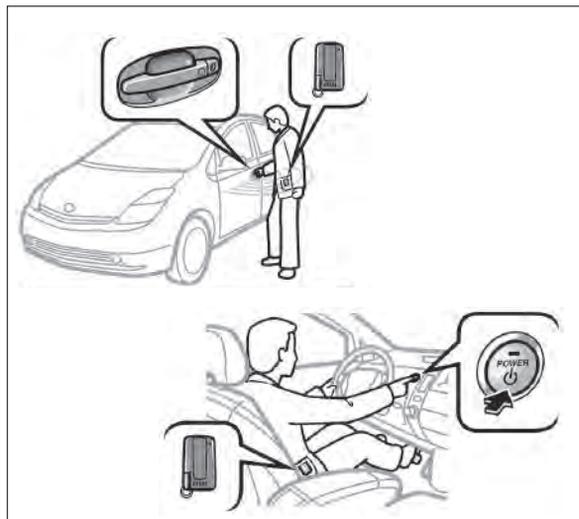



By carrying a Smart Key, the vehicle can be locked, unlocked and the Hybrid System engaged without handling the key.

Locking operation


Front door

Rear hatch

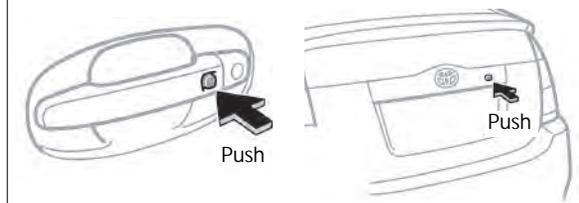

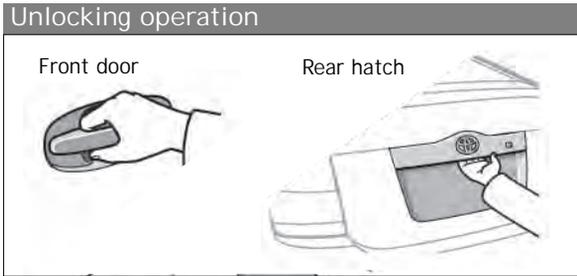

NOTE: After unlocking, if a door is not opened within thirty (30) seconds, all doors will relock for safety. Refer to your Owner's Manual, and the following section of this guide for Smart Key unlocking programmable options.

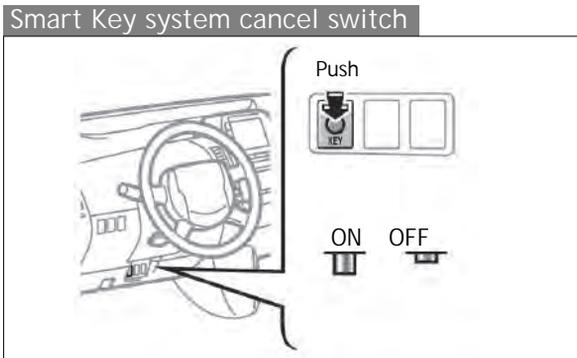

NOTE: To conserve battery power, turn the Smart Key system "OFF" when not using the vehicle for prolonged periods of time. For more battery saving information, refer to the Owner's Manual for more details.


Smart Key unlock functions (if equipped)

The Smart Key unlocking function can be programmed to operate in 3 different modes when Smart Key is activated. In all modes, grasping the front passenger door handle will unlock all doors.

- To open driver side door only, grasp driver side handle.
- To open all doors, grasp any door handle.
- To open driver side door or either back door independently, grasp the handle.

Refer to the Owner's Manual for more information on this feature, and how to change modes.


Turning the Hybrid System ON

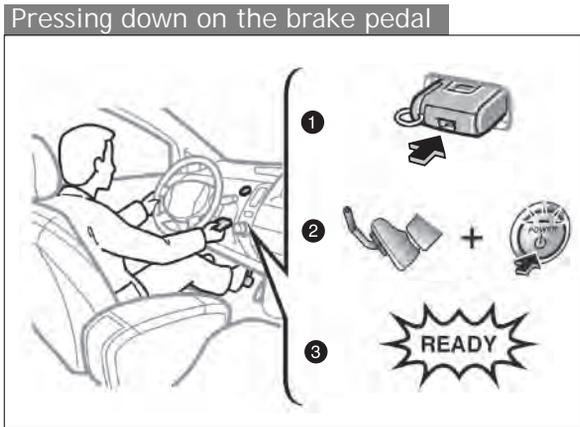

- 1 Insert key*.
- 2 Depress the brake pedal, and push the "POWER" button briefly and firmly.
- 3 The "READY" light will blink. After a few seconds, when the light remains ON and a beep sounds, you may begin driving.


Without pressing down on the brake pedal

The brake pedal must be depressed to turn the Hybrid System on. If the brake pedal is not depressed, pressing "POWER" will change the operation mode in succession from:

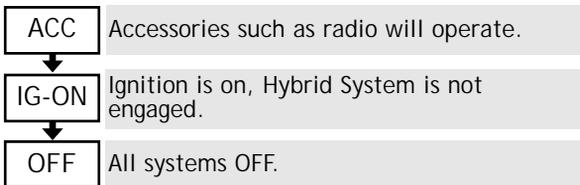

*It is not necessary to insert the ignition key (key fob) if Smart Key system is installed and activated.

Shifting

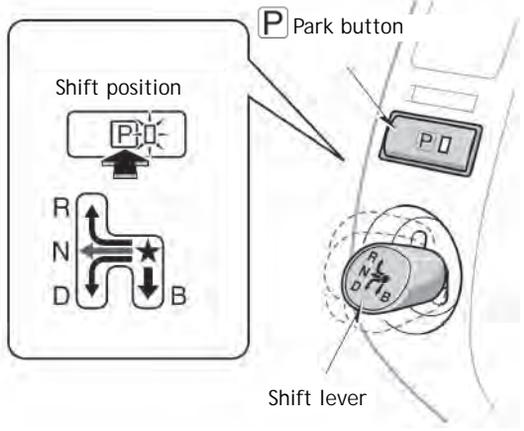

P Park button

Shift position

R
N
D

B

Shift lever


P	Park button
R	Reverse (Buzzer sounds)
N	Neutral
D	Drive
B	Engine brake *

Brake pedal must be depressed when shifting to or from the **P** Park position. If brake is not applied, a beep will sound and the vehicle cannot be shifted.

NOTE: The shift lever will always return to its original position after shifting. ALWAYS CONFIRM SHIFT POSITION BY CHECKING INDICATOR SYMBOLS ON THE INSTRUMENT CLUSTER.

*The engine brake is the equivalent of downshifting. Shift to "B" when engine braking is desired (i.e., downhill driving, coasting to a stop, etc.).

Parking & turning OFF the Hybrid System

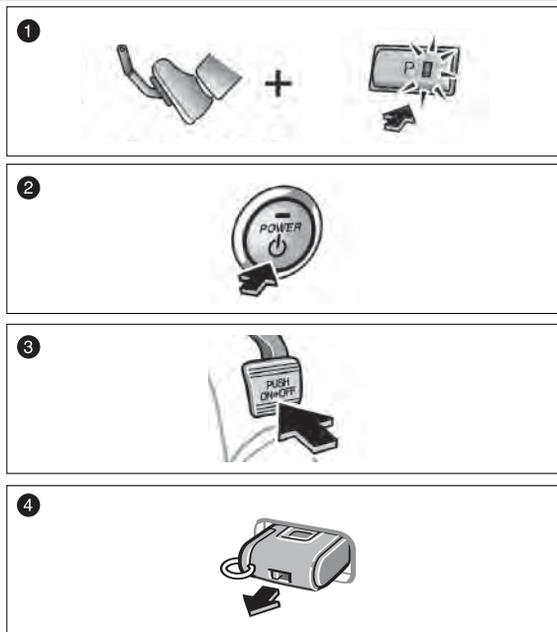

- 1
- 2
- 3
- 4

- 1 While depressing brake pedal, push **P** Park button above the shift lever, when the vehicle is at a complete stop.
- 2 Push the "POWER" button to turn off the system.
- 3 Fully depress the parking brake.
- 4 Remove the key fob if inserted.


WARNING: If the "POWER" button is held for longer than 3 seconds while the vehicle is moving, the Hybrid System will shut off.

Information


In instances when the engine starts, and/or on a short trip after the engine is stopped, the engine water pump may continue operating for a short time. This is not a concern, but a standard operation of the vehicle to ensure optimum performance.

OVERVIEW


Instrument panel

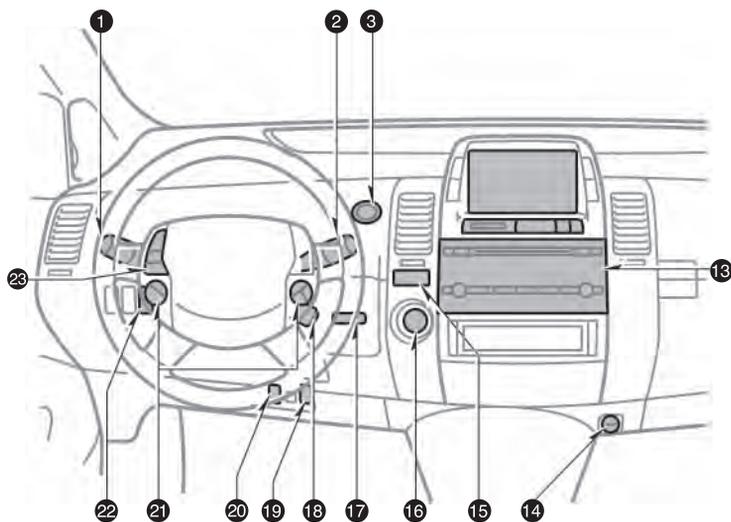

Without navigation system

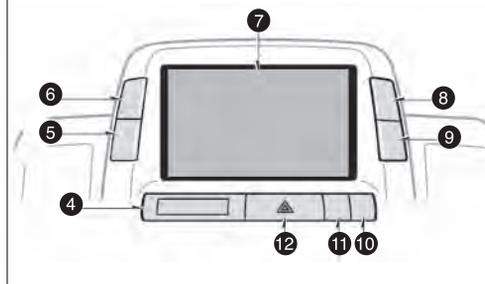

With navigation system^{1, 2}

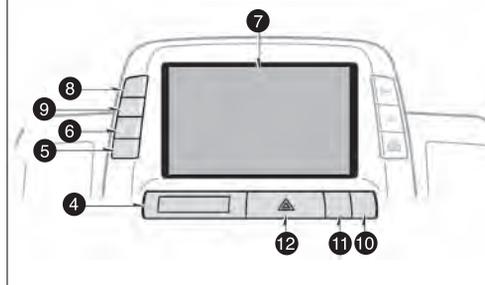


- ❶ Headlight, turn signal and front fog light¹ controls
- ❷ Wiper and washer controls
- ❸ "POWER"
- ❹ Clock
- ❺ "AUDIO" switch (Multi-information display control)
- ❻ "CLIMATE" switch (Multi-information display control)
- ❼ Multi-information display
- ❽ "DISPLAY" switch (Multi-information display control)
- ❾ "INFO" switch (Multi-information display control)
- ❿ Km/h or MPH button
- ⓫ Trip meter reset
- ⓬ Emergency flasher switch

- ⓭ Audio
- ⓮ 12V Power outlet
- ⓯ Park button
- ⓰ Electronic shift lever
- ⓱ Ignition key (key fob) slot
- ⓲ Cruise control
- ⓳ Tire Pressure Warning System reset
- ⓴ Smart Key system cancel¹
- ⓵ Climate steering wheel switches
- ⓶ Instrument panel light control
- ⓷ Audio steering wheel switches

¹ If equipped

² For details, refer to the Navigation System Owner's Manual.

Instrument cluster

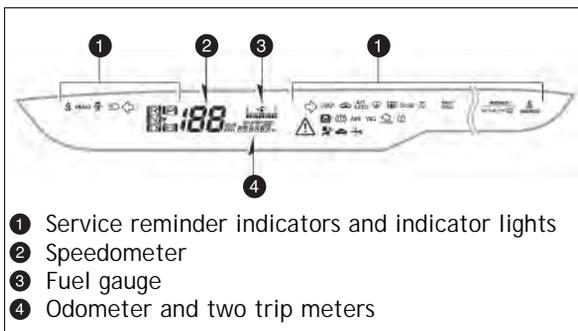

Indicator symbols

	Brake system warning ¹
	Driver seat belt reminder ¹
	Front passenger seat belt reminder ¹
	Charging system warning ²
	Malfunction / Check Engine indicator ¹
	Low engine oil pressure warning ²
	Low fuel level indicator ¹
	Master warning ¹
	High coolant temperature warning ²
	Open door warning ¹
	Airbag SRS warning ¹
	Low Tire Pressure Warning ¹
	Vehicle Stability Control warning ¹
	Engine oil replacement reminder ¹

	Hybrid vehicle battery warning ²
	Electric power steering system warning ²
	Smart Entry and Start warning ⁵
	Turn signal indicator
	Headlight high beam indicator
	Headlight indicator
	Tail light indicator
	Slip indicator
	Automatic head light leveling system warning ²
	Cruise control indicator ³
	Hybrid System warning ²
	Running mode position indicator ⁴
	Driving ready light
	Automatic air conditioner indicator
	Recirculate mode indicator
	Windshield air flow indicator
	Rear window and outside rear view mirror defoggers indicator
	Hybrid vehicle immobilizer / Theft deterrent system indicator
	Anti-lock Brake System warning ¹

CAUTION

When the Anti-lock Brake System (ABS) function is in action, you may feel the brake pedal pulsating and hear a noise. In this situation, to let the Anti-lock Brake System work for you, just hold the brake pedal down more firmly. Do not pump the brake as this will result in reduced braking performance.

¹ For details, refer to “Service reminder indicators and warning buzzers— Instrument cluster” Section 2-5, 2006 Owner’s Manual.


² For details, refer to “Service reminder indicators and warning buzzers— Multi-information display” Section 2-5, 2006 Owner’s Manual.

³ If this light flashes, see “Cruise control” Section 2-6, 2006 Owner’s Manual.

⁴ For details, refer to “Hybrid transaxle” Section 2-6, 2006 Owner’s Manual.

⁵ For details, refer to “Smart entry and start system” Section 2-1, 2006 Owner’s Manual.


Fuel tank door opener and cap

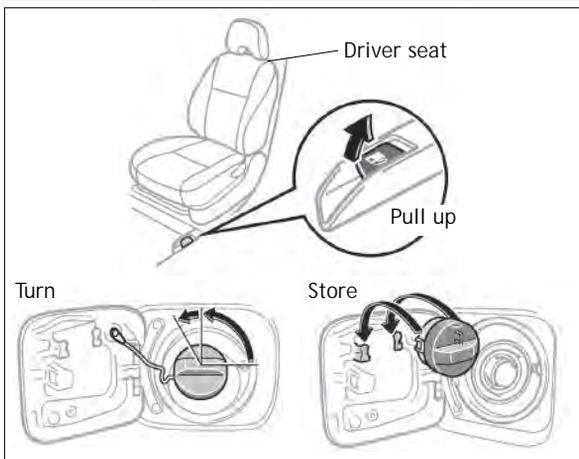

NOTE: If not tightened enough, check engine "  " indicator may illuminate.


NOTE: MAINTAIN GASOLINE IN THE TANK AT ALL TIMES. SERIOUS DAMAGE TO THE HYBRID SYSTEM CAN OCCUR IF THE VEHICLE RUNS OUT OF GAS.

Rear hatch

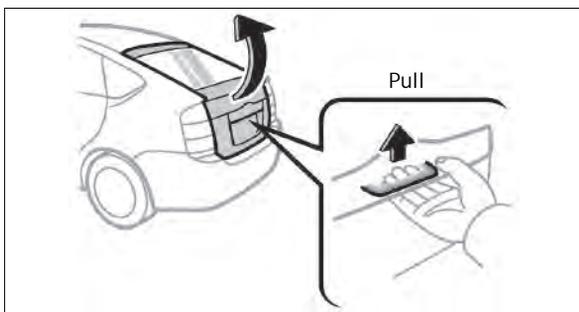


To open the rear hatch, grasp the handle and pull up.

Hood release

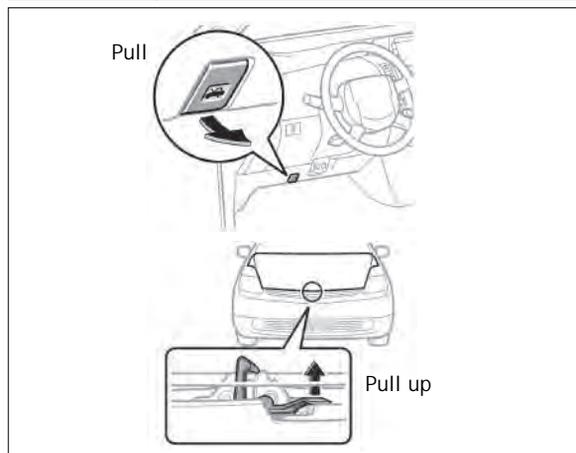

Engine maintenance

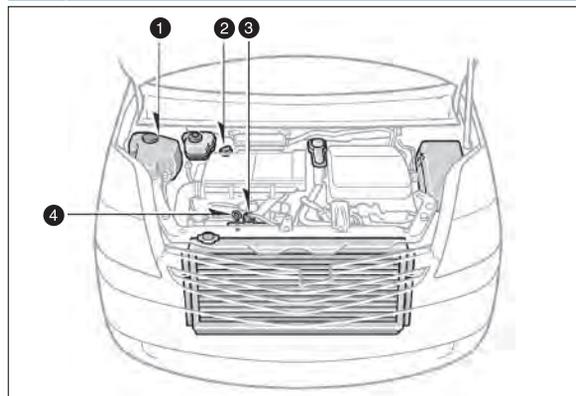


- 1 Windshield washer fluid tank
- 2 Engine oil filler cap
- 3 Engine coolant reservoir
- 4 Engine oil level dipstick

Note: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the "Owner's Warranty Information Booklet," "Scheduled Maintenance Guide" or "Owner's Manual Supplement."

FEATURES/OPERATIONS

Lights & turn signals

Headlights

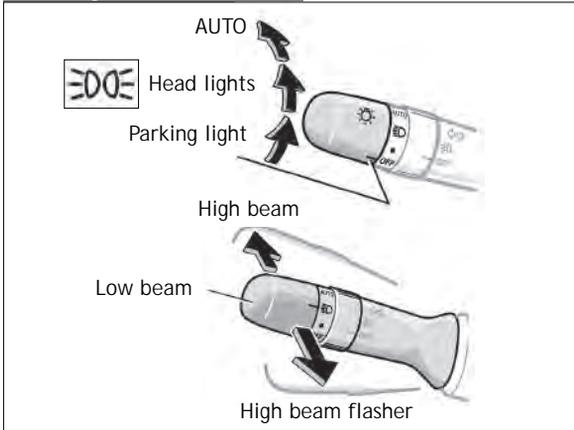

-Automatic light cutoff system* Automatically turns off lights when the driver's door is opened with the Hybrid System "OFF".


-Daytime Running Light system* Automatically turns on the headlights at a reduced intensity.

*if equipped

Turn signals




Front fog lights (if equipped)

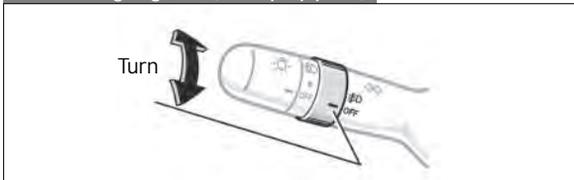


Front fog lights come "ON" only when the headlights are on low beam.

Window wiper & washer


Front

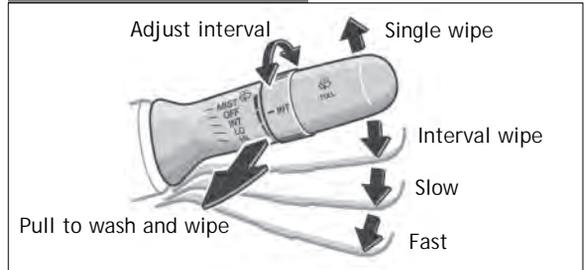

Rear

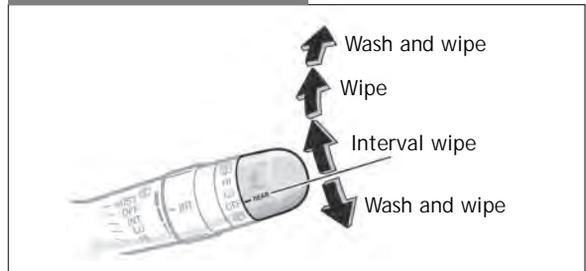

Garage door opener (HomeLink®) (if equipped)

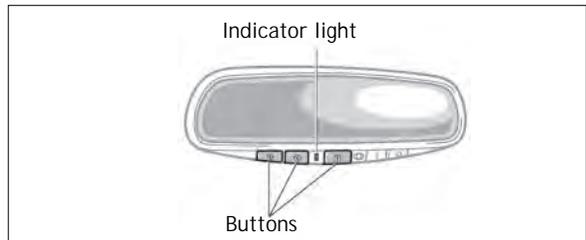

Garage door openers manufactured under license from HomeLink®* can be programmed to operate garage doors, estate gates, security lighting, etc.


Refer to the Owner's Manual for more details. For programming assistance, contact the Toyota Customer Experience Center at 1-800-331-4331, or visit <http://www.homelink.com>

* HomeLink® is a registered trademark of Johnson Controls, Inc.

Seat adjustments-Front




Tilt steering wheel

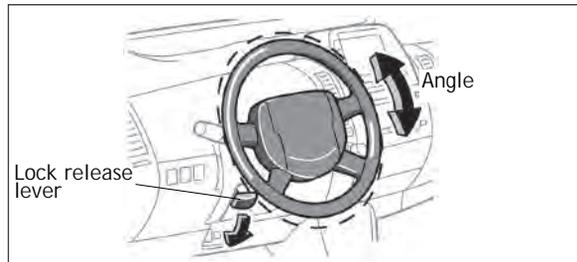


Hold wheel, push lever down, set angle then return lever.

Note: Do not attempt to adjust while the vehicle is in motion.


Seats-Head restraints

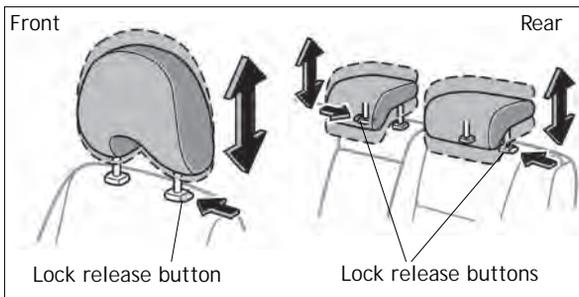

Windows

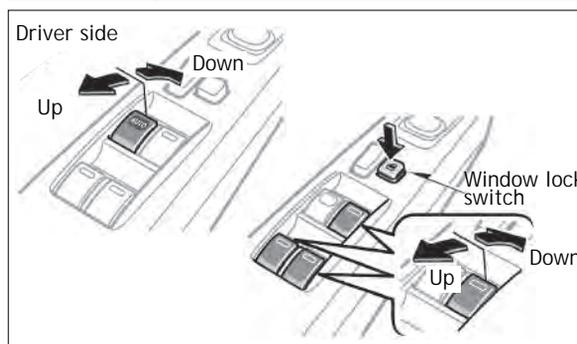

Seat adjustments-Rear

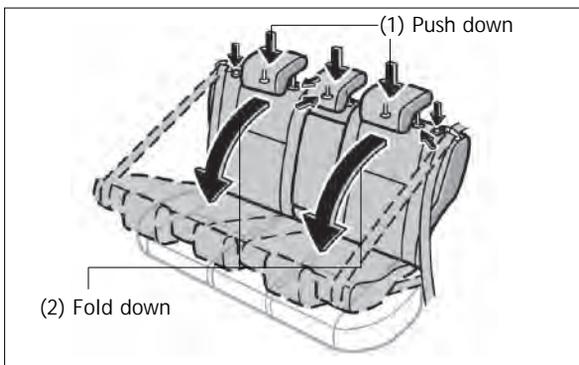

Window operation

Automatic operation (driver side only) Push the switch completely down or pull it completely up and release to fully open or close. To stop window midway, lightly push the switch in the opposite direction.


NOTE: If battery is disconnected, the windows need to be reinitialized. Refer to the Owner's Manual for more details.

Air conditioning/Heating


Type 1 functions




With navigation system¹

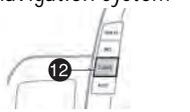

Type 2 functions

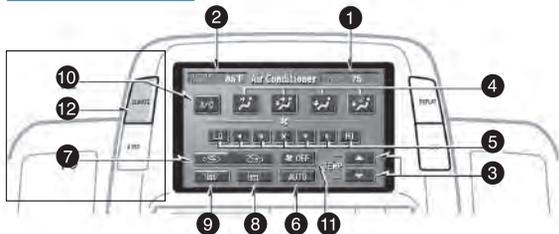


With navigation system¹

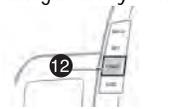

- ① Passenger compartment temperature
- ② Outside temperature
- ③ Temperature selector
- ④ Air flow vent selector
- ⑤ Fan speed
- ⑥ Automatic climate control
- ⑦ Fresh or recirculated cabin air
- ⑧ Rear window and outside rear view mirror defogger
- ⑨ Windshield air flow
- ⑩ Air Conditioning ON/OFF
- ⑪ Climate control OFF
- ⑫ Display the operation screen

¹ For details, refer to the "Navigation System Owner's Manual."


Steering wheel switches

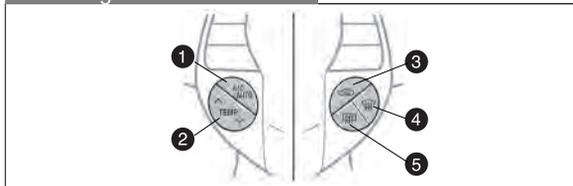


- ① "A/C AUTO"
- ② Temperature
- ③ Air intake selector
- ④ Windshield vent
- ⑤ Rear window and outside rear view mirror defoggers

Cruise control

Turning system ON/OFF

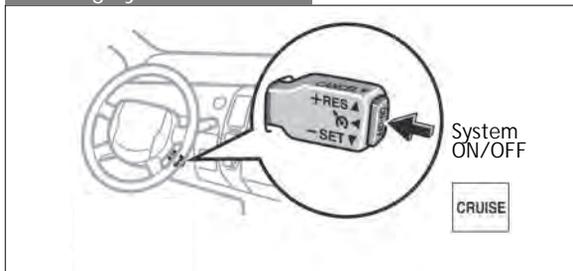


Setting a speed

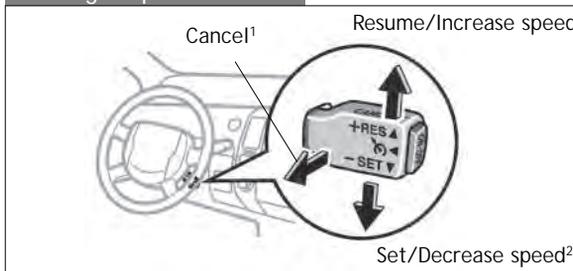


- ¹ The set speed may also be cancelled by depressing the brake pedal.
 - ² Push the lever up toward "+ RES."
- NOTE: If vehicle speed falls below 25 mph, the set speed will not be resumed.

Audio


Type 1 functions

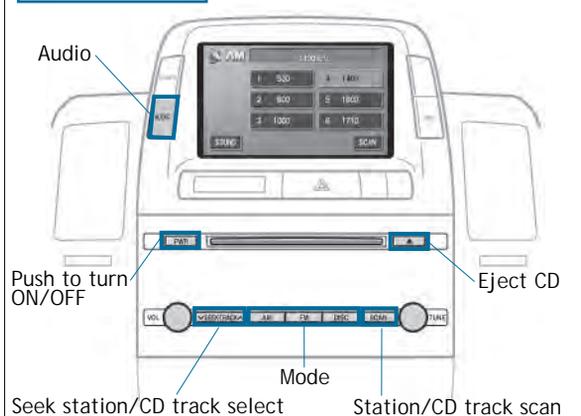


Type 2 additional functions

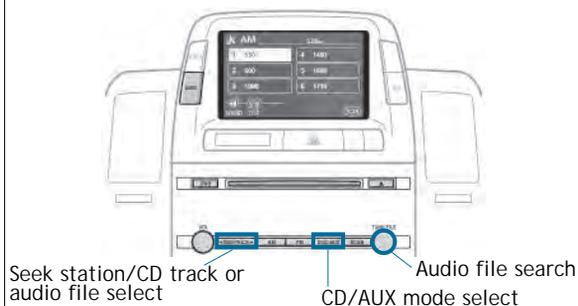

Type 3 additional functions

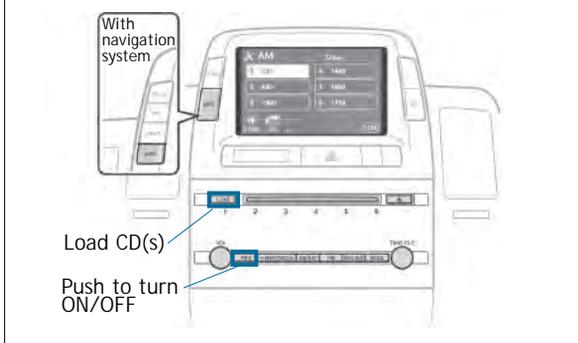

Audio operation screen

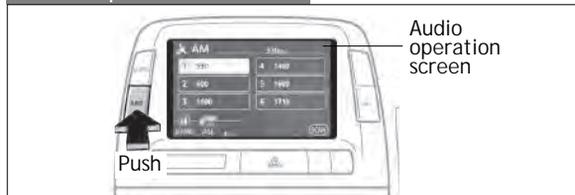

RADIO

To preset a station Tune in the desired station and touch a station selector icon (1-6) until you hear a beep.

To scan for stations Push "SCAN." Push again to hold selection.

CD PLAYER

To scan tracks on a disc Touch "SCAN" icon on the display. Push again to hold selection.

CD Changer (Type 3 only)


-To load one disc Push "LOAD" and insert 1 disc.

-To load multiple discs Push and hold "LOAD" until you hear a beep. Insert one disc. Shutter will close and then re-open for next disc.

To select a file (MP3/WMA only) Turn "TUNE•FILE" to file up/down.

¹ For details, refer to the Navigation System Owner's Manual.

Steering wheel switches

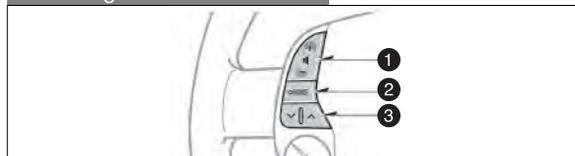


- ① " - + " Volume control
- ② " MODE " Push to turn audio "ON" and select an audio mode. Push and hold to turn the audio system "OFF."
- ③ " ^ v " switch In radio mode Push to select a preset station; push and hold to seek a station. In CD mode Push to skip up or down to next/previous track.

AUX audio jack (if equipped)




Refer to the Owner's Manual for more details.


Clock

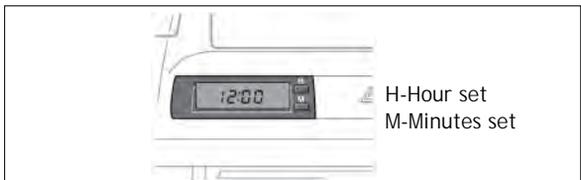


Luggage storage box

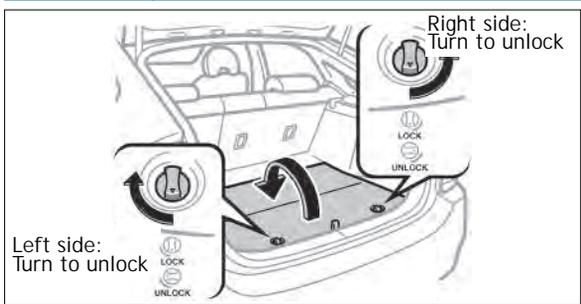


Light Control-Instrument panel

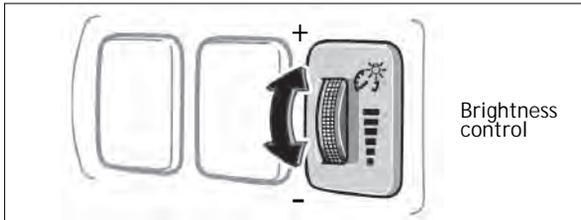


Cup and Bottle holders

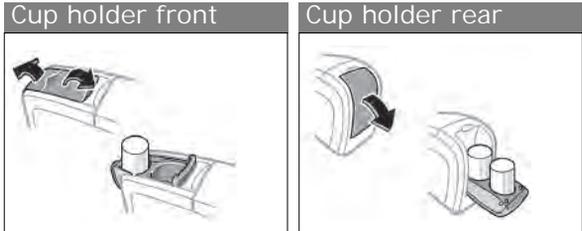

Bottle holder

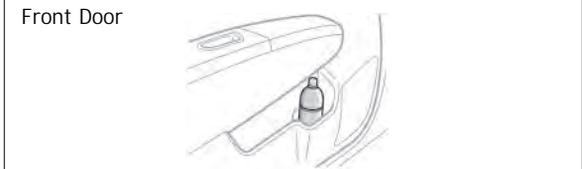

Power outlets

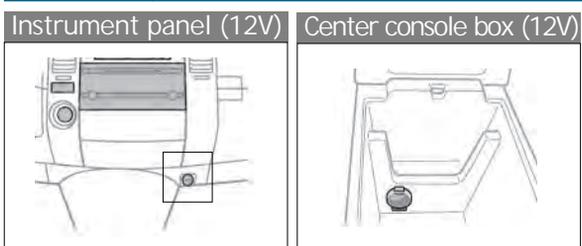


The Hybrid System must be in "ACC" or "IG-ON."

Parking brake




SAFETY AND EMERGENCY FEATURES

Door locks

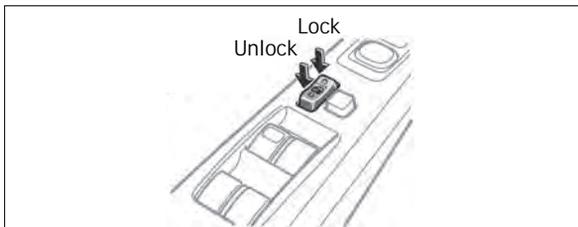


Doors-Child safety locks

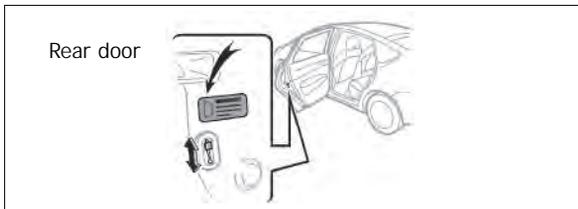

Move the lever to "LOCK," allowing the door to be opened only from the outside.


Seat belts

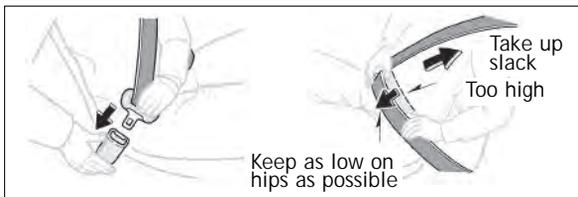


If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find out more information about seat belts, and how to install a child restraint system, refer to the Owner's Manual.

Seat belts-Shoulder belt anchor

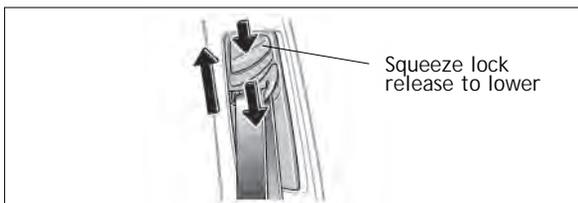

Emergency flashers

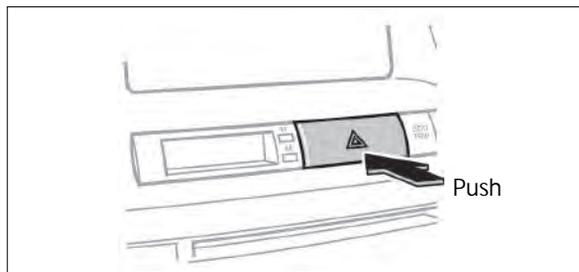


Rear air vent



NOTE: The air vent on the right side of the rear seatback is designed to assist in cooling the Hybrid vehicle battery. DO NOT BLOCK OR COVER THIS VENT, as it may cause overheating, resulting in reduced vehicle performance.


Tire Pressure Warning System reset

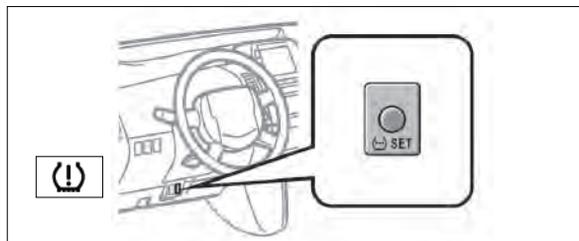

Designed to provide warning when tire pressure of any one of the tires is critically reduced while the vehicle is moving. It must be re-initialized by pushing and holding the "SET" button if indicator light remains ON or blinks, and/or after replacing or rotating tires or wheels.


Jump starting

Jump start terminal

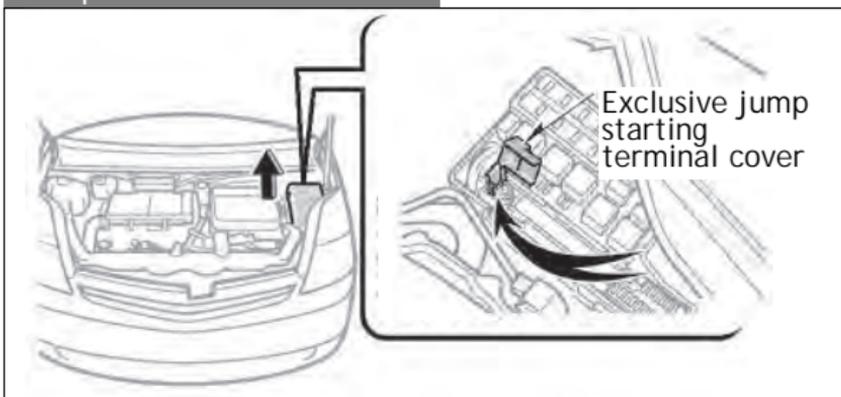

The jump start terminal is in the fuse box. To access the terminal, open the fuse block cover and the jump start terminal cover.

Connecting jumper cables

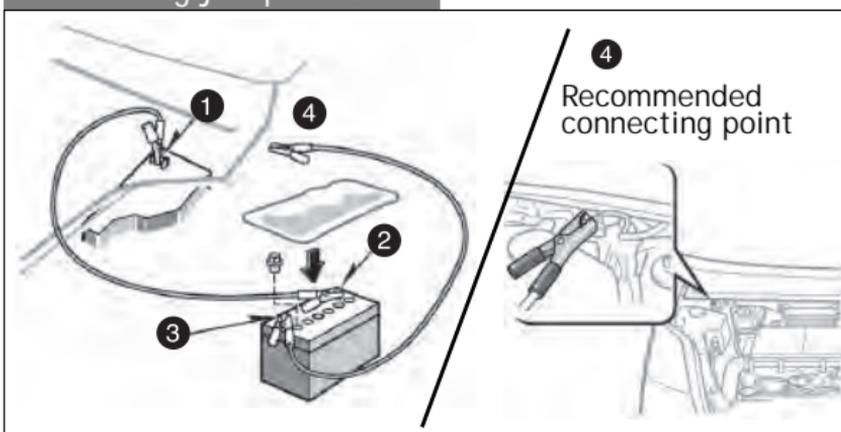

- 1 Connect positive (red) jumper cable to the jump start terminal.
- 2 Connect positive (red) jumper cable to the positive (+) terminal on the booster battery.
- 3 Connect negative (black) jumper cable to the negative (-) terminal on the booster battery.
- 4 Connect negative (black) jumper cable to the recommended connecting point of the vehicle with the discharged battery.
- 5 Depress brake pedal, and press "POWER" button to start the vehicle.

Refer to the Owner's Manual for more details.