

# TUNDRA

## 2007 Quick Reference Guide

 **TOYOTA** Owners  
ToyotaOwnersOnline.com  
Customer Experience Center 1-800-331-4331



This Quick Reference Guide and the iGuide are not full descriptions of Tundra operations. Every Tundra owner should review the *Owner's Manual* that accompanies this vehicle.

All information in this *Quick Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

MN 00452-PRG07-TUN  
Printed in USA 02/07



Interactive Owner's Guide



Have a question about the main features of your new Toyota? Find the answers quickly and easily in this Quick Reference Guide, which includes highlights from the *Owner's Manual*. For more detailed information, and helpful interactive demonstrations and tips, visit [www.ToyotaGuide.com](http://www.ToyotaGuide.com) or use this handy CD-ROM in your PC or Macintosh®.

*This iGuide is designed to be played on any computer—PC or Macintosh®.*

#### MINIMUM REQUIREMENTS

##### PC

WINDOWS® 98  
PENTIUM® III 600MHZ  
64MB OF RAM  
800 X 600 MONITOR  
16-BIT COLOR  
CD-ROM DRIVE

##### MACINTOSH®

SYSTEM 9.X,  
OS X 10.2  
POWERPC®  
64MB OF RAM  
24-BIT COLOR  
CD-ROM DRIVE

#### A word about safe vehicle operations !

Pay special attention to the boxed " **⚠CAUTION** " information highlighted in this reference guide and throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

#### **⚠CAUTION**

This vehicle will handle and maneuver differently from an ordinary passenger car because it is also designed for off-road use. It has a significantly higher rollover rate than other types of vehicles. Refer to the *Owner's Manual* for important rollover information.

# 2007 Tundra Quick Reference Guide

## OVERVIEW

Engine maintenance	8
Fuel tank door release and cap	7
Hood release	7
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
<b>Keyless entry<sup>1</sup></b>	<b>6</b>
Light control-Instrument panel	6

## FEATURES/OPERATIONS

Accessory meter	25
Air Conditioning/Heating	20-21
Audio	22-23
Auto LSD (Auto Limited Slip Differential)	27
Automatic Transmission	9
Bottle holders	27
Cruise control	25
Cup holders	26
Door locks	10
Four-wheel drive	10
Garage door opener (HomeLink <sup>®3</sup> )	21
<b>Lights<sup>1</sup> &amp; turn signals</b>	<b>16</b>
Mirrors-Power side view	10
Moonroof	12
<b>Multi-information display<sup>2</sup></b>	<b>18</b>
Parking brake	26
Power outlets-12V DC	17
Power outlets-115V AC	17
Rear seat entertainment system	24
Seat adjustments-Front	12-13
Seat adjustments-Rear	13
Seats-Folding	14-15
Seat heaters	20
Seats-Head restraints	14
Telephone controls (Bluetooth <sup>®</sup> )	24
Tilt and telescopic steering wheel	11
"TOW/HAUL" switch	11
Windows-Power	19
Windows-Rear	19
Windshield wiper & washer	15

## SAFETY AND

## EMERGENCY FEATURES

Doors-Child safety locks	29
Seat belts	28
Seat belts-Shoulder belt anchor	28
Spare tire & tools	29
Tire Pressure Warning System reset	28

<sup>1</sup> Visit your Toyota dealer for information on customizing this feature.




<sup>2</sup> Programmable by customer. Refer to the Owner's Manual for instructions and more information.

<sup>3</sup> HomeLink<sup>®</sup> is a registered trademark of Johnson Controls, Inc.

# OVERVIEW

## Instrument panel

### Steering wheel controls (if equipped)

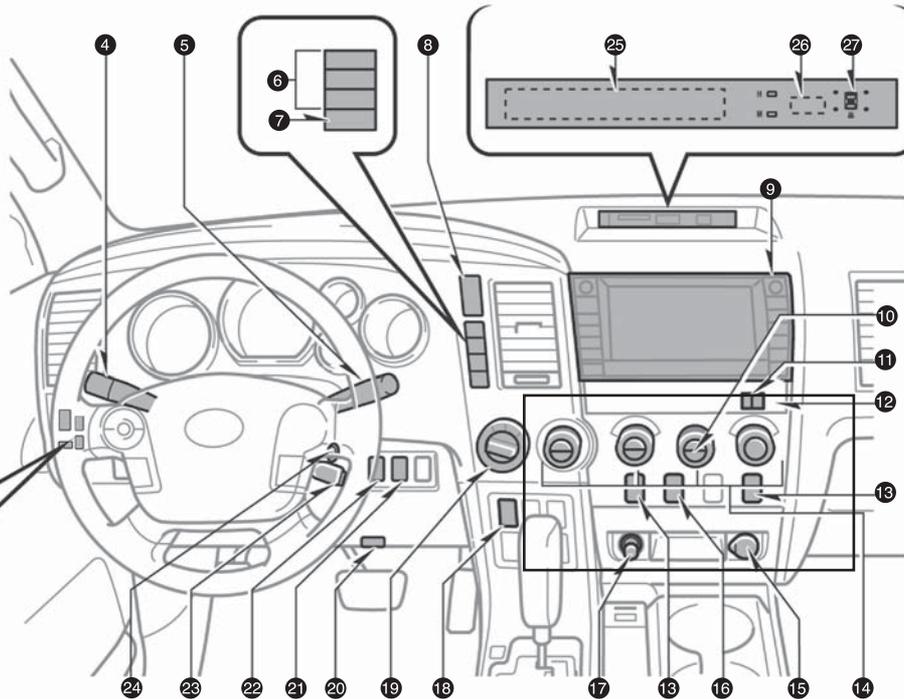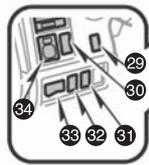
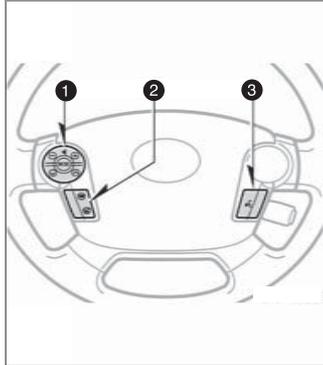


- ❶ Steering wheel audio control<sup>1</sup>
- ❷ Telephone control<sup>1</sup>
- ❸ Voice command button<sup>1,2</sup>
- ❹ Headlight and turn signal controls
- ❺ Wiper and washer controls
- ❻ Multi-information display/Accessory meter control buttons
- ❼ Intuitive parking assist button<sup>1</sup>
- ❽ Emergency flasher button
- ❾ Audio system or navigation system-integrated audio system<sup>1,2</sup>
- ❿ Outside rear view mirror/Back window defogger button<sup>1</sup>
- ⓫ Front passenger seat belt reminder
- ⓬ Front passenger occupant classification indicator or front passenger airbag ON/OFF indicator<sup>1</sup>
- ⓭ Seat heater controls<sup>1</sup>
- ⓮ Air Conditioning controls
- ⓯ 12V DC Power outlet
- ⓰ AUX audio jack
- ⓱ Cigarette lighter/12V DC Power outlet

- ❶ "TOW/HAUL" button<sup>1</sup>
- ❷ Two-wheel/Four-wheel drive selector<sup>1</sup>
- ❸ Tire Pressure Warning System reset
- ❹ "VSC OFF" button
- ❺ 115V AC Power outlet ON/OFF switch<sup>1</sup>
- ❻ Cruise control<sup>1</sup>
- ❼ Ignition switch
- ❽ Accessory meter
- ❾ Theft deterrent system/Engine immobilizer indicator<sup>1</sup>
- ❿ Intuitive parking assist indicator<sup>1</sup>
- ⓫ Front passenger airbag manual ON/OFF switch<sup>1</sup> (in glove box)
- ⓬ Instrument panel light control
- ⓭ Interior light/Personal light main switch
- ⓮ "RSCA OFF" switch
- ⓯ Power back window switch
- ⓰ Cargo lamp switch
- ⓱ Power rear view mirror control


<sup>1</sup> If equipped

<sup>2</sup> For details, refer to the "Navigation System Owner's Manual."

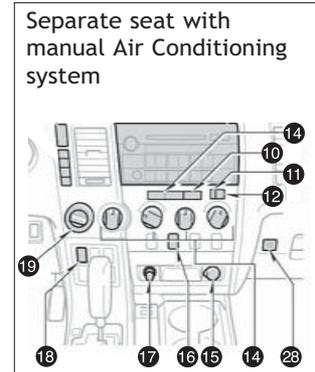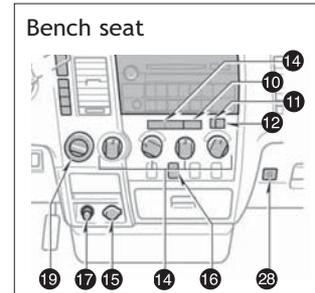


## Instrument cluster

Without multi-information display

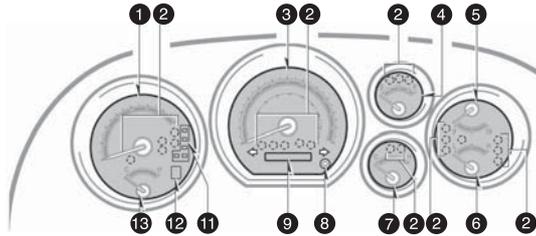

With multi-information display

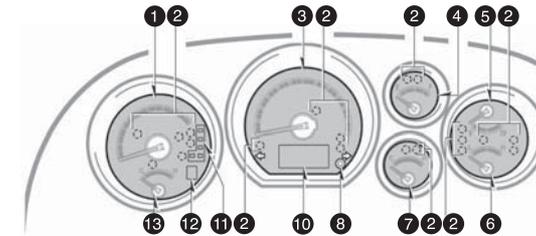

- 1 Tachometer
- 2 Service indicator and reminder
- 3 Speedometer
- 4 Fuel gauge
- 5 Voltmeter
- 6 Oil pressure gauge
- 7 Engine coolant temperature
- 8 Trip meter reset knob
- 9 Odometer and two trip meters
- 10 Multi-information display
- 11 Automatic Transmission shift position indicator
- 12 Automatic Transmission shift range display
- 13 Automatic Transmission fluid temperature gauge

- Low engine oil pressure warning<sup>1</sup>
- Malfunction/Check Engine indicator<sup>1</sup>
- MAINT REQD** Engine oil replacement reminder<sup>1</sup>
- Low fuel level warning<sup>1</sup>
- Open door warning<sup>1</sup>
- Airbag SRS warning<sup>1</sup>
- Master warning<sup>1</sup>
- A/T OIL TEMP** Automatic Transmission fluid temperature warning<sup>1</sup>
- Low Tire Pressure Warning<sup>1</sup>
- Low windshield washer fluid level warning<sup>1</sup>
- Theft deterrent/Engine immobilizer system indicator
- RSCA OFF** Roll Sensing Curtain Airbags off indicator<sup>4</sup>
- Headlight low/high beam indicator
- Turn signal indicator
- 4 HI 4 LO** High/Low speed four-wheel drive indicator<sup>2</sup>
- Slip indicator
- VSC OFF** Vehicle Stability Control "OFF" indicator/warning<sup>1</sup>
- TOW HAUL** TOW/HAUL mode indicator
- AUTO LSD** "AUTO LSD" indicator
- CRUISE** Cruise control indicator<sup>3</sup>
- ABS** Anti-lock Brake System warning<sup>1</sup>

## Indicator symbols

- BRAKE** Brake system warning<sup>1</sup>
- Driver/Front passenger seat belt reminder<sup>1</sup>  
(alarm will sound if speed is over 12 mph)
- Charging system warning<sup>1</sup>
- Front passenger occupant classification or front passenger airbag ON/OFF indicator

### CAUTION

When the anti-lock brake system (ABS) function is in action, you may feel the brake pedal pulsating and hear a noise. In this situation, to let the anti-lock brake system work for you, just hold the brake pedal down more firmly. Do not pump the brake as this will result in reduced braking performance.


<sup>1</sup> For details, refer to "Service reminder indicators and warning buzzers," Section 1-6, 2007 Owner's Manual.

<sup>2</sup> If this light flashes, refer to "Four-wheel drive system," Section 1-7, 2007 Owner's Manual.

<sup>3</sup> If this light flashes, refer to "Cruise control," Section 1-7, 2007 Owner's Manual.

<sup>4</sup> If this light flashes, refer to "Roll sensing of curtain shield airbags off switch," Section 1-3, 2007 Owner's Manual.

### Keyless entry

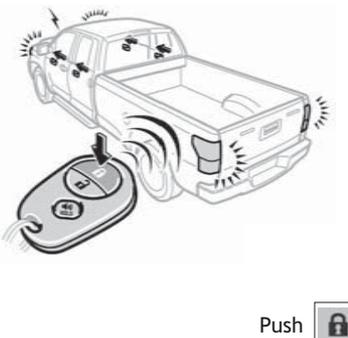
Locking operation	Unlocking operation
 <p>Push </p>	 <p>Push ONCE: Driver door TWICE: All doors </p> <p><b>NOTE:</b> If a door is not opened within 30 seconds of unlocking, all doors will relock for safety.</p>

### Alarm operation




Push and hold 

### Light control-Instrument panel

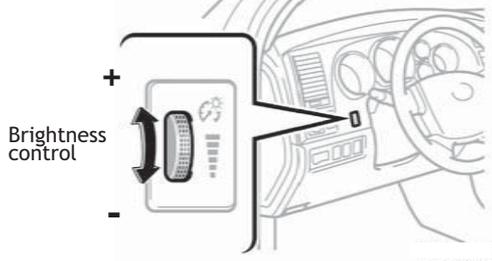

Brightness control

### Fuel tank door release and cap

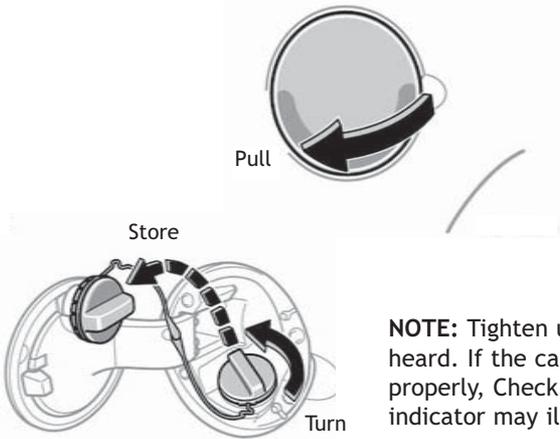


Pull

Store

Turn

**NOTE:** Tighten until one click is heard. If the cap is not sealed properly, Check Engine "CHECK" indicator may illuminate.

### Hood release

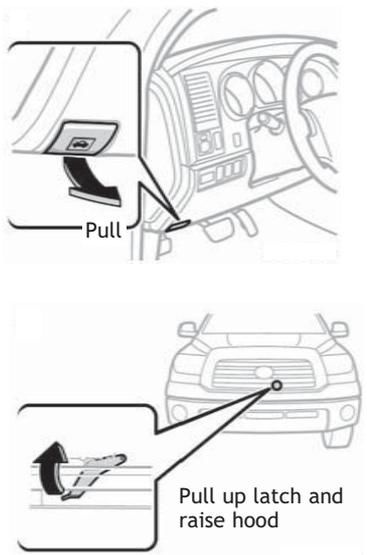


Pull


Pull up latch and raise hood

**Engine maintenance**


**6 cylinder (1GR-FE) engine**

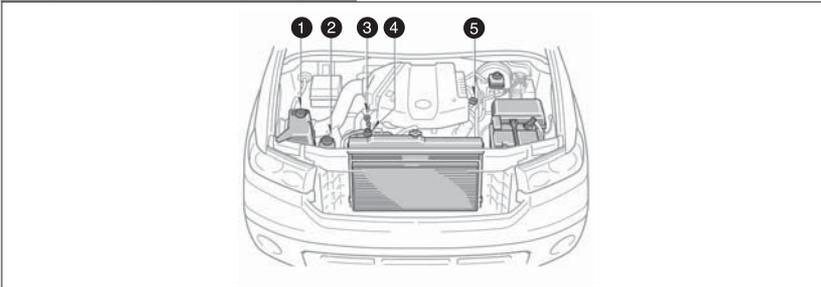

**4.7L 8 cylinder (2UZ-FE) engine**

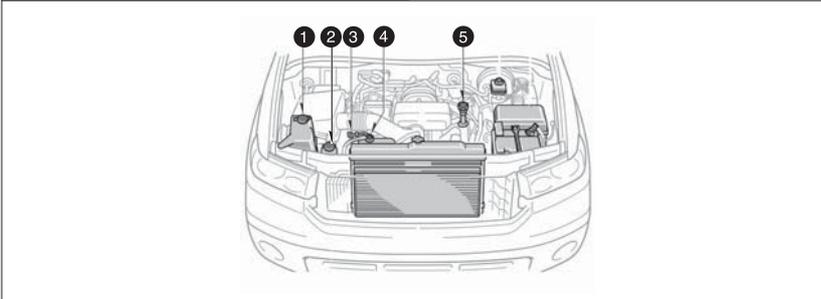

**5.7L 8 cylinder (3UR-FE) engine**

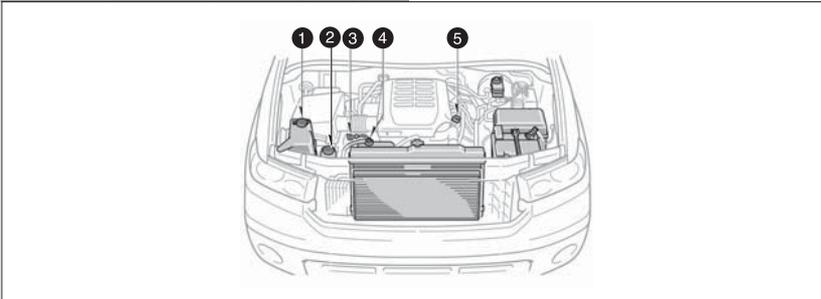


- ① Windshield washer fluid tank
- ② Power steering fluid reservoir
- ③ Engine oil level dipstick
- ④ Engine coolant reservoir
- ⑤ Engine oil filler cap


**Note:** Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the "Owner's Warranty Information Booklet," "Scheduled Maintenance Guide" or "Owner's Manual Supplement."

**Automatic Transmission**

**Floor shift type**

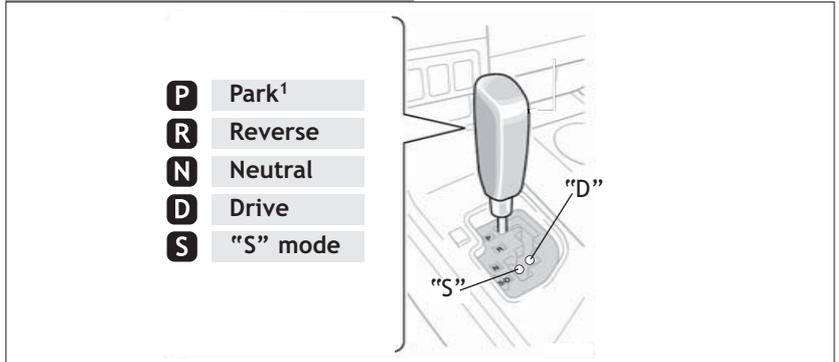

**Column shift type**

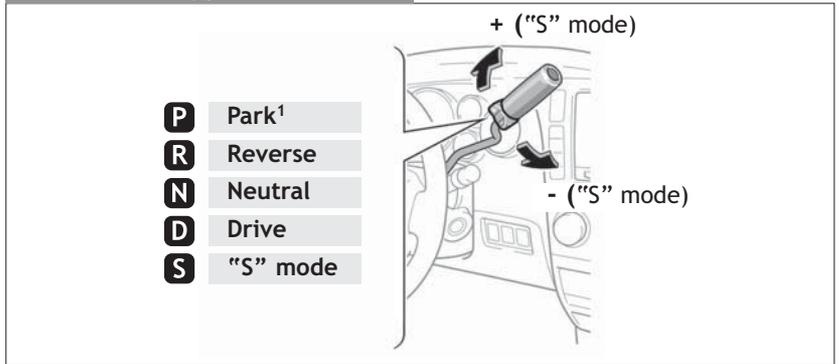

<sup>1</sup> The ignition switch must be ON and the brake pedal depressed to shift from "Park."

**"S" (Sequential) mode**

Shift the shift lever to "S" position from "D" position.

**Floor shift type:**

- +: Upshift (Push and release)
- : Downshift (Pull and release)

**Column shift type:**

- +: Upshift (Turn up and release)
- : Downshift (Turn down and release)

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.

### Four-wheel drive (if equipped)

Turn

Turn

4HI

4H

4LO

4L

Push and turn

<b>2WD</b>	High speed (2WD)
<b>4H</b>	High speed (4WD) Turn to "4H" with speed below 62 mph.
<b>4L</b>	Low speed (4WD) Shift to "N" position when stopped, then push and turn to "4L."

For best fuel economy and performance under normal driving conditions, keep in "2WD" position.

### Mirrors-Power side view (if equipped)

Select left or right

L R

MIRROR

Adjust

Fold mirrors in

Return mirrors to original position

Key must be in the "ACC" or "ON" position.

### Door locks (if equipped)


Unlock

Lock


### Tilt and telescopic (if equipped) steering wheel

#### Manual

#### Tilt steering wheel

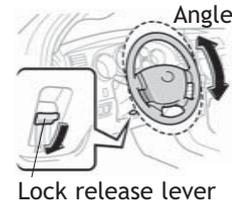

#### Tilt and telescopic steering wheel

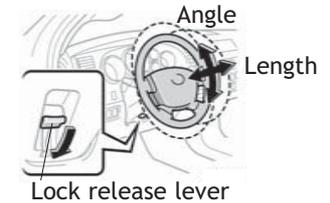

Hold wheel, push lever down, set angle and length, then return lever.

#### Power

Angle

Length

Control switch


Control switch

Push the control switch, set angle and length.


**Note:** Do not attempt to adjust while the vehicle is in motion.

### "TOW/HAUL" switch (if equipped)

#### Floor shift type

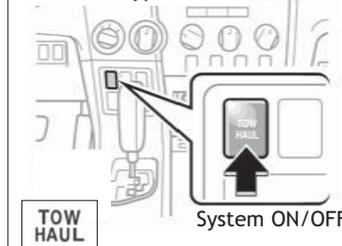

#### Column shift type

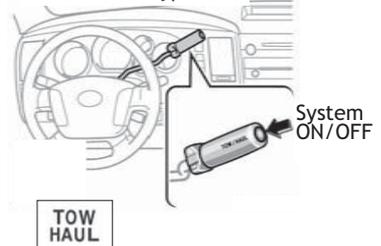


Tow/Haul mode can be used when carrying heavy loads. As fuel economy is reduced while in Tow/Haul mode, deactivating when driving without a load is recommended.


Refer to the *Owner's Manual* for more details on this system before attempting to use it.

### Moonroof (if equipped)

#### Sliding operation

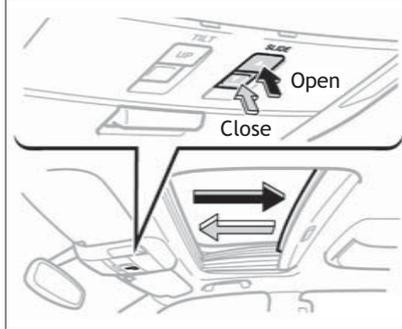

#### Tilting operation

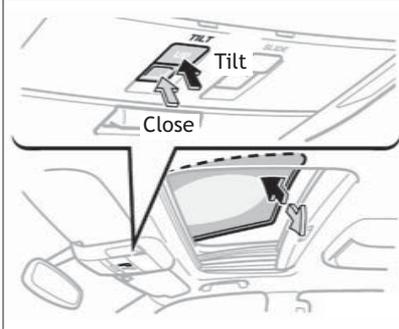


### Seat adjustments-Front

#### Manual seat

Separate seat  
-Regular cab model



Separate seat  
-Double cab and Crew Max models

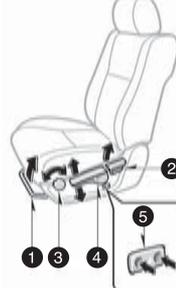


Bench seat  
-Regular cab model



Bench seat  
-Double cab and Crew Max models




### Power seat

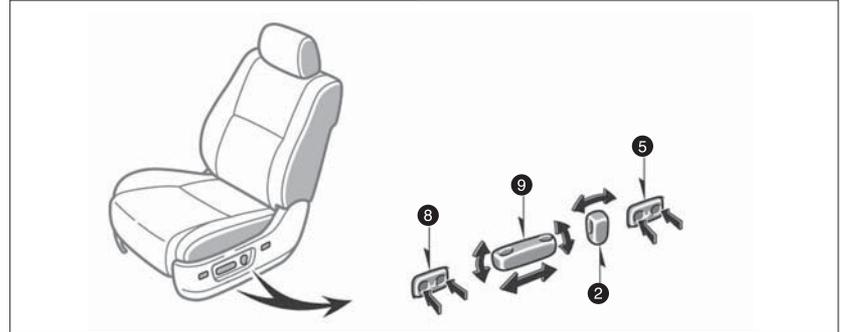

- 1 Position
- 2 Seatback angle
- 3 Seat cushion angle
- 4 Seat height
- 5 Lumbar support\*
- 6 Seatback angle (side)
- 7 Seatback angle (center)
- 8 Leg support
- 9 Position, cushion angle and height


\* If equipped

### Seats adjustments-Rear

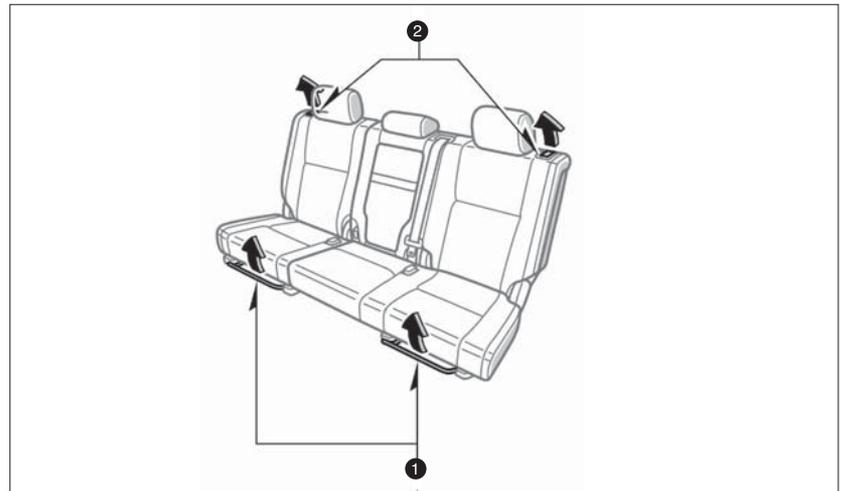


- 1 Position
- 2 Seatback angle and fold


**Seats-Head restraints**

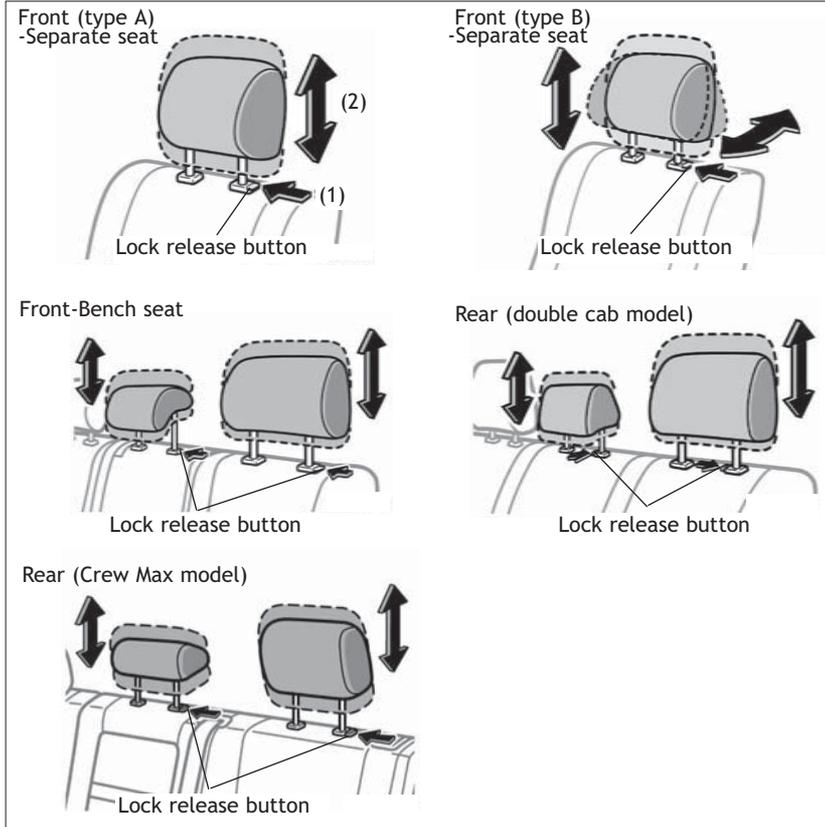


**Seats-Folding**

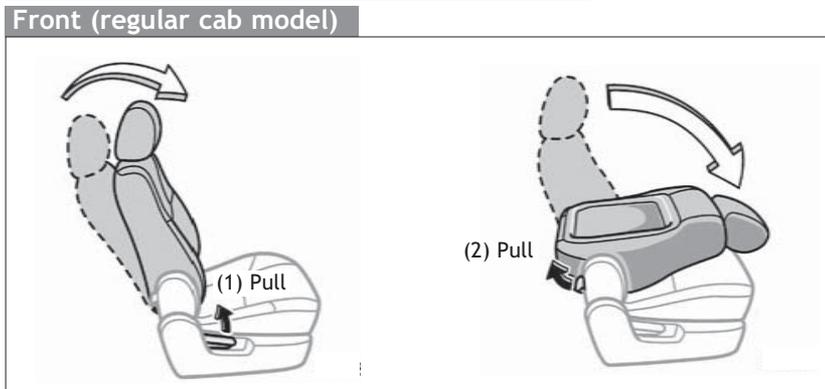


**Rear (double cab model)**

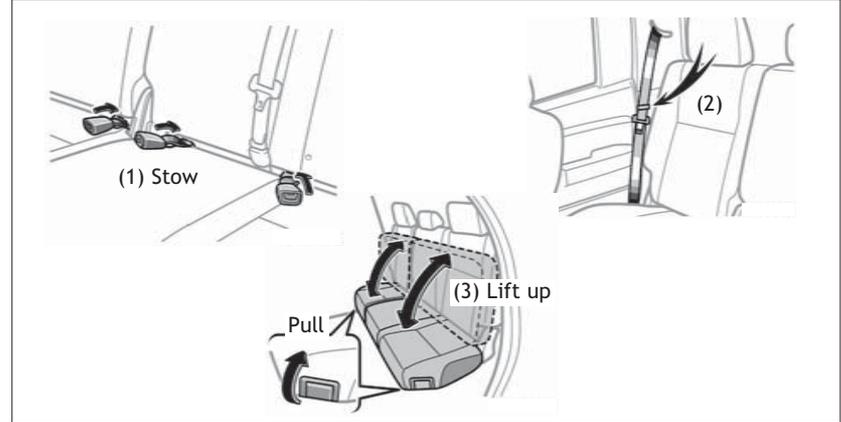

**Rear (Crew Max model)**

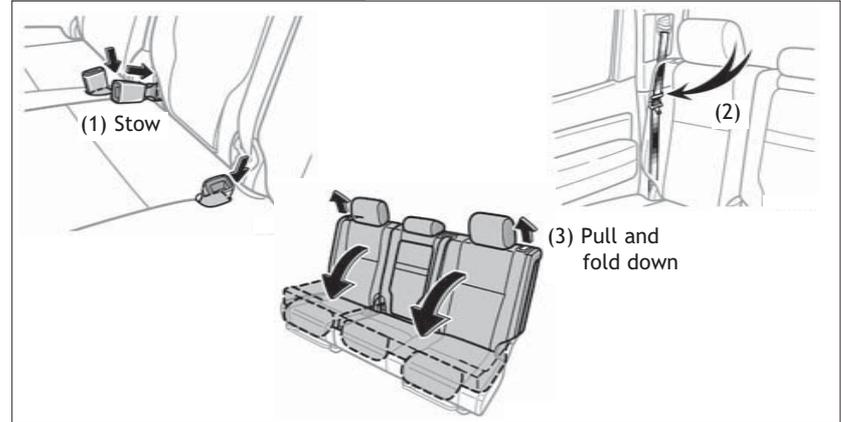


**Windshield wiper & washer**

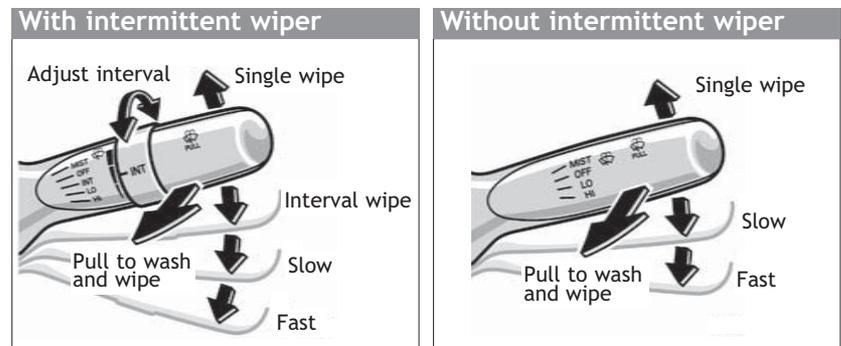

## Lights & turn signals


### Headlights

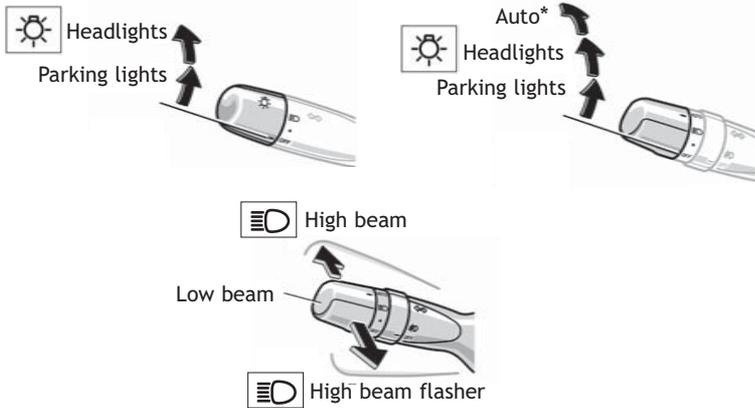

\* If equipped


- Daytime Running Light system (DRL)(if equipped)** Automatically turns on the turn signal lights at a reduced intensity.
- Automatic light cut off system** Automatically turns lights off after a delay of 30 seconds, or the lock switch on remote may be pushed.

### Front fog lights (if equipped)

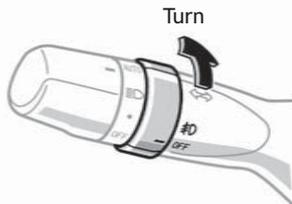


Front fog lights come on only when the headlights are on low beam.

### Turn signals

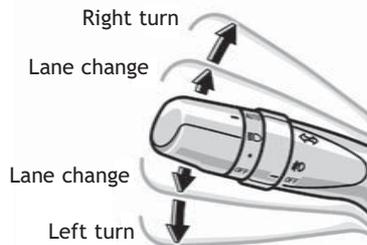


## Power outlets-12V DC (if equipped)

### Separate seats

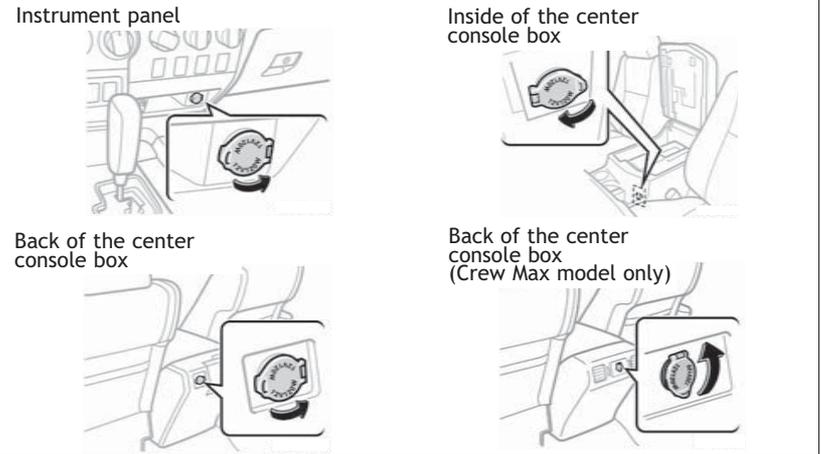


### Bench seat

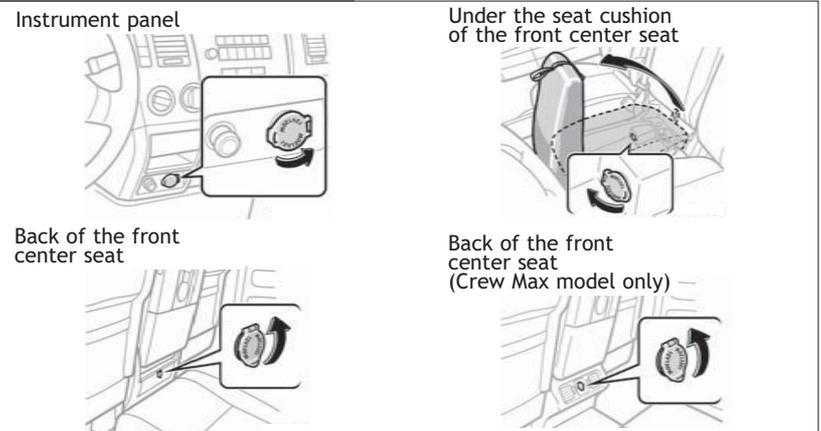


Key must be in the "ACC" or "ON" position to be used.

## Power outlet-115V AC (if equipped)

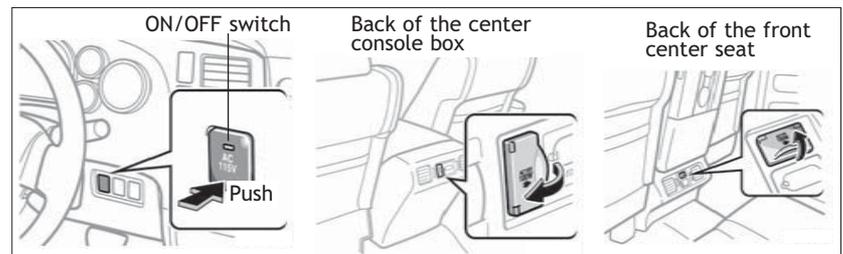

**Multi-information display (if equipped)**

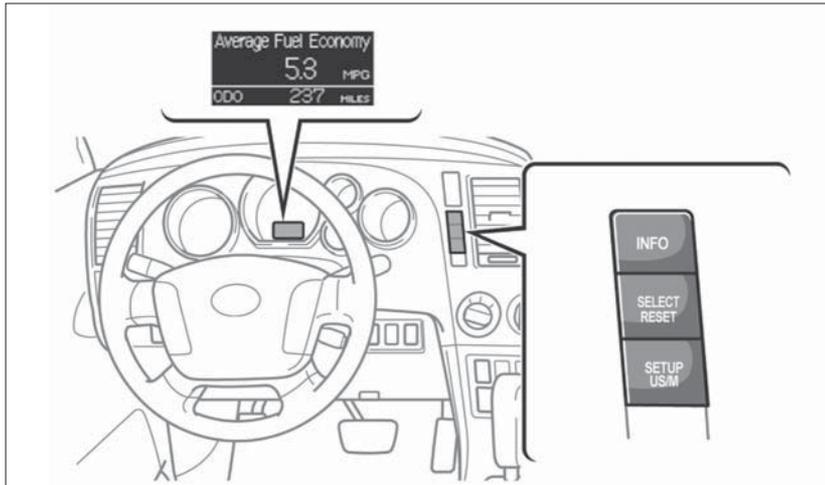

Push “INFO” to change information in the following:


- (1) Zoom display of odometer and trip meter
- (2) Average gas mileage
- (3) Current gas mileage
- (4) Miles left on remaining fuel
- (5) Running time from engine start
- (6) Average vehicle speed

Push “SETUP US/M” to customize to the following settings:


- (1) KEYLESS ENTRY FEEDBACK
- (2) KEYLESS ENTRY RELOCK TIMER
- (3) KEYLESS ENTRY ALL DOORS UNLOCK
- (4) DOOR AUTO LOCKING
- (5) DOOR AUTO UNLOCKING
- (6) HEADLAMPS AUTO OFF TIMER
- (7) COURTESY LAMPS OFF TIMER
- (8) DEFAULT SETTING

**Windows-Power (if equipped)**

**Regular cab model**

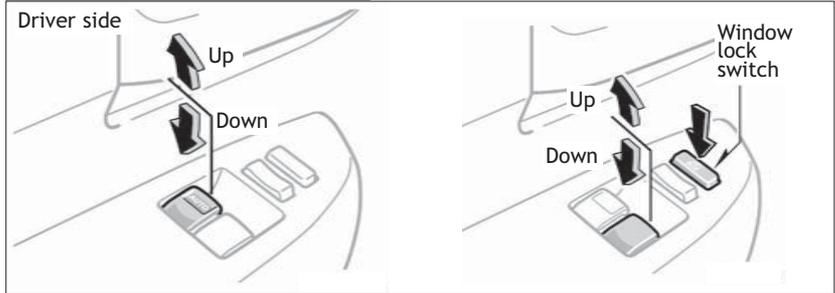

**Double cab and Crew Max models**

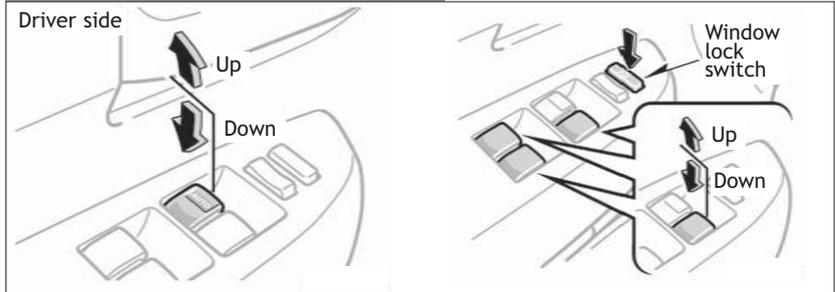


**Automatic down operation (driver side only)**


Push the switch completely down and release to fully open. To stop window midway, lightly pull up on the switch.

**Window lock switch** Deactivates all passenger windows. Driver’s window remains operable.

**Window-Rear**

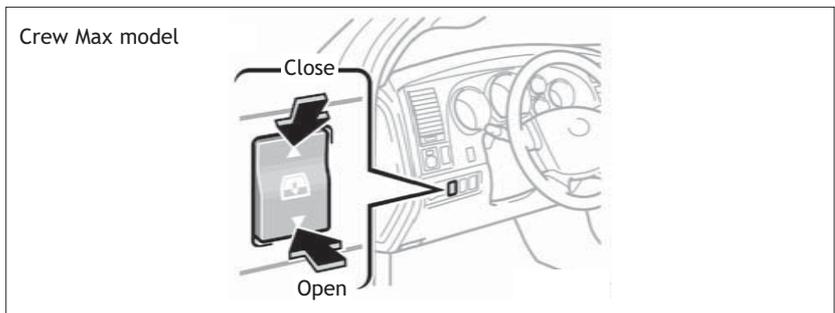


### Seat heaters (if equipped)

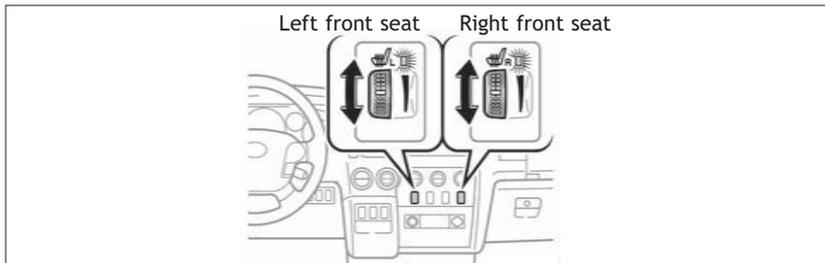


### Air Conditioning/Heating

#### Automatic Air Conditioning

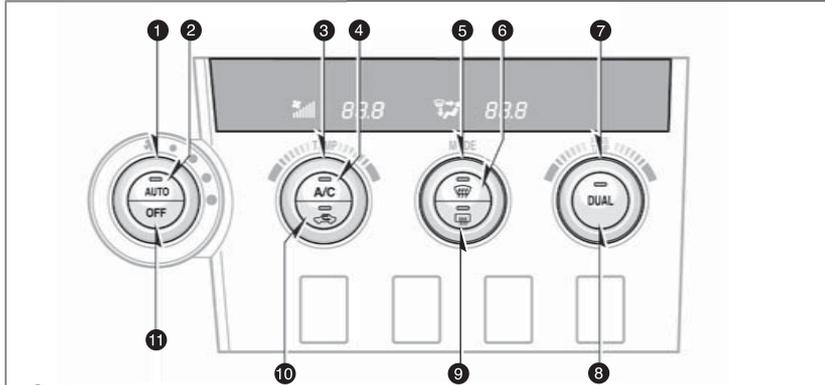

- 1 Fan speed
- 2 Automatic climate control ON  
Adjusting the temperature setting will cause the airflow vents, air intake and fan to adjust automatically.
- 3 Temperature (driver side)
- 4 Air Conditioning ON/OFF
- 5 Airflow vent  
In "🌬️" mode, use fresh air ("🚗" indicator "OFF") to reduce window fogging.
- 6 Windshield airflow (fresh air only)
- 7 Temperature (front passenger side)
- 8 "DUAL" button  
**Indicator ON:** Separate temperature settings for driver and passenger.  
**Indicator OFF:** Synchronize temperature settings for driver and passenger.
- 9 Outside rearview mirror/Back window defogger
- 10 Fresh or recirculated cabin air
- 11 Climate control OFF

#### Manual Air Conditioning

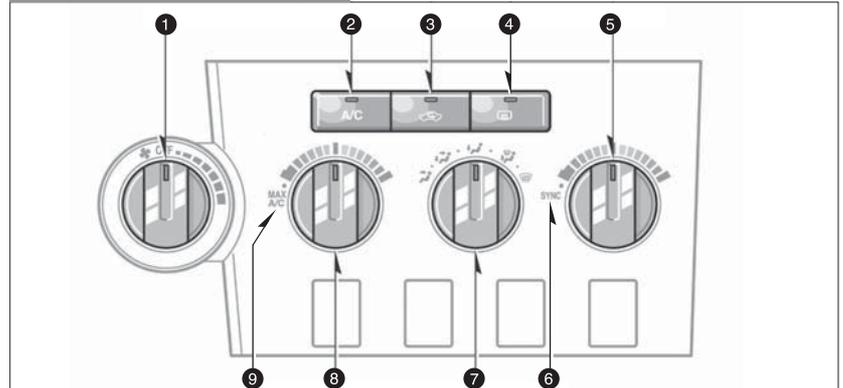

- 1 Fan speed
- 2 Air Conditioning ON/OFF
- 3 Fresh or recirculated cabin air
- 4 Outside rearview mirror/Back window defogger\*
- 5 Temperature (front passenger side)
- 6 Synchronize with driver side temperature setting
- 7 Airflow vent selector  
In "🌬️" or "🌬️" mode, use fresh air ("🚗" indicator "OFF") to reduce window fogging.
- 8 Temperature (driver side)
- 9 Use for quick cooling. MAX A/C changes air intake to recirculate. It is not possible to change intake to fresh, or to turn A/C OFF in this mode.

\* If equipped

### Garage door opener (HomeLink®)\* (if equipped)



Garage door openers manufactured under license from HomeLink® can be programmed to operate garage doors, estate gates, security lighting, etc. Refer to "Garage door opener," Section 1-10 in the *Owner's Manual* for more details. For programming assistance, contact the Toyota Customer Experience Center at 1-800-331-4331, or visit <http://www.homelink.com>.

\*HomeLink® is a registered trademark of Johnson Controls, Inc.

**Audio**

**Type 1**

Preset buttons - functions in other modes indicated above number

Push to turn ON/OFF

Seek station/ CD track select

Push to adjust tone, balance & ASL\*

Eject CD

Push to skip up/down MP3 folder

Mode

Station/CD track scan

View CD information

**Type 2 additional functions**

Load CD(s)

View MP3 folder and/or Satellite Radio category type

**Type 3 (with JBL speakers)**

\* Automatic Sound Leveling

**CD PLAYER**

**To scan tracks on a disc** Push and hold "SCAN." Push again to hold selection.

**CD changer (Type 2 and 3 only)**

**-To load one disc** Push "LOAD" and insert one disc.

**-To load multiple discs** Push and hold "LOAD" until you hear a beep. Insert one disc. Shutter will close and then re-open for next disc.

**To select a file (MP3/WMA only)** Turn "TUNE-FILE."


**To select a folder (MP3/WMA only)** Push either side of "FOLDER."

**RADIO**

**To preset stations** Tune in the desired station and hold down a preset button (1-6) until you hear a beep. Push desired preset button (1-6) to select.

**To scan stations** Push and hold "SCAN" to scan preset stations. Push again to hold selection.

**Steering wheel switches (if equipped)**

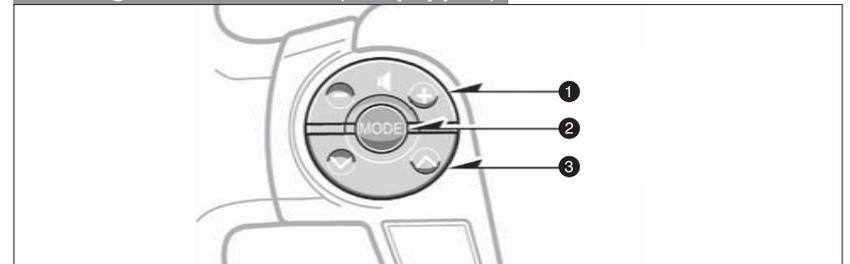

① " - + "

**Volume control**

② "MODE"

**"MODE"**

Push to turn audio ON and select an audio mode. Push and hold to turn the audio system "OFF."

③ " ^ v "


**-In radio mode**

Push to select a preset station; push and hold to seek the next strong station.

**-In CD mode**


Push to skip up or down to the next/previous track.

**AUX audio jack**

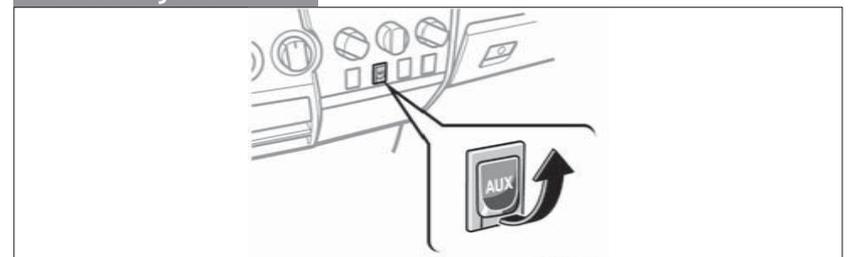


By inserting a mini plug into the AUX audio jack, you can listen to music from a portable audio device through the vehicle's speaker system.

### Rear seat entertainment system (if equipped)

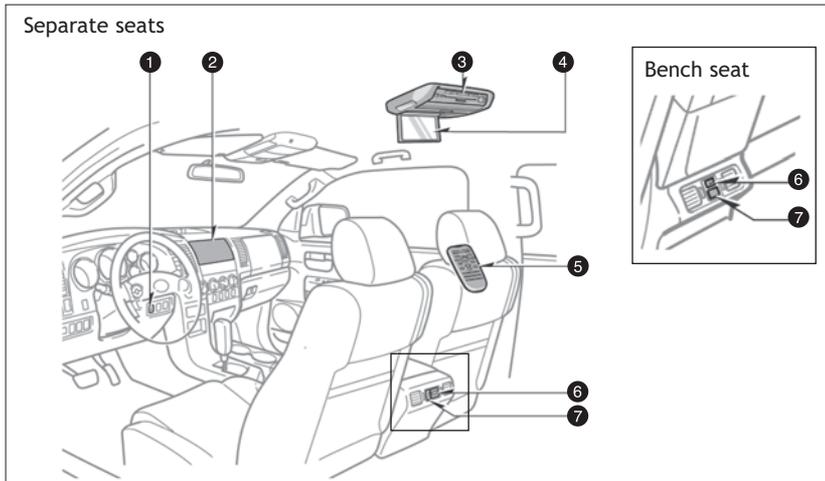

- ❶ 115V AC Power outlet ON/OFF switch
- ❷ Front audio system
- ❸ DVD player
- ❹ DVD screen
- ❺ Remote control
- ❻ 115V AC Power outlet
- ❼ A/V input adapter


### Telephone controls (Bluetooth®) (if equipped)

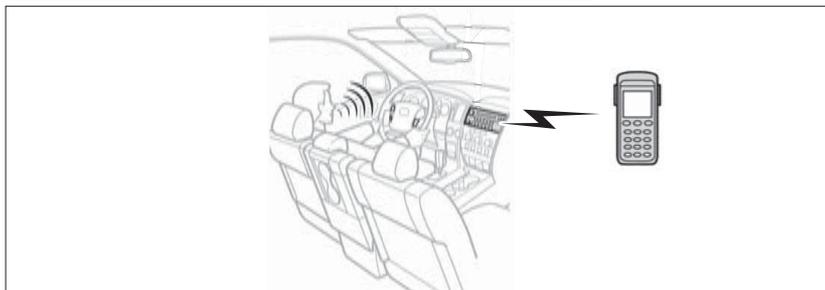

Bluetooth® technology allows you to place or receive calls without taking your hands from the steering wheel or using a cable to connect the telephone and the system.

Refer to "Hands-free telephone system," Section 1-8 in the *Owner's Manual* for more details.

### Accessory meter (if equipped)

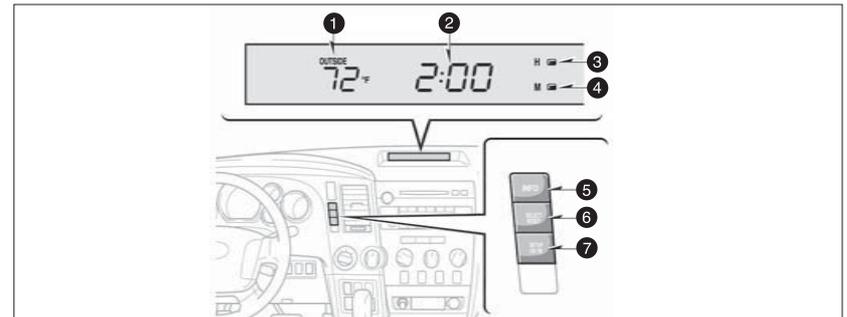


- ❶ Outside temperature/cruise information display
- ❷ Clock
- ❸ Hour set
- ❹ Minute set
- ❺ Change information (if equipped)
- ❻ "SELECT RESET" button (if equipped)
- ❼ "SETUP US/M" button (if equipped) to customize unit


Refer to your *Owner's Manual* for complete details on this system before attempting to use it.

### Cruise control (if equipped)

#### Turning system ON/OFF

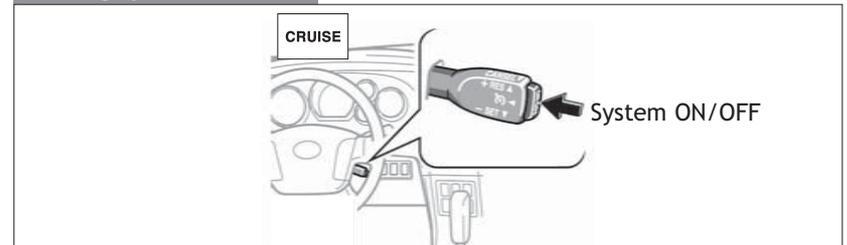

#### Functions

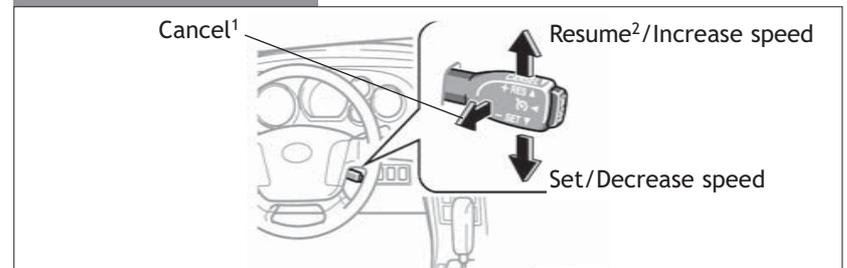

<sup>1</sup> The set speed may also be cancelled by depressing the brake pedal.

<sup>2</sup> The set speed may be resumed once vehicle speed exceeds 25 mph.


### Parking brake




### Cup holders

#### Separate seat

Center console

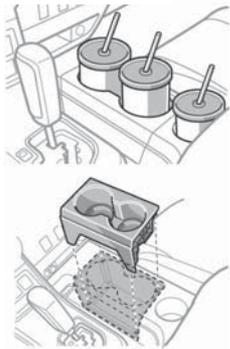

Back of the center console box  
(double cab model)

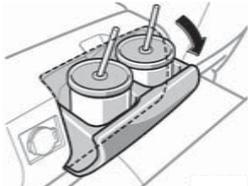


#### Bench seat

Front center seat




Back of the front center seatback  
(double cab model)

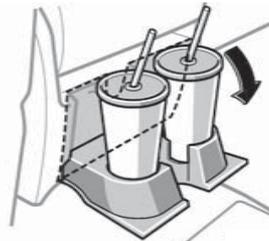


#### Rear seat


Crew Max model

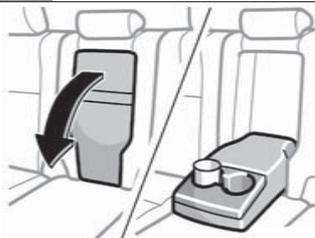

### Bottle holders

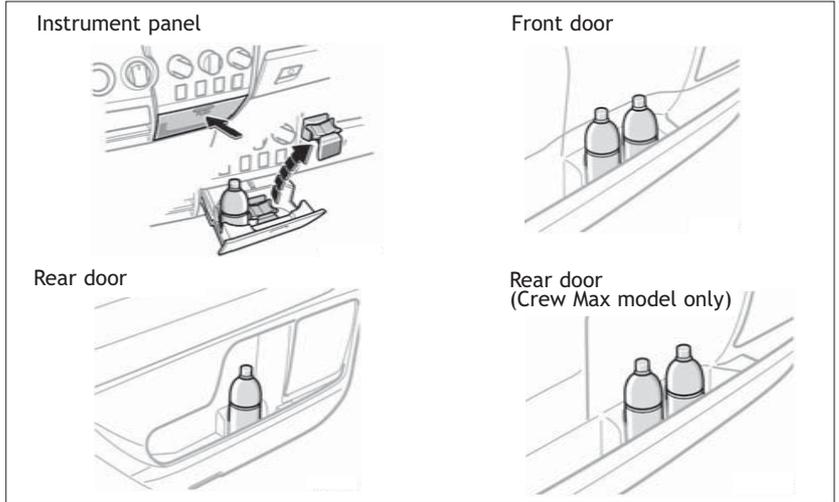

### Auto LSD (Auto Limited Slip Differential)

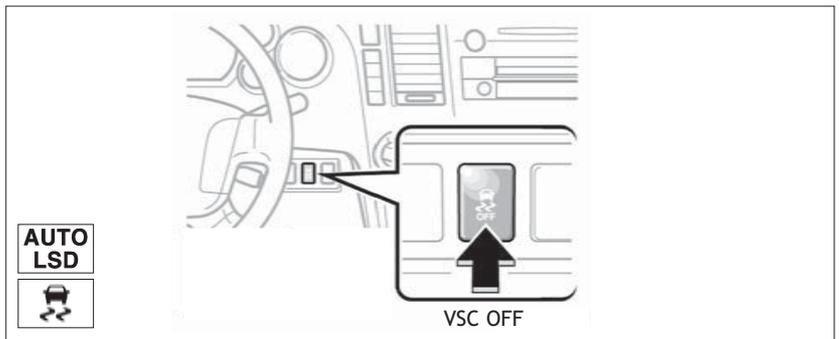


Briefly pushing the "VSC OFF" switch activates/deactivates Auto LSD.

**Note:** *ONLY works in 2-wheel drive at speeds under 62 mph. Should ONLY be used when wheel spinning occurs on slippery or unpaved surfaces.* Pushing and holding "VSC OFF" for three seconds activates/deactivates VSC (Vehicle Stability Control).

Refer to the *Owner's Manual* for more details on this system before attempting to use it.

# SAFETY AND EMERGENCY FEATURES


## Seat belts

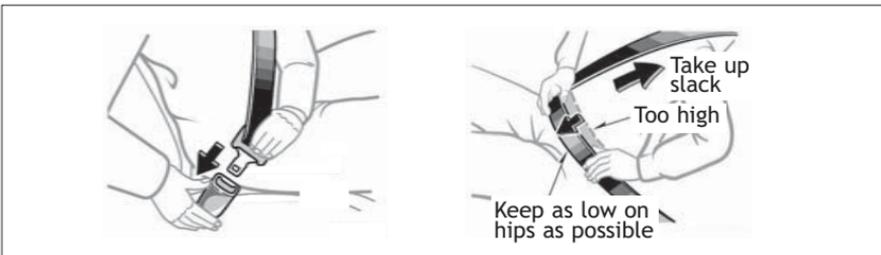


If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.

## Seat belts-Shoulder belt anchor (double cab and Crew Max models)

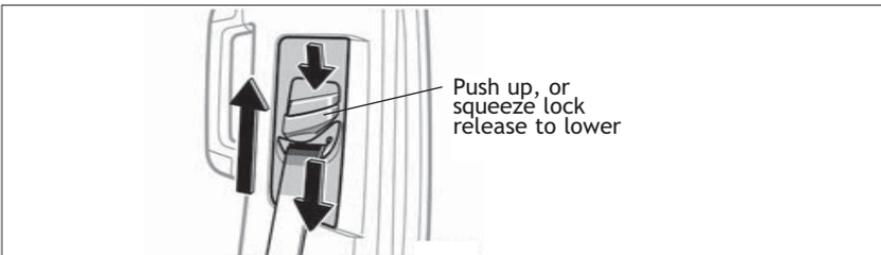

## Tire Pressure Warning System reset

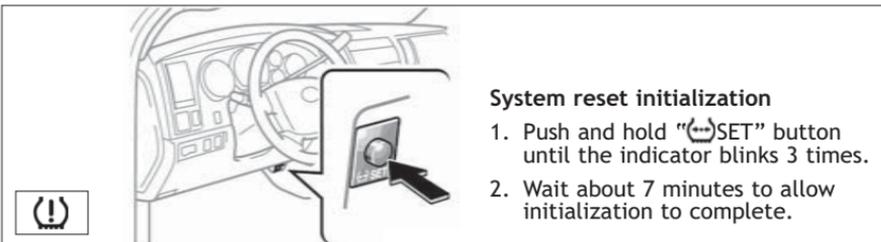

### System reset initialization

1. Push and hold "SET" button until the indicator blinks 3 times.
2. Wait about 7 minutes to allow initialization to complete.

If tire pressure becomes critically low on any of the tires (excluding spare), indicator comes on. Pushing "SET" button should not turn off the light. Correctly adjusting tire inflation will turn off the light after a few minutes. After replacing/rotating tire or wheels, the system must be initialized.

Refer to the *Owner's Manual* for more details.

## Door-Child safety locks (double cab and Crew Max only)



Moving the lever to "LOCK" will allow the door to be opened only from the outside.


## Spare tire & tools

### Tool location


Regular cab models  
-behind the right seatback




Crew Max models  
-behind the right rear seatback

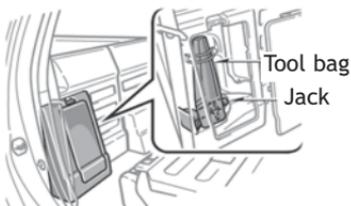


Double cab models  
-under the right rear seats  
without storage box

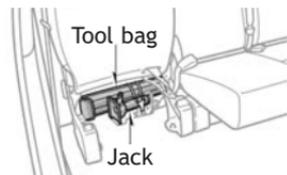

Double cab models  
-under the right rear seats  
with storage box

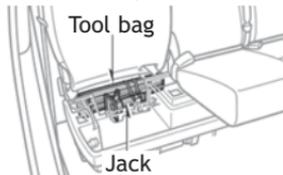

### Removing the spare tire

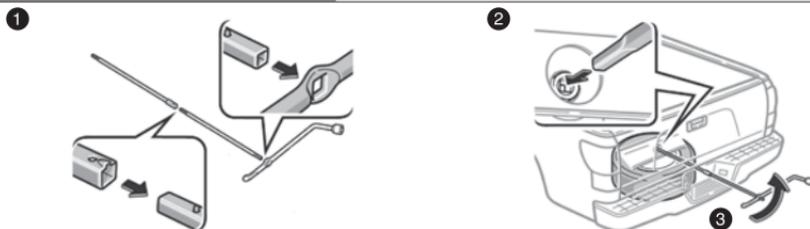

- ① Assemble the jack handle.
- ② Insert the jack handle end into the lowering screw.
- ③ Turn the jack handle counterclockwise.

Refer to the *Owner's Manual* for tire changing and jack positioning procedures.