

Customer Experience Center
1-800-331-4331

 **TOYOTA** Owners
ToyotaOwnersOnline.com

 **TOYOTA**

moving forward ▶

SEQUOIA



2007
Pocket Reference Guide

MN 00452-PRG07-SEQ
Printed in USA 07/06

2007 Sequoia

This *Pocket Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Pocket Reference Guide* is not intended as a substitute for the *Owner's Manual* located in the vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of the vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Sequoia.

! A word about safe vehicle operations

This *Pocket Reference Guide* is not a full description of Sequoia operations. Every Sequoia owner should review the *Owner's Manual* that accompanies this vehicle.


Pay special attention to the boxed "⚠CAUTION" information highlighted in this reference guide and throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

⚠CAUTION

This utility vehicle has a significantly higher rollover rate than other types of vehicles. Refer to the *Owner's Manual* for important rollover information.

All information in this *Pocket Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.


Seat belt comfort guide

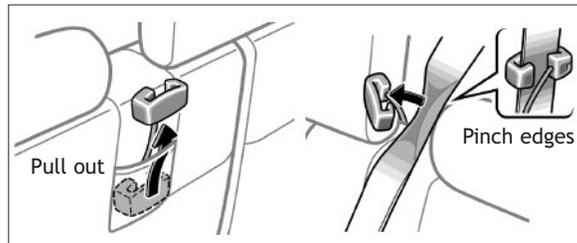


Rear seat outside position guides provide added comfort for children who have outgrown child restraints.

Spare tire & tools

Tool location (under right side second row seat)

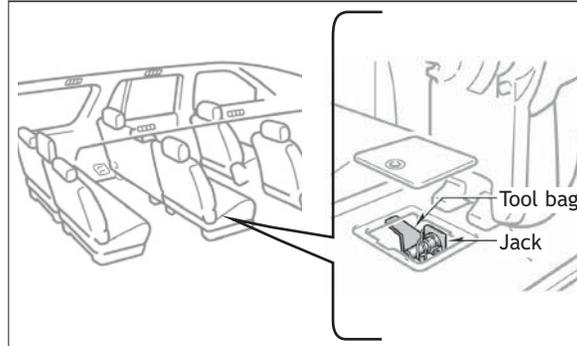

Removing the spare tire

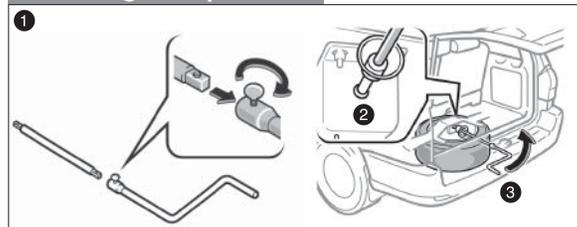

- 1 Assemble the jack handle.
- 2 Insert the jack handle end through the opening in the bumper, and into the lowering screw.
- 3 Turn the jack handle counterclockwise.

Refer to the *Owner's Manual* for tire changing and jack positioning procedures.

INDEX

Item	Page no.
OVERVIEW	
Engine maintenance	8
Fuel tank door release and cap	7
Hood release	7
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Keyless entry²	6
FEATURES/OPERATIONS	
Air Conditioning/Heating	15
Audio system	16-17
Auto lock functions^{1, 2}	9
Automatic Transmission	9
Clock	22
Cruise control	21
Cup holders	19
Door locks	22
Four-wheel drive	10
Light control-Instrument panel	21
Lights² & turn signals	13
Mirrors-Power side view	12
Moonroof²	20
Multi-information display (HomeLink [®]) ³	14
Parking brake	10
Power outlets	20
Rear seat entertainment system	18
Seat adjustments-Front	11
Seat adjustments-Rear	11
Seat heaters	14
Seats-Head restraints	12
Tilt steering wheel	22
Windows²	18
Window-Rear²	19
Windshield wiper & washer	12
SAFETY AND EMERGENCY FEATURES	
Doors-Child safety locks	23
Seat belt comfort guide	25
Seat belts	23
Seat belts-Shoulder belt anchor	24
Spare tire & tools	25
Tire Pressure Warning System reset	24

OVERVIEW

FEATURES/OPERATIONS

SAFETY AND EMERGENCY FEATURES




¹ Programmable by customer. Refer to the Owner's Manual for instructions and more information.

² Visit your Toyota dealer for information on customizing this feature.

³ HomeLink[®] is a registered trademark of Johnson Controls, Inc.

OVERVIEW

Instrument panel

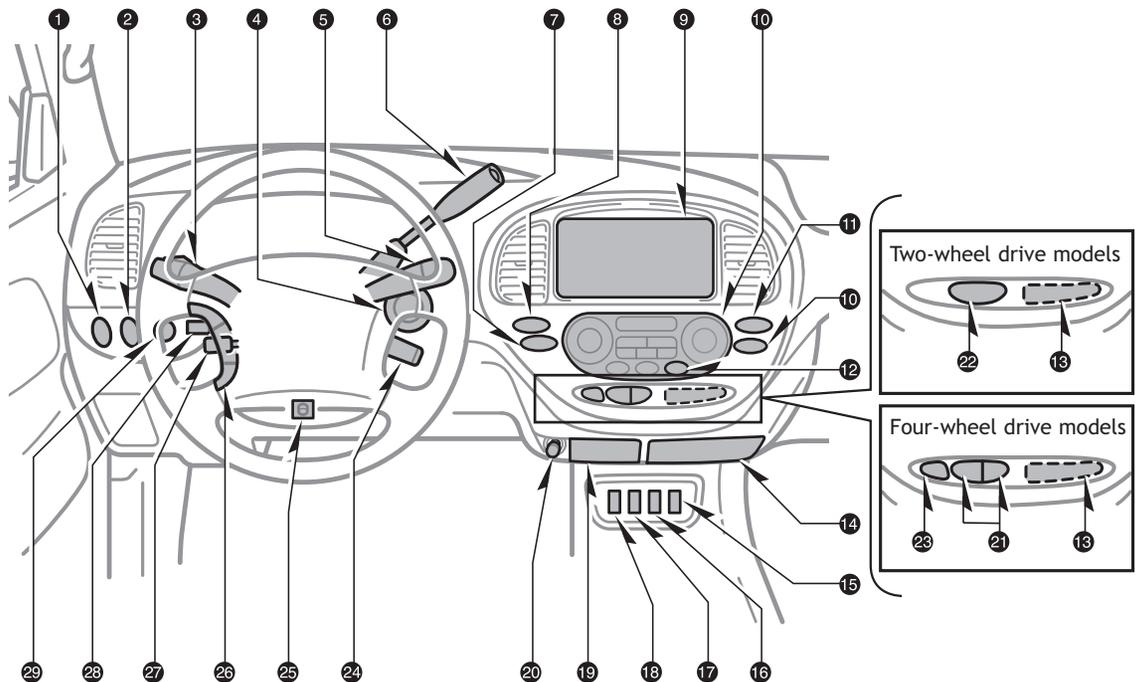


- ① Power back window switch
- ② Driving position memory switches¹
- ③ Headlight, turn signal and front fog light¹ controls
- ④ Ignition switch
- ⑤ Wiper and washer controls
- ⑥ Automatic transmission shift lever
- ⑦ Emergency flasher switch
- ⑧ Automatic Transmission shift position “L” switch (“SHIFT L” switch)
- ⑨ Audio system or navigation system^{1, 2}
- ⑩ Front/Rear Air Conditioning controls
- ⑪ Front passenger occupant classification indicator/ Front passenger seat belt reminder light
- ⑫ Back window and outside rearview mirror defogger¹ switch
- ⑬ Clock
- ⑭ Cup holder
- ⑮ Glass breakage sensor¹

- ⑯ 115V AC Power outlet ON/OFF switch¹
- ⑰ Height control switch¹
- ⑱ Height control mode select switch¹
- ⑲ Ashtray
- ⑳ 12 DC Power outlet cigarette lighter
- ㉑ Front drive control switches¹
- ㉒ “TRAC OFF” (Traction Control “OFF”)¹
- ㉓ Center differential lock switch¹
- ㉔ Cruise control
- ㉕ Tire Pressure Warning System reset switch (below steering column)
- ㉖ Steering wheel audio control¹
- ㉗ Tilt steering lock release
- ㉘ “RSCA OFF” (Roll Sensing of Curtain shield Airbags “OFF”) switch¹
- ㉙ Instrument panel light control


¹ If equipped

² For details, refer to the “Navigation System Owner’s Manual.”

Instrument cluster

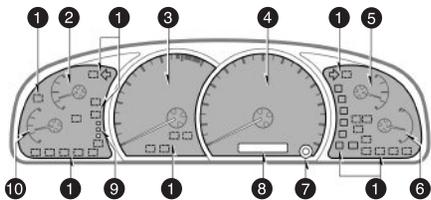

Limited model option

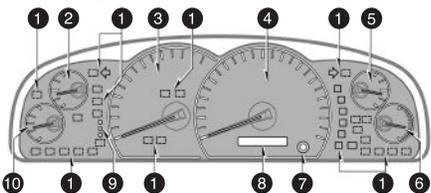

- ① Service indicator and reminder
- ② Engine oil pressure
- ③ Tachometer
- ④ Speedometer
- ⑤ Fuel gauge
- ⑥ Engine coolant temperature
- ⑦ Trip meter reset
- ⑧ Odometer and two trip meters
- ⑨ Height control indicator
- ⑩ Voltmeter

Indicator symbols

- Brake system warning¹
- Driver seat belt reminder¹
- Front passenger seat belt reminder¹
- Charging system warning¹
- Malfunction/Check Engine indicator¹
- Low fuel level warning¹
 - Vehicle Stability Control warning¹
 - Traction Control warning¹
 - Active Traction Control warning¹
- Open door warning¹

¹ For details, refer to “Service reminder indicators and warning buzzers,” Section 1-6, 2007 Owner’s Manual.

² If this light flashes, refer to “Four-wheel drive system,” Section 1-7, 2007 Owner’s Manual.

- Airbag SRS warning¹
- Automatic Transmission fluid temperature warning¹
- Low Tire Pressure Warning¹
- Low windshield washer fluid level warning¹
- Engine oil replacement reminder¹
- Engine immobilizer/Theft deterrent system indicator
- Front passenger occupant classification indicator
- Roll Sensing of Curtain shield Airbags “OFF” indicator
- Headlight indicator
- Turn signal indicator
- Headlight high beam indicator
- Automatic Transmission indicator
- Overdrive “OFF” indicator
- High speed four-wheel drive indicator²
- Low speed four-wheel drive indicator²
- Center differential lock indicator²
- Slip indicator
- Traction Control “OFF” indicator
- Vehicle Stability Control “OFF” indicator
- Height control indicator
- Manual control mode indicator³
- Cruise control indicator⁴
- Anti-lock Brake System warning¹

CAUTION

When the Anti-lock Brake System (ABS) function is in action, you may feel the brake pedal pulsating and hear a noise. In this situation, to let the Anti-lock Brake System work for you, just hold the brake pedal down more firmly. Do not pump the brake as this will result in reduced braking performance.

³ If this light flashes, refer to “Rear height control air suspension,” Section 1-7, 2007 Owner’s Manual.

⁴ If this light flashes, refer to “Cruise control,” Section 1-7, 2007 Owner’s Manual.

Keyless entry (if equipped)

Beep sound can be switched “ON” or “OFF.” Refer to “Wireless remote control” in the *Owner’s Manual* for more details.

Locking operation

Push



Unlocking operation

Push ONCE: Driver door
TWICE: All doors



NOTE: After unlocking, if a door is not opened within 30 seconds, all doors will relock for safety.

Back window operation

Push and hold




Alarm operation

Push




Fuel tank door release and cap

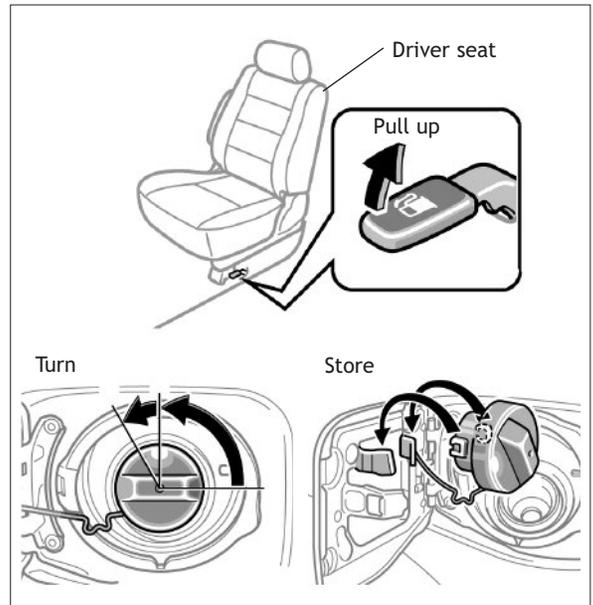


NOTE: Tighten until one click is heard. If the cap is not tightened enough, Check Engine “” indicator may illuminate.

Hood release

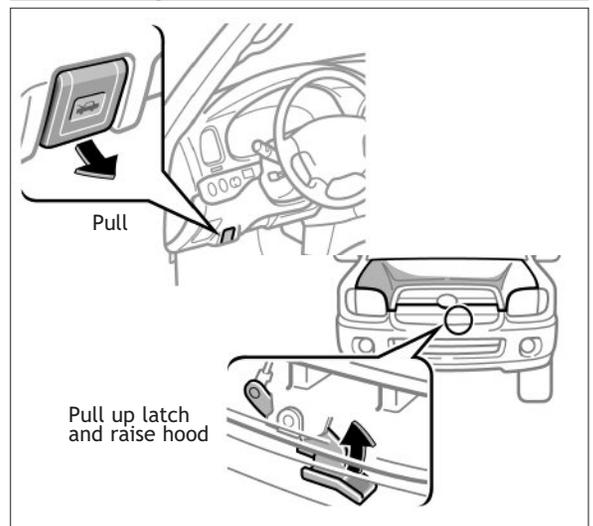

Engine maintenance

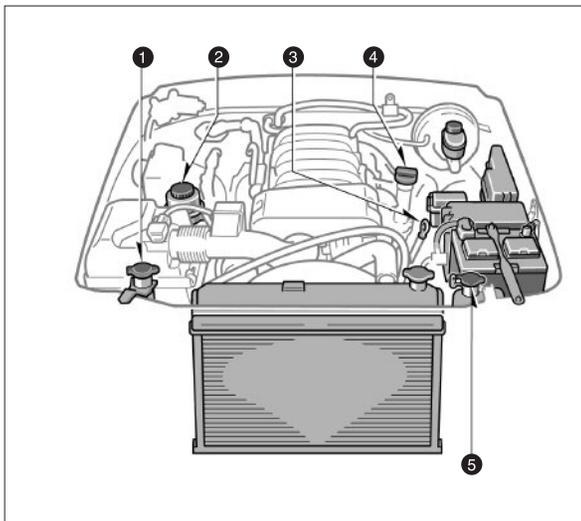

- ❶ Windshield and back window washer fluid tank
- ❷ Power steering fluid reservoir
- ❸ Engine oil level dipstick
- ❹ Engine oil filler cap
- ❺ Engine coolant reservoir


Note: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the “Owner’s Warranty Information Booklet,” “Scheduled Maintenance Guide” or “Owner’s Manual Supplement.”

Auto lock functions

Automatic door locks can be programmed to operate in 4 different modes, or turned OFF.

- Doors lock when shifting from “Park.”
- Doors lock when the vehicle speed goes above approximately 12 mph.
- Doors unlock when shifting into “Park.”
- Doors unlock when the ignition switch is turned from ON to ACC or LOCK and driver’s door is opened.

Automatic Transmission

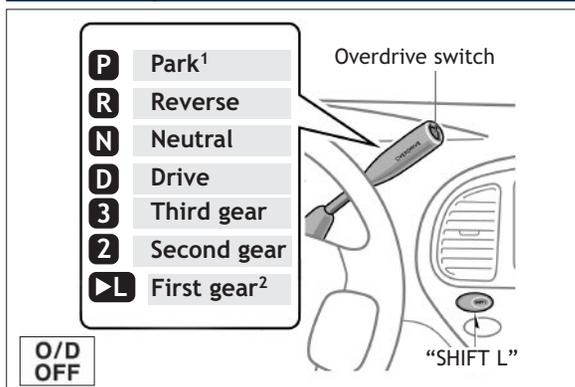

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the “D” position.

¹ Key must be in “ON” or “ACC” position, and the brake pedal depressed to shift from “Park.”

² Shift to “2” position, then push “SHIFT L.” Push again to upshift.

Overdrive switch

To turn “ON” or “OFF” Depress the overdrive switch to choose either four-speed (“OFF”) or five-speed (“ON”) operation. During normal driving conditions, always drive with overdrive “ON.” This allows the transmission to shift automatically into five-speed operation at higher speeds, improving fuel economy. If the indicator on the instrument cluster is illuminated, overdrive is “OFF.”

Four-wheel drive (if equipped)

4WD control switches

2WD/4HI

2WD - High speed
(indicator not illuminated)


4HI - High speed (4WD)

Push "2WD/4HI" with speed below 62 mph.

4LO


Low speed (4WD)

Push "4LO" with shift into "N" position.

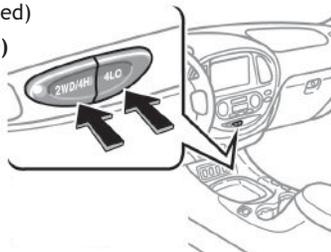

4HI **4LO**

Center differential lock button

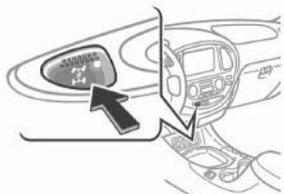


Center differential lock/unlock

For best fuel economy and performance under normal driving conditions In "2WD" position, with center differential unlocked (center differential lock and "VSC OFF" indicator are not illuminated).

Parking brake

Set: Depress
Release: Depress again

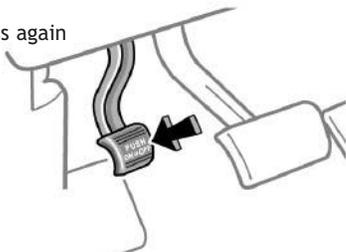

Seat adjustments-Front

Manual seat



Power seat



- ① Position
- ② Height crank (driver side only)
- ③ Seatback angle
- ④ Position, cushion angle and height
- ⑤ Seatback angle
- ⑥ Lumbar support

Seat adjustments-Rear

Second row seats


Bench type



Separate type




Third row seats

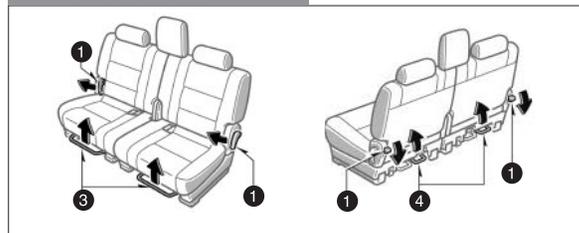


- ① Seatback angle and fold
- ② Seatback angle, fold and tilt
- ③ Position
- ④ Fold/remove

Seats-Head restraints


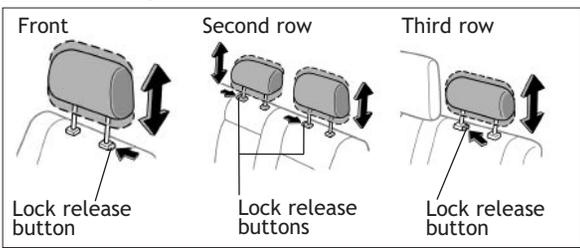


Mirrors-Power side view

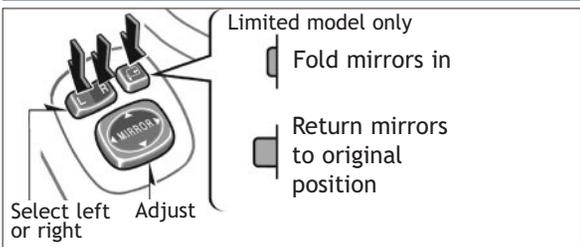

Key must be in the "ACC" or "ON" position.


Windshield wiper & washer

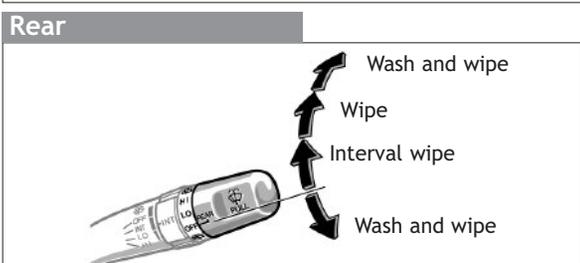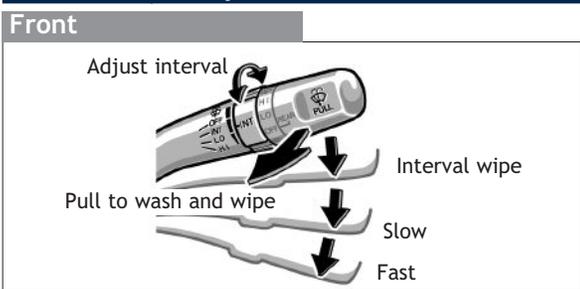

NOTE: Rear wiper and washer operate only when rear window is fully closed. If battery is disconnected, rear washer will not function until rear window is reinitialized by fully opening and closing rear window.

Lights & turn signals


Headlights

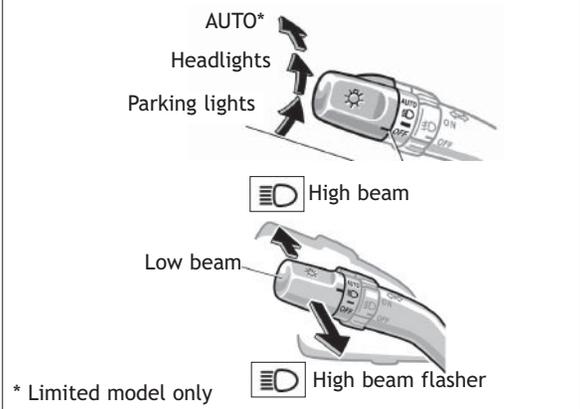


-Daytime Running Light system (Limited model only) Automatically turns on the headlights at a reduced intensity.

-Automatic light cut off system Will automatically turn lights off after a delay of thirty (30) seconds, or the lock switch on remote may be pushed.

Turn signals

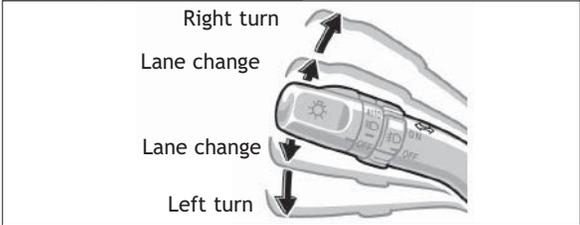


Front fog lights (if equipped)

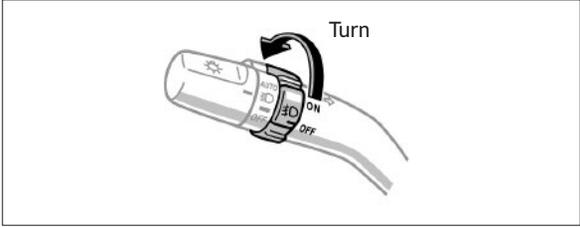

Front fog lights come on only when the headlights are on low beam.

Multi-information display (if equipped)

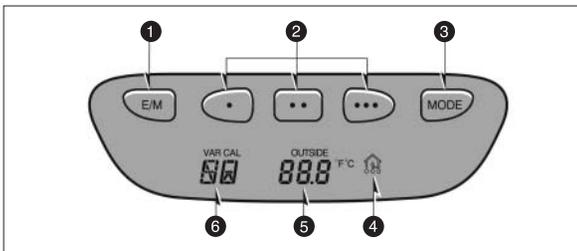


- 1 Select standard or metric
- 2 **Garage door opener buttons** Garage door openers manufactured under license from HomeLink®* can be programmed to operate garage doors, estate gates, security lighting, etc.

Refer to the *Owner's Manual* for more details. For programming assistance, contact the Toyota Customer Experience Center at 1-800-331-4331, or visit <http://www.homelink.com>

- 3 Change display information
- 4 Garage door opener indicator
- 5 Information display
- 6 Compass


* HomeLink® is a registered trademark of Johnson Controls, Inc.

Seat heaters

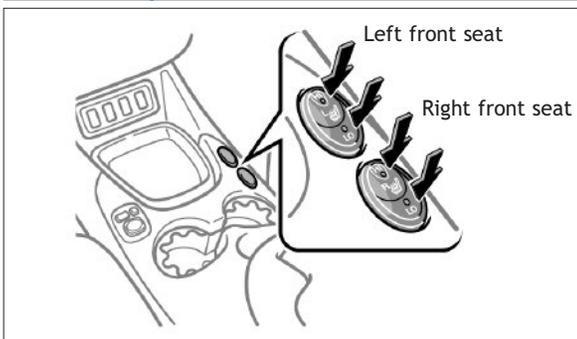


Air Conditioning/Heating

Front

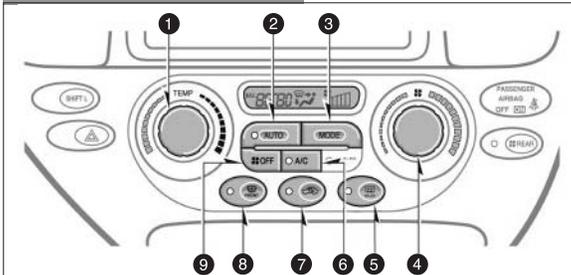

- 1 Temperature
- 2 Automatic climate control ON/OFF
- 3 Air flow vent
In “” or “” mode, use fresh air (“”) indicator “OFF”) to reduce window fogging.
- 4 Fan speed
- 5 Rear defogger
- 6 Air Conditioning ON/OFF
- 7 Fresh or recirculate cabin air
- 8 Windshield air flow
- 9 Climate control OFF

Rear

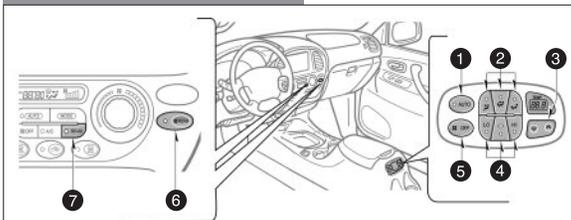

- 1 Automatic climate control ON/OFF
- 2 Air flow vent
- 3 Temperature
- 4 Fan speed
- 5 Climate control OFF
- 6 Main switch
- 7 Synchronizes front and rear setting

Audio

Type 1

Preset buttons - functions in CD/cassette modes indicated above number.

Type 2 additional functions

RADIO

To preset stations Tune in the desired station and hold down a preset button (1-6) until you hear a beep. Push desired preset button (1-6) to select.

To scan stations Push “SCAN.” Push and hold to scan preset stations. Push again to hold selection.

RDS (Radio Data System - FM, Type 2 only)

- Push “TYPE” to select station genre.
- Push steering wheel switches “^” or “v,” or preset button (1-6) to select stations within genre.
- Push “TEXT” to receive information transmitted from radio stations.

CASSETTE TAPE PLAYER

To fast forward Push “▶▶.”

To rewind Push “◀◀.”

To select a direction Push “◀▶.”


CD PLAYER

To scan tracks on a disc Push and hold “SCAN.” Push again to hold selection.

CD Changer (Type 2 only)


- To load one disc Push “LOAD” and insert one disc.
- To load multiple discs Push and hold “LOAD” until you hear a beep. Insert one disc. Shutter will close and then re-open for next disc.

Steering wheel controls (if equipped)

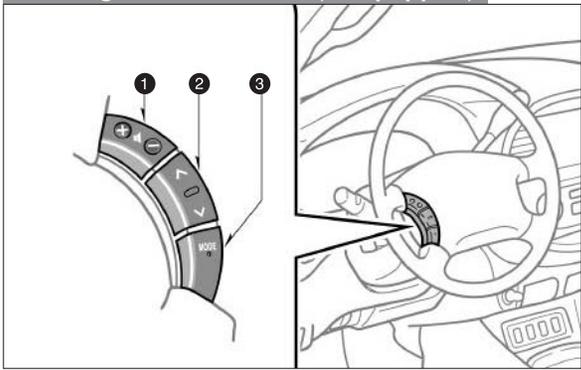


- 1 “ - + ”
Volume control
- 2 “ ^ v ”
-In radio mode Push to select a preset station; push and hold to seek the next strong station.
-In tape mode Push to skip up or down to next/previous track; push and hold to fast forward or reverse.
-In CD mode Push to skip up or down to next/previous track.
- 3 “MODE”
Push to turn audio ON and select an audio mode. Push and hold to turn the audio system OFF.

Rear seat entertainment system (if equipped)

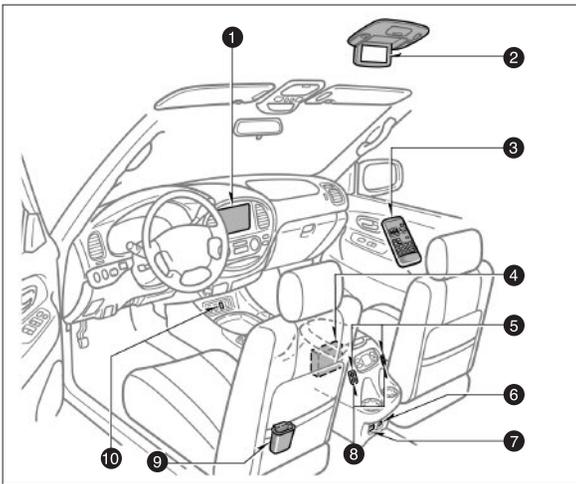

- 1 Front audio
- 2 DVD screen
- 3 Remote control
- 4 DVD player
- 5 Headphone jacks
- 6 12V DC Power outlet
- 7 A/V input adapter
- 8 Headphone volume control
- 9 Remote control holder
- 10 115V AC Power outlet ON/OFF switch

Windows

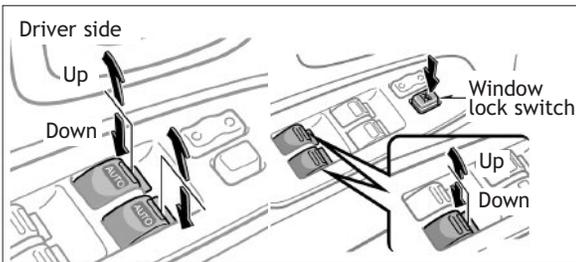


Automatic operation (Front windows) Push the switch completely down or pull it completely up and release to fully open or close. To stop window midway, lightly push the switch in the opposite direction.


Window lock switch Deactivates all passenger windows. Driver's window remains operable.

Window-Rear

Operating from inside

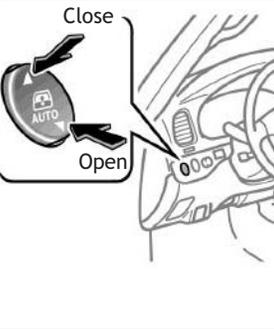


Operating from outside

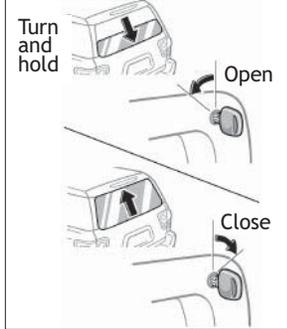

NOTE: If battery is disconnected, automatic Up/Down will not operate until rear window is reinitialized by fully opening and closing rear window.

Cup holders

Front seats

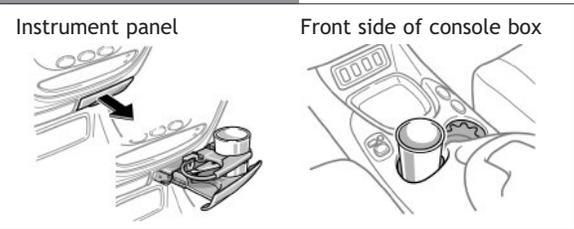




Second row seats



Third row seats






Moonroof (if equipped)

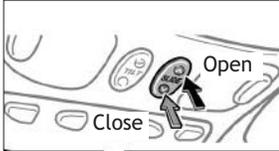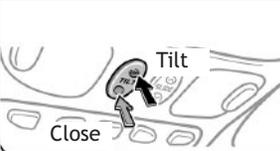
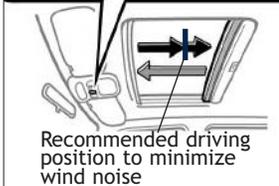
Sliding operation	Tilting operation
 <p>Open</p> <p>Close</p>	 <p>Tilt</p> <p>Close</p>
 <p>Recommended driving position to minimize wind noise</p>	

Power outlets

12V DC

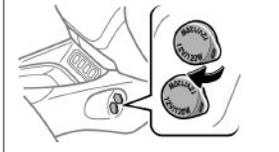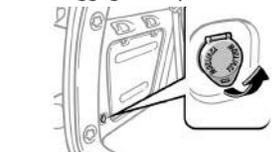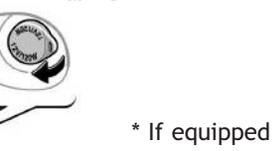
Instrument panel	Luggage compartment
	
 <p>Rear console box*</p>	 <p>* If equipped</p>

115V AC (if equipped)

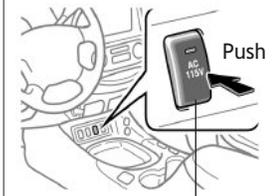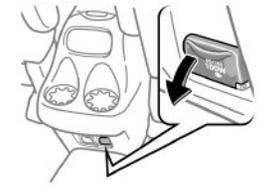 <p>Push</p>	
<p>ON/OFF switch</p>	<p>Rear console box</p>

Key must be in the "ON" position to be used.


Light control-Instrument panel

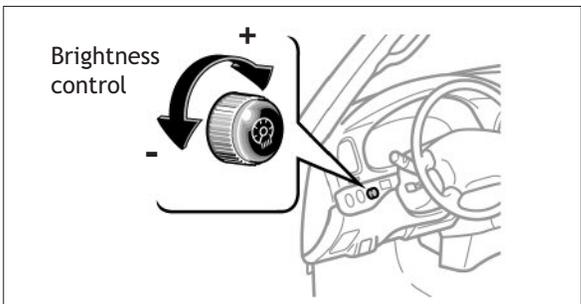

Brightness control

Cruise control


Turning system ON/OFF

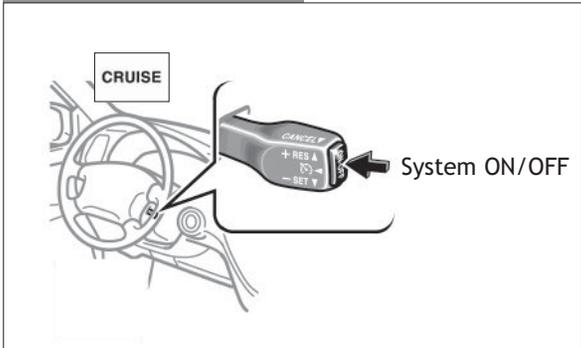

CRUISE

System ON/OFF

Functions

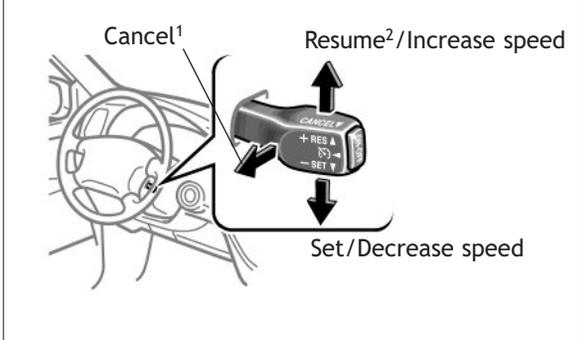

Cancel¹

Resume²/Increase speed


Set/Decrease speed

¹ The set speed may also be cancelled by depressing the brake pedal.


² The set speed may be resumed once vehicle speed exceeds 25 mph.

Refer to the *Owner's Manual* for more details.


Door locks

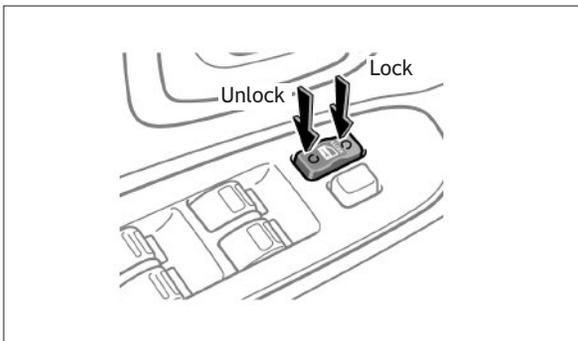

Clock

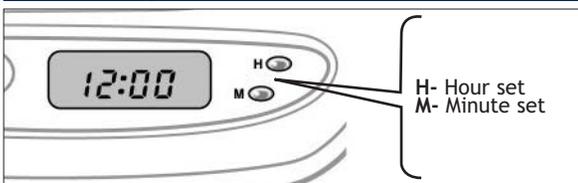


Tilt steering wheel

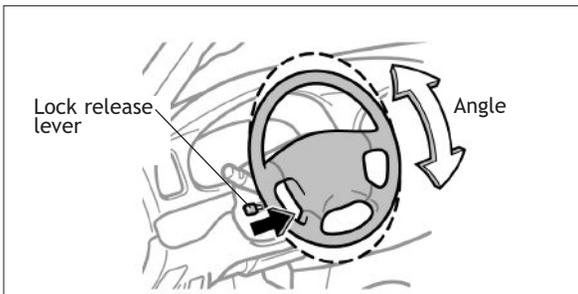


Note: Do not attempt to adjust while the vehicle is in motion.

Doors-Child safety locks

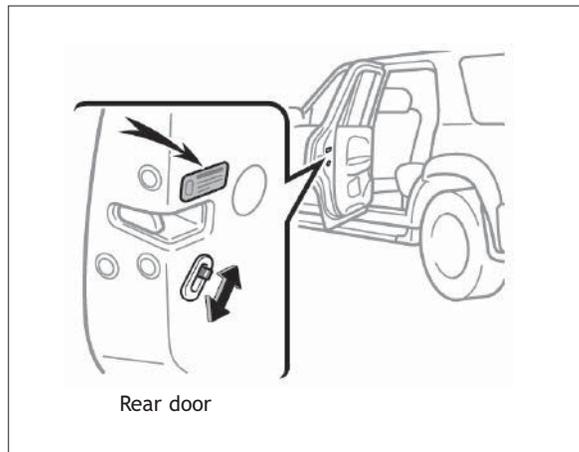

Moving the lever to “LOCK” will allow the door to be opened only from the outside.

Seat belts

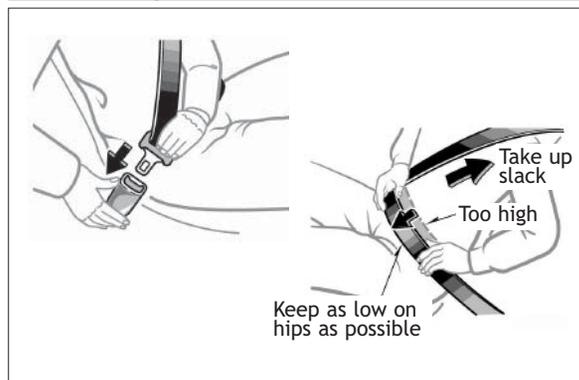


If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.




Seat belts-Shoulder belt anchor

Push up or
squeeze lock
release to lower

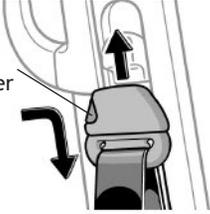

Tire Pressure Warning System reset

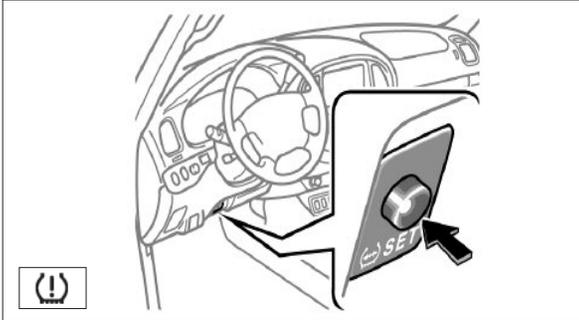

If tire pressure becomes critically low on any of the tires (including spare), indicator comes on. Pushing “SET” button should not turn off the light. Correctly adjusting tire inflation will turn off the light after a few minutes. After replacing/rotating tire or wheels, push and hold “SET” button until the indicator light blinks 3 times.

2007 Sequoia

This *Pocket Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Pocket Reference Guide* is not intended as a substitute for the *Owner's Manual* located in the vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of the vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Sequoia.

! A word about safe vehicle operations

This *Pocket Reference Guide* is not a full description of Sequoia operations. Every Sequoia owner should review the *Owner's Manual* that accompanies this vehicle.


Pay special attention to the boxed "⚠CAUTION" information highlighted in this reference guide and throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

⚠CAUTION

This utility vehicle has a significantly higher rollover rate than other types of vehicles. Refer to the *Owner's Manual* for important rollover information.

All information in this *Pocket Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.


Seat belt comfort guide

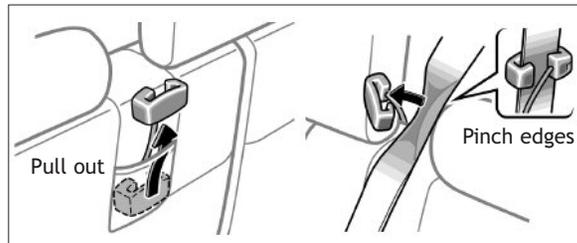


Rear seat outside position guides provide added comfort for children who have outgrown child restraints.

Spare tire & tools

Tool location (under right side second row seat)

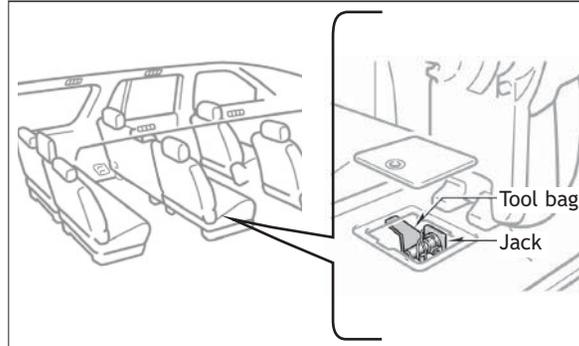

Removing the spare tire

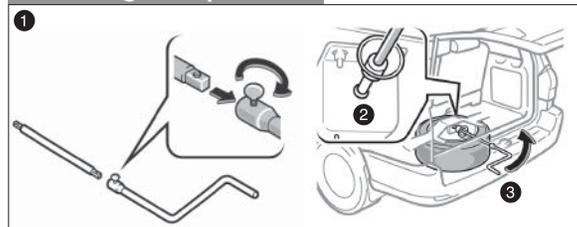

- 1 Assemble the jack handle.
- 2 Insert the jack handle end through the opening in the bumper, and into the lowering screw.
- 3 Turn the jack handle counterclockwise.

Refer to the *Owner's Manual* for tire changing and jack positioning procedures.