

Flip over to see your
Pocket Reference Guide.

Open This and Really Get into
Your New Toyota



The Ultimate
Interactive Owner's Guide



2007 Avalon



moving forward ▶

AVALON



2007 Pocket Reference Guide



Customer Experience Center 1-800-331-4331

MN 00452-PRG07-AVA
Printed in USA 07/06

Flip over to see your
iGuide.



2007 Avalon

This *Pocket Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Pocket Reference Guide* is not intended as a substitute for the *Owner's Manual* located in the vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of the vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Avalon.

! A word about safe vehicle operations

This *Pocket Reference Guide* is not a full description of Avalon operations. Every Avalon owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed " **⚠CAUTION** " information highlighted in this reference guide and throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Pocket Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

MINIMUM REQUIREMENTS

MACINTOSH	PC
SYSTEM 9.X,	WINDOWS 98
OS X 10.2	PENTIUM III 600MHZ
POWERPC	64MB OF RAM
64MB OF RAM	800 X 600 MONITOR
24-BIT COLOR	16-BIT COLOR
CD-ROM DRIVE	CD-ROM DRIVE

This guide is designed to be played on any computer-PC or Macintosh.

Avalon *guide*



INDEX

OVERVIEW

Engine maintenance	8
Fuel tank door release and cap	6
Hood release	7
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Keyless entry¹	7
Remote engine starter	8
Trunk release	6

FEATURES/OPERATIONS

Air Conditioning/Heating	15
Audio	16-17
Auto lock functions¹	10
Automatic Transmission	11
Clock	10
Cruise control	19
Cup holders	21
Door locks	18
Dynamic Laser Cruise Control	20
Garage door opener (HomeLink®) ²	11
Light control-Instrument panel	21
Lights & turn signals	14
Moonroof	19
Parking brake	10
Power outlets	21
Seat adjustments-Front	12
Seat adjustments-Rear	12
Seat ventilators/heaters	18
Seats-Head restraints	12
Smart Key¹	9
Steering wheel switches	18
Sunshade-Rear	19
Tilt and telescopic steering wheel	10
Windows	13
Windshield wiper & washer	13

SAFETY AND EMERGENCY FEATURES

Doors-Child safety locks	22
Seat belt comfort guide	23
Seat belts	22
Seat belts-Shoulder belt anchor	22
Spare tire & tools	23
Tire Pressure Warning System reset	22
Trunk-Internal release	23

OVERVIEW

FEATURES/OPERATIONS

SAFETY AND EMERGENCY FEATURES




¹ Programmable by customer. Refer to the Owner's Manual for instructions and more information.

² HomeLink® is a registered trademark of Johnson Controls, Inc.

OVERVIEW

Instrument panel

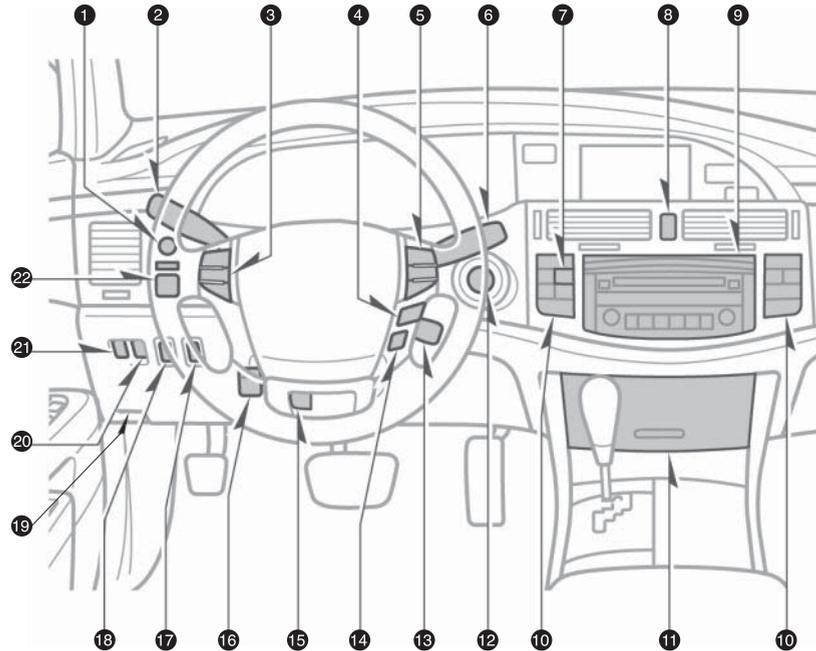


- ① Instrument panel light control
- ② Headlight, turn signal and front fog light¹ controls
- ③ Steering wheel audio controls
- ④ Speech command button^{1, 2}
- ⑤ Steering wheel climate controls
- ⑥ Wiper and washer controls
- ⑦ Rear window and outside rear view mirror defogger¹ switch
- ⑧ Emergency flasher switch
- ⑨ Audio system
- ⑩ Air Conditioning controls
- ⑪ Auxiliary box, 12V DC Power outlet/Cigarette lighter and ashtray¹, cassette player¹ or navigation controller^{1, 2}
- ⑫ Ignition switch/Engine switch¹

- ⑬ Cruise control or Dynamic Laser Cruise Control¹
- ⑭ Dynamic Laser Cruise Control distance button¹
- ⑮ Tilt steering lock release
- ⑯ Telescopic steering lock release
- ⑰ Glass breakage sensor¹
- ⑱ Rear electric sunshade button¹
- ⑲ Hood release lever
- ⑳ Trunk release button
- ㉑ Fuel tank door release button
- ㉒ Power rear view mirror controls

¹ If equipped

² For details, refer to the “Navigation System Owner’s Manual.”

Indicator cluster

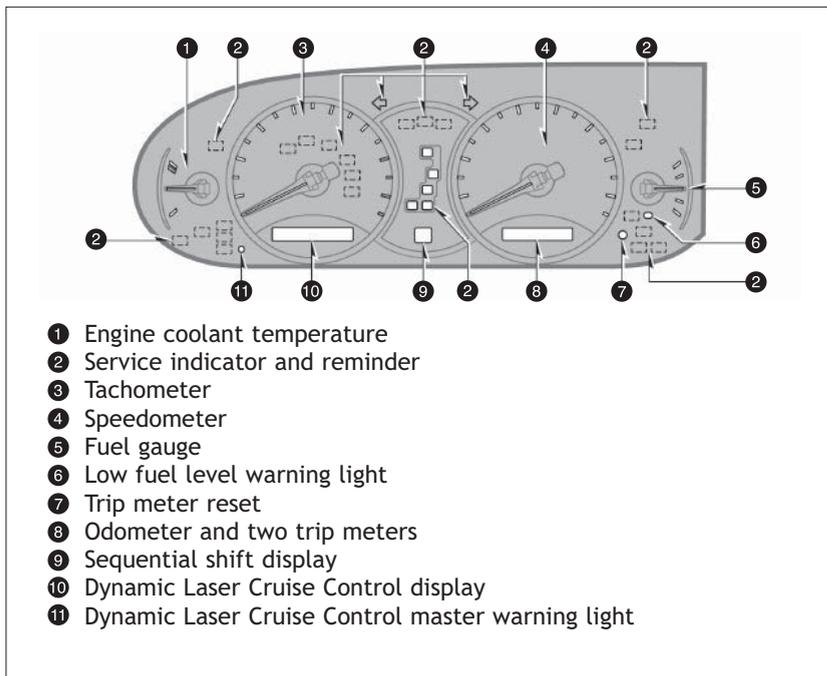

Indicator symbols

- Brake system warning¹
- Driver seat belt reminder¹
(alarm will sound if speed is over 9 mph)
- Front passenger seat belt reminder¹
(alarm will sound if speed is over 9 mph)
- Battery warning¹
- Low engine oil pressure warning¹
- Malfunction/Check Engine indicator¹
- "AIRBAG ON" indicator
- "AIRBAG OFF" indicator
- Open door warning¹

- Airbag SRS warning¹
- Vehicle Stability Control/Traction Control warning
- Low Tire Pressure Warning¹
- Low windshield washer fluid level warning
- Automatic headlight leveling system warning
- Engine oil replacement reminder¹
- Smart Key system warning¹
- Engine immobilizer/Theft deterrent system indicator
- Headlight indicator
- Headlight high beam indicator
- Turn signal indicator
- Automatic Transmission indicator
- Slip indicator
- Cruise control indicator² or Dynamic Laser Cruise Control indicator³
- Dynamic Laser Cruise Control ready mode indicator
- Conventional cruise control mode indicator
- Anti-lock Brake System warning light¹

CAUTION

When the anti-lock brake system (ABS) function is in action, you may feel the brake pedal pulsating and hear a noise. In this situation, to let the anti-lock brake system work for you, just hold the brake pedal down more firmly. Do not pump the brake as this will result in reduced braking performance.

¹ For details, refer to "Service reminder indicators and warning buzzers," Section 1-6, 2007 Owner's Manual.

² If this light flashes, refer to "Cruise control," Section 1-7, 2007 Owner's Manual.

³ If this light flashes, refer to "Dynamic laser cruise control," Section 1-7, 2007 Owner's Manual.

Fuel tank door release and cap

Push

Turn

Store

NOTE: Tighten until one click is heard. If the cap is not tightened enough, Check Engine “” indicator may illuminate.

Hood release

Pull

Pull up latch and raise hood

Keyless entry

Beep sound can be switched “ON” or “OFF.” Refer to the *Owner’s Manual* for more details.

Trunk release

Push

TRUNK OPENER

CANCEL

Push to activate/deactivate trunk opener.

Trunk manual release

Open

Pull down

Pull to open trunk

Locking operation

Push

Unlocking operation

Push ONCE: Driver door

TWICE: All doors

NOTE: After unlocking, if a door is not opened within 30 seconds, all doors will relock for safety.

Trunk lid operation


Push and hold

Alarm operation

Push and hold


Remote engine starter (if equipped)

Start operation

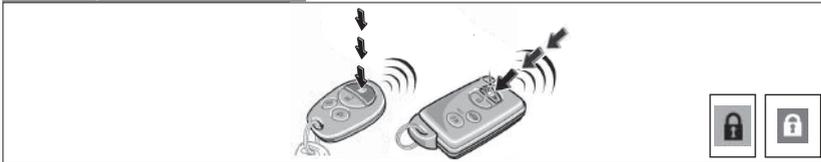

Push twice, then push and hold.


Stop operation

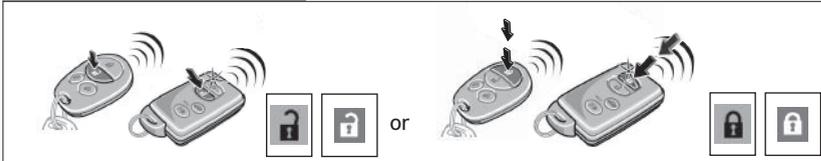

Push “” or push “” once then push “” and hold.

Refer to the *Remote Engine Starter Owner’s Manual* for more details.

Engine maintenance

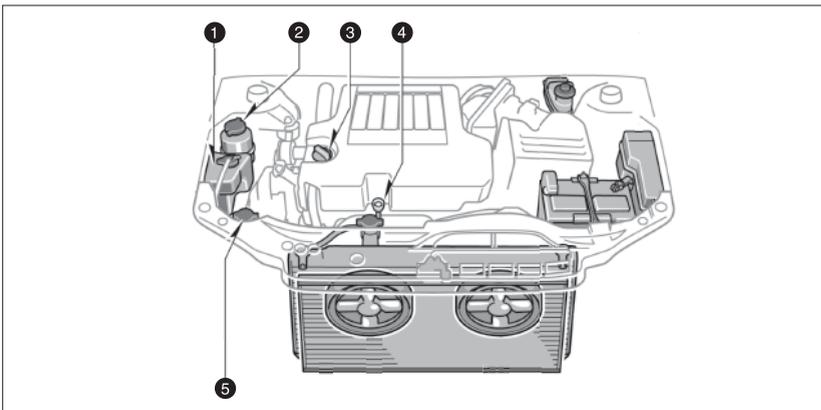


- ① Engine coolant reservoir
- ② Power steering fluid reservoir
- ③ Engine oil filler cap
- ④ Engine oil level dipstick
- ⑤ Windshield washer fluid tank

Note: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the “Owner’s Warranty Information Booklet,” “Scheduled Maintenance Guide” or “Owner’s Manual Supplement.”

Smart Key* (if equipped)

Start function

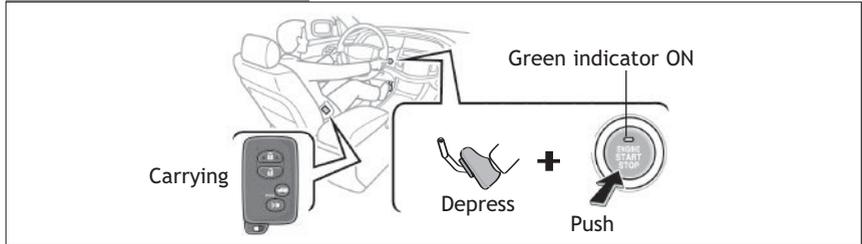


NOTE: Gear shift lever must be in Park and brake pedal depressed.

Power (without starting engine)

Without depressing the brake pedal, pressing the “ENGINE START STOP” switch will change the operation mode in succession from:

ACC	Accessories such as the radio will operate.
ON	Power ON, the engine not running.
OFF	All systems OFF.

Locking/Unlocking operation

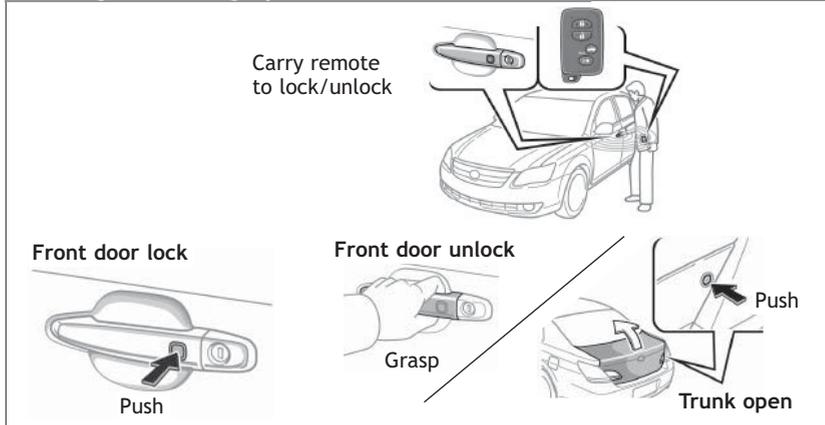

* Driver door unlocking function can be programmed to unlock driver door only, or all doors. Grasping passenger handle will unlock all doors.

NOTE: Doors may also be locked/unlocked using remote.

Auto lock functions

Automatic door locks can be programmed to operate in 4 different modes, or turned OFF.

- Doors lock when shifting from “Park.”
- Doors lock when the vehicle speed goes above approximately 12 mph.
- Doors unlock when shifting into “Park.”
- Doors unlock when the ignition switch is set from ON to ACC or OFF and driver’s door is opened.


Refer to the *Owner’s Manual* for more details.

Parking brake

Set: Depress
Release: Depress again




Tilt and telescopic steering wheel

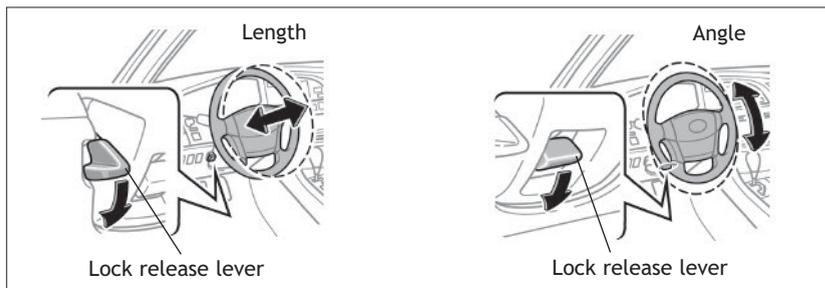


NOTE: Do not attempt to adjust while the vehicle is in motion.

Clock

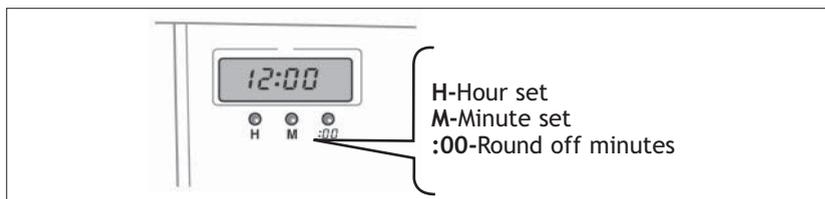

NOTE: In Navigation System-equipped vehicles, clock settings are in navigation setup menu.

Automatic Transmission

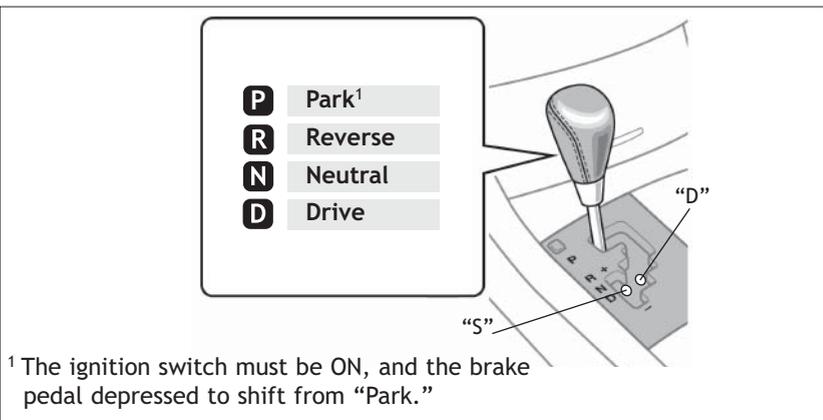

¹ The ignition switch must be ON, and the brake pedal depressed to shift from “Park.”

“S” (Sequential) mode


Push shift lever to the left from “D” position.

“S” position:

- + : Upshift (Push and release)
- : Downshift (Pull and release)

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the “D” position.

Garage door opener (HomeLink®)* (if equipped)

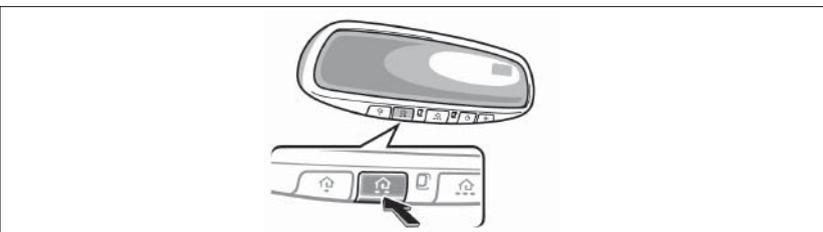

Garage door openers manufactured under license from HomeLink®* can be programmed to operate garage doors, estate gates, security lighting, etc.

Refer to the *Owner’s Manual* for more details.

For programming assistance, contact the Toyota Customer Experience Center at 1-800-331-4331, or visit <http://www.homelink.com>.

* HomeLink® is a registered trademark of Johnson Controls, Inc.

Seat adjustments-Front

Manual seat




Power seat




- ① Seatback angle
- ② Position
- ③ Leg support (driver side only)*
- ④ Position, cushion angle and height (driver side only)
- ⑤ Seatback angle
- ⑥ Lumbar support (driver side only)

* If equipped

Seat adjustments-Rear

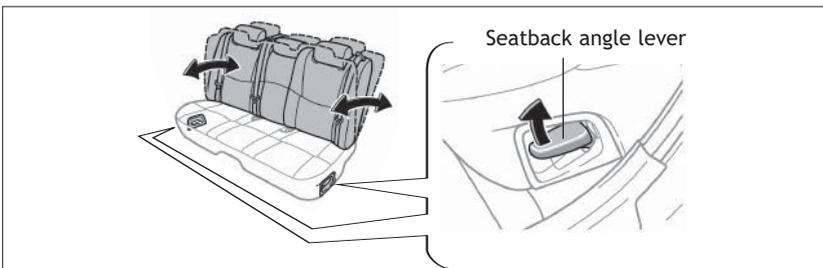


Seats-Head restraints

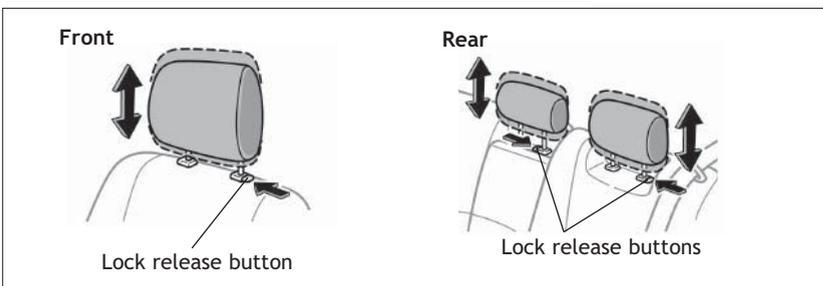


Windshield wiper & washer


With interval wiper

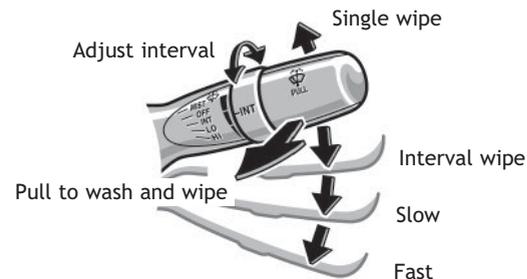

With AUTO rain-sensing wiper (if equipped)

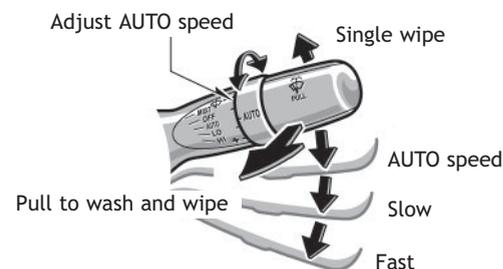

Windows

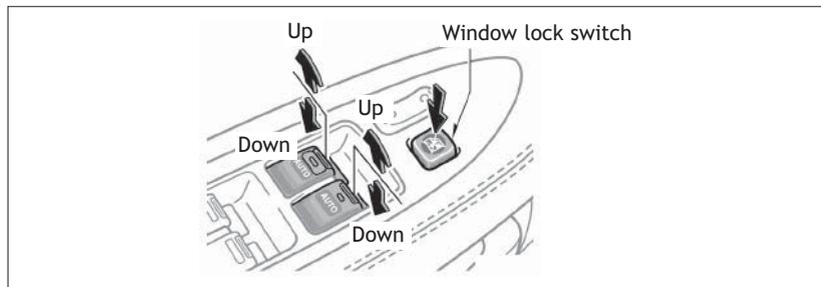


Automatic operation (Front windows) Push the switch completely down or pull it completely up and release to fully open or close. To stop window mid-way, lightly push the switch in the opposite direction.

Window lock switch Deactivates all passenger windows. Driver's window remains operable.

NOTE: If battery is disconnected, the front windows need to be reinitialized. Refer to the *Owner's Manual* for more details.


Lights & turn signals

Headlights

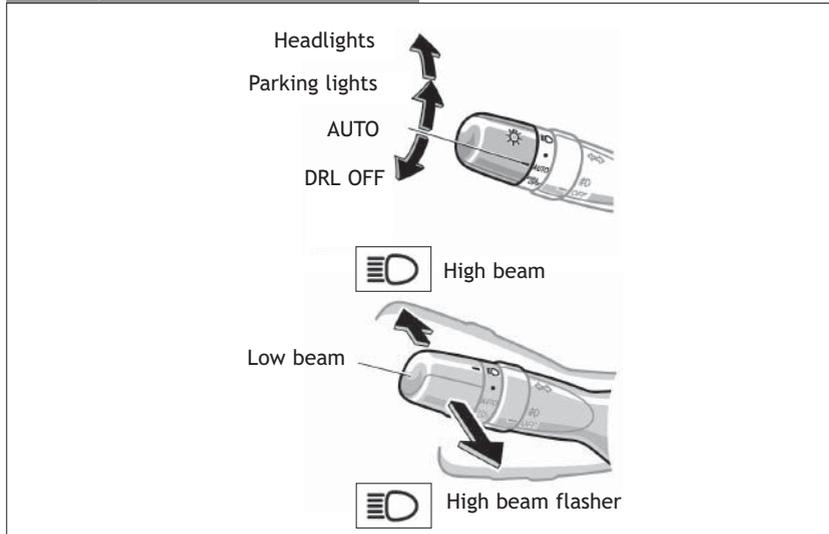


- Daytime Running Light system (DRL)** Automatically turns on the headlights at a reduced intensity.
- Automatic light cut off system** Will automatically turn lights off after a delay of 30 seconds, or the lock switch on remote may be pushed.

Turn signals

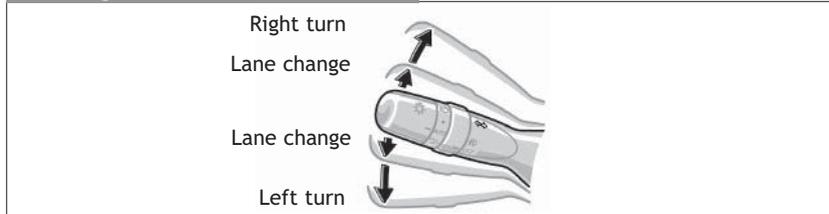

Front fog lights (if equipped)

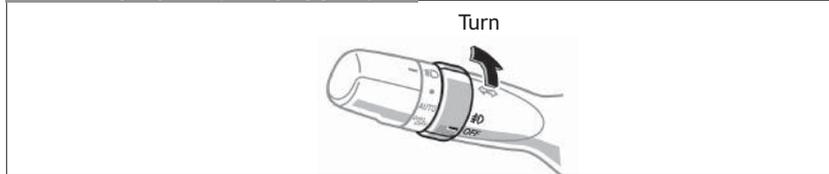

Front fog lights come on only when the headlights are on low beam.

Air Conditioning/Heating

- 1 Air Conditioning display
- 2 Windshield defogger
- 3 Temperature
- 4 Automatic climate control ON
- 5 Climate control OFF
- 6 Air Conditioning ON/OFF
- 7 Fresh or recirculate cabin air
- 8 Rear defogger
- 9 Air flow vent "MODE"
- 10 Fan speed
- 11 "DUAL" button

Indicator ON: Separate temperature settings for driver and passenger.

Indicator OFF: Synchronize temperature settings for driver and passenger.

In "MODE" or "MODE" mode, use fresh air ("OFF" indicator) to reduce window fogging.


Audio

Audio operation screen




Type 1


Preset buttons - functions in other modes indicated above number.

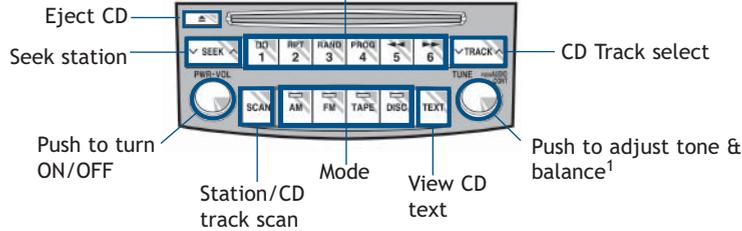

Type 2 additional functions *

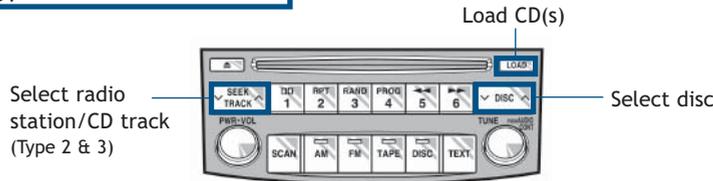

Type 3 additional functions *

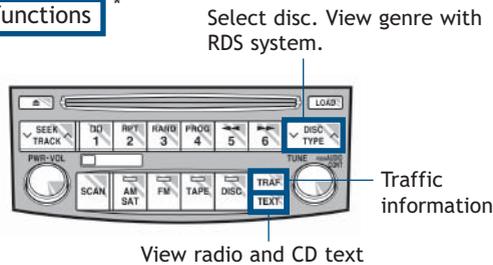

CASSETTE TAPE PLAYER (if equipped)

To fast forward Push “▶▶”

To rewind Push “◀◀.”

RADIO

To preset stations Tune in the desired station and hold down a preset button (1-6) until you hear a beep. Push desired preset button (1-6) to select.

To scan stations Push “SCAN.” Push and hold to scan preset stations. Push again to hold selection.

RDS (Radio Data System-FM only)(Type 3 only)

-Push DISC/TYPE “^” or “v” to view current program genre. Push again within 6 seconds to select new genre.

-Push “SEEK/TRACK” or “SCAN” to find same genre programs.

-Push “TEXT” to receive information transmitted from radio stations.

CD PLAYER

To scan tracks on a disc Push and hold “SCAN.” Push again to hold selection.

CD Changer (Type 2 & 3)


-To load one disc Push “LOAD” and insert one disc.

-To load multiple discs Push and hold “LOAD” until you hear a beep. Insert one disc. *Wait until the green indicator illuminates and shutter opens to insert next disc.*

¹ The mode changes with each push in succession from Bass, Midrange (Type 3 only), Treble, Fade, Balance. Turn the knob right or left to adjust each mode.

* If equipped

Steering wheel switches

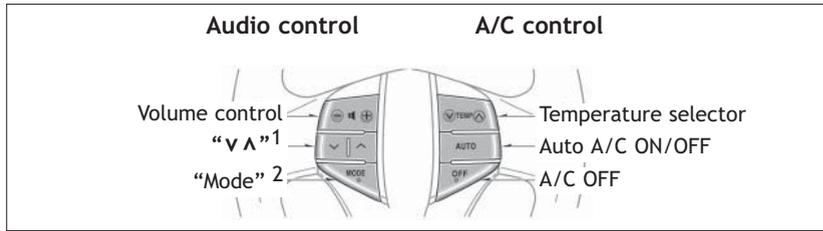

1 “V A”


- In radio mode Push to select a preset station; push and hold to seek the next strong station.
- In tape mode* Push to skip up or down to next/previous track; push and hold to fast forward or reverse.
- In CD mode Push to skip up or down to next/previous track.

2 “MODE”

Push to turn audio ON and select an audio mode. Push and hold to turn the audio system “OFF.”


* If equipped

Seat ventilators/heaters (if equipped)

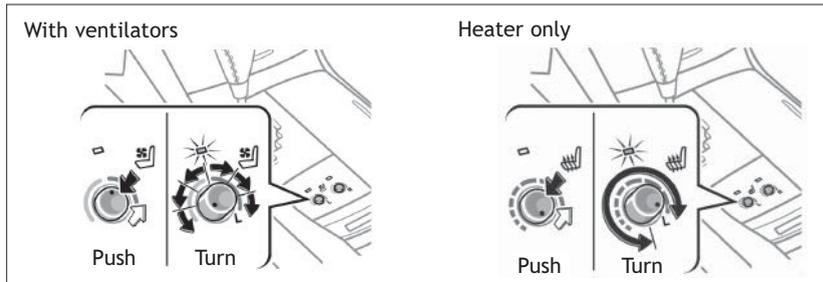


Push knob to pop the controller out. Turn clockwise for heater, counter clockwise for ventilator.

Door locks

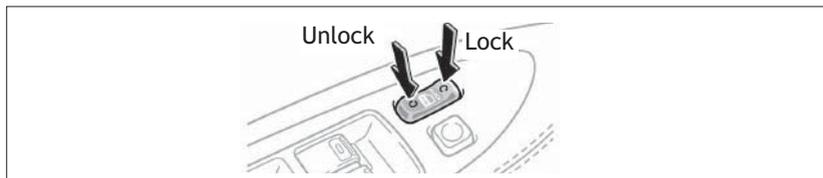


Moonroof (if equipped)

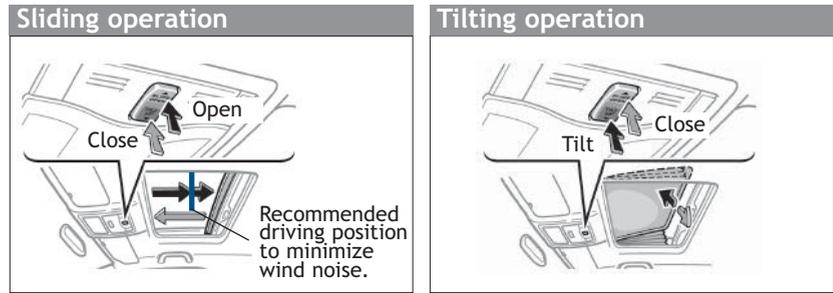


NOTE: If battery is disconnected, the moonroof needs to be reinitialized. Refer to the *Owner’s Manual* for more details.

Sunshade-Rear (if equipped)

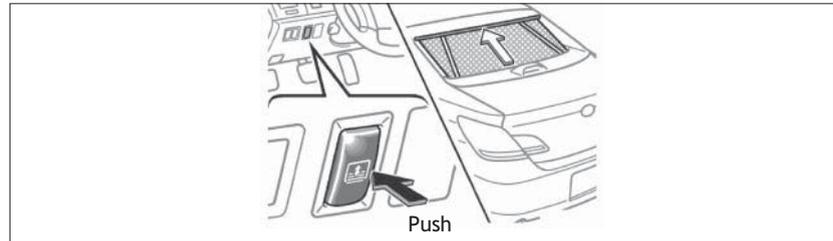

NOTE: Sunshade will automatically go down when vehicle is shifted into reverse. To raise again, push the button.

Cruise control

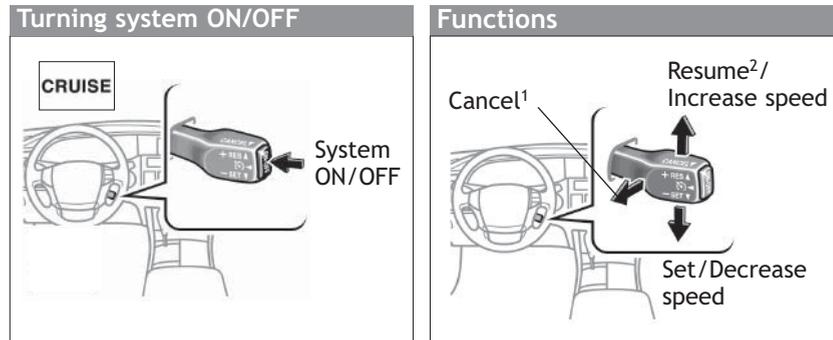

¹ The set speed may also be cancelled by depressing the brake pedal.

² If vehicle speed falls below 25 mph, the set speed will not be resumed.

Refer to the *Owner’s Manual* for more details.

Dynamic Laser Cruise Control (if equipped)

Refer to the *Owner's Manual* for more details and complete safety precautions before attempting to use "Dynamic Laser Cruise Control."

Fixed speed mode



- (1) **To select conventional/fixed speed control** Push the ON-OFF button. Push the lever forward and hold until the "NORM." indicator appears.
- (2) **To set, cancel and resume a speed** Refer to instructions for *Cruise Control* above.

Distance control mode



Distance control mode will cruise at a set speed, decelerate to maintain selected distance from a slower vehicle in front of you, and accelerate back up to the selected speed if the vehicle in front of you changes lanes or speeds up.


- (1) **To select distance control mode** Push the ON-OFF button. The "READY" and "CRUISE" indicator lights will come on.
- (2) **To set, cancel and resume a speed** Refer to instructions for *Cruise Control* on the previous page.

Note: Once vehicle speed is set, pushing lever up toward "+ RES" will increase speed to the nearest 5 mph, and then in 5 mph increments. Pushing lever down toward "- SET" will reduce speed in the same way.



- (3) **To change the vehicle-to-vehicle distance**
Pull the distance switch briefly toward you; the setting changes progressively from LONG to MIDDLE to SHORT.


Light control-Instrument panel

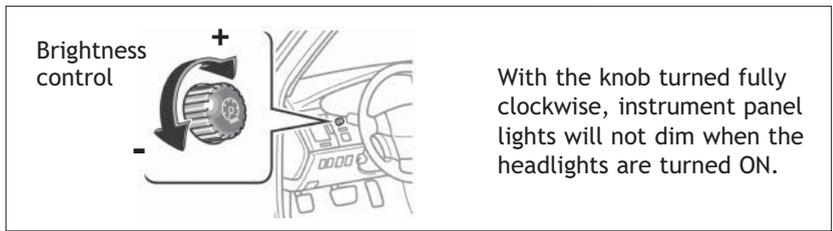


With the knob turned fully clockwise, instrument panel lights will not dim when the headlights are turned ON.

Power outlets

Auxiliary box (12V)

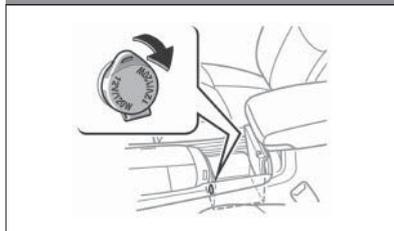


Console box (12V)

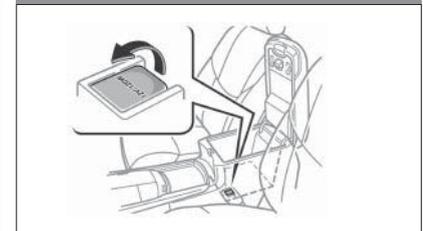


NOTE: Designed for car accessories. Ignition/Engine switch must be in the "ACC" or "ON" position to be used.

Cup holders

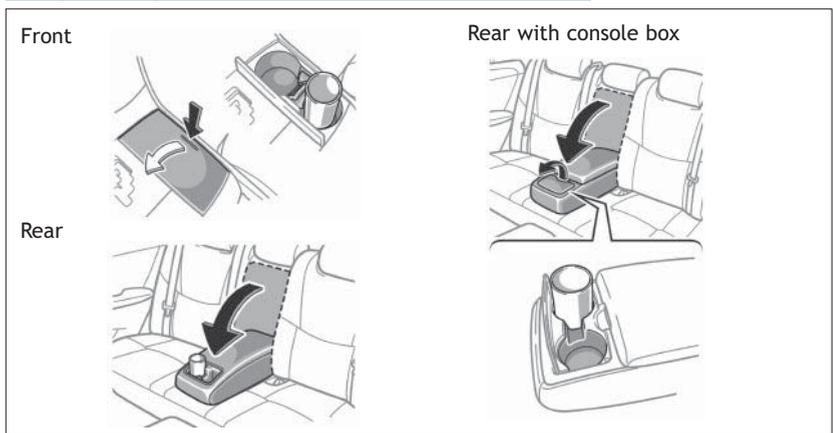

SAFETY AND EMERGENCY FEATURES


Seat belts

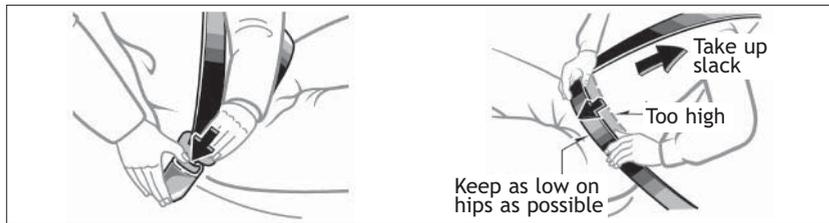


If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.


Seat belts-Shoulder belt anchor

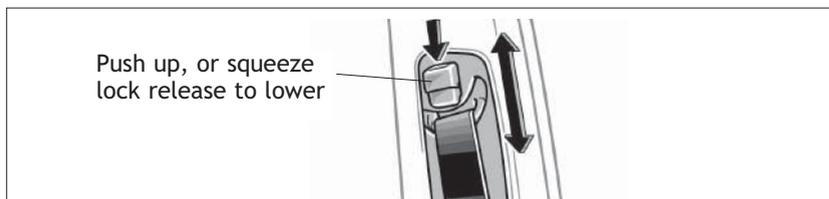

Doors-Child safety locks

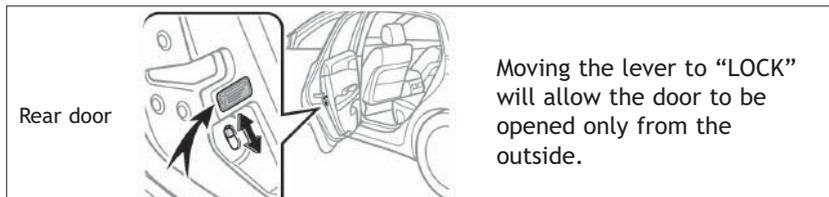


Tire Pressure Warning System reset

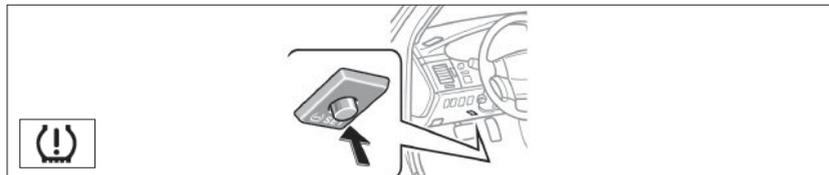

If tire pressure becomes critically low on any of the tires (including full-size spare/excluding compact spare), indicator comes on. Pushing "SET" button should not turn off the light. Correctly adjusting tire inflation will turn off the light after a few minutes. After replacing/rotating tire or wheels, push and hold "SET" button until the indicator light blinks 3 times.


Seat belt comfort guide

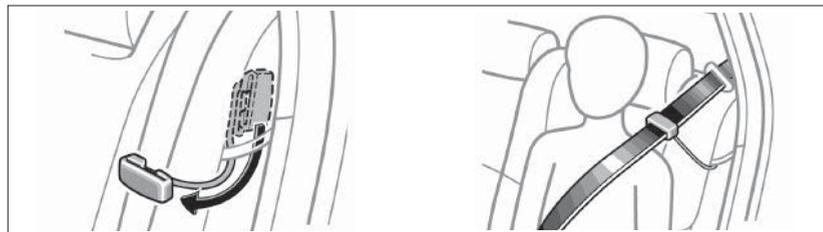


Rear seat outside position guides provide added comfort for children who have outgrown child restraints.

Spare tire & tools

Tool location

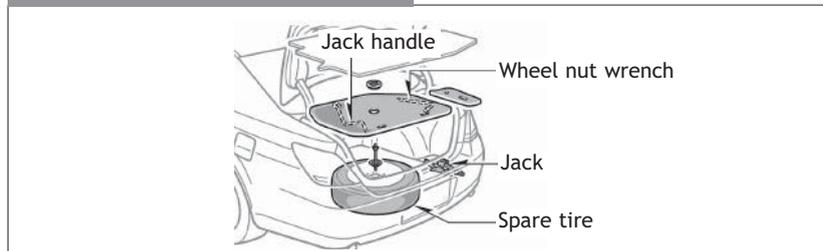


Removing the spare tire

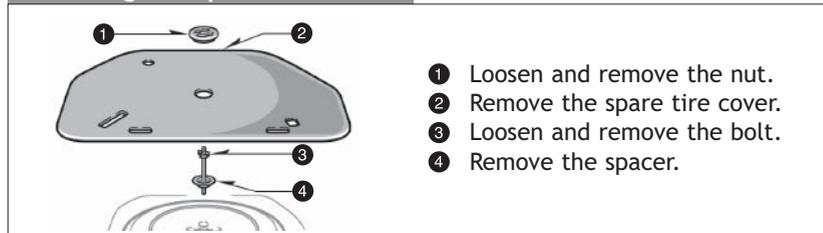

Refer to the *Owner's Manual* for tire changing and jack positioning procedures.

Trunk-Internal release

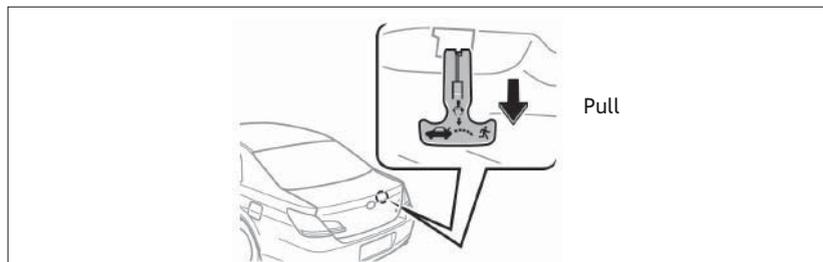

The Answers to Your Questions Are Just a Click Away.



Now that you're the proud owner of a new Toyota vehicle, you may have questions about some of its controls and features. This interactive iGuide is filled with easy-to-understand explanations of all its key components. Full of helpful demonstrations and tips, its user-friendly format makes learning all about your new vehicle fun and easy. (There's even a copy of your Owner's Manual on the CD.)

For added convenience, you can also access all of this information as well as links to additional sources, by going to www.toyotaiguide.com. Of course, your Toyota dealer is always there to help you with quality service and support. For additional assistance, please call our toll-free customer number at 1-800-331-4331.

Thank you for choosing Toyota. We hope this iGuide will help you enjoy many years of safe and pleasant driving.

Note: All of the information contained in this iGuide and more is also available at www.toyotaiguide.com.



2007 Avalon

This *Pocket Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Pocket Reference Guide* is not intended as a substitute for the *Owner's Manual* located in the vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of the vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Avalon.

! A word about safe vehicle operations

This *Pocket Reference Guide* is not a full description of Avalon operations. Every Avalon owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed " **⚠CAUTION** " information highlighted in this reference guide and throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Pocket Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

CD-ROM DRIVE	CD-ROM DRIVE
24-BIT COLOR	16-BIT COLOR
64MB OF RAM	800 X 600 MONITOR
POWERPC	64MB OF RAM
OS X 10.2	PENTIUM III 600MHZ
SYSTEM 9.X,	WINDOWS 98
MACINTOSH	PC
MINIMUM REQUIREMENTS	

This guide is designed to be played on any computer-PC or Macintosh.

Avalon *guide*

