

Customer Experience Center
1-800-331-4331



 **TOYOTA** Owners
ToyotaOwnersOnline.com

moving forward ▶

COROLLA
MATRIX



2007
Pocket Reference Guide

MN 00452-PRG07-MAT
Printed in USA 6/06

2007 Corolla Matrix

This *Pocket Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Pocket Reference Guide* is not intended as a substitute for the *Owner's Manual* located in the vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of the vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Corolla Matrix.


! A word about safe vehicle operations

This *Pocket Reference Guide* is not a full description of Corolla Matrix operations. Every Corolla Matrix owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in yellow throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Pocket Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.


Doors-Child safety locks

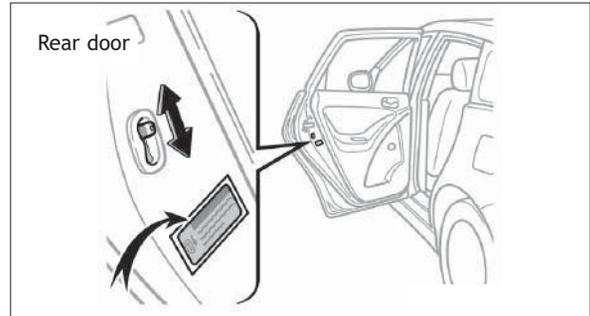


Move the lever to "LOCK," allowing the door to be opened only from the outside.

Spare tire & tools

Tool location

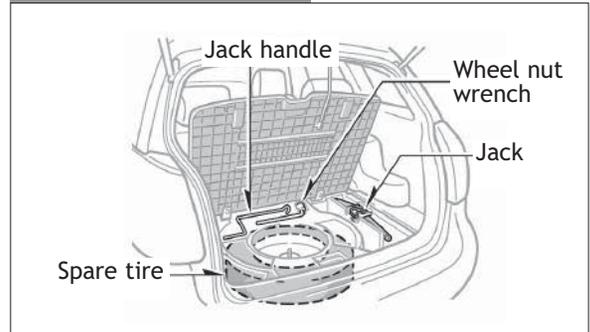

Removing the spare tire

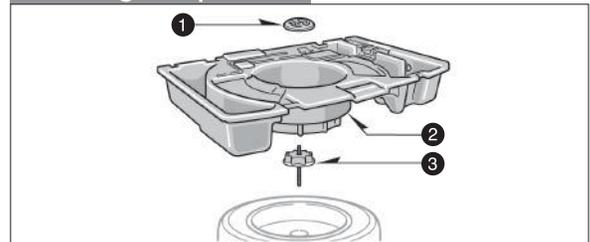

- 1 Loosen and remove the nut.
- 2 Remove the luggage storage box.
- 3 Loosen and remove the bolt.

Refer to the *Owner's Manual* for tire changing and jack positioning procedures.

INDEX

Item

Page no.

OVERVIEW

Engine maintenance	7
Fuel tank door release and cap	6
Hood release	6
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Keyless entry	6

FEATURES/OPERATIONS

Air Conditioning/Heating	14
Audio	13
Auto lock functions¹	8
Automatic Transmission	8
Clock	9
Cruise control	15
Cup holders	12
Door locks-Power	10
Light control-Interior/Instrument panel	11
Lights & turn signals	10
Moonroof	12
Parking brake	15
Power outlets	14
Seat adjustments-Front	9
Seat adjustments-Rear	9
Seats-Head restraints	9
Tilt steering wheel	15
Window-Glass hatch	11
Windows-Power	12
Wiper & washer lever-Front/Rear	11

SAFETY AND EMERGENCY FEATURES

Doors-Child safety locks	17
Seat belts	16
Seat belts-Shoulder belt anchor	16
Spare tire & tools	17
Tire Pressure Warning System reset	16

OVERVIEW

FEATURES/OPERATIONS


SAFETY AND EMERGENCY FEATURES



¹ Programmable by customer. Refer to the Owner's Manual for instructions and more information.

OVERVIEW

Instrument panel

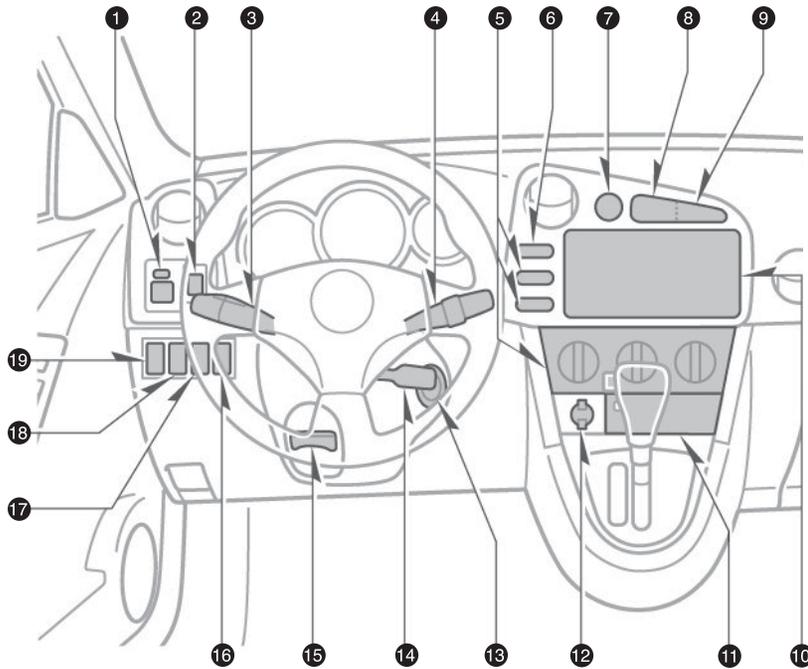

- ① Power rear view mirror control*
- ② Instrument panel light control
- ③ Headlight, turn signal and front fog light* controls
- ④ Wiper and washer controls
- ⑤ Air Conditioning*/Heater controls
- ⑥ Rear window defogger switch
- ⑦ Emergency flasher switch
- ⑧ Clock
- ⑨ Front passenger seat belt reminder light/Front passenger occupant classification indicator*
- ⑩ Audio system
- ⑪ 115V AC Power outlet*/Auxiliary box

- ⑫ 12V DC Power outlet/Cigarette lighter*
- ⑬ Ignition switch
- ⑭ Cruise control*
- ⑮ Tilt steering lock release
- ⑯ "TRAC OFF" (Traction Control "OFF")
- ⑰ Theft deterrent system*/Engine immobilizer indicator light
- ⑱ Tire Pressure Warning System reset*
- ⑲ Glass hatch opener switch*

* If equipped

Instrument cluster

1 Tachometer
 2 Service indicator and reminder
 3 Speedometer
 4 Fuel gauge
 5 Low fuel level warning
 6 Engine coolant temperature
 7 Trip meter reset knob
 8 Odometer, two trip meters and outside temperature

Indicator symbols

- BRAKE** Brake system warning¹
-  Driver's seat belt reminder¹
(alarm will sound if speed is over 9 mph)
- PASSENGER**  Front passenger seat belt reminder¹
(alarm will sound if speed is over 9 mph)
-  Charging system warning¹
-  Low engine oil pressure warning¹
-  Malfunction/Check Engine indicator¹
-  Open door warning¹
-  Airbag SRS warning¹

¹For details, refer to "Service reminder indicators and warning buzzers," Section 1-6, 2007 Owner's Manual.


- VSC** Vehicle Stability Control/Traction Control warning¹
-  Low Tire Pressure Warning¹
- MAINT REQD** Engine oil replacement reminder¹
- PASSENGER OFF AIRBAG** Front passenger occupant classification indicator
-  Headlight low beam indicator
-  Headlight high beam indicator
-  Turn signal indicator
- O/D OFF** Overdrive "OFF" indicator
-  Slip indicator/Traction control system "OFF" indicator
- CRUISE** Cruise control indicator²
- ABS** Anti-lock Brake System warning¹

CAUTION

When the Anti-lock Brake System (ABS) function is in action, you may feel the brake pedal pulsating and hear a noise. In this situation, to let the Anti-lock Brake System work for you, just hold the brake pedal down more firmly. Do not pump the brake as this will result in reduced braking performance.


²If this light flashes, refer to "Cruise control," Section 1-7, 2007 Owner's Manual.

Fuel tank door release and cap

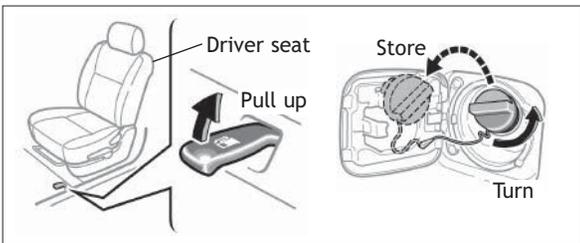


NOTE: Tighten until one click is heard. If the cap is not tightened enough, Check Engine “” indicator may illuminate.

Hood release

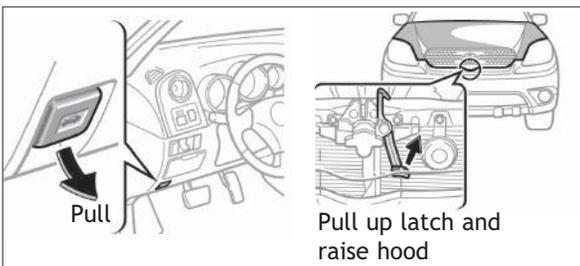

Keyless entry (if equipped)

Locking operation

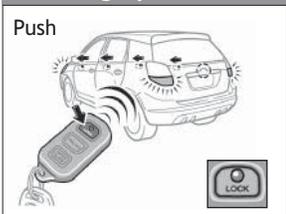


Unlocking operation



NOTE: After unlocking, if a door is not opened within thirty (30) seconds, all doors will relock for safety


Glass hatch opener

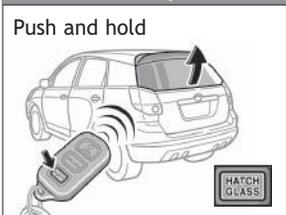

Alarm operation



Engine maintenance

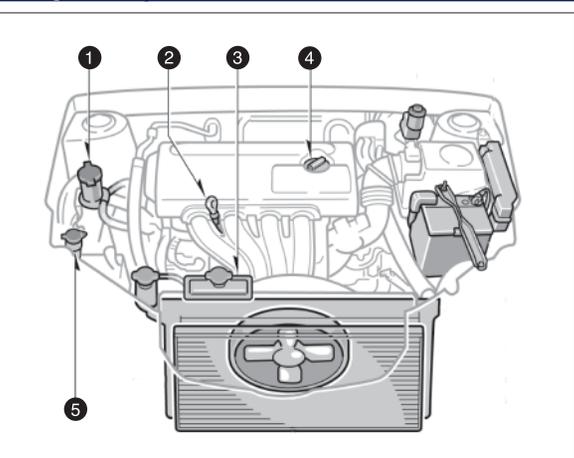

- 1 Power steering fluid reservoir
- 2 Engine oil level dipstick
- 3 Engine coolant reservoir
- 4 Engine oil filler cap
- 5 Windshield and rear window washer fluid tank

Note: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the “Owner’s Warranty Information Booklet,” “Scheduled Maintenance Guide” or “Owner’s Manual Supplement.”

FEATURES/OPERATIONS


Auto lock functions (if equipped)

Automatic door locks can be programmed to operate in 4 different modes.

- Doors lock when shifting from “Park.”
- Doors unlock when shifting into “Park.”
- Doors unlock when the ignition key is turned to the “ACC” or “LOCK” position and driver’s door is opened.
- Deactivate, auto lock function cancelled.

Refer to the *Owner’s Manual* for more details.

Automatic Transmission (if equipped)

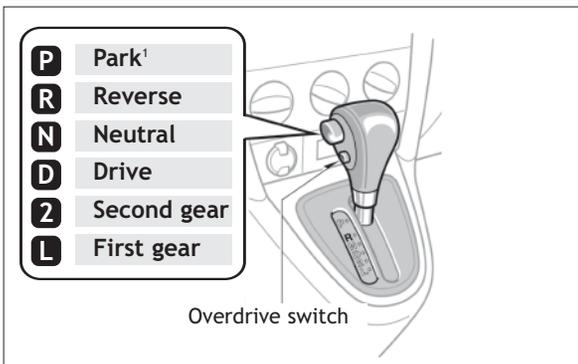


¹The ignition must be ON, and the brake pedal depressed to shift from “Park.”

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the “D” position.

Overdrive switch

To turn “ON” or “OFF” Depress the overdrive switch to choose either three-speed (“OFF”) or four-speed (“ON”) operation. During normal driving conditions, always drive with overdrive “ON;” this allows the transmission to shift automatically into four-speed operation at higher speeds, improving fuel economy. If the indicator light on the instrument cluster is illuminated, overdrive is “OFF.”

Seats-Head restraints

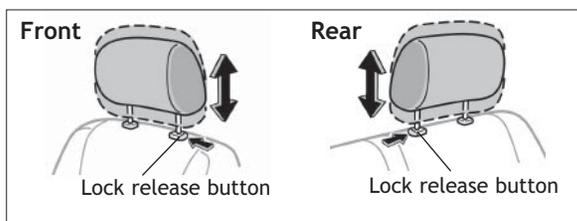


Seat adjustments-Front




- 1 Position
- 2 Height crank (driver side only)
- 3 Seatback angle


Seat adjustments-Rear

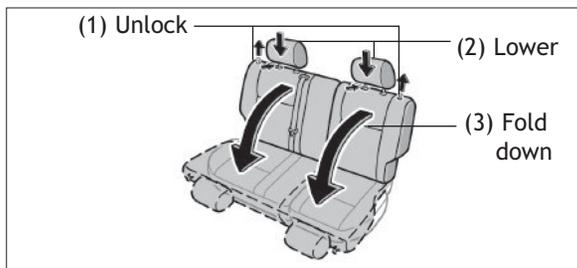

Clock

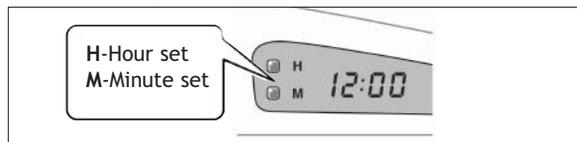


Door locks-Power (if equipped)

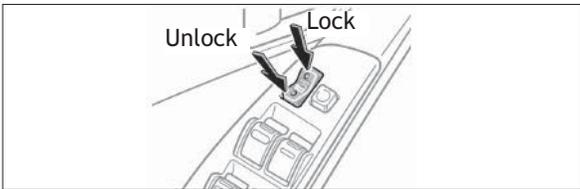


Lights & turn signals


Headlights

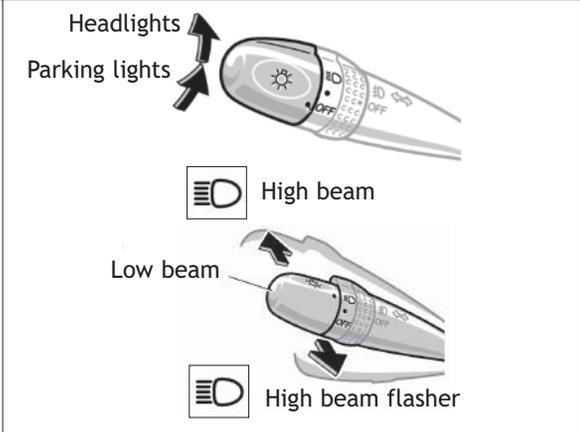

Turn signals

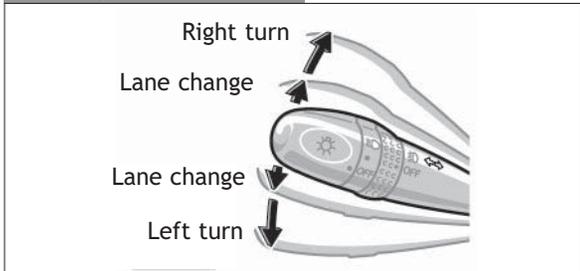


Front fog lights (if equipped)

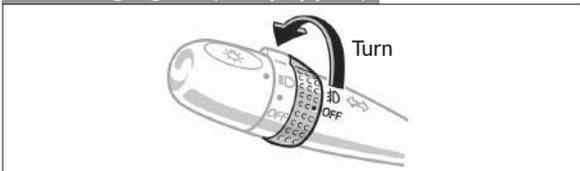


Front fog lights turn on only when the headlights are on low beam.

Wiper & washer lever-Front/Rear


Front operation

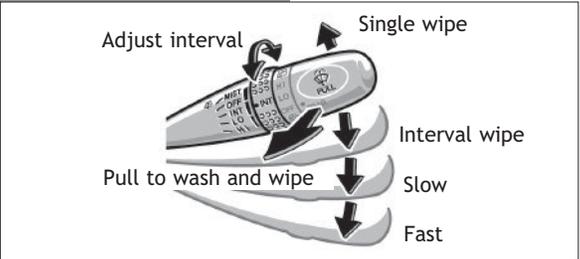


Rear operation

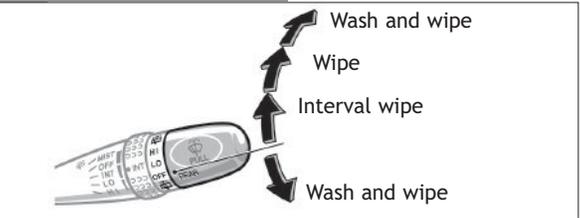

Light control-Instrument panel

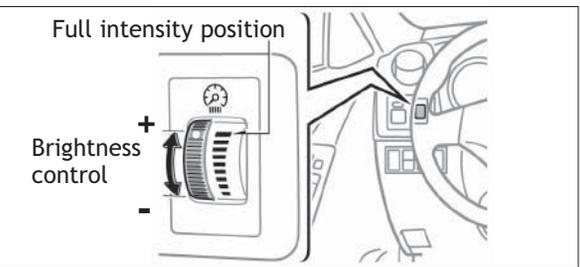


Window-Glass hatch

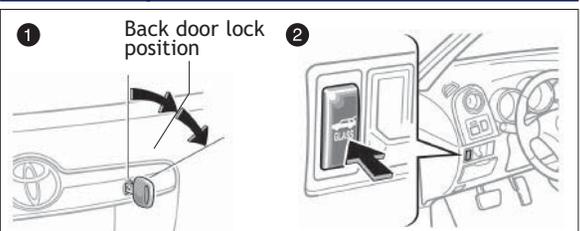

- 1 To open with key Turn the key FULLY clockwise.
- 2 To open with opener switch* Push and hold the switch when the vehicle is stopped.

* If equipped

Windows-Power (if equipped)

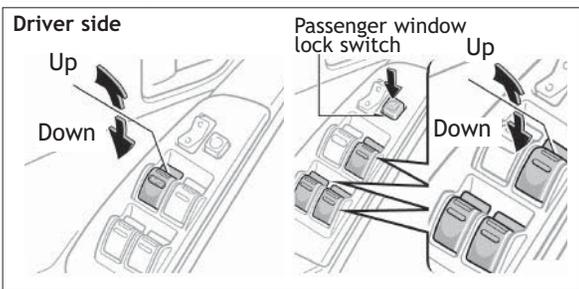


Window operation

Automatic down operation (Driver side only) Push the switch completely down and release to fully open. To stop window mid-way, lightly pull the switch up.


Window lock switch Deactivates all passenger windows. Driver's window remains operable.

Moonroof (if equipped)

Sliding operation

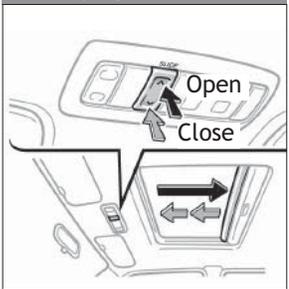

Tilting operation

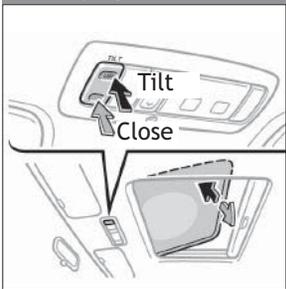


Cup holders



Front



Rear

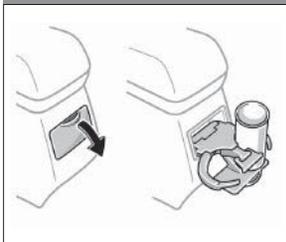

Audio

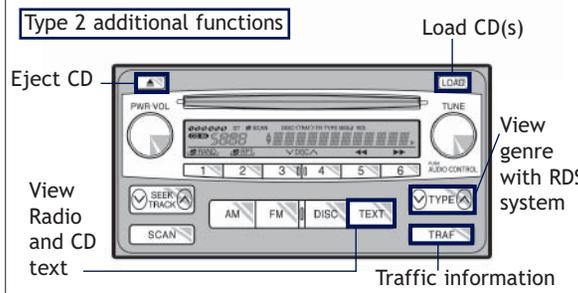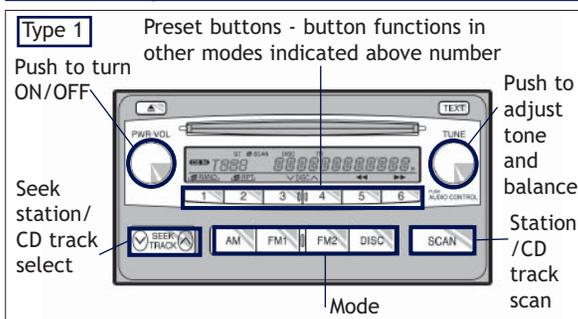

RADIO

To preset stations Tune in the desired station and press a preset button (1-6) until you hear a beep. Push desired preset button (1-6) to select.

To scan stations Push and hold to scan preset stations. Push again to hold selection.

RDS (Radio Data System-FM only) (Type 2 only)

- Push TYPE “^” or “v” to view current program genre. Push again within 6 seconds to select new genre.
- Push “SEEK/TRACK” or “SCAN” to find same genre program.
- Push “TEXT” to receive information transmitted from radio stations.


CD PLAYER

To scan tracks on a disc Push and hold “SCAN.” Push again to hold selection.

CD Changer (Type 2 only)

- To load one disc Push “LOAD” and insert one disc.
- To load multiple discs Push and hold “LOAD” until you hear a beep. Insert one disc. **Wait until the green indicator illuminates and shutter opens to insert next disc.**


Air Conditioning (if equipped)/Heating

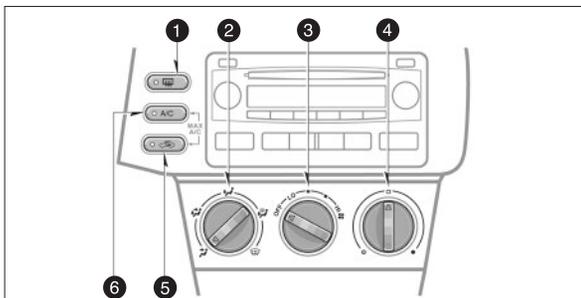

- ① Rear defogger
- ② Air flow vent
In “” or “” mode, use fresh air (“” indicator “OFF”) to reduce window fogging.
- ③ Fan speed
- ④ Temperature
- ⑤ Fresh or recirculate cabin air
- ⑥ Air Conditioning ON/OFF


Power outlets

Shifter area (12V)

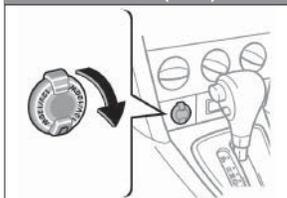


Designed for 12V car accessories. Key must be in the “ACC” or “ON” position to be used.

Center console box (12V)

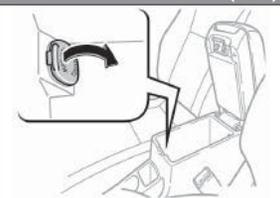


Shifter area (115V, if equipped)

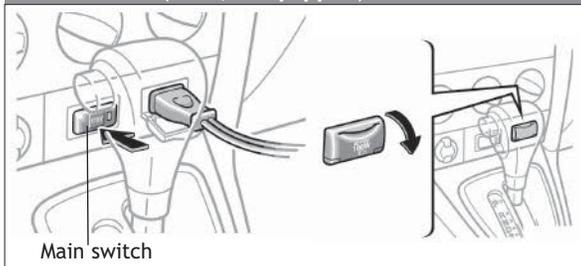


Key must be in the “ON” position.

Cruise control (if equipped)

Turning system ON/OFF

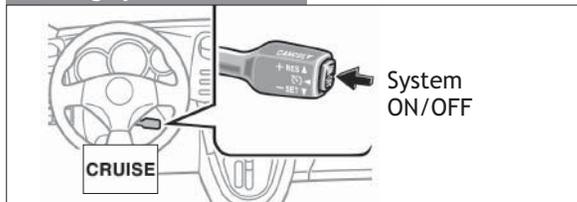

Functions

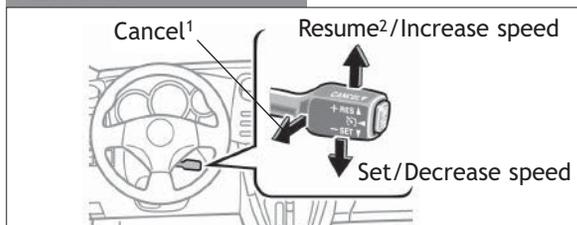

¹ The set speed may also be cancelled by depressing the brake pedal or the clutch pedal.

² The set speed may be resumed once vehicle speed exceeds 25 mph.

Refer to the *Owner's Manual* for more details.


Tilt steering wheel



Hold wheel, push lever down, set angle, then return lever.


Note: Do not attempt to adjust while the vehicle is in motion.

Parking brake

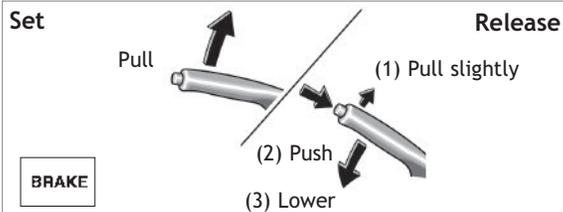

SAFETY AND EMERGENCY FEATURES


Seat belts

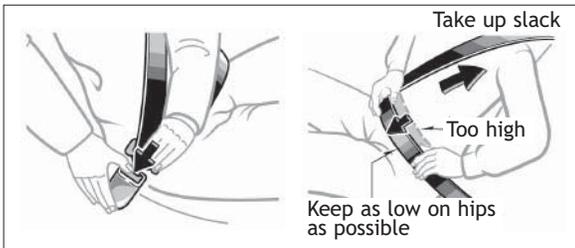


If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.

Seat belts-Shoulder belt anchor

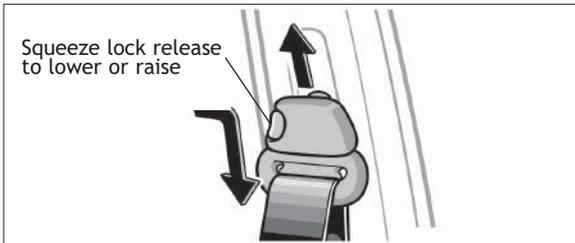

Tire Pressure Warning System reset (if equipped)

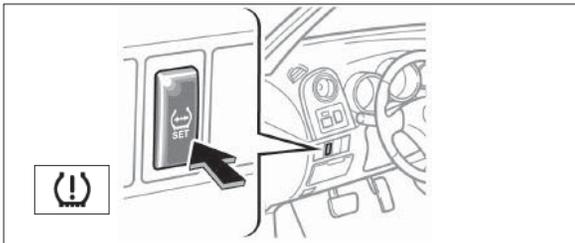

If tire pressure becomes critically low on any of the tires (excluding compact spare), indicator illuminates. Pushing “SET” button should not turn off the light. Correctly adjusting tire inflation will turn off the light after a few minutes. After replacing tire or wheels, push and hold “SET” button until the indicator blinks 3 times.

2007 Corolla Matrix

This *Pocket Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Pocket Reference Guide* is not intended as a substitute for the *Owner's Manual* located in the vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of the vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Corolla Matrix.


! A word about safe vehicle operations

This *Pocket Reference Guide* is not a full description of Corolla Matrix operations. Every Corolla Matrix owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in yellow throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Pocket Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.


Doors-Child safety locks

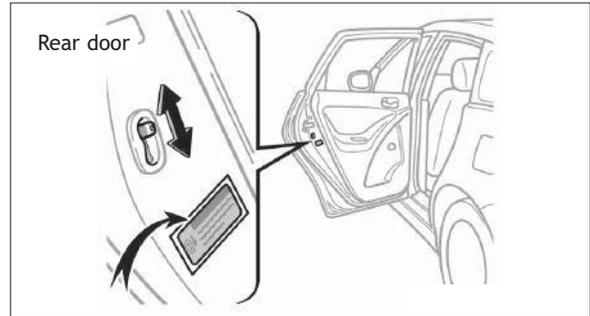


Move the lever to "LOCK," allowing the door to be opened only from the outside.

Spare tire & tools

Tool location

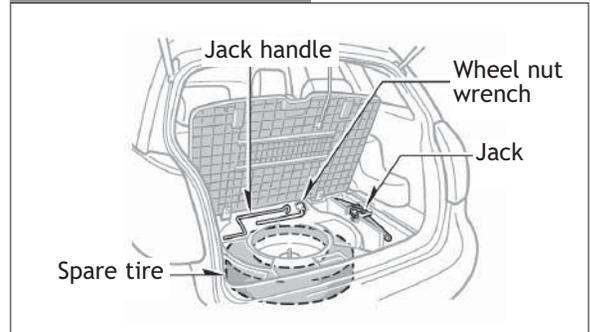

Removing the spare tire

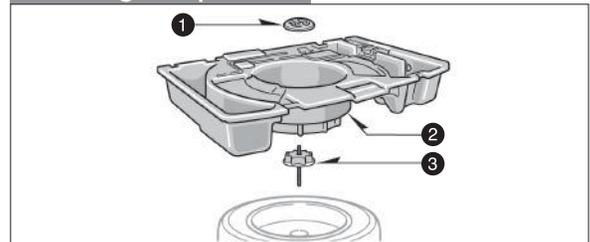

- 1 Loosen and remove the nut.
- 2 Remove the luggage storage box.
- 3 Loosen and remove the bolt.

Refer to the *Owner's Manual* for tire changing and jack positioning procedures.