

Flip this over to see your
Pocket Reference Guide.

Open This and Really Get into
Your New Toyota



The Ultimate
Interactive Owner's Guide



2007 Camry



moving forward ▶

CAMRY



2007 Pocket Reference Guide



ToyotaOwnersOnline.com

Customer Experience Center 1-800-331-4331

MN 00452-PRG07-CAMi
Printed in USA 05/06

Flip this over to see your
iGuide.



2007 Camry

This *Pocket Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Pocket Reference Guide* is not intended as a substitute for the *Owner's Manual* located in your vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Camry.

! A word about safe vehicle operations

This *Pocket Reference Guide* is not a full description of Camry operations. Every Camry owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in yellow throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Pocket Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

CD-ROM DRIVE	CD-ROM DRIVE
24-BIT COLOR	16-BIT COLOR
64MB OF RAM	800 X 600 MONITOR
POWERPC	64MB OF RAM
OS X 10.2	PENTIUM III 600MHZ
SYSTEM 9.X,	WINDOWS 98
MACINTOSH	PC
MINIMUM REQUIREMENTS	

This iGuide is designed to be played on any computer-PC or Macintosh.

Camry iGuide



INDEX

OVERVIEW

Engine maintenance	8
Fuel tank door release and cap	6
Hood release	8
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Keyless entry^{1,2}	7
Light control-Instrument panel	6
Trunk release	7

FEATURES/OPERATIONS

Air Conditioning/Heating	18-19
Audio	16-17
Auto lock functions¹	10
Automatic transmission	10
Clock	15
Cruise control	13
Cup holders	20
Garage door opener (HomeLink ^{®3})	15
Lights² & turn signals	14
Multi-information display	20
Moonroof	13
Parking brake	11
Power outlets	19
Seat adjustments-Front	12
Seat adjustments-Rear	12
Seat heaters	19
Seats-Head restraints	13
Sunshade-Rear	15
Smart Key	9
Telephone controls (Bluetooth [®])	17
Tilt and telescopic steering wheel	11
Windows	11
Windshield wiper & washer	14

SAFETY AND

EMERGENCY FEATURES

Child comfort guide	22
Door locks	21
Doors-Child safety locks	21
Seat belts	21
Seat belts-Shoulder belt anchor	22
Spare tire & tools	23
Tire Pressure Warning System reset	22
Trunk-Internal release	23

OVERVIEW

FEATURES/OPERATIONS

SAFETY AND EMERGENCY FEATURES



¹ Programmable by customer. Refer to the Owner's Manual for instructions and more information.




² Visit your Toyota dealer for information on customizing this feature.

³ HomeLink[®] is a registered trademark of Johnson Controls, Inc.

OVERVIEW

Instrument panel

Steering wheel controls

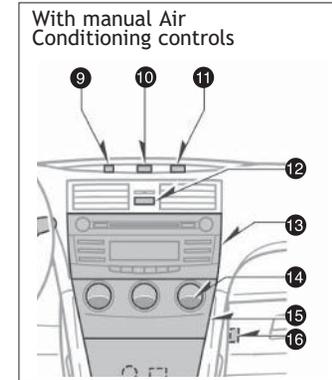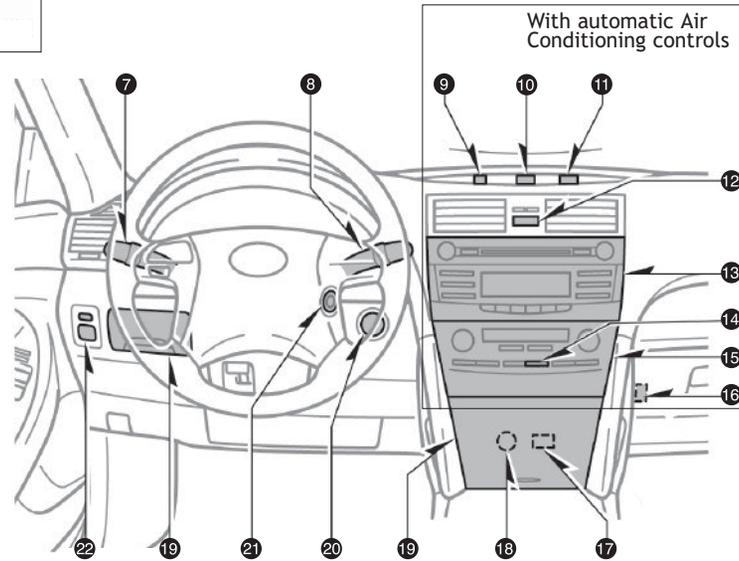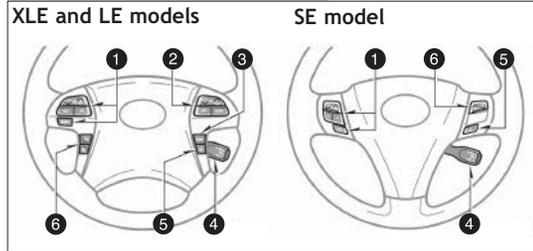

- ❶ Steering wheel audio control
- ❷ Steering wheel climate control
- ❸ Multi-information display switch¹
- ❹ Cruise control
- ❺ Navigation voice command button^{1,2}
- ❻ Telephone controls¹
- ❼ Headlight, turn signal and front fog light controls
- ❽ Wiper and washer controls
- ❾ Theft deterrent system/Engine immobilizer system indicator light
- ❿ Clock
- ⓫ "AIRBAG ON" and "AIRBAG OFF" indicator and front passenger's seat belt reminder lights
- ⓬ Emergency flasher switch


- ⓭ Audio system or navigation system with integrated audio system^{1,2}
- ⓮ Rear window and outside rear view mirror defogger switch¹
- ⓯ Air Conditioning controls
- ⓰ Tire Pressure Warning System reset switch (in glove box)
- ⓱ AUX adapter
- ⓲ 12V DC Power outlet
- ⓳ Auxiliary boxes¹
- ⓴ Ignition switch (Smart Key)¹
- ⓵ Ignition switch (mechanical key)
- ⓶ Power rear view mirror control switches¹

¹ If equipped


² For details, refer to the "Navigation System Owner's Manual."

Instrument cluster

Without multi-information display (LE and SE models)

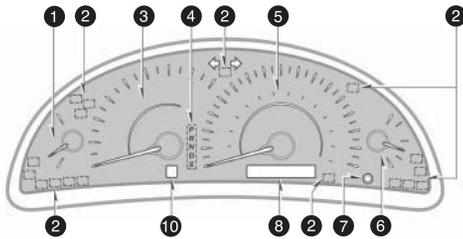

With multi-information display (XLE model)

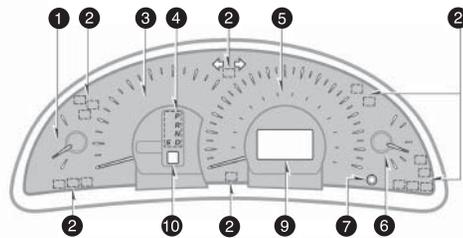

- ❶ Engine coolant temperature
- ❷ Service indicator and reminder
- ❸ Tachometer
- ❹ Gear shift position indicator
- ❺ Speedometer
- ❻ Fuel gauge
- ❼ Trip meter reset/Instrument panel light control
- ❽ Odometer and two trip meters and outside temperature display
- ❾ Multi-information display
- ❿ Sequential shift display*

* If equipped

Indicator symbols

-  Brake system warning¹
-  Driver seat belt reminder¹
(Alarm will sound if speed is over 12 mph)
-  Front passenger's seat belt reminder¹
(Alarm will sound if speed is over 12 mph)
-  Charging system warning¹

¹ For details, refer to "Service reminder indicators and warning buzzers," Section 1-6, 2007 Owner's Manual.


-  Malfunction/Check Engine indicator¹
-  Low engine oil pressure warning¹
-  Open door warning¹
-  Airbag SRS warning¹
-  Low windshield washer fluid level warning¹
-  Vehicle Stability Control/Traction Control warning¹
-  Low tire pressure warning¹
-  Engine oil replacement reminder¹
-  "AIRBAG ON" indicator
-  "AIRBAG OFF" indicator
-  Headlight low beam indicator
-  Tail light indicator
-  Headlight high beam indicator
-  Turn signal indicator
-  Low fuel level warning¹
-  Master warning¹ (See multi-information display)
-  Slip indicator
-  Front fog light indicator¹
-  Cruise Control indicator²
-  Anti-lock brake system warning¹

CAUTION

When the anti-lock brake system (ABS) function is in action, you may feel the brake pedal pulsating and hear a noise. In this situation, to let the anti-lock brake system work for you, just hold the brake pedal down more firmly. Do not pump the brake as this will result in reduced braking performance.

² If this light flashes, refer to "Cruise control," Section 1-7, 2007 Owner's Manual.

Fuel tank door release and cap

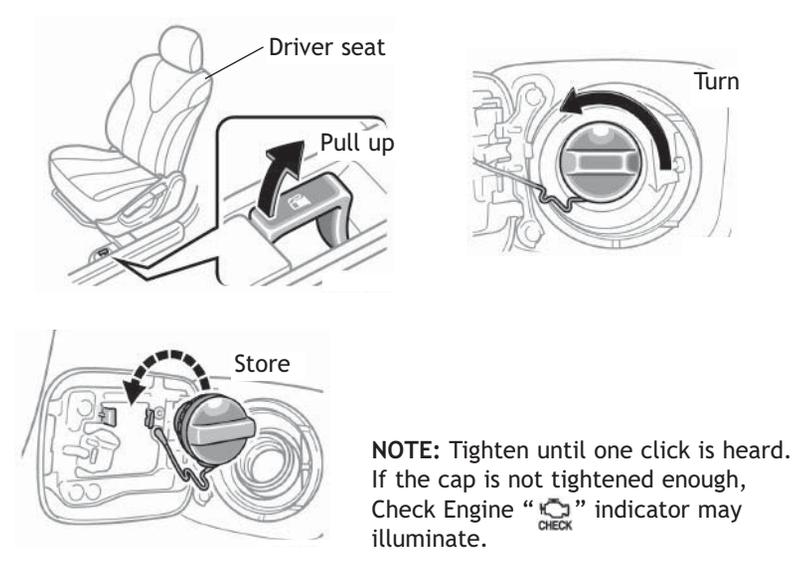

Driver seat

Pull up


Turn

Store

NOTE: Tighten until one click is heard. If the cap is not tightened enough, Check Engine “” indicator may illuminate.

Light control-Instrument panel

Brightness control

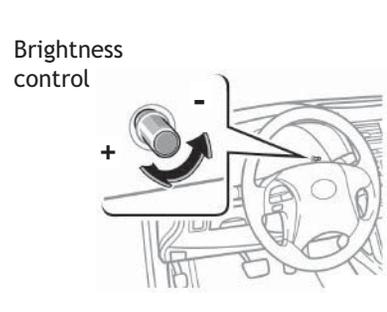

With the knob turned fully clockwise, instrument panel lights will not dim when the headlights are turned on.

NOTE: This is also the trip meter reset button.

Keyless entry


Beep sound can be switched “ON” or “OFF.” Refer to the *Owner’s Manual* for more details.

Locking operation



Push 

Unlocking operation

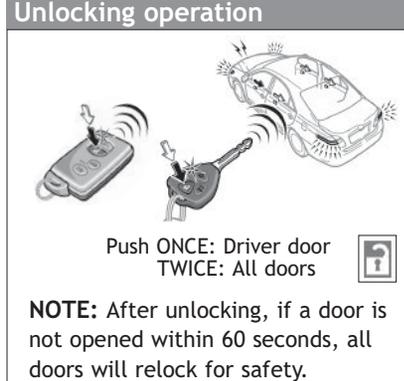

Push ONCE: Driver door
TWICE: All doors 

NOTE: After unlocking, if a door is not opened within 60 seconds, all doors will relock for safety.

Trunk lid operation




Push and hold 

Alarm operation



Push and hold 


Trunk release

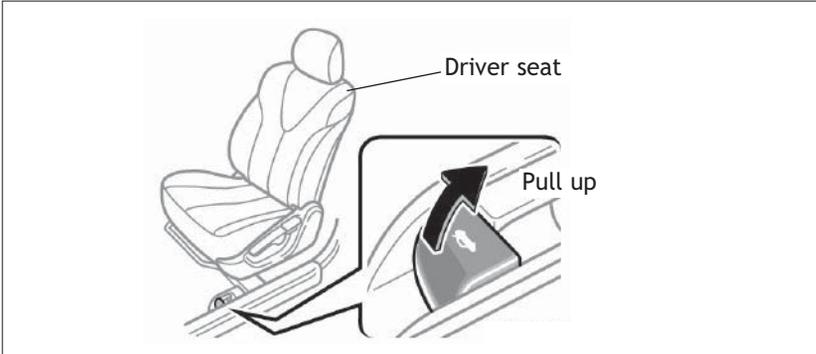

Driver seat


Pull up

Hood release

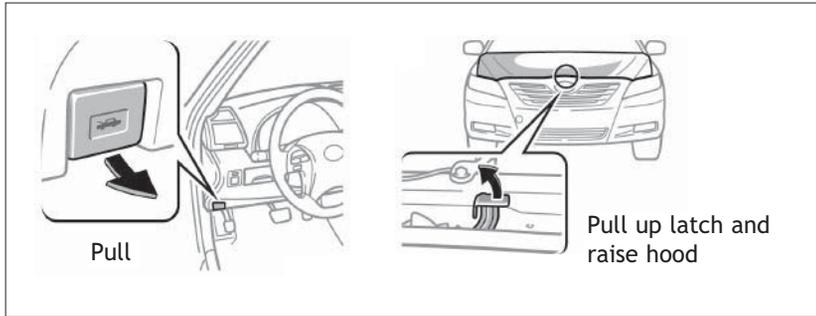


Engine maintenance

4 cylinder (2AZ-FE) engine

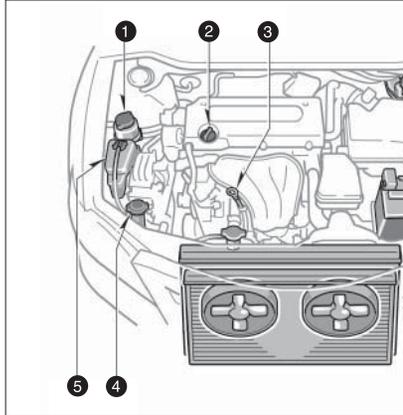

6 cylinder (2GR-FE) engine

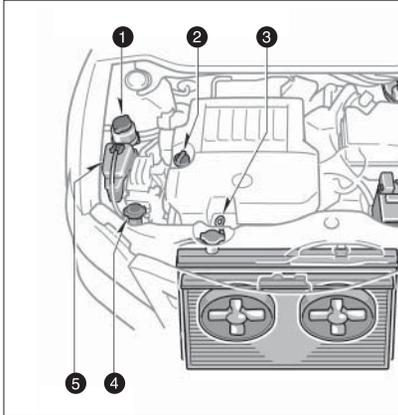


- ① Power steering fluid reservoir
- ② Engine oil filler cap
- ③ Engine oil level dipstick
- ④ Windshield washer fluid tank
- ⑤ Engine coolant reservoir

Note: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the “Owner’s Warranty Information Booklet,” “Scheduled Maintenance Guide” or “Owner’s Manual Supplement.”

Smart Key* (if equipped)

Start function

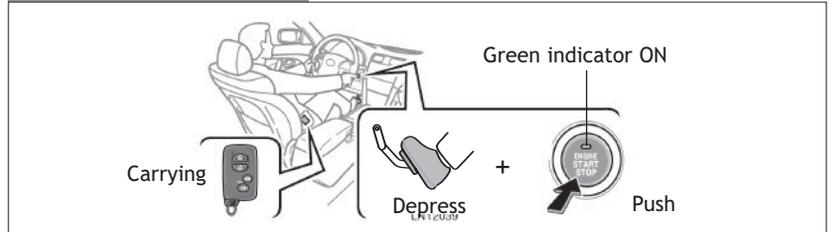


NOTE: Gear shift lever must be in Park and brake pedal depressed.

Without depressing the brake pedal

Pressing the “ENGINE START STOP” switch will change the operation mode in succession from:

ACC	Accessories such as the radio will operate.
ON	Power ON; engine not running.
OFF	All systems OFF.

Locking/Unlocking operation

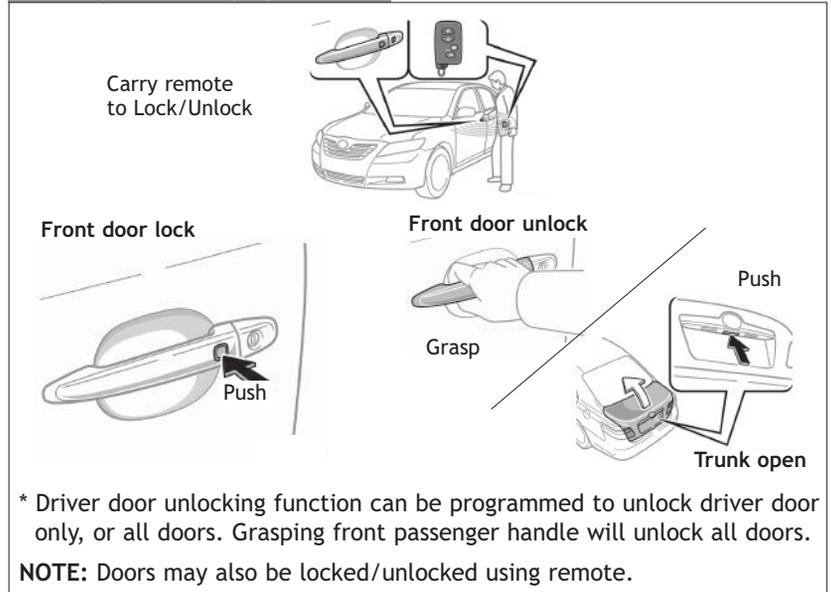

* Driver door unlocking function can be programmed to unlock driver door only, or all doors. Grasping front passenger handle will unlock all doors.

NOTE: Doors may also be locked/unlocked using remote.

Auto lock functions

Automatic door locks can be programmed to operate in 4 different modes, or turned OFF.

- Doors lock when shifting from Park.*
- Doors lock when the vehicle speed goes above approximately 12 mph.
- Doors unlock when shifting into Park.*
- Doors unlock when the ignition switch is set from ON to ACC or OFF and driver's door is opened.


* Automatic transmission only

Refer to the *Owner's Manual* for more details.

Automatic transmission (if equipped)


4 cylinder (2AZ-FE) engine

- P** Park'
- R** Reverse
- N** Neutral
- D** Drive
- 4** Fourth gear
- 3** Third gear
- 2** Second gear
- L** First gear

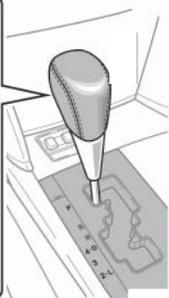

6 cylinder (2GR-FE) engine

- P** Park'
- R** Reverse
- N** Neutral
- D** Drive
- S** "S" mode

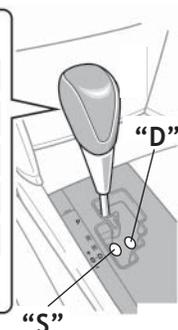

¹ The ignition switch must be ON, and the brake pedal depressed.

"S" (Sequential) mode


Push to shift lever to the left from "D" position.

"S" position:

- +: Upshift (Push and release)
- : Downshift (Pull and release)

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.

Tilt and telescopic steering wheel

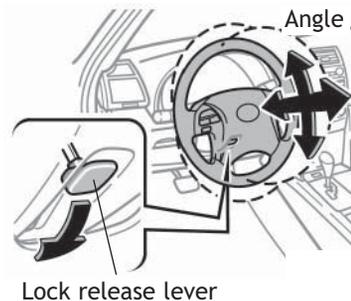


Length

Hold wheel, push lever down, set angle and length, then return lever.


Note: Do not attempt to adjust while the vehicle is in motion.

Parking brake

Lever type


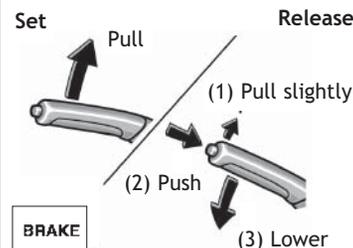


Pedal type

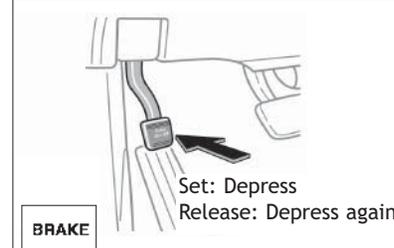

Windows

Driver side

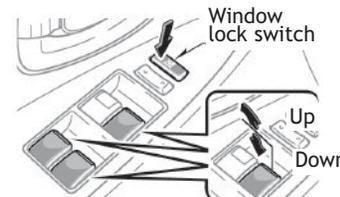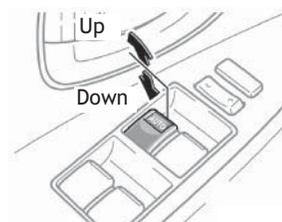

Window operation

Automatic operation (Driver side only) Push the switch completely down or pull it completely up and release to fully open or close*. To stop window mid-way, lightly push the switch in the opposite direction.

* Auto close on XLE model only

Window lock switch Deactivates all passenger windows. Driver's window remains operable.

Seat adjustments-Front

Manual seat




Power seat




- ❶ Position
- ❷ Height crank (driver side only)
- ❸ Seatback angle
- ❹ Position and height
- ❺ Seatback angle
- ❻ Lumbar support (driver side only)

Seat adjustments-Rear (if equipped)


Reclining type (XLE model)

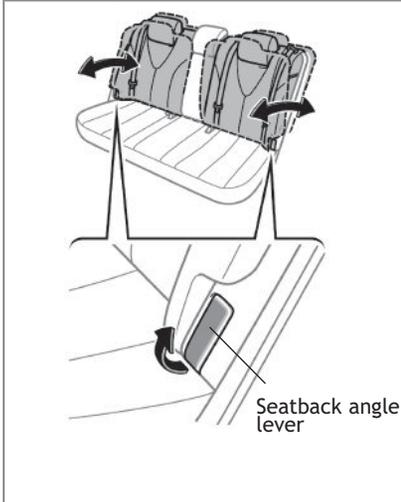

Fold down type (LE model)

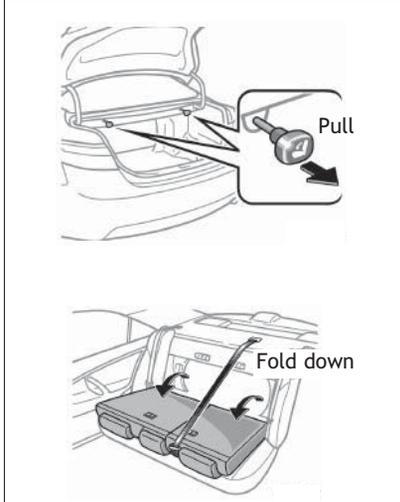


Seats-Head restraints

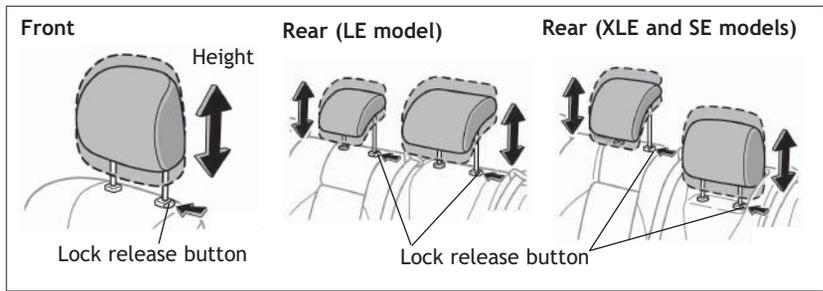


Cruise control

Turning system ON/OFF

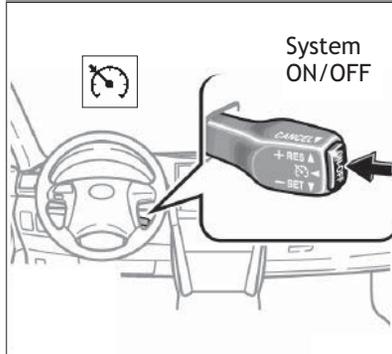


Functions

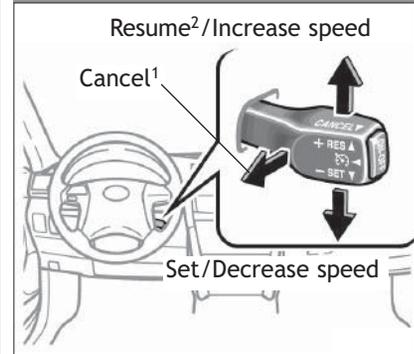


- ¹ The set speed may also be cancelled by depressing the brake pedal.
- ² The set speed may be resumed once vehicle speed exceeds 25 mph.

Moonroof (If equipped)

Sliding operation

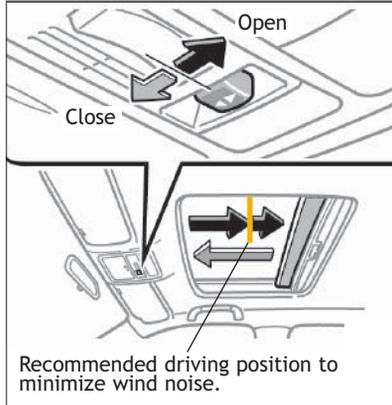


Tilting operation

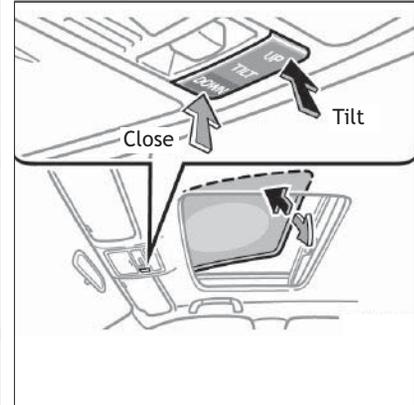


Lights & turn signals

Headlights

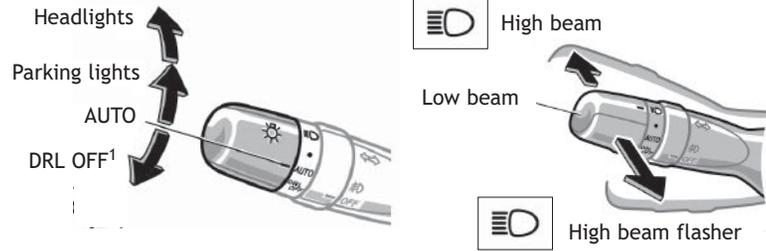

- Daytime Running Light system (DRL) Automatically turns on the headlights at a reduced intensity.
 - Automatic light cut off system Will automatically turn lights off after a delay of thirty (30) seconds, or push the lock switch on remote.
- ¹ Turns DRL OFF


Turn signals

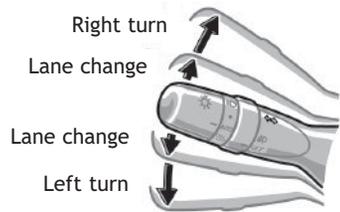


Front fog lights (if equipped)




Windshield wiper & washer

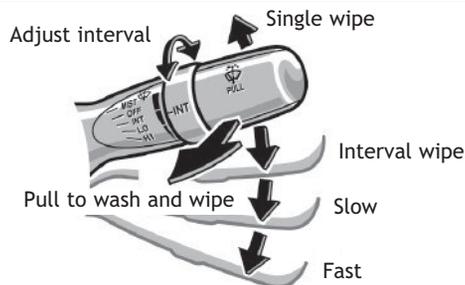

Sunshade-Rear (if equipped)

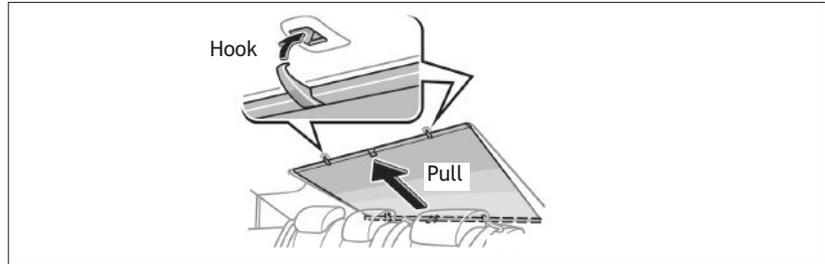

Garage door opener (HomeLink®)* (if equipped)

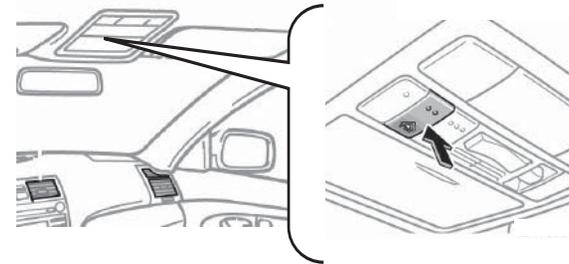


Garage door openers manufactured under license from HomeLink®* can be programmed to operate garage doors, estate gates, security lighting, etc.

Refer to the *Owner's Manual* for more details. For programming assistance, contact the Toyota Customer Experience Center at 1-800-331-4331, or visit <http://www.homelink.com>.

* HomeLink® is a registered trademark of Johnson Controls, Inc.

Clock

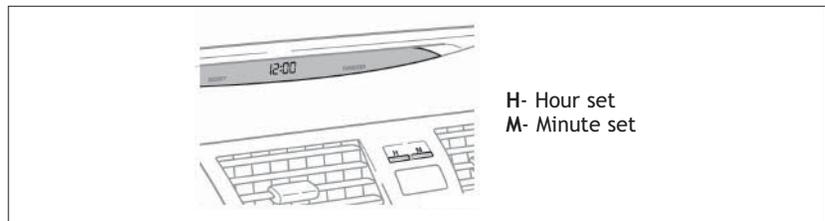

Audio

Push to turn ON/OFF

Eject CD

Push to adjust tone & balance

Push to skip up/down folder

Mode

Seek station/CD track select

View CD text

Station/CD track scan

Preset buttons - button functions in other modes indicated above number

Type 2 other functions

Load CD(s)

AM/Satellite radio

View genre/ Push to skip up/down folder

CD PLAYER

To scan tracks on a disc Push and hold “SCAN.” Push again to hold selection.

CD Changer (Type 2 only)

-To load one disc Push “LOAD” and insert one disc.
 -To load multiple discs Push and hold “LOAD” until you hear a beep. Insert one disc. *Wait until the green indicator illuminates and shutter opens to insert next disc.*

RADIO

To preset stations Tune in the desired station and hold down a preset button (1-6) until you hear a beep. Push desired preset button (1-6) to select.

To scan stations Push “SCAN.” Push and hold to scan preset stations. Push again to hold selection.

AUX audio jack

Wire pass through



AUX

By inserting a mini plug into the AUX audio jack, you can listen to music from a portable audio device through the vehicle’s speaker system.

Steering wheel controls

XLE and LE models

SE model

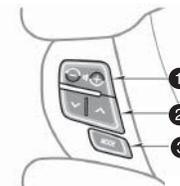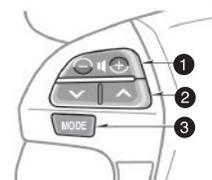

- 1 “- +”
Volume control
- 2 “^ v”
-In radio mode Push to select a preset station; push and hold to seek the next strong station.
-In CD mode Push to skip up or down to next/previous track.
- 3 “MODE”
Push to turn audio ON and select an audio mode. Push and hold to turn the audio system “OFF.”


Telephone controls (Bluetooth®)* (if equipped)

Bluetooth® technology allows placement or receipt of calls without taking your hands from the steering wheel or using a cable to connect the telephone and the system.

Refer to the *Owner’s Manual* for more details.

Air Conditioning/Heating

Automatic Air Conditioning

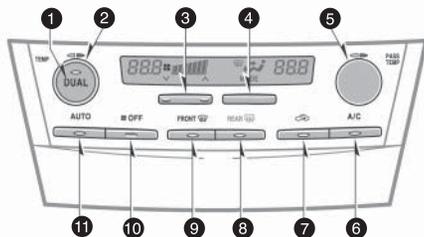


- 1 “DUAL” button
Indicator ON: Separate temperature settings for driver and passenger.
Indicator OFF: Synchronize temperature settings for driver and passenger.
- 2 Driver temperature
- 3 Fan speed
- 4 Air flow vent
 In “” or “” mode, use fresh air (“” indicator light “OFF”) to reduce window fogging.
- 5 Passenger temperature
- 6 Air Conditioning ON/OFF
- 7 Fresh or recirculate cabin air
- 8 Rear defogger
- 9 Windshield defogger
- 10 Climate control OFF
- 11 Automatic climate control ON
 Adjust the temperature setting, and airflow vents and fan will adjust automatically.

Plasmacluster™* (XLE model)


Improves air quality by emitting positive and negative ions into the cabin. This system operates from the driver side vent and a low system noise is normal.

* This system adopts the plasmacluster technology, manufactured under license from SHARP Corporation. “Plasmacluster™” is a trademark of SHARP Corporation.

Steering wheel controls

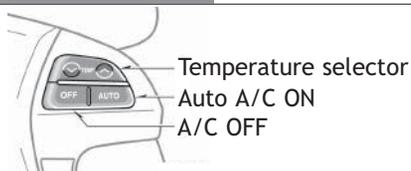


Manual Air Conditioning

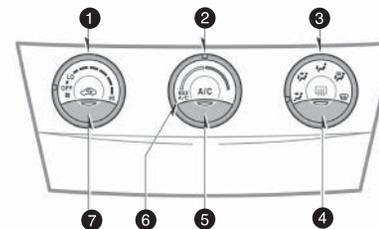

- 1 Fan speed
- 2 Temperature
- 3 Air flow vent
 In “” or “” mode, use fresh air (“” indicator light “OFF”) to reduce window fogging.
- 4 Rear defogger
- 5 Air Conditioning ON/OFF
- 6 Use for quick cooling. MAX A/C changes air intake to recirculate. It is not possible to change intake to fresh, or to turn A/C OFF in this mode.
- 7 Fresh or recirculate cabin air

Seat heaters (if equipped)

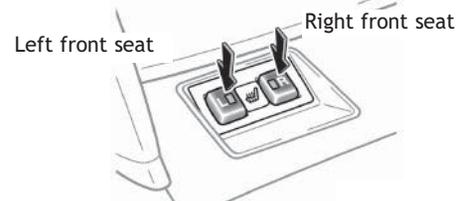


Power outlets

Front console



Center console

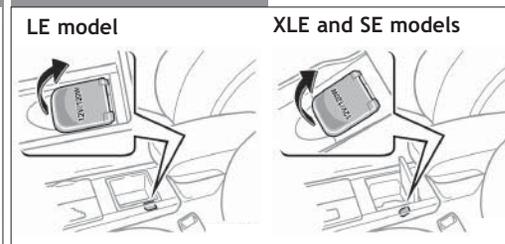

Designed for 12V car accessories. Key/Engine switch must be in the “ACC” or “ON” position to be used.

Multi-information display (if equipped)



Push to change information in the following succession:


- (1) Outside temperature
- (2) Miles left on remaining fuel
- (3) Current gas mileage
- (4) Running distance from engine start
- (5) Average vehicle speed from engine start
- (6) Multi-information display OFF
- (7) Zoom display of odometer and trip meter

Cup holders

Front		Rear
Manual transmission models 		LE model
Automatic transmission models LE model 	XLE and SE models 	
XLE and SE models 		

SAFETY AND EMERGENCY FEATURES

Door locks

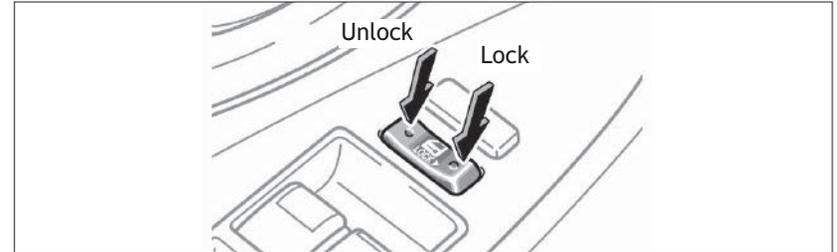

Doors-Child safety locks


Rear door

Seat belts


If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.


Seat belts-Shoulder belt anchor

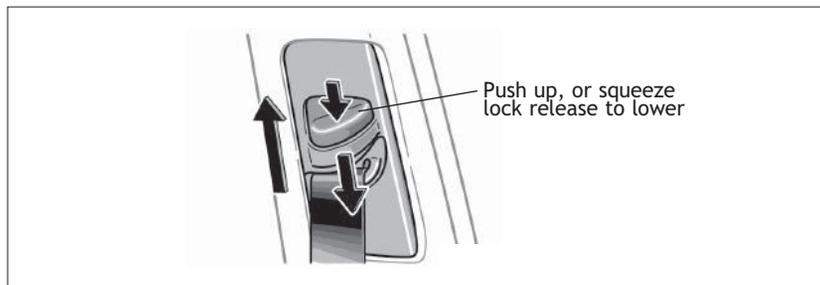

Child comfort guide

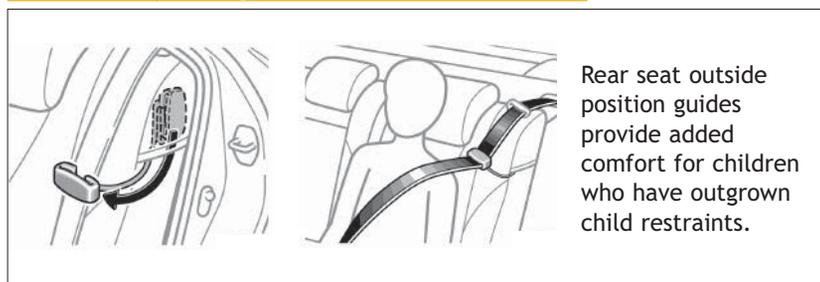

Tire Pressure Warning System reset

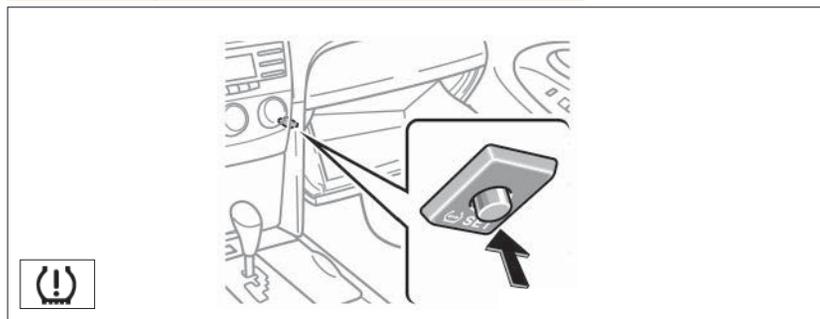


If tire pressure becomes low on any of the tires (including spare/excluding compact spare), indicator comes on. Pushing reset button should not turn off the light. Correctly adjusting tire inflation will turn off the light after a few minutes. Push and hold reset button, until the indicator light blinks 3 times, after replacing tire or wheels.


Spare tire & tools

Tool location

With compact spare tire

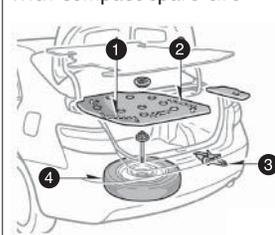


Without compact spare tire

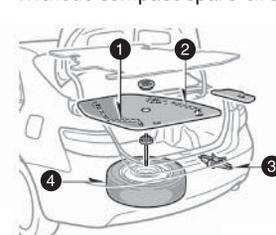

- 1 Jack handle
- 2 Wheel nut wrench
- 3 Jack
- 4 Spare tire


Removing the spare tire

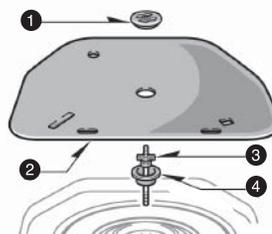

- 1 Loosen and remove the nut.
- 2 Remove the spare tire cover.
- 3 Loosen and remove the bolt.
- 4 Remove the spacer (with aluminum wheels).

Refer to the *Owner's Manual* for tire changing and jack positioning procedures.

Trunk-Internal release

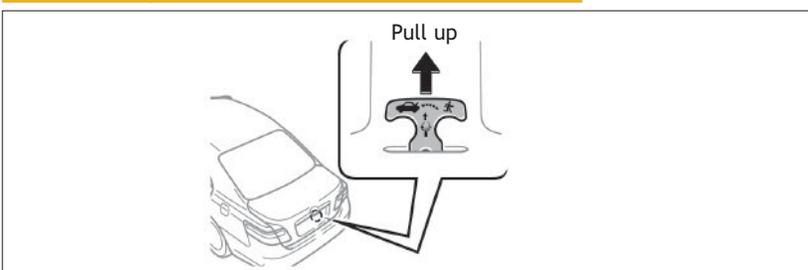

The Answers to Your Questions Are Just a Click Away.




Now that you're the proud owner of a new Toyota vehicle, you may have questions about some of its controls and features. This interactive iGuide is filled with easy-to-understand explanations of all its key components. Full of helpful demonstrations and tips, its user-friendly format makes learning all about your new vehicle fun and easy. (There's even a copy of your Owner's Manual on the CD.)

For added convenience, you can also access all of this information as well as links to additional sources, by going to www.toyotaiguide.com. Of course, your Toyota dealer is always there to help you with quality service and support. For additional assistance, please call our toll-free customer number at 1-800-331-4331.

Thank you for choosing Toyota. We hope this iGuide will help you enjoy many years of safe and pleasant driving.

Note: All of the information contained in this iGuide and more is also available at www.toyotaiguide.com.

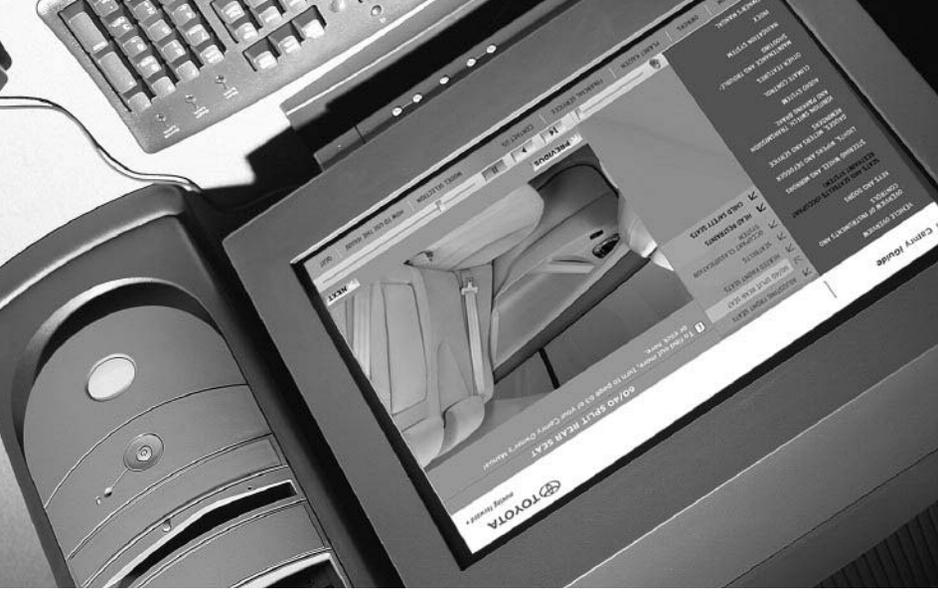

2007 Camry

This *Pocket Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Pocket Reference Guide* is not intended as a substitute for the *Owner's Manual* located in your vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Camry.

! A word about safe vehicle operations

This *Pocket Reference Guide* is not a full description of Camry operations. Every Camry owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in yellow throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Pocket Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

Camry *iguide*



This iguide is designed to be played on any computer-PC or Macintosh.

MINIMUM REQUIREMENTS

PC	WINDOWS 98
800 X 600 MONITOR	PENTIUM III 600MHZ
16-BIT COLOR	64MB OF RAM
CD-ROM DRIVE	800 X 600 MONITOR
MACINTOSH	POWERPC
SYSTEM 9.X,	64MB OF RAM
OS X 10.2	24-BIT COLOR
CD-ROM DRIVE	CD-ROM DRIVE