

Customer Experience Center  
1-800-331-4331




*moving forward ▶*

**CAMRY**

POWERED  
BY



**PMS 3025**

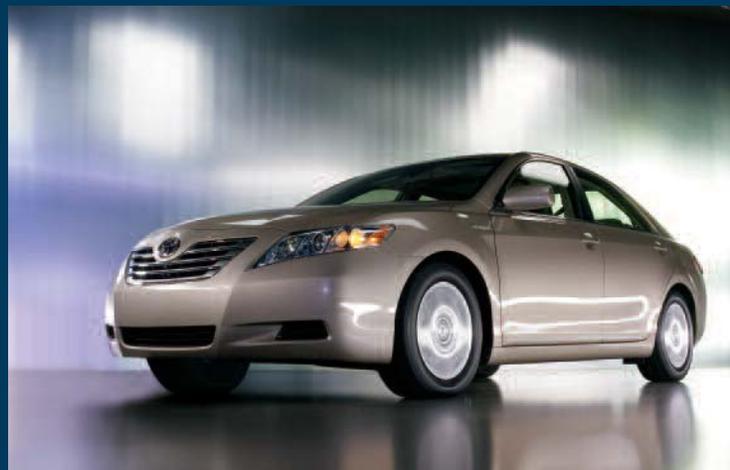

**2007**  
**Pocket Reference Guide**

# 2007 Camry Hybrid

This *Pocket Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Pocket Reference Guide* is not intended as a substitute for the *Owner's Manual* located in your vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Camry Hybrid.

## **! A word about safe vehicle operations**

This *Pocket Reference Guide* is not a full description of Camry Hybrid operations. Every Camry Hybrid owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in yellow throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Pocket Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

# INDEX

Item	Page no.
------	----------

## OVERVIEW

Engine maintenance	9
Fuel tank door release and cap	8
Hood release	9
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
<b>Smart Key<sup>2</sup></b>	<b>6-7</b>
Trunk release	6

## FEATURES/OPERATIONS

Air Conditioning/Heating	18-19
Audio	16-17
<b>Auto lock functions<sup>1</sup></b>	<b>11</b>
Clock	17
Cruise Control	15
Cup holders	21
Garage door opener (HomeLink <sup>®</sup> ) <sup>3</sup>	21
Hybrid Synergy Drive System	10-11
Light control-Instrument panel	12
<b>Lights<sup>2</sup> &amp; turn signals</b>	<b>14</b>
Multi-information display	20
Moonroof	17
Parking brake	12
Power outlets	21
Seat adjustments-Front	13
Seat-Folding rear seat	13
Seat heaters	19
Seats-Head restraints	13
Telephone controls (Bluetooth <sup>®</sup> )	20
Tilt and telescopic steering wheel	12
Transmission	11
Windows	19
Windshield wiper & washer	15

## SAFETY AND EMERGENCY FEATURES

Child comfort guide	23
Door locks	22
Doors-Child safety locks	22
Fuel filler door-Internal release	25
Jump starting	24
Seat belts	22
Seat belts-Shoulder belt anchor	23
Spare tire & tools	25
Tire Pressure Warning System reset	23
Trunk-Internal release	25

<sup>1</sup> Programmable by customer. Refer to the Owner's Manual for instructions and more information.  
<sup>2</sup> Visit your Toyota dealer for information on customizing this feature.



<sup>3</sup> HomeLink<sup>®</sup> is a registered trademark of Johnson Controls, Inc.



# OVERVIEW

## Instrument panel

### Steering wheel controls

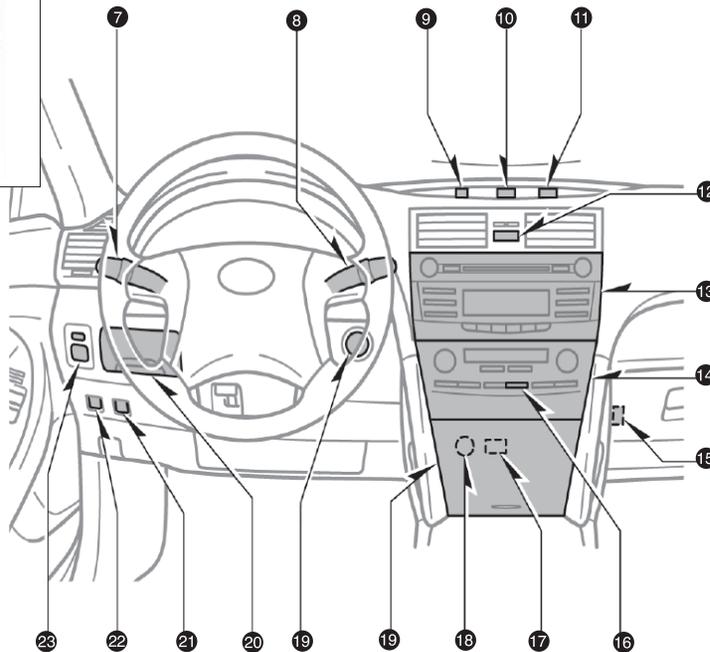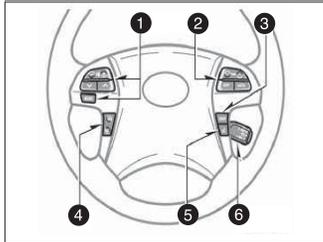

- ① Steering wheel audio control
- ② Steering wheel climate control
- ③ Multi-information display switch
- ④ Cruise control
- ⑤ Speech command button
- ⑥ Telephone controls
- ⑦ Headlight and turn signal controls
- ⑧ Wiper and washer controls
- ⑨ Engine immobilizer system indicator light
- ⑩ Clock
- ⑪ “AIRBAG ON” and “AIRBAG OFF” indicator and front passenger seat belt reminder lights
- ⑫ Emergency flasher switch
- ⑬ Audio system or navigation system with integrated audio system<sup>1,2</sup>
- ⑭ Air Conditioning controls
- ⑮ Tire Pressure Warning System reset (in glove box)
- ⑯ Rear window and outside rear view mirror defogger switch<sup>1</sup>
- ⑰ AUX adapter
- ⑱ 12V DC Power outlet
- ⑲ Auxiliary boxes
- ⑳ “POWER” switch
- ㉑ Air Conditioning/Heating economy (ECO) mode switch
- ㉒ Fuel filler door opener
- ㉓ Power rear view mirror controls

<sup>1</sup> If equipped

<sup>2</sup> For details, refer to the “Navigation System Owner’s Manual.”

## Instrument cluster

1 Engine coolant temperature  
 2 Service indicator and reminder  
 3 Fuel economy meter  
 4 Gear shift position indicator  
 5 Speedometer  
 6 Fuel gauge  
 7 Trip meter reset/Instrument panel light control  
 8 Multi-information display  
 9 Driving ready light

## Indicator symbols

**BRAKE** Brake system warning<sup>1</sup>

Brake system warning<sup>1</sup>

Driver seat belt reminder<sup>1</sup>  
 (Alarm will sound if speed is over 12 mph.)

Front passenger seat belt reminder<sup>1</sup>  
 (Alarm will sound if speed is over 12 mph.)

Charging system warning<sup>1</sup>

Malfunction/Check Engine indicator<sup>1</sup>

**P/S** Electric power steering system warning<sup>1</sup>

Open door warning<sup>1</sup>

<sup>1</sup> For details, refer to “Service reminder indicators and warning buzzers,” Section 1-6, 2007 Owner’s Manual.

Airbag SRS warning<sup>1</sup>

Low windshield washer fluid level warning<sup>1</sup>

**VSC** Vehicle Stability Control/Traction Control warning<sup>1</sup>

Low tire pressure warning<sup>1</sup>

**READY** Driving ready light

“AIRBAG ON” indicator

“AIRBAG OFF” indicator

Headlight low beam indicator

Headlight high beam indicator

Turn signal indicator

Low fuel level warning<sup>1</sup>

Master warning<sup>1</sup> (See multi-information display)

Slip indicator

Cruise Control indicator<sup>2</sup>

**ABS** Anti-lock brake system warning<sup>1</sup>

**CAUTION**

When the anti-lock brake system (ABS) function is in action, you may feel the brake pedal pulsating and hear a noise. In this situation, to let the anti-lock brake system work for you, just hold the brake pedal down more firmly. Do not pump the brake as this will result in reduced braking performance.


<sup>2</sup> If this light flashes, refer to “Cruise control,” Section 1-7, 2007 Owner’s Manual.

## Trunk release



## Smart Key\*

### Start function

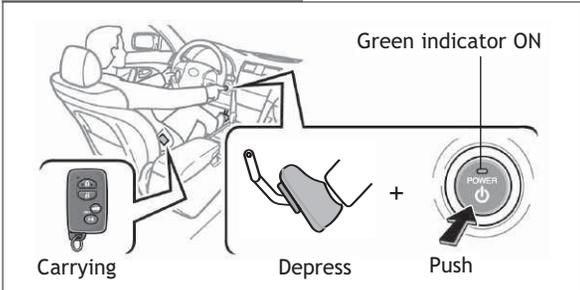


**NOTE:** Gear shift lever must be in “Park” and brake pedal depressed.

### Without depressing the brake pedal

Pressing the “POWER” switch will change the operation mode in succession from:

<b>ACC</b>	Accessories such as the radio will operate.
<b>ON</b>	Power ON; engine not running.
<b>OFF</b>	All systems OFF.


## Locking/Unlocking operation

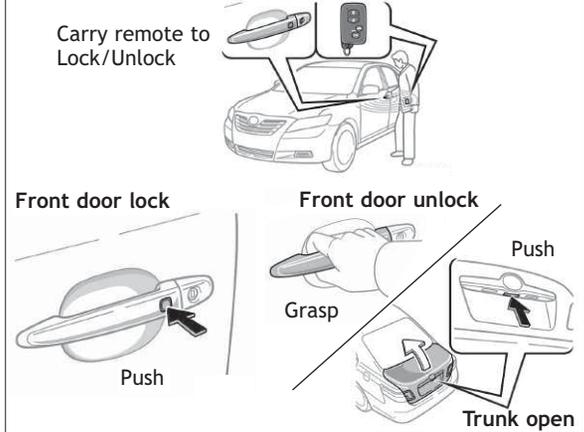


\* Driver door unlocking function can be programmed to unlock driver door only, or all doors. Grasping front passenger handle will unlock all doors.

**NOTE:** Doors may also be locked/unlocked using remote.


## Keyless entry

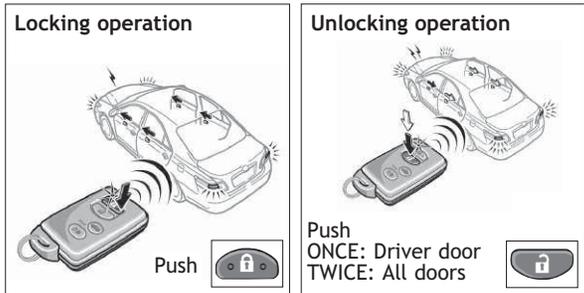

**NOTE:** After unlocking, if a door is not opened within 60 seconds, all doors will relock for safety.

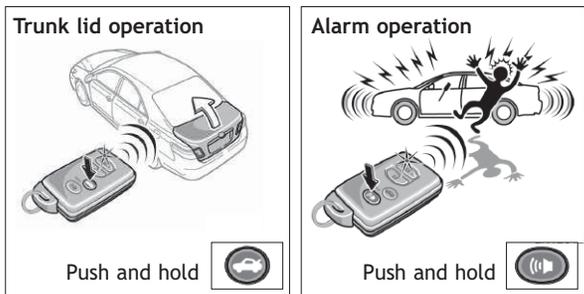


## Fuel tank door release and cap

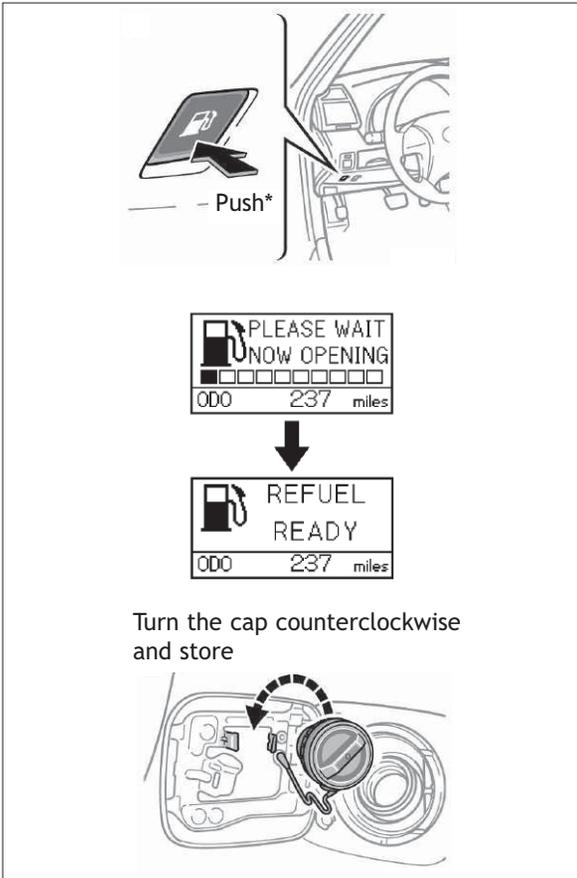


\* It may take up to 10 seconds after pushing button for the door to open if the internal tank pressure is high.

**NOTE:** Tighten cap until one click is heard. If the cap is not tightened enough, Check Engine "CHECK" indicator may illuminate.

## Hood release

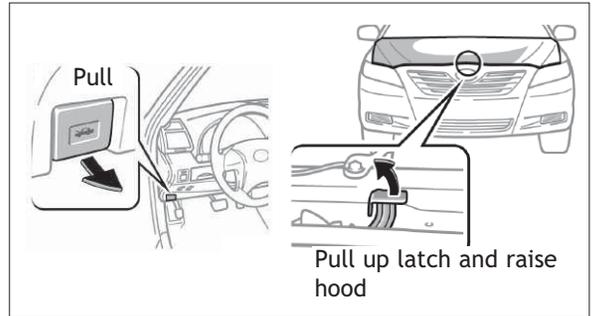

## Engine maintenance

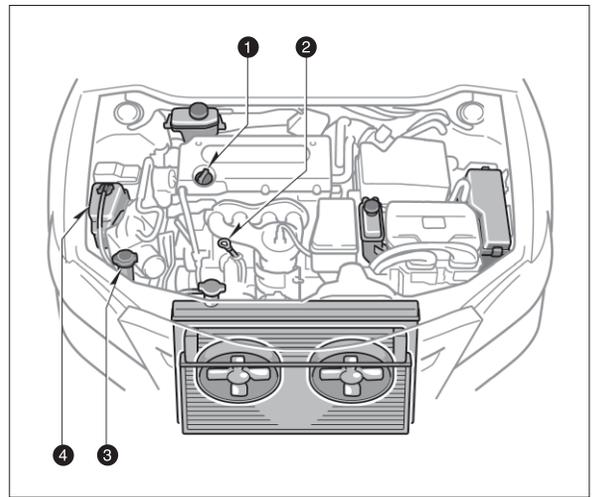

- ① Engine oil filler cap
- ② Engine oil level dipstick
- ③ Windshield washer fluid tank
- ④ Engine coolant reservoir

**Note:** Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the "Owner's Warranty Information Booklet," "Scheduled Maintenance Guide" or "Owner's Manual Supplement."

# FEATURES/OPERATIONS

## Hybrid Synergy Drive System

The Hybrid Synergy Drive System utilizes a computer controlled gasoline engine and electric motor to provide the most efficient combination of power for the vehicle. To conserve energy, when the brakes are applied the braking force generates electricity which is then sent to the traction battery. In addition, the engine shuts off when the vehicle is stopped. The benefits are better fuel economy, reduced vehicle emissions and improved performance.

**Note:** Fuel consumption and energy information of the Hybrid System are shown on the multi-information display and/or navigation system screen (if equipped).


### Tips for improved fuel economy

- 1 Ensure tire pressures are maintained at levels specified in the *Owner's Manual*.
- 2 Link trips, if possible, to reduce engine cold starts.
- 3 Avoid driving at speeds that are higher than necessary, especially on the highway.
- 4 When possible, avoid sudden stops to maximize regenerative braking energy.
- 5 Minimize use of the air conditioning.

### ⚠ CAUTION

- The vehicle has high voltage DC and AC systems as well as a 12-volt system. DC and AC high voltage is very dangerous and can cause severe burns and electric shock that may result in death or serious injury.
- Never touch, disassemble, remove or replace high voltage cables, their connectors and high voltage parts such as the inverter unit, traction battery, traction motor, air conditioning compressor, AC/DC converter, etc.

## Starting the Hybrid System

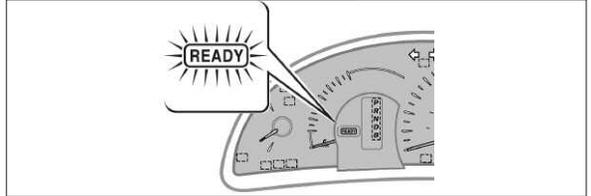

- 1 Put the selector lever in "P."
- 2 Depress the brake pedal, and press the "POWER" switch briefly and firmly.
- 3 The "READY" light will blink. After a few seconds, when the light remains steady and a beep sounds, you may begin driving.


## Auto lock functions

Automatic door locks can be programmed to operate in 4 different modes, or turned OFF.

- Doors lock when shifting from "Park."
- Doors lock when the vehicle speed goes above approximately 12 mph.
- Doors unlock when shifting into "Park."
- Doors unlock when the "POWER" switch is set from ON to ACC or OFF and driver's door is opened.


Refer to the *Owner's Manual* for more details.

## Transmission

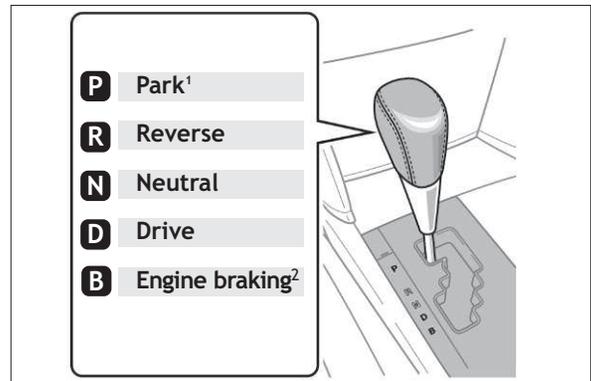

- <sup>1</sup> The "POWER" switch must be set at ON, and the brake pedal depressed to shift from "Park."
- <sup>2</sup> The engine brake is the equivalent of downshifting. Shift to "B" when engine braking is desired (i.e., downhill driving, coasting to a stop, etc.).


### Tilt and telescopic steering wheel

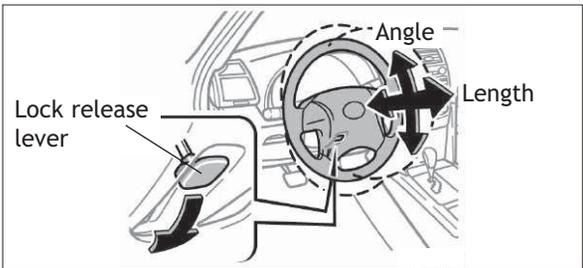


Hold wheel, push lever down, set angle and length, then return lever.

**Note:** Do not attempt to adjust while the vehicle is in motion.

### Parking brake

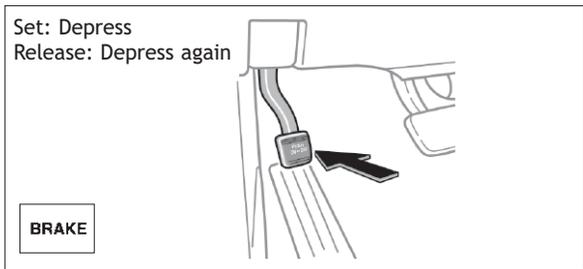


### Light control-Instrument panel

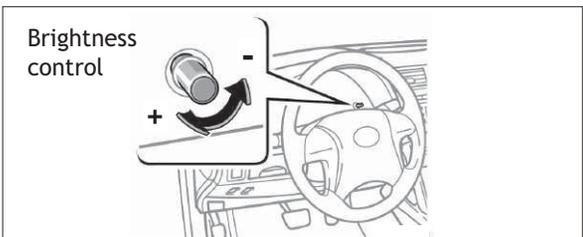

Turning headlights on in bright daylight may reduce visibility of instrument panel cluster. For optimum visibility, turn headlights to "AUTO" or "OFF." If headlights are turned on during daylight, instrument lights won't dim.


**Note:** This is also the trip meter reset button. Refer to the *Owner's Manual* for more details.

### Seat adjustments-Front

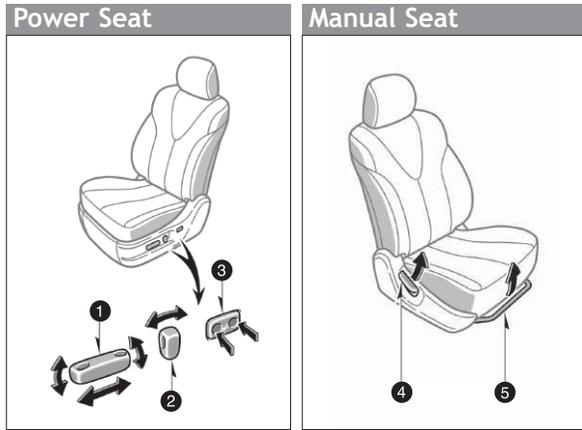


- ① Position and height (driver side only)
- ② Seatback angle
- ③ Lumbar support (driver side only)
- ④ Seatback angle
- ⑤ Position


### Seats-Head restraints

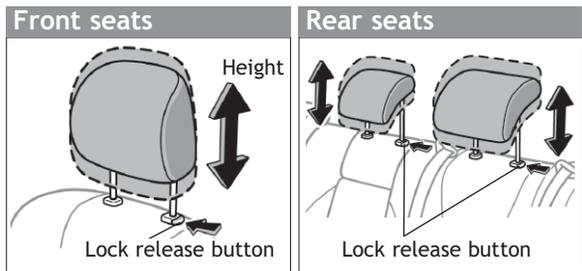

### Seat-Folding rear seat

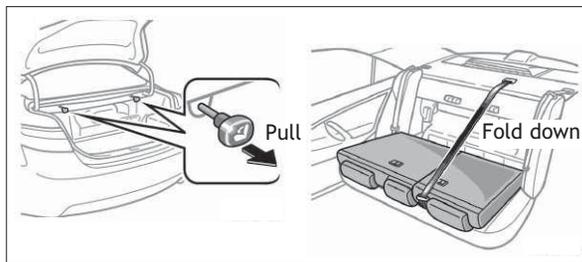

Lights & turn signals

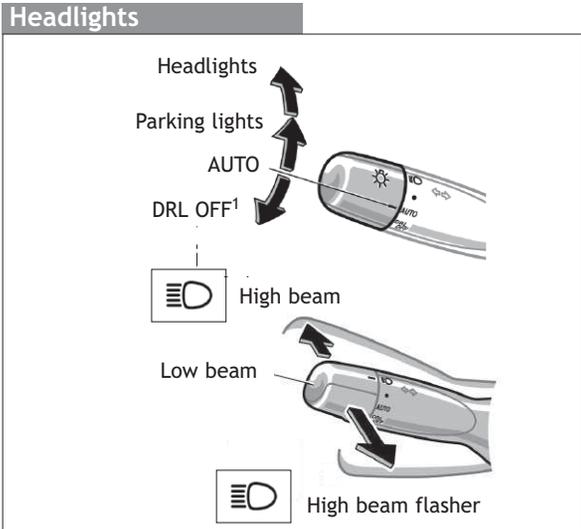


-**Daytime Running Light system (DRL)** Automatically turns on the headlights at a reduced intensity.


-**Automatic light cut off system** Will automatically turn lights off after a delay of thirty (30) seconds, or when the lock switch on remote is pushed.

<sup>1</sup> Turns DRL OFF

Turn signals

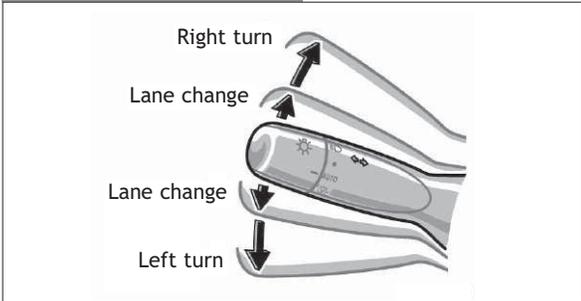


Windshield wiper & washer

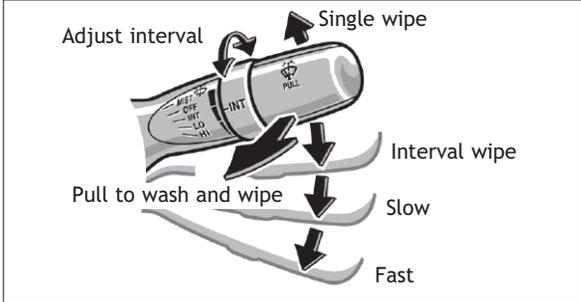


Cruise Control

Turning system ON/OFF

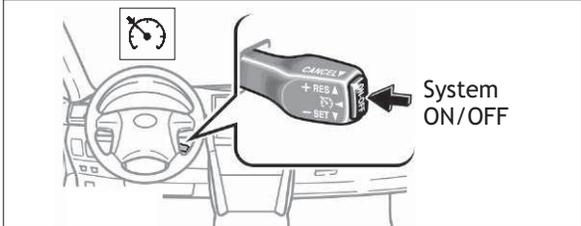

Functions

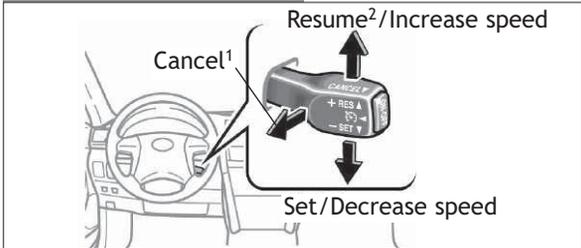

<sup>1</sup> The set speed may also be cancelled by depressing the brake pedal.

<sup>2</sup> The set speed may be resumed once vehicle exceeds 25 mph.

Refer to the *Owner's Manual* for more details.

### Audio

Push to turn ON/OFF

Eject CD

Load CD(s)

Push to adjust tone & balance

View genre/ Push to skip up /down folder

Mode

Seek station/ CD track select

View CD text

AM/Satellite radio

Station/CD track scan

Preset buttons - button functions in other modes indicated above number.

### CD PLAYER

To scan tracks on a disc Push and hold "SCAN." Push again to hold selection.


### CD Changer

-To load one disc Push "LOAD" and insert 1 disc.  
 -To load multiple discs Push and hold "LOAD" until you hear a beep. Insert one disc. **Wait until the green indicator illuminates and shutter opens to insert next disc.**

### RADIO


To preset stations Tune in the desired station and hold down a preset button (1-6) until you hear a beep. Push desired preset button (1-6) to select.  
 To scan stations Push "SCAN." Push and hold to scan preset stations. Push again to hold selection.

### AUX audio jack

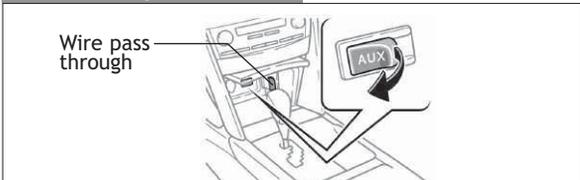

By inserting a mini plug of a commercially available component into the AUX audio jack, you can listen to music from a portable audio device through the vehicle's speaker system.

### Steering wheel controls

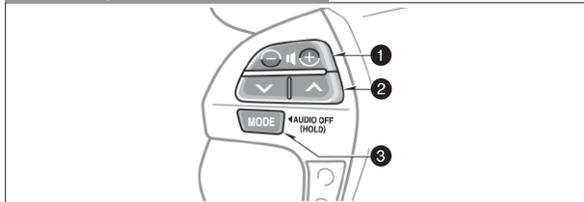

- 1 "- +"  
Volume control
- 2 " ^ v "  
-In radio mode Push to select a preset station; push and hold to seek the next strong station.  
-In CD mode Push to skip up or down to next/previous track.
- 3 "MODE"  
Push to turn audio ON and select an audio mode. Push and hold to turn the audio system "OFF."


### Moonroof (If equipped)

Sliding operation	Tilting operation
<p>Open</p> <p>Close</p>	<p>Tilt</p> <p>Close</p>
<p>Recommended driving position to minimize wind noise.</p>	

### Clock



## Air Conditioning/Heating

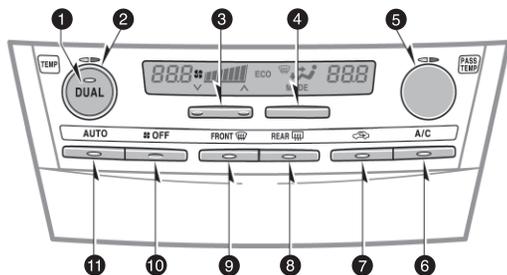


- 1 "DUAL" button  
**Indicator ON:** Separate temperature settings for driver and passenger.  
**Indicator OFF:** Synchronize temperature settings for driver and passenger.
- 2 Driver temperature
- 3 Fan speed
- 4 Air flow vent  
 In "🌬️" or "🌬️" mode, use fresh air ("🚗" indicator light "OFF") to reduce window fogging.
- 5 Passenger temperature
- 6 Air Conditioning ON/OFF
- 7 Fresh or recirculate cabin air
- 8 Rear defogger
- 9 Windshield air flow
- 10 Climate control OFF
- 11 Automatic climate control ON/OFF  
 Adjust the temperature setting, and air flow vents and fan will adjust automatically.

### Plasmacluster™\*

Improves air quality by emitting positive and negative ions into the cabin. This system operates from the driver side vent and a low system noise is normal.


\* This system adopts the plasmacluster technology, manufactured under license from SHARP Corporation. "Plasmacluster™" is a trademark of SHARP Corporation.

### "ECO HEAT/COOL" switch

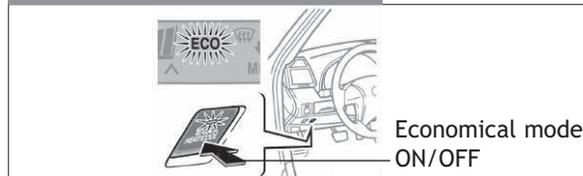


**NOTE:** Slightly improves gas mileage. It may take longer to reach set cabin temperature.


### Steering wheel controls

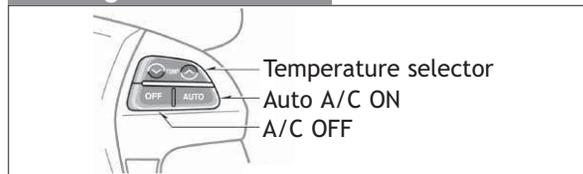

### Seat heaters (if equipped)

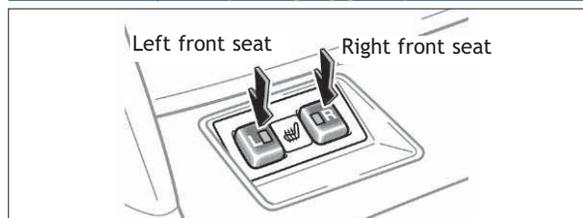

### Windows

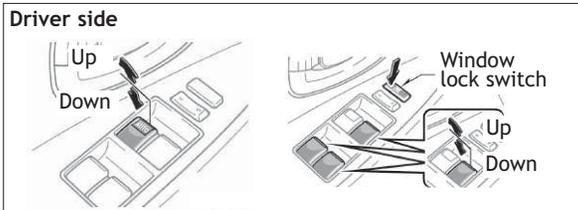


### Window operation

**Automatic operation (Driver side only)** Push the switch completely down and release to fully open. To stop window mid-way, lightly pull the switch up.  
**Window lock switch** Deactivates all passenger windows.\*

\* Driver's window remains operable.


## Multi-information display

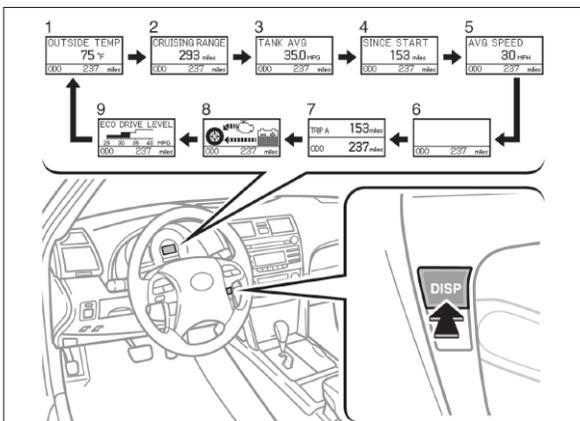

Push "DISP" to change information in the following succession.

- (1) Outside temperature
- (2) Miles left on remaining fuel
- (3) Current gas mileage
- (4) Running distance from engine start
- (5) Average vehicle speed from engine start
- (6) Multi-information display OFF
- (7) Zoom display of odometer and trip meter
- (8) Energy monitor
- (9) Average gas mileage


## Telephone controls (Bluetooth®)

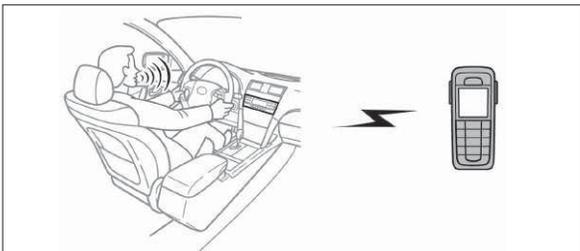


Bluetooth® technology allows placement or receipt of calls without taking your hands from the steering wheel or using a cable to connect the telephone and the system.

Refer to the *Owner's Manual* for more details.

## Cup holders

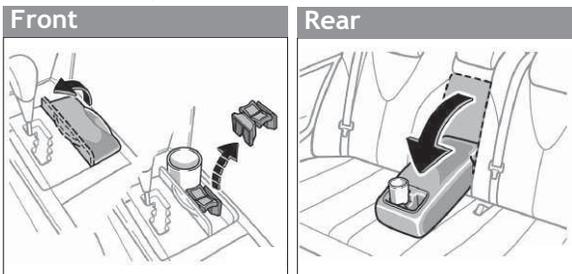


## Power outlets

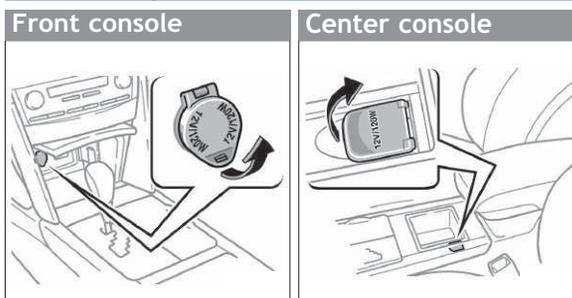

Designed for 12V car accessories. "POWER" switch must be set at ACC or ON to be used.

## Garage door opener (HomeLink®)\*

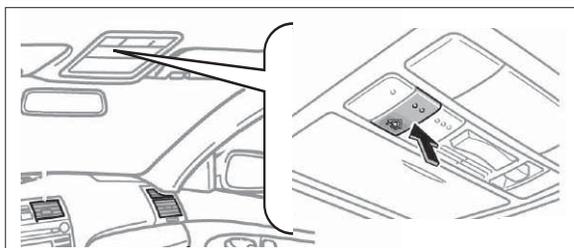

Garage door openers manufactured under license from HomeLink®\* can be programmed to operate garage doors, estate gates, security lighting, etc.

Refer to the *Owner's Manual* for more details. For programming assistance, contact the Toyota Customer Experience Center at 1-800-331-4331, or visit <http://www.homelink.com>


\*HomeLink® is a registered trademark of Johnson Controls, Inc.

# SAFETY AND EMERGENCY FEATURES


## Door locks



## Seat belts-Shoulder belt anchor

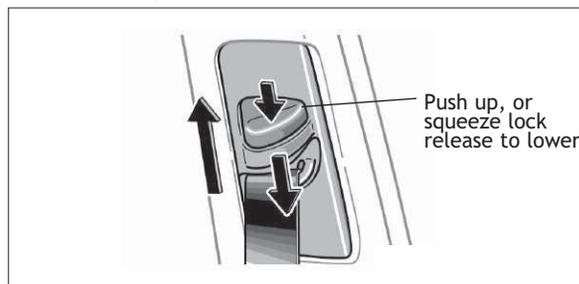


## Doors-Child safety locks

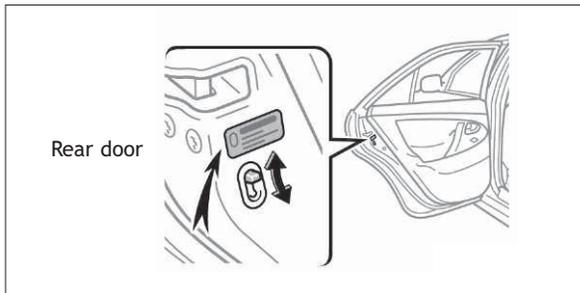


Moving the lever to "LOCK" will allow the door to be opened only from the outside.

## Child comfort guide

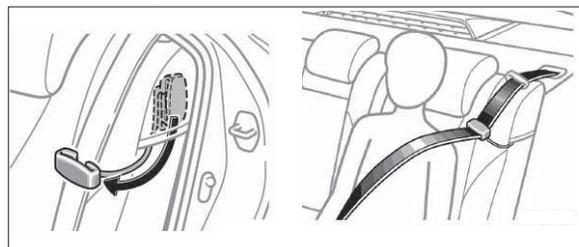

Rear seat outside position guides provide added comfort for children who have outgrown child restraints.


## Seat belts

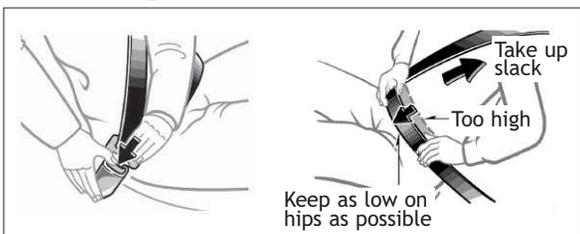

If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.


## Tire Pressure Warning System reset

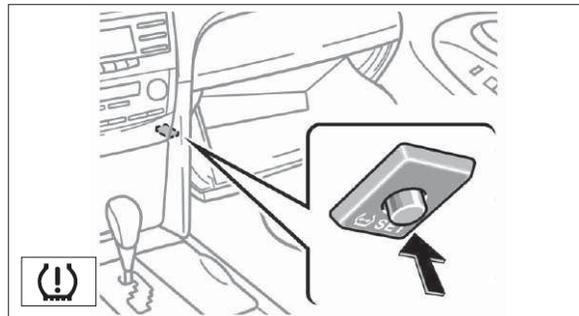

If tire pressure becomes low on any of the tires (including spare), indicator comes on. Pushing reset button should not turn off the light. Correctly adjusting tire inflation will turn off the light after a few minutes. Push and hold reset button until the indicator blinks three times after replacing tire or wheels.


## Jump starting

### 12-volt battery location

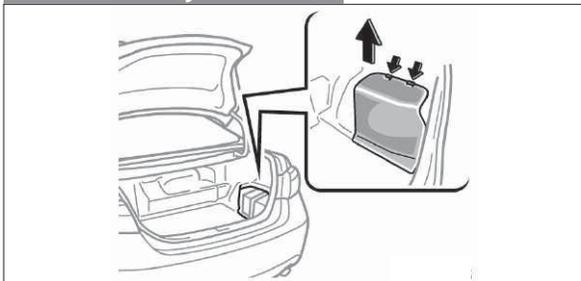

To access the battery, remove the cover.

### Connecting jumper cables

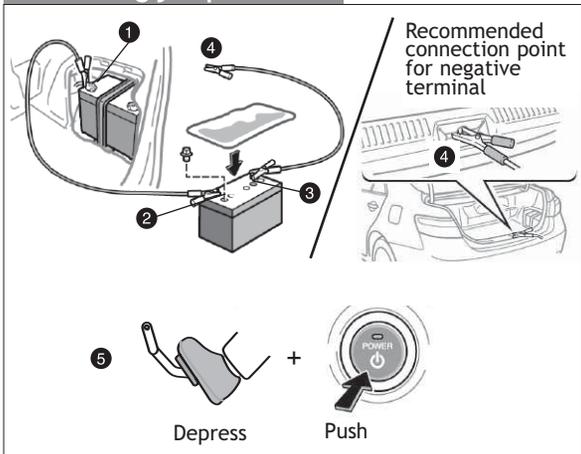


- ❶ Connect positive (red) jumper cable to the positive (+) terminal on the discharged 12-volt battery.
- ❷ Connect positive (red) jumper cable to the positive (+) terminal on the booster battery.
- ❸ Connect negative (black) jumper cable to the negative (-) terminal on the booster battery.
- ❹ Connect negative (black) jumper cable to the recommended connecting point of the vehicle with the discharged battery.
- ❺ Depress brake pedal, and press “POWER” switch to start the vehicle.


Refer to the *Owner’s Manual* for more details.

## Spare tire & tools

### Tool location

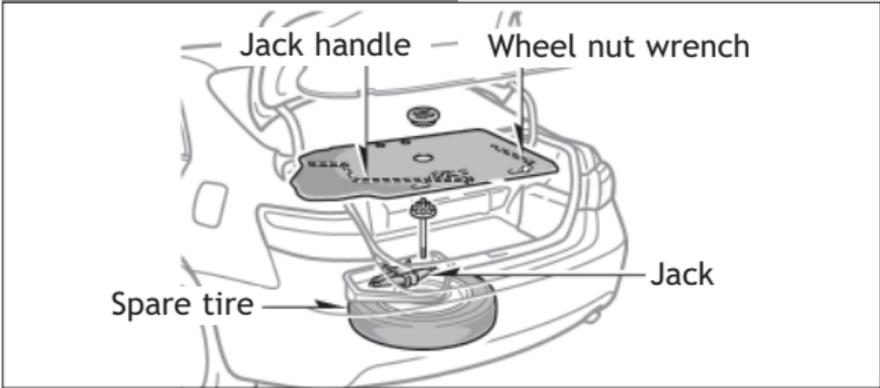


### Removing the spare tire

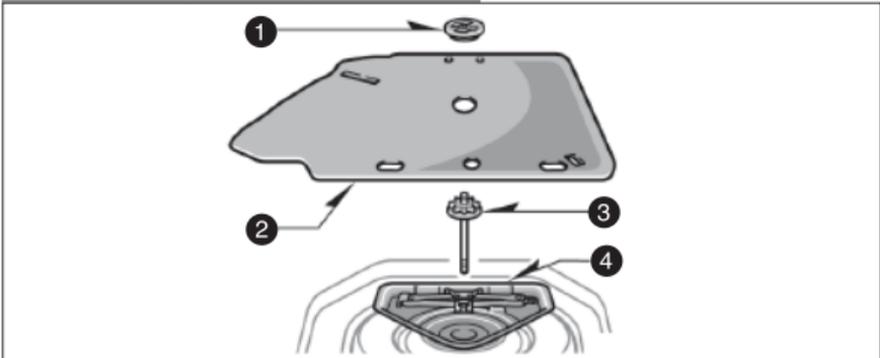

- ❶ Loosen and remove the nut.
- ❷ Remove the spare tire cover.
- ❸ Loosen and remove the bolt.
- ❹ Remove the jack tray.

Refer to the *Owner's Manual* for tire changing and jack positioning procedures.

## Trunk-Internal release

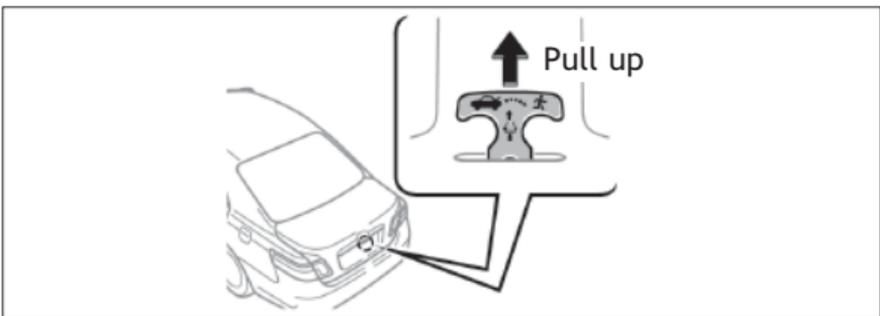

## Fuel filler door-Internal release

