

Customer Experience Center
1-800-331-4331



 **TOYOTA** Owners
ToyotaOwnersOnline.com

moving forward ▶

TACOMA



2007
Pocket Reference Guide

MN 00452-PRG07-TAC
Printed in USA 08/06

2007 Tacoma

This *Pocket Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Pocket Reference Guide* is not intended as a substitute for the *Owner's Manual* located in your vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Tacoma.

! A word about safe vehicle operations

This *Pocket Reference Guide* is not a full description of Tacoma operations. Every Tacoma owner should review the *Owner's Manual* that accompanies this vehicle.


Pay special attention to the boxed "⚠CAUTION" information highlighted in this reference guide and throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

⚠CAUTION

This vehicle will handle and maneuver differently from an ordinary passenger car because it is also designed for off-road use. It has a significantly higher rollover rate than other types of vehicles. Refer to the *Owner's Manual* for important rollover information.

All information in this *Pocket Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

Doors-Child safety locks (double cab only)

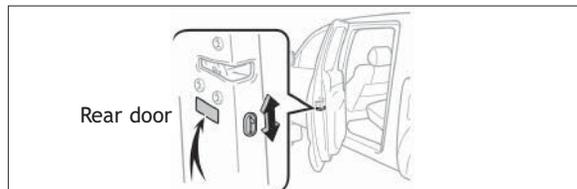


Moving the lever to "LOCK" will allow the door to be opened only from the outside.


Spare tire & tools

Tool location


Regular cab models
-behind the seatback

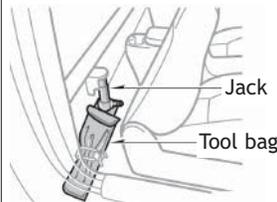


Double cab models
-under the rear seat

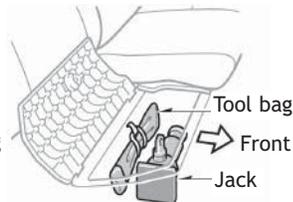

Access cab models
-under the rear seat

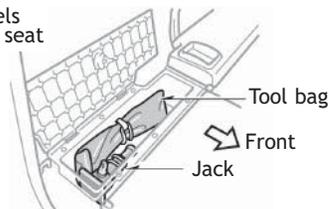

Removing the spare tire

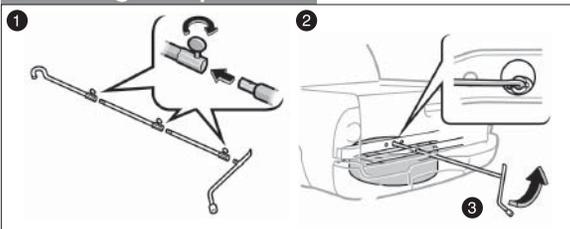

- 1 Assemble the jack handle.
- 2 Insert the jack handle end into the lowering screw.
- 3 Turn the jack handle counterclockwise.

Refer to the *Owner's Manual* for tire changing and jack positioning procedures.

INDEX

Item	Page no.
OVERVIEW	
Engine maintenance	7
Fuel tank door release and cap	6
Hood release	6
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Keyless entry	6
FEATURES/OPERATIONS	
Accessory meter	16
Air Conditioning/Heating	16
Audio	14-15
Auto LSD (Auto Limited Slip Differential)	19
Automatic Transmission	8
Bottle holders	18
Clock	10
Cruise control	17
Cup holders	18
Door locks	19
Four-wheel drive	9
Lights & turn signals	11
Light control-Instrument panel	19
Manual Transmission	8
Parking brake	13
Power outlets	13
Rear differential lock	17
Seat adjustments-Front	10
Seats-Head restraints	10
Tilt and telescopic steering wheel	9
Windows-Power	12
Windshield wiper & washer	12
SAFETY AND EMERGENCY FEATURES	
Doors-Child safety locks	21
Seat belts	20
Seat belts-Shoulder belt anchor	20
Spare tire & tools	21
Tire Pressure Warning System reset	20

OVERVIEW


FEATURES/OPERATIONS

SAFETY AND EMERGENCY FEATURES



OVERVIEW

Instrument panel

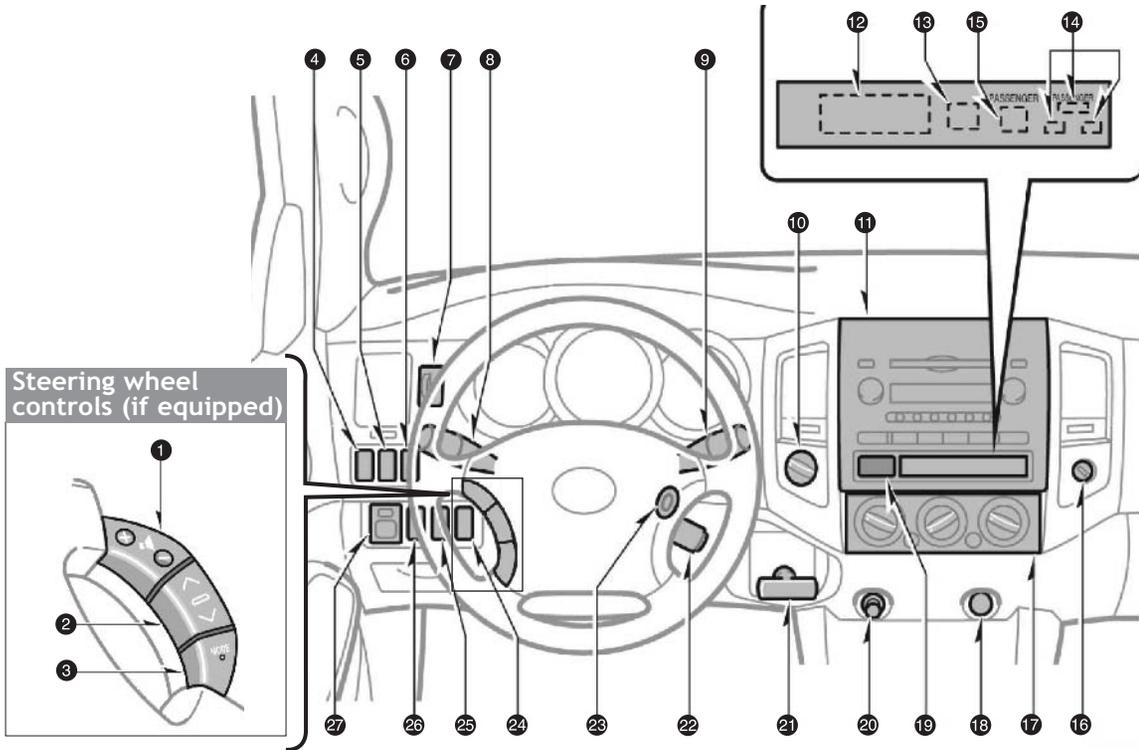


- ❶ Volume control buttons (for audio)
- ❷ “^ v” switch (for audio)
- ❸ “MODE” button (for audio)
- ❹ Front fog light switch¹
- ❺ Rear differential lock switch¹
- ❻ 115V AC Power outlet ON/OFF switch¹
- ❼ Instrument panel light control
- ❽ Headlight and turn signal controls
- ❾ Wiper and washer controls
- ❿ Two-wheel/Four-wheel drive selector¹
- ⓫ Audio system
- ⓬ Clock
- ⓭ Theft deterrent system/Engine immobilizer indicator¹
- ⓮ Front passenger seat belt reminder
- ⓯ Front passenger occupant classification indicator¹ or front passenger airbag ON/OFF indicator¹
- ⓰ Front passenger airbag manual ON/OFF switch¹
- ⓱ Air Conditioning controls
- ⓲ 12V DC Power outlet
- ⓳ Emergency flasher switch
- ⓴ 12V DC Power outlet/Cigarette lighter
- ⓵ Parking brake lever (stick type)²
- ⓶ Cruise control¹
- ⓷ Ignition switch
- ⓸ Roll sensing curtain shield airbags OFF switch
- ⓹ “DAC” (Downhill Assist Control) button¹ or clutch start cancel switch¹
- ⓺ “VSC OFF” switch¹
- ⓻ Power rear view mirror control switches¹


¹ If equipped

² Manual Transmission only.
Automatic Transmissions are equipped with a parking brake pedal.


Instrument cluster

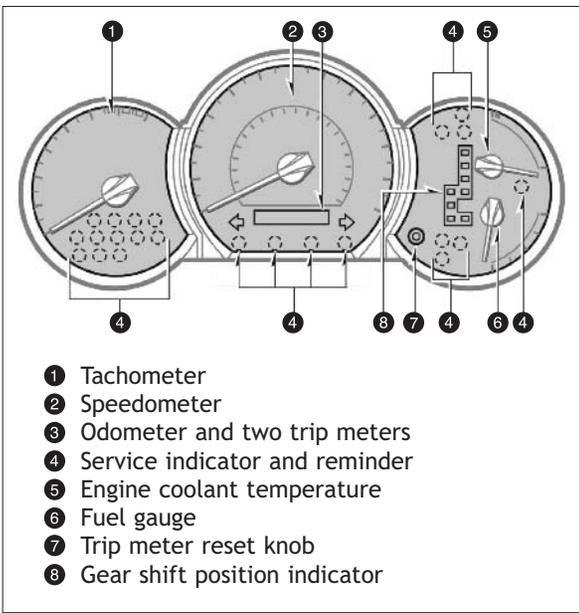

Indicator symbols

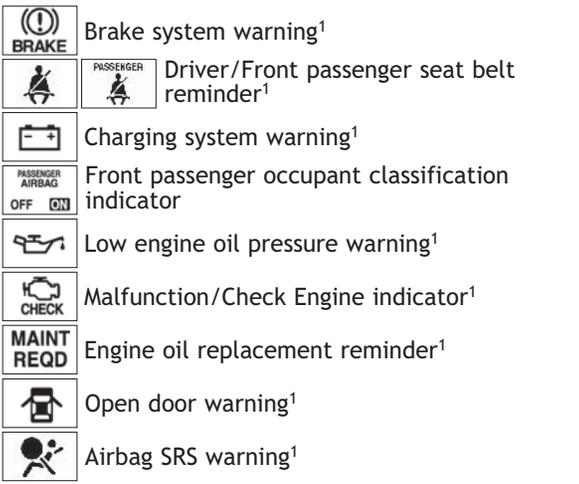

¹ For details, refer to "Service reminder indicators and warning buzzers," Section 1-6, 2007 Owner's Manual.
² If this light flashes, refer to "Four-wheel drive system," Section 1-7, 2007 Owner's Manual.
³ If this light flashes, refer to "Rear differential lock system,"

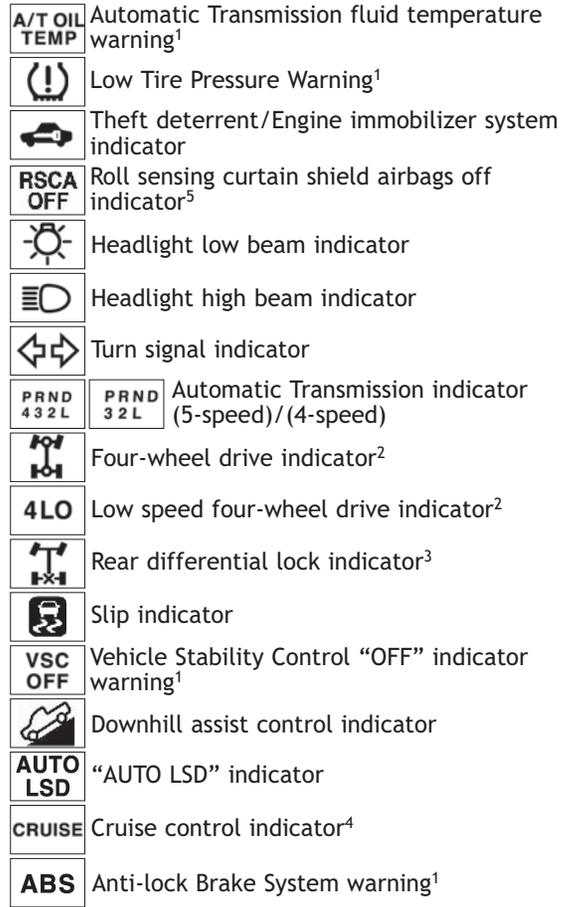

CAUTION

When the anti-lock brake system (ABS) function is in action, you may feel the brake pedal pulsating and hear a noise. In this situation, to let the anti-lock brake system work for you, just hold the brake pedal down more firmly. Do not pump the brake as this will result in reduced braking performance.

Section 1-7, 2007 Owner's Manual.
⁴ If this light flashes, refer to "Cruise control," Section 1-7, 2007 Owner's Manual.
⁵ If this light flashes, refer to "Roll sensing of curtain shield airbags off switch," Section 1-3, 2007 Owner's Manual.

Keyless entry


Locking operation

Push



Unlocking operation

Push ONCE: Driver door
TWICE: All doors

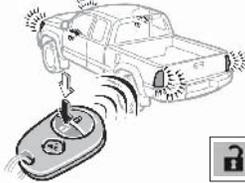

NOTE: After unlocking, if a door is not opened within 30 seconds, all doors will relock for safety.


Alarm operation

Push and hold



Fuel tank door release and cap

Pull

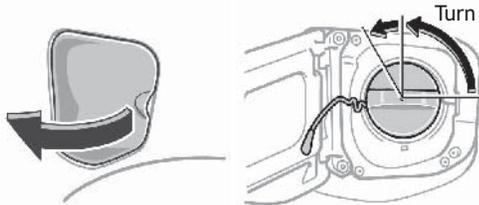


NOTE: Tighten until one click is heard. If the cap is not tightened enough, Check Engine “” indicator may illuminate.

Hood release


Pull

Pull up latch and raise hood

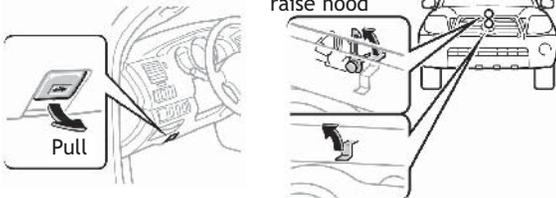


Engine maintenance

4 cylinder (2TR-FE) engine

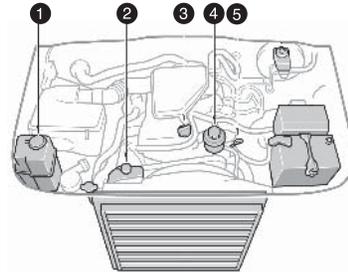

6 cylinder (1GR-FE) engine

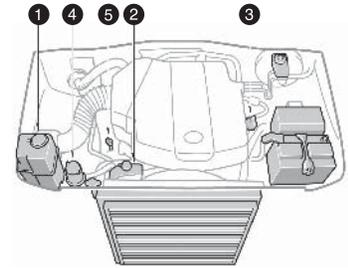


- ① Windshield washer fluid tank
- ② Engine coolant reservoir
- ③ Engine oil filler cap
- ④ Power steering fluid reservoir
- ⑤ Engine oil level dipstick

Note: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the “Owner’s Warranty Information Booklet,” “Scheduled Maintenance Guide” or “Owner’s Manual Supplement.”

Automatic Transmission (if equipped)


5-speed models

- P** Park¹
- R** Reverse
- N** Neutral
- D** Drive
- 4** Fourth gear
- 3** Third gear
- 2** Second gear
- L** First gear

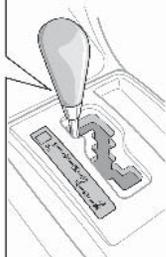

4-speed models

- P** Park¹
- R** Reverse
- N** Neutral
- D** Drive
- 3** Third gear
- 2** Second gear
- L** First gear

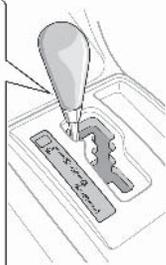

¹ The ignition switch must be ON, and the brake pedal depressed to shift from “Park.”

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the “D” position.

Manual Transmission (if equipped)

Tacoma is available with optional 5-speed or 6-speed Manual Transmission. For safety, the engine will not start unless the clutch pedal is FULLY depressed.


Refer to the *Owner’s Manual* for more details.

Four-wheel drive (if equipped)

- H2** High speed (2WD)
- H4** High speed (4WD)
Shift when speed is below 62 mph.
- L4** Low speed (4WD)
Shift into neutral while stopped, or depress clutch pedal at speeds below 2 mph.

For best fuel economy and performance under normal driving conditions, keep in “H2” position.


Tilt and telescopic steering wheel

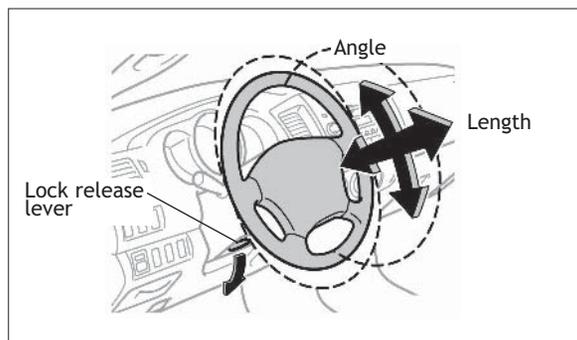

Hold wheel, push lever down, set angle and length, then return lever.

Note: Do not attempt to adjust while the vehicle is in motion.


Seat adjustments-Front

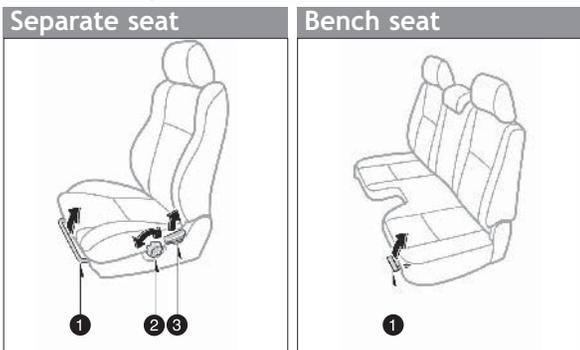


- ❶ Position
- ❷ Lumbar support*
- ❸ Seatback angle

* If equipped

Seats-Head restraints

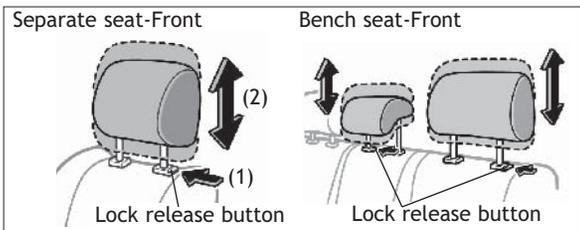


Clock

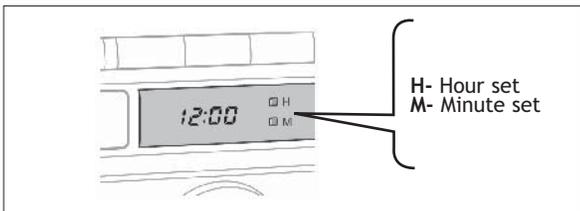

Lights & turn signals

Headlights

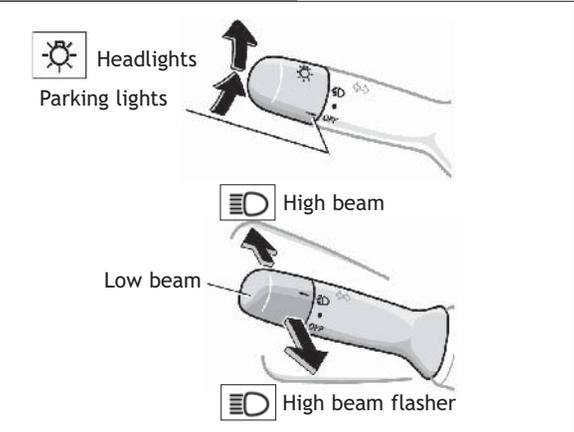


-Daytime Running Light system (DRL)

Automatically turns on the turn signal lights at a reduced intensity.


-Automatic light cut off system Automatically turns lights off after a delay of 30 seconds, or the lock switch on remote may be pushed.

Front fog lights (if equipped)

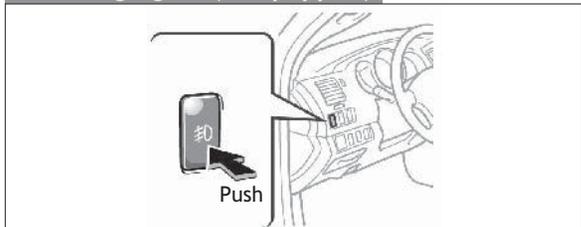


Front fog lights come on only when the headlights are on low beam.

Turn signals

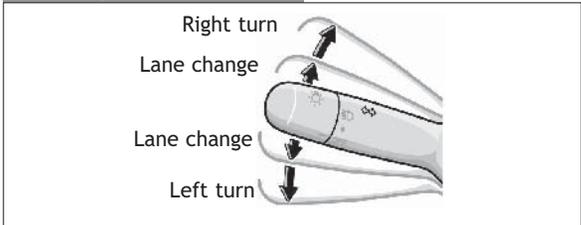


Windshield wiper & washer

With intermittent wiper

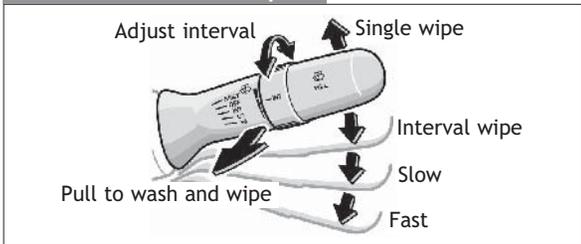


Without intermittent wiper

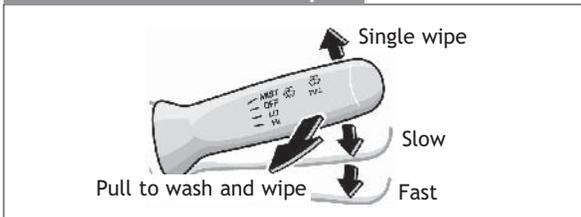


Windows-Power (if equipped)

Access cab models

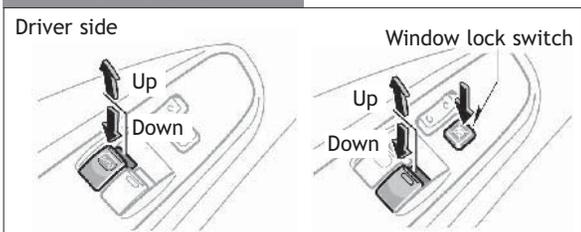

Double cab models

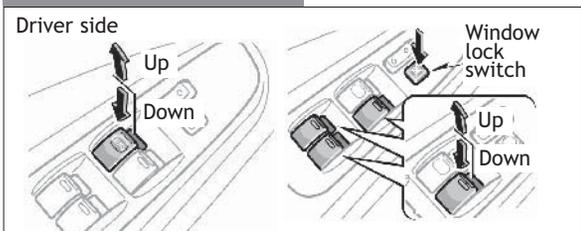


Automatic down operation (driver side only)
Push the switch completely down and release to fully open. To stop window midway, lightly pull up on the switch.

Window lock switch Deactivates all passenger windows. Driver's window remains operable.


Parking brake

Automatic Transmission

Set: Depress
Release: Depress again

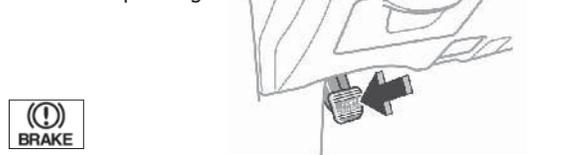


Manual Transmission

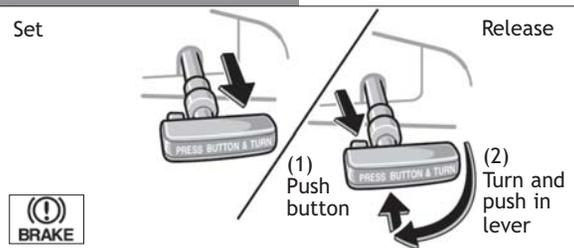


Power outlets

12V DC

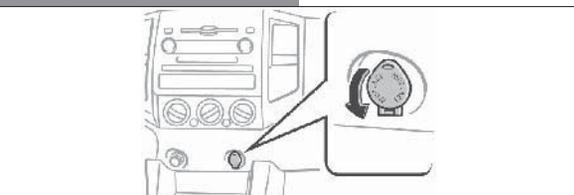

Key must be in the "ON" position to be used.

115V AC (if equipped)

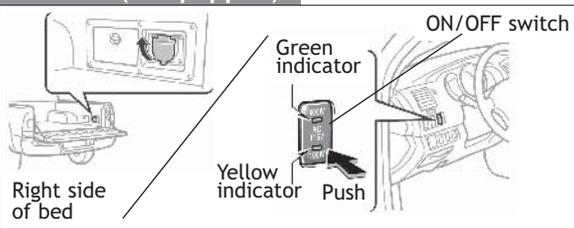


The engine must be running for use.

Yellow Light Only Max Capacity 115V AC/100W
Green & Yellow Lights Max Capacity 115V AC/400W


Refer to the *Owner's Manual* for more details.

Audio


Type 1

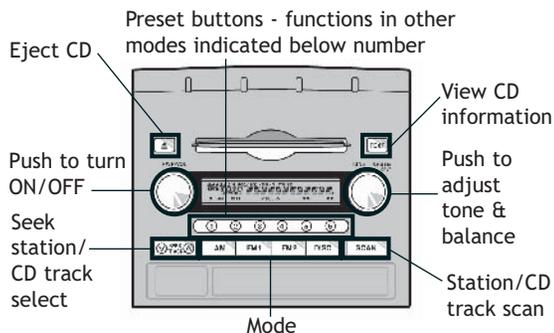

Type 2 additional functions

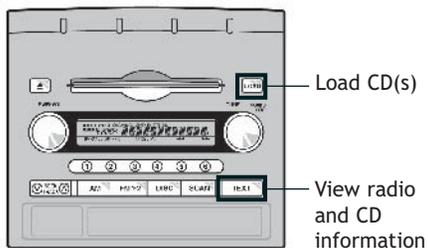

Type 3 additional functions

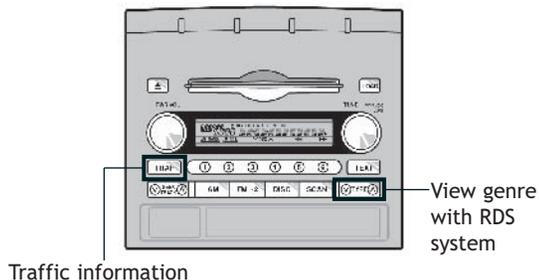

CD PLAYER

To scan tracks on a disc Push and hold “SCAN.” Push again to hold selection.

CD changer (Type 2 and 3 only)

-To load one disc Push “LOAD” and insert one disc.
-To load multiple discs Push and hold “LOAD” until you hear a beep. Insert one disc. Shutter will close and then re-open for next disc.


RADIO

To preset stations Tune in the desired station and hold down a preset button (1-6) until you hear a beep. Push desired preset button (1-6) to select.
To scan stations Push and hold “SCAN” to scan preset stations. Push again to hold selection.

RDS (Radio Data System - FM, Type 3 only)


-Push “TYPE” to select station genre.
-Push steering wheel switches “^” or “v,” or preset button (1-6) to select stations within genre.
-Push “TEXT” to receive information transmitted from radio stations.

Steering wheel switches (if equipped)

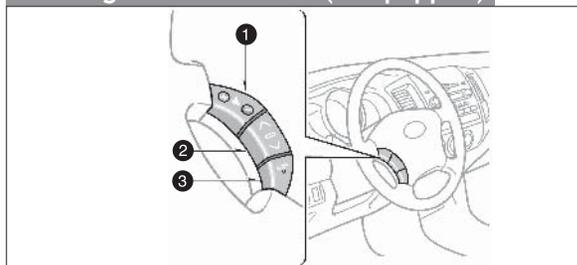

- ① “ - + ”
Volume control
- ② “ ^ v ”
-In radio mode Push to select a preset station; push and hold to seek the next strong station.
-In CD mode Push to skip up or down to the next/previous track.
- ③ “MODE”
Push to turn audio ON and select an audio mode. Push and hold to turn the audio system “OFF.”

Air Conditioning (if equipped)/Heating

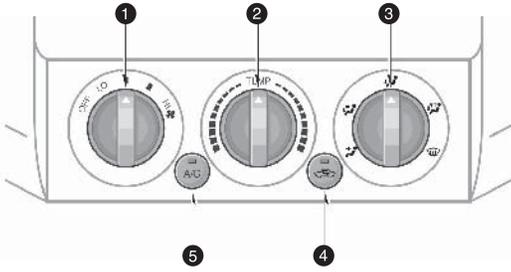


1 Fan speed
 2 Temperature
 3 Air flow vent
 4 Fresh or recirculate cabin air
 5 Air Conditioning ON/OFF (if equipped)

In “” or “” mode, use fresh air (“” indicator “OFF”) to reduce window fogging.

Use fresh air to quickly cool interior, then change to recirculate for cooler air.

Accessory meter (if equipped)

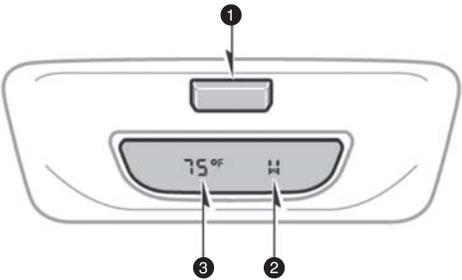


1 E/M (English/Metric) button
 2 Compass
 3 Outside temperature display

- 1 E/M (English/Metric) button To select Fahrenheit or Celsius.
- 2 Compass
- 3 Outside temperature display


Cruise control (if equipped)

Turning system ON/OFF

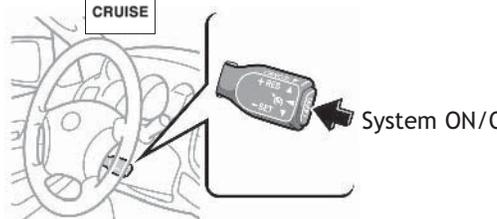

CRUISE
 System ON/OFF

Functions

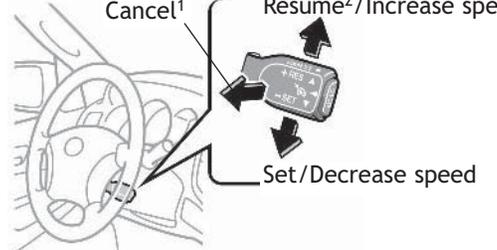

Cancel¹
 Resume²/Increase speed
 Set/Decrease speed

- ¹ The set speed may also be cancelled by depressing the brake pedal.
- ² The set speed may be resumed once vehicle speed exceeds 25 mph.

Rear differential lock (if equipped)




ABS VSC OFF
 Rear differential Lock/Unlock


Use **ONLY** when wheel spinning occurs in a ditch, or on slippery or unpaved surfaces. **DO NOT USE THE REAR DIFFERENTIAL LOCK IN CONDITIONS OTHER THAN SPECIFIED IN THE OWNER'S MANUAL. UNLOCK THE DIFFERENTIAL ONCE THE VEHICLE MOVES OUT OF THE TROUBLE SPOT.**

Refer to your *Owner's Manual* for complete details on this system before attempting to use it.


Bottle holders

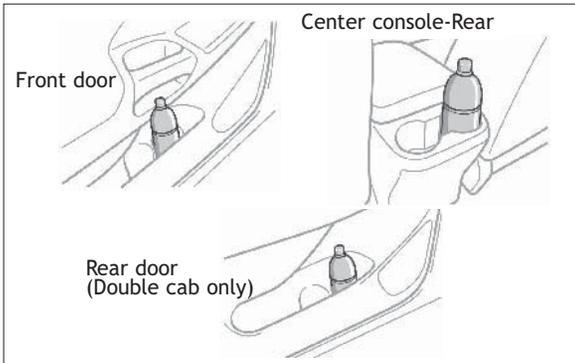


Cup holders

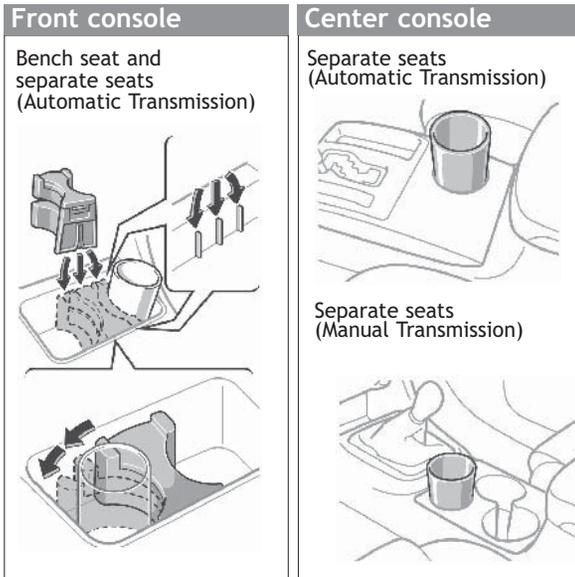

Door locks (if equipped)

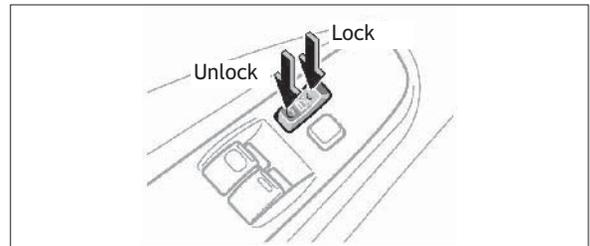

Auto LSD (Auto Limited Slip Differential)(if equipped)

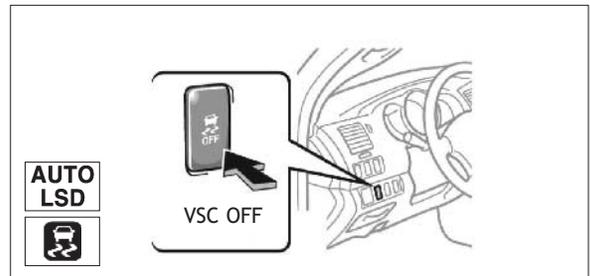


Briefly push the “VSC OFF” switch to activate Auto LSD. To deactivate, briefly push the switch again.

Note: *ONLY works in 2-wheel drive at speeds under 62 mph. Should ONLY be used when wheel spinning occurs on slippery or unpaved surfaces.*


Refer to the *Owner’s Manual* for more details on this system before attempting to use it.

Light control-Instrument panel

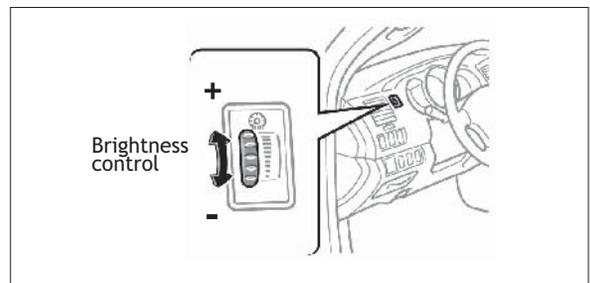

SAFETY AND EMERGENCY FEATURES


Seat belts

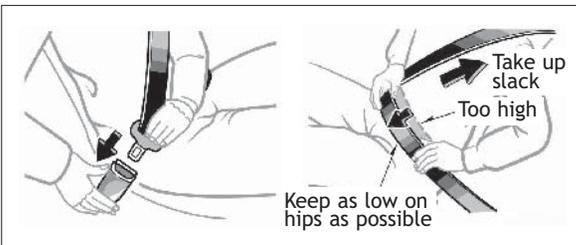


If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.

Seat belts-Shoulder belt anchor

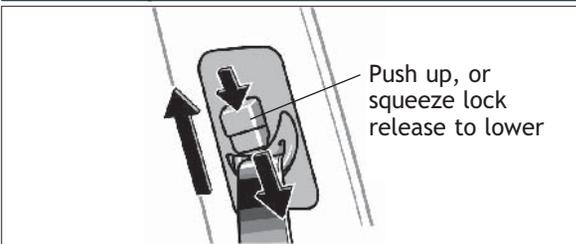

Tire Pressure Warning System reset

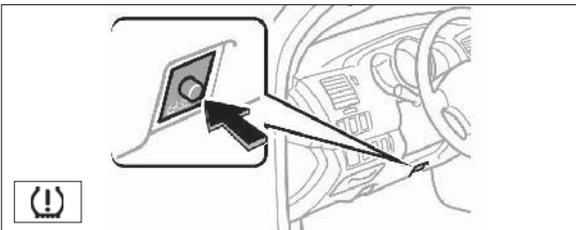

If tire pressure becomes critically low on any of the tires (including spare), indicator comes on. Pushing “SET” button should not turn off the light. Correctly adjusting tire inflation will turn off the light after a few minutes. After replacing/rotating tire or wheels, push and hold “SET” button until the indicator blinks three times.

Refer to the *Owner's Manual* for more details.

2007 Tacoma

This *Pocket Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Pocket Reference Guide* is not intended as a substitute for the *Owner's Manual* located in your vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Tacoma.

! A word about safe vehicle operations

This *Pocket Reference Guide* is not a full description of Tacoma operations. Every Tacoma owner should review the *Owner's Manual* that accompanies this vehicle.


Pay special attention to the boxed "⚠CAUTION" information highlighted in this reference guide and throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

⚠CAUTION

This vehicle will handle and maneuver differently from an ordinary passenger car because it is also designed for off-road use. It has a significantly higher rollover rate than other types of vehicles. Refer to the *Owner's Manual* for important rollover information.

All information in this *Pocket Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

Doors-Child safety locks (double cab only)

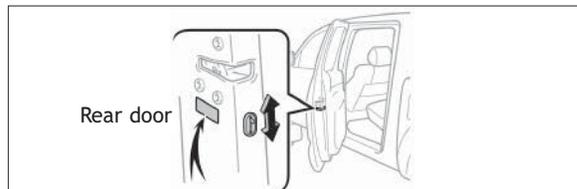


Moving the lever to "LOCK" will allow the door to be opened only from the outside.


Spare tire & tools

Tool location


Regular cab models
-behind the seatback

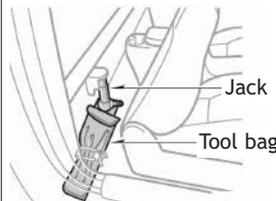


Double cab models
-under the rear seat

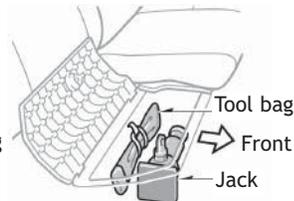

Access cab models
-under the rear seat

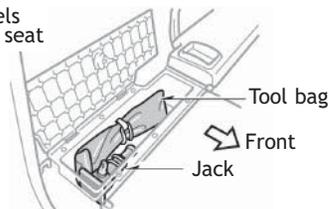

Removing the spare tire

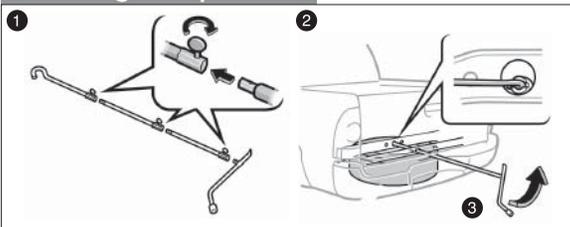

- 1 Assemble the jack handle.
- 2 Insert the jack handle end into the lowering screw.
- 3 Turn the jack handle counterclockwise.

Refer to the *Owner's Manual* for tire changing and jack positioning procedures.