

Customer Experience Center
1-800-331-4331



moving forward ▶

RAV4



2007
Pocket Reference Guide

MN 00452-PRG07-RAV
Printed in USA 7/06

2007 RAV4

This *Pocket Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Pocket Reference Guide* is not intended as a substitute for the *Owner's Manual* located in the vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of the vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new RAV4.

! A word about safe vehicle operations

This *Pocket Reference Guide* is not a full description of RAV4 operations. Every RAV4 owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed "⚠CAUTION" information highlighted in this reference guide and throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

⚠CAUTION

This utility vehicle has a significantly higher rollover rate than other types of vehicles. Refer to the *Owner's Manual* for important rollover information.


All information in this *Pocket Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

Spare tire & tools


Tool location

Luggage compartment
Inside left side box

Luggage compartment
Inside right side box

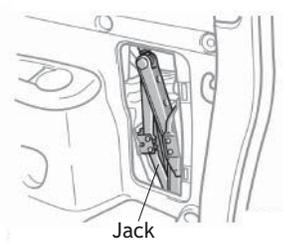

Removing the spare tire

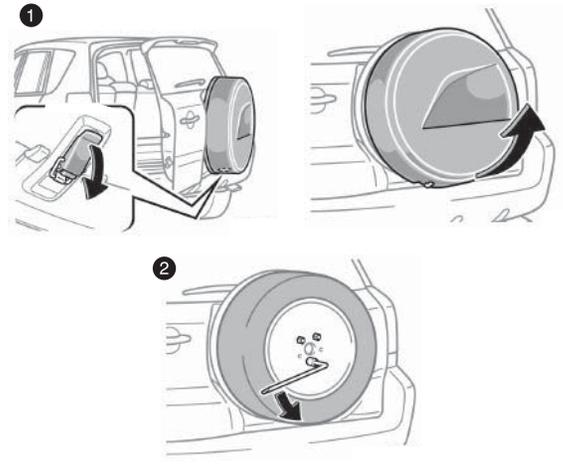

- 1 To remove the spare tire cover,* open the back door. Unhook the latch on the bottom of the cover. After closing the back door, remove the cover.

NOTE: To prevent theft, the latch can only be released when the back door is opened.

- 2 To remove the spare tire, turn the wheel nuts counterclockwise with the wheel nut wrench and remove.

Refer to the *Owner's Manual* for tire changing and jack positioning procedures.

* If equipped

INDEX

Item

Page no.

OVERVIEW

Engine maintenance	8
Fuel tank door release and cap	6
Hood release	7
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
<i>Keyless entry</i> ¹	6-7

FEATURES/OPERATIONS

Active torque control 4WD	10
Air Conditioning/Heating	16-17
Audio	18-19
Auto LSD (Limited Slip Differential)	21
Automatic transmission	9
Bottle holders	17
Clock	17
Cruise control	23
Cup holders	23
Door locks	21
Light control-Instrument panel	22
Lights & turn signals	14
Moonroof	20
Parking brake	15
Power outlets	22
Rear seat entertainment system	20
Seat adjustments-Front	10
Seat adjustments-Second row seats	11
Seat heaters	16
Seats-Head restraints	11
Seats-Folding down second row seats	12
Seats-Stowing third row seats	13
Telephone controls (Bluetooth®)	21
Tilt and telescopic steering wheel	15
Windows	15
Windshield wiper & washer	13

SAFETY AND EMERGENCY FEATURES

Doors-Child safety locks	24
Seat belts	24
Seat belts-Shoulder belt anchor	24
Spare tire & tools	25
Tire Pressure Warning System	24

OVERVIEW

FEATURES/OPERATIONS

SAFETY AND EMERGENCY FEATURES




¹ Visit your Toyota dealer for information on customizing this feature.

OVERVIEW

Instrument panel

Steering wheel controls

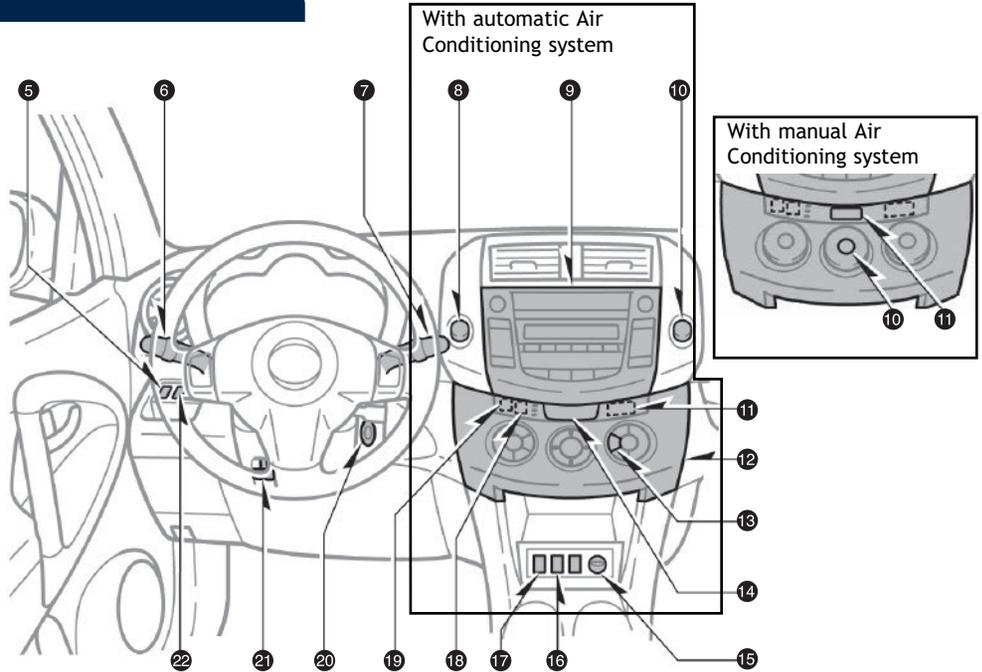


- ❶ Steering wheel audio control
- ❷ Telephone controls¹
- ❸ Speech command button¹
- ❹ Cruise control
- ❺ Instrument panel light control
- ❻ Headlight, turn signal and front fog light¹ control
- ❼ Wiper and washer controls
- ❽ Four-wheel drive lock switch (4WD models) or "AUTO LSD" switch (2WD models)
- ❾ Audio system
- ❿ Emergency flasher switch
- ⓫ Front passenger occupant classification indicator
- ⓬ Air Conditioning controls
- ⓭ Rear window and outside rear view mirror defogger switch¹

- ⓮ Clock and Air Conditioning display
- ⓯ 12V DC Power outlet
- ⓰ Seat heater switch¹
- ⓱ Downhill Assist Control (DAC) switch
- ⓲ Front passenger seat belt reminder light
- ⓳ Engine immobilizer indicator¹
- ⓴ Ignition switch
- ⓵ Tilt and telescopic steering release
- ⓶ 115V AC Power outlet ON/OFF switch¹

¹ If equipped

Instrument cluster

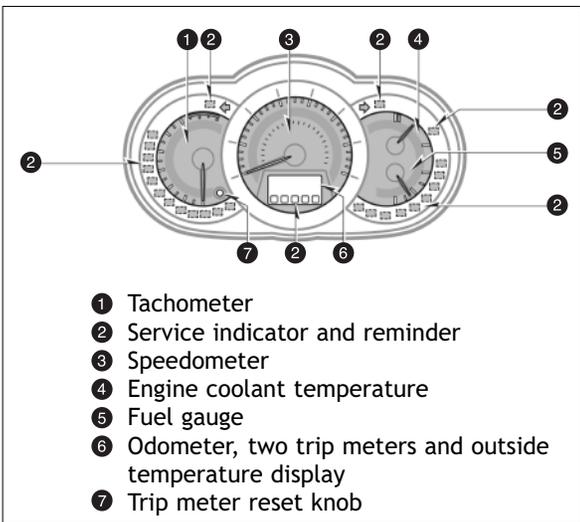

Indicator symbols

-  Brake system warning¹
-  Driver/Front passenger seat belt reminder¹ (alarm will sound if speed is over 12mph)
-  Charging system warning¹
-  Low engine oil pressure warning¹
-  Malfunction/Check Engine indicator¹
-  Low fuel level warning¹
-  Engine oil replacement reminder¹
 - Vehicle Stability Control warning¹
 - "AUTO LSD" warning¹
 - Traction Control warning¹
 - Downhill Assist Control warning¹
 - Hill-start Assist Control warning¹
-  VSC
-  Open door warning¹

¹ For details, refer to "Service reminder indicators and warning buzzers," Section 1-6, 2007 Owner's Manual.
² For details, refer to "Active torque control 4WD system," Section 1-7, 2007 Owner's Manual.


-  Airbag SRS warning¹
-  Automatic Transmission fluid temperature warning¹
-  Low Tire Pressure Warning¹
-  "4WD" warning²
-  Electric power steering system warning¹
-  Low windshield washer fluid level warning¹
-  Front passenger occupant classification indicator
-  Headlight high beam indicator
-  Turn signal indicator
-  Front fog light indicator
-  Automatic transmission indicator (4-speed)¹
-  Automatic transmission indicator (5-speed)¹
-  Four-wheel drive lock indicator²
-  Slip indicator
-  "AUTO LSD" indicator
-  Downhill Assist Control indicator
-  Cruise control indicator³
-  Anti-lock Brake System warning¹

CAUTION

When the Anti-lock Brake System (ABS) function is in action, you may feel the brake pedal pulsating and hear a noise. In this situation, to let the Anti-lock Brake System work for you, just hold the brake pedal down more firmly. Do not pump the brake as this will result in reduced braking performance.

³ If this light flashes, refer to "Cruise control," Section 1-7, 2007 Owner's Manual.

Fuel tank door release and cap

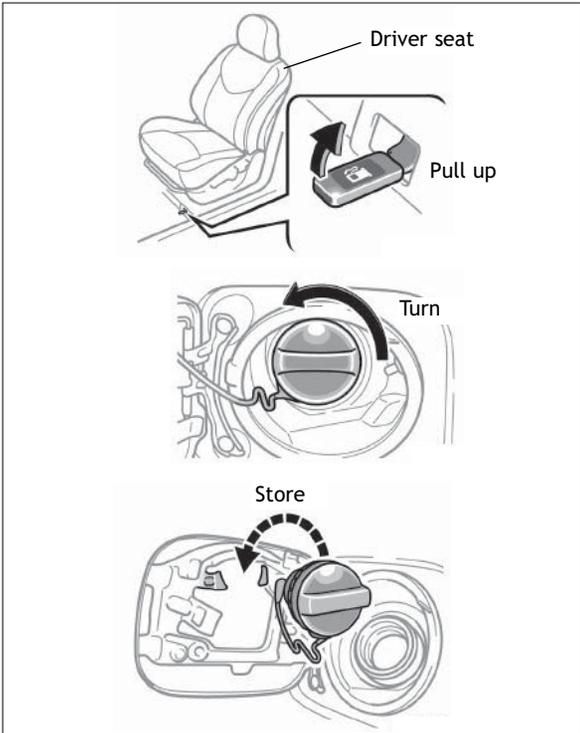


NOTE: Tighten until one click is heard. If the cap is not tightened enough, Check Engine “” indicator may illuminate.

Keyless entry

Beep sound can be switched “ON” or “OFF.” Refer to the *Owner’s Manual* for more details.

Locking operation

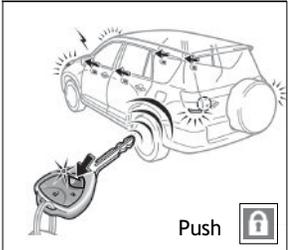


Unlocking operation




NOTE: After unlocking, if a door is not opened within 30 seconds, all doors will relock for safety.

Alarm operation

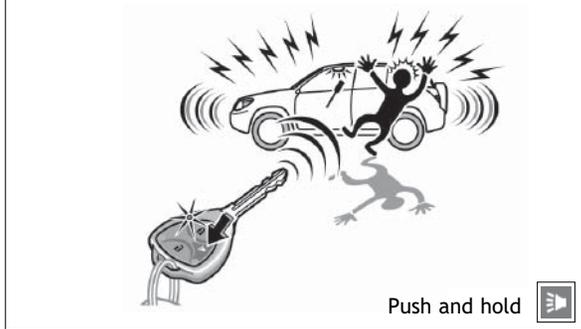


Hood release

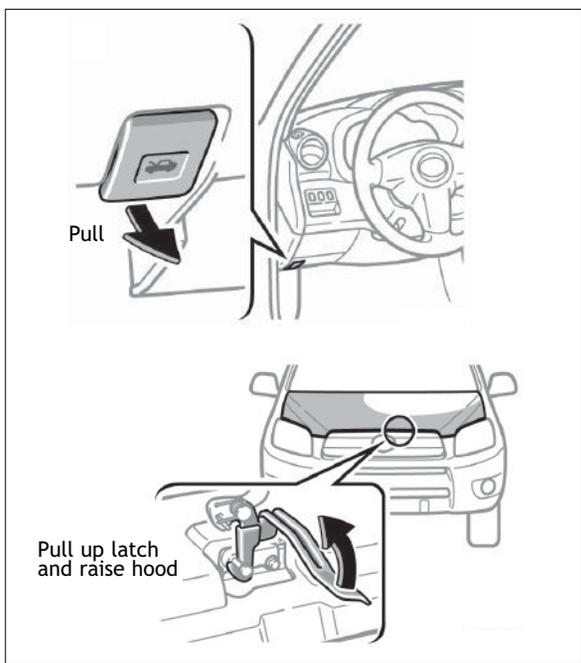


Engine maintenance

4 cylinder (2AZ-FE) engine

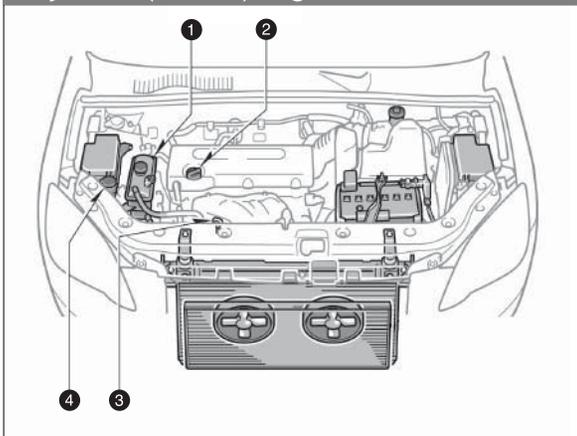

6 cylinder (2GR-FE) engine

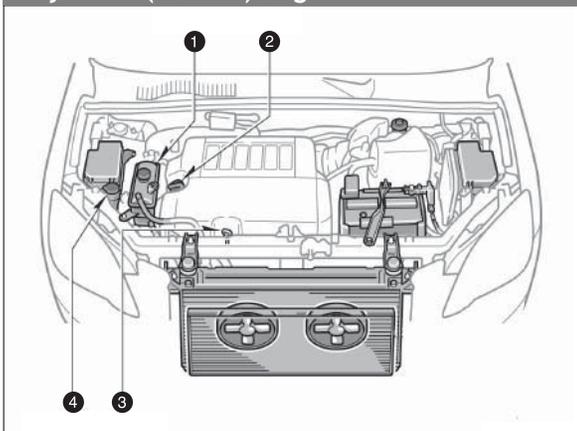


- ① Engine coolant reservoir
- ② Engine oil filler cap
- ③ Engine oil level dipstick
- ④ Windshield and back window washer fluid tank

Note: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the "Owner's Warranty Information Booklet," "Scheduled Maintenance Guide" or "Owner's Manual Supplement."

Automatic transmission


4-speed models

- P** Park¹
- R** Reverse
- N** Neutral
- D** Drive
- 3** Third gear
- 2** Second gear
- L** First gear

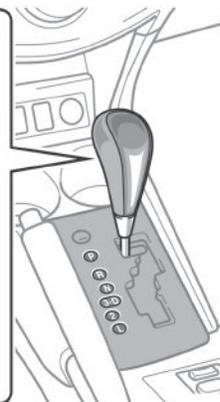

5-speed models

- P** Park¹
- R** Reverse
- N** Neutral
- D** Drive
- 4** Fourth gear
- 3** Third gear
- 2** Second gear
- L** First gear

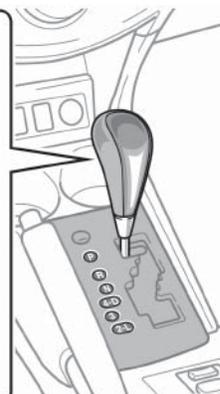

¹ The ignition switch must be ON, and the brake pedal depressed to shift from "Park."

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.

Active torque control 4WD (4WD models)

Four-wheel drive lock switch



Push the switch to ensure that the engine torque is applied to the 4 wheels.

NOTE: It should ONLY be used when wheel spinning occurs on loose or unpaved surfaces.

Refer to the *Owner's Manual* for more details.

Seat adjustments-Front

Manual seat




Power seat




- ① Position
- ② Height crank (driver side only)
- ③ Seatback angle
- ④ Driver seat: position and cushion angle/height
Passenger seat: position only
- ⑤ Seatback angle
- ⑥ Lumbar support

Seats-Head restraints

Front seats

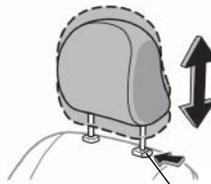


Second row seats

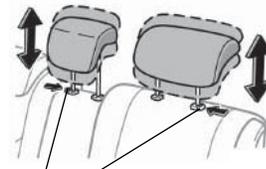

Lock release button

Third row seats

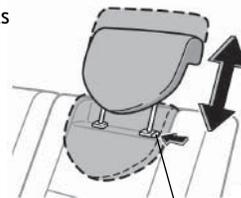

Lock release button

Seat adjustments-Second row seats

Vehicles with third row seats




- ① Position
- ② Seatback angle
- ③ Seatback lock release

Seats-Folding down second row seats


Vehicles without third row seats

Left side
remote seat release

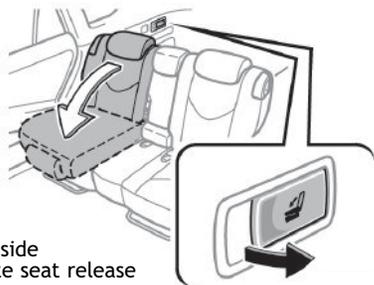


Right side
remote seat release

Vehicles with third row seats

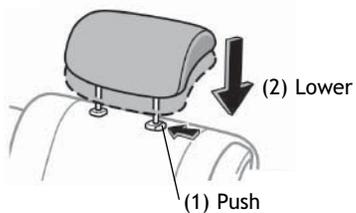


Seats-Stowing third row seats (if equipped)

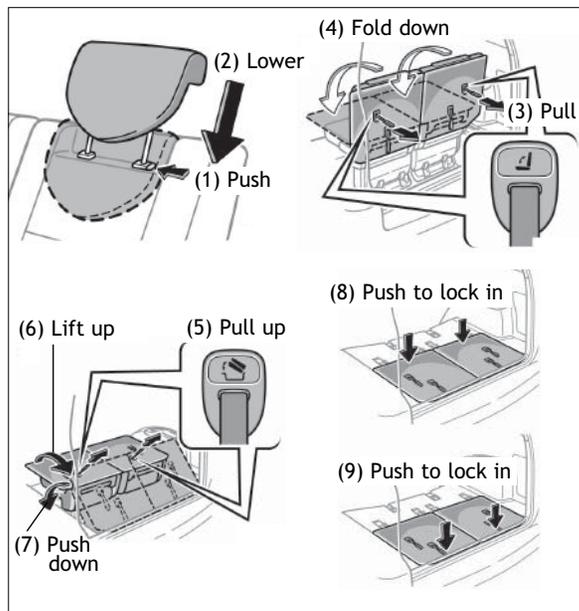


Windshield wiper & washer

Front

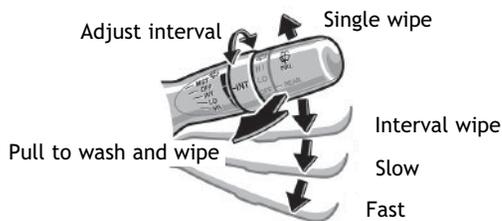


Rear

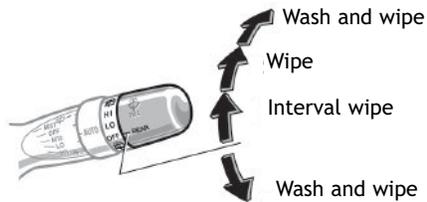


Lights & turn signals

Headlights

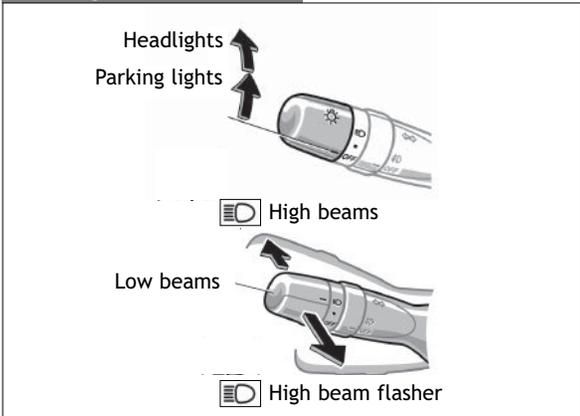


- Daytime Running Light system (if equipped)** Automatically turns on the headlights at a reduced intensity.
- Automatic light cut off system** Will automatically turn lights off after a delay of 30 seconds, or the lock switch on remote may be pushed.

Turn signals

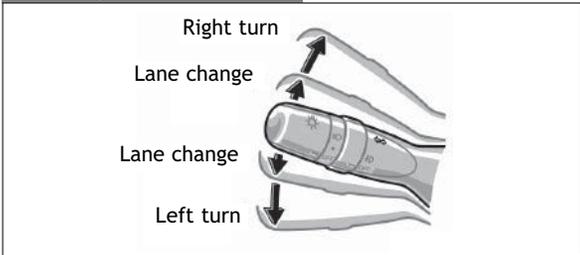


Front fog lights (if equipped)

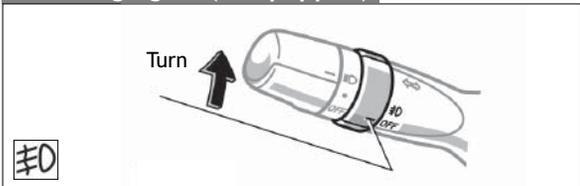


Front fog lights come on only when the headlights are on low beam.

Parking brake

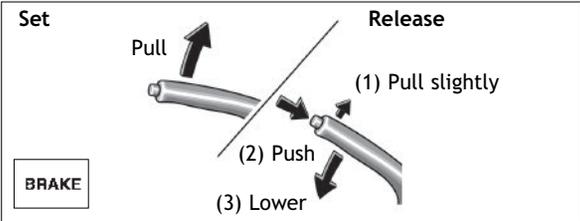


Tilt and telescopic steering wheel

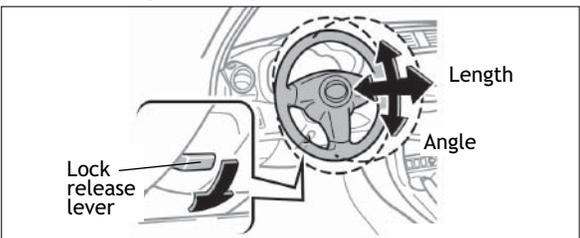

Hold wheel, push lever down, set angle and length, then return lever.

NOTE: Do not attempt to adjust while the vehicle is in motion.

Windows

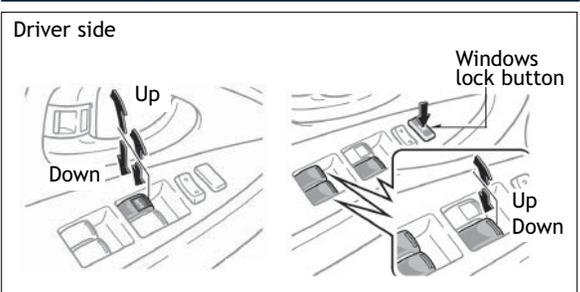


Automatic operation (Driver side only) Push the switch completely down or pull it completely up and release to fully open or close. To stop window midway, lightly push the switch in the opposite direction.

Window lock switch Deactivates all passenger windows. Driver's window remains operable.


NOTE: If the battery is disconnected, the window needs to be reinitialized. Refer to the *Owner's Manual* for more details.

Seat heaters (if equipped)

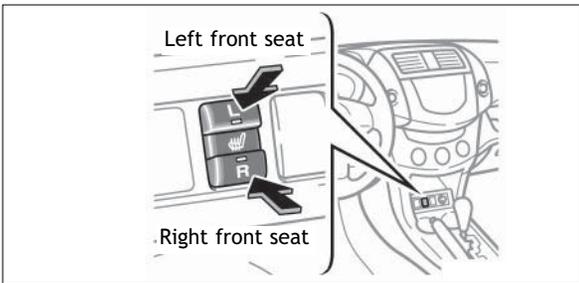


Air Conditioning/Heating

Automatic Air Conditioning

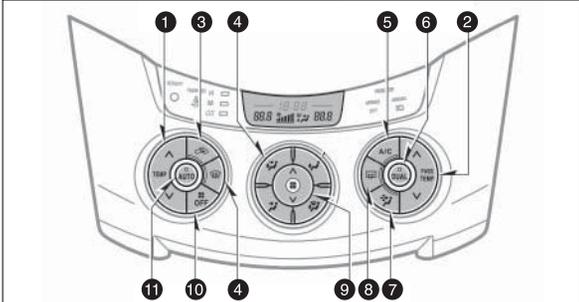


- 1 Temperature (Driver side)
- 2 Temperature (Front passenger side)
- 3 Fresh or recirculate cabin air
- 4 Air flow vent
In "🌬️" or "🔄" mode, use fresh air ("🌬️" indicator "OFF") to reduce window fogging.
- 5 Air Conditioning ON/OFF
- 6 "DUAL" button
Indicator ON: Separate temperature settings for driver and passenger.
Indicator OFF: Synchronize temperature settings for driver and passenger.
- 7 Micro dust and pollen filter ON/OFF
- 8 Rear defogger
- 9 Fan speed
- 10 Climate control OFF
- 11 Automatic climate control ON
Adjust the temperature setting, and airflow vents and fan will adjust automatically.

Manual Air Conditioning

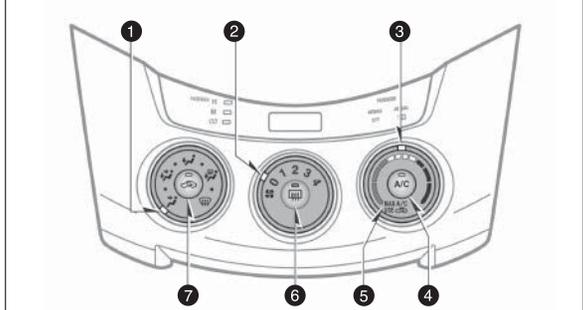


- 1 Air flow vent selector
In "🌬️" or "🔄" mode, use fresh air ("🌬️" indicator "OFF") to reduce window fogging.
- 2 Fan speed
- 3 Temperature
- 4 Air Conditioning ON/OFF
- 5 Use for quick cooling. MAX A/C changes air intake to recirculate. It is not possible to change intake to fresh, or to turn A/C OFF in this mode.
- 6 Rear defogger
- 7 Fresh or recirculated cabin air

Clock

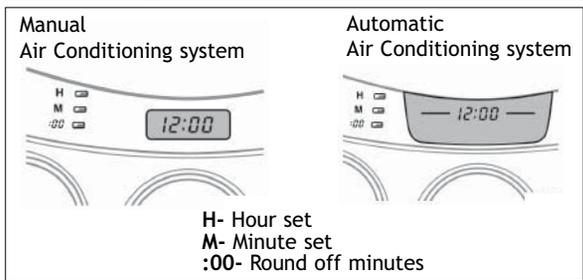

Bottle holders

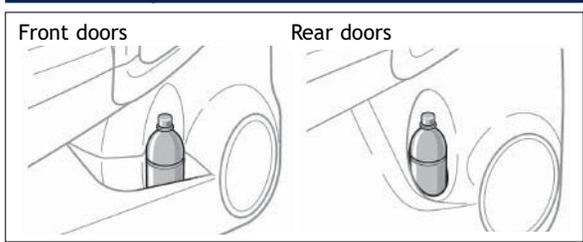

Audio

Type 1

Push to turn ON/OFF

Preset buttons - functions in other modes indicated above number.

Eject CD

Seek station/ CD track select


Station/CD track scan

Mode

View CD text

Push to adjust tone & balance

Push to skip up/down folder

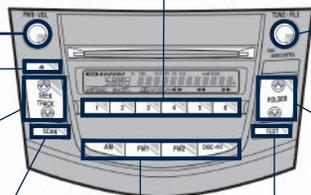

Type 2 additional functions



Load CD(s)

Type 2 (with JBL speakers)



CD PLAYER

To scan tracks on a disc Push "SCAN." Push again to hold selection.

CD Changer (Type 2)


- To load one disc Push "LOAD" and insert one disc.
- To load multiple discs Push and hold "LOAD" until you hear a beep. Insert one disc. **Wait until the green indicator illuminates and shutter opens to insert next disc.**

To select a file (MP3/WMA only) Turn "TUNE·FILE."
To select a folder (MP3/WMA only) Push either side of "FOLDER."

RADIO


To preset stations Tune in the desired station and hold down a preset button (1-6) until you hear a beep. Push desired preset button (1-6) to select.
To scan stations Push "SCAN." Push and hold to scan preset stations. Push again to hold selection.

Steering wheel controls (if equipped)

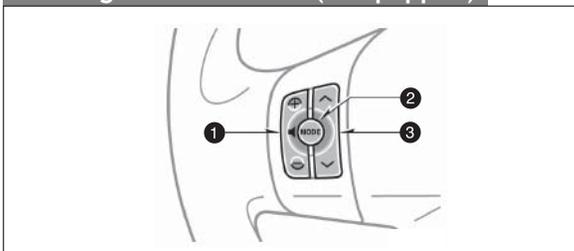


- 1 " - + " Volume control
- 2 "MODE" Push to turn audio ON and select an audio mode. Push and hold to turn the audio OFF.
- 3 " ^ v "
 - In radio mode Push to select a preset station. Push and hold to seek the next strong station.
 - In CD mode Push to skip up or down to next/previous track.

AUX audio jack

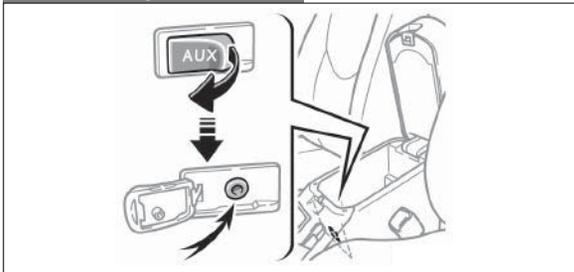

By inserting a mini plug into the AUX audio jack, you can listen to music from a portable audio device through the vehicle's speaker system.


Rear seat entertainment system (if equipped)

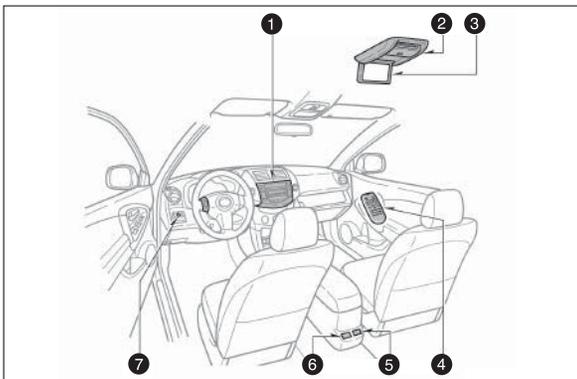


- ❶ Front audio system
- ❷ DVD player
- ❸ DVD screen
- ❹ Remote control
- ❺ A/V input adapter
- ❻ 115V AC Power outlet
- ❼ 115V AC Power outlet ON/OFF switch

Moonroof (if equipped)

Sliding operation

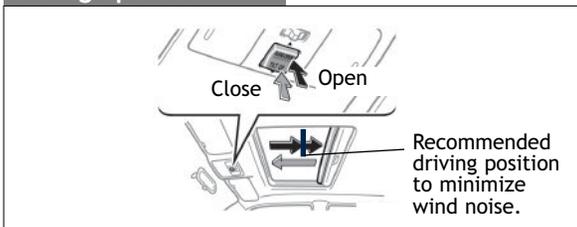


Tilting operation

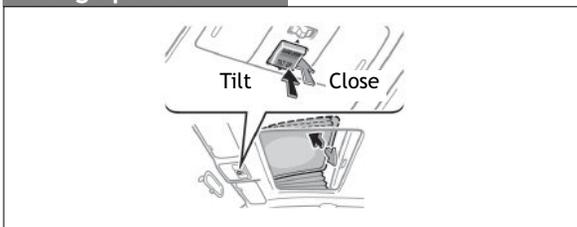

NOTE: If battery is disconnected, the moonroof needs to be reinitialized. Refer to the *Owner's Manual* for more details.


Telephone controls (Bluetooth®)* (if equipped)

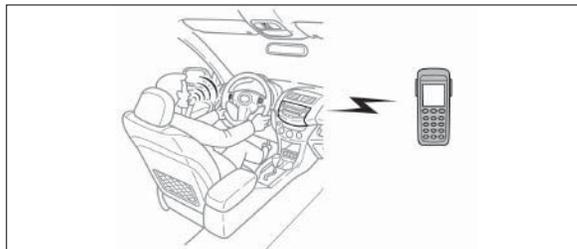


Bluetooth® technology allows dialing or receipt of calls without taking your hands from the steering wheel or using a cable to connect the telephone and the system.

Refer to the *Owner's Manual* for more details.

Door locks

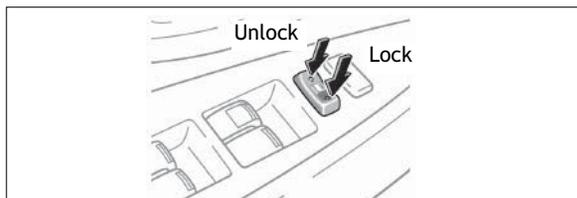

Auto LSD (Limited Slip Differential) (2WD models)

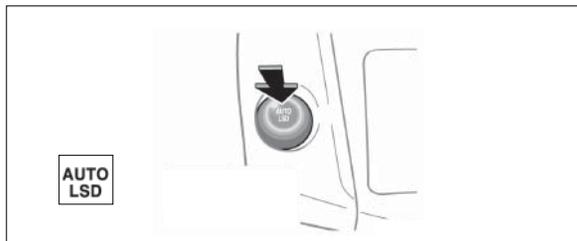

Push the "AUTO LSD" switch when the vehicle is stopped. To deactivate, push the switch again.

NOTE: It will ONLY work for 2-wheel drive models. It should ONLY be used when wheel spinning occurs on slippery or unpaved surfaces.


Refer to the *Owner's Manual* for more details on this system before attempting to use it.

Power outlets

12V DC

Instrument panel

Inside center console

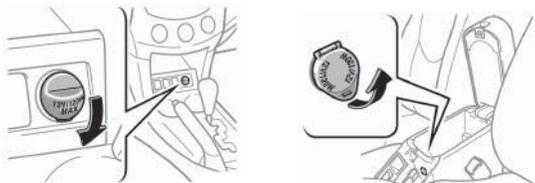


Luggage Compartment



NOTE: Designed for car accessories. Key must be in the "ACC" or "ON" position to be used.

115V AC (if equipped)


ON/OFF switch

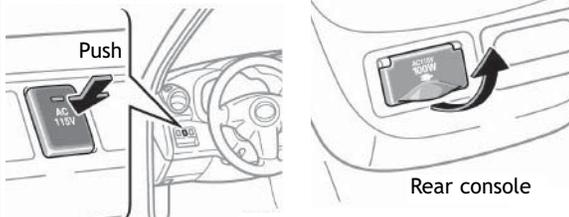

NOTE: Key must be in the "ON" position to be used.

Light control-Instrument panel


Brightness control

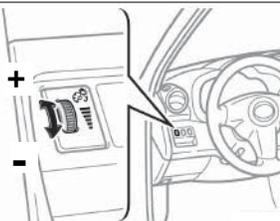


With the dial turned fully up, instrument panel lights will not dim when the headlights are turned ON.

Cruise control

Turning system ON/OFF

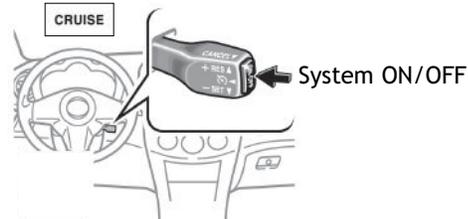

Functions

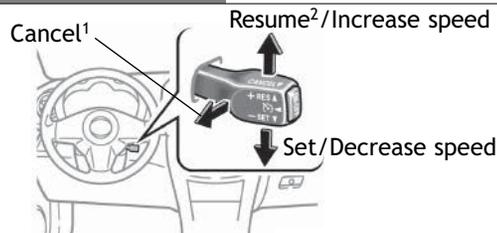


¹ The set speed may also be cancelled by depressing the brake pedal.

² The set speed may be resumed once vehicle speed exceeds 25 mph.

Refer to the *Owner's Manual* for more details.

Cup holders

Front

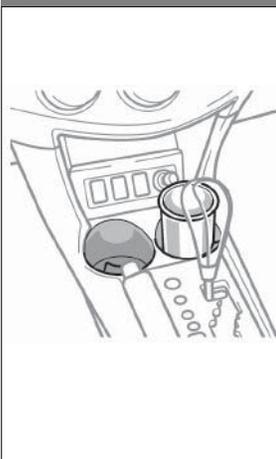

Rear

Second row




Third row side trim (if equipped)




SAFETY AND EMERGENCY FEATURES

Doors-Child safety locks

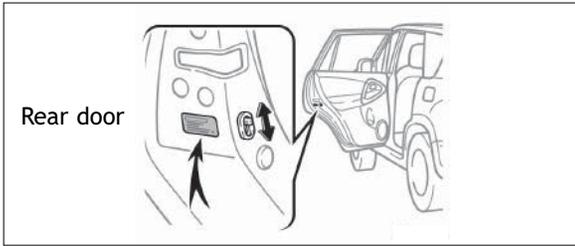

Moving the lever to “LOCK” will allow the door to be opened only from the outside.


Seat belts

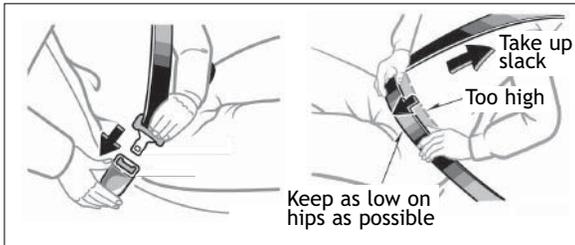

If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.

Seat belts-Shoulder belt anchor

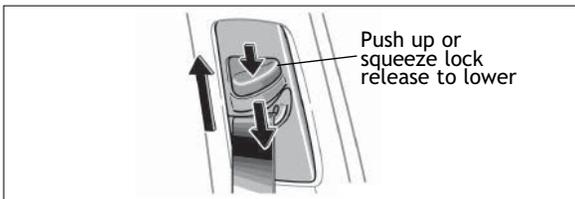

Tire Pressure Warning System

The system is designed to provide a warning when tire pressure of any one of the tires (including the spare) is critically low.

Refer to the *Owner's Manual* for more details.

2007 RAV4

This *Pocket Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Pocket Reference Guide* is not intended as a substitute for the *Owner's Manual* located in the vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of the vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new RAV4.

! A word about safe vehicle operations

This *Pocket Reference Guide* is not a full description of RAV4 operations. Every RAV4 owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed "⚠CAUTION" information highlighted in this reference guide and throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

⚠CAUTION

This utility vehicle has a significantly higher rollover rate than other types of vehicles. Refer to the *Owner's Manual* for important rollover information.



All information in this *Pocket Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

Spare tire & tools


Tool location

Luggage compartment
Inside left side box

Luggage compartment
Inside right side box

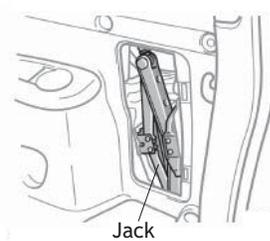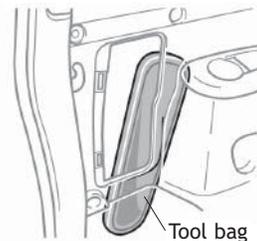

Removing the spare tire

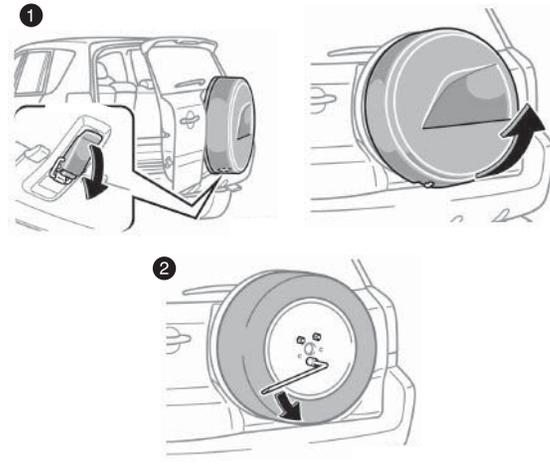

- 1 To remove the spare tire cover,* open the back door. Unhook the latch on the bottom of the cover. After closing the back door, remove the cover.

NOTE: To prevent theft, the latch can only be released when the back door is opened.

- 2 To remove the spare tire, turn the wheel nuts counterclockwise with the wheel nut wrench and remove.

Refer to the *Owner's Manual* for tire changing and jack positioning procedures.

* If equipped