 


AUTO ACCESS SEAT



1 Before operating


- (1) Park the vehicle on a flat surface.
- (2) Shift the shift lever to P and set the parking brake securely.
- (3) Open the sliding door fully.



- (4) Unfasten the seat belt.



- (5) Adjust the front seatback as upright as possible.

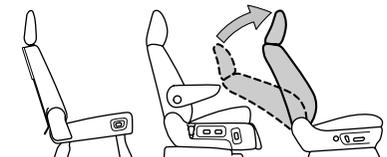

- (6) Lower the armrests and place both arms inside the armrests.
- (7) Sit with knees together and place your feet on the foot restraint. If you cannot place your feet on the foot restraint, have someone assist you.

2 Moving the seat outside the vehicle

Press and hold .
If the button is released during operation, the seat will stop.
During operation, the seatback will move.


3 Returning the seat inside the vehicle

Press and hold until a beep sounds.
If the button is released during operation, the seat will stop.
During operation, the seatback will move.



- ① Wireless remote control
- ② Seat switch

WARNING

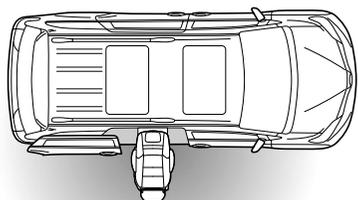

- Check the surroundings for safety.
- Operate the AUTO ACCESS SEAT from a position from which you can see the occupant of the seat.



- Watch the occupant's feet while the seat is moving.



- Watch the occupant's head and arms while they are passing the door.



- Do not place luggage or hands and feet underneath or around the AUTO ACCESS SEAT.

— See Owner's Manual for details —