



*moving forward ▶*




Customer Experience Center  
1-800-331-4331

# ***TUNDRA***

2008  
Quick Reference Guide


Have a question about the main features of your new Toyota? Find the answers quickly and easily in this Quick Reference Guide, which includes highlights from the *Owner's Manual*. For more detailed information, and helpful interactive demonstrations and tips, visit [www.ToyotaGuide.com](http://www.ToyotaGuide.com). This user-friendly website makes learning all about your new vehicle fun and easy.

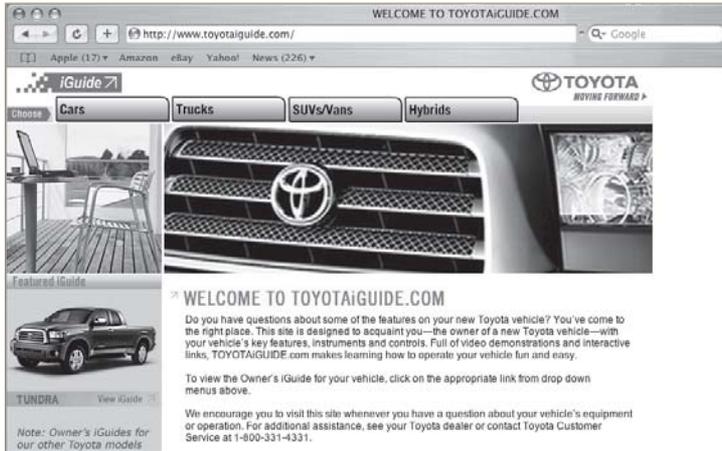

[www.ToyotaGuide.com](http://www.ToyotaGuide.com)

This *iGuide* is not intended as a substitute for the *Owner's Manual* located in the vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of the vehicle's capabilities and limitations. Important **Cautions**, to help you avoid injuries, and **Notices**, to help you avoid equipment damage or malfunction, can also be found in the *Owner's Manual*.

## Doors-Child safety locks (double cab and Crew Max models)

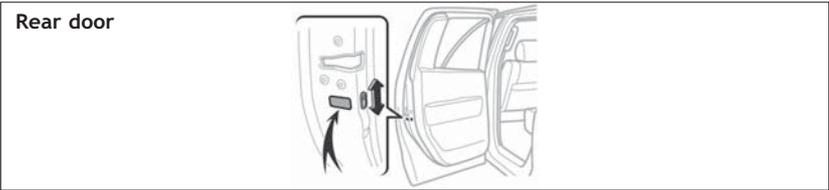

Moving the lever to "LOCK" will allow the door to be opened only from the outside.


## Spare tire & tools

### Tool location


Regular cab models  
-behind the right seatback




Crew Max models  
-behind the right rear seatback

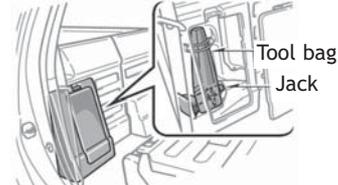


Double cab models  
-under the right rear seats  
without storage box

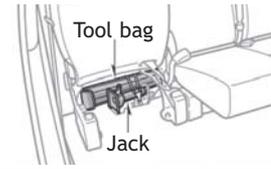

Double cab models  
-under the right rear seats  
with storage box

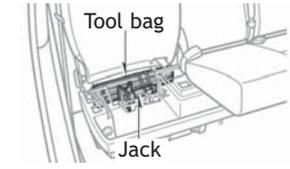

### Removing the spare tire

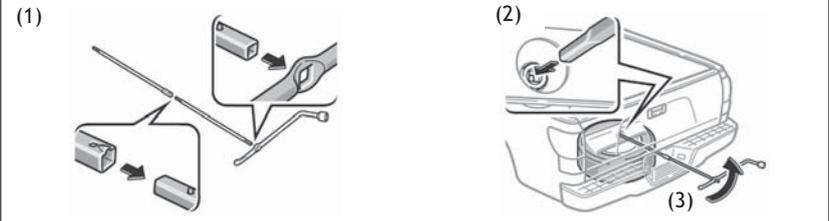

- (1) Assemble the jack handle.
- (2) Insert the jack handle end into the lowering screw.
- (3) Turn the jack handle counterclockwise.

Refer to the *Owner's Manual* for tire changing and jack positioning procedures.

# 2008 Tundra Quick Reference Guide

## OVERVIEW

Engine maintenance	8
Fuel tank door release and cap	7
Hood release	7
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
<b>Keyless entry<sup>1</sup></b>	<b>6</b>
Light control-Instrument panel	6

## FEATURES/OPERATIONS

Accessory meter	25
Air Conditioning/Heating	20-21
Audio	22-23
Auto LSD (Auto Limited Slip Differential)	27
Automatic Transmission	9
Bottle holders	27
Cruise control	25
Cup holders	26
Door locks	10
Four-wheel drive	10
Garage door opener (HomeLink <sup>®</sup> ) <sup>3</sup>	21
<b>Lights<sup>1</sup> &amp; turn signals</b>	<b>16</b>
Mirrors-Power side view	10
Moonroof	12
<b>Multi-information display<sup>2</sup></b>	<b>18</b>
Parking brake	26
Power outlets-12V DC	17
Power outlets-115V AC	17
Rear seat entertainment system	24
Seat adjustments-Front	12-13
Seat adjustments-Rear	13
Seat heaters	20
Seats-Folding	14-15
Seats-Head restraints	14
Telephone controls (Bluetooth <sup>®</sup> )	24
Tilt and telescopic steering wheel	11
"TOW/HAUL" switch	11
Window-Rear	19
Windows-Power	19
Windshield wipers & washers	15

## SAFETY AND

## EMERGENCY FEATURES

Doors-Child safety locks	29
Seat belts	28
Seat belts-Shoulder belt anchor	28
Spare tire & tools	29
Tire Pressure Warning System	28

<sup>1</sup> Visit your Toyota dealer for information on customizing this feature.




<sup>2</sup> Programmable by customer. Refer to the Owner's Manual for instructions and more information.

<sup>3</sup> HomeLink<sup>®</sup> is a registered trademark of Johnson Controls, Inc.




# OVERVIEW

## Instrument panel

### Steering wheel controls (if equipped)

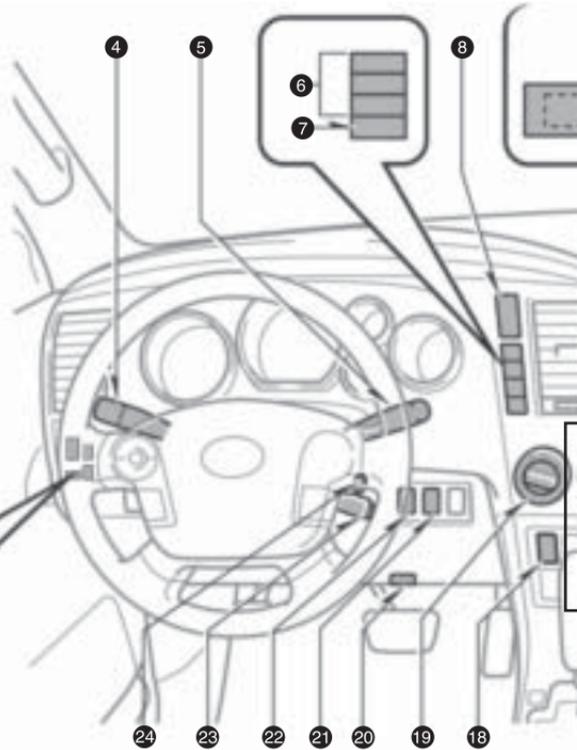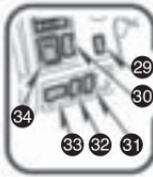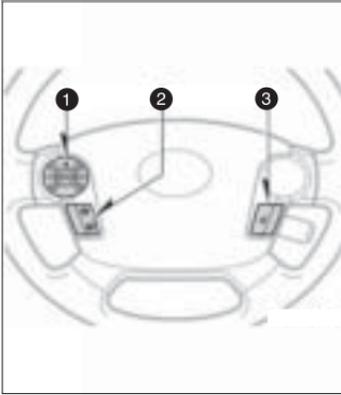

- ① Steering wheel audio controls<sup>1</sup>
- ② Telephone controls<sup>1</sup>
- ③ Voice command button<sup>1,2</sup>
- ④ Headlight and turn signal controls
- ⑤ Wiper and washer controls
- ⑥ Multi-information display/Accessory meter control buttons
- ⑦ Intuitive parking assist button<sup>1</sup>
- ⑧ Emergency flasher button
- ⑨ Audio system or navigation system-integrated audio system<sup>1,2</sup>
- ⑩ Outside rearview mirror/Back window defogger button<sup>1</sup>
- ⑪ Front passenger seat belt reminder
- ⑫ Front passenger occupant classification indicator or front passenger airbag ON/OFF indicator<sup>1</sup>
- ⑬ Seat heater controls<sup>1</sup>
- ⑭ Air Conditioning controls
- ⑮ 12V DC Power outlet
- ⑯ AUX audio jack
- ⑰ Cigarette lighter/12V DC Power outlet

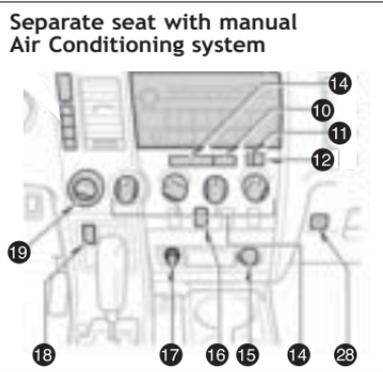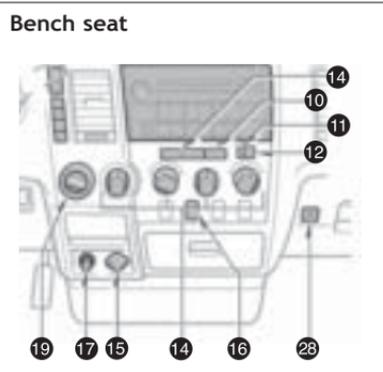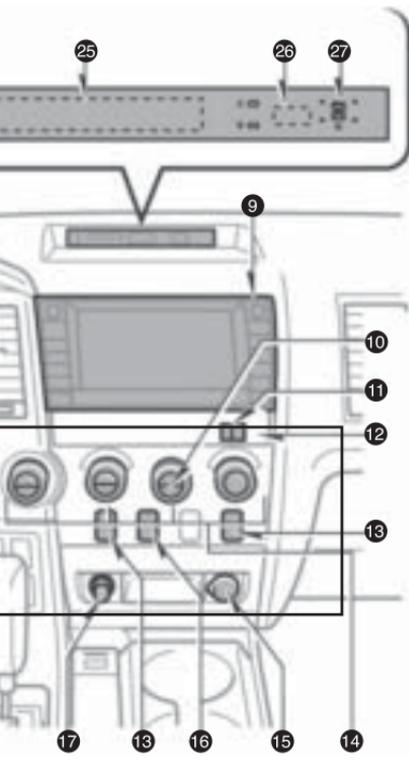


- 18 "TOW/HAUL" button<sup>1</sup>
- 19 Two-wheel/Four-wheel drive selector<sup>1</sup>
- 20 Tire Pressure Warning System reset
- 21 "VSC OFF" button
- 22 115V AC Power outlet ON/OFF switch<sup>1</sup>
- 23 Cruise control<sup>1</sup>
- 24 Engine switch
- 25 Accessory meter<sup>1</sup>
- 26 Theft deterrent system/Engine immobilizer indicator<sup>1</sup>
- 27 Intuitive parking assist indicator<sup>1</sup>
- 28 Front passenger airbag manual ON/OFF switch<sup>1</sup> (in glove box)
- 29 Instrument panel light control
- 30 Interior light/Personal light main switch
- 31 "RSCA OFF" switch
- 32 Power back window switch<sup>1</sup>
- 33 Cargo lamp switch
- 34 Power rearview mirror control<sup>1</sup>

<sup>1</sup> If equipped


<sup>2</sup> For details, refer to the "Navigation System Owner's Manual."

## Instrument cluster

Without multi-information display

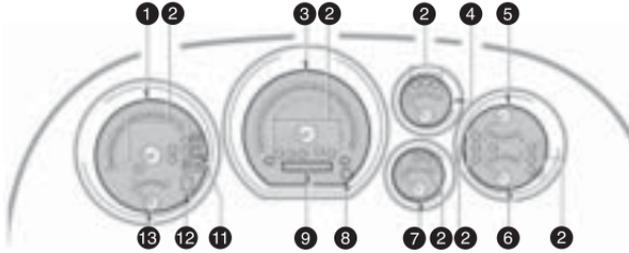

With multi-information display

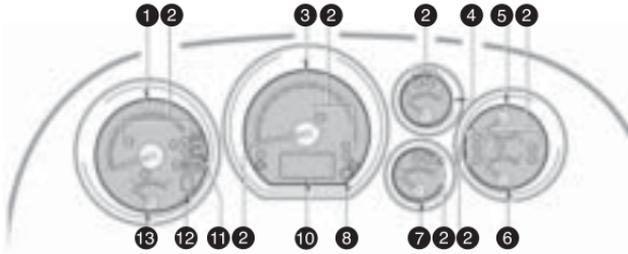

- ❶ Tachometer
- ❷ Service indicator and reminder
- ❸ Speedometer
- ❹ Fuel gauge
- ❺ Voltmeter
- ❻ Oil pressure gauge
- ❼ Engine coolant temperature
- ❽ Trip meter reset knob
- ❾ Odometer and two trip meters
- ❿ Multi-information display
- ⓫ Automatic Transmission shift position indicator
- ⓬ Automatic Transmission shift range display
- ⓭ Automatic Transmission fluid temperature gauge

## Indicator symbols



Brake system warning<sup>1</sup>



Driver/Front passenger seat belt reminder<sup>1</sup>  
(alarm will sound if speed is over 12 mph)



Charging system warning<sup>1</sup>



Front passenger occupant classification or front passenger airbag  
ON/OFF indicator

<sup>1</sup> For details, refer to “Service reminder indicators and warning buzzers,” Section 1-6, 2008 Owner’s Manual.

<sup>2</sup> If this light flashes, refer to “Four-wheel drive system,” Section 1-7, 2008 Owner’s Manual.

	Low engine oil pressure warning <sup>1</sup>
	Malfunction/Check Engine indicator <sup>1</sup>
	Engine oil replacement reminder <sup>1</sup>
	Low fuel level warning <sup>1</sup>
	Open door warning <sup>1</sup>
	Airbag SRS warning <sup>1</sup>
	Master warning <sup>1</sup>
	Automatic Transmission fluid temperature warning <sup>1</sup>
	Low Tire Pressure Warning <sup>1</sup>
	Low windshield washer fluid level warning <sup>1</sup>
	Theft deterrent/Engine immobilizer system indicator
	Roll Sensing Curtain Airbags OFF indicator <sup>4</sup>
	 Headlight low/high beam indicator
	Turn signal indicator
	 High/Low speed four-wheel drive indicator <sup>2</sup>
	Slip indicator
	Vehicle Stability Control "OFF" indicator/warning <sup>1</sup>
	TOW/HAUL mode indicator
	"AUTO LSD" indicator
	Cruise control indicator <sup>3</sup>
	Anti-lock Brake System warning <sup>1</sup>

<sup>3</sup> If this light flashes, refer to "Cruise control," Section 1-7, 2008 Owner's Manual.

<sup>4</sup> If this light flashes, refer to "Roll sensing of curtain shield airbags off switch," Section 1-3, 2008 Owner's Manual.

# OVERVIEW

## Keyless entry

### Locking operation



Push



### Unlocking operation



Push ONCE: Driver door  
TWICE: All doors



**NOTE:** If a door is not opened within 30 seconds of unlocking, all doors will relock for safety.

### Panic button



Push and hold




## Light control-Instrument panel

Brightness control

+



-

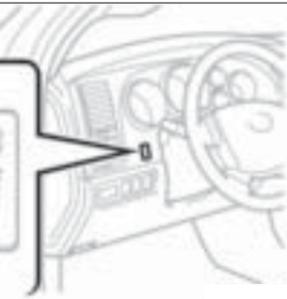

## Fuel tank door release and cap





Store




**NOTE:** Tighten until one click is heard. If the cap is not sealed properly, Check Engine "CHECK" indicator may illuminate.

## Hood release

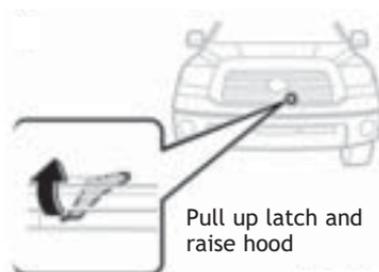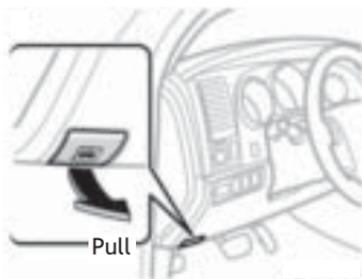


## Engine maintenance


### 6 cylinder (1GR-FE) engine

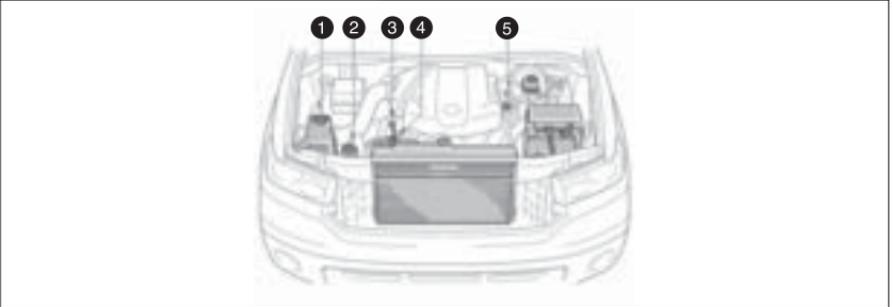

### 4.7L 8 cylinder (2UZ-FE) engine

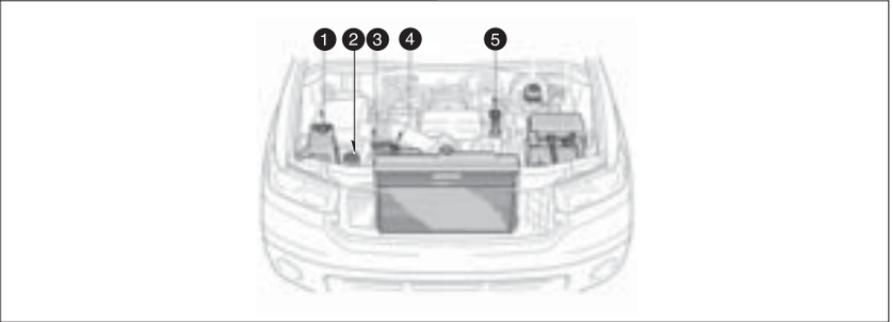

### 5.7L 8 cylinder (3UR-FE) engine

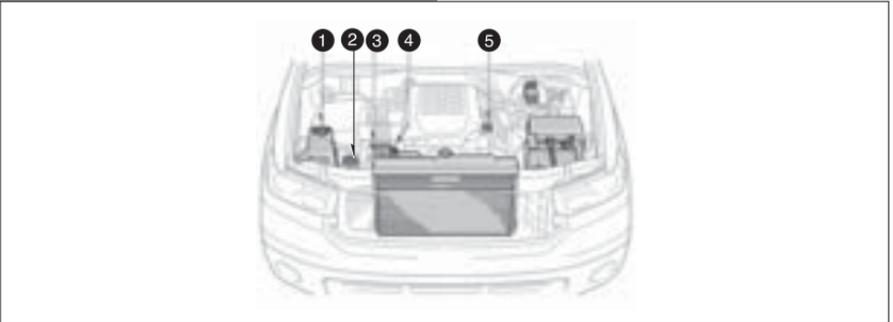

- ① Windshield washer fluid tank
- ② Power steering fluid reservoir
- ③ Engine oil level dipstick
- ④ Engine coolant reservoir
- ⑤ Engine oil filler cap


**Note:** Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the "Owner's Warranty Information Booklet," "Scheduled Maintenance Guide" or "Owner's Manual Supplement."

# FEATURES/OPERATIONS

## Automatic Transmission


### Floor shift type

- P** Park\*
- R** Reverse
- N** Neutral
- D** Drive
- S** "S" mode

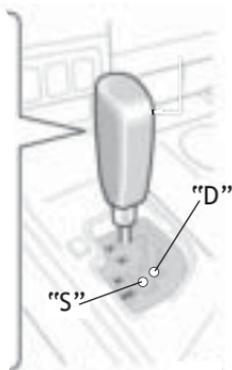

### Column shift type

- P** Park\*
- R** Reverse
- N** Neutral
- D** Drive
- S** "S" mode

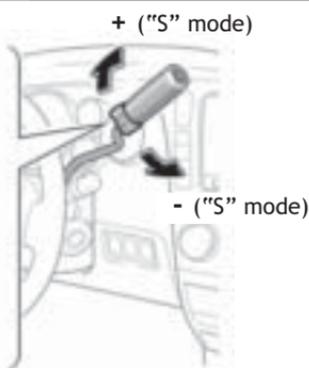

\* The engine switch must be set at ON and the brake pedal depressed to shift from "Park."

### "S" (Sequential) mode

Shift the shift lever to "S" position from "D" position.

#### Floor shift type:

- +: Upshift (push and release)
- : Downshift (pull and release)

#### Column shift type:

- +: Upshift (turn up and release)
- : Downshift (turn down and release)

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.

### Four-wheel drive (if equipped)

Turn

Turn

4H

4L

Push and turn

- 2WD** High speed (2WD)
- 4H** High speed (4WD)  
Turn to "4H" with speed below 62 mph.
- 4L** Low speed (4WD)  
Shift to "N" position when stopped, then push and turn to "4L."

For best fuel economy and performance under normal driving conditions, keep in "2WD" position.

### Mirrors-Power side view (if equipped)

Select left or right

Adjust

Fold mirrors in

Return mirrors to original position

Key must be in the "ACC" or "ON" position.

### Door locks (if equipped)


Unlock

Lock


## Tilt and telescopic (if equipped) steering wheel

### Manual

#### Tilt steering wheel


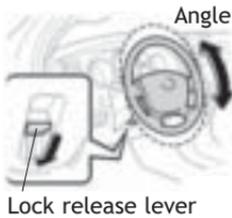


#### Tilt and telescopic steering wheel

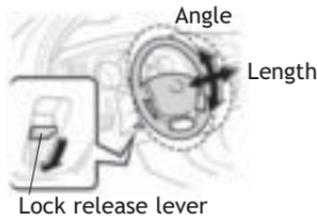

Hold wheel, push lever down, set angle and length, and return lever.

### Power

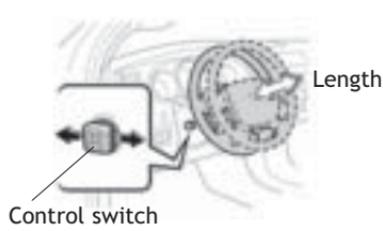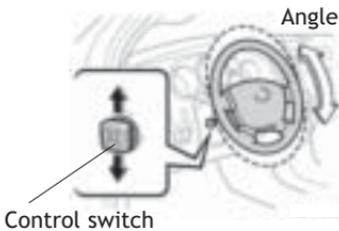


Push the control switch, set angle and length.


**Note:** Do not attempt to adjust while the vehicle is in motion.

## “TOW/HAUL” switch (if equipped)

#### Floor shift type

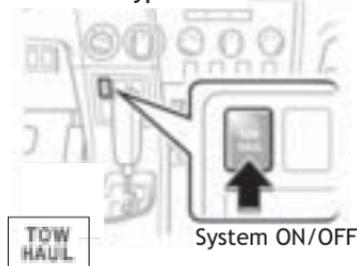

#### Column shift type

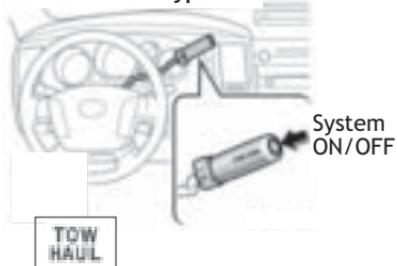


Tow/Haul mode can be used when carrying heavy loads. As fuel economy is reduced while in Tow/Haul mode, deactivating when driving without a load is recommended.


Refer to the *Owner's Manual* for more details on this system before attempting to use it.

**Moonroof (if equipped)**

**Sliding operation**

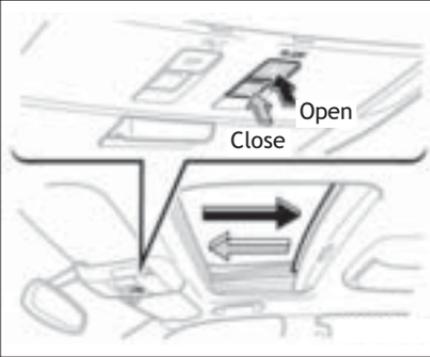

**Tilting operation**

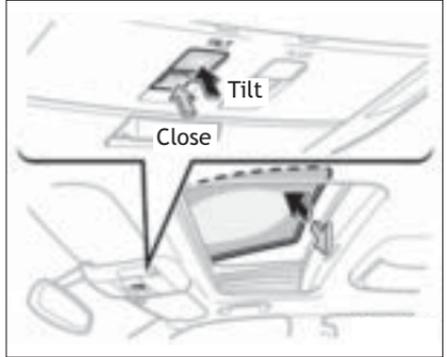

**Seat adjustments-Front**

**Manual seat**

**Separate seat**  
-Regular cab model



**Separate seat**  
-Double cab and Crew Max models




**Bench seat**  
-Regular cab model



**Bench seat**  
-Double cab and Crew Max models




## Power seat

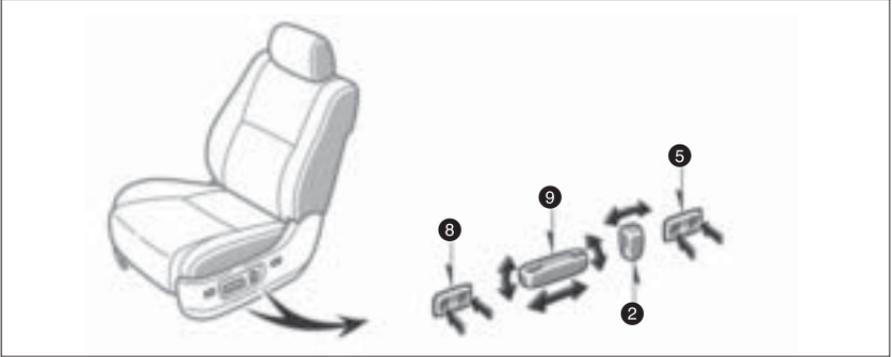

- ① Position
- ② Seatback angle
- ③ Seat cushion angle
- ④ Seat height
- ⑤ Lumbar support\*
- ⑥ Seatback angle (side)
- ⑦ Seatback angle (center)
- ⑧ Leg support
- ⑨ Position, cushion angle and height

\* If equipped


## Seat adjustments-Rear

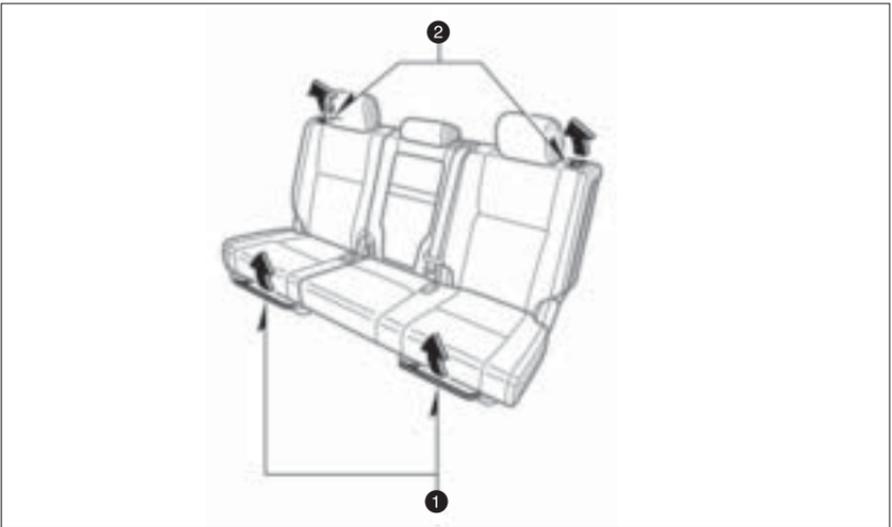


- ① Position
- ② Seatback angle and fold

### Seats-Head restraints


Front-Separate seat (type A)

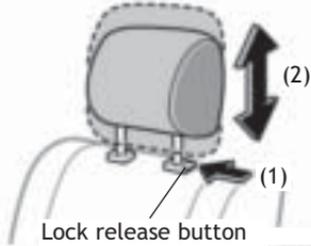


Front-Separate seat (type B)

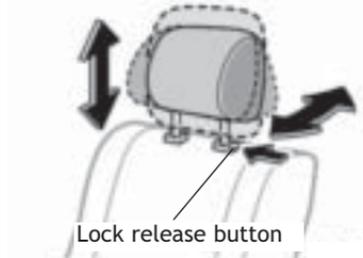


Front-Bench seat

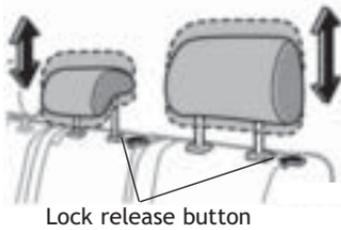

Rear (Crew Max model)


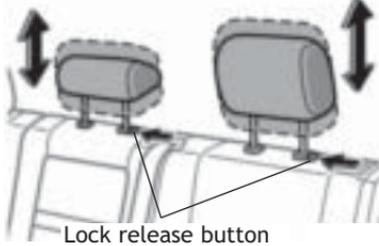


Rear (double cab model)

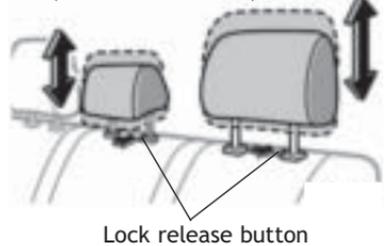


### Seats-Folding


Front (regular cab model)

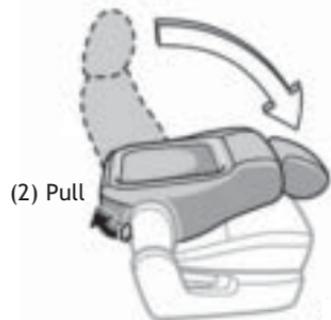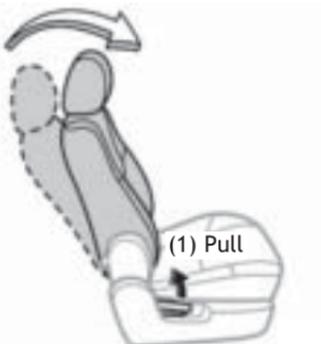

Rear (double cab model)

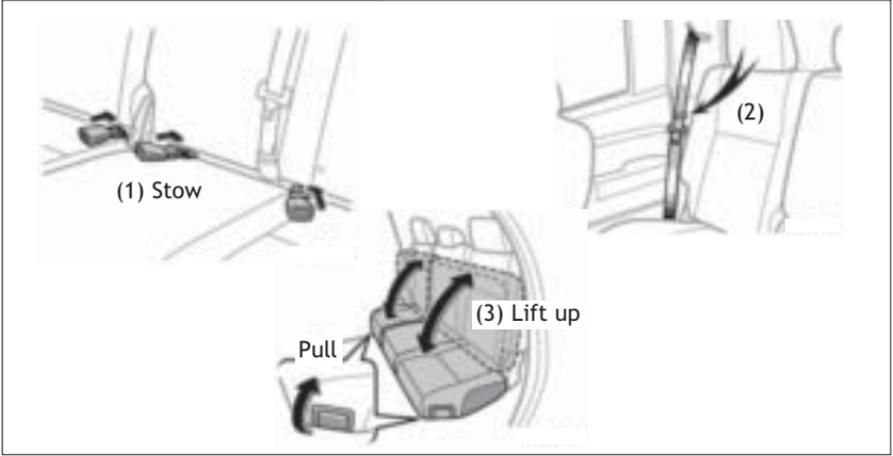


Rear (Crew Max model)

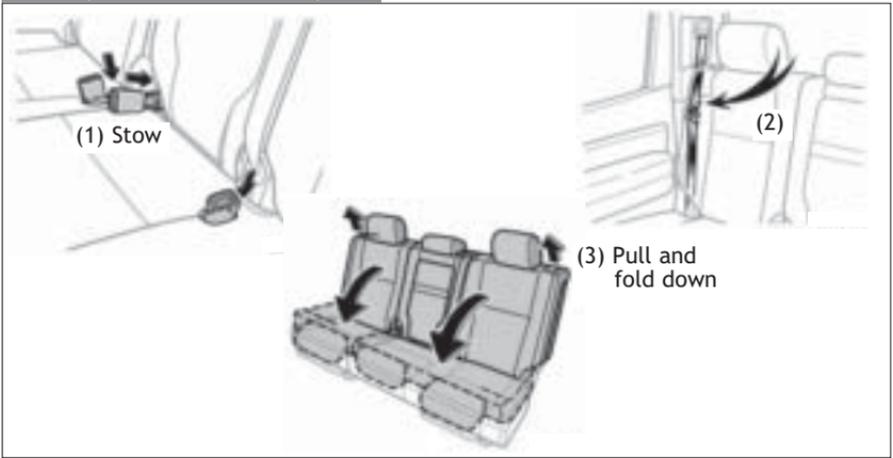


Windshield wipers & washers

With intermittent wiper

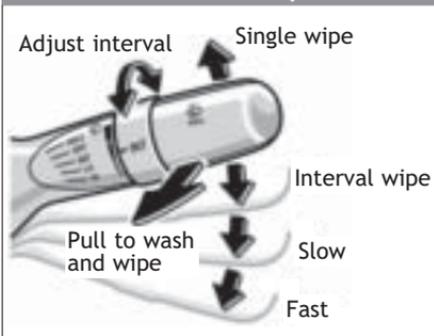


Without intermittent wiper

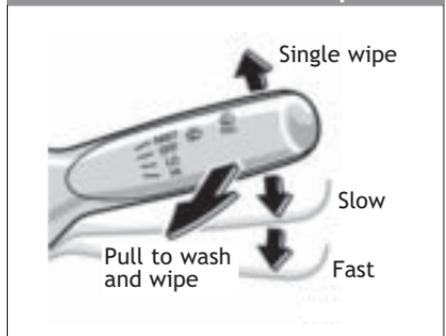

## Lights & turn signals


### Headlights

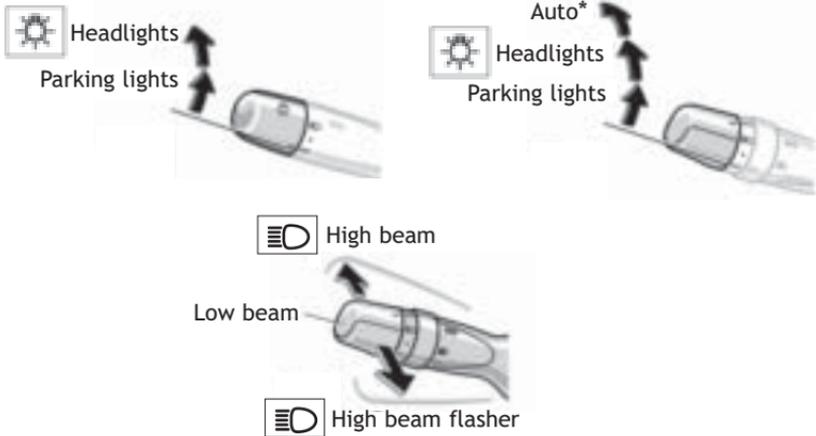

\* If equipped


- Daytime Running Light system (DRL)**(if equipped) Automatically turns on the turn signal lights at a reduced intensity.
- Automatic light cut off system** Automatically turns lights off after a delay of 30 seconds, or the lock switch on remote may be pushed.

### Front fog lights (if equipped)

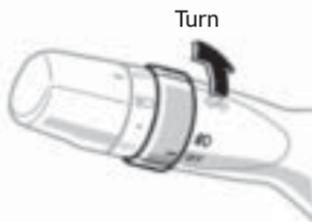

Front fog lights come on only when the headlights are on low beam.


### Turn signals

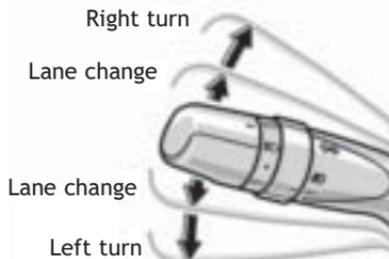

## Power outlets-12V DC (if equipped)

### Separate seats

Instrument panel

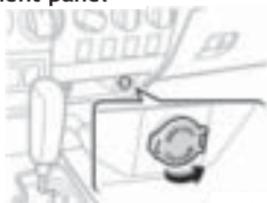

Inside of the center console box



Back of the center console box




Back of the center console box (Crew Max model)




### Bench seat

Instrument panel

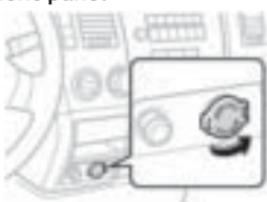

Under the seat cushion of the front center seat

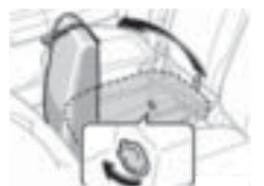

Back of the front center seat




Back of the front center seat (Crew Max model)



Key must be in the "ACC" or "ON" position to be used.

## Power outlets-115V AC (if equipped)

ON/OFF switch

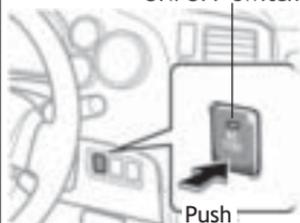


Back of the center console box



Back of the front center seat



### Multi-information display (if equipped)

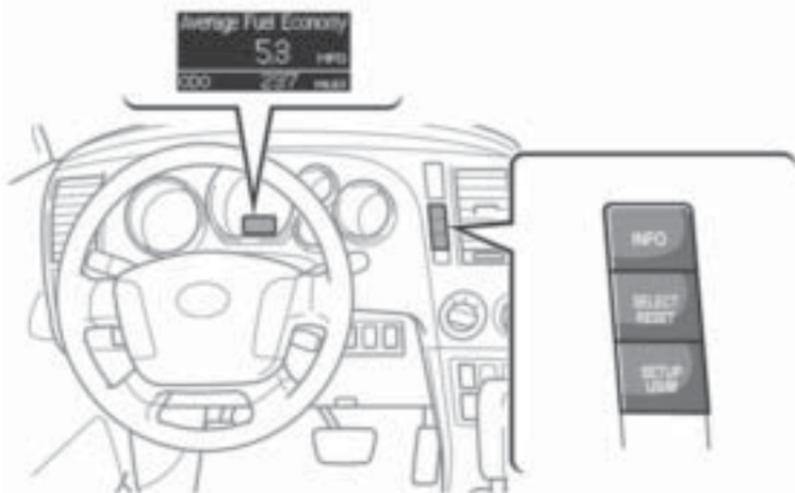

**Push "INFO" to change information in the following:**

- (1) Zoom display of odometer and trip meter
- (2) Average gas mileage
- (3) Current gas mileage
- (4) Miles left on remaining fuel
- (5) Running time from engine start
- (6) Average vehicle speed


**Push "SETUP US/M" to customize to the following settings:**

- (1) KEYLESS ENTRY FEEDBACK
- (2) KEYLESS ENTRY RELOCK TIMER
- (3) KEYLESS ENTRY ALL DOORS UNLOCK
- (4) DOOR AUTO LOCKING
- (5) DOOR AUTO UNLOCKING
- (6) HEADLAMPS AUTO OFF TIMER
- (7) COURTESY LAMPS OFF TIMER
- (8) DEFAULT SETTING

## Windows-Power (if equipped)


### Regular cab model

Driver side

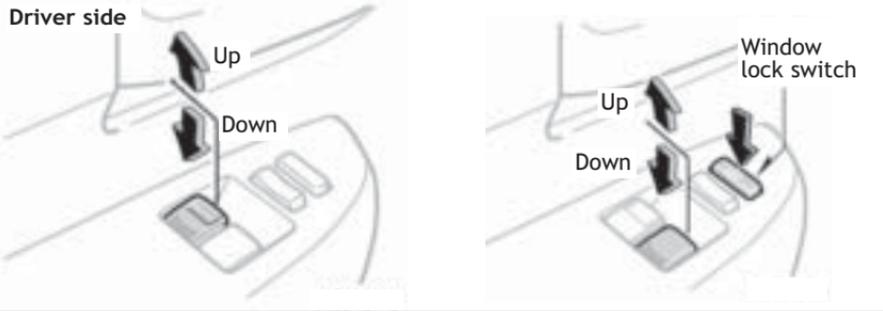

### Double cab and Crew Max models

Driver side

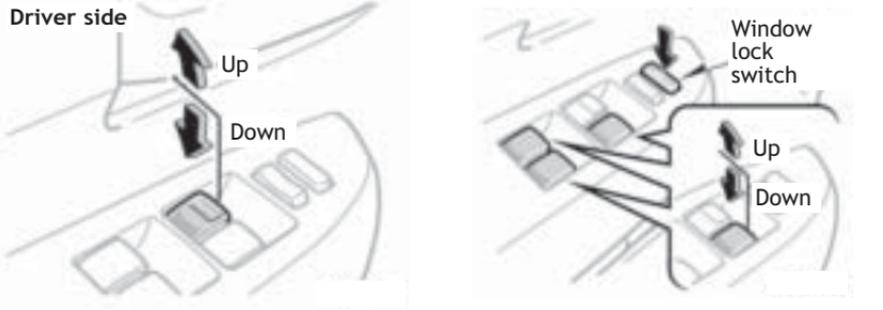


### Automatic down operation (driver side only)

Push the switch completely down and release to fully open. To stop window midway, lightly pull up on the switch.


**Window lock switch** Deactivates all passenger windows. Driver's window remains operable.

## Window-Rear

Crew Max model

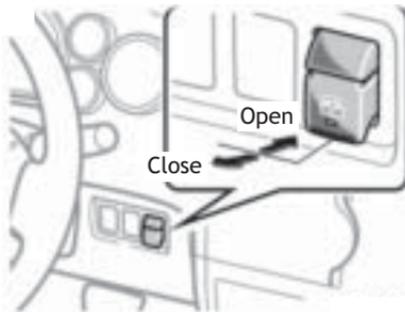


Seat heaters (if equipped)

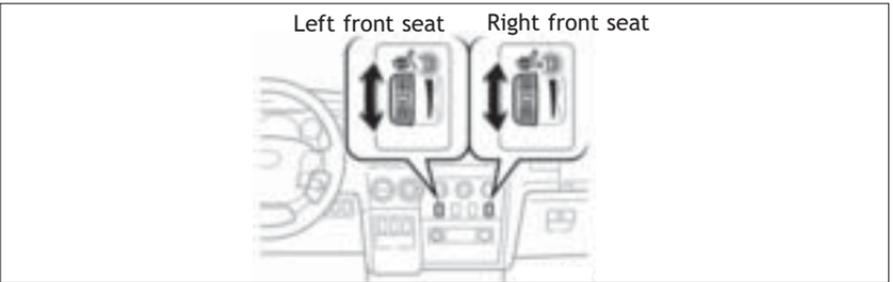


Air Conditioning/Heating

Automatic Air Conditioning

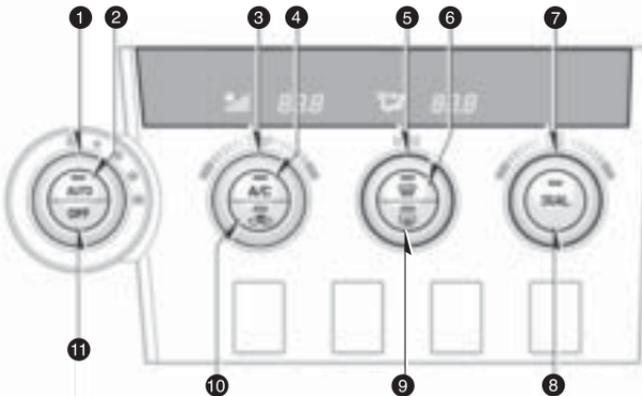

- ① Fan speed
- ② Automatic climate control ON  
Adjusting the temperature setting will cause the airflow vents, air intake and fan to adjust automatically.
- ③ Temperature (driver side)
- ④ Air Conditioning ON/OFF
- ⑤ Airflow vent  
In “” mode, use fresh air (“” indicator “OFF”) to reduce window fogging.
- ⑥ Windshield airflow (fresh air only)
- ⑦ Temperature (front passenger side)
- ⑧ “DUAL” button  
**Indicator ON:** Separate temperature settings for driver and passenger.  
**Indicator OFF:** Synchronize temperature settings for driver and passenger.
- ⑨ Outside rearview mirror/Back window defogger
- ⑩ Fresh or recirculated cabin air
- ⑪ Climate control OFF

## Manual Air Conditioning

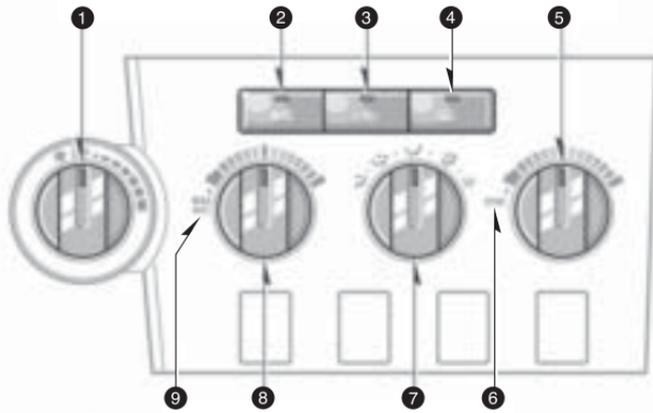

- ① Fan speed
  - ② Air Conditioning ON/OFF
  - ③ Fresh or recirculated cabin air
  - ④ Outside rearview mirror/Back window defogger\*
  - ⑤ Temperature (front passenger side)
  - ⑥ Synchronize with driver side temperature setting
  - ⑦ Airflow vent selector  
In “” or “” mode, use fresh air (“” indicator “OFF”) to reduce window fogging.
  - ⑧ Temperature (driver side)
  - ⑨ Use for quick cooling. MAX A/C changes air intake to recirculate. It is not possible to change intake to fresh, or to turn A/C OFF in this mode.
- \* If equipped

## Garage door opener (HomeLink®)\* (if equipped)



Garage door openers manufactured under license from HomeLink®\* can be programmed to operate garage doors, estate gates, security lighting, etc. Refer to “Garage door opener,” Section 1-10 in the *Owner’s Manual* for more details. For programming assistance, contact the Toyota Customer Experience Center at 1-800-331-4331, or visit <http://www.homelink.com>.

\*HomeLink® is a registered trademark of Johnson Controls, Inc.

## Audio

### Type 1

Push to turn ON/OFF

Seek station/  
CD track select

Push to adjust  
tone, balance  
& ASL\*

Preset buttons - functions in other  
modes indicated above number



Eject CD

Push to skip  
up/down  
MP3 folder

Mode

Station/CD  
track scan

View CD  
information

### Type 2 additional functions



Load CD(s)

View MP3  
folder and/or  
Satellite Radio  
category type

### Type 3 (with JBL speakers)



\* Automatic Sound Leveling

## CD PLAYER

To scan tracks on a disc Push and hold "SCAN." Push again to hold selection.

**CD changer (Types 2 and 3 only)**

-To load one disc Push "LOAD" and insert one disc.

-To load multiple discs Push and hold "LOAD" until you hear a beep. Insert one disc. Shutter will close and then re-open for next disc.

To select a file (MP3/WMA only) Turn "TUNE-FILE."


To select a folder (MP3/WMA only) Push either side of "FOLDER."

## RADIO

**To preset stations** Tune in the desired station and hold down a preset button (1-6) until you hear a beep. Push desired preset button (1-6) to select.

**To scan stations** Push and hold "SCAN" to scan preset stations. Push again to hold selection.

## Steering wheel switches (if equipped)

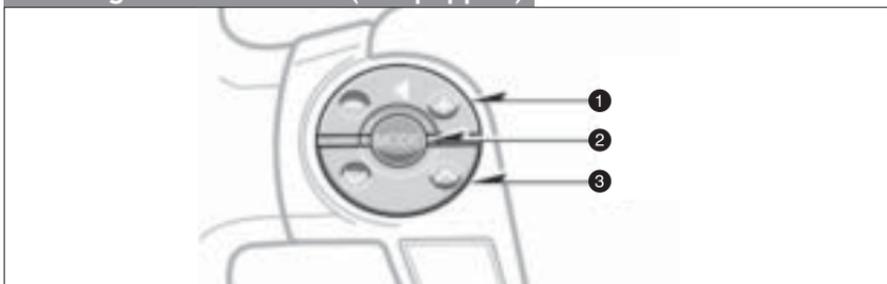

### ① " - + "

Volume control

### ② "MODE"

Push to turn audio ON and select an audio mode. Push and hold to turn the audio system "OFF."

### ③ " ^ v "


-In radio mode

Push to select a preset station; push and hold to seek the next strong station.

-In CD mode

Push to skip up or down to the next/previous track.


## AUX audio jack

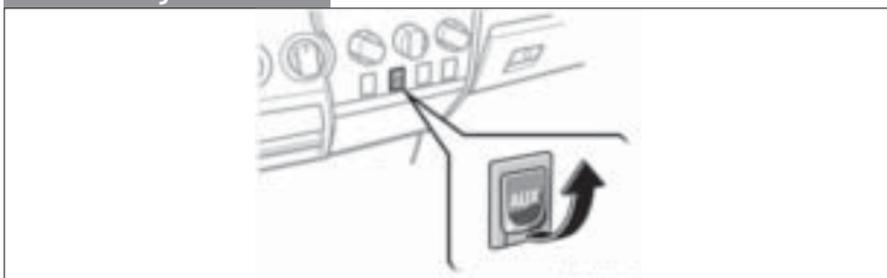


By inserting a mini plug into the AUX audio jack, you can listen to music from a portable audio device through the vehicle's speaker system.

## Rear seat entertainment system (if equipped)

### Separate seats

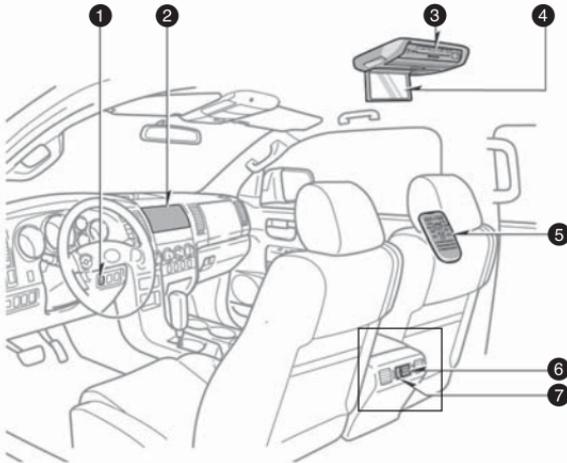


### Bench seat

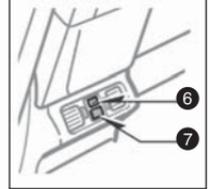

- ① 115V AC Power outlet ON/OFF switch
- ② Front audio system
- ③ DVD player
- ④ DVD screen
- ⑤ Remote control
- ⑥ 115V AC Power outlet
- ⑦ A/V input adapter


## Telephone controls (Bluetooth®) (if equipped)

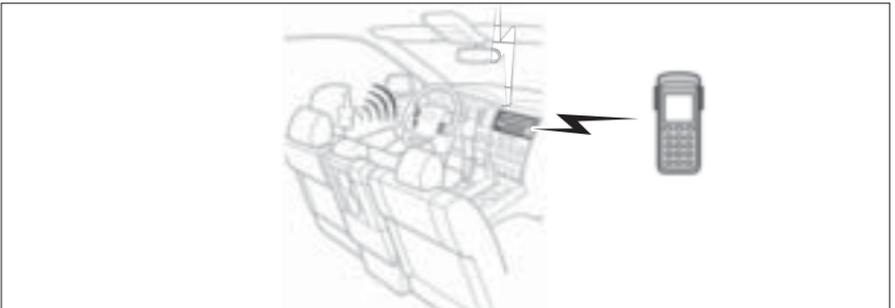

Bluetooth® technology allows you to place or receive calls without taking hands from the steering wheel or using a cable to connect the telephone and the system.

Refer to "Hands-free telephone system," Section 1-8 in the *Owner's Manual* for more details.

## Accessory meter (if equipped)

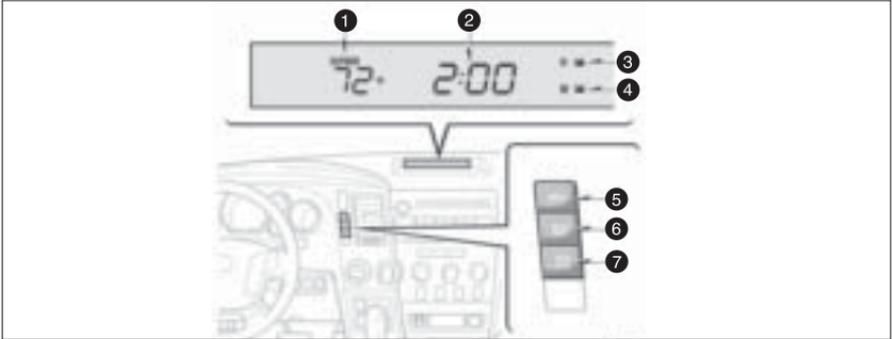


- ① Outside temperature/cruise information display
- ② Clock
- ③ Hour set
- ④ Minute set
- ⑤ Change information (if equipped)
- ⑥ "SELECT RESET" button (if equipped)
- ⑦ "SETUP US/M" button (if equipped) to customize unit


Refer to your *Owner's Manual* for complete details on this system before attempting to use it.

## Cruise control (if equipped)

### Turning system ON/OFF

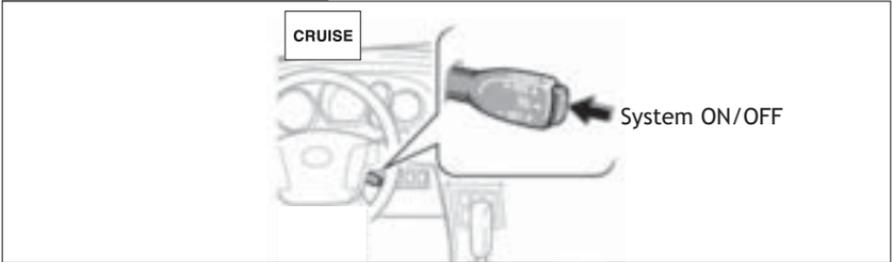

### Functions

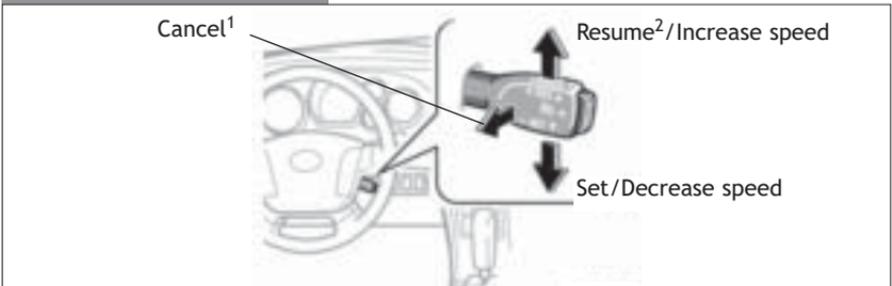

<sup>1</sup> The set speed may also be cancelled by depressing the brake pedal.

<sup>2</sup> The set speed may be resumed once vehicle speed exceeds 25 mph.


## Parking brake




## Cup holders

### Separate seat

#### Center console

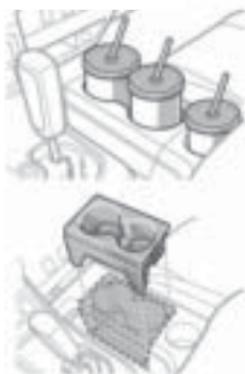

#### Back of the center console box (double cab model)

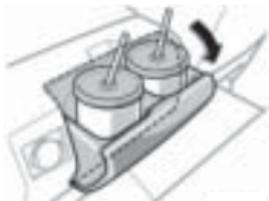


### Bench seat

#### Front center seat




#### Back of the front center seatback (double cab model)

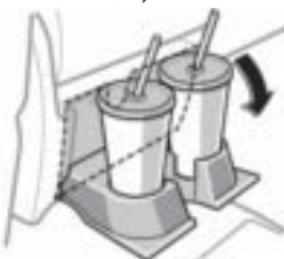


### Rear seat

#### Crew Max model

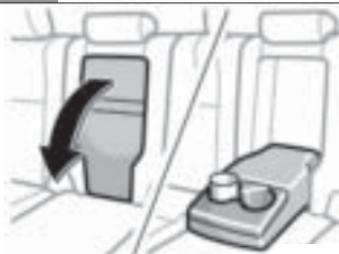

## Bottle holders


Instrument panel

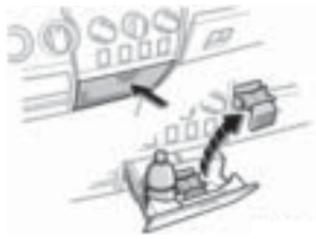

Front door



Rear door

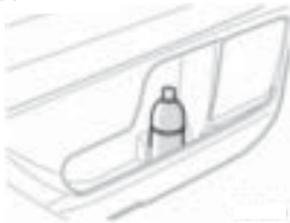


Rear door (Crew Max model)




## Auto LSD (Auto Limited Slip Differential)

Auto LSD with VSC

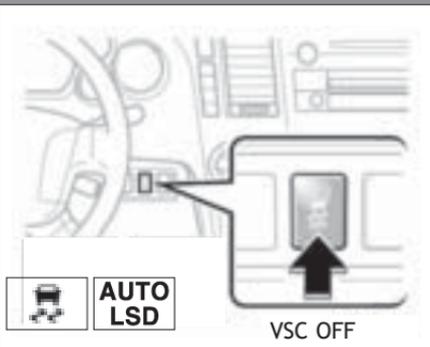

Briefly pushing the "VSC OFF" switch activates/deactivates Auto LSD with VSC. Vehicle speed must be under 62 mph.

Auto LSD without VSC

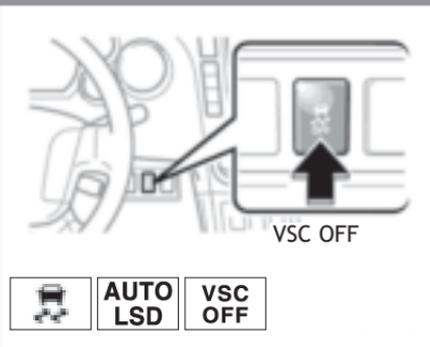


Push and hold "VSC OFF" more than three seconds to activate Auto LSD without VSC. Briefly push again to deactivate the system. Vehicle must be stopped.

**Note:** ONLY works in 2-wheel drive mode. Should ONLY be used when wheel spinning occurs on slippery or unpaved surfaces. Pushing and holding "VSC OFF" for three seconds activates VSC and deactivates Auto LSD.

Refer to the *Owner's Manual* for more details on this system before attempting to use it.

# SAFETY AND EMERGENCY FEATURES


## Seat belts

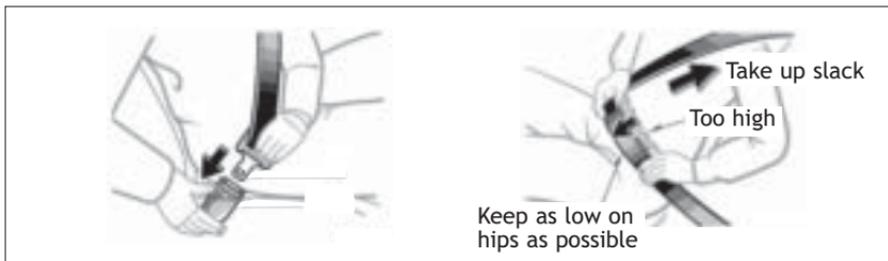


If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.

## Seat belts-Shoulder belt anchor (double cab and Crew Max models)

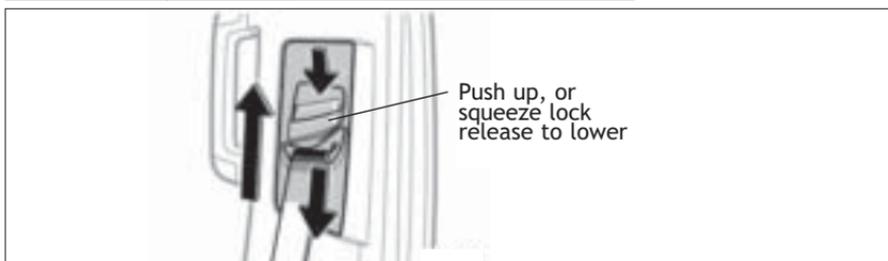

## Tire Pressure Warning System

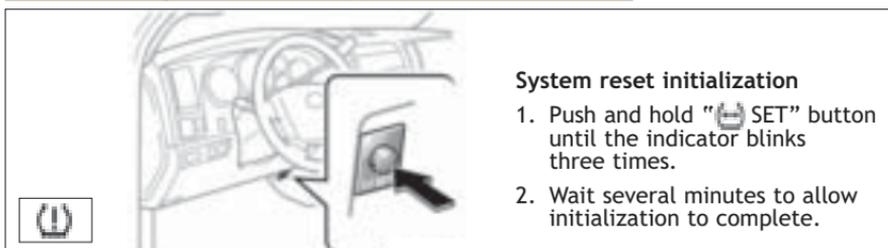

If tire pressure becomes critically low on any of the tires (excluding spare), indicator illuminates. Pushing "SET" button should not turn off the light. Correctly adjusting tire inflation will turn off the light after a few minutes. After replacing/rotating tire or wheels, the system must be initialized.

Refer to the *Owner's Manual* for more details.