



moving forward ▶

YARIS LIFTBACK

*2008
Quick Reference Guide*

2008 YARIS Liftback

This *Quick Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Quick Reference Guide* is not intended as a substitute for the *Owner's Manual* located in your vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Yaris.

! A word about safe vehicle operations

This *Quick Reference Guide* is not a full description of Yaris operations. Every Yaris owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in yellow throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.


All information in this *Quick Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

INDEX


Item	Page no.
OVERVIEW	
Engine maintenance	7
Fuel tank door release and cap	6
Hood release	7
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Keyless entry	6
FEATURES/OPERATIONS	
Air Conditioning/Heating	13
Audio	14-15
Automatic Transmission	8
Bottle holders	15
Clock	13
Cup holders	15
Door-Back	12
Light control-Instrument panel	11
Lights & turn signals	11
Luggage storage box	15
Parking brake	8
Power outlet	13
Seat adjustments-Front	9
Seat adjustments-Rear	9
Seat-Folding rear seat	10
Seats-Head restraints	9
Tilt steering wheel	8
Windows-Power	12
Windshield wipers & washers	12
SAFETY AND EMERGENCY FEATURES	
Child comfort guide	17
Door locks	16
Seat belts	16
Spare tire & tools	17
Tire Pressure Warning System	16

OVERVIEW

Instrument panel

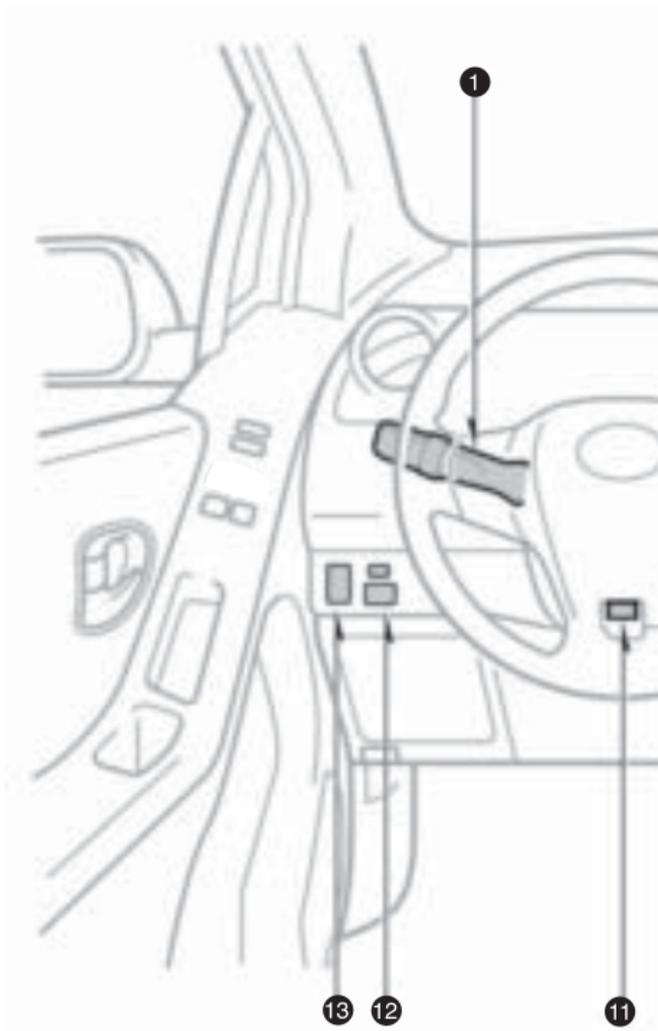

- ① Headlight, turn signal and front fog* light controls
- ② Wiper and washer controls
- ③ Emergency flasher switch
- ④ Audio system*
- ⑤ "AIRBAG ON" and "AIRBAG OFF" indicator
- ⑥ Front passenger seat belt reminder light
- ⑦ Rear window defogger switch*
- ⑧ 12V DC Power outlet

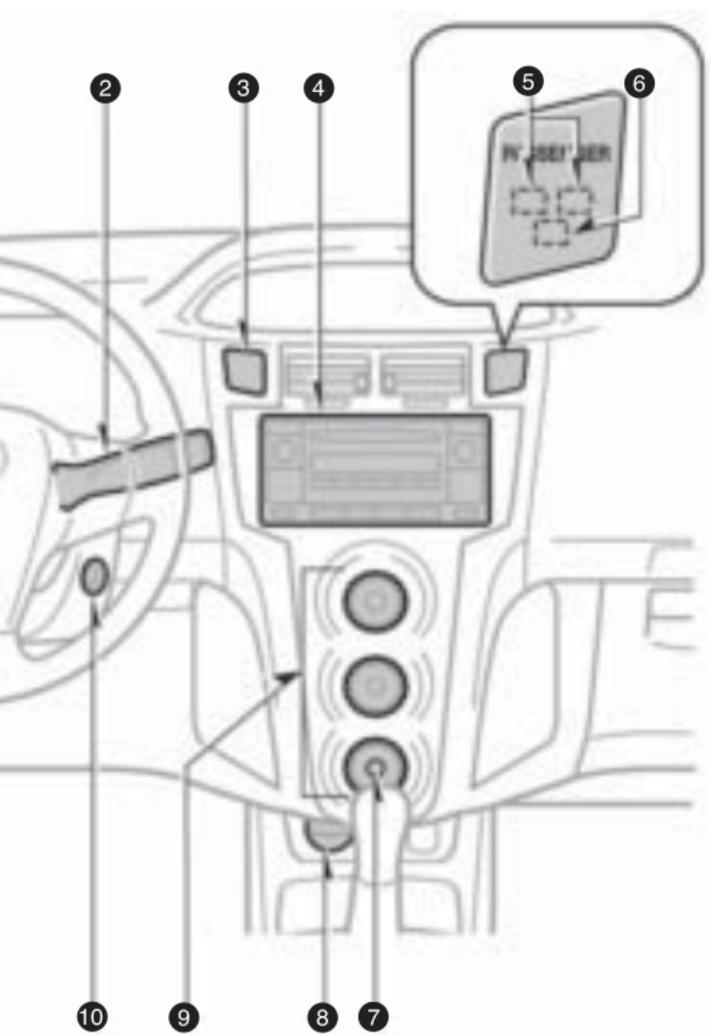


- 9 Air Conditioning controls
- 10 Ignition switch
- 11 Tilt steering lock release lever
- 12 Power rearview mirror control switches
- 13 Instrument panel light control


* If equipped

Instrument cluster

Without tachometer

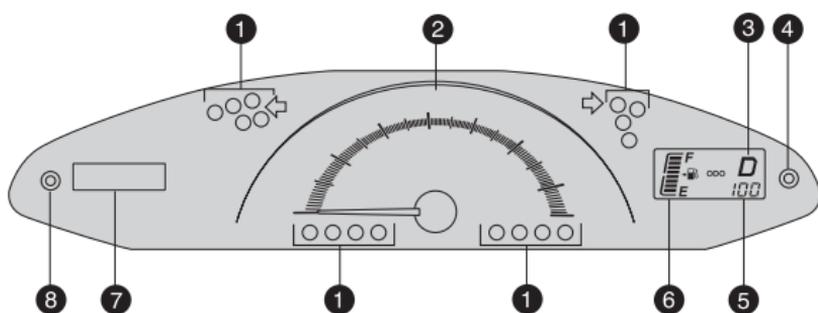

With tachometer

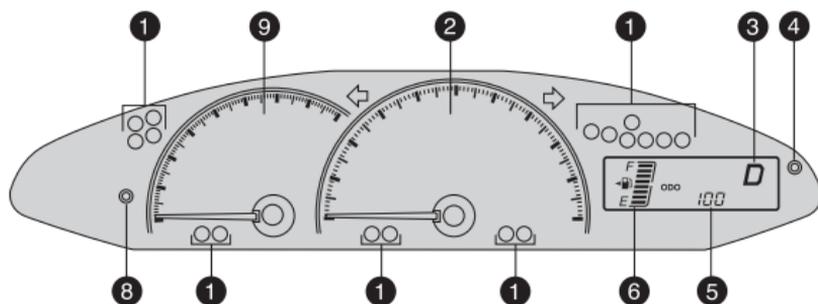

- ① Service indicator and reminder
- ② Speedometer
- ③ Automatic Transmission shift position indicator
- ④ Trip meter reset knob
- ⑤ Odometer and two trip meters
- ⑥ Fuel gauge
- ⑦ Clock
- ⑧ Clock reset knob
- ⑨ Tachometer

Indicator symbols

BRAKE

Brake system warning¹



 
 
 
 
 
Driver seat belt reminder¹
(alarm will sound if speed is over 12 mph)

PASSENGER



Front passenger seat belt reminder¹
(alarm will sound if speed is over 12 mph)


¹ For details, refer to “Indicators and warning lights,” Section 2-2, 2008 Owner’s Manual.

	Charging system warning ¹
	Malfunction/Check Engine indicator ¹
	Low engine oil pressure warning ¹
	Open door warning ¹
	Airbag SRS warning ¹
	Electric power steering system warning ¹
	Low windshield washer fluid level warning ¹
	Low Tire Pressure Warning ¹
	Engine oil replacement reminder ¹
	"AIRBAG ON" indicator
	"AIRBAG OFF" indicator
	Headlight low beam indicator
	Headlight high beam indicator
	Front fog light indicator
	Turn signal indicator
	Low fuel level warning ¹
	High engine coolant temperature warning ¹
	Low engine coolant temperature indicator ²
	Anti-lock Brake System warning ¹

² For details, refer to "If your vehicle overheats," Section 5-2, 2008 Owner's Manual.


OVERVIEW

Fuel tank door release and cap

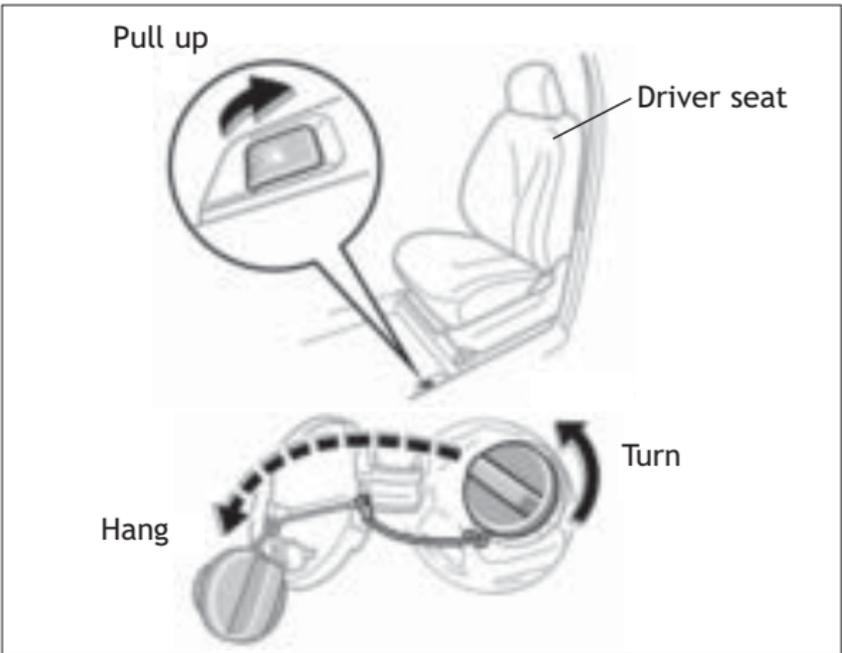

NOTE: Tighten until one click is heard. If the cap is not tightened enough, Check Engine "CHECK" indicator may illuminate.

Keyless entry (if equipped)

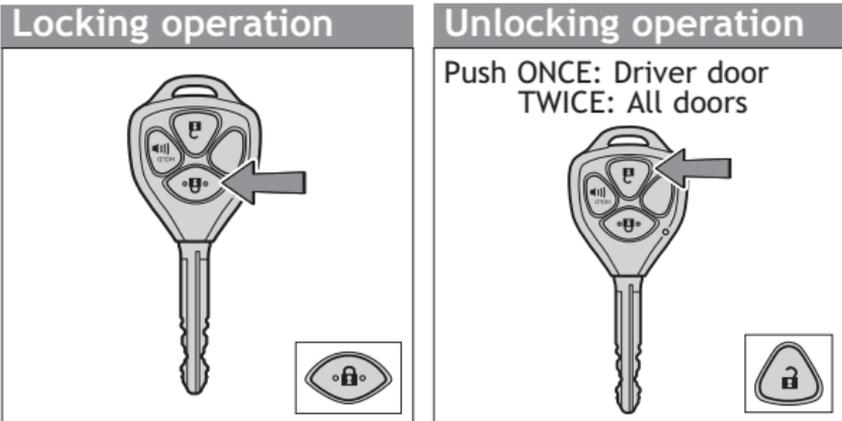


NOTE: After unlocking, if a door is not opened within 30 seconds, all doors will relock for safety.


Panic button



Hood release

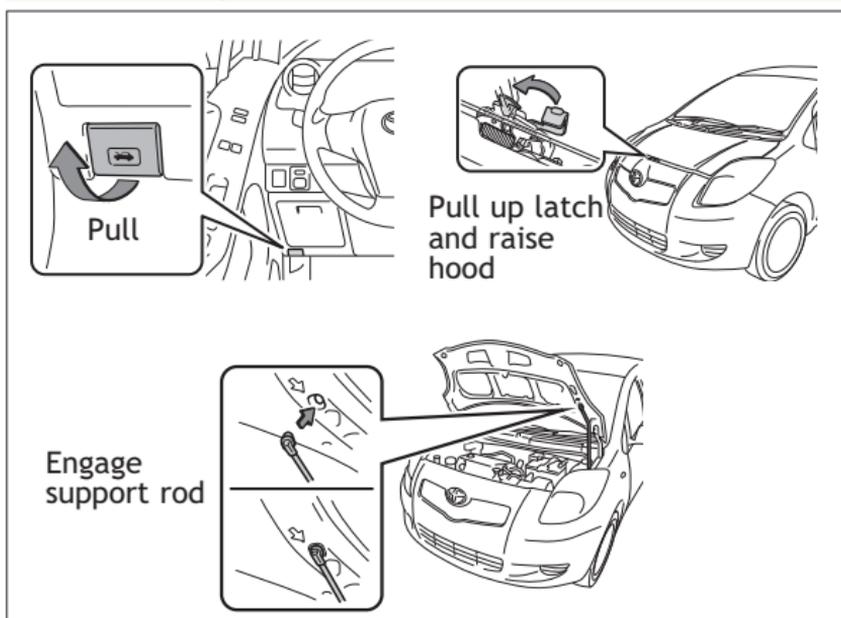

Engine maintenance

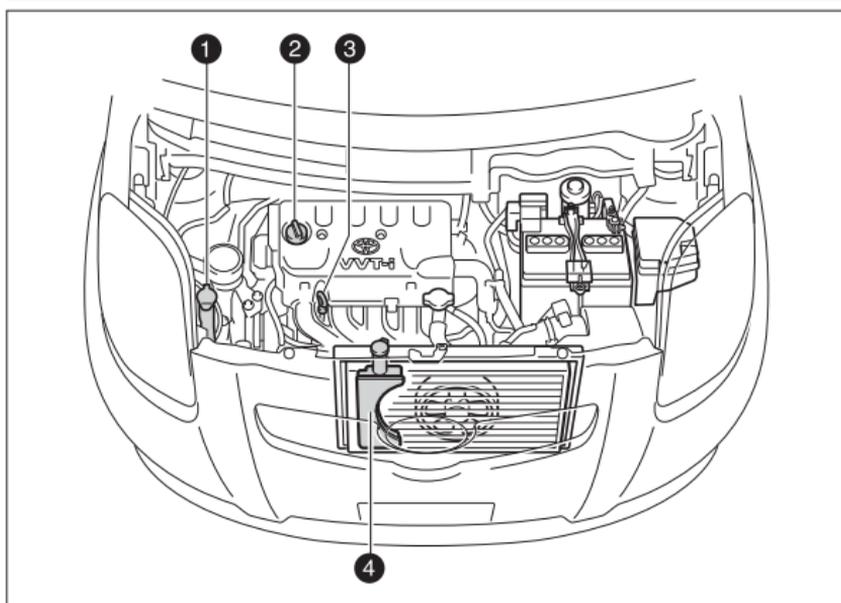


- ❶ Windshield washer and rear window washer fluid tank
- ❷ Engine oil filler cap
- ❸ Engine oil level dipstick
- ❹ Engine coolant reservoir

Note: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the "Owner's Warranty Information Booklet," "Scheduled Maintenance Guide" or "Owner's Manual Supplement."

FEATURES/OPERATIONS


Automatic Transmission (if equipped)

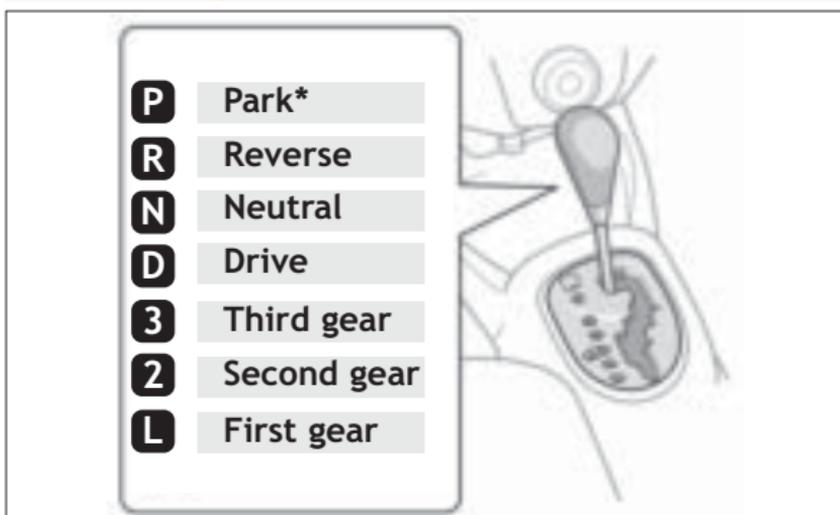

* The ignition switch must be ON, and the brake pedal depressed to shift from "Park."

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.


Tilt steering wheel

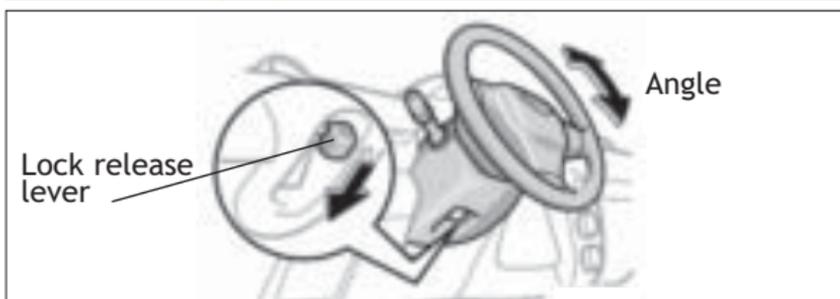


Hold wheel, push lever down, set angle and return lever.

Note: Do not attempt to adjust while the vehicle is in motion.

Parking brake

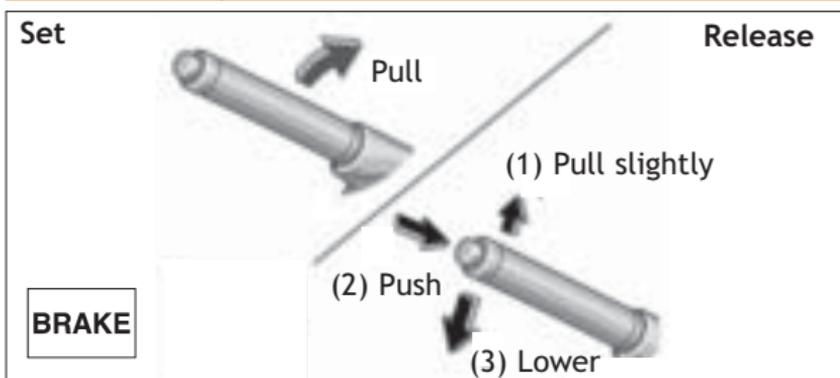

Seat adjustments-Front

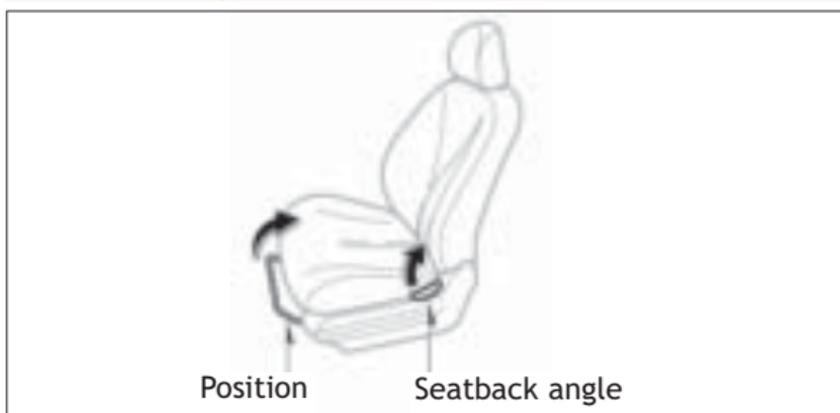


Seat adjustments-Rear

Split seat

Seatback angle/Fold




Non-Split seat

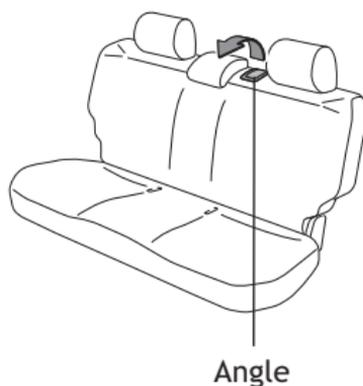


Seats-Head restraints


Front seats

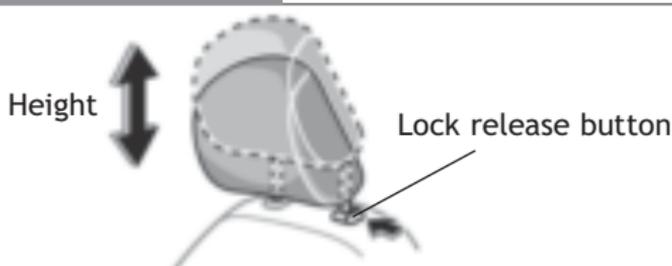

Rear seats (split seat)

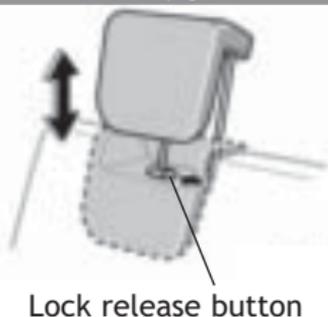


Rear seats (non-split seat)

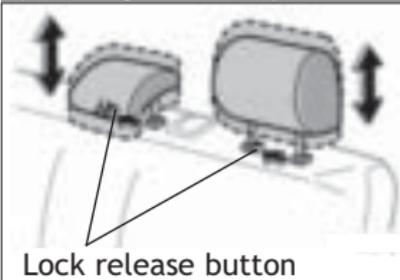


Seat-Folding rear seat


Before folding

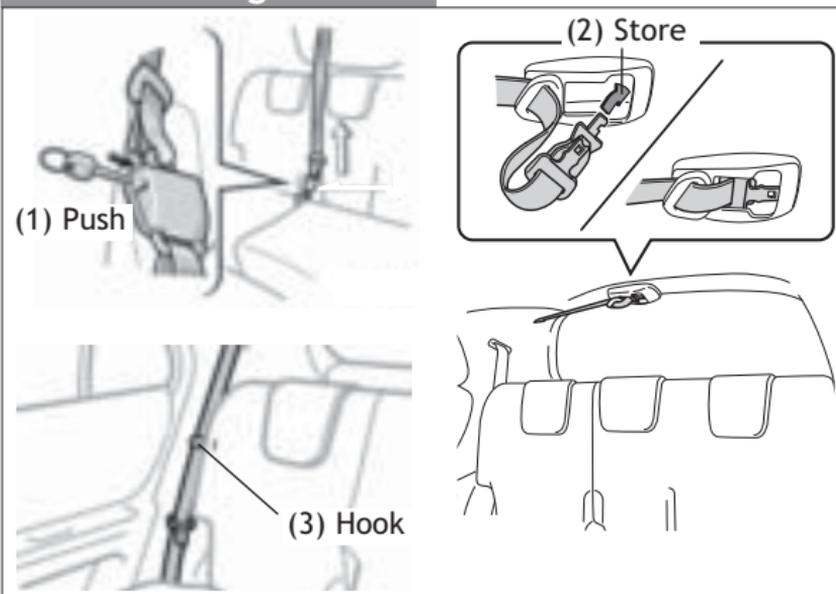

Fold (split seat)

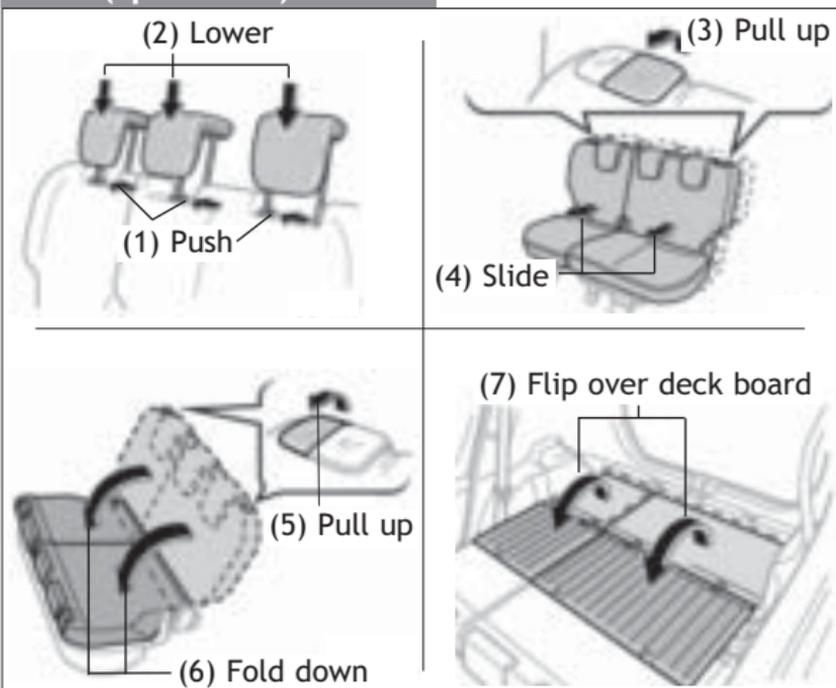


Fold (non-split seat)

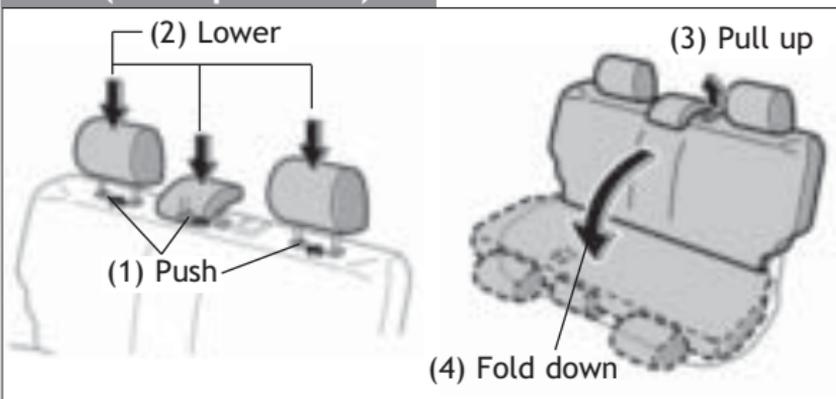

Lights & turn signals

Headlights

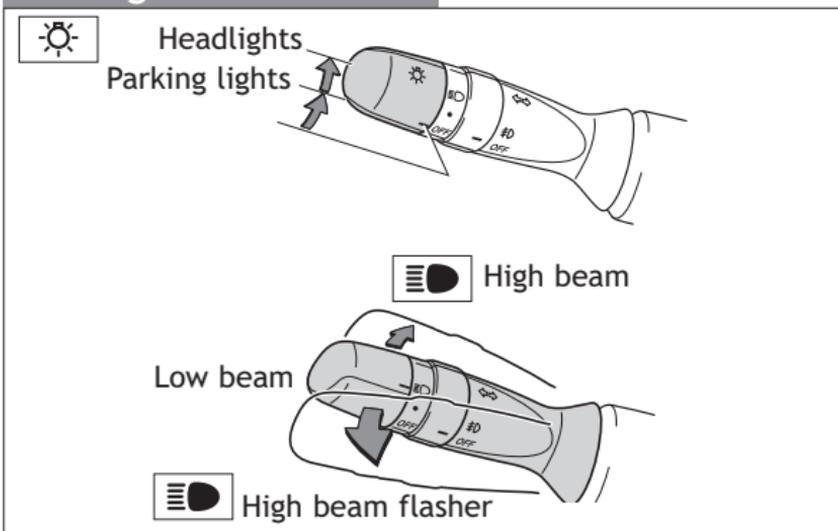


-Daytime Running Light system (DRL)*


Automatically turns on the headlights at a reduced intensity.

* If equipped

Turn signals

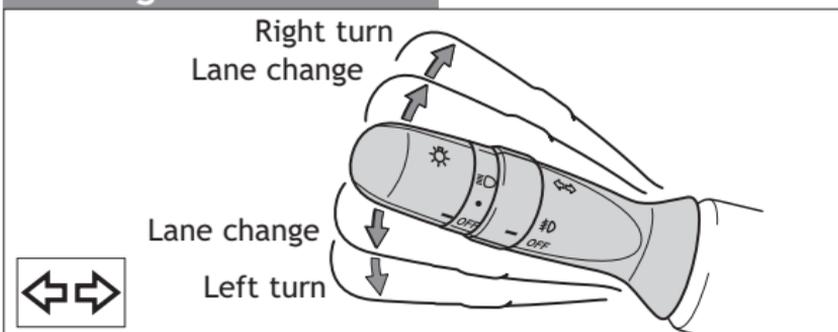


Front fog lights (if equipped)

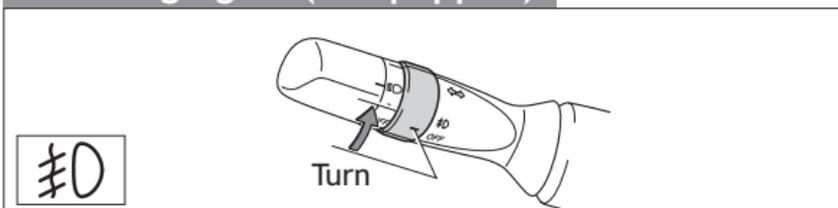

Front fog lights turn on only when the headlights are on low beam.


Light control-Instrument panel

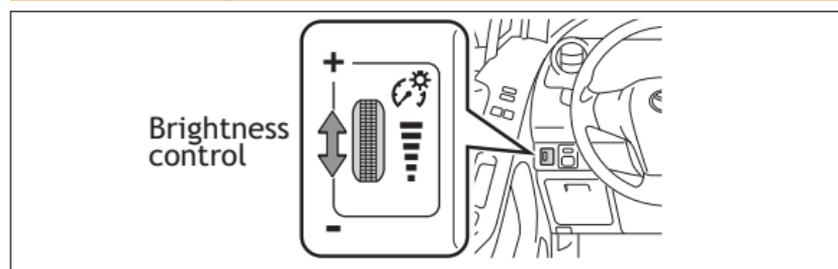


FEATURES/OPERATIONS

Windshield wipers & washers

Front

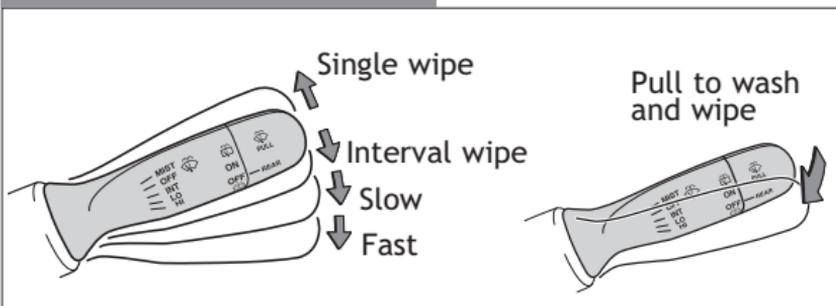


Rear

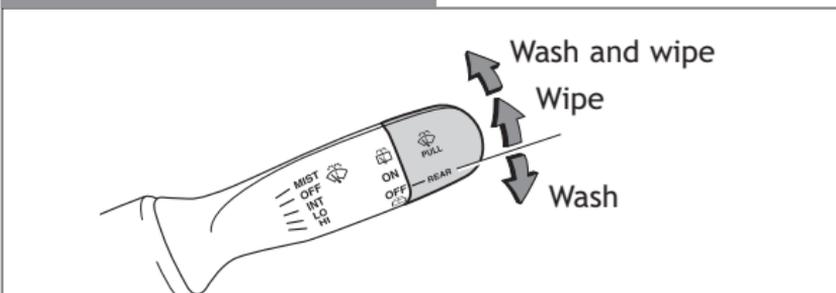

Windows-Power (if equipped)

Driver side

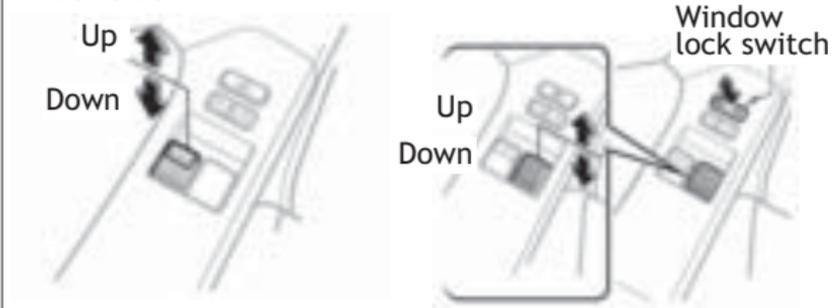


Window operation

Automatic operation (driver side only) Push the switch completely down and release to fully open. To stop window midway, lightly pull the switch up.


Window lock switch Deactivates all passenger windows. Driver's window remains operable.

Door-Back

Open/Close

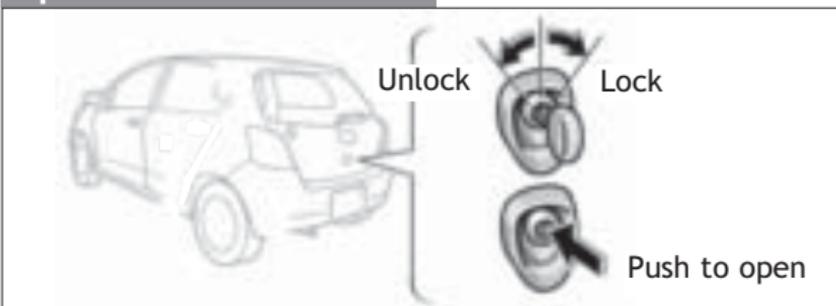


Air Conditioning (if installed)/Heating

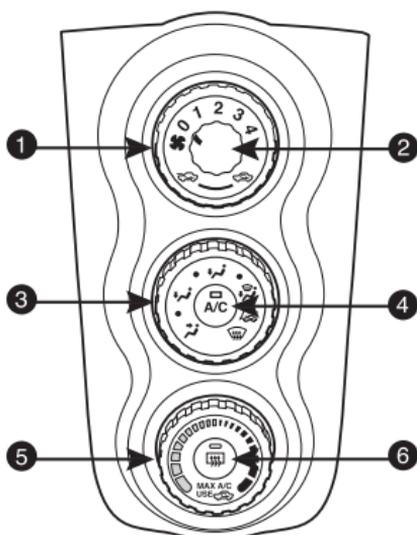

- ① Fresh or recirculated cabin air
 - ② Fan speed
 - ③ Airflow vent
In “” or “” mode, use fresh air to reduce window fogging.
 - ④ Air Conditioning ON/OFF*
 - ⑤ Temperature
 - ⑥ Rear defogger*
- * If equipped

Clock

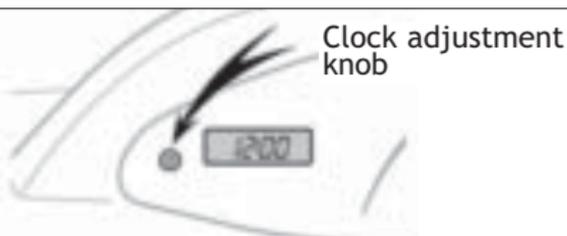

Refer to the *Owner's Manual* for adjustment instructions.


Power outlet




Designed for 12V car accessories. Key must be in the “ACC” or “ON” position to be used.

Audio

Type A

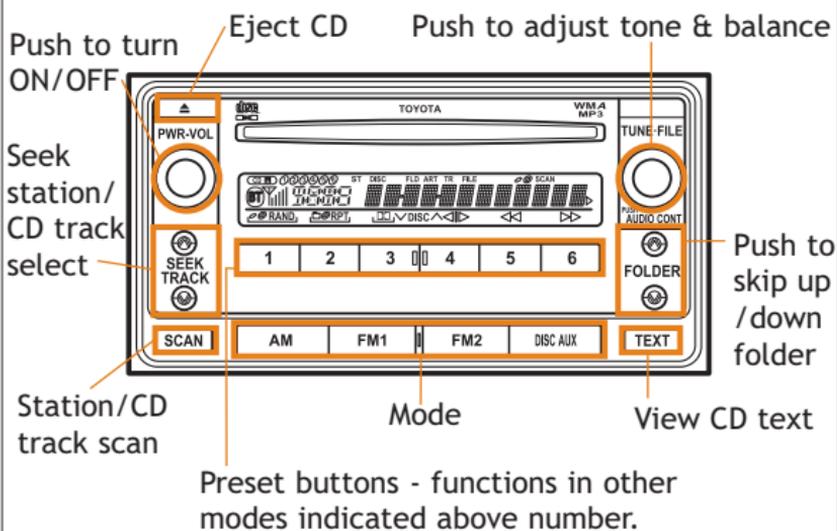

Type B

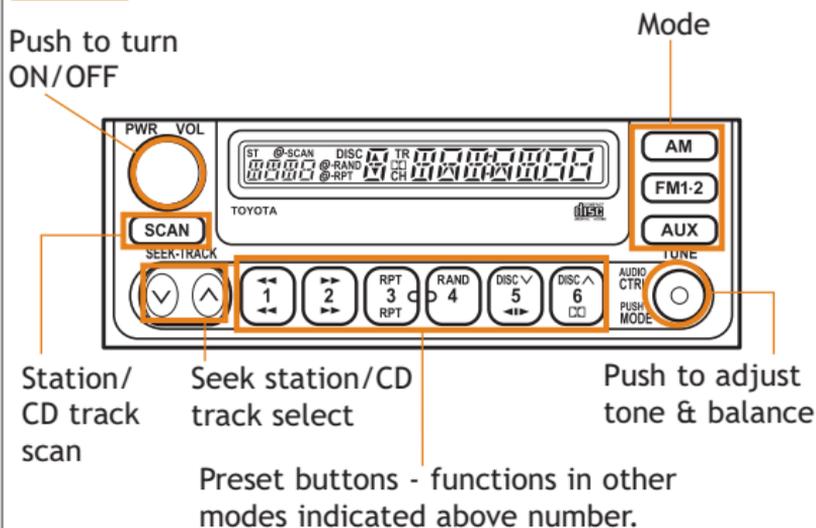


CD PLAYER

To scan tracks on a disc Push and hold "SCAN." Push again to hold selection.

RADIO

To preset stations Tune in the desired station and hold down a preset button (1-6) until you hear a beep. Push desired preset button (1-6) to select.
To scan stations Push "SCAN." Push and hold to scan preset stations. Push again to hold selection.


AUX audio jack (if equipped)

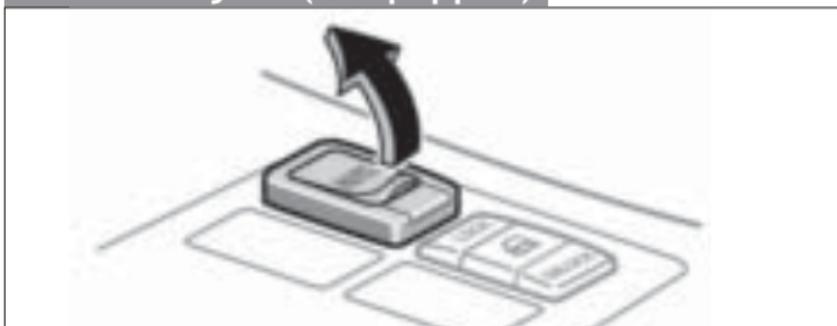

By inserting a mini plug of a commercially available component into the AUX audio jack, you can listen to music from a portable audio device through the vehicle's speaker system.

Cup holders

Front

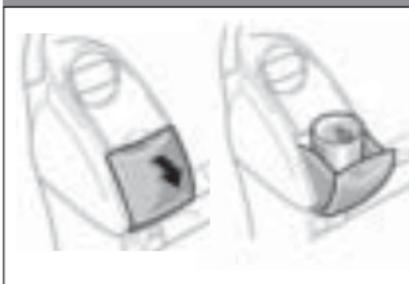


Rear



Bottle holders

Front door

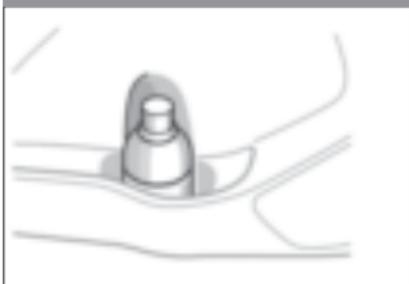

Rear




Luggage storage box

Open


Right side:
Turn to unlock

Left side:
Turn to unlock

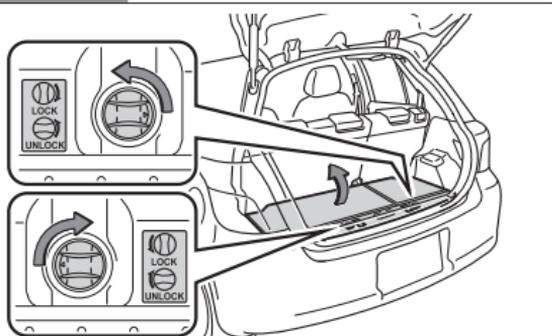


SAFETY AND EMERGENCY FEATURES

Door locks

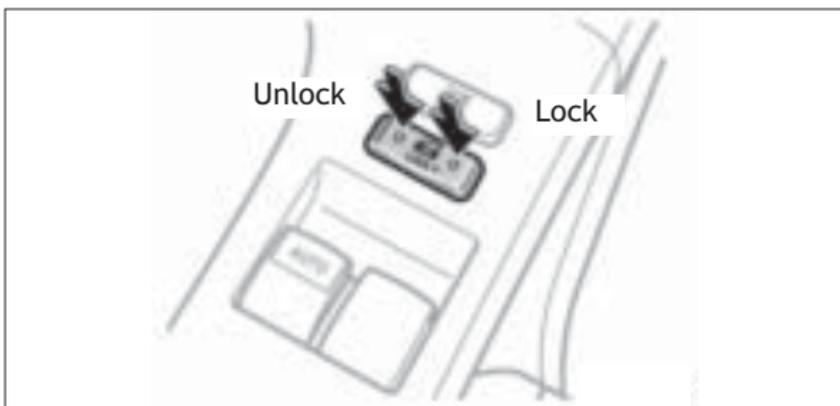

Seat belts

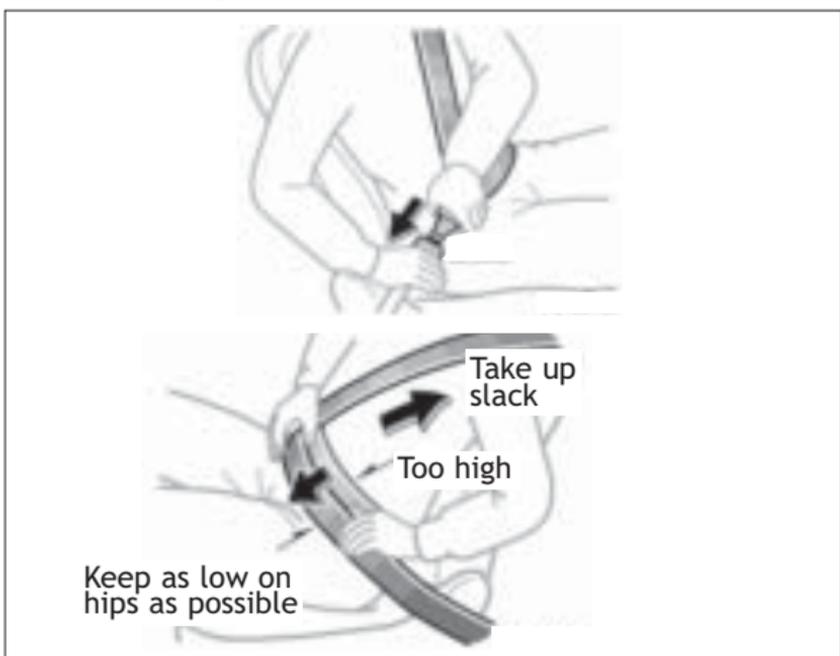

If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.


To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.

Tire Pressure Warning System

If tire pressure becomes critically low on any of the tires (excluding the spare), indicator will illuminate. Correctly adjusting tire inflation will turn off the light after a few minutes. If the light does not turn off, have the system checked by your Toyota dealer.

Refer to the *Owner's Manual* for more details.


Child comfort guide

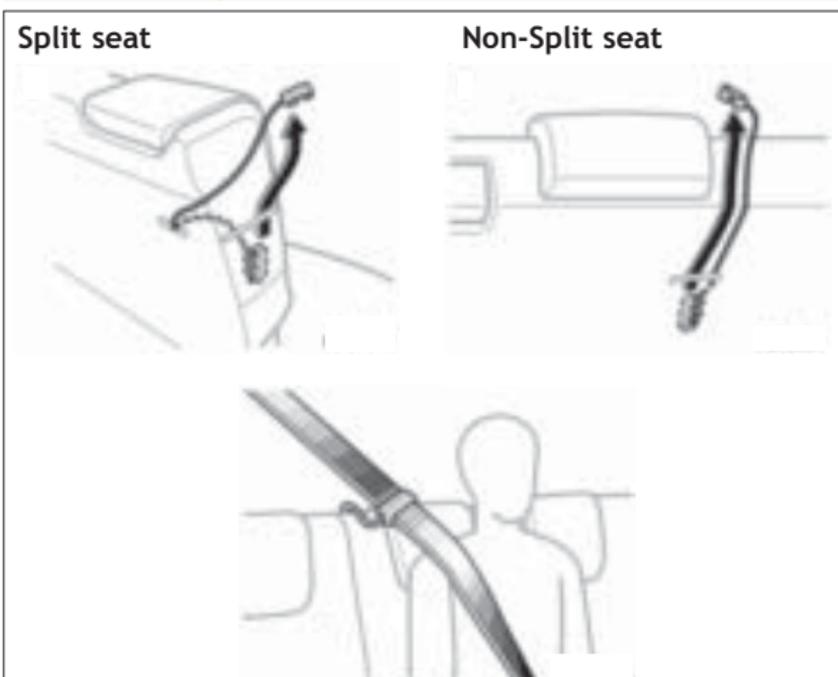


Rear seat center position guides provide added comfort for children who have outgrown child restraints.

Spare tire & tools

Tool location

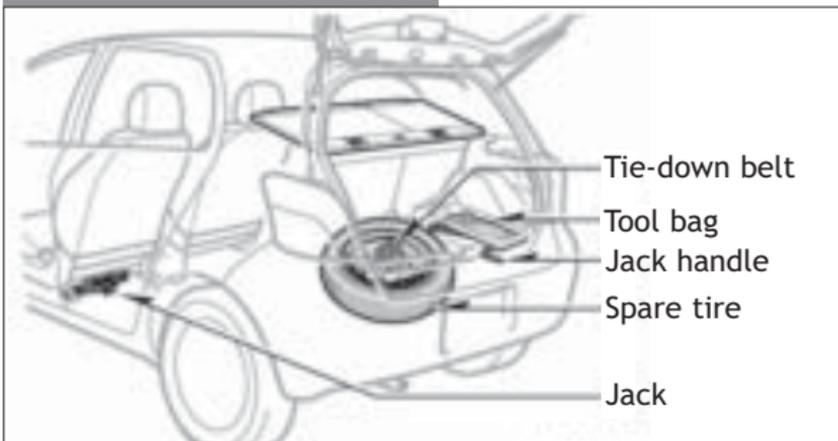

Removing the spare tire

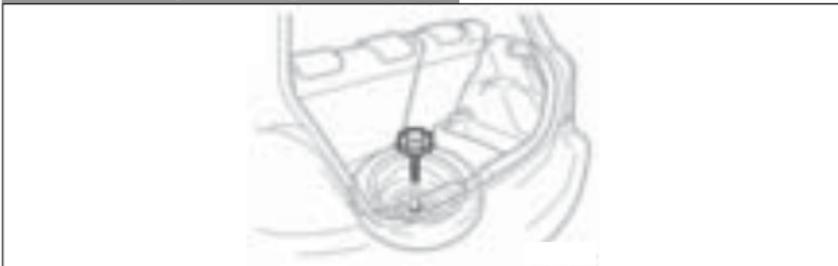

Loosen and remove the bolt.

Refer to the *Owner's Manual* for tire changing and jack positioning procedures.



Customer Experience Center
1-800-331-4331