



*moving forward ▶*

# ***YARIS*** SEDAN

*2008  
Quick Reference Guide*

# 2008 YARIS Sedan

This *Quick Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Quick Reference Guide* is not intended as a substitute for the *Owner's Manual* located in your vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Yaris.

## **! A word about safe vehicle operations**

This *Quick Reference Guide* is not a full description of Yaris operations. Every Yaris owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in yellow throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Quick Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

# INDEX


Item	Page no.
<b>OVERVIEW</b>	
Engine maintenance	7
Fuel tank door release and cap	6
Hood release	7
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Keyless entry	6
Trunk release	6
<b>FEATURES/OPERATIONS</b>	
Air Conditioning/Heating	13
Audio	12-13
Automatic Transmission	8
Bottle holders-Rear seat	15
Clock	14
Cruise control	14
Cup holders	15
Light control-Instrument panel	14
Lights & turn signals	11
Parking brake	9
Power outlet	13
Seat adjustments-Front	9
Seat adjustments-Rear	10
Seats-Head restraints	10
Tilt steering wheel	8
Windows-Power	9
Windshield wipers & washers	11
<b>SAFETY AND EMERGENCY FEATURES</b>	
Door locks-Power	16
Doors-Child safety locks	16
Seat belts	16
Seat belts-Shoulder belt anchor	17
Spare tire & tools	17
Trunk-Internal release	17
Tire Pressure Warning System	16

# OVERVIEW

## Instrument panel



- ① Headlight, turn signal and front fog\* light controls
- ② Wiper and washer controls
- ③ Audio system
- ④ Emergency flasher switch
- ⑤ "AIR BAG ON" and "AIR BAG OFF" indicator
- ⑥ Front passenger seat belt reminder light
- ⑦ Air Conditioning controls
- ⑧ AUX adapter\*

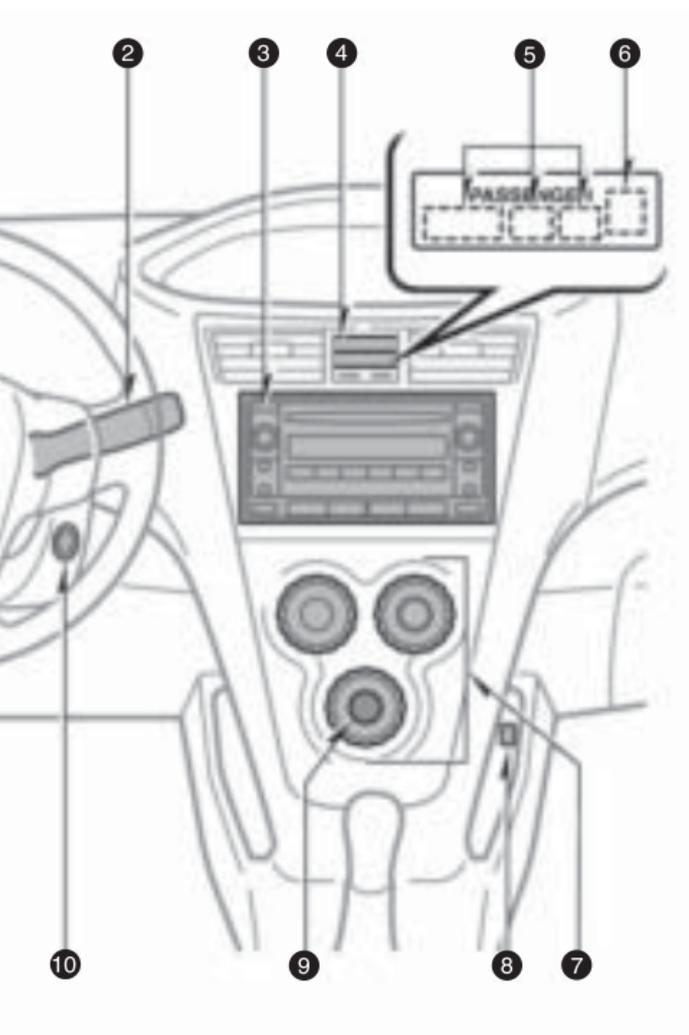


- 9 Rear window defogger switch\*
- 10 Engine switch
- 11 Tilt steering lock release lever
- 12 Power rearview mirror control switches\*
- 13 Instrument panel light control

\* If equipped


# OVERVIEW

## Instrument cluster

### With tachometer

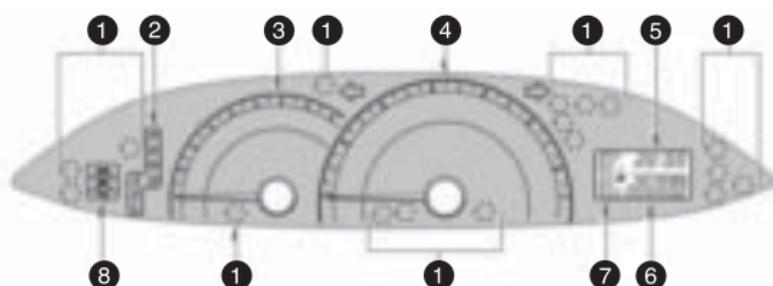

### Without tachometer

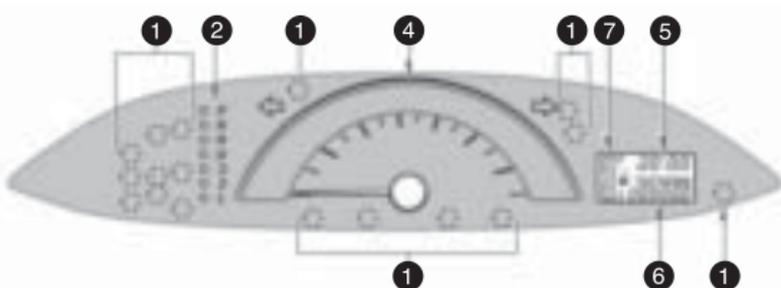

- ❶ Service indicator and reminder
- ❷ Gear shift position indicator\*
- ❸ Tachometer
- ❹ Speedometer
- ❺ Clock
- ❻ Odometer and two trip meters
- ❼ Fuel gauge
- ❽ Door indicator

\* If equipped

## Indicator symbols

**BRAKE** Brake system warning<sup>1</sup>

 
 
 
 
 
 
 Driver seat belt reminder<sup>1</sup>  
(alarm will sound if speed is over 12 mph)

 **PASSENGER** Front passenger seat belt reminder<sup>1</sup>  
(alarm will sound if speed is over 12 mph)

 Charging system warning<sup>1</sup>

<sup>1</sup> For details, refer to “If a warning light turns on or a warning buzzer sounds...,” Section 5-2, 2008 Owner’s Manual.


<sup>2</sup> For details, refer to “If your vehicle overheats,” Section 5-2, 2008 Owner’s Manual

	Malfunction/Check Engine indicator <sup>1</sup>
	Low engine oil pressure warning <sup>1</sup>
	Open door warning <sup>1</sup>
	Door indicator <sup>1</sup>
	Airbag SRS warning <sup>1</sup>
	Low windshield washer fluid level warning <sup>1</sup>
	Electric power steering system warning <sup>1</sup>
	Low fuel level warning <sup>1</sup>
	Engine oil replacement reminder <sup>1</sup>
	"AIR BAG ON" indicator
	"AIR BAG OFF" indicator
	Headlight low beam indicator
	Headlight high beam indicator
	Front fog light indicator
	Turn signal indicator
	High engine coolant temperature warning <sup>1</sup>
	Low engine coolant temperature indicator <sup>2</sup>
	Cruise control indicator <sup>3</sup>
	Anti-lock Brake System warning <sup>1</sup>
	Tire Pressure Warning <sup>1</sup>

<sup>3</sup> If this light flashes, refer to "Cruise control," Section 2-4, 2008 Owner's Manual.


# OVERVIEW

## Fuel tank door release and cap

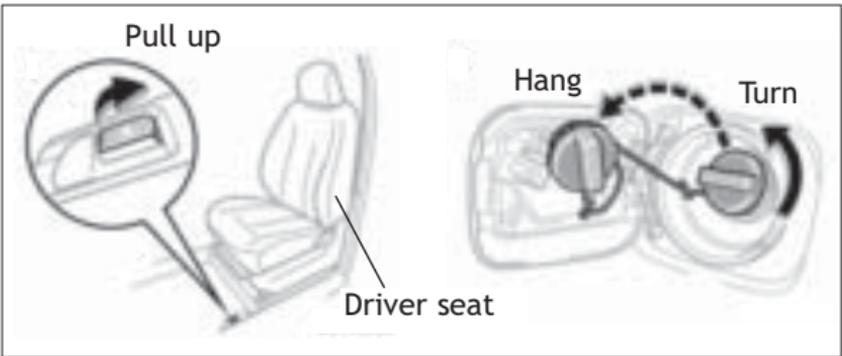

**NOTE:** Tighten until one click is heard. If the cap is not tightened enough, Check Engine "CHECK" indicator may illuminate.

## Keyless entry (if equipped)

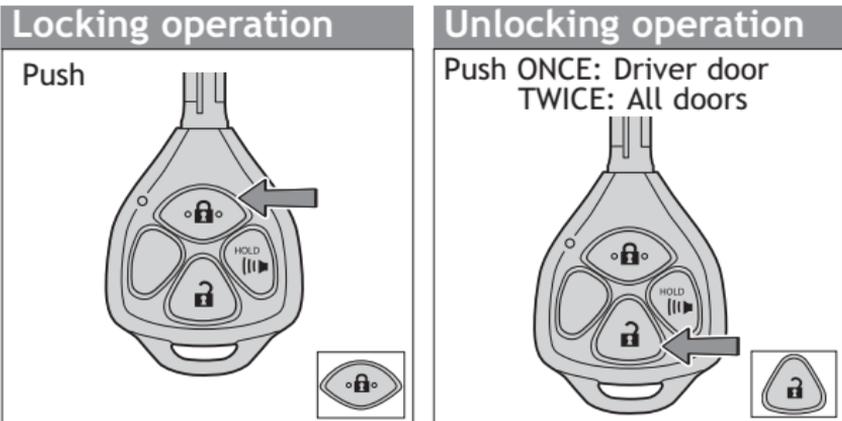

**NOTE:** After unlocking, if a door is not opened within 30 seconds, all doors will relock for safety.

## Panic button




## Trunk release



## Hood release



## Engine maintenance

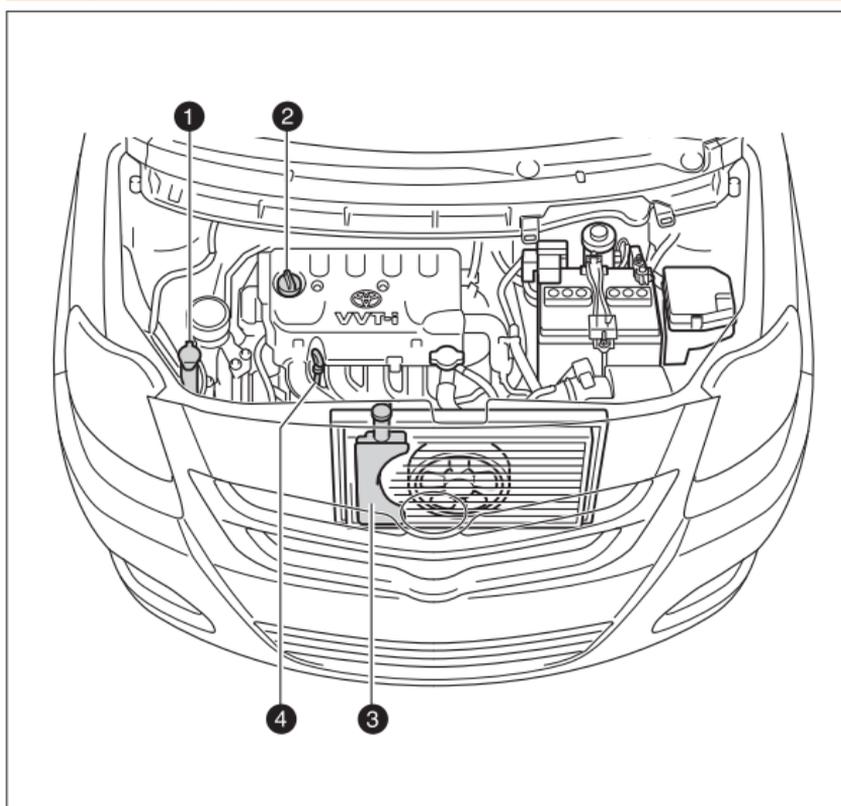


- ① Windshield washer fluid tank
- ② Engine oil filler cap
- ③ Engine coolant reservoir
- ④ Engine oil level dipstick

**Note:** Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the "Owner's Warranty Information Booklet," "Scheduled Maintenance Guide" or "Owner's Manual Supplement."

# FEATURES/OPERATIONS


## Automatic Transmission (if equipped)

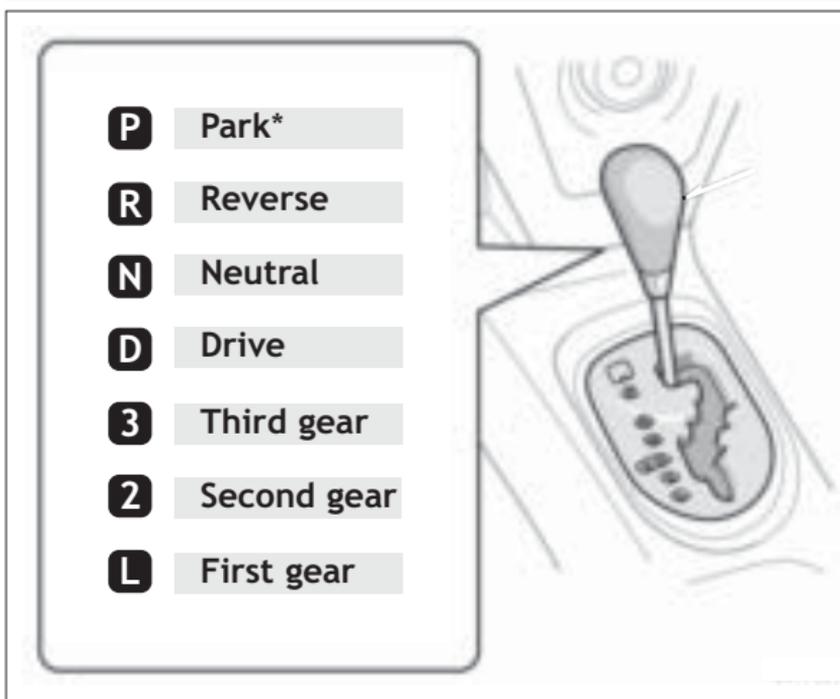

\* The engine switch must be ON, and the brake pedal depressed to shift from "Park."

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.


## Tilt steering wheel

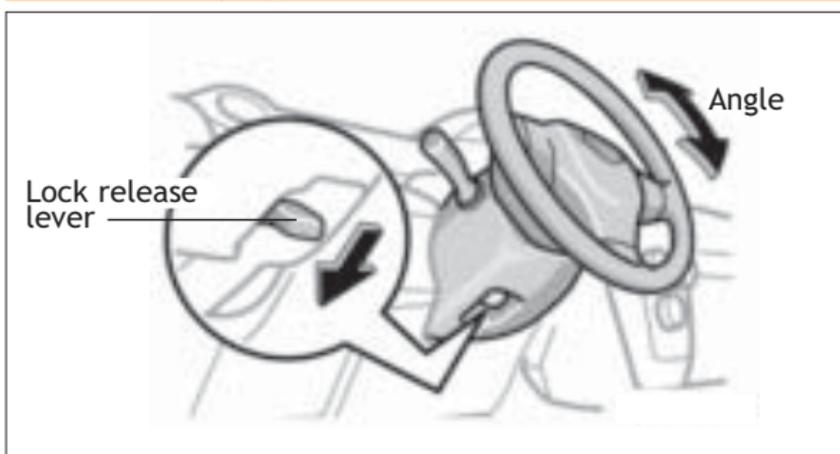

Hold wheel, push lever down, set angle and return lever.

**Note:** Do not attempt to adjust while the vehicle is in motion.

## Parking brake

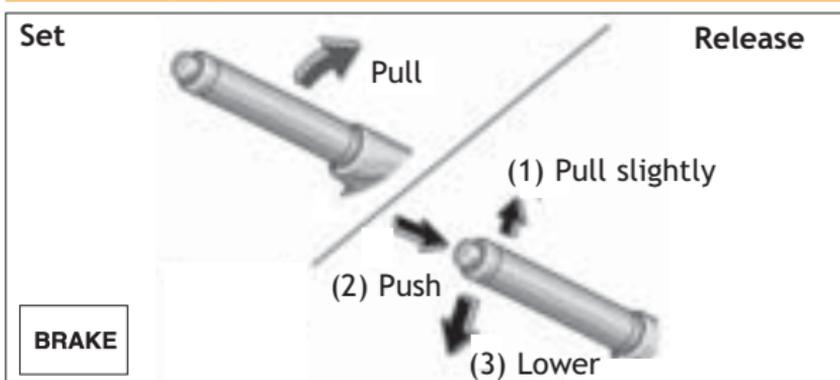

## Windows-Power (if equipped)



### Window operation

**Automatic operation (driver side only)** Push the switch completely down and release to fully open. To stop window midway, lightly pull the switch up.


**Window lock switch** Deactivates all passenger windows. Driver's window remains operable.

## Seat adjustments-Front




- 1 Position
- 2 Height crank (driver side only)
- 3 Seatback angle

## Seats-Head restraints

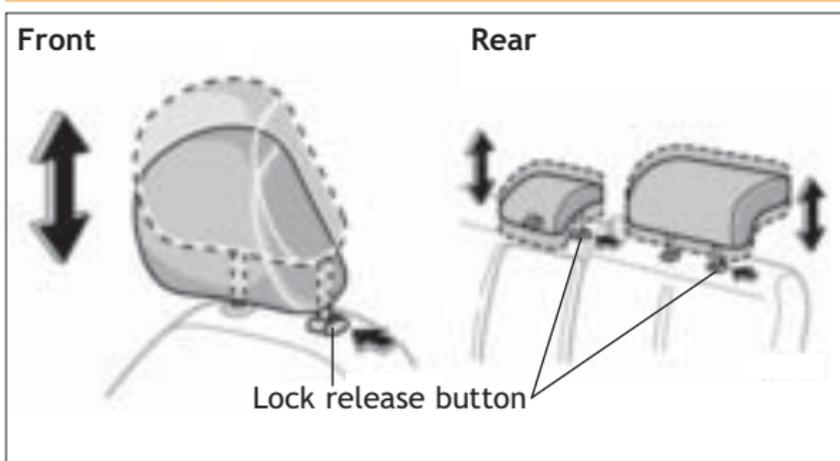

## Seat adjustments-Rear (fold-down type)

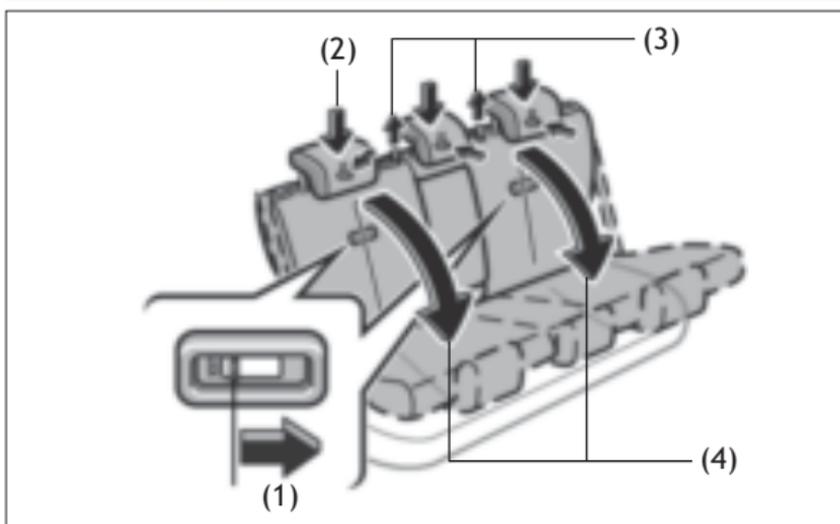


### To fold down the rear seatback

- (1) Slide the seatback security lock to the right unlock position from the trunk room.
- (2) Lower the seat headrests.
- (3) Pull the lock release knob up.
- (4) Fold the seatback down.

Refer to the *Owner's Manual* for more details.

## Lights & turn signals

### Headlights

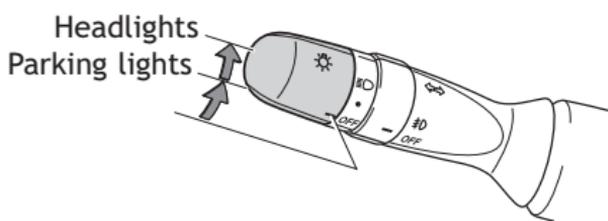


 High beam

Low beam

 High beam flasher

### Turn signals

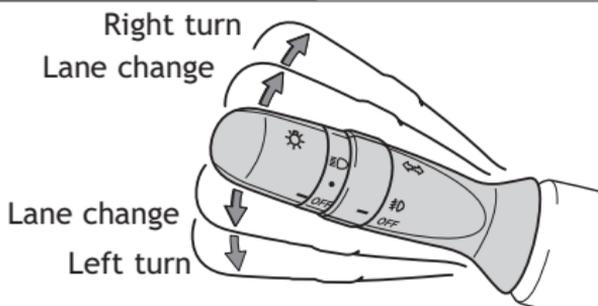


### Front fog lights (if equipped)



Front fog lights turn on only when the headlights are on low beam.


## Windshield wipers & washers

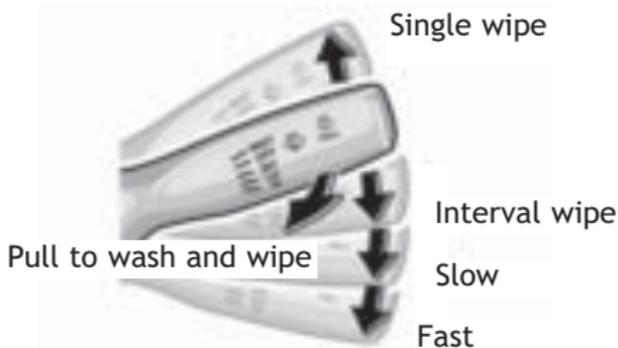


# FEATURES/OPERATIONS

## Audio

### Type 1

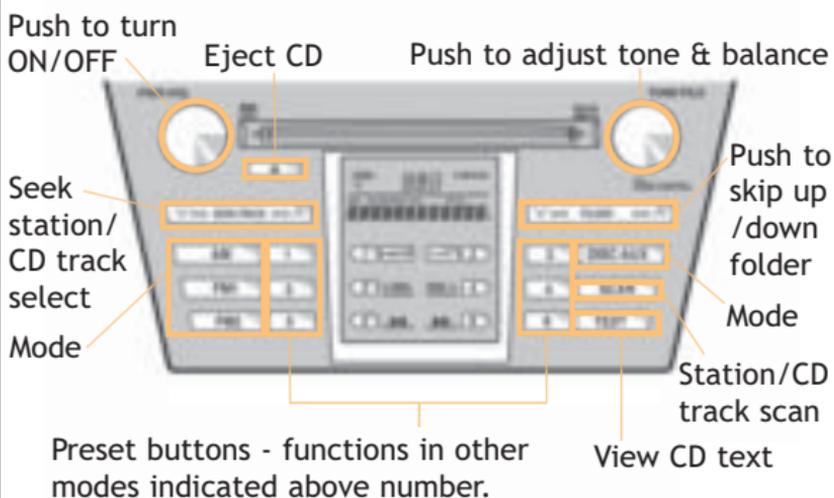

### Type 2

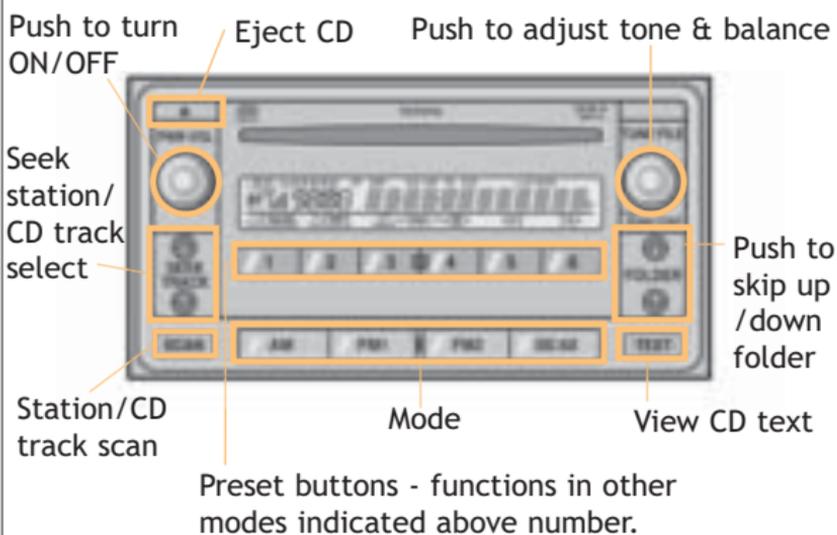

## CD PLAYER


**To scan tracks on a disc** Push and hold "SCAN." Push again to hold selection.

## RADIO

**To preset stations** Tune in the desired station and hold down a preset button (1-6) until you hear a beep. Push desired preset button (1-6) to select.


**To scan stations** Push "SCAN." Push and hold to scan preset stations. Push again to hold selection.

### AUX audio jack (if equipped)

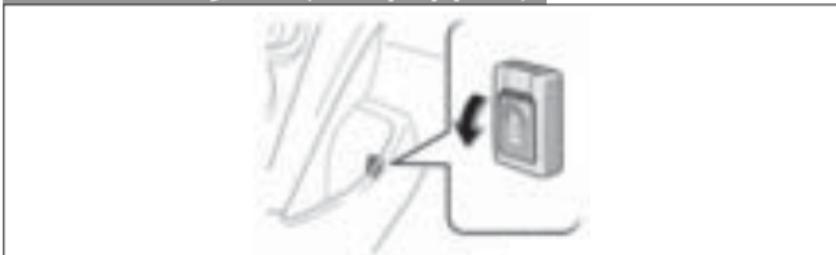

By inserting a mini plug of a commercially available component into the AUX audio jack, you can listen to music from a portable audio device through the vehicle's speaker system.


### Air Conditioning/Heating

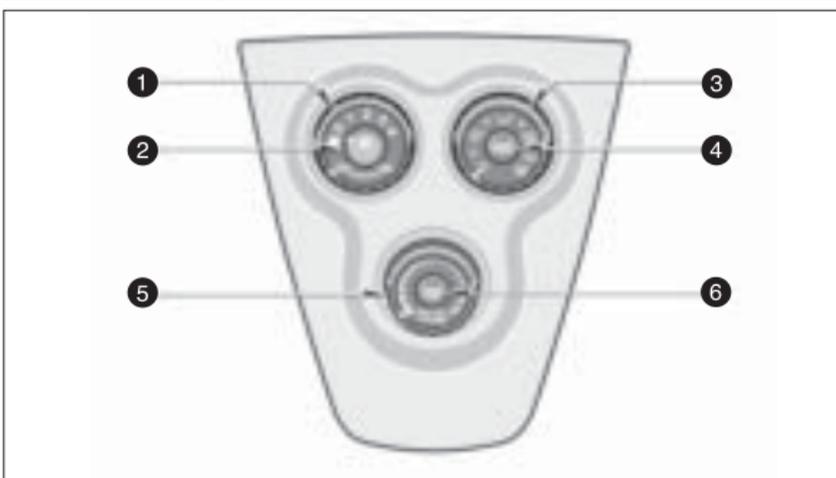

- 1 Fresh or recirculated cabin air
- 2 Fan speed
- 3 Airflow vent
- 4 Air Conditioning ON/OFF
- 5 Temperature
- 6 Rear defogger\*

\* If equipped

### Power outlet (if equipped)

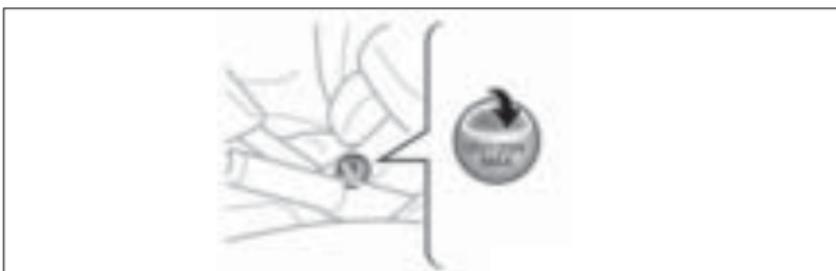


Designed for 12V car accessories. Key must be in the "ACC" or "ON" position to be used.


# FEATURES/OPERATIONS

## Cruise control (if equipped)

### Turning system ON/OFF

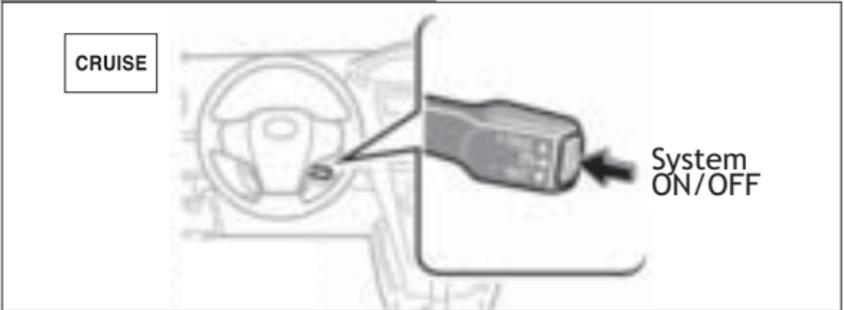

### Functions

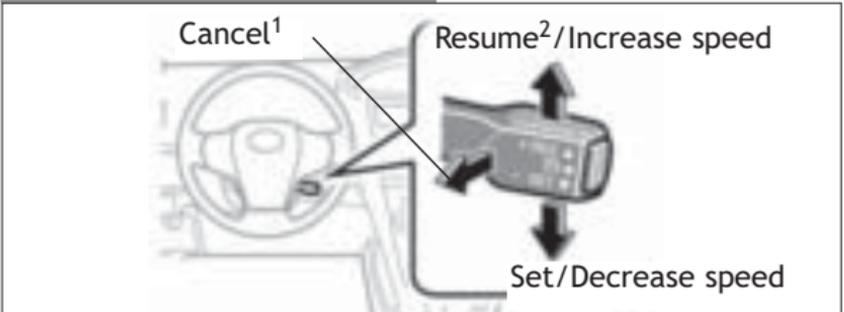


<sup>1</sup> The set speed may also be cancelled by depressing the brake pedal.


<sup>2</sup> Unless vehicle speed drops below 10 mph, the set speed may be resumed once vehicle exceeds 25 mph.

Refer to the *Owner's Manual* for more details.

## Light control-Instrument panel

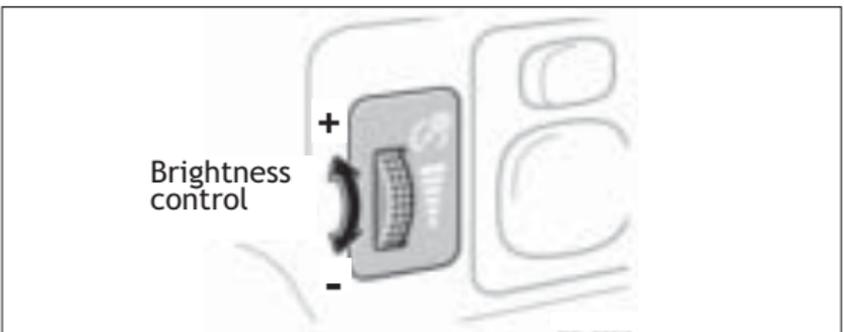

## Clock

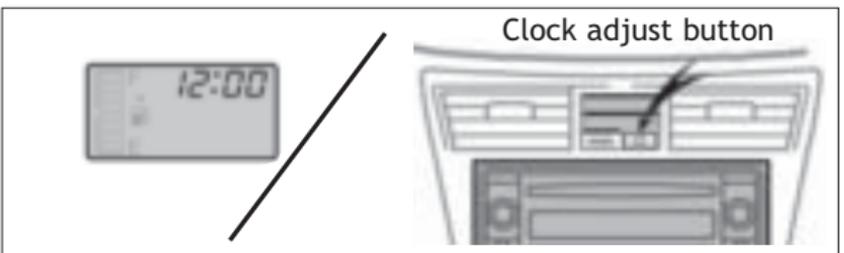

Refer to the *Owner's Manual* for more details.


## Cup holders

### Front



### Rear

#### Rear console box

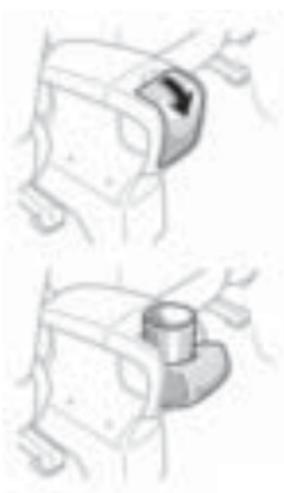

#### Rear seat armrest\*




\* If equipped

## Bottle holders-Rear seat




# SAFETY AND EMERGENCY FEATURES

## Door locks-Power (if equipped)

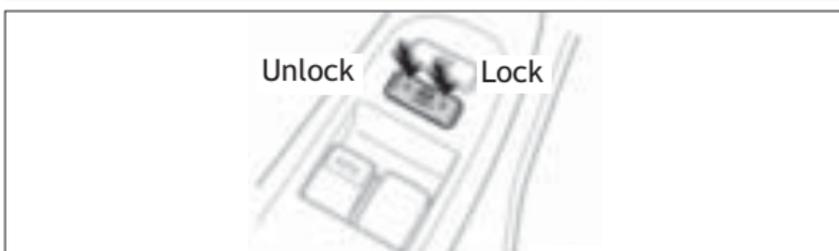


## Doors-Child safety locks

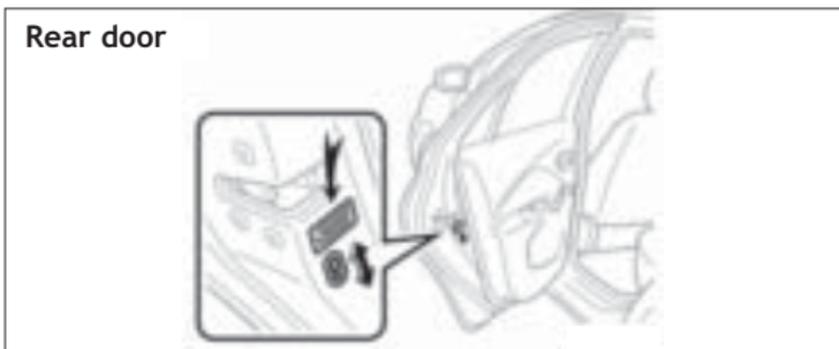

Moving the lever to "LOCK" will allow the door to be opened only from the outside.

## Seat belts

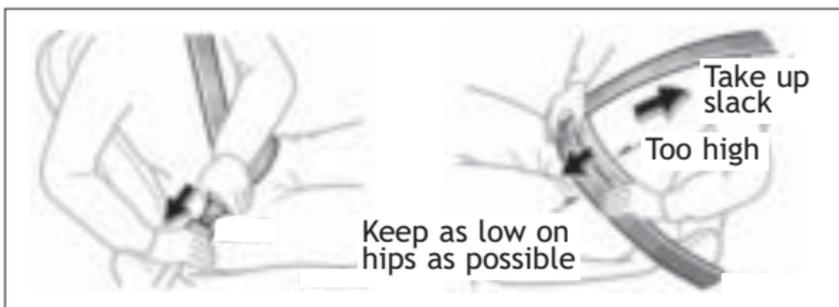

If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.


To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.

## Tire Pressure Warning System

If tire pressure becomes critically low on any of the tires (excluding the spare), indicator will illuminate. Correctly adjusting tire inflation will turn off the light after a few minutes. If the light does not turn off, have the system checked by your Toyota dealer.


Refer to the *Owner's Manual* for more details.

## Seat belts-Shoulder belt anchor

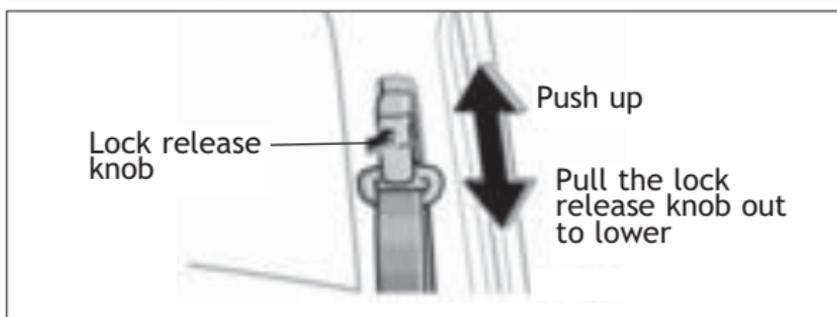


## Spare tire & tools

### Tool location

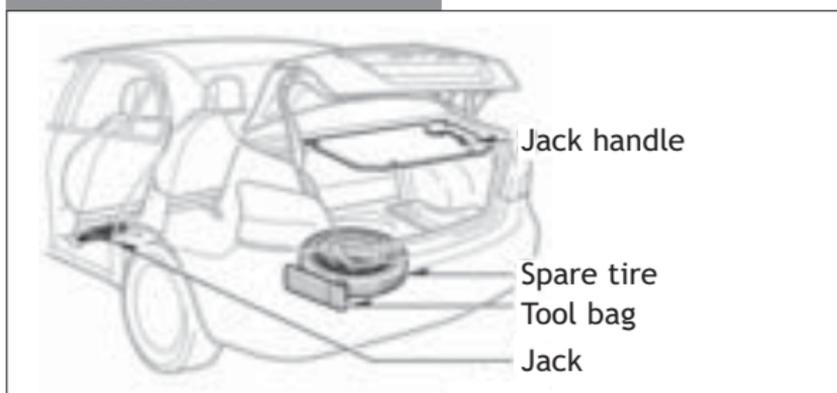


### Removing the spare tire

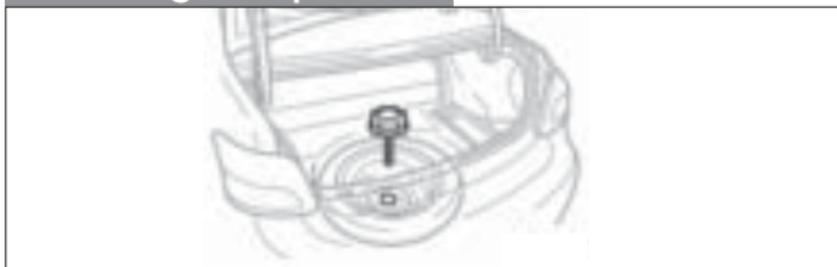

Loosen and remove the bolt.

Refer to the *Owner's Manual* for tire changing and jack positioning procedures.

## Trunk-Internal release

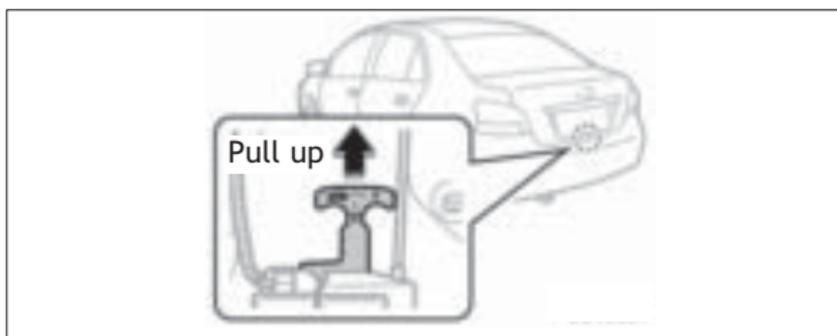



Customer Experience Center  
1-800-331-4331