




moving forward ▶

SEQUOIA

2008
Quick Reference Guide

Have a question about the main features of your new Toyota? Find the answers quickly and easily in this Quick Reference Guide, which includes highlights from the *Owner's Manual*. For more detailed information, and helpful interactive demonstrations and tips, visit www.ToyotaGuide.com. This user-friendly website makes learning all about your new vehicle fun and easy.

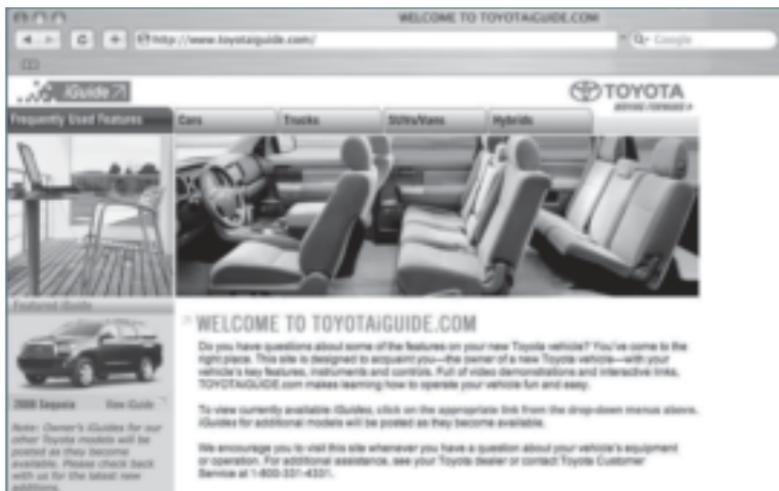

www.ToyotaGuide.com

This *iGuide* is not intended as a substitute for the *Owner's Manual* located in the vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of the vehicle's capabilities and limitations. Important **Cautions**, to help you avoid injuries, and **Notices**, to help you avoid equipment damage or malfunction, can also be found in the *Owner's Manual*.

2008 Sequoia Quick Reference Guide

OVERVIEW

Engine maintenance	10
Fuel tank door release and cap	9
Hood release	9
Indicator symbols	6-7
Instrument cluster	5
Instrument panel	2-4
Keyless entry¹	8
Light control-Instrument panel	10

FEATURES/OPERATIONS

Accessory meter	31
Air Conditioning/Heating	22-23
Audio	24-25
Auto lock functions¹	12
Automatic Transmission	11
Cruise control	20
Cup holders	31
Door locks	28
Door-Power back	19
Dynamic Laser Cruise Control	27
Four-wheel drive	12
Garage door opener (HomeLink [®]) ³	26
Lights¹ & turn signals	17
Moonroof	20
Multi-information display²	28
Parking brake	15
Power outlets-12V DC	30
Power outlets-115V AC	30
Rear seat entertainment system	25
Seat adjustments-Front	13
Seat adjustments-Rear	14
Seat ventilators/Heaters	23
Seats-Folding second row seats	15
Seats-Folding third row seats	16
Seats-Head restraints	13
Steering wheel switches	26
Tilt and telescopic steering wheel	21
“TOW/HAUL” switch	11
Telephone controls (Bluetooth [®])	29
“VSC OFF” button	21
Window-Back	19
Windows	18
Windshield wipers & washers	18

SAFETY AND

EMERGENCY FEATURES

Doors-Child safety locks	33
Seat belts	32
Seat belts-Shoulder belt anchor	32
Spare tire & tools	33
Tire Pressure Warning System	32

¹ Visit your Toyota dealer for information on customizing this feature.



² Programmable by customer. Refer to the Owner's Manual for instructions and more information.

³ HomeLink[®] is a registered trademark of Johnson Controls, Inc.


OVERVIEW

Instrument panel

Steering wheel controls (if equipped)

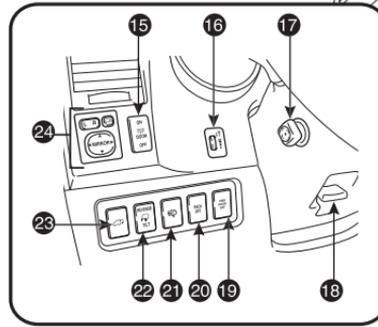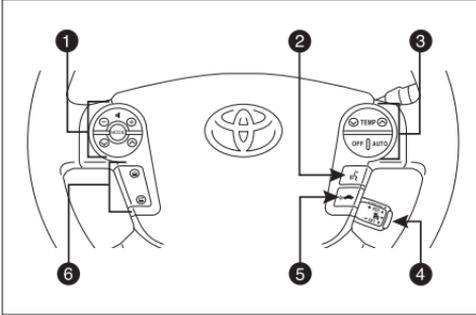

- ❶ Steering wheel audio controls¹
- ❷ Voice command button¹
- ❸ Steering wheel climate control¹
- ❹ Cruise control
- ❺ Dynamic Laser Cruise Control distance switch¹
- ❻ Telephone controls^{1,2}
- ❼ Headlight, turn signal and front fog light¹ controls
- ❽ Gauges and meters
- ❾ Wiper and washer controls
- ❿ 115V AC Power outlet main switch¹
- ⓫ Power back window switch
- ⓬ VSC OFF switch
- ⓭ Ignition switch
- ⓮ Tire Pressure Warning System reset
- ⓯ Personal/Interior light main switch

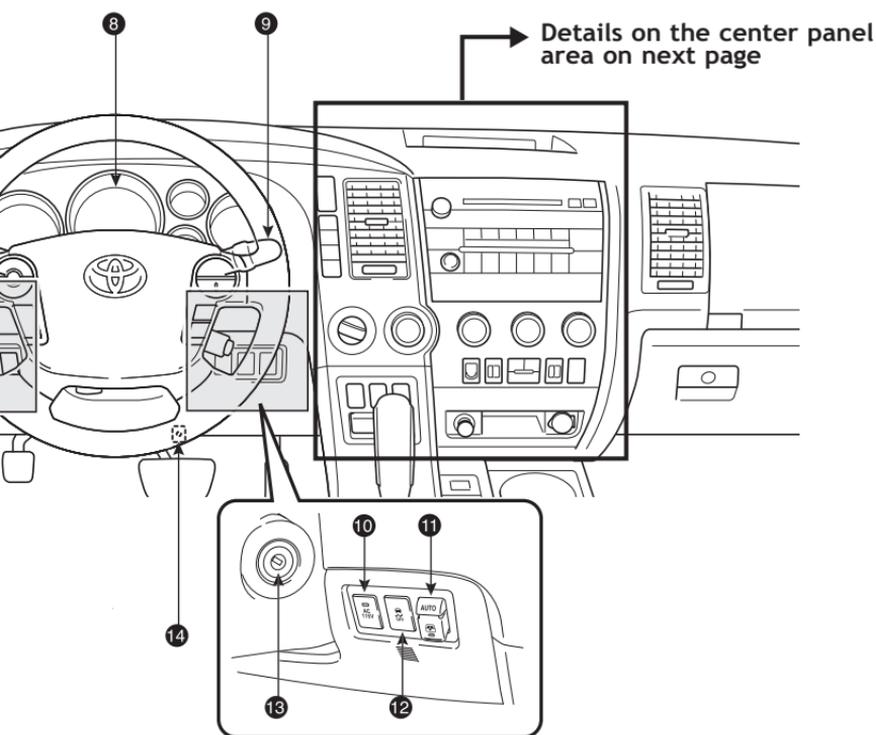


- 16 Instrument panel light control
- 17 Tilt and telescopic steering control switch¹
- 18 Tilt and telescopic steering control lever¹
- 19 Power back door main switch¹
- 20 Roll Sensing of Curtain shield Airbag OFF switch
- 21 Headlight cleaner¹
- 22 REVERSE TILT (side mirrors) switch¹
- 23 Power back door button¹
- 24 Power rearview mirror controls

¹ If equipped

² Vehicles with navigation system: for details, refer to the “*Navigation System Owner’s Manual.*”

OVERVIEW

Center panel area

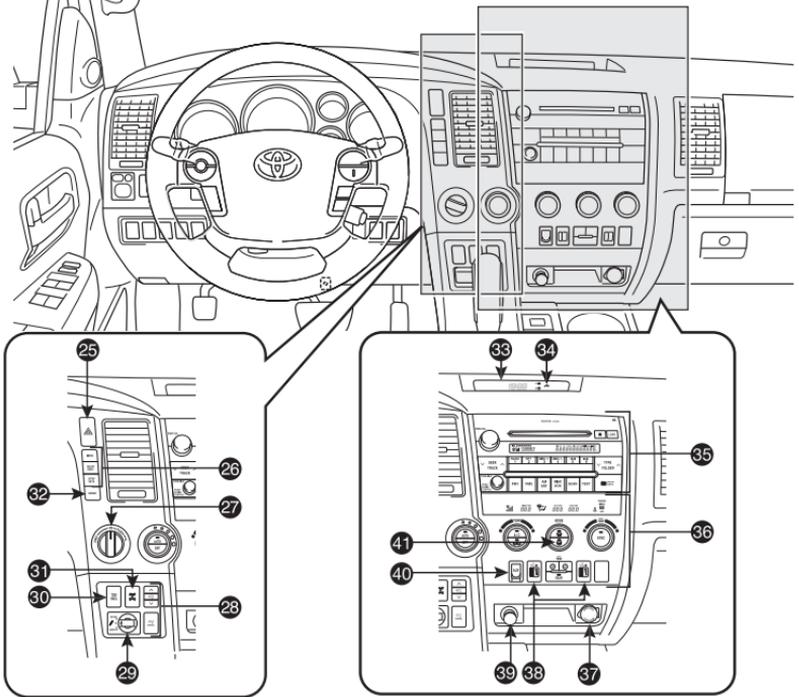


- 25 Emergency flasher button
- 26 Multi-information display control button¹ and/or accessory meter control button
- 27 Four-wheel drive control switch
- 28 Height control switch¹
- 29 AVS button¹
- 30 "TOW/HAUL" button¹
- 31 Center differential lock/unlock switch
- 32 Intuitive parking assist button¹
- 33 Accessory meter
- 34 Theft deterrent system/Engine immobilizer indicator
- 35 Audio system²
- 36 Air Conditioning controls
- 37 12V DC Power outlet
- 38 Seat heater¹ and ventilator¹ controls
- 39 Cigarette lighter
- 40 AUX audio jack
- 41 Outside rearview mirrors¹/Back window defogger/Windshield wiper de-icer¹ button

¹ If equipped


² Vehicles with navigation system: for details, refer to the "Navigation System Owner's Manual."

Instrument cluster

With multi-information display

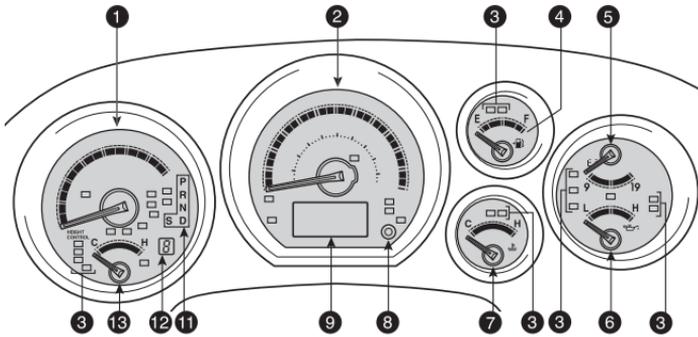

Without multi-information display

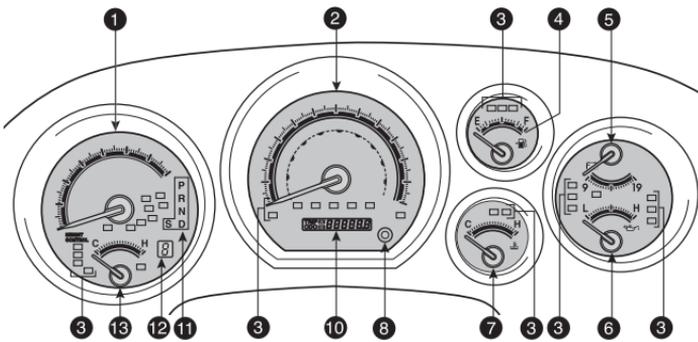

- ❶ Tachometer
- ❷ Speedometer
- ❸ Service indicator and reminder
- ❹ Fuel gauge
- ❺ Voltmeter
- ❻ Engine oil pressure gauge
- ❼ Engine coolant temperature
- ❽ Odometer/Trip meter and trip meter reset button
- ❾ Multi-information display
- ❿ Odometer and two trip meters
- ⓫ Automatic Transmission shift position indicator
- ⓬ Automatic Transmission shift range display
- ⓭ Automatic Transmission fluid temperature gauge

Indicator symbols

For details, refer to “Indicators and warning lights,” Section 2-2, 2008 *Owner’s Manual*.

	Brake system warning
	Driver seat belt reminder (alarm will sound if speed is over 12 mph)
	Front passenger seat belt reminder (alarm will sound if speed is over 12 mph)
	Charging system warning
	AIR BAG ON indicator
	AIR BAG OFF indicator
	Malfunction/Check Engine indicator
	Engine oil replacement reminder
	Low fuel level warning
	Open door warning
	Airbag SRS warning
	Low windshield washer fluid level warning
	Master warning
	Low Tire Pressure Warning
	Theft deterrent/Engine immobilizer system indicator
	Power steering warning
	Roll Sensing of Curtain shield Airbag OFF indicator
	Headlight low/high beam indicator
	Turn signal indicator
	Shift position and shift range indicators
	Vehicle Stability Control “OFF” indicator

	TOW/HAUL mode indicator		
	“AUTO LSD” indicator		
	Slip indicator		
		High/Low speed four-wheel drive indicator	
			Height control indicator
	Height control/MANUAL indicator		
	Center differential lock indicator		
	Cruise control indicator		
	Anti-lock Brake System warning		

Keyless entry

Locking operation

With power back door



Without power back door




Push




Unlocking operation

With power back door

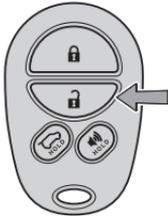

Without power back door

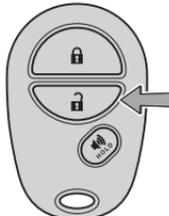

Push ONCE: Driver door
TWICE: All doors



NOTE: If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.

Power back door operation (if equipped)



Push and hold




Panic button




Push and hold




Fuel tank door release and cap

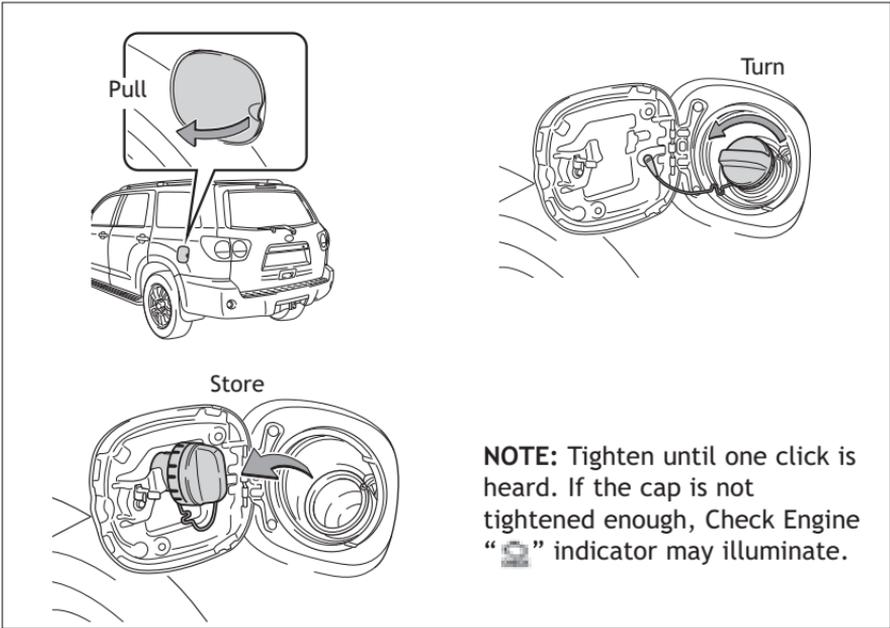

Hood release

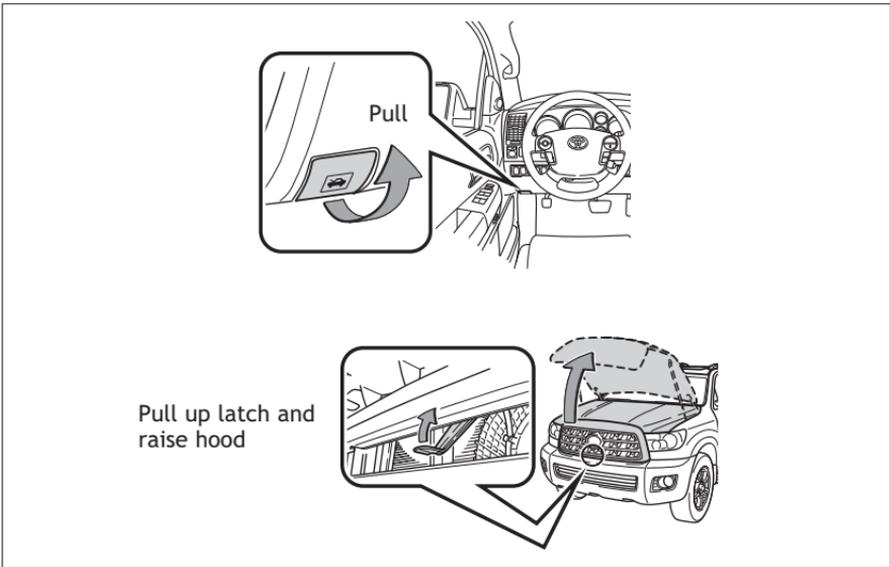


Light control-Instrument panel

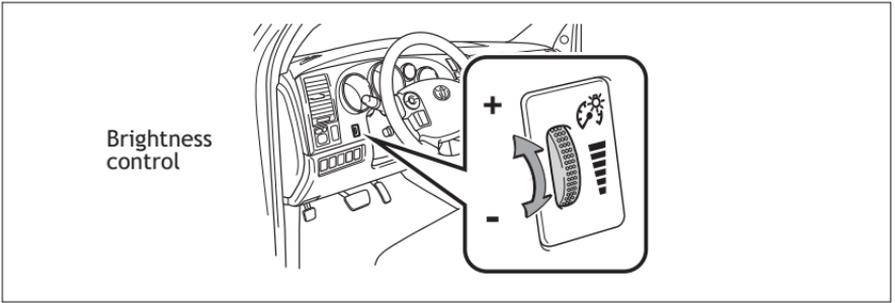


Engine maintenance

4.7L 8 cylinder (2UZ-FE) engine

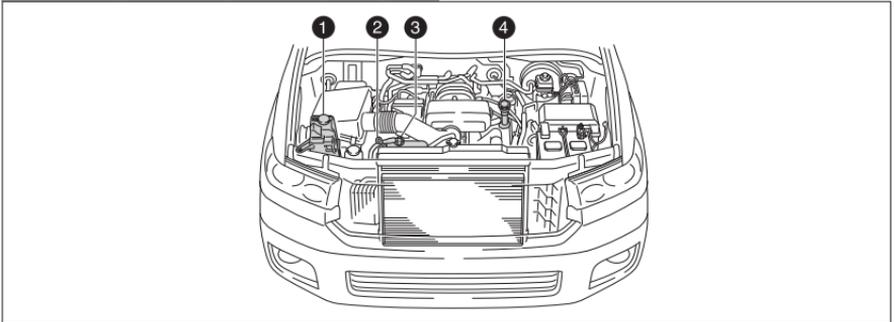

5.7L 8 cylinder (3UR-FE) engine

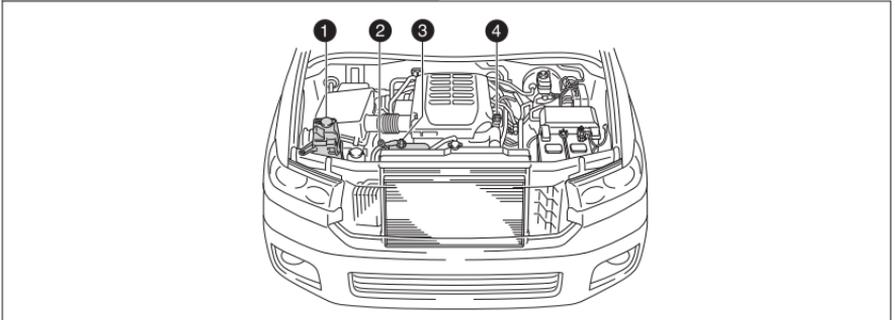


- ① Windshield washer fluid tank
- ② Engine oil level dipstick
- ③ Engine coolant reservoir
- ④ Engine oil filler cap

Note: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the “Owner’s Warranty Information Booklet,” “Scheduled Maintenance Guide” or “Owner’s Manual Supplement.”

FEATURES/OPERATIONS

Automatic Transmission

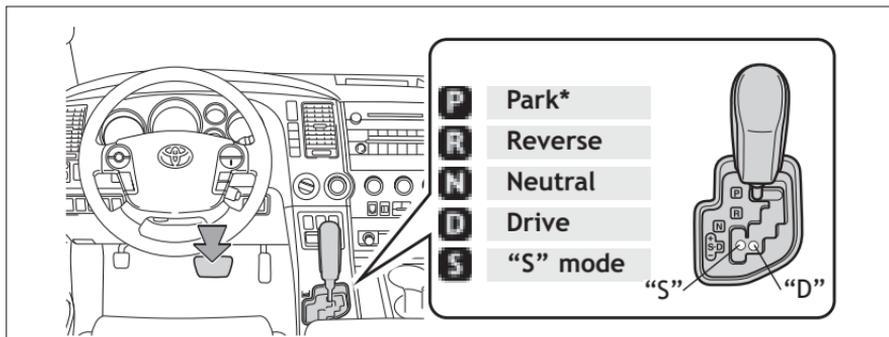

* The ignition switch must be ON, and the brake pedal depressed to shift from "Park."

"S" (Sequential) mode


Shift the shift lever to "S" position from "D" position.

Floor shift type:

- +: Upshift (push and release)
- : Downshift (pull and release)

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.

"TOW/HAUL" switch (if equipped)

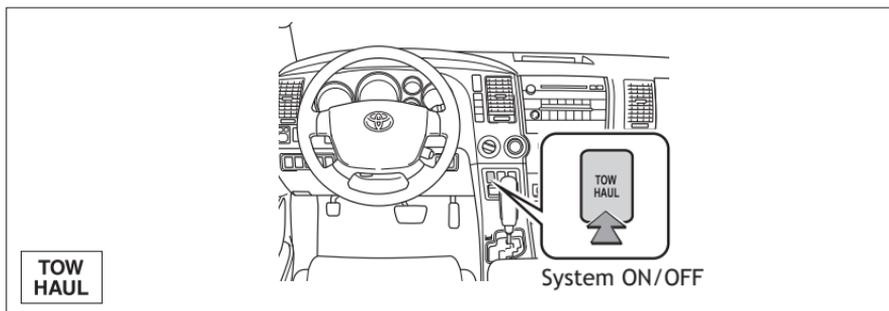

Tow/Haul mode can be used when carrying heavy loads. As fuel economy is reduced while in Tow/Haul mode, deactivating when driving without a load is recommended.

Refer to the *Owner's Manual* for more details on this system before attempting to use it.

Auto lock functions


Automatic door locks can be programmed to operate in four different modes, or turned OFF.

- Doors lock when shifting from “Park.”
- Doors lock when the vehicle speed is approximately 12 mph or higher.
- Doors unlock when shifting into “Park.”
- Doors unlock when the driver’s door is opened within 10 seconds after turning the engine to the “ACC” or “LOCK” position.

Refer to the *Owner’s Manual* for more details.

Four-wheel drive


Four-wheel drive control switch

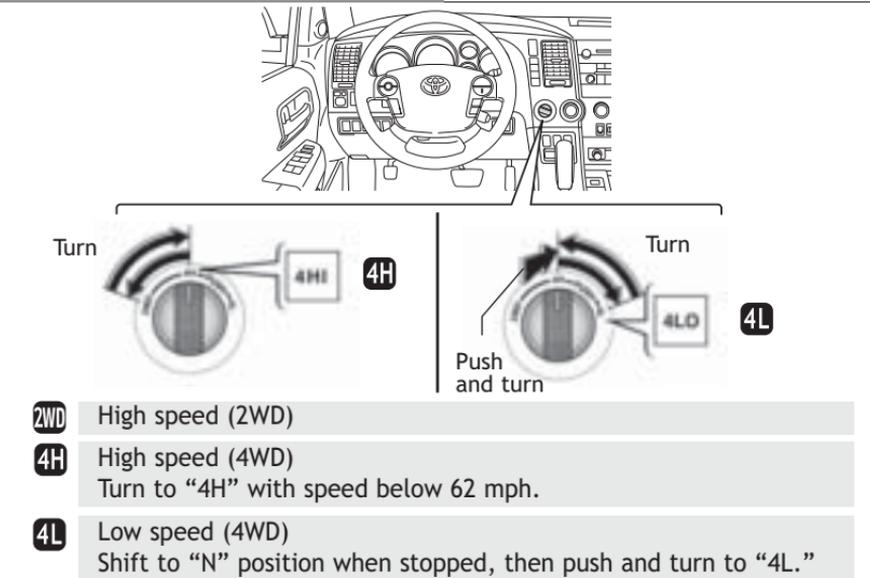

2WD	High speed (2WD)
4H	High speed (4WD) Turn to “4H” with speed below 62 mph.
4L	Low speed (4WD) Shift to “N” position when stopped, then push and turn to “4L.”

For best fuel economy and performance under normal driving conditions, keep in “2WD” position.

Center differential lock/unlock switch

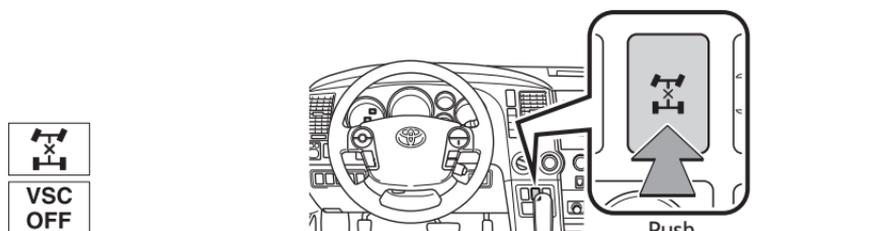


VSC OFF

Push


Lock the center differential when your vehicle’s wheels get stuck in a ditch or when driving on a slippery or bumpy surface.

Seat adjustments-Front

Manual seat

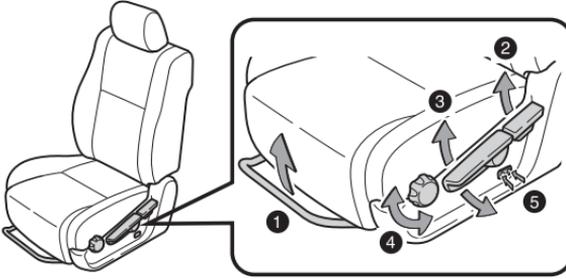


Power seat

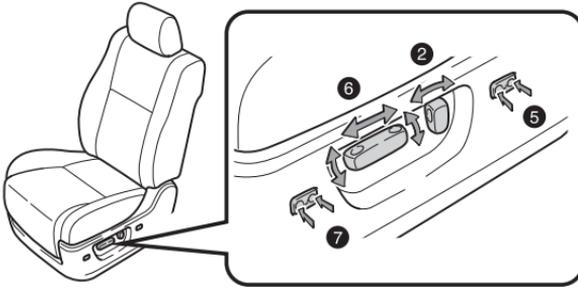

- ① Position
- ② Seatback angle
- ③ Seat height
- ④ Seat cushion angle
- ⑤ Lumbar support (if equipped)
- ⑥ Position, cushion angle and height
- ⑦ Leg support

Seats-Head restraints

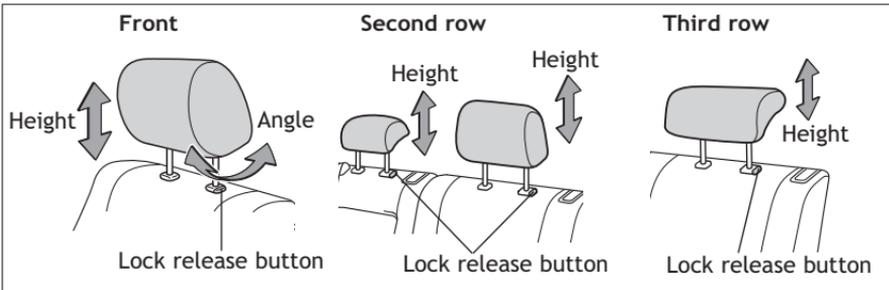

Seat adjustments-Rear

Second row

Separate seat




Bench seat




Third row

Manual seat

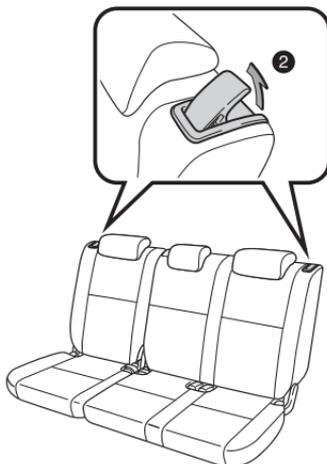


Power seat

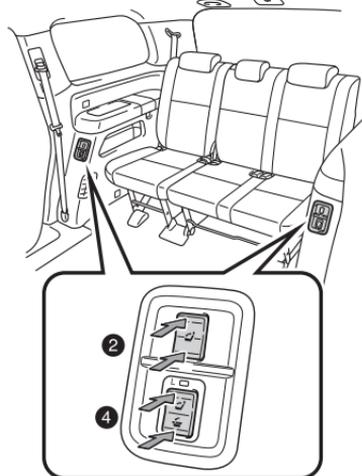

- ① Position
- ② Seatback angle
- ③ Seatback lock release and slide
- ④ Seatback folding/returning


Refer to the *Owner's Manual* for more details.

Seats-Folding second row seats

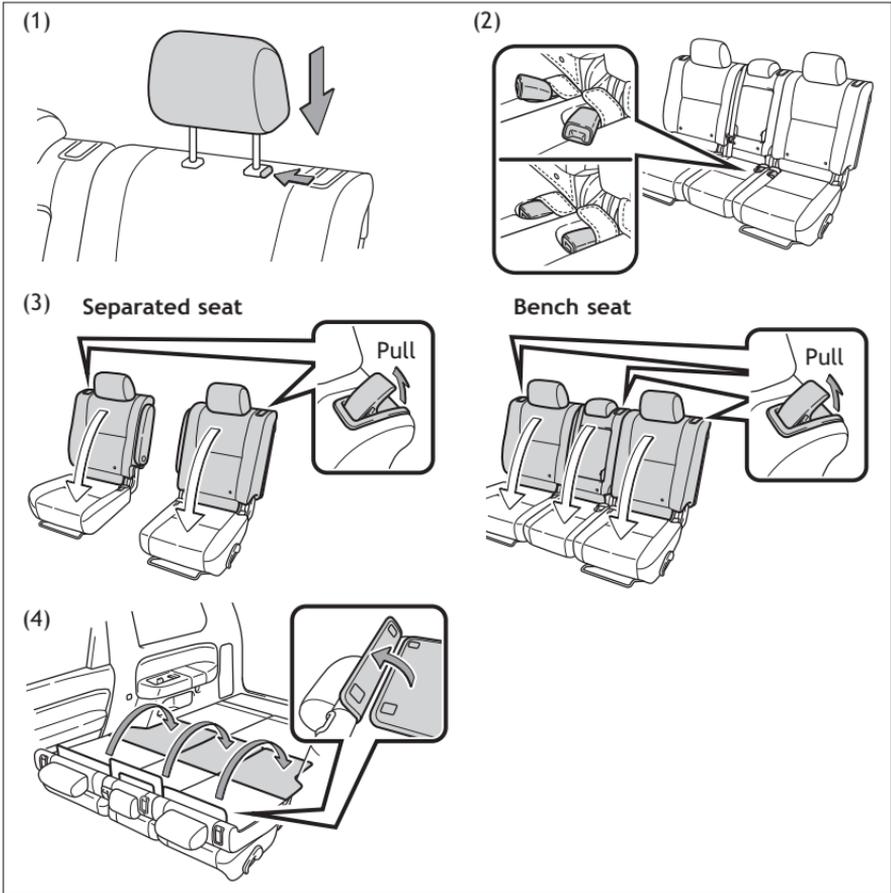





- (1) Lower the head restraints.
- (2) Stow the seat belt buckles.
- (3) Fold down the seatback.
- (4) Fold out the board from the seatback.

Parking brake

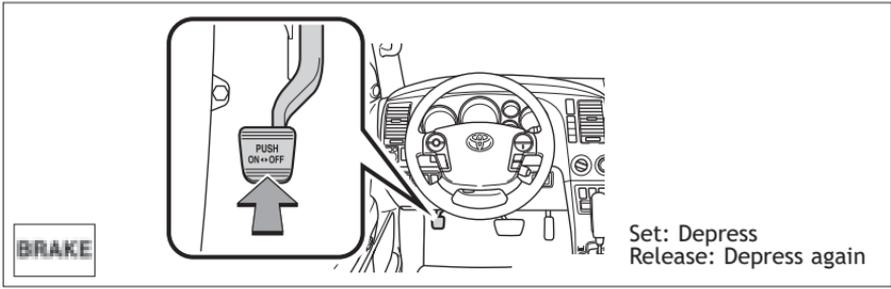


Set: Depress
Release: Depress again


Seats-Folding third row seats

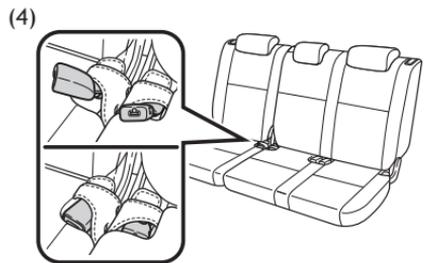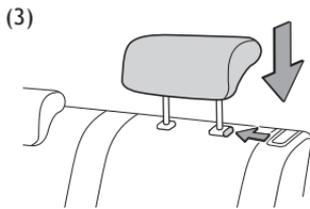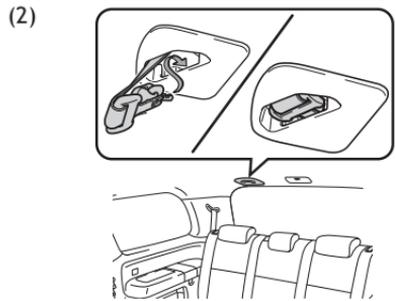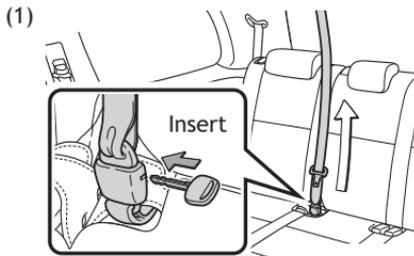


(5)
From rear door side
Manual seat

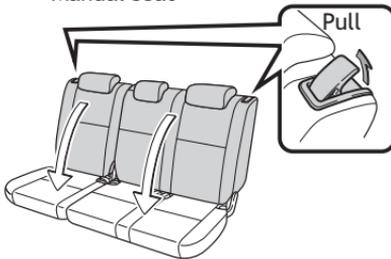


From back door side
Manual seat

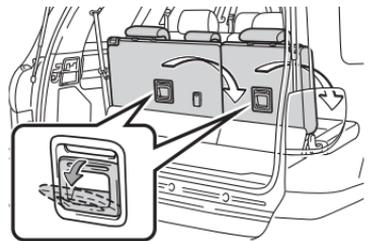

Power seat

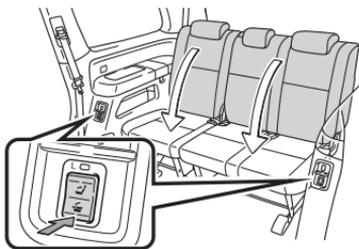


Power seat

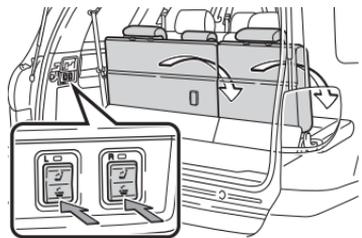

- (1) Release the center seat belt tab.
- (2) Stow the center seat belt tab.
- (3) Lower the head restraint.
- (4) Stow the seat belt buckles.
- (5) Fold the seats.


Lights & turn signals

Headlights

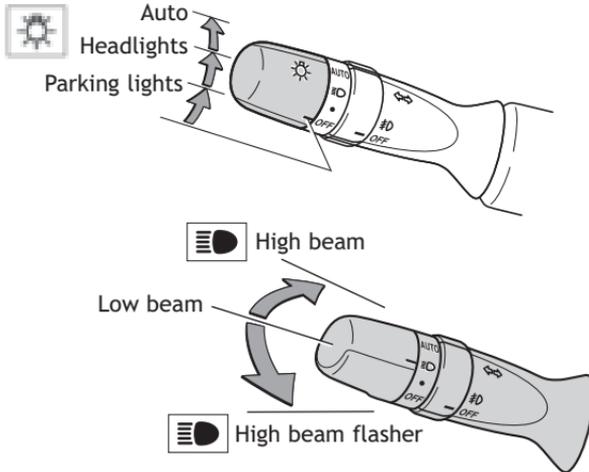


- Daytime Running Light system (DRL)** Automatically turns on the turn signal lights at a reduced intensity.
- Automatic light cut off system** Automatically turns lights off after a delay of 30 seconds, or the lock switch on remote may be pushed.

Front fog lights (if equipped)

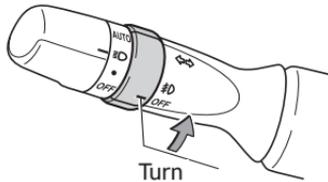


Front fog lights come on only when the headlights are on low beam.

Turn signals

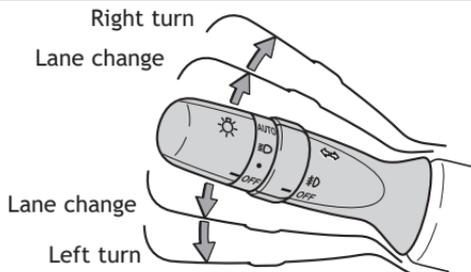


Windshield wipers & washers

Front

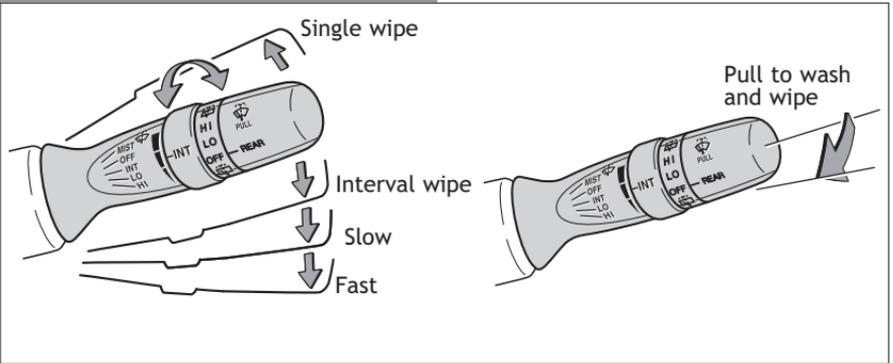


Rear

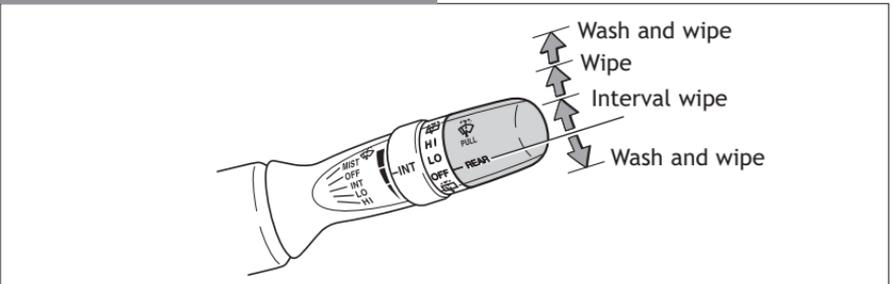

Windows

Driver side

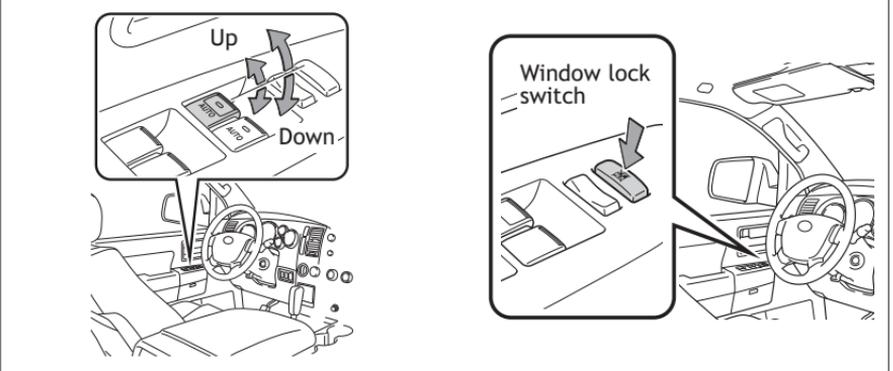


Automatic operation Push the switch completely down or pull it completely up and release to fully open or close. To stop window midway, lightly push the switch in the opposite direction.

Window lock switch Deactivates all passenger windows and back window. Driver's window remains operable.


Window-Back

Operating from inside

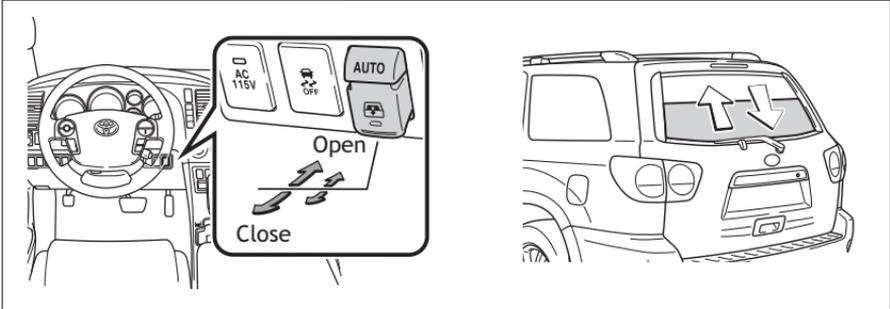


Automatic operation Push the switch completely in or pull it completely out and release to fully open or close. To stop window midway, lightly push the switch in the opposite direction.

Operating from outside

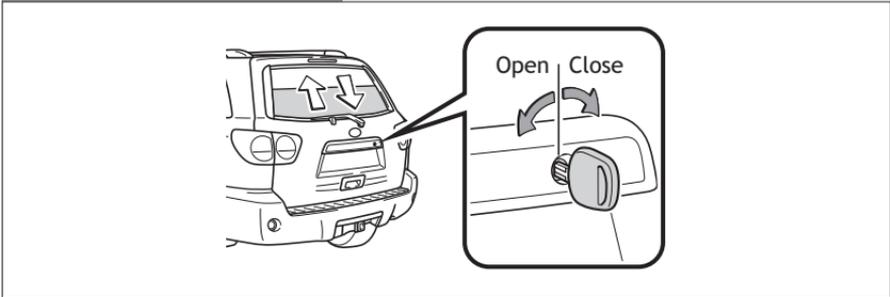


Door-Power back (if equipped)

Instrument panel

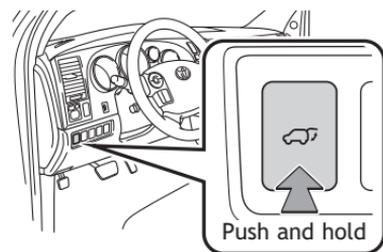

Open: Push and hold
Close: Push and hold again


Back door (close only)

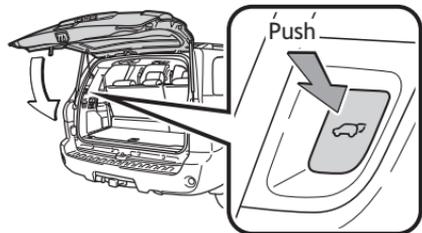


NOTE: If battery is disconnected, the power back door needs to be reinitialized. Refer to the *Owner's Manual* for more details.

Moonroof

Sliding operation

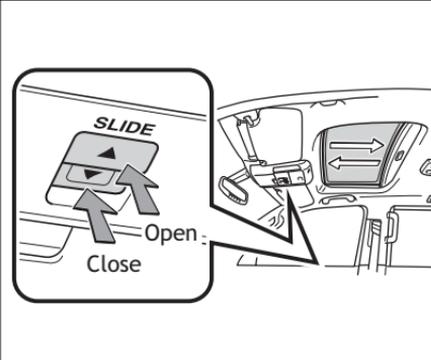


Tilting operation

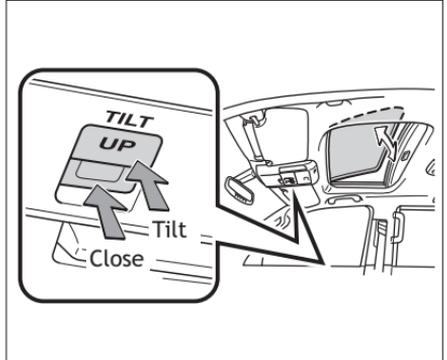


Cruise control

Turning system ON/OFF

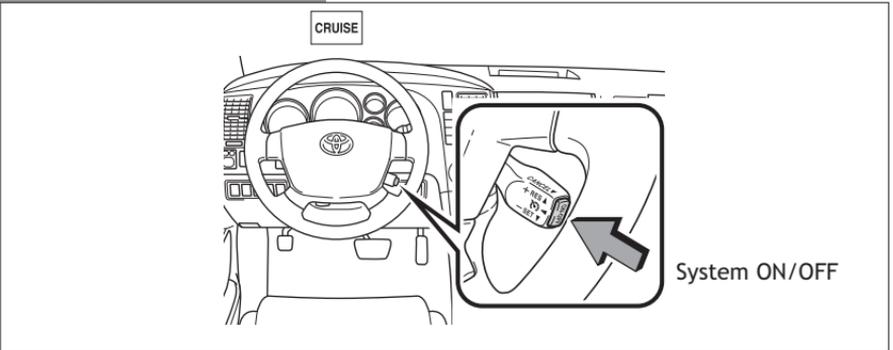

Functions

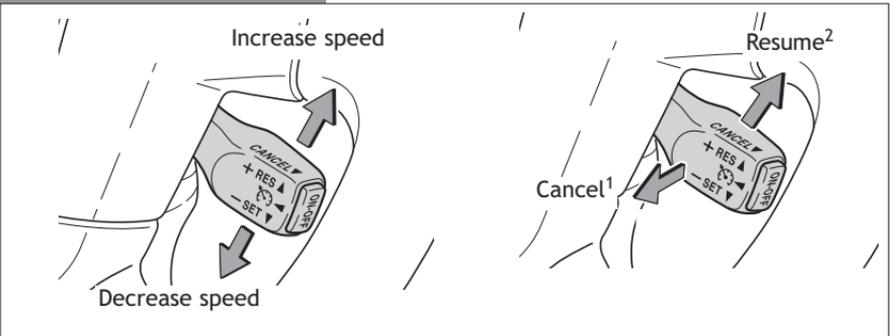


¹ The set speed may also be cancelled by depressing the brake pedal.

² The set speed may be resumed once vehicle speed exceeds 25 mph.


Tilt and telescopic steering wheel

Manual

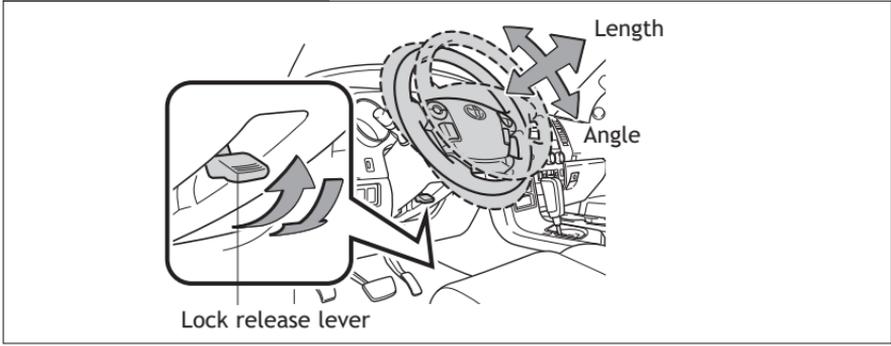

Hold wheel, push lever down, set angle and length, and return lever.


Power

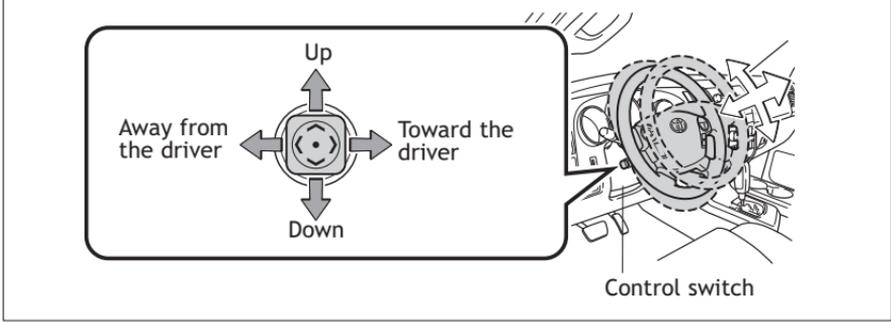

Toggle the control switch to set angle and length.

Note: Do not attempt to adjust while the vehicle is in motion.

"VSC OFF" button

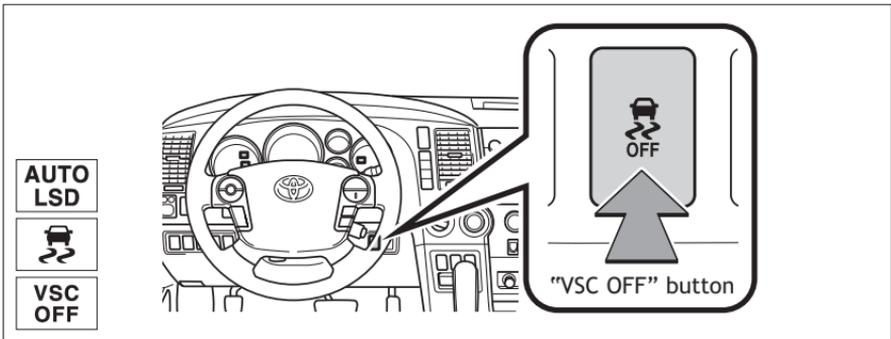


The "VSC OFF" button is used to switch between modes related to the TRAC, VSC and Auto LSD functions.

Refer to Section 2-4 of the *Owner's Manual* for more information.


Air Conditioning/Heating

Front Air Conditioning

Control panel

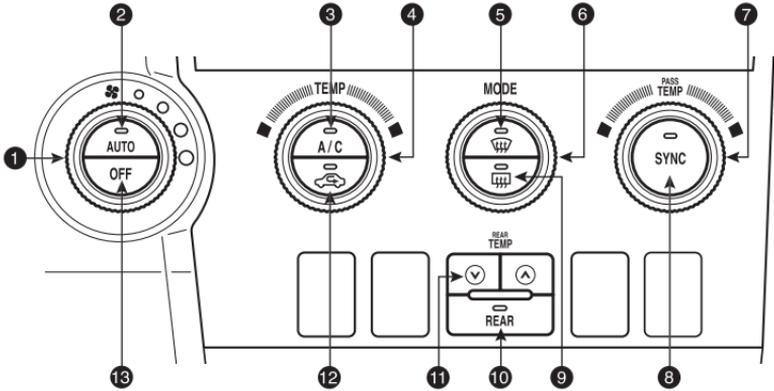


Display

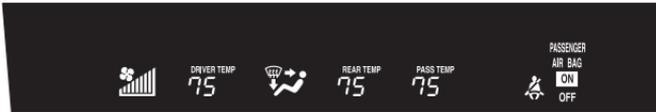

- 1 Fan speed
- 2 Automatic climate control ON
Adjusting the temperature setting will cause the airflow vents, air intake and fan to adjust automatically.
- 3 Air Conditioning ON/OFF
- 4 Temperature (driver side)
- 5 Windshield airflow (fresh air only)
- 6 Airflow vent
In “” mode, use fresh air (“” indicator “OFF”) to reduce window fogging.
- 7 Temperature (front passenger side)
- 8 “SYNC” button
Indicator ON: Synchronize temperature settings for driver, front passenger and rear seats.
Indicator OFF: Separate temperature settings for driver, front passenger and rear seats.
- 9 Outside rearview mirror/Back window defogger or windshield wiper de-icer (if equipped)
- 10 Rear Air Conditioning ON/OFF
- 11 Temperature (rear passenger area*)
- 12 Fresh or recirculated cabin air
- 13 Climate control OFF

* To change the rear seat setting, press the “REAR” button.

Rear Air Conditioning

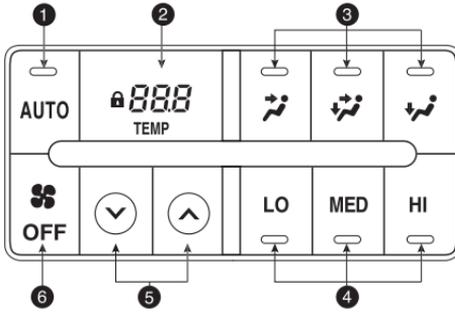


- 1 Automatic climate control ON
- 2 Display
- 3 Airflow vent
- 4 Fan speed
- 5 Temperature
- 6 Climate control OFF


Seat ventilators/Heaters (if equipped)

Front seats


With ventilators

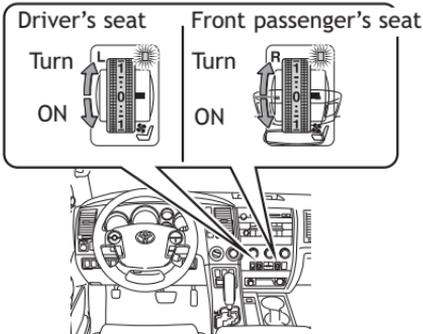

Heater only

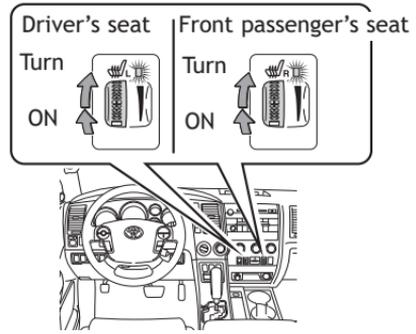

Second seats

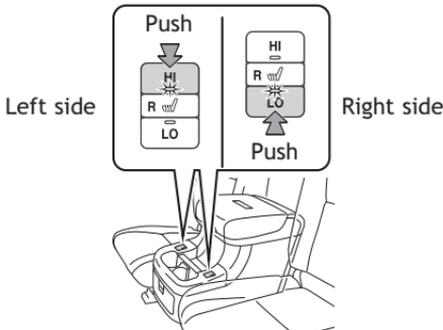

Audio


Type 1

Push to turn ON/OFF

Seek station/ CD track select

Push to adjust tone, balance & ASL*

Preset buttons - functions in other modes indicated above number

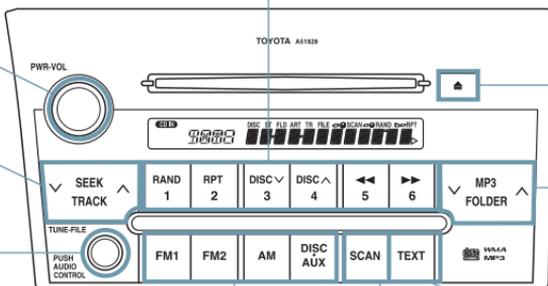

Eject CD


Push to skip up/down MP3 folder

Mode

Station/CD track scan

View CD information


Type 2 additional functions

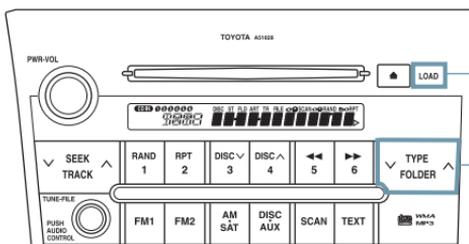

Load CD(s)

View MP3 folder and/or Satellite Radio category type

Type 3 (with JBL speakers)

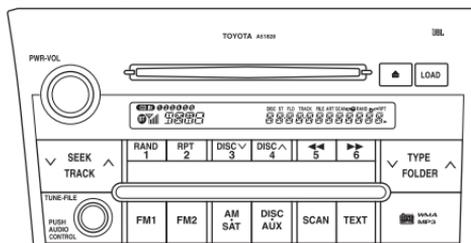

* Automatic Sound Leveling

CD PLAYER

To scan tracks on a disc Push and hold "SCAN." Push again to hold selection.

CD changer (Types 2 and 3 only)

-To load one disc Push "LOAD" and insert one disc.

-To load multiple discs Push and hold "LOAD" until you hear a beep. Insert one disc. Shutter will close and then re-open for next disc.

To select a file (MP3/WMA only) Turn "TUNE-FILE."


To select a folder (MP3/WMA only) Push either side of "FOLDER."

RADIO

To preset stations Tune in the desired station and hold down a preset button (1-6) until you hear a beep. Push desired preset button (1-6) to select.


To scan stations Push and hold "SCAN" to scan preset stations. Push again to hold selection.

AUX audio jack

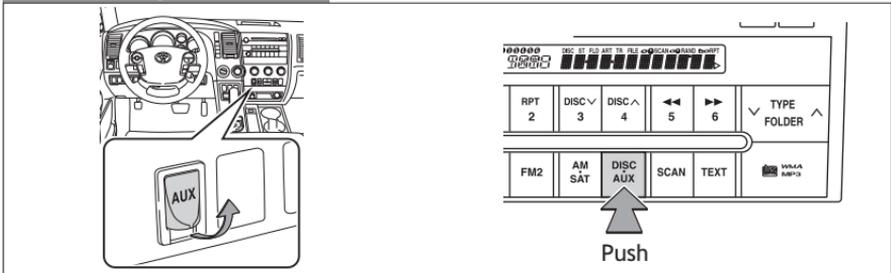

By inserting a mini plug into the AUX audio jack, you can listen to music from a portable audio device through the vehicle's speaker system.


Rear seat entertainment system (if equipped)

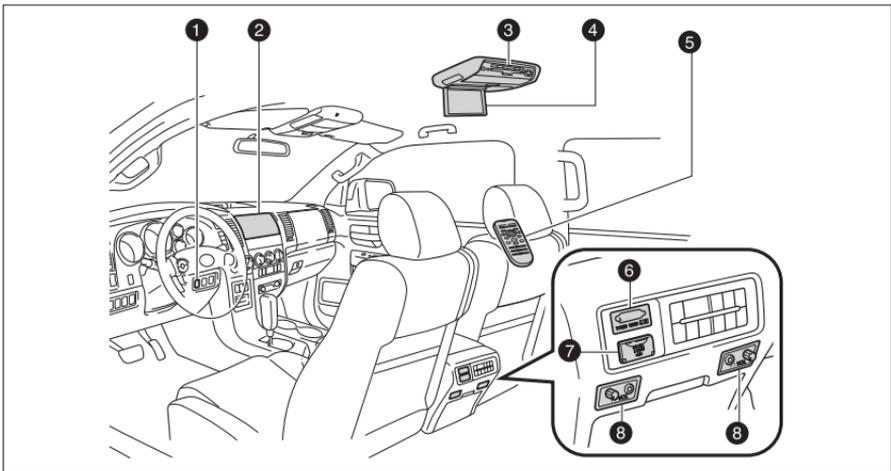

- 1 115V AC Power outlet main switch
- 2 Front audio system (DVD player)
- 3 DVD player
- 4 DVD screen
- 5 Remote control
- 6 A/V input adapter
- 7 115V AC Power outlet
- 8 Headphone volume controls and headphone jacks

For details, refer to the "Navigation System Owner's Manual."

Steering wheel switches (if equipped)

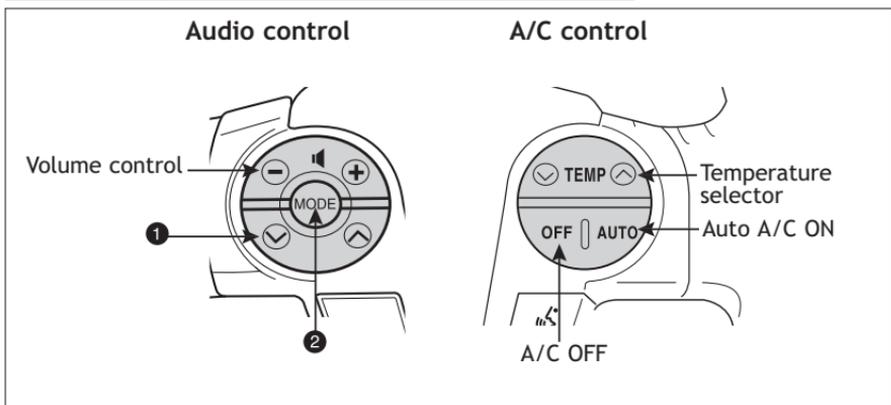

1 "V A"


-In radio mode Push to select a preset station; push and hold to seek the next strong station.

-In CD mode Push to skip up or down to next/previous track.

2 "MODE"

Push to turn audio ON and select an audio mode. Push and hold to turn the audio system "OFF."

Garage door opener (HomeLink®)* (if equipped)

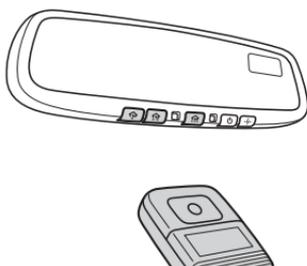

Garage door openers manufactured under license from HomeLink®* can be programmed to operate garage doors, estate gates, security lighting, etc.


Refer to "Garage door opener," Section 3-7 in the *Owner's Manual* for more details.

* HomeLink® is a registered trademark of Johnson Controls, Inc.

Dynamic Laser Cruise Control (if equipped)


Refer to the *Owner's Manual* for more details and complete safety precautions before attempting to use "Dynamic Laser Cruise Control."

Fixed speed mode

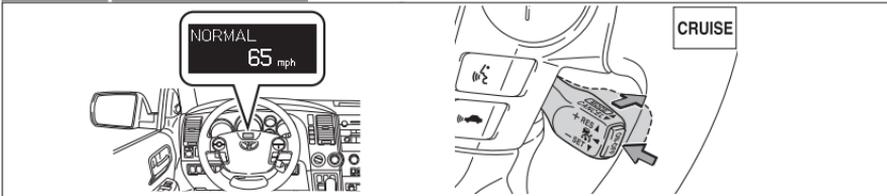

- (1) To select conventional/fixed speed control Push the ON-OFF button. Push the lever forward and hold.
- (2) To set, cancel and resume a speed Refer to instructions for *Cruise Control* on page 20.


Distance control mode

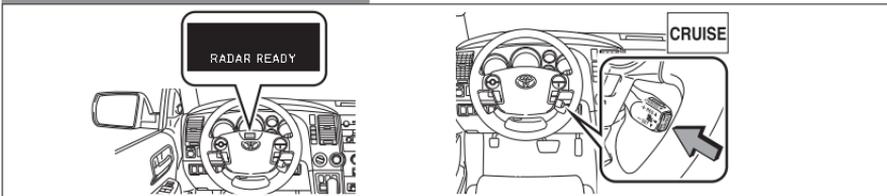

Distance control mode will cruise at a set speed, decelerate to maintain selected distance from a slower vehicle traveling in front of you, and accelerate back up to the selected speed if the vehicle traveling in front of you changes lanes or speeds up.


- (1) To select distance control mode Push the ON-OFF button. The "CRUISE" indicator will come on.
- (2) To set, cancel and resume a speed Refer to instructions for *Cruise Control* on page 20.

Note: Once vehicle speed is set, pushing lever up toward "+ RES" will increase speed to the nearest 5 mph, and then in 5 mph increments. Pushing lever down toward "- SET" will reduce speed in the same way.

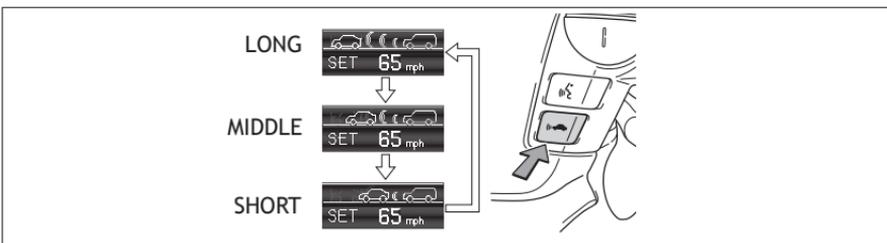

- (3) To change the vehicle-to-vehicle distance Push the distance button to cycle through the settings, which will change progressively from LONG to MIDDLE to SHORT.

Multi-information display (if equipped)

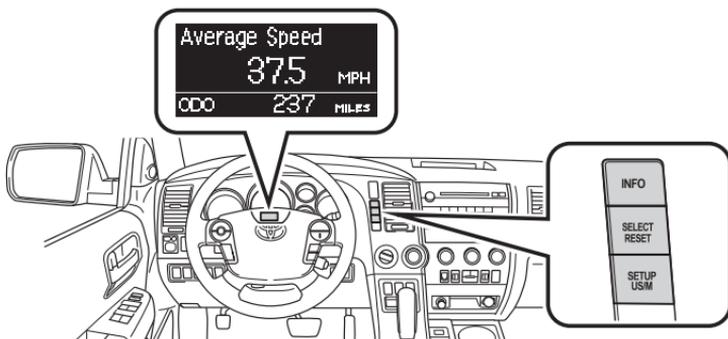


Push “INFO” to change information in the following:

- (1) Zoom display of odometer and trip meter
- (2) Average gas mileage
- (3) Current gas mileage
- (4) Miles left on remaining fuel
- (5) Running time from engine start
- (6) Average vehicle speed

Push “SETUP US/M” to customize to the following settings:


- (1) UNIT
- (2) KEYLESS ENTRY FEEDBACK
- (3) KEYLESS ENTRY RELOCK TIMER
- (4) KEYLESS ENTRY ALL DOORS UNLOCK
- (5) DOOR AUTO LOCKING
- (6) DOOR AUTO UNLOCKING
- (7) HEADLAMPS AUTO OFF TIMER
- (8) COURTESY LAMPS OFF TIMER
- (9) DEFAULT SETTING

Door locks

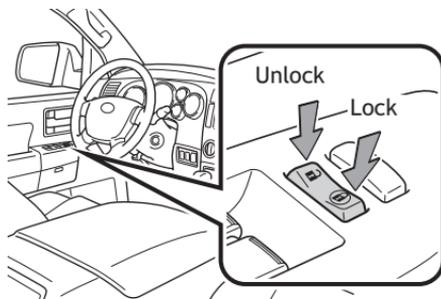


Telephone controls (Bluetooth®) (if equipped)

Audio unit


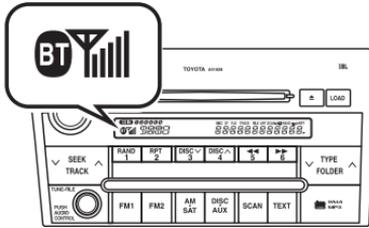


Microphone


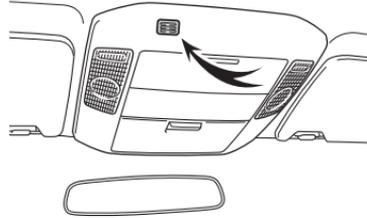


Steering wheel telephone switches

Type A

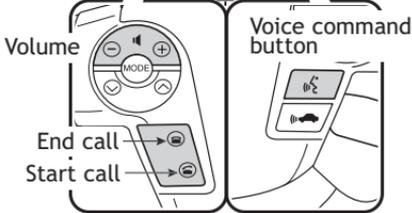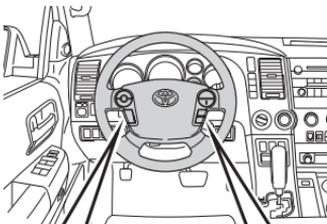

Type B

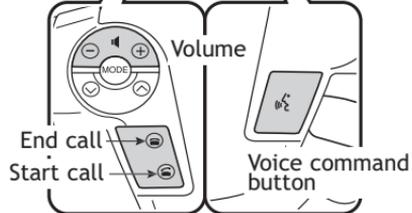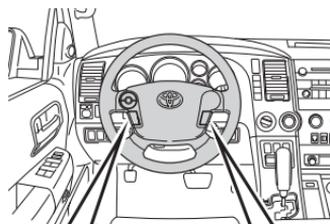


Bluetooth® technology allows you to place or receive calls without taking your hands from the steering wheel or using a cable to connect the compatible telephone and the system.


Refer to “Hands-free phone system (for cellular phones),” Section 3-4 in the *Owner’s Manual* for more details.

Power outlets-12V DC (if equipped)


Instrument panel

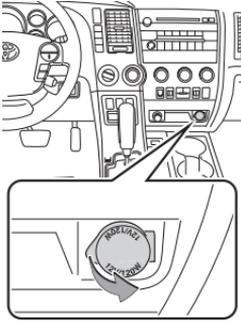


Inside of the center console box

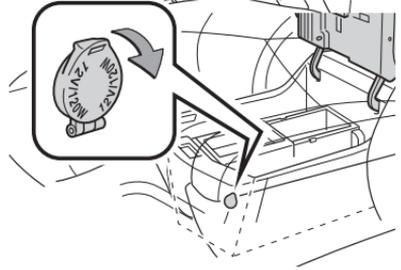

Back of the center console box

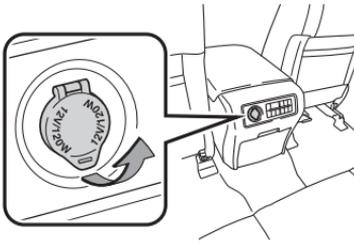


Luggage compartment

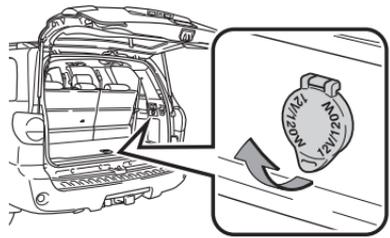

Key must be in the “ACC” or “ON” position to be used.


Power outlets-115V AC

ON/OFF switch

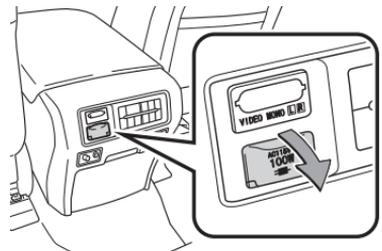

Key must be in the “ON” position to be used.

Accessory meter

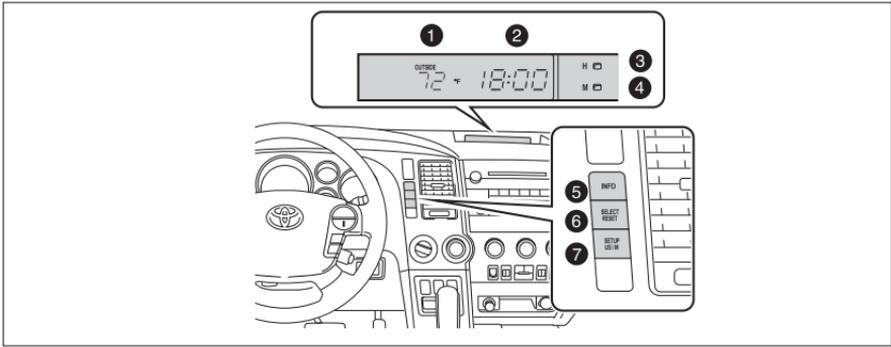


- ❶ Outside temperature/Cruise information display (if equipped)
- ❷ Clock
- ❸ Hour set
- ❹ Minute set
- ❺ Change information (if equipped)
- ❻ “SELECT RESET” button (if equipped)
- ❼ “SETUP US/M” button to customize unit

Refer to your *Owner’s Manual* for complete details on this system before attempting to use it.


Cup holders

Front

Front console

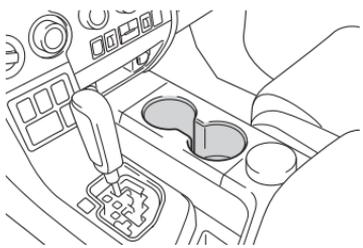


Back of the front console

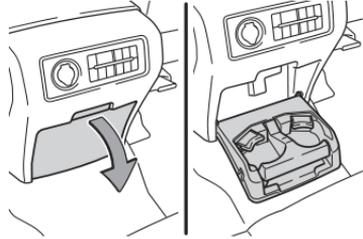


Rear

Rear side trim

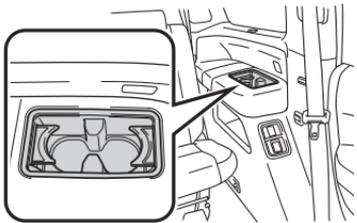


Rear console box (if equipped)

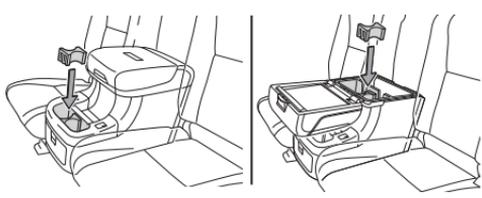

SAFETY AND EMERGENCY FEATURES


Seat belts

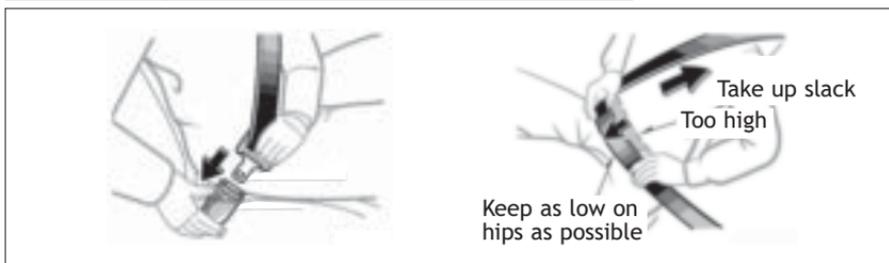


If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.

Seat belts-Shoulder belt anchor

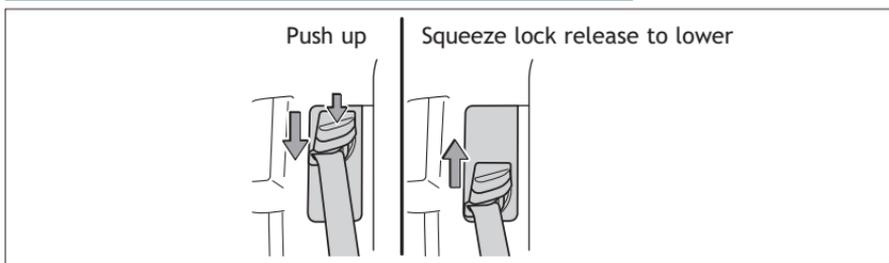

Tire Pressure Warning System

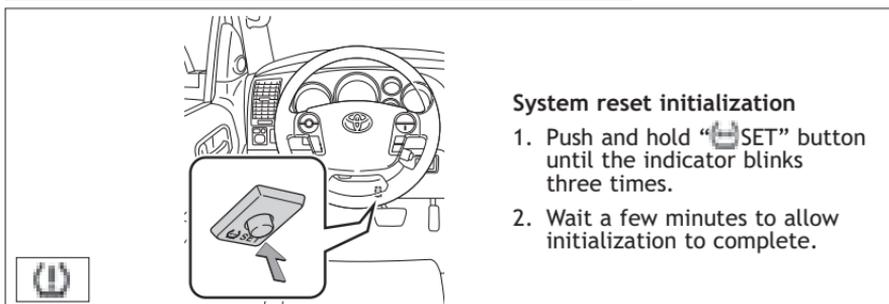


If tire pressure becomes critically low on any of the tires (excluding spare), indicator comes on. Pushing "SET" button should not turn off the light. Correctly adjusting tire inflation will turn off the light after a few minutes. After replacing/rotating tire or wheels, the system must be initialized.

Refer to the *Owner's Manual* for more details.

Doors-Child safety locks


Rear door

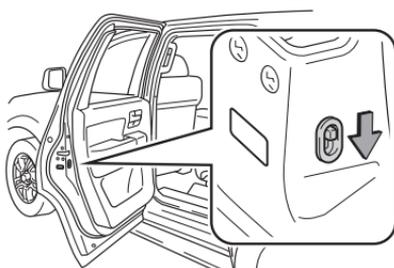


Moving the lever to “LOCK” will allow the door to be opened only from the outside.

Spare tire & tools

Spare tire, jack and tool location

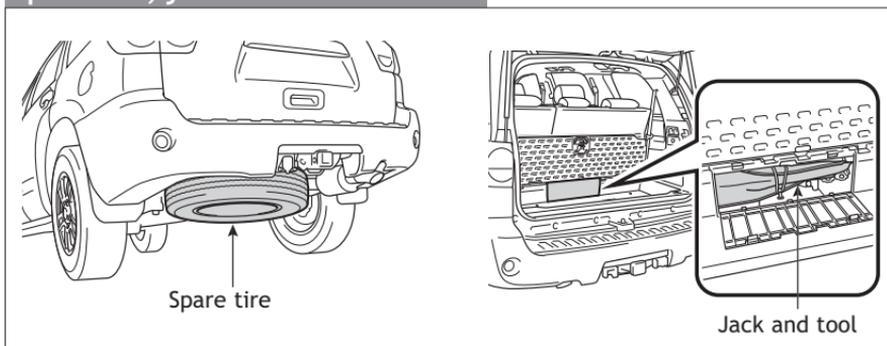

Removing the spare tire

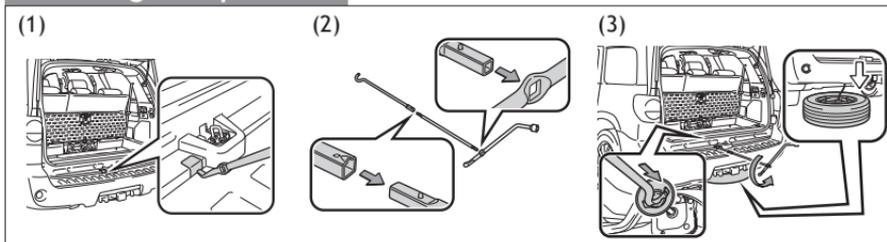

- (1) Remove the cover.
- (2) Assemble the jack handle.
- (3) Insert the jack handle extension into the lowering screw. Lower the spare tire completely to the ground.

Refer to the *Owner's Manual* for tire changing and jack positioning procedures.



Customer Experience Center
1-800-331-4331