




TOYOTA

*moving forward ▶*

***CAMRY***

2008  
Quick Reference Guide

Have a question about the main features of your new Toyota? Find the answers quickly and easily in this Quick Reference Guide, which includes highlights from the *Owner's Manual*. For more detailed information, and helpful interactive demonstrations and tips, visit [www.Toyotaiguide.com](http://www.Toyotaiguide.com). This user-friendly website makes learning all about your new vehicle fun and easy.

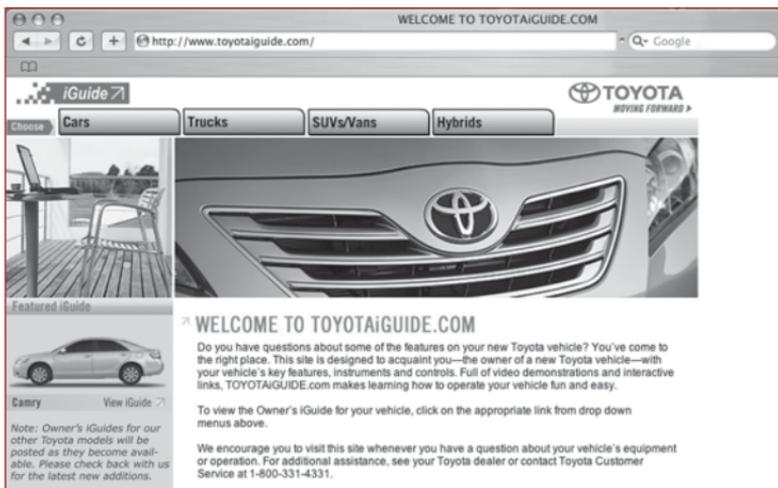

[www.Toyotaiguide.com](http://www.Toyotaiguide.com)

This *iGuide* is not intended as a substitute for the *Owner's Manual* located in the vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of the vehicle's capabilities and limitations. Important **Cautions**, to help you avoid injuries, and **Notices**, to help you avoid equipment damage or malfunction, can also be found in the *Owner's Manual*.

# 2008 Camry Quick Reference Guide

## OVERVIEW

Engine maintenance	9
Fuel tank door release and cap	8
Hood release	9
Indicator symbols	5
Instrument cluster	4
Instrument panel	2-3
<b>Keyless entry<sup>1,2</sup></b>	<b>6</b>
Light control-Instrument panel	8
<b>Smart Key system<sup>1,2</sup></b>	<b>7</b>

## FEATURES/OPERATIONS

Air Conditioning/Heating	18-19
Audio	20-21
<b>Auto lock functions<sup>2</sup></b>	<b>10</b>
Automatic Transmission	10
Clock	18
Cruise control	16
Cup holders	22
Garage door opener (HomeLink <sup>®</sup> ) <sup>3</sup>	16
<b>Lights<sup>1</sup> &amp; turn signals</b>	<b>14</b>
Moonroof	12
Multi-information display	15
Parking brake	11
Power outlets-12V DC	15
Seat adjustments-Front	13
Seat adjustments-Rear	13
Seat heaters	19
Seats-Head restraints	12
Steering lock release	11
Steering wheel switches	21
Sunshade-Rear	17
Telephone controls (Bluetooth <sup>®</sup> )	17
Tilt and telescopic steering wheel	11
Windows-Power	12
Windshield wipers & washers	14

## SAFETY AND

## EMERGENCY FEATURES

Child comfort guide	24
Door locks	23
Doors-Child safety locks	23
Seat belts	23
Seat belts-Shoulder belt anchor	24
Spare tire & tools	25
Tire Pressure Warning System reset	24
Trunk-Internal release	25

<sup>1</sup> Visit your Toyota dealer for information on customizing this feature.

<sup>2</sup> Programmable by customer. Refer to the Owner's Manual for instructions and more information.


<sup>3</sup> HomeLink<sup>®</sup> is a registered trademark of Johnson Controls, Inc.

# OVERVIEW

## Instrument panel



### Steering wheel controls

XLE and LE models

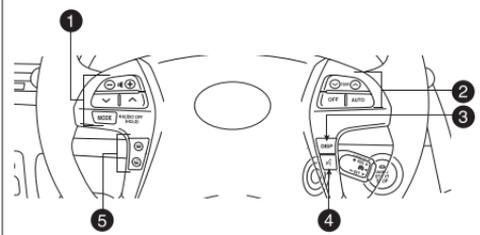


### Steering wheel controls


SE model

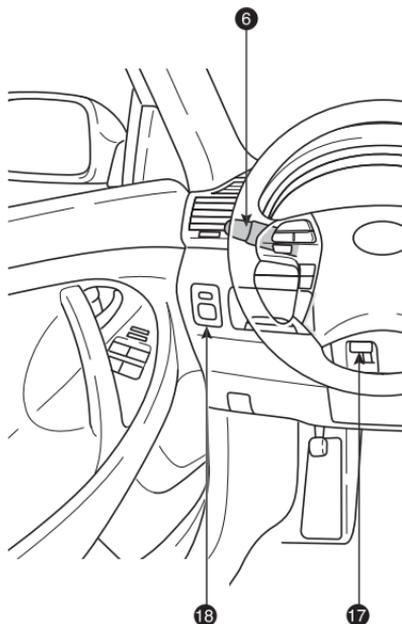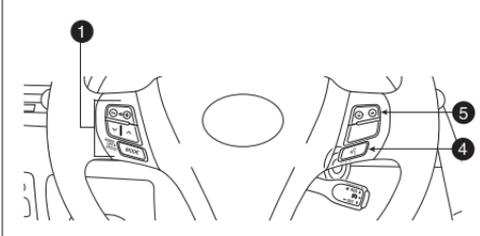



- ① Steering wheel audio controls<sup>1</sup>
- ② Steering wheel climate controls<sup>1</sup>
- ③ Multi-information display button<sup>1</sup>
- ④ Voice command button<sup>1,2</sup>
- ⑤ Telephone controls<sup>1,2</sup>
- ⑥ Headlight and turn signal controls/Headlight, turn signal and front fog light controls<sup>1</sup>
- ⑦ Wiper and washer controls
- ⑧ Emergency flasher button
- ⑨ Audio system<sup>2</sup>
- ⑩ Tire Pressure Warning System reset

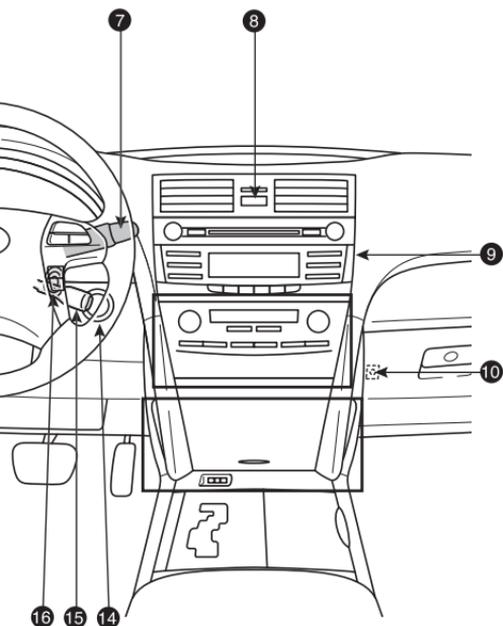

### Automatic Air Conditioning

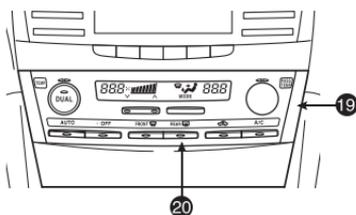

### Manual Air Conditioning

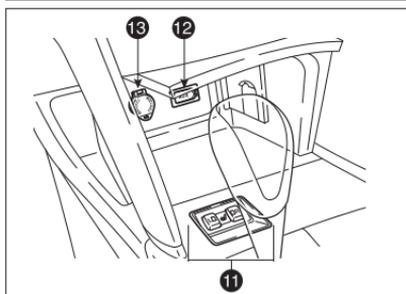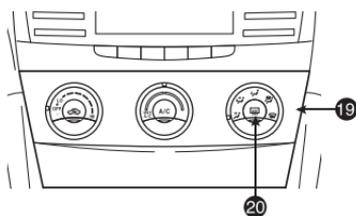


- 11 Seat heater controls<sup>1</sup>
- 12 AUX audio jack
- 13 12V DC Power outlet
- 14 "ENGINE START STOP" button (Smart Key)<sup>1</sup>
- 15 Cruise control
- 16 Engine (ignition) switch (standard key)
- 17 Tilt and telescopic steering lock release
- 18 Power rearview mirror control
- 19 Air Conditioning controls
- 20 Outside rearview mirror<sup>1</sup>/Back window defogger button

<sup>1</sup> If equipped


<sup>2</sup> For details, refer to the "Navigation System Owner's Manual."

## Instrument cluster

With multi-information display

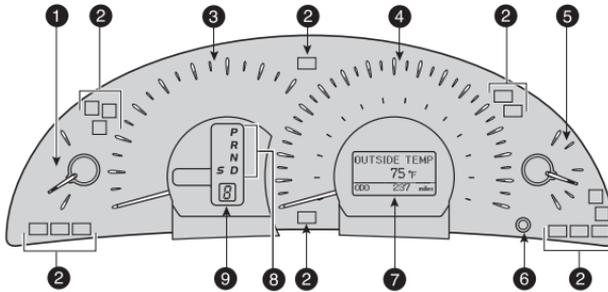

Without multi-information display

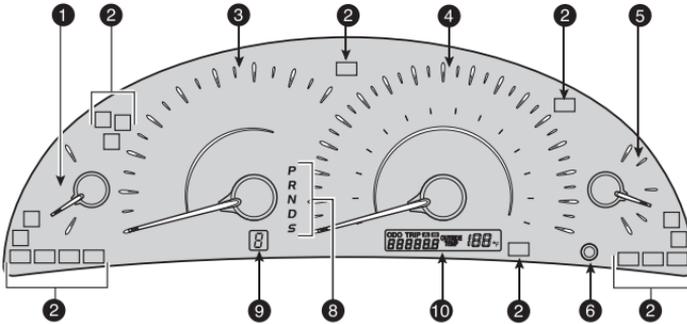

- ① Engine coolant temperature
- ② Service indicator and reminder
- ③ Tachometer
- ④ Speedometer
- ⑤ Fuel gauge
- ⑥ Trip meter reset/Instrument panel light control
- ⑦ Multi-information display
- ⑧ Automatic Transmission shift position indicator
- ⑨ Sequential shift display\*
- ⑩ Odometer, two trip meters and outside temperature display

\* If equipped

## Indicator symbols

	Brake system warning <sup>1</sup>
	Driver seat belt reminder <sup>1</sup> (alarm will sound if speed is over 12 mph)
	Front passenger seat belt reminder <sup>1</sup> (alarm will sound if speed is over 12 mph)
	Charging system warning <sup>1</sup>
	Front passenger occupant classification or front passenger airbag ON/OFF indicator
	Low engine oil pressure warning <sup>1</sup>
	Malfunction/Check Engine indicator <sup>1</sup>
	Engine oil replacement reminder <sup>1</sup>
	Low fuel level warning <sup>1</sup>
	Open door warning <sup>1</sup>
	Airbag SRS warning <sup>1</sup>
	Master warning <sup>1</sup>
	Low Tire Pressure Warning <sup>1</sup>
	Low windshield washer fluid level warning <sup>1</sup>
	Theft deterrent/Engine immobilizer system indicator
	Headlight low/high beam indicator
	Turn signal indicator
	Front fog light indicator
	Slip indicator
	Vehicle Stability Control
	Cruise control indicator <sup>2</sup>
	Anti-lock Brake System warning <sup>1</sup>

<sup>1</sup> For details, refer to "Indicators and warning lights," Section 2-2, 2008 Owner's Manual.

<sup>2</sup> If this light flashes, refer to "Cruise control," Section 2-4, 2008 Owner's Manual.

## Keyless entry

### Locking operation

Without Smart Key system



With Smart Key system



Push 

### Unlocking operation

Without Smart Key system



With Smart Key system




Push ONCE: Driver door   
TWICE: All doors


**NOTE:** If a door is not opened within 30 seconds of unlocking, all doors will relock for safety.

### Trunk lid

Without Smart Key system

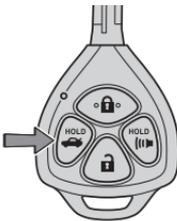

With Smart Key system

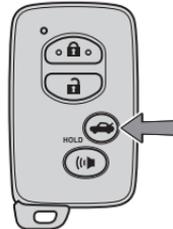

Push and hold  

### Panic button



Push and hold 

## Smart Key system\* (if equipped)


### Start function




**NOTE:** Gear shift lever must be in Park and brake pedal depressed.

### Power (without starting engine)

Without depressing the brake pedal, pressing the "ENGINE START STOP" switch will change the operation mode in succession from:

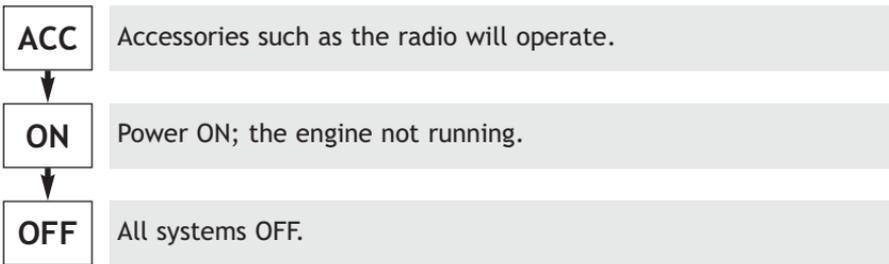




### Locking/Unlocking operation

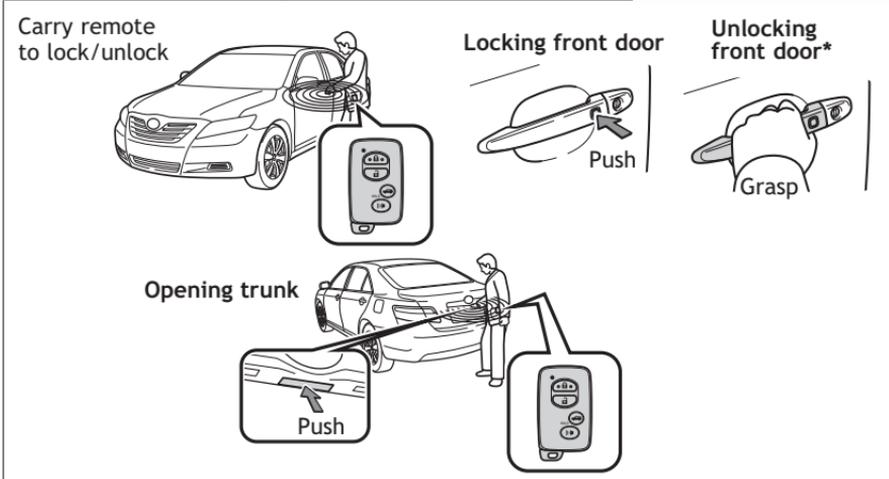

\* Driver door unlocking function can be programmed to unlock driver door only, or all doors. Grasping passenger handle will unlock all doors.

**NOTE:** Doors may also be locked/unlocked using remote.


## Fuel tank door release and cap

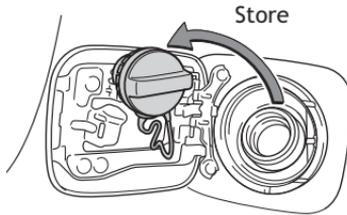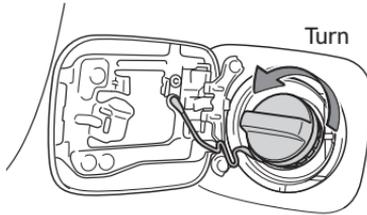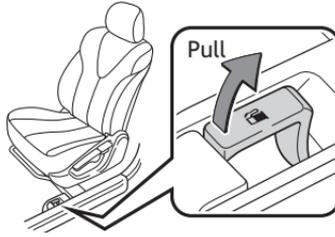


**NOTE:** Tighten until one click is heard. If the cap is not tightened enough, Check Engine "CHECK" indicator may illuminate.

## Light control-Instrument panel

Brightness control

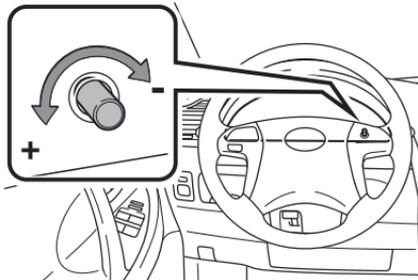


## Hood release

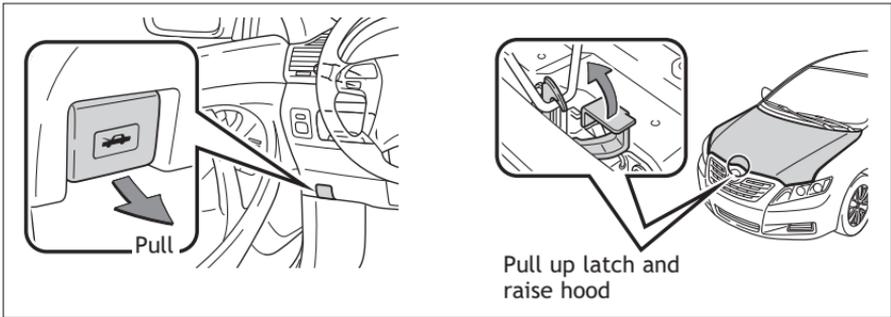


## Engine maintenance

### 4 cylinder (2AZ-FE) engine

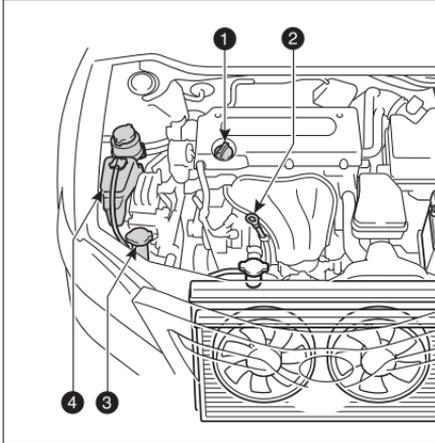

### 6 cylinder (2GR-FE) engine

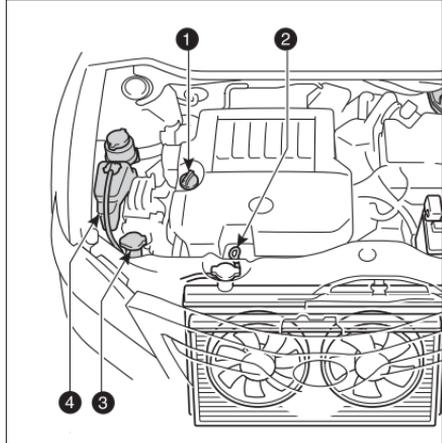

- 1 Engine oil filler cap
- 2 Engine oil level dipstick
- 3 Engine coolant reservoir
- 4 Windshield washer fluid tank

**Note:** Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the "Owner's Warranty Information Booklet," "Scheduled Maintenance Guide" or "Owner's Manual Supplement."

# FEATURES/OPERATIONS

## Auto lock functions

Automatic door locks can be programmed to operate in four different modes, or turned OFF.

- Doors lock when shifting from Park.\*
- Doors lock when the vehicle speed goes above approximately 12 mph.
- Doors unlock when shifting into Park.\*

### Vehicles without Smart Key system

-Doors unlock when the engine switch is set from "ON" to "ACC" or "LOCK" and driver's door is opened.

### Vehicles with Smart Key system


-Doors unlock when the "ENGINE START STOP" switch is set to ACCESSORY mode or OFF and driver's door is opened.

\* Automatic Transmission only


Refer to the *Owner's Manual* for more details.

## Automatic Transmission (if equipped)

### 4 cylinder (2AZ-FE) engine

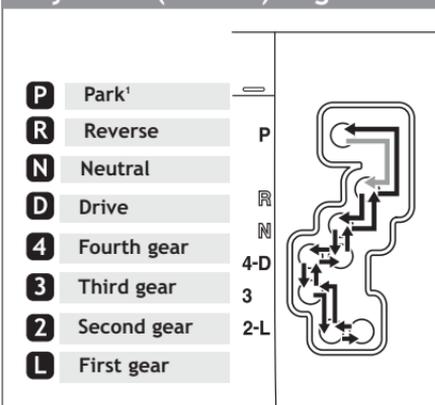

### 6 cylinder (2GR-FE) engine

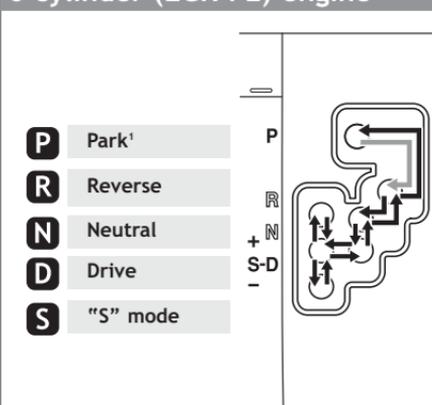

<sup>1</sup> The "ENGINE START STOP"/engine switch must be ON and the brake pedal depressed to shift from "Park."

### "S" (Sequential) mode


Shift the shift lever to "S" position from "D" position.

#### Floor shift type:


- +: Upshift (push and release)
- : Downshift (pull and release)

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.

## Steering lock release

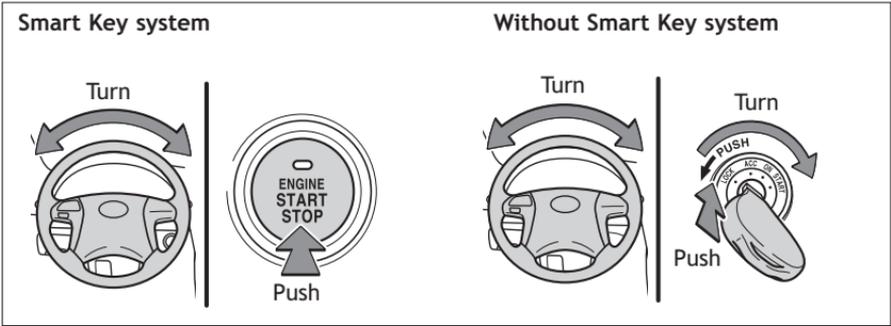


## Tilt and telescopic steering wheel

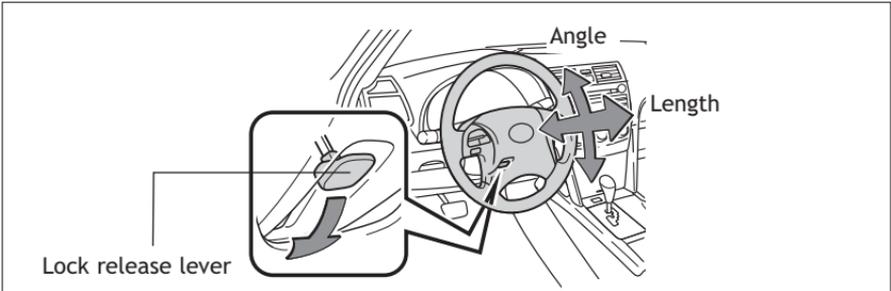


Hold wheel, push lever down, set angle and length, and return lever.

**Note:** Do not attempt to adjust while the vehicle is in motion.

## Parking brake

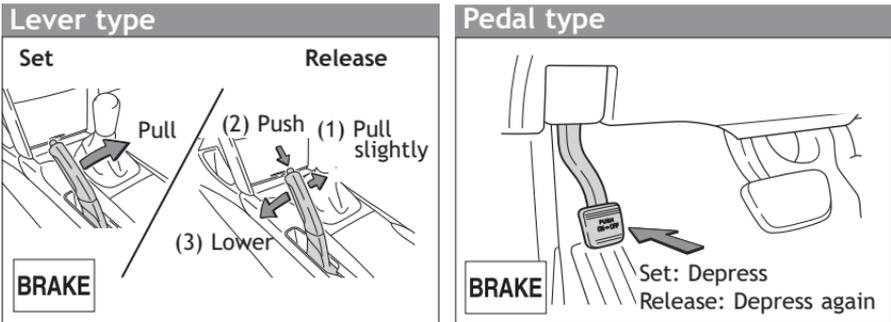


## Windows-Power

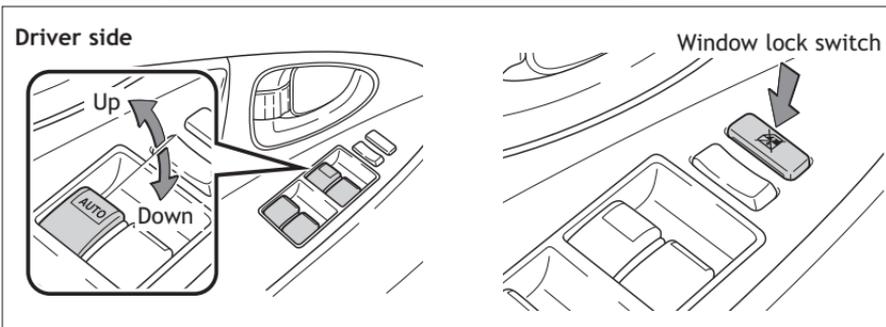


**Automatic operation (driver side only)** Push the switch completely down or pull it completely up and release to fully open or close. To stop window midway, lightly push the switch in the opposite direction.

**Window lock switch** Deactivates all passenger windows. Driver's window remains operable.

## Moonroof (if equipped)

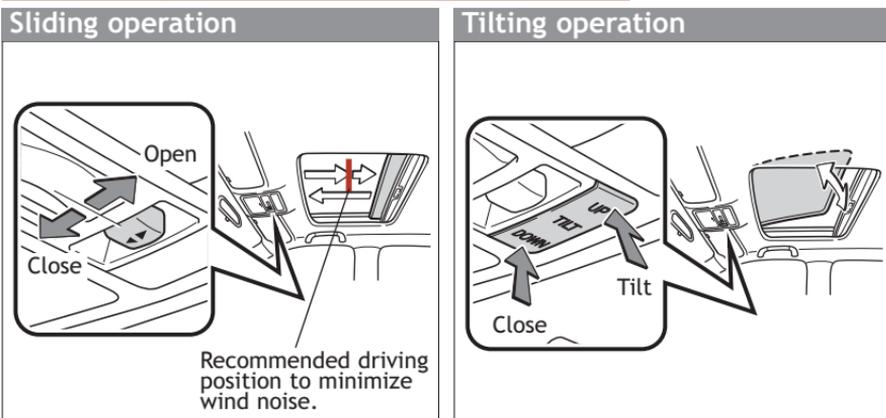

## Seats-Head restraints

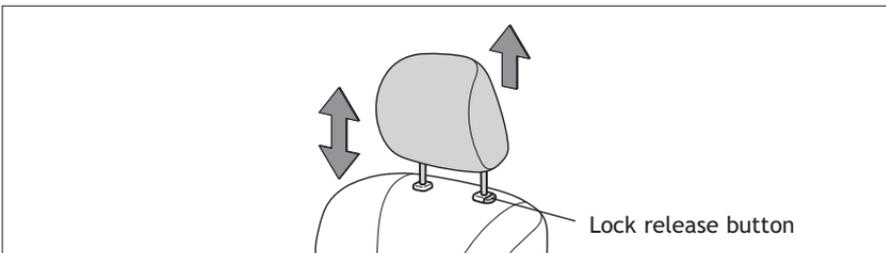


## Seat adjustments-Front

### Manual seat




### Power seat

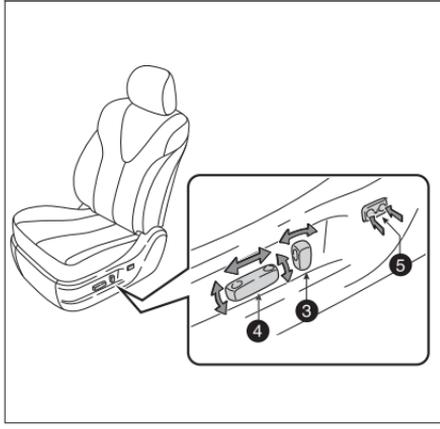


- 1 Position
- 2 Height crank (driver side only)
- 3 Seatback angle
- 4 Position, cushion angle and height
- 5 Lumbar support (driver side only)

## Seat adjustments-Rear (if equipped)

### Reclining type (XLE model)

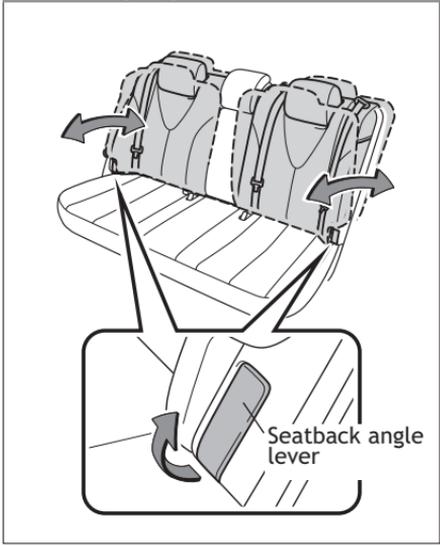


### Fold down type (LE model)

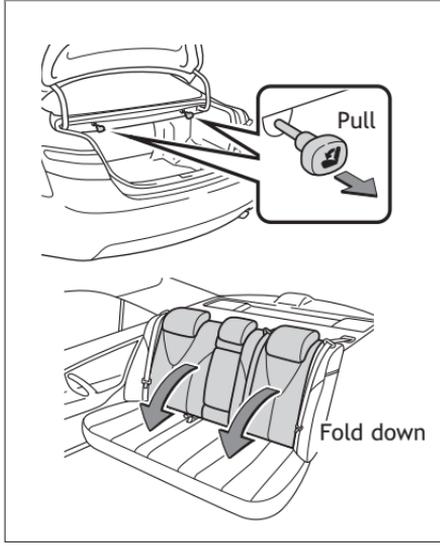


Refer to the *Owner's Manual* for more details.

## Windshield wipers & washers

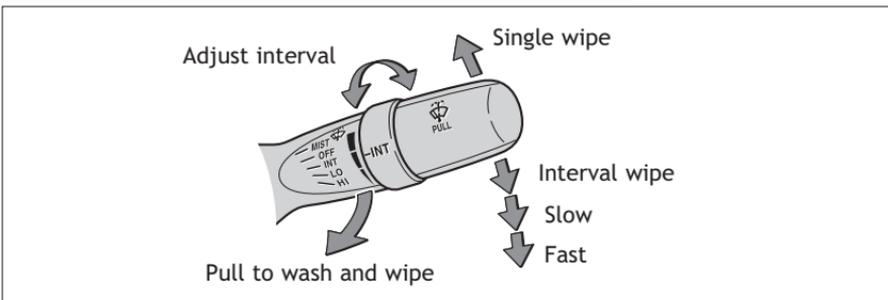

## Lights & turn signals


### Headlights

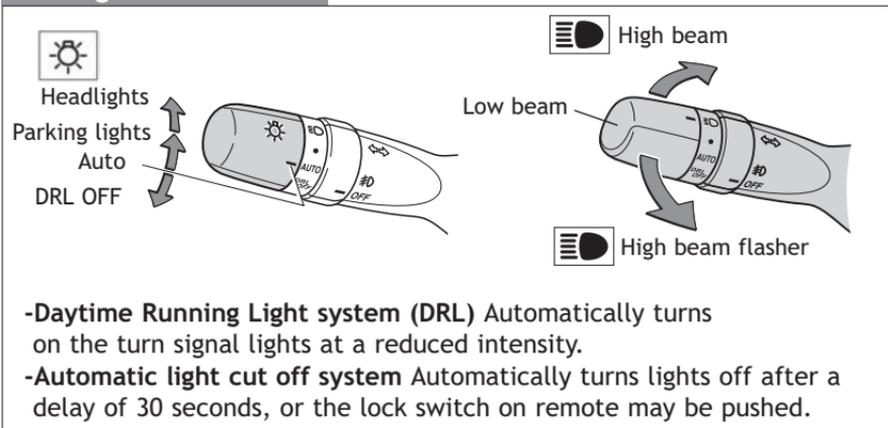


-Daytime Running Light system (DRL) Automatically turns on the turn signal lights at a reduced intensity.

-Automatic light cut off system Automatically turns lights off after a delay of 30 seconds, or the lock switch on remote may be pushed.

### Front fog lights (if equipped)

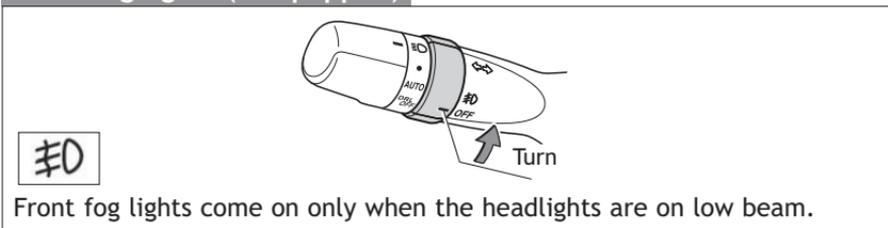


### Turn signals

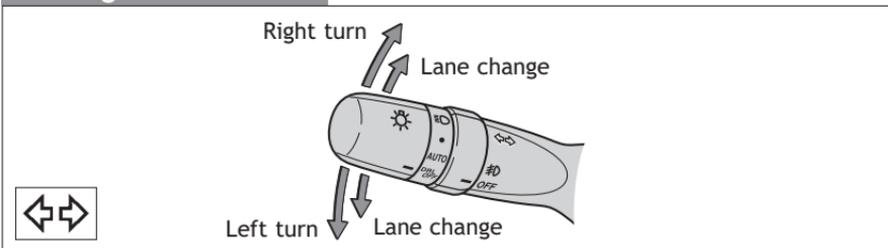

## Power outlets-12V DC


Front console

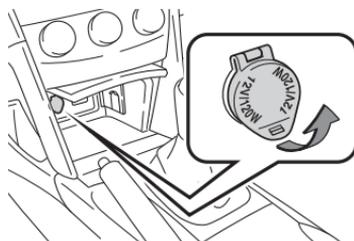

Center console (XLE and SE model)




Center console (LE model)

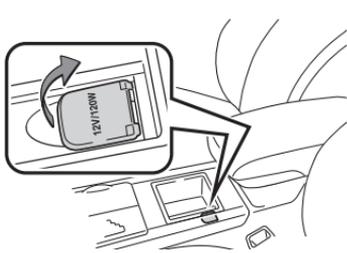

The “ENGINE START STOP” switch/engine switch must be in the “ACC” or “ON” position to be used.


## Multi-information display (if equipped)

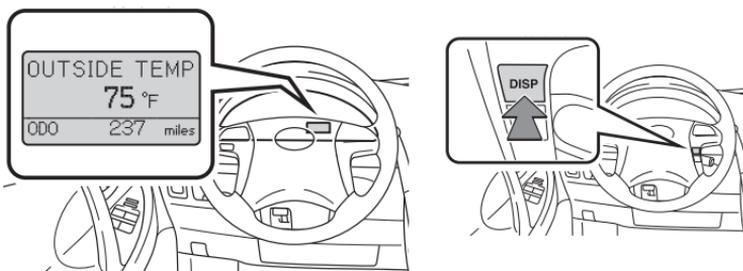

Push “DISP” to change information in the following:

- (1) Outside temperature
- (2) Miles left on remaining fuel
- (3) Current gas mileage
- (4) Running distance from engine start
- (5) Average vehicle speed from engine start
- (6) Multi-information display OFF
- (7) Zoom display of odometer and trip meter

## Garage door opener (HomeLink®)\* (if equipped)

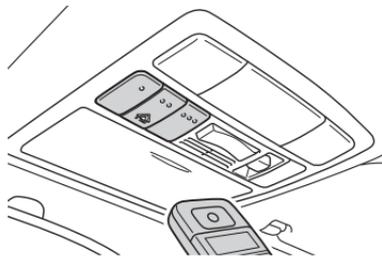

Garage door openers manufactured under license from HomeLink®\* can be programmed to operate garage doors, estate gates, security lighting, etc.


Refer to "Garage door opener," Section 3-7 in the *Owner's Manual* for more details.

For programming assistance, contact the Toyota Customer Experience Center at 1-800-331-4331, or visit <http://www.homelink.com>.


\*HomeLink® is a registered trademark of Johnson Controls, Inc.

## Cruise control

### Turning system ON/OFF

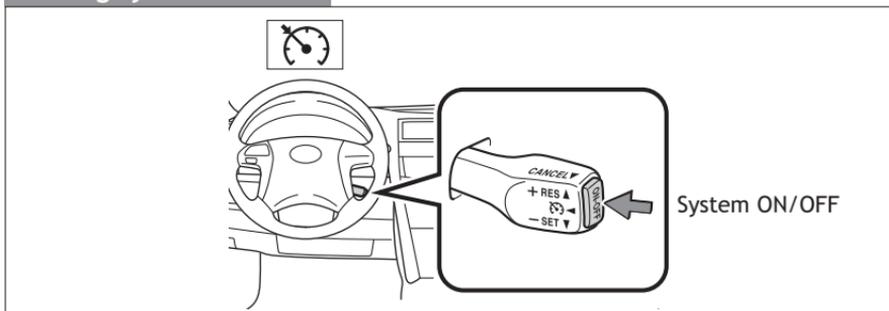

### Functions

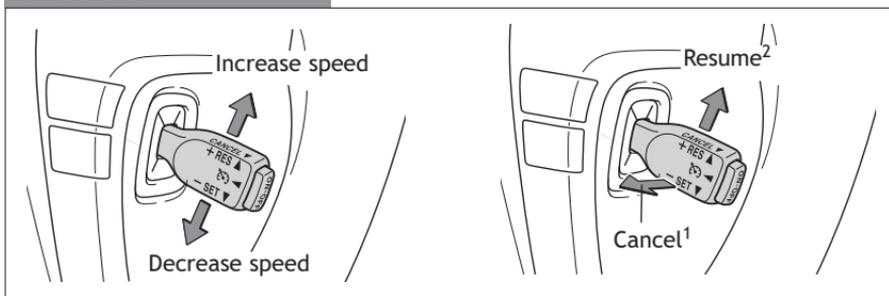


<sup>1</sup> The set speed may also be cancelled by depressing the brake pedal.


<sup>2</sup> The set speed may be resumed once vehicle speed exceeds 25 mph.

## Telephone controls (Bluetooth®) (if equipped)

### Audio unit

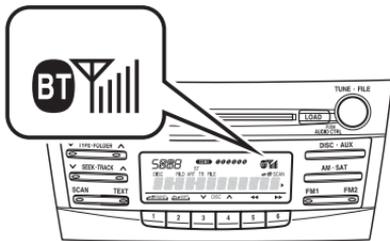


### Microphone

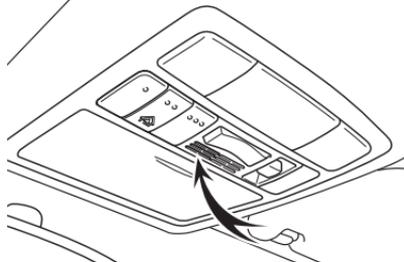


### Steering wheel telephone switches

#### XLE and LE models

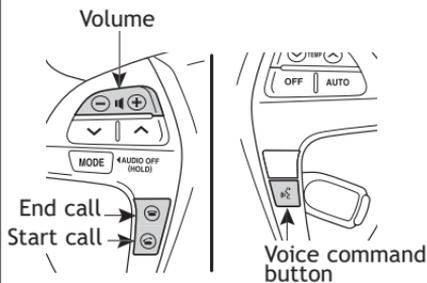


#### SE model

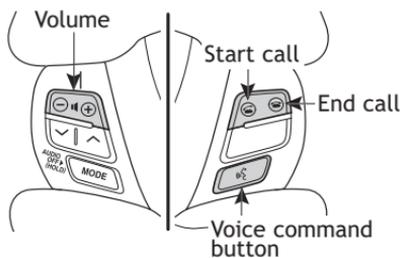


Bluetooth® technology allows you to place or receive calls without taking your hands from the steering wheel or using a cable to connect the compatible telephone and the system.

Refer to "Hands-free phone system (for cellular phone)," Section 3-4 in the *Owner's Manual* for more details.

## Sunshade-Rear (if equipped)

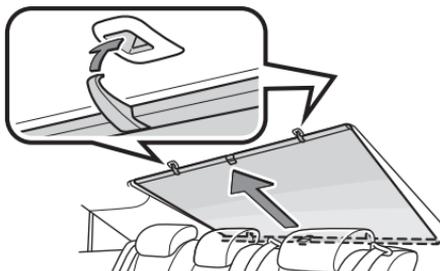


## Clock

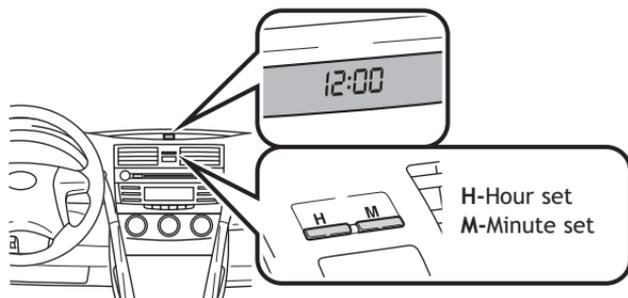

## Air Conditioning/Heating


### Front manual Air Conditioning

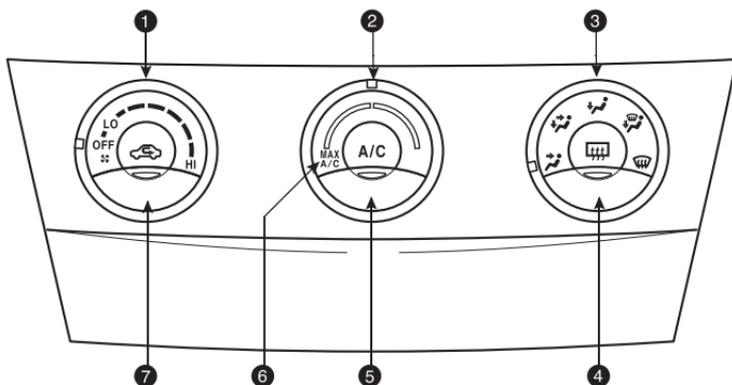

- ① Fan speed
- ② Temperature
- ③ Airflow vent  
In "🌀" or "🌀" mode, use fresh air ("🚗" indicator OFF) to reduce window fogging.
- ④ Outside rearview mirror\*/Rear defogger
- ⑤ Air Conditioning ON/OFF  
Use fresh air to quickly cool interior, then change to recirculate for cooler air.
- ⑥ Use for quick cooling. MAX A/C changes air intake to recirculate. It is not possible to change intake to fresh.
- ⑦ Fresh or recirculated cabin air


\* If equipped

## Front automatic Air Conditioning

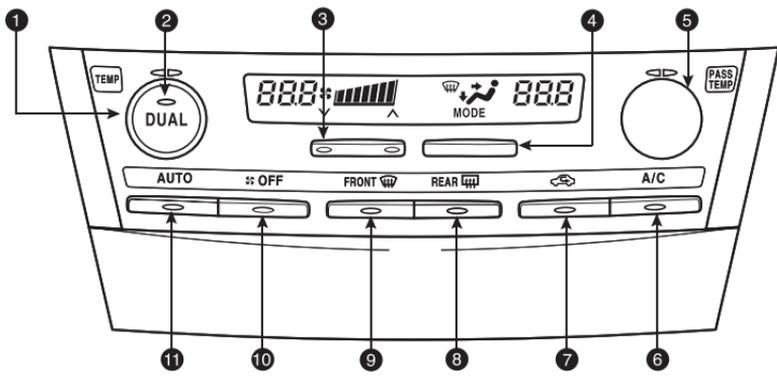


- ① Temperature (driver side)
- ② "DUAL" button  
**Indicator ON:** Separate temperature settings for driver and passengers.  
**Indicator OFF:** Synchronize temperature settings for driver and passengers.
- ③ Fan speed
- ④ Airflow vent  
 In "🌬️" or "🌬️" mode, use fresh air ("🚗" indicator OFF) to reduce window fogging.
- ⑤ Temperature (passenger side)
- ⑥ Air Conditioning ON/OFF
- ⑦ Fresh or recirculated cabin air
- ⑧ Outside rearview mirror/Rear defogger
- ⑨ Windshield airflow/defogger
- ⑩ Climate control OFF
- ⑪ Automatic climate control ON  
 Adjusting the temperature setting will cause the airflow vents, air intake and fan to adjust automatically.

## Seat heaters (if equipped)

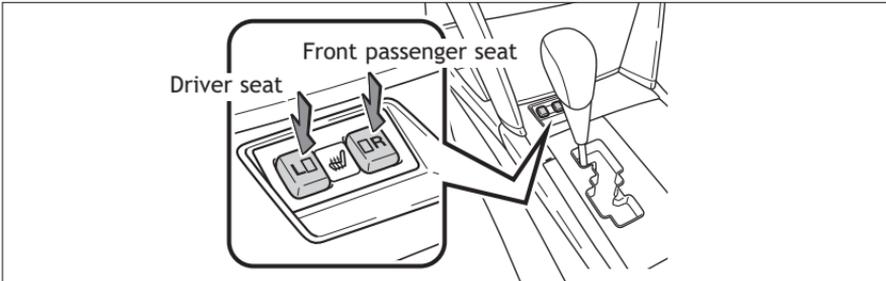


## Audio

### Type 1

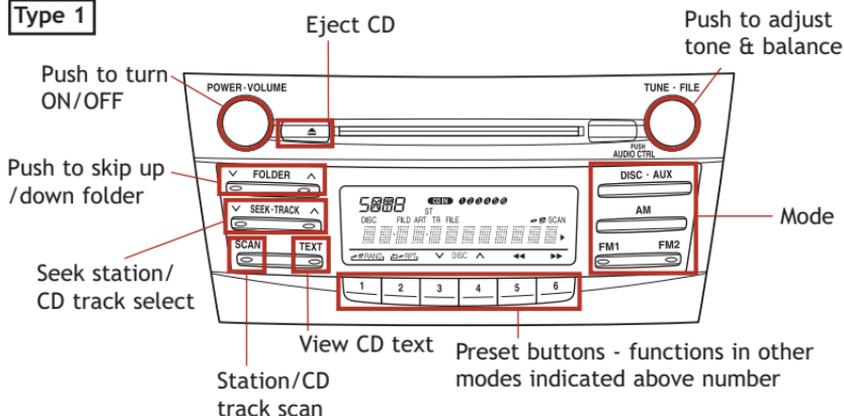

### Type 2 additional functions

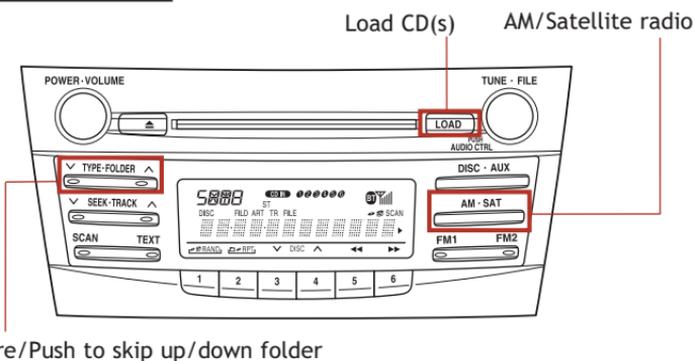

## CD PLAYER

To scan tracks on a disc Push and hold "SCAN." Push again to hold selection.

### CD changer (Type 2 only)

-To load one disc Push "LOAD" and insert one disc.

-To load multiple discs Push and hold "LOAD" until you hear a beep. Insert one disc. Shutter will close and then re-open for next disc.

To select a file (MP3/WMA only) Turn "TUNE-FILE."


To select a folder (MP3/WMA only) Push either side of "FOLDER."

## RADIO

To preset stations Tune in the desired station and hold down a preset button (1-6) until you hear a beep. Push desired preset button (1-6) to select.


To scan stations Push and hold "SCAN" to scan preset stations. Push again to hold selection.

## AUX audio jack

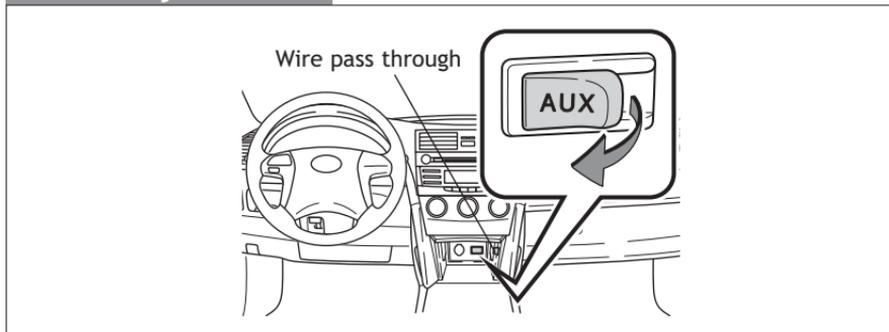

By inserting a mini plug into the AUX audio jack, you can listen to music from a portable audio device through the vehicle's speaker system.

## Steering wheel switches (if equipped)

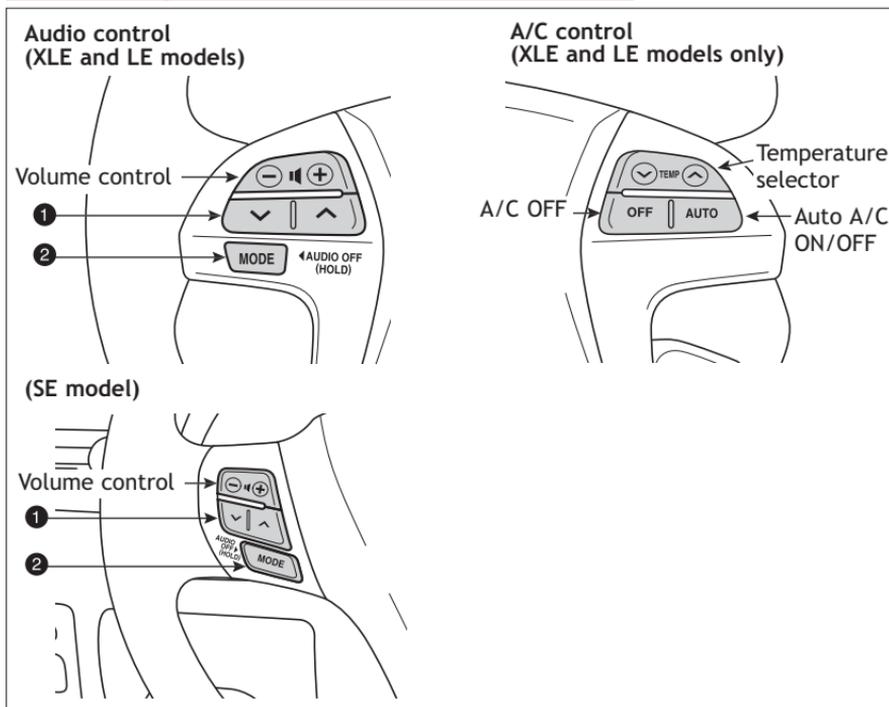


- 1 "V Λ"
  - In radio mode Push to select a preset station; push and hold to seek the next strong station.
  - In CD mode Push to skip up or down to next/previous track.
- 2 "MODE"
  - Push to turn audio ON and select an audio mode. Push and hold to turn the audio system OFF.

## Cup holders


### Front

#### Manual Transmission models

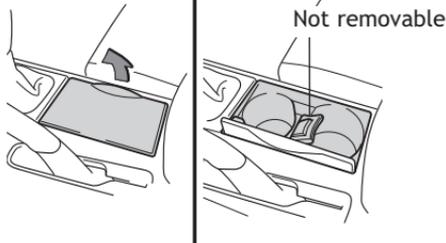


#### Automatic Transmission models

##### XLE and SE models

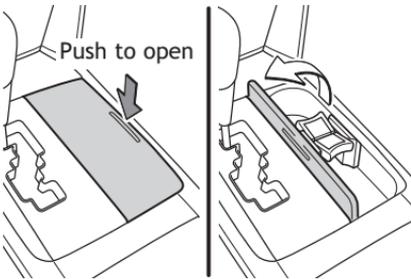


##### LE model

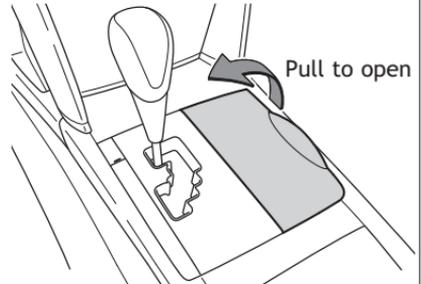


### Rear

#### XLE and SE models

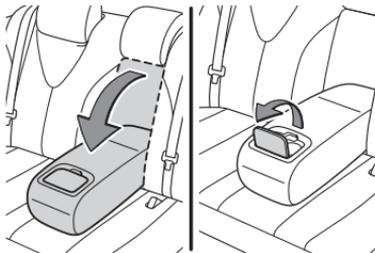


#### LE model

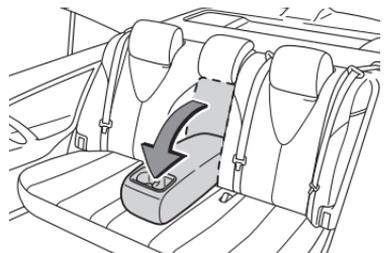


# SAFETY AND EMERGENCY FEATURES

## Door locks

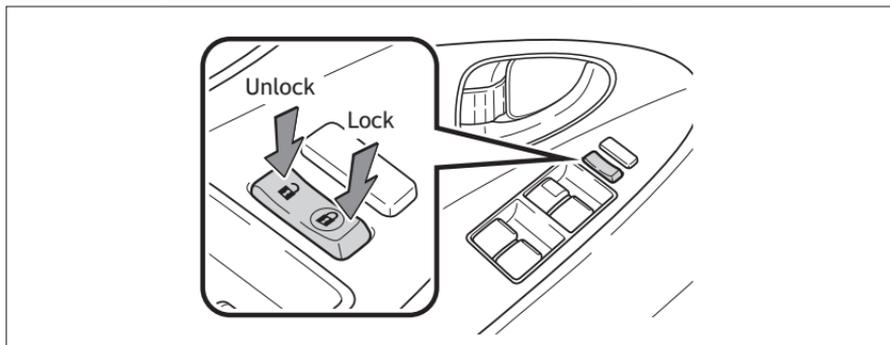


## Doors-Child safety locks

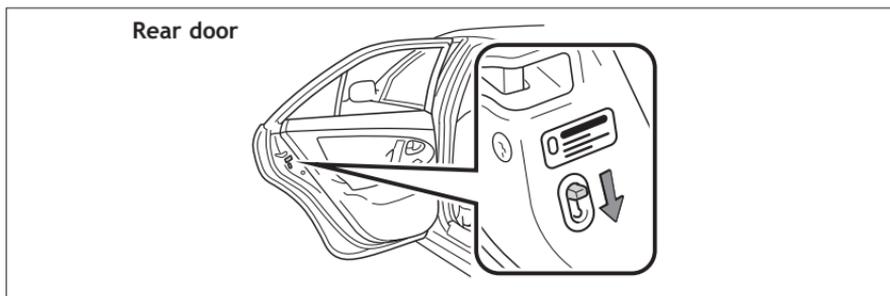

Moving the lever to "LOCK" will allow the door to be opened only from the outside.


## Seat belts

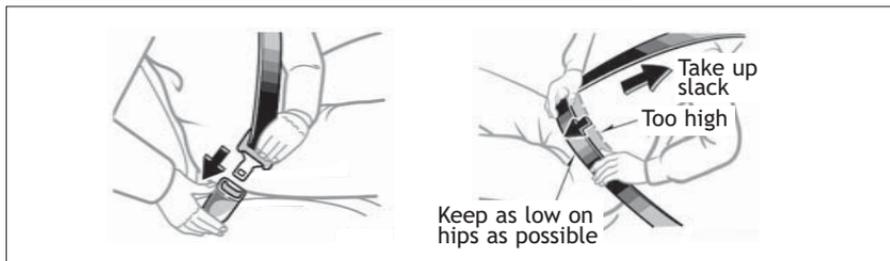


If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.


## Seat belts-Shoulder belt anchor

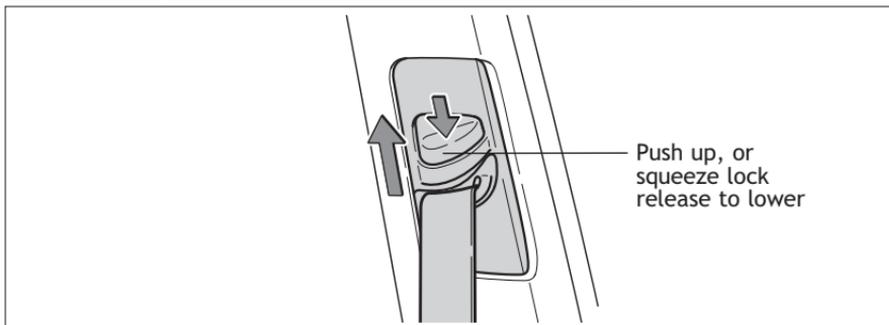

## Child comfort guide

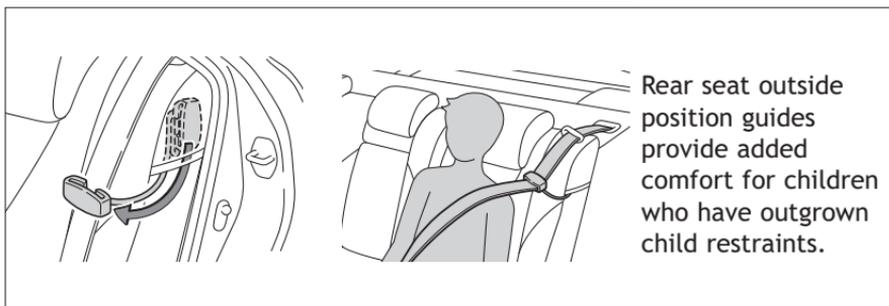

## Tire Pressure Warning System reset

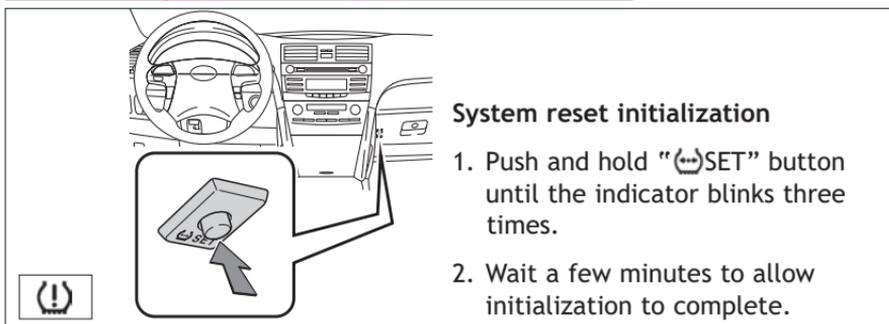


If tire pressure becomes critically low on any of the tires (excluding spare), indicator comes on. Pushing "SET" button should not turn off the light. Correctly adjusting tire inflation will turn off the light after a few minutes. After replacing/rotating tire or wheels, the system must be initialized.

Refer to the *Owner's Manual* for more details.

## Spare tire & tools


### Tool location

#### With compact spare tire

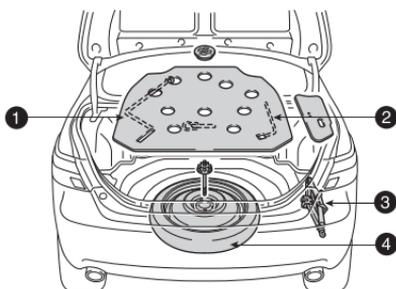


- ① Jack handle
- ② Wheel nut wrench
- ③ Jack
- ④ Spare tire

#### Without compact spare tire

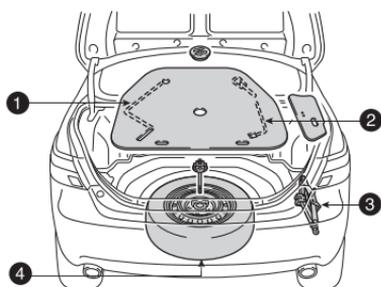


### Removing the spare tire

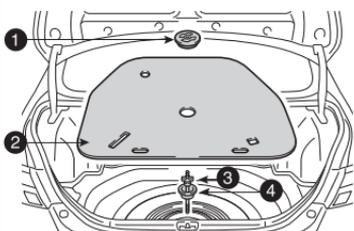

- ① Loosen and remove the nut.
- ② Remove the spare tire cover.
- ③ Loosen and remove the bolt.
- ④ Remove the spacer (with aluminum wheels).

Refer to the *Owner's Manual* for tire changing and jack positioning procedures.

### Trunk-Internal release

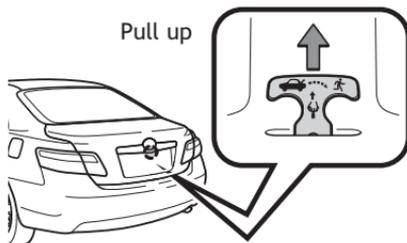



Customer Experience Center  
1-800-331-4331