



Customer Experience Center
1-800-331-4331

SIENNA

2009 Quick Reference Guide

2009 Sienna

This *Quick Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Quick Reference Guide* is not intended as a substitute for the *Owner's Manual* located in the vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of the vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Sienna.

! A word about safe vehicle operations

This *Quick Reference Guide* is not a full description of Sienna operations. Every Sienna owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.


All information in this *Quick Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

Spare tire & tools

All-wheel drive models are equipped with run-flat tires. Refer to the *Owner's Manual* for more detail.

Tool and spare tire location


Two-wheel drive models

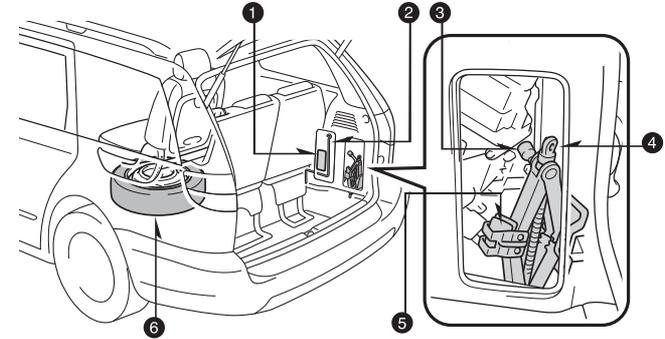

- ① Tire bag
- ② Jack handle
- ③ Wheel nut wrench
- ④ Jack
- ⑤ Adapter
- ⑥ Spare tire

Removing the spare tire

Two-wheel drive models

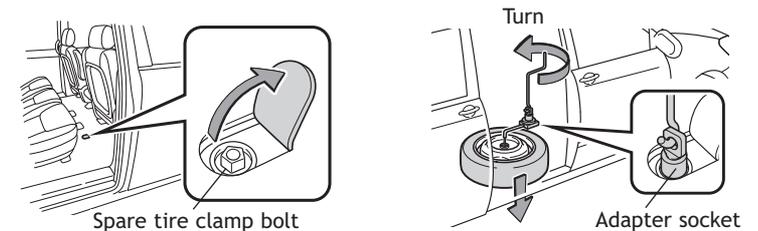

Refer to the *Owner's Manual* for jack positioning and tire changing procedures.

INDEX

OVERVIEW

Engine maintenance	7
Fuel tank door release and cap	7
Hood release	6
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Keyless entry¹	6

FEATURES/OPERATIONS

Air Conditioning/Heating	22-23
Audio	20-21
Auto lock functions²	8
Automatic Transmission	8
Bottle holders	25
Clock	13
Console box	13
Cruise control	18
Cup holders	26
Door-Power back	12
Doors-Sliding	12
Dynamic Laser Cruise Control	18-19
Front seat console table	13
Light control-Instrument panel	19
Lights¹ & turn signals	9
Moonroof	11
Multi-information display (HomeLink [®]) ³	24
Parking brake	10
Power outlets-12V DC	25
Power outlets-115V AC	25
Rear seat entertainment system	24
Seat adjustments-Front	14
Seat adjustments-Rear	14
Seat arrangements	15
Seat heaters	11
Seats-Head restraints	15
Seats-Stowing third row seats	16-17
Seats-Tumble/Remove second row seats	16
Sunshade-Side	17
Telephone controls (Bluetooth [®])	21
Tilt and telescopic steering wheel	8
Windows	11
Windows-Power quarter	10
Windshield wipers & washers	10

SAFETY AND EMERGENCY FEATURES

Door locks	27
Doors-Child safety locks	27
Seat belt comfort guide	27
Seat belts	28
Seat belts-Shoulder belt anchor	27
Spare tire & tools	29
Tire Pressure Monitoring (warning) System	28

¹ Visit your Toyota dealer for information on customizing this feature.


² Programmable by customer. Refer to the Owner's Manual for instructions and more information.

³ HomeLink[®] is a registered trademark of Johnson Controls, Inc.



OVERVIEW

Instrument panel


Overhead console

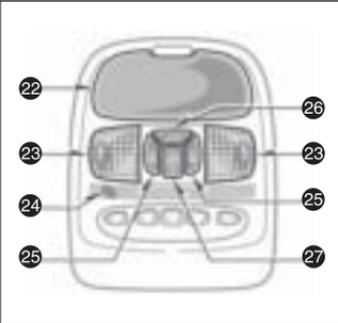

Steering wheel switches

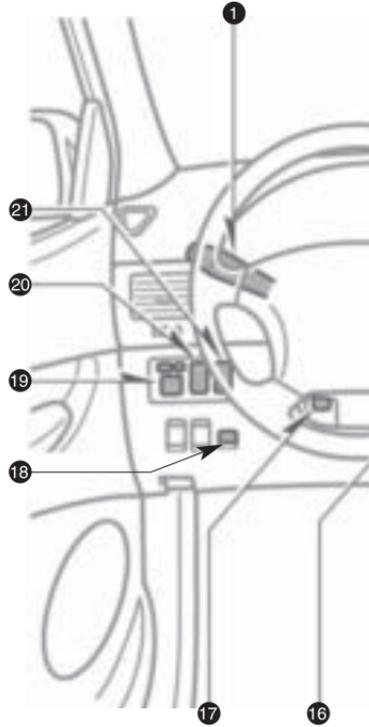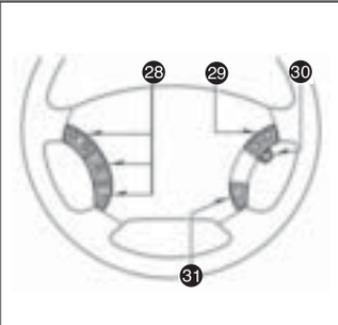

- 1 Headlight, turn signal and front fog light¹ controls
- 2 Wiper and washer controls
- 3 Rear window and outside rearview mirror defogger¹ and windshield wiper de-icer¹ switch
- 4 Emergency flasher button
- 5 Audio system or navigation system²
- 6 115V AC Power outlet ON/OFF button¹
- 7 AUX adapter
- 8 Intuitive parking assist switch and indicator¹
- 9 Front Air Conditioning controls
- 10 Front passenger occupant classification indicator
- 11 Seat heater switch¹
- 12 12V DC Power outlets
- 13 Interior lights main switch
- 14 Engine switch
- 15 “TRAC OFF” (Traction Control “OFF”)¹
- 16 Cruise control or dynamic laser cruise control¹

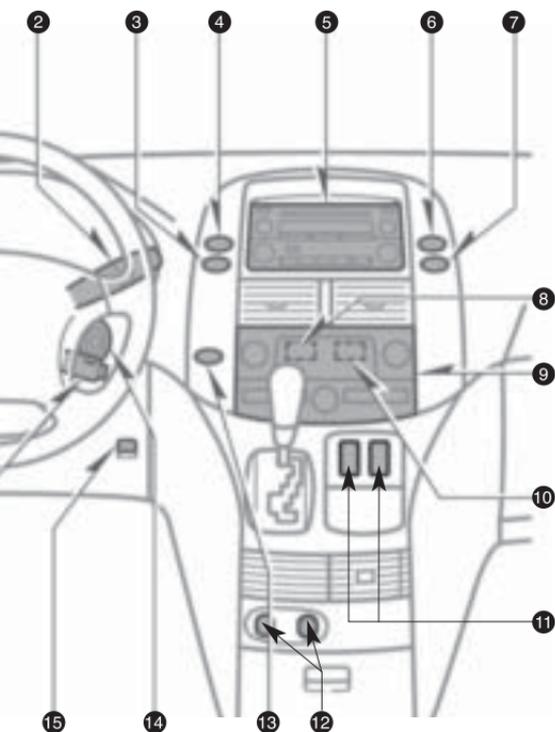


- 17 Tilt and telescopic steering lock release
- 18 Tire Pressure Warning System reset
- 19 Power rearview mirror controls
- 20 Power quarter window switch¹
- 21 Headlight beam level control dial¹
- 22 Conversation mirror
- 23 Front personal lights
- 24 Microphone^{1,2}
- 25 Power sliding door button¹
- 26 Power back door button¹
- 27 Electric moonroof switch¹
- 28 Steering wheel audio controls^{1,2}
- 29 Telephone controls^{1,2}
- 30 Dynamic Laser Cruise Control distance switch¹
- 31 Speech command button^{1,2}

¹ If equipped


² For vehicles with a navigation system, refer to the “*Navigation System Owner’s Manual.*”

Instrument cluster

Non-optitron type meters

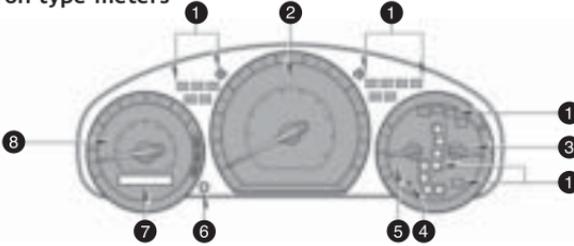

Optitron type meters

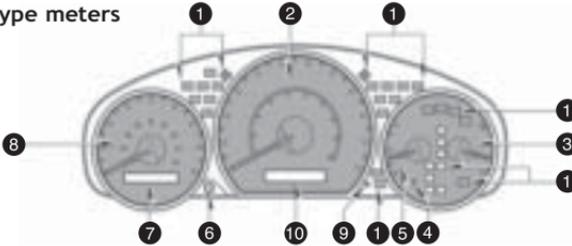

- ① Service indicator and reminder
- ② Speedometer
- ③ Engine coolant temperature
- ④ Low fuel level warning
- ⑤ Fuel gauge
- ⑥ Trip meter reset knob
- ⑦ Odometer and two trip meters
- ⑧ Tachometer
- ⑨ Dynamic Laser Cruise Control master warning
- ⑩ Dynamic Laser Cruise Control display

Indicator symbols

For details, refer to “Indicators and warning lights,” Section 2-2, 2009 Owner’s Manual.

BRAKE	Brake system warning ^{1,2}
	Driver seat belt reminder ² (alarm will sound if speed is over 12 mph)
	Front passenger seat belt reminder ² (alarm will sound if speed is over 12 mph)
	Charging system warning ^{1,2}
	Malfunction/Check Engine indicator ^{1,2}

¹ If indicator does not turn off within a few seconds of starting engine, there may be a malfunction. Have vehicle inspected by your Toyota dealer.

² For details, refer to “If a warning light turns on or a warning buzzer sounds...,” Section 5-2, 2009 Owner’s Manual.


	Low engine oil pressure warning ^{1,2}
	Open door warning ²
	Airbag SRS warning ^{1,2}
VSC	Vehicle Stability Control/Traction Control warning ^{1,2}
	Low Tire Pressure Warning ^{1,2}
	Low windshield washer fluid level warning ²
MAINT REQD	Engine oil replacement reminder ^{1,2}
3RD SEAT	Third seat fold incomplete warning ²
	Theft deterrent/Engine immobilizer system indicator
AIR BAG ON	“AIR BAG ON” indicator ¹
AIR BAG OFF	“AIR BAG OFF” indicator ¹
	Headlight low beam indicator
	Headlight high beam indicator
	Turn signal indicator
	Automatic Transmission indicator
	Slip indicator ¹
TRAC OFF	Traction Control “OFF” indicator ¹
CRUISE	Cruise control indicator ³ or Dynamic Laser Cruise Control indicator ⁴
READY	Dynamic Laser Cruise Control ready mode indicator ¹
NORM.	Conventional cruise control mode indicator
ABS	Anti-lock Brake System warning ^{1,2}

³ If this light flashes, refer to “Cruise control,” Section 2-4, 2009 Owner’s Manual.

⁴ If this light flashes, refer to “Dynamic laser cruise control,” Section 2-4, 2009 Owner’s Manual.

Keyless entry



Locking operation

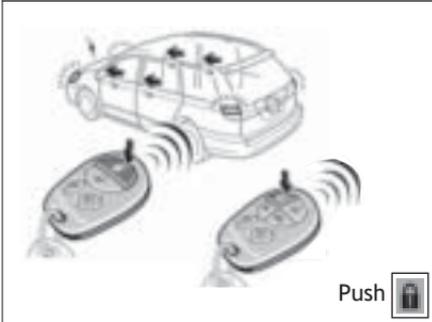


Unlocking operation




Power sliding door operation (if equipped)

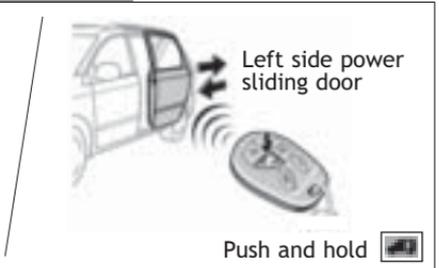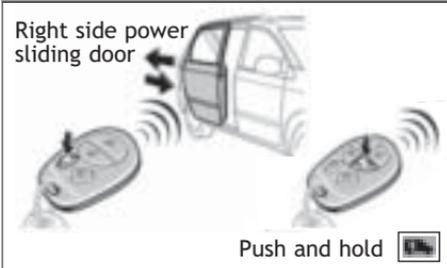


Power back door operation (if equipped)

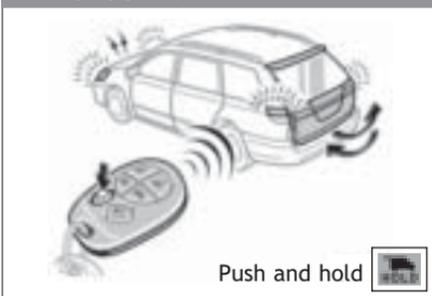


Panic button

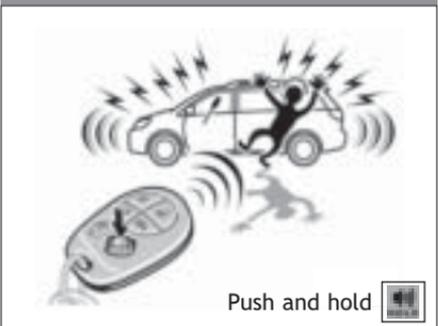

Hood release

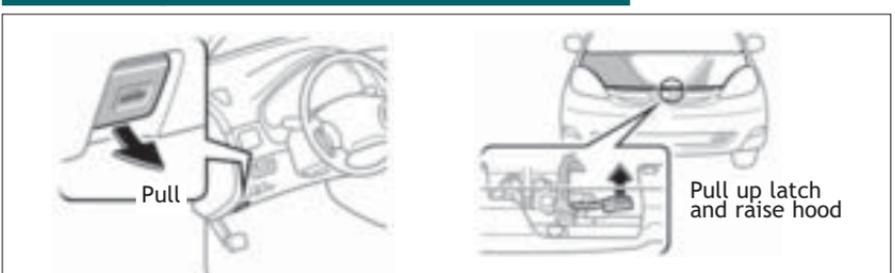


Fuel tank door release and cap

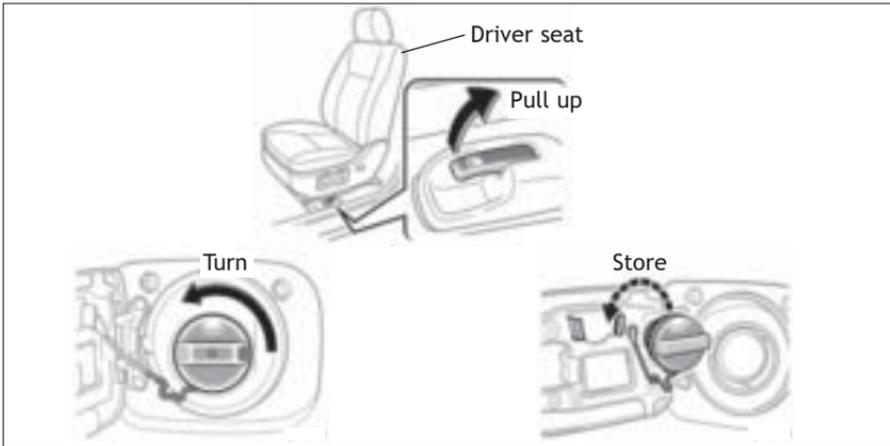

NOTE: Tighten until one click is heard. If the cap is not tightened enough, Check Engine “” indicator may illuminate.

Engine maintenance

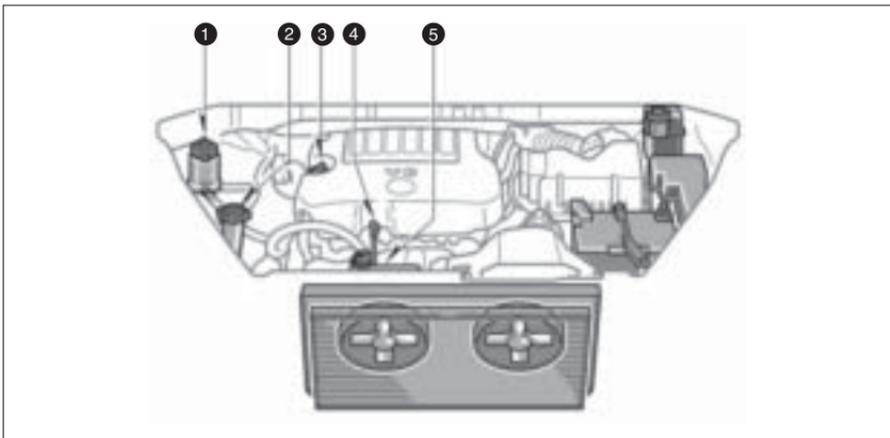

- ① Power steering fluid reservoir
- ② Windshield and rear window washer fluid tank
- ③ Engine oil filler cap
- ④ Engine oil level dipstick
- ⑤ Engine coolant reservoir

Note: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the “Owner’s Warranty Information Booklet,” “Scheduled Maintenance Guide” or “Owner’s Manual Supplement.”


FEATURES/OPERATIONS

Auto lock functions

Automatic door locks can be programmed to operate in four different modes, or turned OFF.

- Doors lock when shifting from Park.
- Doors lock when the vehicle speed goes above approximately 12 mph.
- Doors unlock when the engine key is turned to the “ACC” or “LOCK” position and driver’s door is opened.
- Doors unlock when shifting into Park.


Automatic Transmission

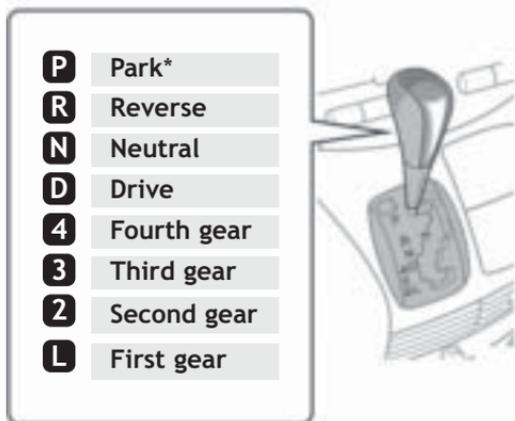

* The engine switch must be “ON” and the brake pedal depressed to shift from Park.

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the “D” position.

Tilt and telescopic steering wheel

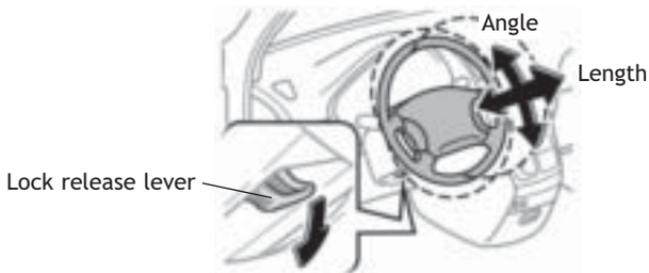


Hold wheel, push lever down, set angle and length, and return lever.

Note: Do not attempt to adjust while the vehicle is in motion.

Lights & turn signals

Headlights

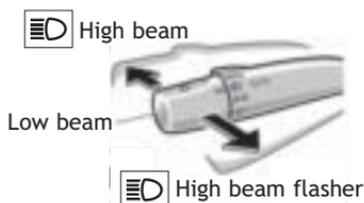


* If equipped

-**Daytime Running Light system (if equipped)** Automatically turns on the headlights at a reduced intensity.

-**Automatic light cut off system** Automatically turns lights off after 30 seconds when any of the doors are opened and closed with the engine off. Lights may also be turned off by pushing lock button on remote once more after locking.

Turn signals

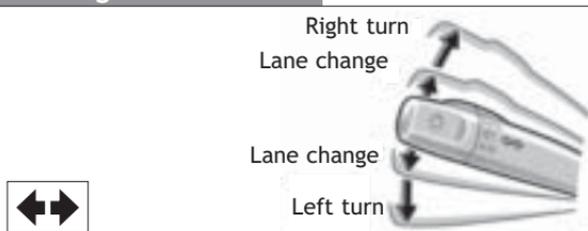


Front fog lights (if equipped)



Front fog lights come on only when the headlights are on low beam.

Headlight beam level control (if equipped)

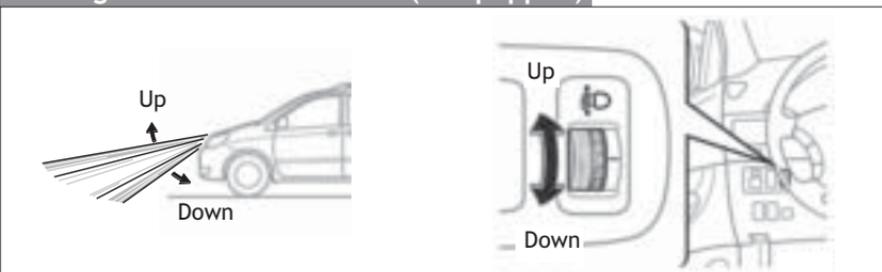


Higher number will lower the beam.


Windshield wipers & washers

Front

* Intermittent windshield wiper interval adjustment
Rotate up to increase interval, down to decrease interval.

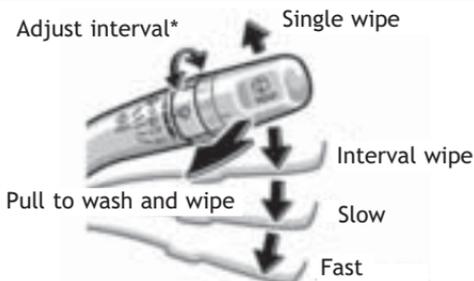


Rear

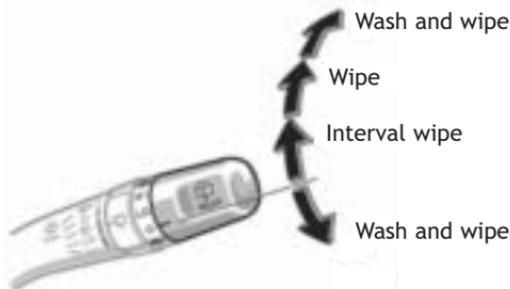


Parking brake

BRAKE

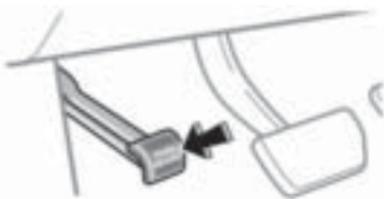


Set: Depress
Release: Depress again

Windows-Power quarter (if equipped)

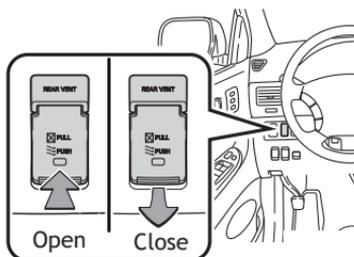


Windows

Driver side

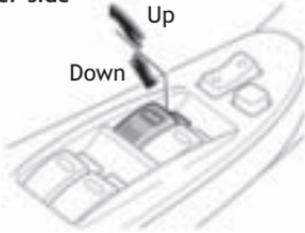

Window lock switch

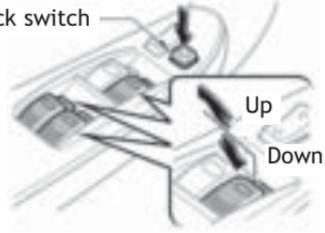


Automatic operation (driver side only) (If equipped) Push the switch completely down or pull it completely up and release to fully open or close. To stop window midway, lightly push the switch in the opposite direction.

Window lock switch Deactivates all passenger windows. Driver's window remains operable.


NOTE: If battery is disconnected, the windows need to be reinitialized. Refer to the *Owner's Manual* for more details.

Moonroof (if equipped)

Sliding operation

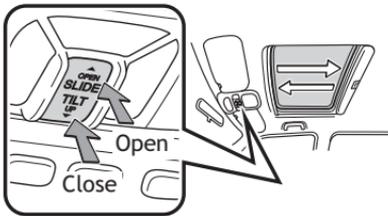


Tilting operation

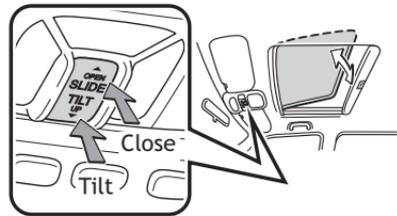

NOTE: If battery is disconnected, the moonroof needs to be reinitialized. Refer to the *Owner's Manual* for more details.


Seat heaters (if equipped)

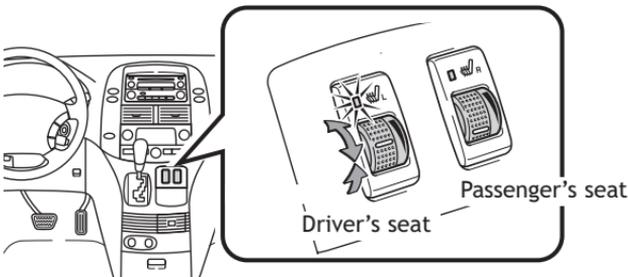

Doors-Sliding


ON/OFF switch

Instrument panel

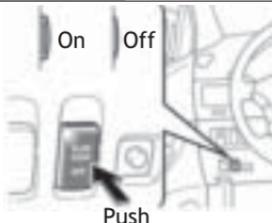


Opening/Closing

Front overhead console

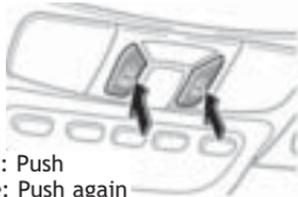

Open: Push
Close: Push again

Center pillar

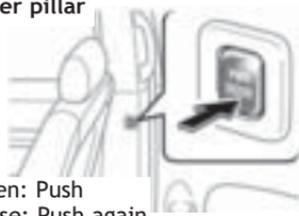

Open: Push
Close: Push again

Power

- Sliding doors will not fully open if the sliding door window is open.
- When the engine switch is in the “ON” position, power sliding doors will open only when gear selector is in the “P” (Park) position, and doors are unlocked. Refer to the *Owner’s Manual* for more details.
- An alarm will sound if a sliding door is open and the vehicle is shifted out of Park.
- If battery is disconnected, the power sliding doors need to be reinitialized. Refer to the *Owner’s Manual* for more details.

Manual

- Sliding doors will not lock into the open position if the sliding door window is open.

Door-Power back (if equipped)


ON/OFF switch

Instrument panel



Opening/Closing

Front overhead console

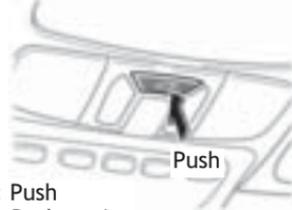


Open: Push
Close: Push again

NOTE: If battery is disconnected, the power back door needs to be reinitialized. Refer to the *Owner’s Manual* for more details.

Console box (if equipped)


Remove

①

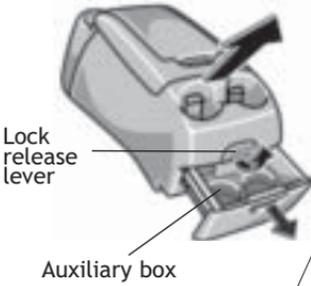

Install


②

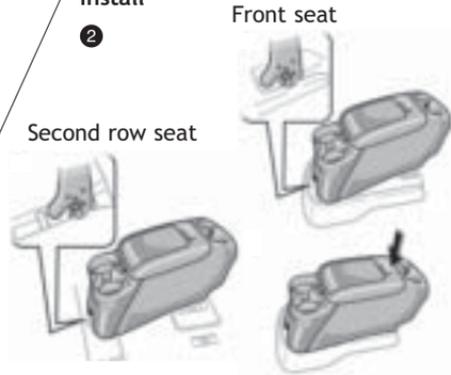

The console box can be removed and installed between the front or second row seats.


- ① **To remove** Open the auxiliary box on the rear side, and pull the lock release lever. Lift the box from the rear to release it from the hook.
- ② **To install** Place the hook into the striker. Lower box and push down to engage the rear lock.

Front seat console table (if equipped)

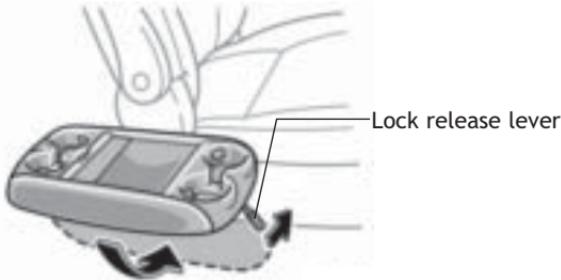


Clock

With manual
Air Conditioning system

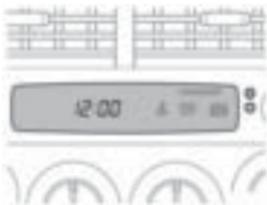

With automatic
Air Conditioning system

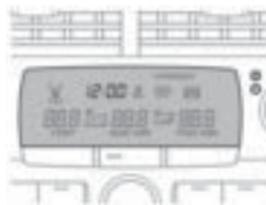

H- Hour set
M- Minute set

Seat adjustments-Front

Manual seat



Power seat



- ① Position
- ② Height crank (driver side only)
- ③ Seatback angle
- ④ Lumbar support (driver side only)(If equipped)
- ⑤ Position, cushion angle and height
- ⑥ Seatback angle

Seat adjustments-Rear

Second row seat

Outer




Center




Third row seat

Manual

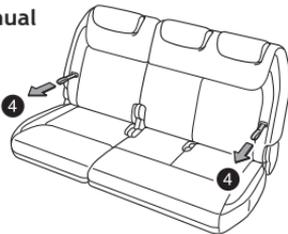

Power

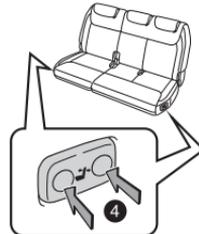


- ① Seatback release (from third row seat)
- ② Seatback release (from second row seat)
- ③ Position
- ④ Seatback angle


Refer to the *Owner's Manual* for more details.

Seats-Head restraints


Front

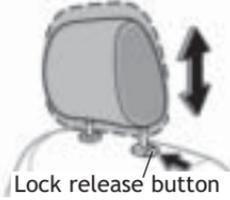

Rear

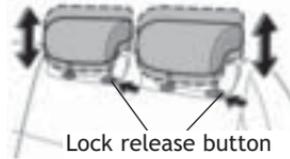

Seat arrangements (examples)

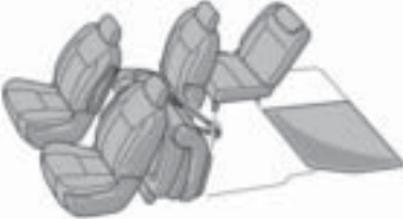

These are some possible seat arrangements. Please read the following section and refer to the *Owner's Manual* for more information about seat positions.

7-passenger models




8-passenger models



7-passenger models The right seat can be placed in the inside or outboard position.


8-passenger models The center seat can be placed in the forward position or even with the other seats.

Seats-Tumble/Remove second row seats

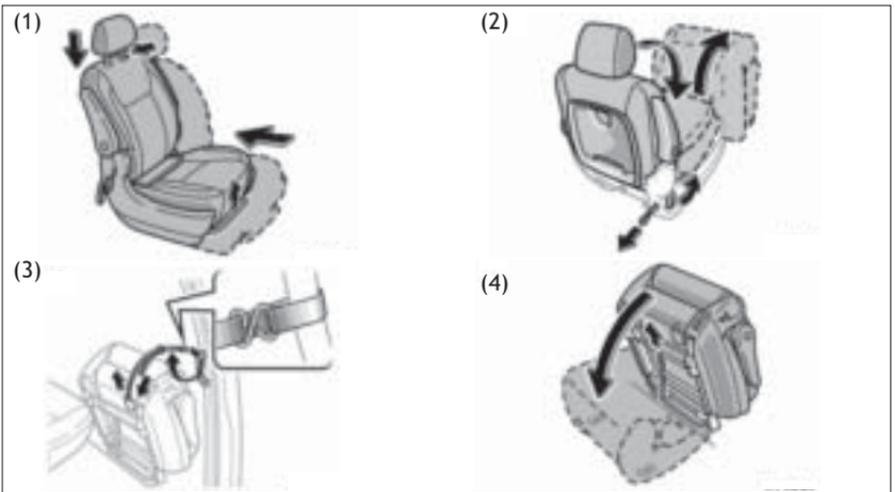


- (1) Lower the head restraint and slide the seat to the rear-most locked position.
- (2) Pull the strap or lever and tumble the seat.
- (3) Pass the strap through the assist grip.
- (4) Pull and hold the strap, then fold down the seat to disengage from front hooks.

Seats-Stowing third row seats (manual)

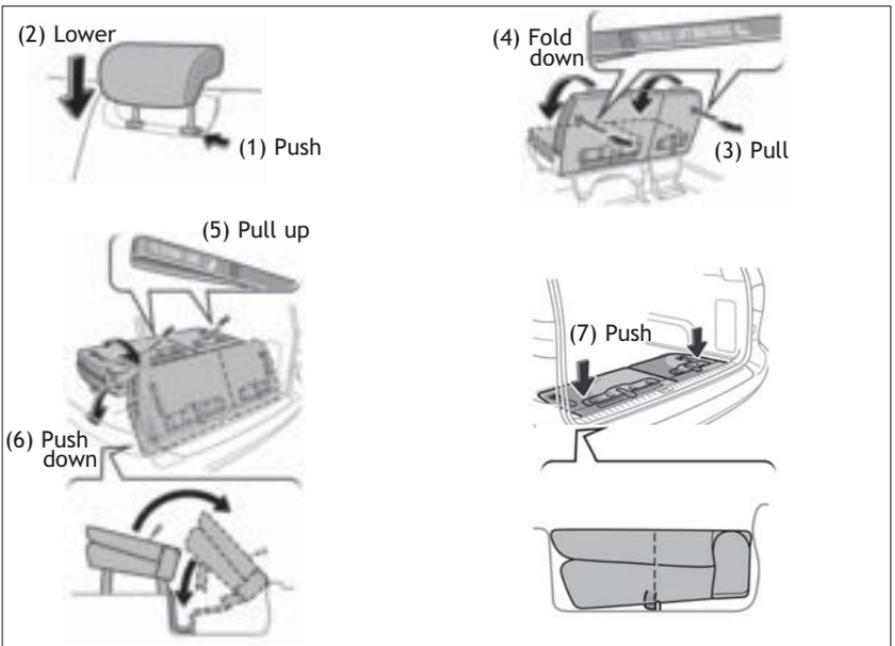


Seats-Stowing third row seats (power)(if equipped)

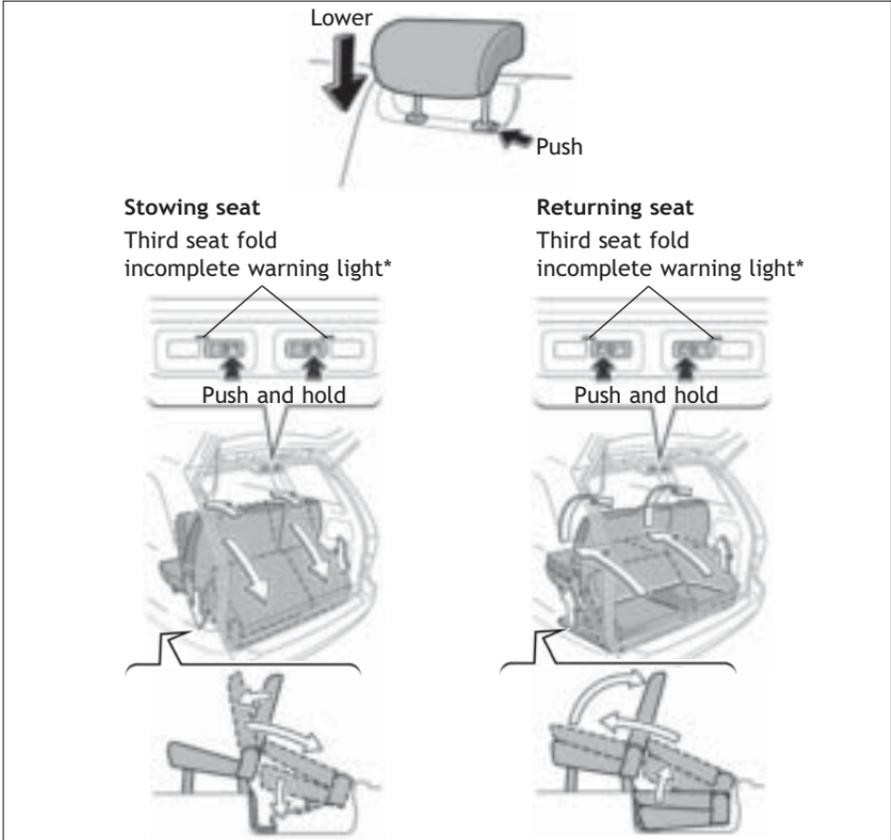

* This light will remain ON until the seat is fully open or stowed. An alarm will also sound for 10 seconds, and the **3RD SEAT** indicator will light up on the instrument panel.


Refer to the *Owner's Manual* for more details.

Sunshade-Side (if equipped)

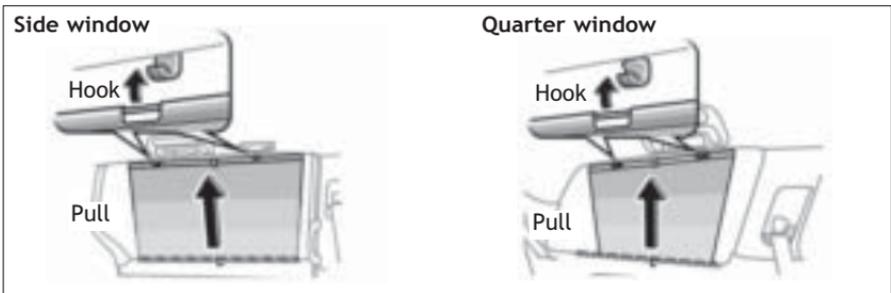


Cruise control (if equipped)

Turning system ON/OFF

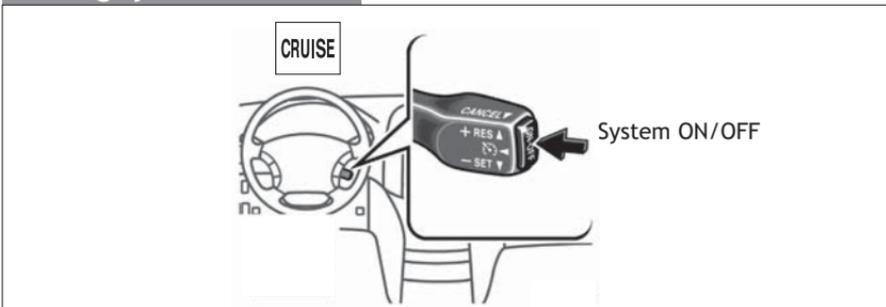

Functions

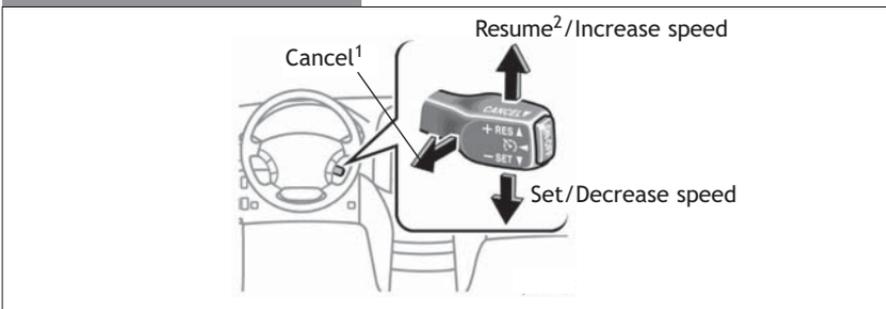


¹ The set speed may also be cancelled by depressing the brake pedal.

² The set speed may be resumed once vehicle speed reaches 25 mph.

Dynamic Laser Cruise Control (if equipped)

Refer to the Owner's Manual for more details and complete safety precautions before attempting to use the "Dynamic Laser Cruise Control."

Fixed speed mode

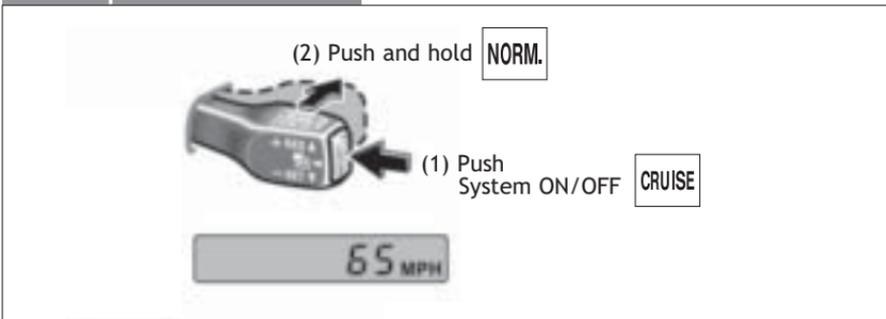

To set, cancel and resume a speed Refer to "Functions" in the *Cruise Control* section above, and the *Owner's Manual* for more details.

Distance control mode




The distance control mode will cruise at a set speed, decelerate to maintain a selected distance from a slower vehicle traveling in front of you, and accelerate back up to the selected speed if the vehicle in front of you changes lanes or speeds up.

To set, cancel and resume a speed Refer to “Functions” in the *Cruise Control* section at left, and your *Owner’s Manual* for more details.

NOTE: Once vehicle speed is set, pushing lever up toward “+ RES” will increase speed to the nearest 5 mph, and then in 5 mph increments. Pushing lever down toward “- SET” will reduce speed in the same way.

Changing vehicle-to-vehicle distance

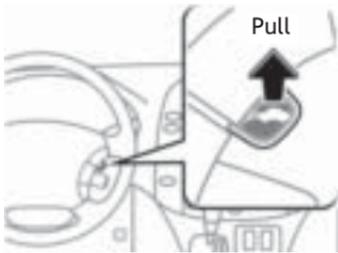


LONG

MIDDLE


SHORT

Light control-Instrument panel

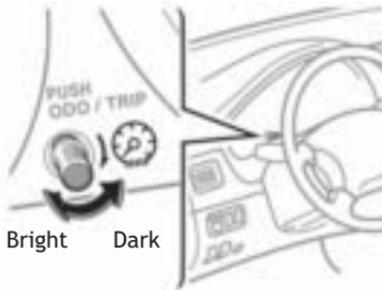

Audio

Type 1

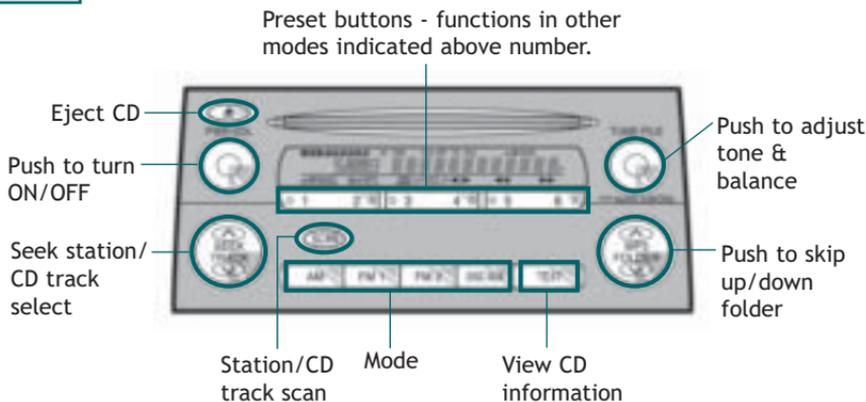

Type 2 additional functions



CD PLAYER

To scan tracks on a disc Push “SCAN.” Push again to hold selection.

CD Changer (Type 2 only)

-**To load one disc** Push “LOAD” and insert one disc.

-**To load multiple discs** Push and hold “LOAD” until you hear a beep. Insert one disc. Shutter will close and then re-open for next disc.

To select a file (MP3/WMA only) Turn “TUNE·FILE.”


To select a folder (MP3/WMA only) Push either side of “MP3/FOLDER.”

RADIO

To preset stations Tune in the desired station and hold down a preset button (1-6) until you hear a beep. Push desired preset button (1-6) to select.

To scan stations Push “SCAN.” Push and hold to scan preset stations. Push again to hold selection.

Steering wheel switches (if equipped)

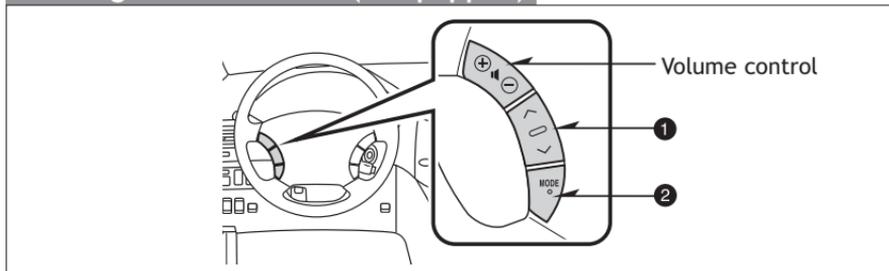

① “ \wedge \vee ”


-In **radio mode** Push to select a preset station; push and hold to seek the next strong station.

-In **CD mode** Push to skip up or down to next/previous track.

② “MODE”


Push to turn audio ON and select an audio mode. Push and hold to turn the audio system OFF.

AUX adapter

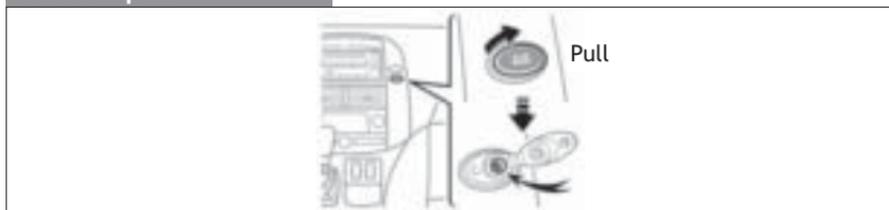

By inserting a mini plug into the AUX audio jack, you can listen to music from a portable audio device through the vehicle's speaker system.

Telephone controls (Bluetooth®) (if equipped)

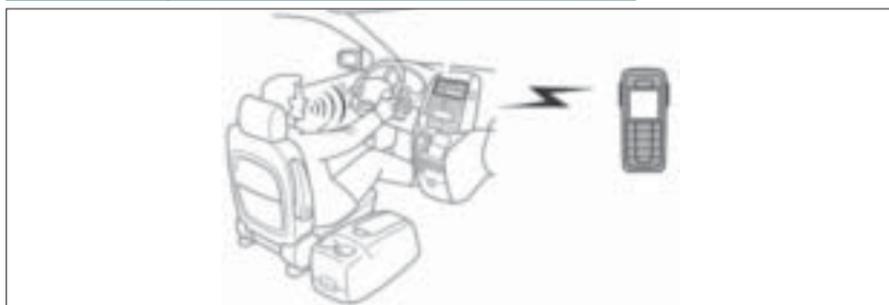


Bluetooth® technology allows dialing or receipt of calls without taking hands from the steering wheel or using a cable to connect the telephone and the system.

Refer to “Using the hands-free phone system (for cellular phone),” Section 3-4 in the *Owner's Manual* for more details.


Air Conditioning/Heating

Front manual Air Conditioning

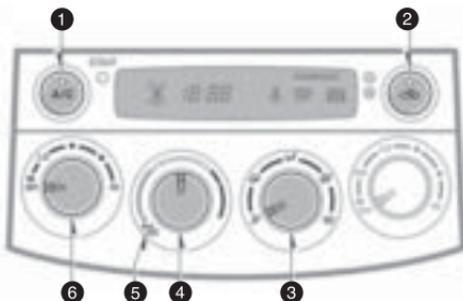


- ① Air Conditioning ON/OFF
Use fresh air to quickly cool interior, then change to recirculate for cooler air.
- ② Fresh or recirculated cabin air
- ③ Airflow vent
In “” or “” mode, use fresh air (“” indicator OFF) to reduce window fogging.
- ④ Temperature
- ⑤ Use for quick cooling. MAX A/C changes air intake to recirculate. It is not possible to change intake to fresh.
- ⑥ Fan speed

Rear manual Air Conditioning

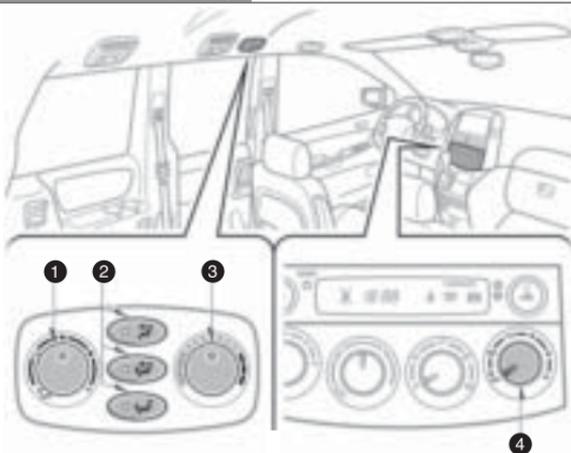


- ① Fan speed (rear)
- ② Airflow vent
- ③ Temperature
- ④ Fan speed (front)

Front automatic Air Conditioning

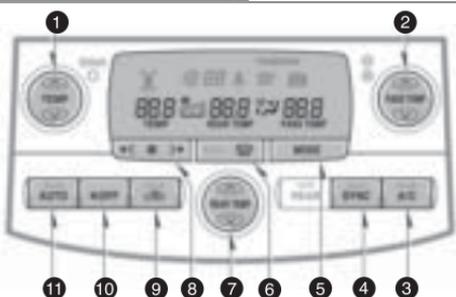


- 1 Temperature (driver side)
- 2 Temperature (front passenger side)
- 3 Air Conditioning ON/OFF
- 4 Synchronizes front and rear temperature settings
- 5 Airflow vent
In “” or “” mode, use fresh air (“” indicator OFF) to reduce window fogging.
- 6 Windshield airflow/defogger
- 7 Temperature (rear passenger side)
- 8 Fan speed
- 9 Fresh or recirculated cabin air
- 10 Climate control OFF
- 11 Automatic climate control ON/OFF

Rear automatic Air Conditioning

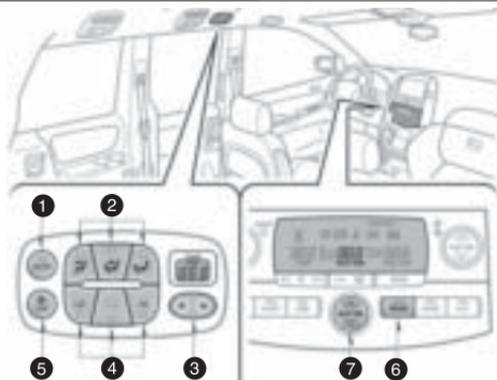


- 1 Automatic climate control ON/OFF
- 2 Airflow vent
- 3 Temperature selector (rear)
- 4 Fan speed
- 5 Climate control OFF
- 6 ON/OFF switch
- 7 Temperature selector (front)

Rear seat entertainment system (if equipped)

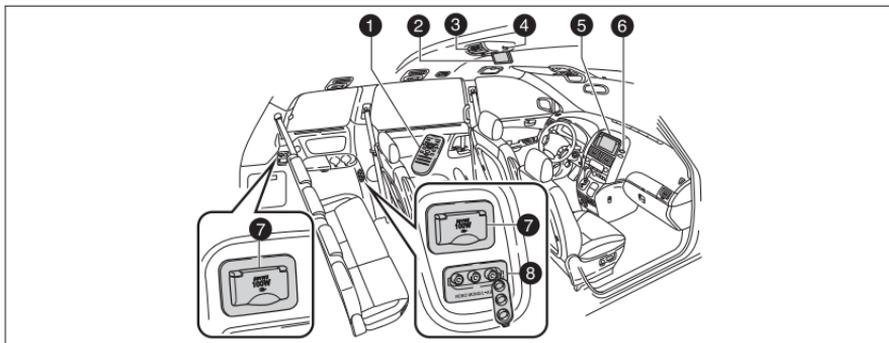

- ① Remote control
- ② DVD screen
- ③ DVD player
- ④ Headphone jacks and headphone volume control
- ⑤ Front audio
- ⑥ 115V AC Power outlet ON/OFF switch
- ⑦ 115V AC Power outlets
- ⑧ AV input adapter

Multi-information display (HomeLink®)* (if equipped)

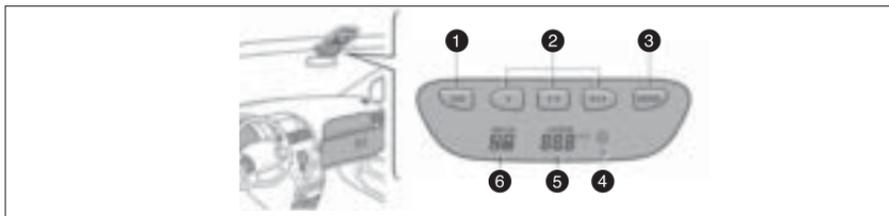

- ① Select standard or metric
- ② **Garage door opener buttons** Garage door openers manufactured under license from HomeLink®* can be programmed to operate garage doors, estate gates, security lighting, etc.

Refer to “Garage door openers,” Section 3-7 in the *Owner’s Manual* for more details.

For programming assistance, contact the Toyota Customer Experience Center at 1-800-331-4331, or visit <http://www.homelink.com>.

- ③ Change display information
- ④ Garage door opener indicator
- ⑤ Information display
- ⑥ Compass

* HomeLink® is a registered trademark of Johnson Controls, Inc.

Power outlets-12V DC

Instrument panel




Luggage compartment



Power outlets-115V AC (if equipped)


ON/OFF switch

Instrument panel

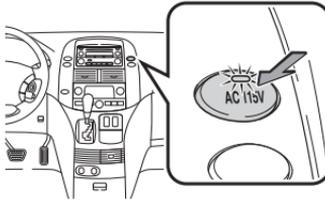


Power outlets

Beside third row seat

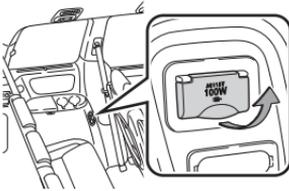


Luggage compartment

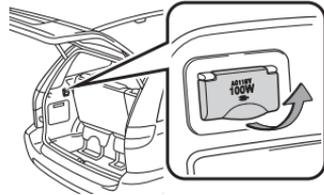

Designed for car accessories. Engine switch must be in the “ACC” or “ON” position to be used.

Bottle holders

Front doors

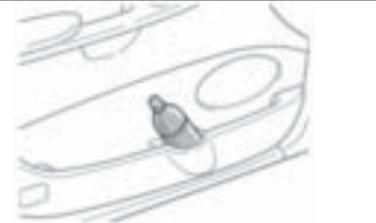


Sliding doors



Note: Do not place open containers in the sliding door bottle holders.

Cup holders

Instrument panel

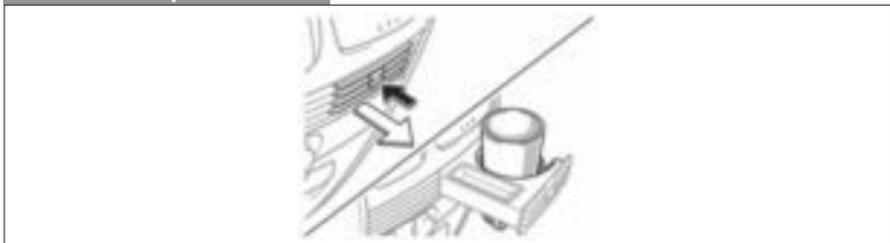


Front side table



Third row area




Console box

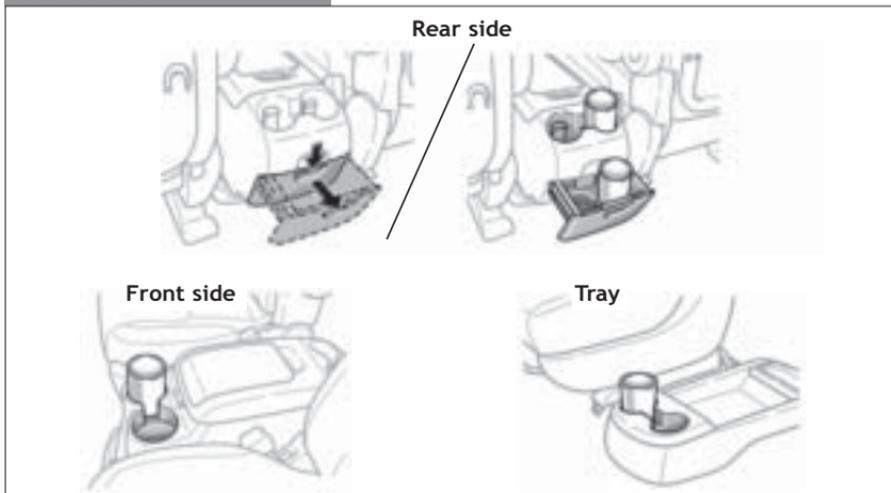


SAFETY AND EMERGENCY FEATURES

Door locks

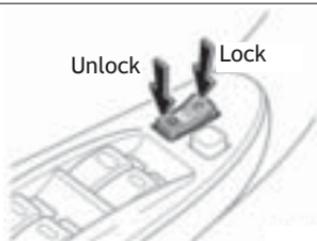


Doors-Child safety locks

Rear door

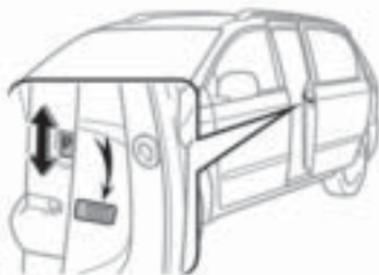

Moving the lever to “LOCK” will allow the door to be opened only from the outside.


Seat belts-Shoulder belt anchor

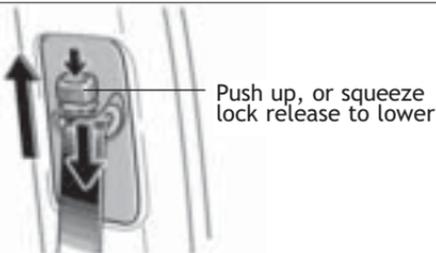

Seat belt comfort guide




Seat belts

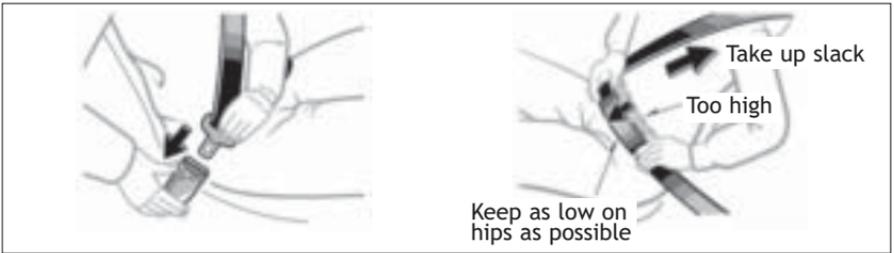

If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.

Tire Pressure Monitoring (warning) System

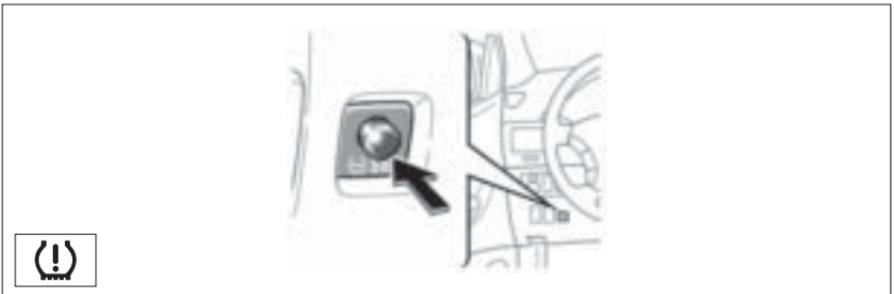

After adjusting tire pressures, or after tires have been rotated or replaced, turn the ignition switch to “ON” and press and hold the “ SET” button until indicator blinks three times. Let the vehicle sit for a few minutes to allow initialization to complete.

Refer to the load label on the door jamb or the *Owner's Manual* for tire inflation specifications.

If the tire pressure indicator flashes for more than 60 seconds and then remains on, take the vehicle to your local Toyota dealer.

Note: The warning light may come on due to temperature changes or changes in tire pressure from natural air leakage. If the system has not been initialized recently, setting the tire pressures to factory specifications should turn off the light.