

Contents

The Quick Guide is not intended as a substitute for your *OWNER'S MANUAL*. We strongly encourage you to review the *OWNER'S MANUAL* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

AHB (Automatic High Beam)	35
Audio System *	
Audio control screen	59
Selecting an audio source	59
Steering switch operation	60
Radio	61
CD	62
DVD	63
iPod/iPhone	64
Brake Hold	29
Center Display	46
Door Locks	92
Driving Mode Select Switch	41
Energy Monitor/Consumption Screen	49
EV Drive Mode	22
Floor Mat Installation	11
Fog Light Switch	37
Front Automatic Air Conditioning System *	
Air conditioning controls	66
Air conditioning control screen	68
Using automatic mode	70
Fuel Tank Cap	98
Garage Door Opener	83
Hands-free System For Cellular Phone *	
Registering/connecting a Bluetooth® device	55
Contacts transfer	56
Registering the contacts in the favorites list	57
Calling by favorites list	57
Calling the message sender	57
Receiving a call	58
Steering switches	58
Headlight Switch	34

 
*: This feature may be operated by Voice command (See P.73)

Head-up Display	32
Hybrid System.....	12
Hybrid Transmission	23
Keys	16
Lexus Climate Concierge.....	65
Lexus Enform Remote	89
Lexus Enform Safety Connect.....	87
Lexus Enform Service Connect.....	90
Moon Roof.....	95
Multi-information Display	30
Navigation System *	
Registering home.....	52
Destination search.....	52
Panoramic Moon Roof	96
Parking Brake	27
Power (Ignition) Switch	19
Power Back Door.....	99
Power Windows.....	94
Rear Automatic Air Conditioning System.....	71
Rear air conditioning control operation.....	71
Using automatic mode.....	72
Rear Window Wiper and Washer.....	40
Remote Touch.....	45
SiriusXM Satellite Radio	91
Smart Access System with Push-button Start.....	18
Turn Signal Lever.....	26
USB/AUX Ports.....	82
Voice Command System *	
Basic operation	73
Command list.....	75
Windshield Wipers and Washer	38

*: This feature may be operated by Voice command (See P.73)

Pictorial Index

■ Instrument panel

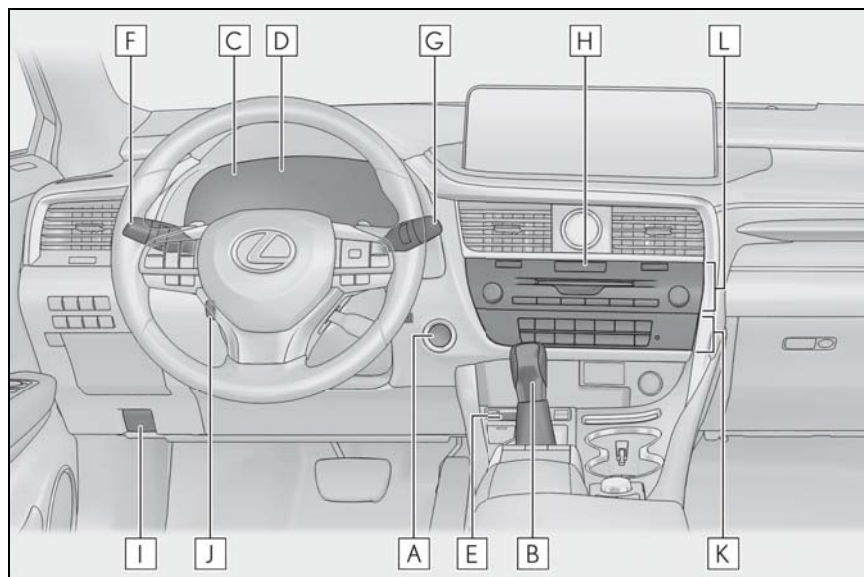

- A Power switch**..... P.19
 - Starting the hybrid system/changing the modes P.19
 - Emergency stop of the hybrid system P.21
 - When the hybrid system will not start.....P.109
 - Warning messages ^{*1}
- B Shift lever** P.23
 - Changing the shift position.....P.23
 - Precautions for towing ^{*1}
 - When the shift lever does not move ^{*1}
- C Meters** ^{*1}
 - Reading the meters/adjusting the instrument panel light ^{*1}
 - Warning lights/indicator lightsP.103
 - When a warning light turns on ^{*1}
- D Multi-information display** P.30
 - Display..... P.30
 - Energy monitor.....P.49
 - When the warning messages are displayed ^{*1}


E	Parking brake switch	P.27
	Applying/releasing.....	P.27
	Precautions for winter season ^{*1}	
	Warning buzzer/messages ^{*1}	
F	Turn signal lever	P.26
	Headlight switch	P.34
	Headlights/side marker lights/parking lights/tail lights/ license plate lights/daytime running lights	P.34
	Fog lights ^{*2}	P.37
G	Windshield wiper and washer switch	P.38, 40
	Usage	P.38, 40
	Adding washer fluid ^{*1}	
	Warning messages ^{*1}	
H	Emergency flasher switch ^{*1}	
I	Hood lock release lever ^{*1}	
J	Tilt and telescopic steering control switch ^{*1}	
	Adjustment ^{*1}	
	Driving position memory ^{*1, 2}	
K	Air conditioning system	P.66
	Usage	P.66
	Rear window defogger	P.66
L	Audio system ^{*3}	

^{*1}: Refer to the "Owner's Manual".

^{*2}: If equipped

^{*3}: Refer to "NAVIGATION AND MULTIMEDIA SYSTEM OWNER'S MANUAL".

 ■ Switches

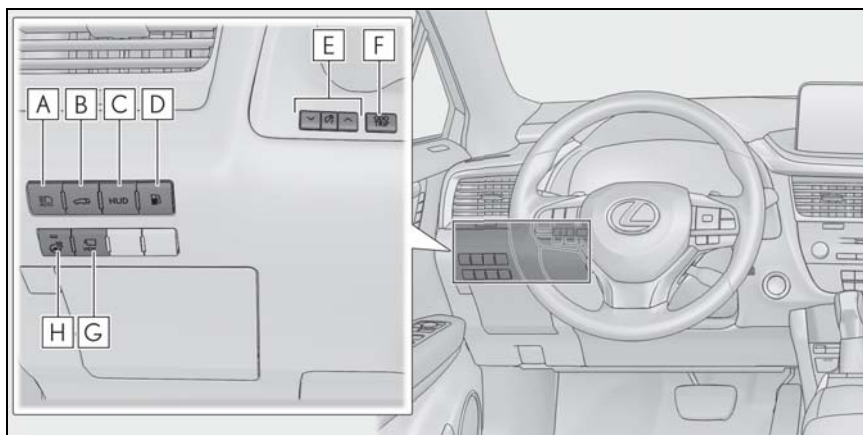


- A** Automatic High Beam switch P.35
- B** Power back door switch P.99
- C** HUD (Head-up display) switch ^{*1} P.33
- D** Fuel filler door opener switch P.98
- E** Instrument panel light control switches ^{*2}
- F** "ODO TRIP" switch ^{*2}
- G** Camera switch ^{*1,3}
- H** Heated steering wheel switch ^{*1,2}

^{*1}: If equipped

^{*2}: Refer to the "Owner's Manual".

 ^{*3}: Refer to "NAVIGATION AND MULTIMEDIA SYSTEM OWNER'S MANUAL".

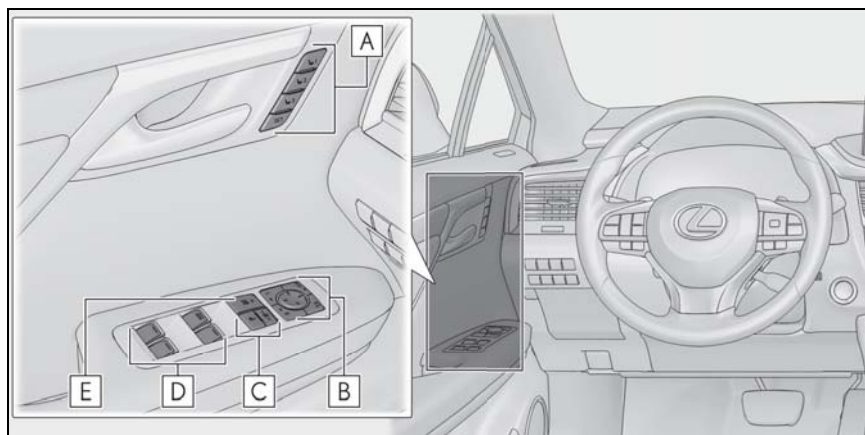

A Driving position memory switches *1,2

B Outside rear view mirror switches *2

 
C Door lock switches..... P.92

D Power window switches..... P.94

E Window lock switch P.94


*1: If equipped

*2: Refer to the "Owner's Manual".

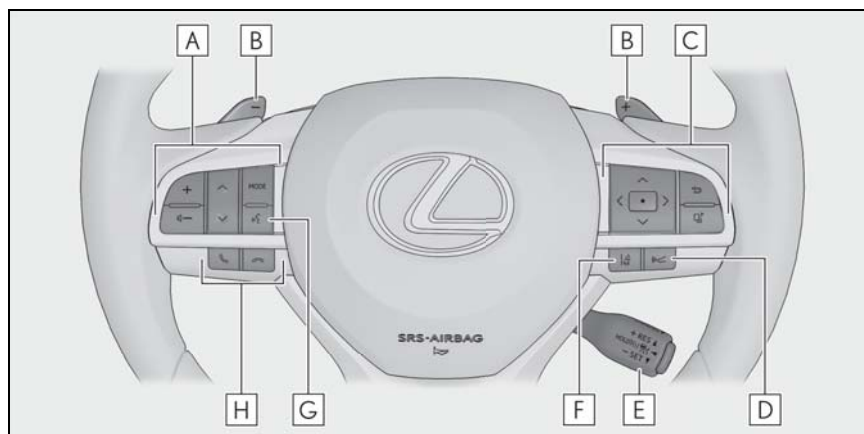

- A** Audio remote control switches P.60
- B** Paddle shift switches *
- C** Meter control switches P.31
- D** Vehicle-to-vehicle distance switch *
- E** Cruise control switch *
- F** LTA (Lane Tracing Assist) switch *
- G** Talk switch P.60
- H** Phone switch P.60

 *: Refer to the "Owner's Manual".

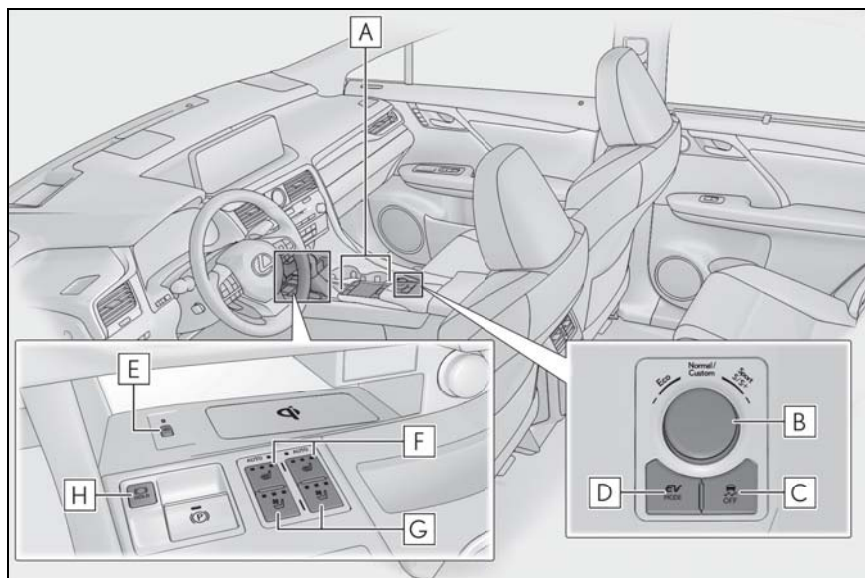


- A** Remote Touch P.45
- B** Driving mode select switch P.41
- C** VSC OFF switch *¹
- D** EV drive mode switch P.22
- E** Wireless charger switch *^{1, 2}
- F** Front seat heater switches *^{1, 2}
- G** Seat ventilator switches *^{1, 2}
- H** Brake hold switch P.29

*¹: Refer to the "Owner's Manual".

*²: If equipped

 ■ Interior

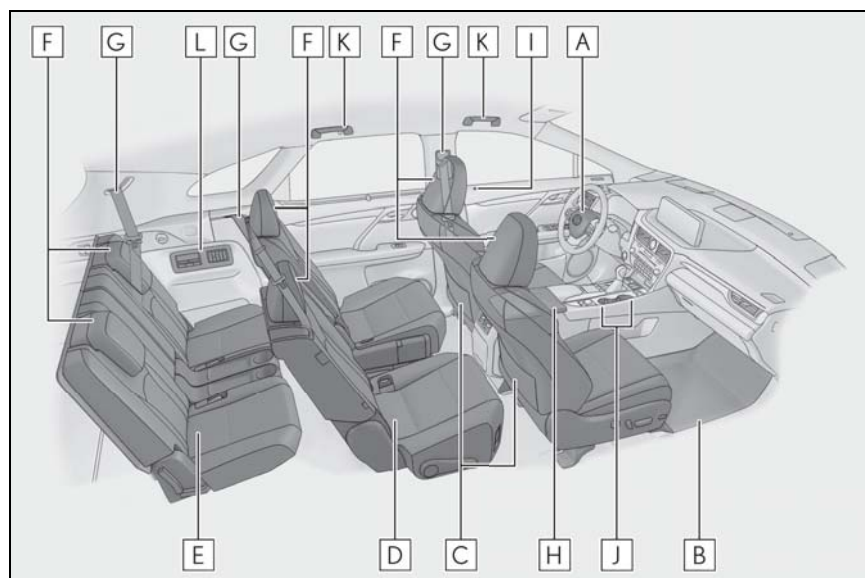


- A** SRS airbags^{*1}
- B** Floor mats P.11
- C** Front seats^{*1}
- D** Second-row seats^{*1}
- E** Third-row seats^{*1,2}
- F** Head restraints^{*1}
- G** Seat belts^{*1}
- H** Console box^{*1}
- I** Inside lock buttons P.92
- J** Cup holders^{*1}
- K** Assist grips^{*1}
- L** Rear automatic air conditioning system^{*2} P.71

^{*1}: Refer to the "Owner's Manual".

^{*2}: If equipped

 ■ Ceiling

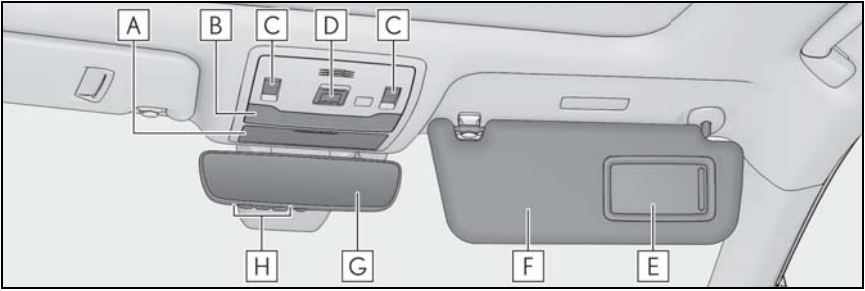

A Auxiliary box*¹

B Interior light*¹
Personal lights*¹

C Moon roof switches*² P.95
Panoramic moon roof switches*² P.96

D “SOS” button*^{1,2}

E Vanity mirrors*¹

F Sun visors*¹

G Inside rear view mirror*¹

 
H Garage door opener switches P.83

*¹: Refer to the “Owner’s Manual”.


*²: If equipped

Floor Mat Installation

Use only floor mats designed specifically for vehicles of the same model and model year as your vehicle. Fix them securely in place onto the carpet.

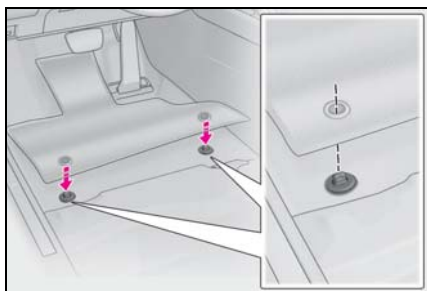

 - 1 Insert the retaining hooks (clips) into the floor mat eyelets.

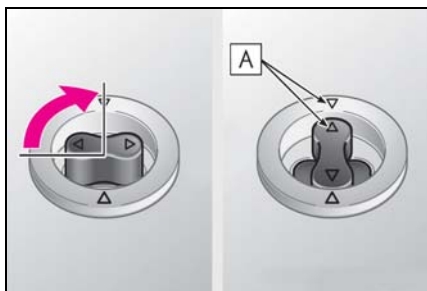

- 2 Turn the upper knob of each retaining hook (clip) to secure the floor mats in place.

Always align the $\triangle$ marks **A**.

The shape of the retaining hooks (clips) may differ from that shown in the illustration.

Hybrid System

 
Your vehicle is a hybrid vehicle. It has characteristics different from conventional vehicles. Be sure you are closely familiar with the characteristics of your vehicle, and operate it with care.

The hybrid system combines the use of a gasoline engine and an electric motor (traction motor) according to driving conditions, improving fuel efficiency and reducing exhaust emissions.

For details, refer to the "OWNER'S MANUAL".

Hybrid System Indicator

► Except F SPORT models

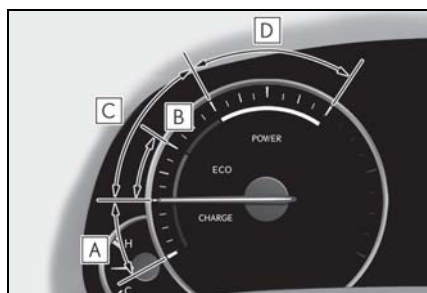

A Charge area

Shows regenerative charging.

B Hybrid Eco area

Shows that gasoline engine power is not being used very often.

The gasoline engine will automatically stop and restart under various conditions.

C Eco area

 
Shows that the vehicle is being driven in an Eco-friendly manner.

D Power area

Shows that an Eco-friendly driving range is being exceeded (during full power driving etc.)

- Depending on the selected driving mode, the Hybrid System Indicator or tachometer will be displayed. The Hybrid System Indicator or tachometer can be set to always be displayed on  of the multi-information display.

► F SPORT models

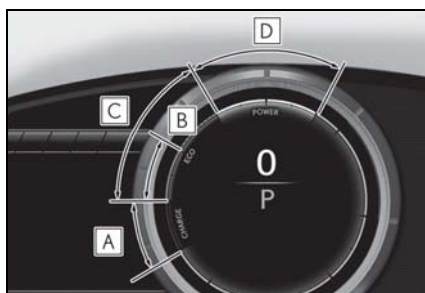

- The Hybrid System Indicator is displayed in the following situations:
 - When the tachometer setting is set to change according to the driving mode and a driving mode other than sport mode is selected
 - When the tachometer setting is set to always display the Hybrid System Indicator
 - By keeping the indicator needle (except F SPORT models) or bar display (F SPORT models) within the Eco area, more Eco-friendly driving can be achieved.
 - Charge area indicates regeneration* status. Regenerated energy will be used to charge the hybrid battery (traction battery).
- *: When used in this manual, regeneration refers to the conversion of energy created by the movement of the vehicle into electrical energy.

Acoustic Vehicle Alerting System

When driving with the gasoline engine stopped, a sound, which changes in accordance with the driving speed, will be played in order to warn people nearby of the vehicle's approach. This sound may be heard inside the vehicle. The sound will stop when the vehicle speed exceeds approximately 22 mph (35 km/h).

Hybrid battery (traction battery) charge

If the shift lever is in N, the hybrid battery (traction battery) will not be charged even when the engine is running. Therefore, if the vehicle is left with the shift lever in N for a long period of time, the hybrid battery (traction battery) will discharge, and this may result in the vehicle not being able to start.

Regenerative braking

In the following situations, kinetic energy is converted to electric energy and deceleration force can be obtained in conjunction with the recharging of the hybrid battery (traction battery).

- The accelerator pedal is released while driving with the shift lever in D or S.
- The brake pedal is depressed while driving with the shift lever in D or S.

Sounds and vibrations specific to a hybrid vehicle

There may be no engine sound or vibration even though the vehicle is able to move with the "READY" indicator is illuminated. For safety, apply the parking brake and make sure to shift the shift lever to P when parked.

The following sounds or vibrations may occur when the hybrid system is operating and are not a malfunction:

 
- Motor sounds may be heard from the engine compartment.
- Sounds may be heard from the hybrid battery (traction battery) behind the rear seats when the hybrid system starts or stops.
- Relay operating sounds such as a snap or soft clank will be emitted from the hybrid battery (traction battery), behind the rear seats, when the hybrid system is started or stopped.
- Sounds from the hybrid system may be heard when the back door is open.
- Sounds may be heard from the transmission when the gasoline engine starts or stops, when driving at low speeds, or during idling.
- Engine sounds may be heard when accelerating sharply.
- Sounds may be heard due to regenerative braking when the brake pedal is depressed or as the accelerator pedal is released.
- Vibration may be felt when the gasoline engine starts or stops.
- Cooling fan sounds may be heard from the air intake vents under the rear seats.

Running out of fuel

When the vehicle has run out of fuel and the hybrid system cannot be started, refuel the vehicle with at least enough gasoline to make the low fuel level warning light go off. If there is only a small amount of fuel, the hybrid system may not be able to start. (The standard amount of fuel is about 2.9 gal. [11.0 L, 2.4 Imp. gal.], when the vehicle is on a level surface. This value may vary when the vehicle is on a slope. Add extra fuel when the vehicle is inclined.)

Hybrid warning message


A message is automatically displayed when a malfunction occurs in the hybrid system or an improper operation is attempted.

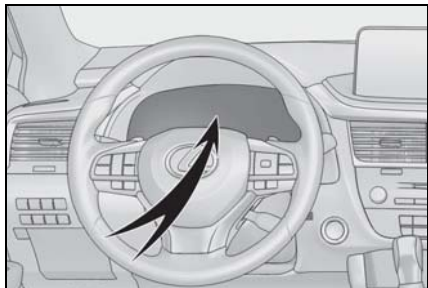

If a warning message is shown on the multi-information display, read the message and follow the instructions.


Keys

 The keys

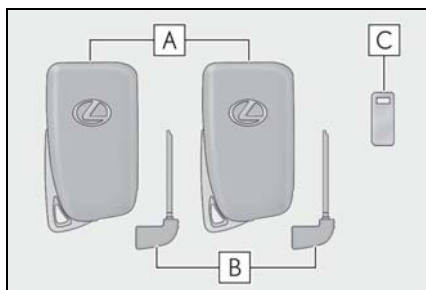

- A** Electronic keys
 - Operating the smart access system with push-button start (→P.18)
 - Operating the wireless remote control function
- B** Mechanical keys
- C** Key number plate

 Wireless remote control

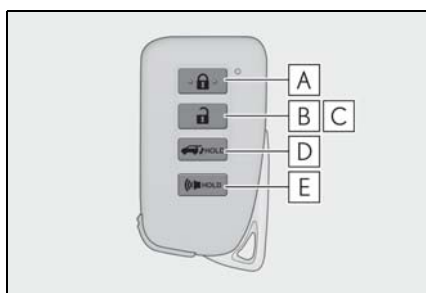


- A** Locks all the doors
- B** Unlocks all the doors
- C** Opens the windows^{*2} and the moon roof^{*1,2} or panoramic moon roof^{*1,2}
- D** Opens and closes the power back door
- E** Sounds the alarm

^{*1}: If equipped

^{*2}: These settings must be customized at your Lexus dealer.

 Mechanical key

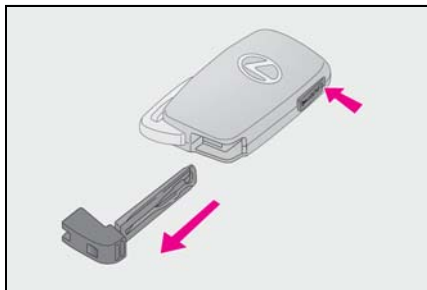

To take out the mechanical key, push the release button and take the key out.

The mechanical key can only be inserted in one direction, as the key only has grooves on one side. If the key cannot be inserted in a lock cylinder, turn it over and re-attempt to insert it.

 
After using the mechanical key, store it in the electronic key. Carry the mechanical key together with the electronic key. If the electronic key battery is depleted or the entry function does not operate properly, you will need the mechanical key.

Smart Access System with Push-button Start

The following operations can be performed simply by carrying the electronic key on your person, for example in your pocket. The driver should always carry the electronic key.

For details on starting the hybrid system, see page 19.

Unlocking and locking the doors from the outside

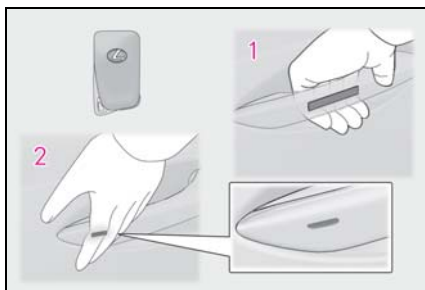

- 1 Grip the driver's door handle to unlock the door. Grip any passenger door handle to unlock all the doors.*

Make sure to touch the sensor on the back of the handle.

 
The doors cannot be unlocked for 3 seconds after the doors are locked.

*: The door unlock settings can be changed.

- 2 Touch the lock sensor (indentation on the surface of the door handle) to lock all the doors.

Check that the door is securely locked.

Unlocking and locking the power back door from the outside

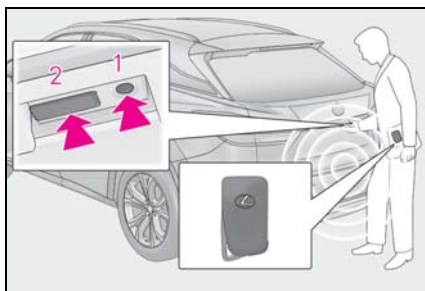

- 1 Locks all the doors
Check that the door is securely locked.

- 2 Unlocks all the doors
The doors cannot be unlocked for 3 seconds after the doors are locked.

For details on what to do when the electronic key does not operate properly, see page 107.

Power (Ignition) Switch

Performing the following operations when carrying the electronic key on your person starts the hybrid system or changes power switch modes.

Starting the hybrid system

- 1 Check that the parking brake is set.
- 2 Check that the shift lever is in P.
- 3 Firmly depress the brake pedal.



and a message will be displayed on the multi-information display.

If it is not displayed, the hybrid system cannot be started.



- 4 Press the power switch shortly and firmly.

When operating the power switch, one short, firm press is enough. It is not necessary to press and hold the switch.

If the “READY” indicator turns on, the hybrid system will operate normally.

Continue depressing the brake pedal until the “READY” indicator is illuminated.

The hybrid system can be started from any power switch mode.

- 5 Check that the “READY” indicator is illuminated.

 
The vehicle will not move when the “READY” indicator is off.

Stopping the hybrid system

- 1 Stop the vehicle completely.
- 2 Set the parking brake, and shift the shift lever to P.
- 3 Press the power switch.
- 4 Release the brake pedal and check that the display on the meters is off.

Changing power switch modes

Modes can be changed by pressing the power switch with brake pedal released. (The mode changes each time the switch is pressed.)

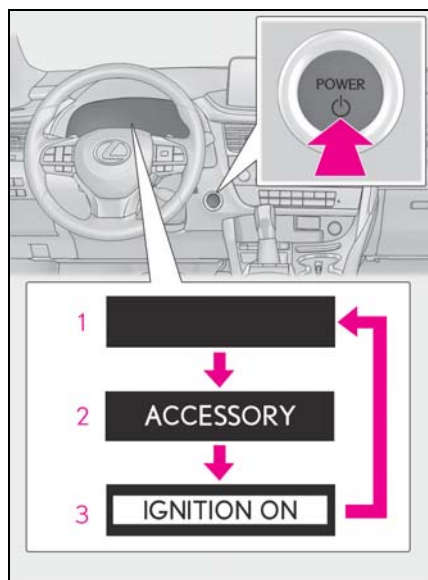


- 1 Off*
The emergency flashers can be used.
- 2 ACCESSORY mode
Some electrical components such as the audio system can be used.
"ACCESSORY" will be displayed on the meters.
- 3 ON mode
All electrical components can be used.
"IGNITION ON" will be displayed on the meters.

*: If the shift lever is in a position other than P when turning off the hybrid system, the power switch will be turned to ACCESSORY mode, not to off.

If your vehicle has to be stopped in an emergency

Only in an emergency, such as if it becomes impossible to stop the vehicle in the normal way, stop the vehicle using the following procedure:

 - 1** Steadily step on the brake pedal with both feet and firmly depress it.
Do not pump the brake pedal repeatedly as this will increase the effort required to slow the vehicle.
- 2** Shift the shift lever to N.
- ▶ **If the shift lever is shifted to N**
- 3** After slowing down, stop the vehicle in a safe place by the road.
- 4** Stop the hybrid system.
- ▶ **If the shift lever cannot be shifted to N**
- 3** Keep depressing the brake pedal with both feet to reduce vehicle speed as much as possible.

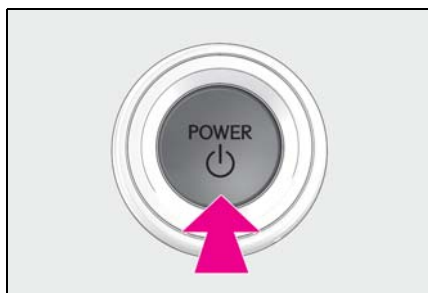


- 4** To stop the hybrid system, press and hold the power switch for 2 consecutive seconds or more, or press it briefly 3 times or more in succession.

- 5** Stop the vehicle in a safe place by the road.

EV Drive Mode

 In EV drive mode, electric power is supplied by the hybrid battery (traction battery), and only the electric motor (traction motor) is used to drive the vehicle.

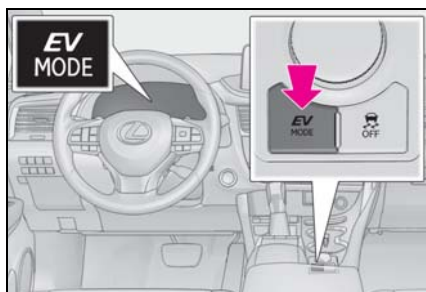


Turns EV drive mode on/off

When EV drive mode is turned on, the EV drive mode indicator will come on. Pressing the switch when in EV drive mode will return the vehicle to normal driving (using the gasoline engine and electric motor [traction motor]).

Hybrid Transmission

 Shifting the shift lever

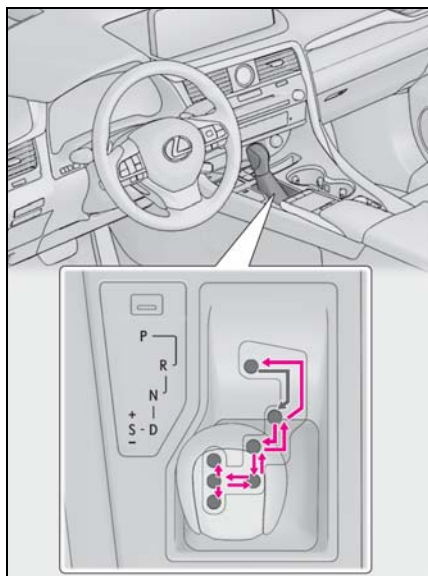

← While the power switch is in ON mode, move the shift lever with the brake pedal depressed.

When shifting the shift lever between P and D, make sure that the vehicle is completely stopped.

Shift position purpose and functions

Shift position	Objective or function
P	Parking the vehicle/starting the hybrid system
R	Reversing
N	Neutral
D	Normal driving ^{*1}
S	S mode driving ^{*2}

^{*1}: To improve fuel efficiency and reduce noise, shift the shift lever to D for normal driving.

^{*2}: By selecting shift ranges using S mode, you can control accelerating force and engine braking force.

 
Selecting the driving mode

■ Driving mode

→P.41

Selecting shift ranges in the D position

To drive using temporary shift range selection, operate the “-” paddle shift switch. Changing the shift range enables the level of engine braking force to be selected. The shift range can then be selected by operating the “-” and “+” paddle shift switches.

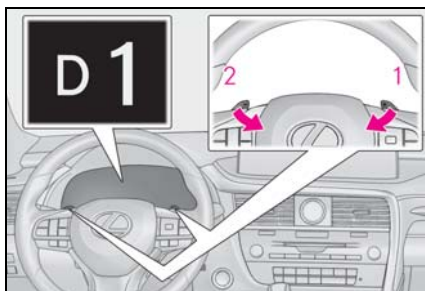

1 Upshifting

2 Downshifting

The selected shift range, from D1 to D6, will be displayed on the meters.

The initial shift range when the “-” paddle shift switch is operated is automatically set to D4 or D5 according to the vehicle speed.

 
To return to normal D position driving, the “+” paddle shift switch must be held down for a period of time.

■ Shift ranges and their functions

- You can choose from 6 levels of engine braking force.
- A lower shift range will provide greater engine braking force than a higher shift range, and the engine revolutions will also increase.

Selecting shift ranges in the S position

To enter S mode, shift the shift lever to S. Shift ranges can be selected by operating the shift lever or paddle shift switches, allowing you to drive in the shift range of your choice. The shift range can be selected by operating the shift lever or the “-” and “+” paddle shift switches.

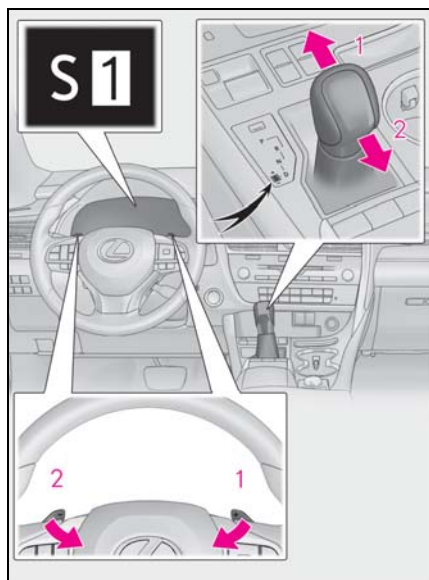

1 Upshifting

2 Downshifting

 
The selected shift range, from S1 to S6, will be displayed on the meters.

The initial shift range in S mode is automatically set to S4 or S5 according to the vehicle speed.

■ Shift ranges and their functions

- You can choose from 6 levels of accelerating force and engine braking force.
- A lower shift range will provide greater accelerating force and engine braking force than a higher shift range, and the engine revolutions will also increase.
- If you accelerate while in ranges 1 to 4, the shift range may automatically increase in accordance with the vehicle speed.

Turn Signal Lever

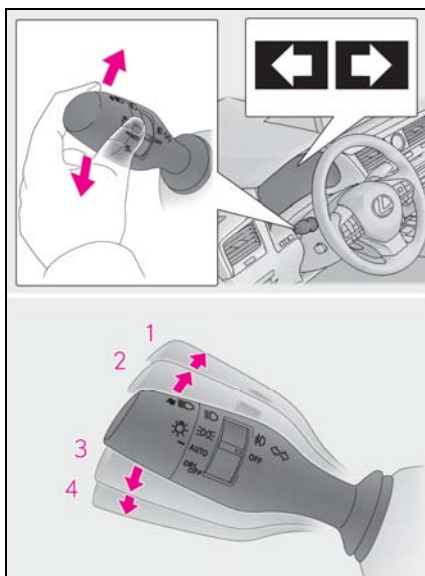


- 1** Right turn
- 2** Lane change to the right (move the lever partway and release it)
The right hand signals will flash 3 times.
- 3** Lane change to the left (move the lever partway and release it)
The left hand signals will flash 3 times.
- 4** Left turn

Parking Brake

The parking brake can be set or released automatically or manually.

Using the manual mode

 The parking brake can be set and released manually.

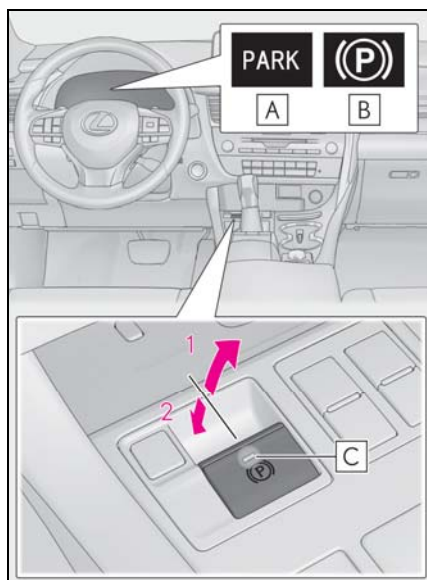

- A** U.S.A.
- B** Canada
- C** Parking brake light

- 1** Pull the parking brake switch to set the parking brake

The parking brake indicator light and parking brake light will turn on.

Pull and hold the parking brake switch if an emergency occurs and it is necessary to operate the parking brake while driving.

- 2** Push the parking brake switch to release the parking brake

 
Operate the switch while depressing the brake pedal or slowly depressing the accelerator pedal.

Make sure that the parking brake indicator light and parking brake light turn off.

If the parking brake indicator light and parking brake light flashes, operate the switch again.

Turns automatic mode on

In automatic mode, the parking brake can be set or released automatically according to the shift lever operation. Also, even in automatic mode, the parking brake can be set or released manually.

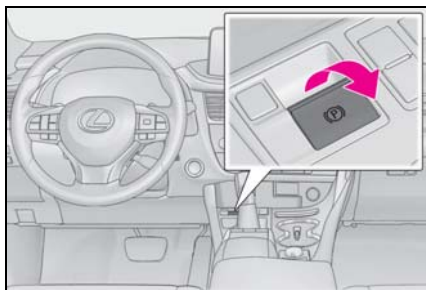


While the vehicle is stopped, pull and hold the parking brake switch until "Automatic Mode On" will be displayed on the multi-information display.

When the automatic mode is turned on, the parking brake operates as follows.

- When the shift lever is moved out of P, the parking brake will be released, and the parking brake indicator light and parking brake light turn off.
- When the shift lever is moved into P, the parking brake will be set, and the parking brake indicator light and parking brake light turn on.

Operate the shift lever with the brake pedal depressed.

 
Turns automatic mode off

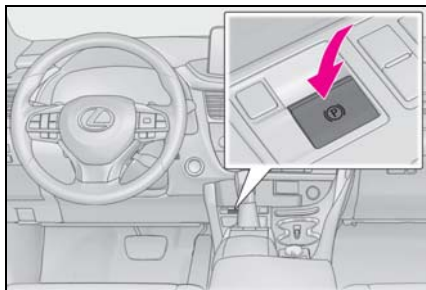

While the vehicle is stopped, press and hold the parking brake switch until "Automatic Mode Off" will be displayed on the multi-information display.

Brake Hold

 The brake hold system keeps the brake applied when the shift lever is in D, S or N with the system on and the brake pedal has been depressed to stop the vehicle. The system releases the brake when the accelerator pedal is depressed with the shift lever in D or S to allow smooth start off.

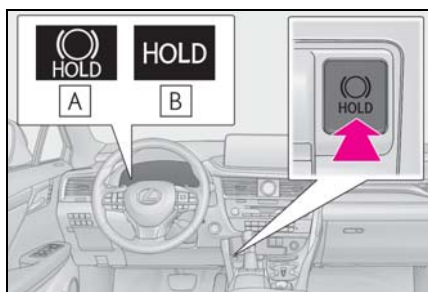

Turns the brake hold system on

The brake hold standby indicator (green)

A comes on. While the system is holding the brake, the brake hold operated indicator (yellow) **B** comes on.

Multi-information Display


Display and menu icons

■ Display


By selecting menu icons on the multi-information display, a variety of driving-related information can be displayed. The multi-information display can also be used to change display settings and other vehicle settings.

Warning or suggestion/advice pop-up displays are also displayed in certain situations.

 ► Except F SPORT models

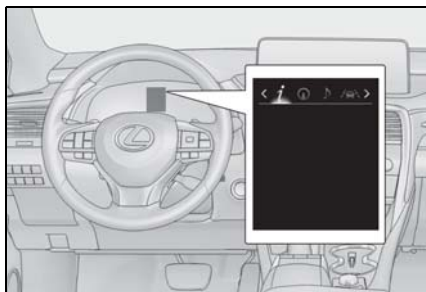

► SPORT models

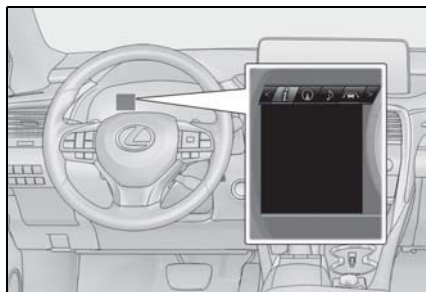 

■ Menu icons



Driving information



Navigation system-linked display (if equipped)



Audio system-linked display



Driving assist system information



 
Warning message display



Settings display

If a problem is detected in any of the vehicle's systems, a warning message is shown on the multi-information display.

Changing the meter display

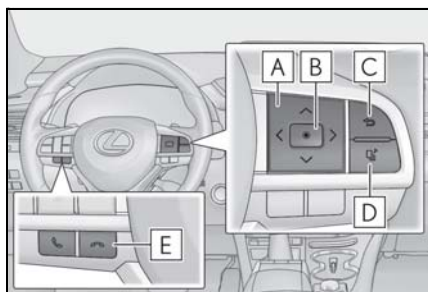


- A** < > : Select menu icons
^ v : Change displayed content, scroll up/down the screen and move the cursor
- B** Press: Enter/Set
Press and hold: Reset
- C** Return to the previous screen
Pressing and holding the switch will display the first screen of the selected menu icon.
- D** Press: Display the top screen
Press and hold: Register current screen as the top screen
- E** Call sending/receiving and history display
Linked with the hands-free system, sending or receiving call is displayed. For details regarding the hands-free system, refer to the "NAVIGATION AND MULTIMEDIA SYSTEM OWNER'S MANUAL".

Head-up Display (if equipped)


The head-up display is linked to the meters and navigation system (if equipped) and projects a variety of information in front of the driver, such as the current vehicle speed and route guidance to a set destination.

 System components

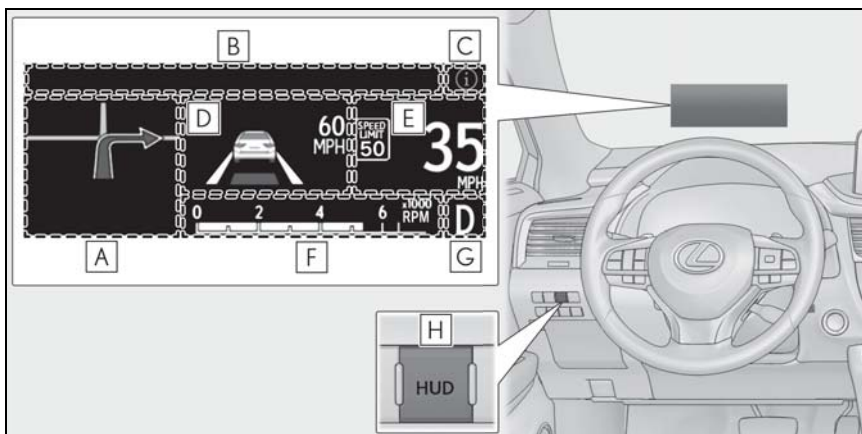

- A** Navigation system-linked display area (if equipped)
- B** Message display area
- C**  /  icon
- D** Driving assist system status display area (if equipped)
- E** Vehicle speed display area
- F** Hybrid System Indicator/Tachometer
- G** Shift position display
- H** HUD (Head-up display) switch

 Using the head-up display

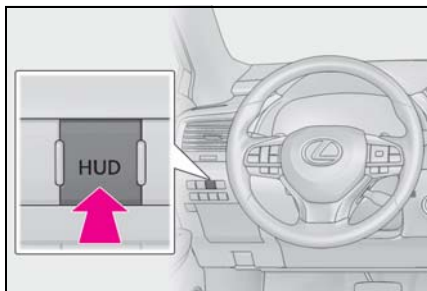


Press the HUD (Head-up display) switch.

The head-up display may seem dark or hard to see when viewed through sunglasses, especially polarized sunglasses.

Adjust the brightness of the head-up display or remove your sunglasses.

 Headlight Switch

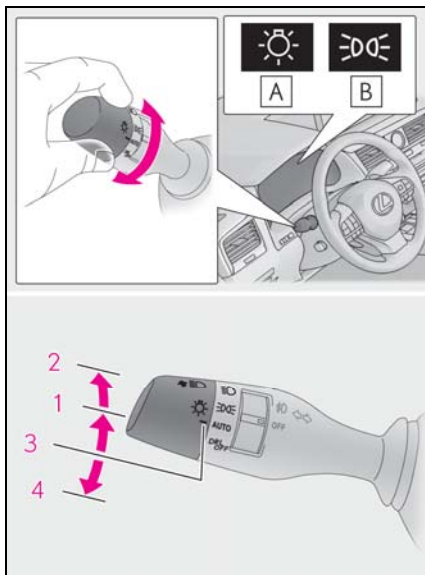


A U.S.A.

B Canada

- 1** The side marker, parking, tail, license plate, instrument panel lights, and daytime running lights turn on.
- 2** The headlights and all lights listed above (except daytime running lights) turn on.
- 3** **AUTO** The headlights, daytime running lights and all the lights listed above turn on and off automatically. (When the power switch is in ON mode.)
- 4** (U.S.A.) Off

 Turning on the high beam headlights




- 1** With the headlights on, push the lever away from you to turn on the high beams.
Pull the lever toward you to the center position to turn the high beams off.
- 2** Pull the lever toward you and release it to flash the high beams once.
You can flash the high beams with the headlights on or off.

AHB (Automatic High Beam)

The Automatic High Beam uses a camera sensor located behind the upper portion of the windshield to assess the brightness of the lights of vehicles ahead, streetlights, etc., and automatically turns the high beams on or off as necessary.

 Activating the Automatic High Beam

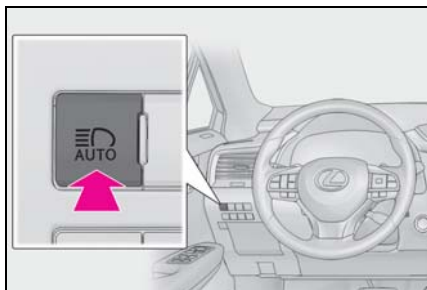

- 1 Press the Automatic High Beam switch.

 


- 2 Turn the headlight switch to the AUTO or  position.

The Automatic High Beam indicator will come on when the system is operating.

Turning the high beams on/off manually

Switching to the high beams

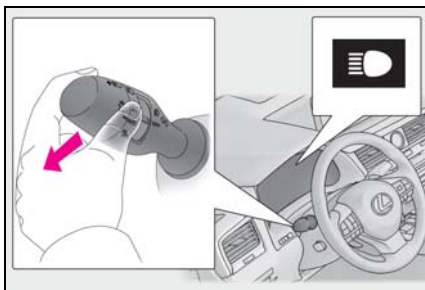


Push the lever away from you.

The Automatic High Beam indicator will turn off and the high beam indicator will turn on.

Pull the lever to its original position to activate the Automatic High Beam system again.

 Switching to the low beams

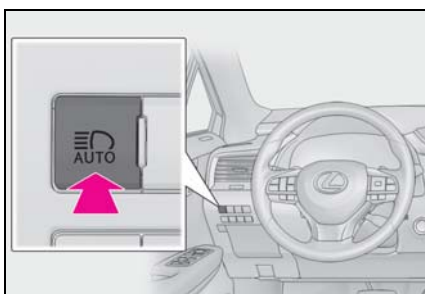


Press the Automatic High Beam switch.

The Automatic High Beam indicator will turn off.

Press the switch to activate the Automatic High Beam system again.

 
Temporarily switching to the low beams

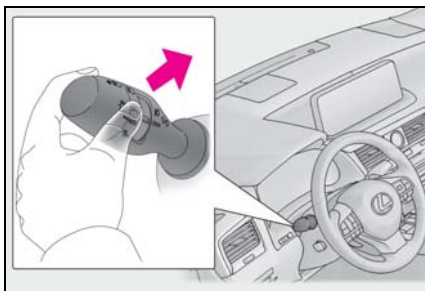

Pull the lever toward you and then return it to its original position.

The high beams are on while the lever is pulled toward you, however, after the lever is returned to its original position, the low beams remain on for a certain amount of time. Afterwards, the Automatic High Beam will be activated again.

 Fog Light Switch (if equipped)

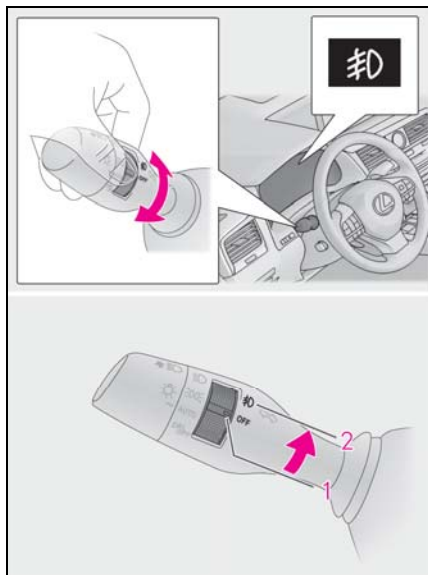




1 OFF (U.S.A.) or ○ (Canada)
Turns the fog lights off

2  Turns the fog lights on


Windshield Wipers and Washer

When "AUTO" is selected, the wipers will operate automatically when the sensor detects falling rain. The system automatically adjusts wiper timing in accordance with rain volume and vehicle speed.

   The sensor sensitivity can be adjusted when "AUTO" is selected.

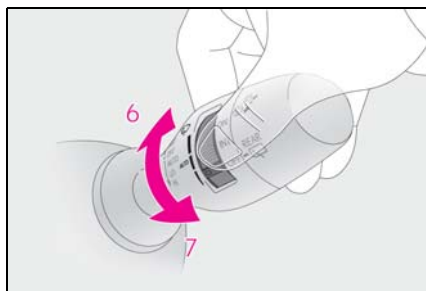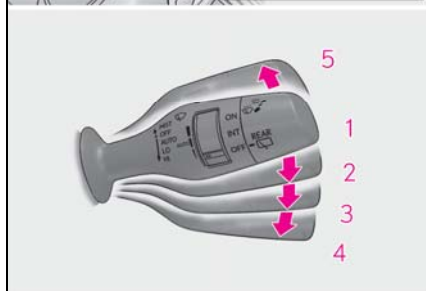

 - 1** OFF (U.S.A.) or ○ (Canada)
Off
- 2** AUTO Rain-sensing wiper operation
- 3** LO (U.S.A.) or ▼ (Canada)
Low speed operation
- 4** HI (U.S.A.) or ▼▼ (Canada)
High speed operation
- 5** MIST (U.S.A.) or △ (Canada)
Temporary operation
- 6** Increases the sensitivity
- 7** Decreases the sensitivity

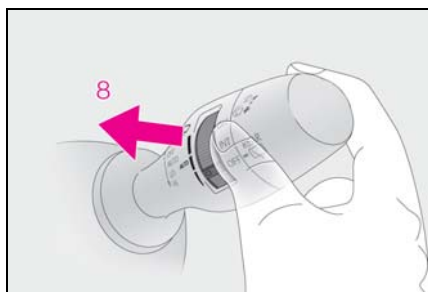

8 Washer/wiper dual operation

 
 
 
Pulling the lever operates the wipers and washer.

The wipers will automatically operate a couple of times after the washer squirts.

Vehicles with headlight cleaners:

When the power switch is in ON mode and the headlights are on, if the lever is pulled, the headlight cleaners will operate once. After this, the headlight cleaners will operate every 5th time the lever is pulled.

Rear Window Wiper and Washer

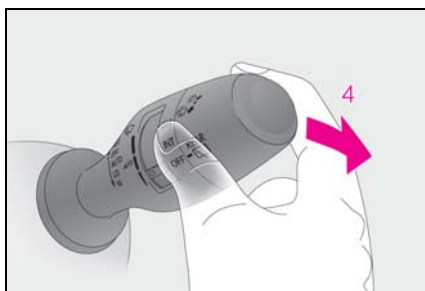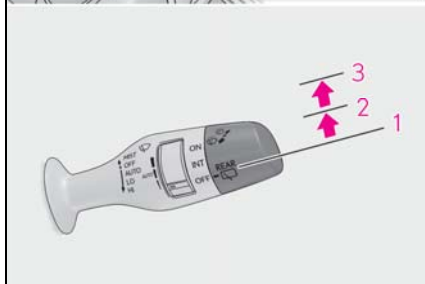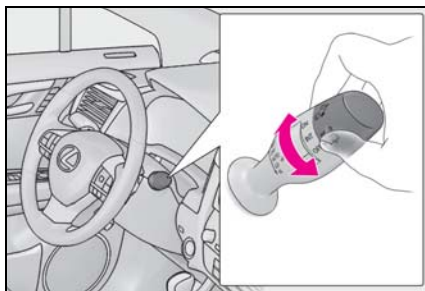

- 1** OFF (U.S.A.) or $\bigcirc$ (Canada) Off
- 2** INT (U.S.A.) or --- (Canada) Intermit-tent operation
- 3** ON (U.S.A.) or — (Canada) Nor-mal operation

4 Washer/wiper dual operation

Pushing the lever operates the wiper and washer.

 
The wiper will automatically operate a couple of times after the washer squirts.

Driving Mode Select Switch

The driving modes can be selected to suit driving conditions.

Selecting a drive mode

► Except F SPORT models

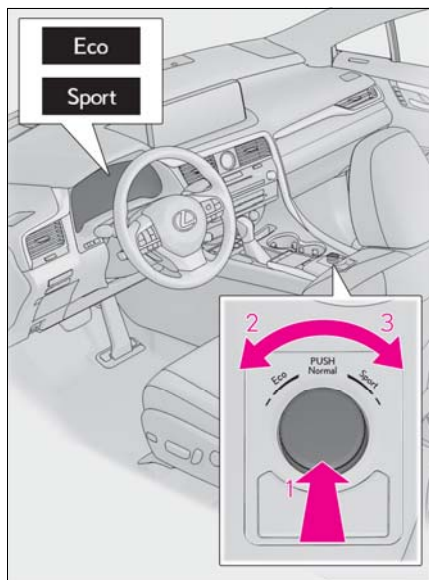

1 Normal mode

Provides an optimal balance of fuel economy, quietness, and dynamic performance. Suitable for city driving.

Press the switch to change the driving mode to normal mode when Eco drive mode or sport mode is selected.

2 Eco drive mode

Helps the driver accelerate in an eco-friendly manner and improve fuel economy through moderate throttle characteristics and by controlling the operation of the air conditioning system (heating/cooling).

When not in Eco drive mode, if the driving mode select switch is turned to the left, the Eco drive mode indicator will come on.

3 Sport mode

Controls the hybrid system to provide quick, powerful acceleration. This mode also changes the steering feel, making it suitable for when agile driving response is desired, such as when driving on roads with many curves.

When not in sport mode, if the driving mode select switch is turned to the right, the "Sport" indicator will come on.

► F SPORT models (vehicles with Adaptive Variable Suspension System)



1 Normal mode/Custom mode

Normal mode and custom mode are selected by pressing the driving mode select switch. Each time the switch is pressed, the driving mode changes between normal mode and custom mode. When custom mode is selected, the “Custom” indicator will be illuminated.

When Eco drive mode or sport mode is selected, pressing the switch changes the driving mode to normal mode.

- Normal mode

Provides an optimal balance of fuel economy, quietness, and dynamic performance. Suitable for city driving.

- Custom mode

Allows you to drive with the following functions set to your preferred settings. Custom mode settings can only be changed on the drive mode customization display of the Center Display.

Function	Setting
Powertrain	Normal
	Power
	Eco
Chassis	Normal
	Sport
Air conditioning system	Normal
	Eco

2 Eco drive mode

Helps the driver accelerate in an eco-friendly manner and improve fuel economy through moderate throttle characteristics and by controlling the operation of the air conditioning system (heating/cooling).

When not in Eco drive mode, if the driving mode select switch is turned to the left, the Eco drive mode indicator will come on.

3 Sport mode

- Sport S mode

Controls the hybrid system to provide quick, powerful acceleration. This mode is suitable for when agile driving response is desired, such as when driving on roads with many curves.

 
When not in Sport S mode, if the driving mode select switch is turned to the right, the "Sport S" indicator will come on.

- Sport S+ mode

Helps to ensure steering performance and driving stability by simultaneously controlling the steering and suspension in addition to the hybrid system. Suitable for sportier driving.

When in Sport S mode, if the driving mode select switch is turned to the right, the "Sport S+" indicator will come on.

► F SPORT models (vehicles without Adaptive Variable Suspension System)

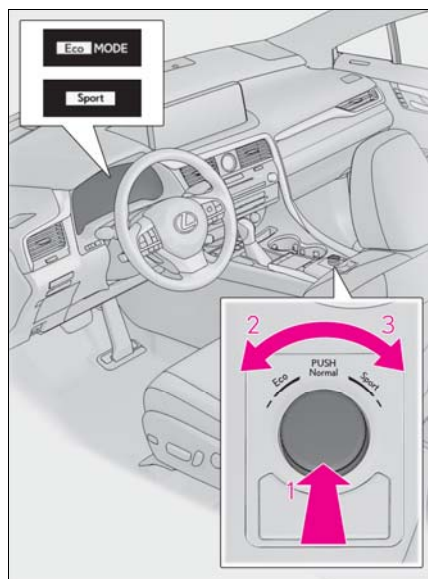

1 Normal mode

Provides an optimal balance of fuel economy, quietness, and dynamic performance. Suitable for city driving.

Press the switch to change the driving mode to normal mode when Eco drive mode or sport mode is selected.

2 Eco drive mode

Helps the driver accelerate in an eco-friendly manner and improve fuel economy through moderate throttle characteristics and by controlling the operation of the air conditioning system (heating/cooling).

When not in Eco drive mode, if the driving mode select switch is turned to the left, the Eco drive mode indicator will come on.

3 Sport mode

Controls the hybrid system to provide quick, powerful acceleration. This mode also changes the steering feel, making it suitable for when agile driving response is desired, such as when driving on roads with many curves.

 
When not in sport mode, if the driving mode select switch is turned to the right, the "Sport" indicator will come on.

Remote Touch

The Remote Touch can be used to operate the Center Display.

Remote Touch is the name for the device that includes the "MAP" button/"HOME" button, "MENU" button, back button, touchpad and sub function button.

Names and operations of each part

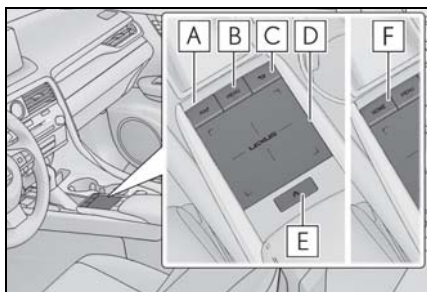

- A** Vehicles with a 12.3-inch display:
"MAP" button

Vehicles with navigation function:
Press this button to display the vehicle's current position.

Vehicles without navigation function:
Press this button to display the compass mode screen.

- B** "MENU" button

Press this button to display the menu screen.

- C** Back button

Press this button to display the previous screen.

- D** Touchpad

Slide your finger on the touchpad and move the pointer to select a function, letter and screen button.

Press the touchpad to enter the selected function, letter or screen button. Certain finger movements on the touchpad can perform functions, such as changing map scalings and scrolling list screens.

- E** Sub function button

When  is displayed on the screen, a function screen assigned to the screen can be displayed.

- F** Vehicles with a 8-inch display:
"HOME" button

 
Press this button to display the home screen.

Center Display

Menu screen

Press the “MENU” button on the Remote Touch to display the menu screen.

► Vehicles with a 12.3-inch display

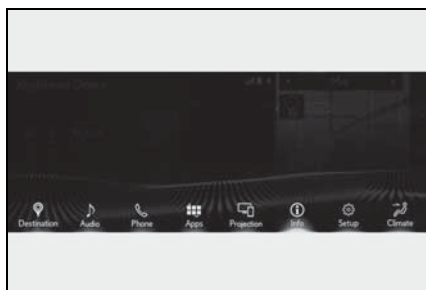

► Vehicles with a 8-inch display




Switch	Function
	Select to display the “Destination” screen. ^{*1}
	Select to display the audio control screen. ^{*1}
	Select to display the hands-free control screen. ^{*1}
	Select to display the “Apps” screen. ^{*1, 2}
	When an Apple CarPlay/Android Auto connection is established and this button displays, “Apple CarPlay”/“Android Auto” select to display the home screen of Apple CarPlay/Android Auto. ^{*1, 2}
	Select to display the information screen. ^{*1} (→P.49)
	Select to display the setup screen. ^{*1}
	Select to display the air conditioning control screen. (→P.66)
	Select to adjust the contrast and brightness of the screens, turn the screen off, etc. ^{*1, 2}

^{*1}: Refer to “NAVIGATION AND MULTIMEDIA SYSTEM OWNER’S MANUAL”.


^{*2}: This function is not made available in some models or areas.

Split-screen display (vehicles with a 12.3-inch display)

 Different information can be displayed on the left and right sides of the screen. For example, air conditioning system screen can be displayed and operated while the fuel consumption information screen is being displayed. The large screen on the left of the display is called the main display, and the small screen to the right is called the side display.

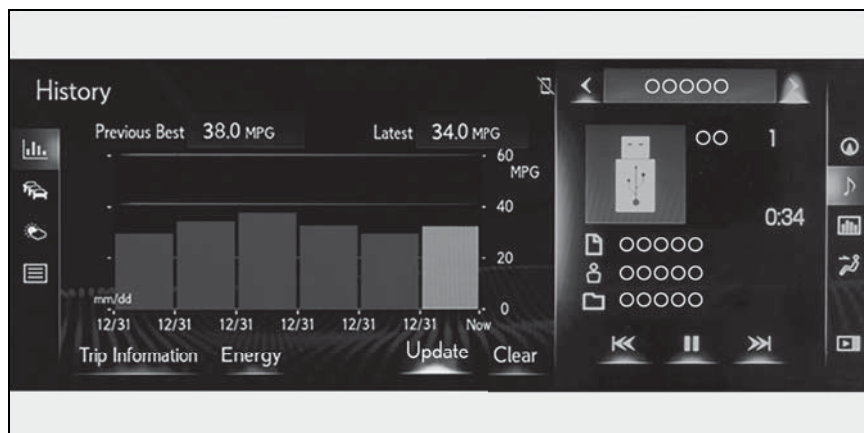

 
Side display (vehicles with a 12.3-inch display)

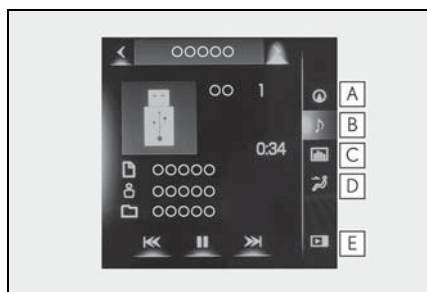

The following functions can be displayed and operated on the side display.

- A** Navigation system (→P.52)
- B** Audio (→P.61, 62, 63, 64)
- C** Vehicle information (→P.51)
- D** Air conditioning system (→P.70)
- E** Show/hide the side display

 Map scroll operation

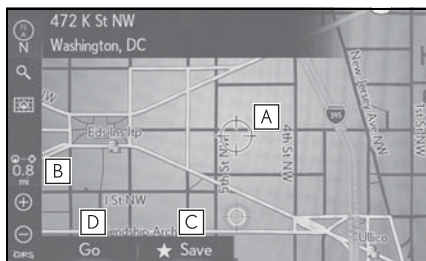

Select the desired point on the map screen.

Move the desired point on the center of the map screen.

 
- A** Cursor mark
- B** Distance from the current position to the cursor mark
- C** Select to register as a memory point
- D** Select to set as a destination

Press the “MAP” button on the Remote Touch to return to the current position.

Editing route

While route guidance is operating, you can change the route using the following method.

- 1** Select  on the map screen.

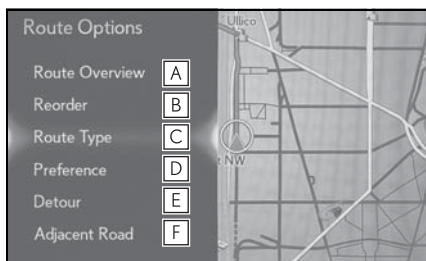

- 2** Select the desired item to be set.

- A** Select to display the overview of the entire route
- B** Select to reorder destinations
- C** Select to change route type
- D** Select to set route preferences
- E** Select to set detours
- F** Select to start from adjacent road

- 3** Check that the route overview is displayed.

Some functions are unavailable while the vehicle is in motion. Refer to “NAVIGATION AND MULTIMEDIA SYSTEM OWNER’S MANUAL”.

Energy Monitor/Consumption Screen

The state of the hybrid system can be viewed on the multi-information display and Center Display.

Vehicles with a 12.3-inch display: The energy monitor or consumption screen can be displayed and operated on the side display. For details, refer to the "OWNER'S MANUAL".

Energy monitor

■ How to display on the Center Display

Press the "MENU" button on the Remote Touch, then select  on the menu screen.

If a screen other than "Energy monitor" is displayed, select "Energy".



The flow of energy is displayed on the Center Display.

Red: gasoline energy

Amber: electrical energy

Light blue: energy recovery

A light blue arrow appears when regenerative braking occurs.

■ How to display on the multi-information display

Press the < or > meter control switch and select , and then press ^ or v to select the energy monitor display.



The flow of energy is indicated by the movement of the arrows on the multi-information display.

Red: gasoline energy

Amber: electrical energy

Light blue: energy recovery

A light blue arrow appears when regenerative braking occurs.

 
The displayed energy flow, battery level, etc. will change in response to the current driving conditions.

Consumption

Press the “MENU” button on the Remote Touch, then select  on the menu screen.

Trip information

If a screen other than “Trip Information” is displayed, select “Trip Information”.

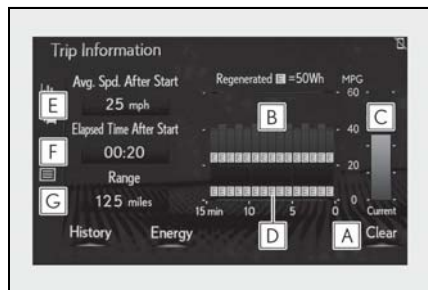


- A** Resetting the consumption data
- B** Fuel consumption in the past 15 minutes
- C** Current fuel consumption
- D** Regenerated energy in the past 15 minutes

One symbol indicates 50 Wh. Up to 5 symbols are shown.

- E** Average vehicle speed since the hybrid system was started.
- F** Elapsed time since the hybrid system was started.
- G** Cruising range

History

 If a screen other than “History” is displayed, select “History”.

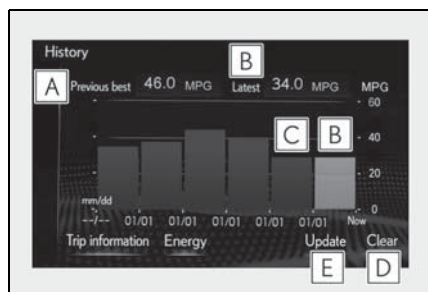

- A** Best recorded fuel consumption
- B** Latest fuel consumption
- C** Previous fuel consumption record
- D** Resetting the history data
- E** Updating the latest fuel consumption data

Side display (vehicles with a 12.3-inch display)

 
Display the vehicle information on the side display, and then select  or  to display the desired screen.



- Trip information (type A/type B)
- History
- Energy monitor

Navigation System (if equipped)

Registering home

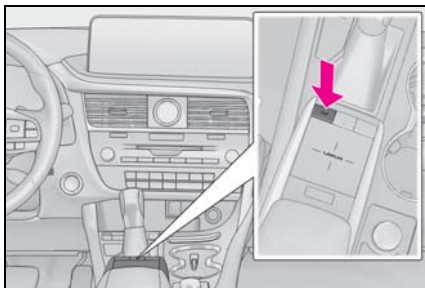

- 1 Press the "MAP" button on the Remote Touch.

Please refer to P.45 for the Remote Touch operation.

- 2 Select .
- 3 Select "Home".
- 4 Select "Yes".
- 5 Select "OK".
Registration of home is complete.

Destination search

■ Searching by address

- 1 Display the destination search screen by either operation:

- "MAP" button → 
- "MENU" button → "Destination"

- 2 Select "Address".

If a state (province) has not been selected yet, "State/Province" screen is displayed.

- 3 Enter a house number and select "Search".

"Change State/Province": Select to change the search area.

- 4 Enter a street name and select "Search".

- 5 Select the desired street name.

- 6 Enter a city name and select "Search".

- 7 Select the desired city name.

 
If multiple locations with the same address exist, the address list screen will be displayed.
Select the desired address.

■ Searching by point of interest

There are 3 methods to search for a destination by Point of Interest.

1 Display the destination search screen by either operation:

- “MAP” button → 
 - “MENU” button → “Destination”
- 2** Select “Point of Interest”.

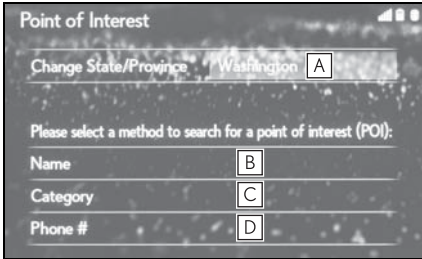

► **Searching by name (B)**

 
- 4** Select “Name”.
- 5** Enter a POI name and select “Search”.
- 6** Select the desired POI.

3 Select the desired search method.

- A** Select to change the search area.
- B** Select to search by name.
- C** Select to search by category.
- D** Select to search by phone number.

► **Searching by category (C)**

4 Select "Category".

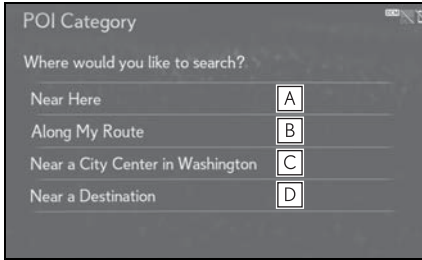

6 Select the desired POI category.

7 Select the desired POI.

► **Searching by phone number (D)**

4 Select "Phone #".

5 Enter a phone number and select "OK".

5 Select the desired search point.

A Select to search for POIs near your current position.

B Select to search for POIs along the set route.

C Select to search for POIs near a specific city center.

D Select to search for POIs near a destination. When more than 1 destination has been set, a list will be displayed on the screen. Select the desired destination.

Hands-free System For Cellular Phone

Registering/connecting a Bluetooth® device

To use the hands-free system, it is necessary to register a Bluetooth® phone with the system. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to <http://www.lexus.com/MobileLink> to find approved Bluetooth® phones for this system.

 
1 Turn the Bluetooth® connection setting of your cellular phone on.

2 Press the "MENU" button on the Remote Touch.

Please refer to P.45 for the Remote Touch operation.

3 Select "Phone".


4 Select "Yes" to register a phone.

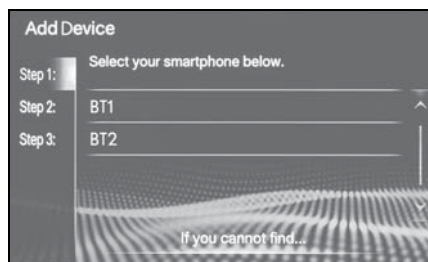

5 Select the desired Bluetooth® device.

6 Register the Bluetooth® device using your Bluetooth® device.

 7 Check that the following screen is displayed, indicating pairing was successful.

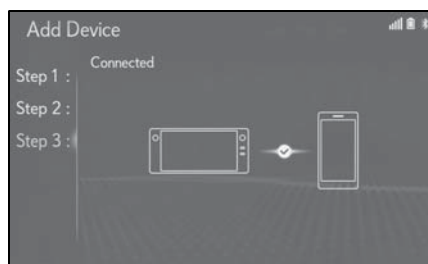

8 Check that "Connected" is displayed and registration is complete.

Contacts transfer

- 1** Press the "MENU" button on the Remote Touch.
Please refer to P.45 for the Remote Touch operation.
 - 2** Select "Setup".
 - 3** Select  "Phone" on the sub menu.
 - 4** Select "Contacts/Call History".
 - 5** Select "Transfer Contacts from Device".
 - 6** Select "From Phone (Bluetooth*)".
 - 7** Transfer the contact data to the system using a Bluetooth® phone.
 - 8** Check that a confirmation screen is displayed when the operation is complete.
- *: The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.

Contacts transfer may not be possible depending on the type of phone.

Registering the contacts in the favorites list

- 1 Press the "MENU" button on the Remote Touch.
Please refer to P.45 for the Remote Touch operation.
- 2 Select "Setup".
- 3 Select  "Phone" on the sub menu.
- 4 Select "Contacts/Call History".
- 5 Select "Add Favorite".
- 6 Select the desired contact to add to the favorites list.
- 7 Check that a confirmation screen is displayed when the operation is complete.

Calling by favorites list

- 1 Press the "MENU" button on the Remote Touch.
Please refer to P.45 for the Remote Touch operation.
- 2 Select "Phone".
- 3 Select  "Favorites" on the sub menu and select the desired contact.
- 4 Select the desired number.
- 5 Check that the dialing screen is displayed.

 
Calling the message sender

- 1 Press the "MENU" button on the Remote Touch.
Please refer to P.45 for the Remote Touch operation.
- 2 Select "Phone".
- 3 Select  "Message" on the sub menu.
- 4 Select a desired account name that is displayed on the left side of screen.
- 5 Select the desired message from the list.
- 6 Select , or press the  switch on the steering wheel.
- 7 Check that the dialing screen is displayed.


Receiving a call

Select "Answer"  / or press the  switch on the steering wheel to talk on the phone.

► Main display

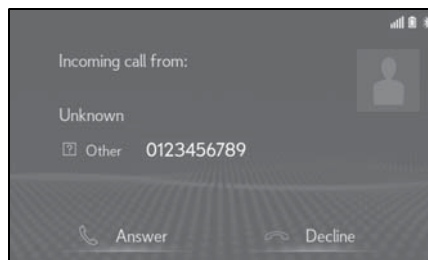


► Side display

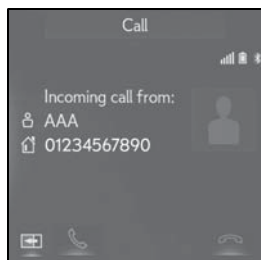 

"Decline" /: Select to refuse to receive the call.

 Steering switches

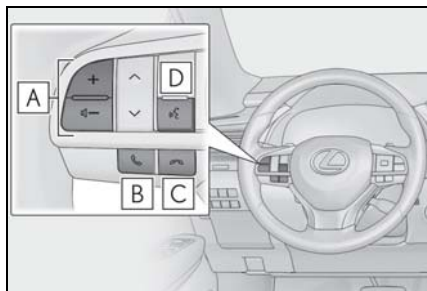

- A** Volume control switch
 - Press the "+" side to increase the volume.
 - Press the "-" side to decrease the volume.
 - B** Off hook switch
 - Press to start talking.
 - Press to put a call on hold.
 - Depending on the system, if the switch is pressed when an Apple CarPlay connection is established, the Apple CarPlay phone application will be displayed on the system screen.*
 - C** On hook switch
 - Press to end talking/dialing.
 - Press to refuse to receive the call.
 - D** Talk switch
 - Press the talk switch to start the voice command system.
 - To cancel voice recognition, press and hold the talk switch.
- *: This function is not available in some countries or areas.

Audio System

Audio control screen

Follow the procedure below to display the audio control screen.

► **Using the audio control switch**

Press the "RADIO" or "MEDIA" button.

 
► **Using the Remote Touch**

Press the "MENU" button on the Remote Touch, then select "Audio".

Please refer to P.45 for the Remote Touch operation.

Selecting an audio source

► **Using the audio control switch**

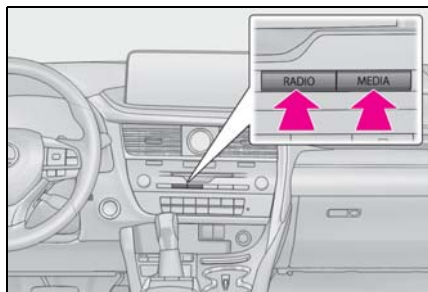

- 1 Press the "RADIO" or "MEDIA" button.

"RADIO" button: Press to change radio modes.

"MEDIA" button: Press to change media modes.

 
- Each time the "RADIO" or "MEDIA" button is pressed, the audio source changes.

► **From the audio source selection screen**

- 1 Display the audio control screen.
- 2 Select  "Source" on the sub menu.
- 3 Select the desired source.

Steering switch operation


Some parts of the audio/visual system can be adjusted using the switches on the steering wheel.

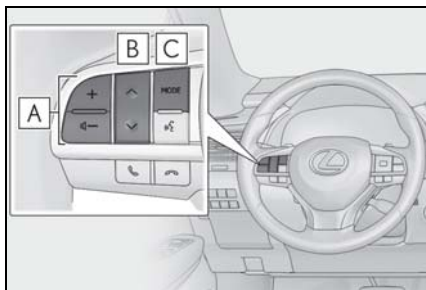

- A** Increases/decreases volume
- B** AM, FM mode: Selects a radio station
SXM mode: Selects a channel
Audio CD mode: Selects a track
MP3/WMA/AAC disc mode: Selects a file
DVD mode: Selects a chapter
USB mode: Selects a file/track
iPod/iPhone mode: Selects a track
Android Auto mode: Selects a track
Bluetooth® audio mode: Selects a track
- C** Press: Change audio modes
Press and hold: Mute/unmute or pause/resume the current operation


Radio

 Audio control switch

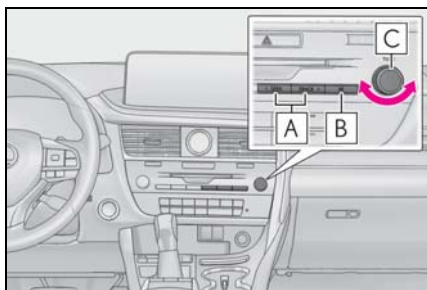

- A** Press to seek up/down.
Press and hold for continuous seek.
- B** Press to turn mute on/off.
Cache radio only: Press to play/pause.
- C** Turn to step up/down frequencies/
channels.

 Control screen

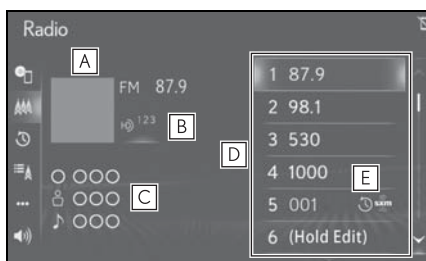


- A** Displays cover art
- B** Select to display HD) multicast channels available
- C** Displays the artist info and song title or album and genre
- D** Select to tune to preset stations/channels
- E** Display items on the channels registered to smart favorites

Presetting a station

- 1** Tune in the desired station.
- 2** Select and hold “(Hold Edit)”.

 
Audio control switch

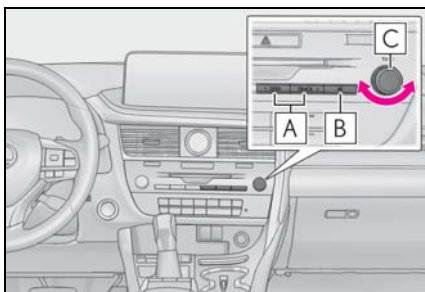

- A** Press to select a track/file.
Press and hold to fast forward/rewind.
- B** Press to pause/play.
- C** Turn to select a track/file.


Control screen

 Audio CD

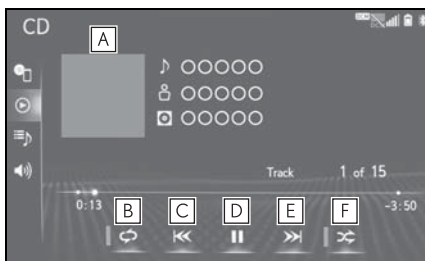

- A** Displays cover art
- B** Select to set repeat playback
- C** Select to change the track.
Select and hold to fast rewind.
- D** Select to play/pause.
- E** Select to change the track.
Select and hold to fast forward.
- F** Select to set random playback

 
MP3/WMA/AAC disc

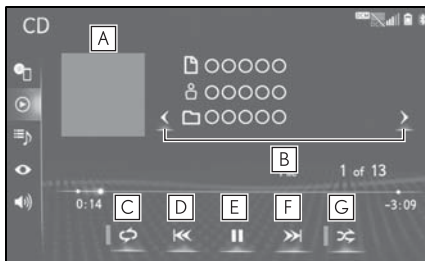

- A** Displays cover art
- B** Select to change the folder
- C** Select to set repeat playback
- D** Select to change the file.
Select and hold to fast rewind.
- E** Select to play/pause.
- F** Select to change the file.
Select and hold to fast forward.
- G** Select to set random playback


DVD

 ■ Audio control switch

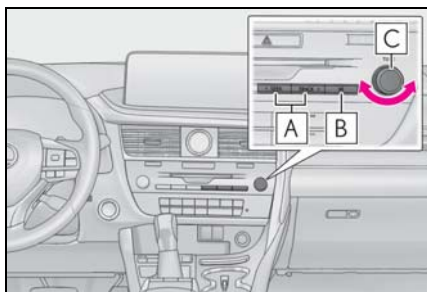


- A** Press to select a chapter.
Press and hold to fast forward/rewind.
- B** Press to pause/play.
- C** Turn to select a chapter.

 ■ Control screen

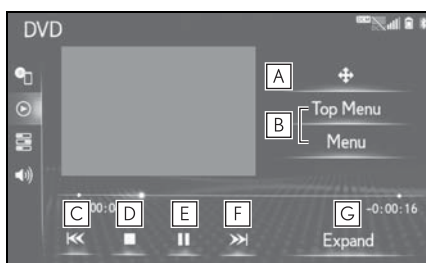


- A** Select to display the menu control key
- B** Select to display the menu screen
- C** Select to change the chapter.
Select and hold to fast rewind.
- D** Select to stop the video screen.
- E** Select to play/pause.
- F** Select to change the chapter.
 - During playback: Select and hold to fast forward.
 - During a pause: Select and hold to slow forward.
- G** Select to display expanded screen video

 Audio control switch

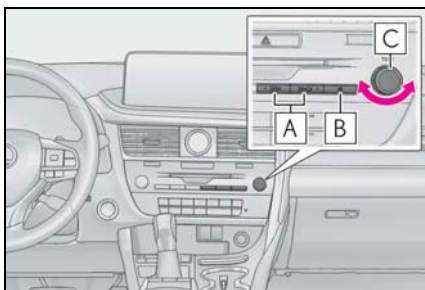

- A** Press to select a track.
Press and hold to fast forward/rewind.
 - B** Press to pause/play.
 - C** Turn to select a track.*
- *: If equipped

 Control screen

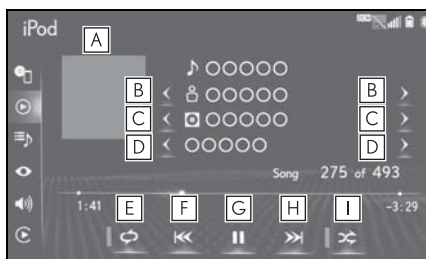


- A** Displays cover art
- B** Select to change the artist.
- C** Select to change the album.
- D** Select to change the playlist.
- E** Select to set repeat playback.
- F** Select to change the track.
Select and hold to fast rewind.
- G** Select to play/pause.
- H** Select to change the track.
Select and hold to fast forward.
- I** Select to set random playback.

Lexus Climate Concierge

The climate control seats are automatically controlled according to the set temperature of the air conditioning system, outside temperature, cabin temperature, etc. Lexus Climate Concierge allows a comfortable condition to be maintained without adjusting each system.

 Turning on Lexus Climate Concierge

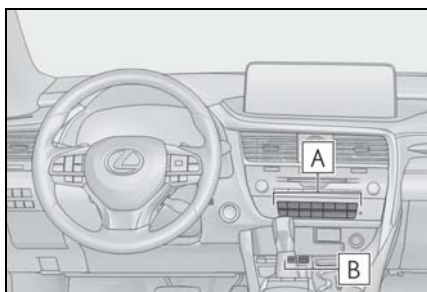

A Front automatic air conditioning system

Set the air conditioning system to automatic mode.

The temperature for the driver's seat and front passenger's seat can be adjusted individually.

B Seat heaters and ventilators

Select "AUTO" mode on each seat.

Seat heater or ventilation is automatically selected according to the set temperature of the air conditioning system, outside temperature, etc.

Front Automatic Air Conditioning System

 
Air outlets and fan speed are automatically adjusted according to the temperature setting.

Press the "MENU" button on the Remote Touch, then select  to display the air conditioning control screen.

Vehicles with a 12.3-inch display: The air conditioning system can be displayed and operated on the side display.


Air conditioning controls

► RX450h

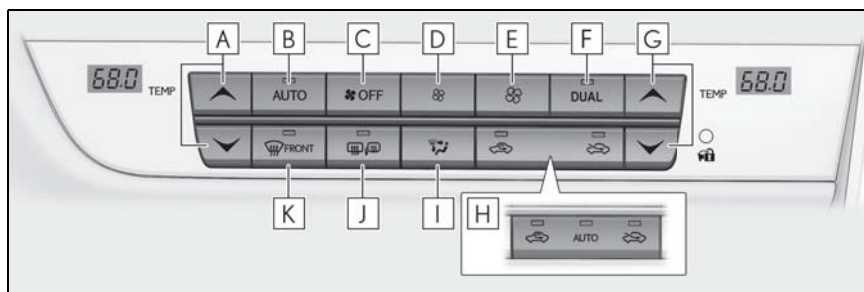

- A** Left-hand side temperature control switch
- B** Automatic mode switch
- C** Off switch
- D** Fan speed decreases switch
- E** Fan speed increases switch
- F** DUAL switch
- G** Right-hand side temperature control switch
- H** Outside/recirculated air mode switch
- I** Air flow mode switch
- J** Rear window defogger and outside rear view mirror defoggers switch
- K** Windshield defogger switch

 ► RX450hL

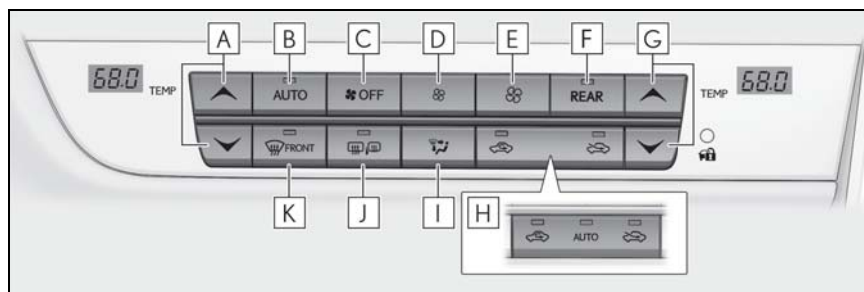


- A** Left-hand side temperature control switch
- B** Automatic mode switch
- C** Off switch
- D** Fan speed decreases switch
- E** Fan speed increases switch
- F** REAR switch
- G** Right-hand side temperature control switch
- H** Outside/recirculated air mode switch
- I** Air flow mode switch
- J** Rear window defogger and outside rear view mirror defoggers switch
- K** Windshield defogger switch

Air conditioning control screen


Main control screen

Using the touchpad of the Remote Touch, select the button on the screen.

 - Vehicles with DUAL-ZONE climate control ► Vehicles with 3-ZONE climate control

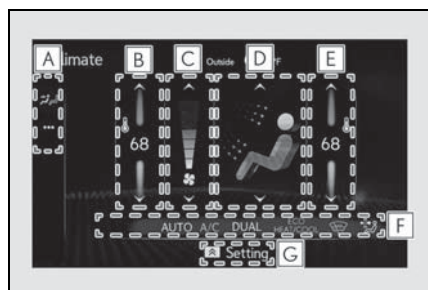

 - A** Sub menu
- B** Adjust the left side seat temperature setting
- C** Adjust the fan speed setting
- D** Select the air flow mode
- E** Adjust the right side seat temperature setting
- F** Function on/off indicators
- G** Sub function menu

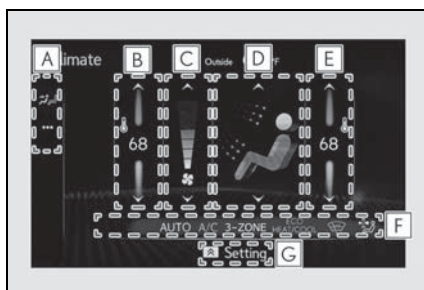

- A** Sub menu
- B** Adjust the left side seat temperature setting
- C** Adjust the fan speed setting
- D** Select the air flow mode
- E** Adjust the right side seat temperature setting
- F** Function on/off indicators
- G** Sub function menu

 
 
■ Option control screen

Select **...** on the sub menu to display the option control screen.

The functions can be switched on and off.

When the function is on, the indicator illuminates on the screen.

► Vehicles with DUAL-ZONE climate control ► Vehicles with 3-ZONE climate control

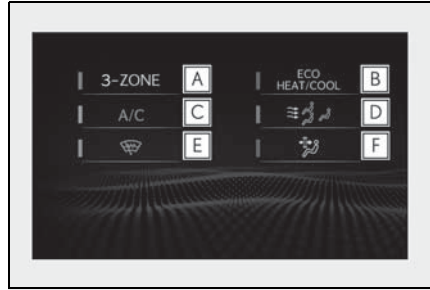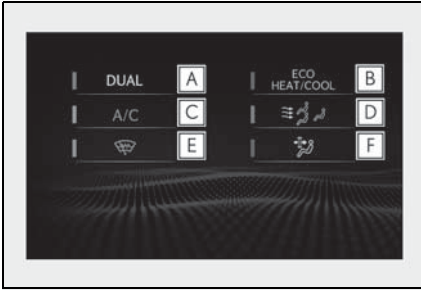

A Adjusting the temperature for driver and passenger seats separately ("DUAL" mode)

B Set eco air conditioning mode

C Cooling and dehumidification function

D Select the front seat concentrated air-flow mode (S-FLOW)

E Prevent ice from building up on the windshield and wiper blades (Windshield wiper de-icer) (if equipped)

F Removing pollen from the air (Micro dust and pollen filter)

A Adjust the temperature for driver, passenger and rear seats separately ("3-ZONE" mode)

B Set eco air conditioning mode

C Cooling and dehumidification function

 
 
D Select the front seat concentrated air-flow mode (S-FLOW)

E Prevent ice from building up on the windshield and wiper blades (Windshield wiper de-icer) (if equipped)

F Removing pollen from the air (Micro dust and pollen filter)

■ Side display

- Vehicles with DUAL-ZONE climate control ► Vehicles with 3-ZONE climate control

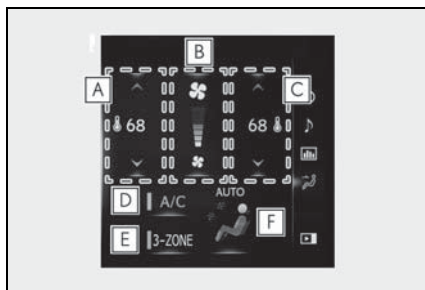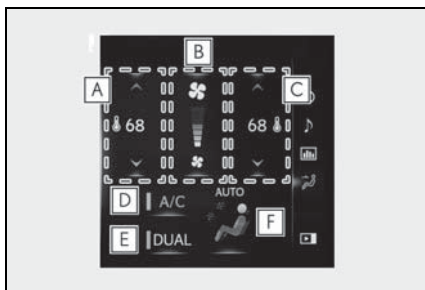

- | | |
|--|---|
| A Adjust the left side seat temperature setting | A Adjust the left side seat temperature setting |
| B Adjust the fan speed setting | B Adjust the fan speed setting |
| C Adjust the right side seat temperature setting | C Adjust the right side seat temperature setting |
| D Set cooling and dehumidification function on/off | D Set cooling and dehumidification function on/off |
| E Adjusting the temperature for driver and passenger seats separately ("DUAL" mode) | E Adjust the temperature for driver, passenger and rear seats separately ("3-ZONE" mode) |
| F Select the air flow mode | F Select the air flow mode |

Using automatic mode

- 1 Press the automatic mode switch or select "AUTO" on the sub function menu.
- 2 Press the outside/recirculated air mode switch to switch to automatic air intake mode. (if equipped)
- 3 Adjust the temperature setting.
- 4 To stop the operation, press the off switch or select "OFF" on the sub function menu.

Rear Automatic Air Conditioning System (RX450hL)

 
The air outlets and fan speed are automatically adjusted according to the temperature setting.

The rear air conditioning system can be operated using the Center Display and rear air conditioning system control panel.

Rear air conditioning control operation


■ Center Display

Using the touchpad of the Remote Touch, select the button on the screen.

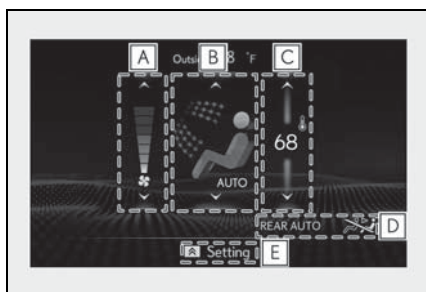

- A** Adjust the rear seats fan speed setting
- B** Select the rear seats air flow mode
- C** Adjust the rear seats temperature setting
- D** Function on/off indicators
- E** Sub function menu

 ■ Rear air conditioning system control panel

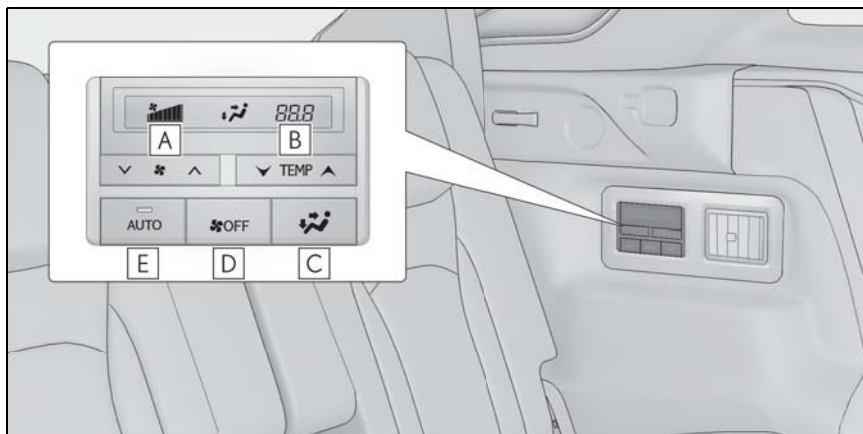

- A** Adjust the rear seats fan speed setting
- B** Adjust the rear seats temperature setting
- C** Select the air flow mode
- D** OFF switch
- E** AUTO button

Using automatic mode

► Center Display

- 1 Select "Rear AUTO" on the sub function menu.
- 2 To stop the operation, select "Rear off" on the sub function menu.

 
► Rear air conditioning system control panel

- 1 Press "AUTO" on the rear air conditioning system control panel.
- 2 To stop the operation, select "OFF" on the rear air conditioning system control panel.

Voice Command System

Basic operation

NOTE: Wait for the confirmation beep before speaking a command.

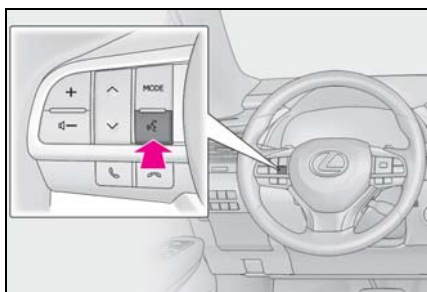

- 1** Press the talk switch on the steering wheel.

Voice guidance for the voice command system can be skipped by pressing the talk switch.

- 2** If "Getting Started with Voice" screen is displayed, select "OK" or press the talk switch.
- 3** After hearing a beep, say a supported command.
 - To display sample commands of the desired function, say the desired function or select the desired function button. To display more commands, select "More Commands".
 - Selecting "Help" or saying "Help" prompts the voice command system to offer examples of commands and operation methods.

Continue on to pages 75-81 for a detailed list of Voice Commands for the following categories:

Common	P.75
Top menu	P.75
Navi	P.76
Phone	P.77
Radio	P.78
Audio.....	P.79
Info	P.80
Apps.....	P.80
Climate	P.81

- Important voice commands information and tips
- Voice commands can be used while driving.
 - You must wait until after the beep to say a command.
 - If you know what command to use, you can press the talk switch at any time to interrupt the voice guidance.

Command list

Common

Command	Action
"Help"	Displays examples of some of the available commands
"Go Back"	Returns to the previous screen
"Cancel"	Cancels the voice command system
"Start over"	Returns to top menu screen
"Pause"	Temporarily pauses a voice session until it is resumed by pressing the talk switch again.

Top menu

Command	Action
"Show command examples for <menu>"	Displays the command list of the selected menu
"More Commands"	Displays more commonly used commands
"Voice Settings"	Displays Voice Setting screen
"Train my voice"	Displays Train Voice Recognition screen *

*: Vehicle must be parked

■ Navigation*1

Command	Action
"Get directions to <house #, street, city, state>"*2	Enables setting a destination by saying the address*3,4
"Find a <POI category/POI name>"	Displays a list of <POI category*5/POI name*6> near the current position
"Find a <POI> near my destination"	Displays a list of <POI> near the destination
"Find a <POI category> in a city"*2	Displays a list of <POI> in a specified city and state*4
"Go Home"	Displays the route to home
"Go to Favorite <1-10>"	Sets the location registered to the corresponding favorite number as the destination
"Show Recent Destinations"	Displays recent destinations. Selecting a number from the list will start navigation to the selected recent destination.
"Cancel Route"	Cancels the route guidance
"Delete destinations"	Displays a list of destination to delete*7
"Show <POI category> icons"	Displays the specified point of interest category*5 icons on the map
"Destination Assist"	Connects the system to the Lexus response center

*1: With navigation function

*2: English and French only

*3: Best recognition results occur when saying the full address without the zipcode

*4: When the language is set to French, the supported area is only Quebec Province in Canada

*5: For example; "Gas stations", "Restaurants", etc.

*6: Major national brands are always supported. Local brands are also supported with a subscription to the Lexus Enform. Contact your Lexus dealer for details.

*7: Used when multiple destinations are set on a route

■ Phone

Command	Action
"Call <contact>"*	Places a call to the specified contact from the phone book
"Call <contact> <phonetype>"*	Places a call to the specified phone type of the contact from the phone book
"Dial <phone number>"	Places a call to the specified phone number
"Redial"	Places a call to the phone number of the latest outgoing call
"Call Back"	Places a call to the phone number of latest incoming call
"Show Recent Calls"	Displays the call history screen
"Send a message to <contacts>"	Sends a text message to specified contact from the phone book

*: If the system does not recognize the name of a contact, create a voice tag. The name of a contact can also be recognized by adding a voice tag.

■ While in a phone call

Command	Action
"Send <digits>"	Sends DTMF tones has specified
"Mute"	Mutes the microphone (far side cannot hear the conversation)
"Unmute"	Unmutes the microphone

■ While incoming message notification is displayed*

Command	Action
"Read Message"	Reads the incoming message over the vehicle speakers
"Ignore"	Ignores the incoming message notification
"Reply"	Initiates sending a reply to the incoming message
"Call"	Places a call to the phone number of incoming message

*: Full screen message notification must be turned on within the phone settings

■ Radio

Command	Action
"Tune to <frequency> AM"	Changes the radio to the specified AM frequency
"Tune to <frequency> FM"	Changes the radio to the specified FM frequency
"Play a <genre> station"	Changes the radio to an FM station of the specified genre ^{*1}
"Tune to preset <1-36>"	Changes the radio to the specified preset radio station
"Tune to a <genre> satellite station"	Changes the radio to a satellite radio channel of the specified genre ^{*2}
"Tune to <satellite channel name>"	Changes the radio to the satellite radio channel with the specified name ^{*2}
"Tune to channel <number> on XM"	Changes the radio to a satellite radio channel of the specified number ^{*2}

^{*1}: A station list must be built first using the radio screen

^{*2}: Requires a satellite radio subscription

■ Audio*

Command	Action
"Play Playlist <name>"	Plays tracks from the selected playlist
"Play Artist <name>"	Plays tracks from the selected artist
"Play Song <name>"	Plays the selected track
"Play Album <name>"	Plays tracks from the selected album
"Play Genre <name>"	Plays tracks from the selected genre
"Play Composer <name>"	Plays tracks from the selected composer
"Play Podcast <name>"	Plays tracks from the selected podcast
"Play Audiobook <name>"	Plays tracks from the selected audiobook
"Audio On"	Turns the audio system on
"Audio Off"	Turns the audio system off
"Change the audio source to <source name>"	Sets the source to the specified audio mode

*: The audio device must be connected via a USB cable to use the functionality in this section

■ Info*1

Command	Action
"Get the Forecast"	Displays weather information
"Get the Forecast for <city>"*2	Displays weather for the specified city
"Show Traffic"	Displays traffic information
"Show Traffic near here"	Displays traffic information near your current location
"Get traffic along my route"	Displays traffic information along your current route
"Show Traffic on this street"	Displays traffic information along road you are currently driving on
"Show Traffic for saved route"	Displays traffic information for a saved route
"Show Predictive Traffic"	Displays the predictive traffic map

*1: With navigation function

*2: Only major US cities are supported by voice

■ Apps

Command	Action
"Launch <apps>"*	Activates the Lexus Enform App Suite 2.0 application

*: When an application is opened and is in full screen mode, pressing the talk switch will start the voice command system and commands for the currently displayed application will be available


■ Climate

Command	Action
"Turn the AC on/Turn the AC off"	Turns air conditioning system on or off
"Change the Fan speed to <#>"	Changes the set fan speed of the air conditioning system to <#>
"Set temperature to <#> degrees"	Changes the set temperature of the air conditioning system to <#> degrees*
"Increase Temperature/Decrease Temperature"	Increases or decreases the temperature of the air conditioning system
"Increase Fan speed/Decrease Fan Speed"	Increases or decreases the fan speed of the air conditioning system
"Show the front climate control screen"	Displays the screen to control the air conditioning or seat heating system


*: Only within the possible temperature range of the air conditioning system

USB/AUX Ports

 There are 2 USB ports and an AUX port in the console box.

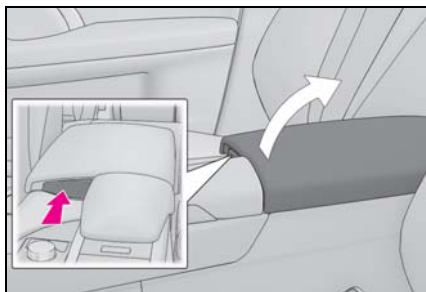

1 Push the knob.

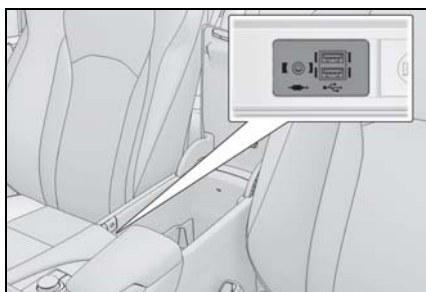 


2 Connect a device.

Garage Door Opener

The garage door opener can be programmed using the HomeLink[®] to operate garage doors, gates, entry doors, door locks, home lighting systems, security systems, and other devices.

System components

 The HomeLink[®] wireless control system in your vehicle has 3 buttons which can be programmed to operate 3 different devices. Refer to the programming methods on the following pages to determine the method which is appropriate for the device.

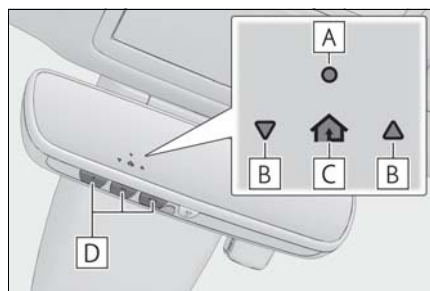

- A** HomeLink[®] indicator light
- B** Garage door operation indicators
- C** HomeLink[®] icon

Illuminates while HomeLink[®] is operating.

- D** Buttons

■ When support is necessary

Visit on the web at www.homelink.com/lexus or call 1-800-355-3515.

■ Before programming HomeLink[®]

- During programming, it is possible that garage doors, gates, or other devices may operate. For this reason, make sure that people and objects are clear of the garage door or other devices to prevent injury or other potential harm.
- It is recommended that a new battery be placed in the remote control transmitter for more accurate programming.
- Garage door opener motors manufactured after 1995 may be equipped with rolling code protection. If this is the case, you may need a stepladder or other sturdy, safe device to reach the “Learn” or “Smart” button on the garage door opener motor.

■ Programming HomeLink®

Steps **1** through **3** must be performed within 60 seconds, otherwise the indicator light will stop flashing and programming will not be able to be completed.

- 1** Press and release the HomeLink® button you want to program and check that the HomeLink® indicator light flashes (orange).

 


- 2** Point the remote control transmitter for the device at the rear view mirror, 1 to 3 in. (25 to 75 mm) from the HomeLink® buttons.

Keep the HomeLink® indicator light in view while programming.

- 3** Program a device.

► Programming a device other than an entry gate (for U.S.A. owners)

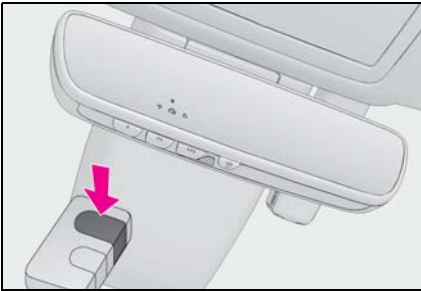

Press and hold the handheld transmitter button until the HomeLink® indicator light changes from slowly flashing orange to rapidly flashing green (rolling code) or continuously lit green (fixed code), then release the button.

► Programming an entry gate (for U.S.A. owners)/Programming a device in the Canadian market

 
Press and release the remote control transmitter button at 2 second intervals, repeatedly, until the HomeLink® indicator light changes from slowly flashing (orange) to rapidly flashing (green) (rolling code) or continuously lit (green) (fixed code).

- 4** Test the HomeLink® operation by pressing the newly programmed button and observing the indicator light:
 - Indicator light illuminates: Programming of a fixed code device has completed. The garage door or other device should operate when a HomeLink® button is pressed and released.
 - Indicator light flashes rapidly: The garage door opener motor or other device is equipped with a rolling code. To complete programming, firmly press and hold the HomeLink® button for 2 seconds then release it.
 - If the garage door or other device does not operate, proceed to "Programming a rolling code system".

- 5** Repeat the steps above to program another device for any of the remaining HomeLink[®] buttons.


■ Programming a rolling code system

2 or more people may be necessary to complete rolling code programming.

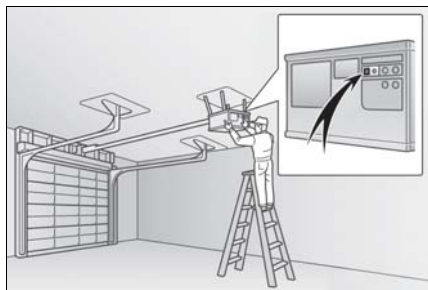

- 1** Locate the "Learn" or "Smart" button on the garage door opener motor in the garage.

 This button can usually be found where the hanging antenna wire is attached to the unit. The name and color of the button may vary by manufacturer. Refer to the owner's manual supplied with the garage door opener motor for details.

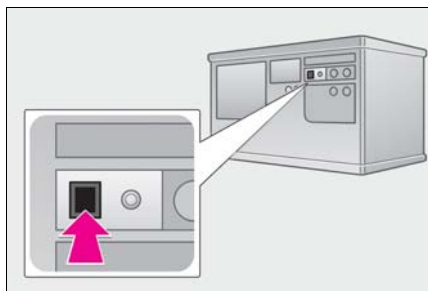

- 2** Press and release the "Learn" or "Smart" button.

Perform **3** within 30 seconds after performing **2**.



- 3** Press and hold the desired HomeLink[®] button (inside the vehicle) for 2 seconds and release it. Repeat this sequence (press/hold/release) up to 3 times to complete programming.

If the garage door opener motor operates when the HomeLink[®] button is pressed, the garage door opener motor recognizes the HomeLink[®] signal.

■ Enabling 2-way communication with a garage door (only available for compatible devices)

When enabled, 2-way communication allows you to check the status of the opening and closing of a garage door through indicators in your vehicle.

2-way communication is only available if the garage door opener motor used is a compatible device. (To check device compatibility, refer to www.homelink.com.)

- 1 Within 5 seconds after programming the garage door opener has been completed, if the garage door opener motor is trained to HomeLink[®], both garage door operation indicators will flash rapidly (green) and the light on the garage door opener motor will blink twice, indicating that 2-way communication is enabled.

If the indicators do not flash, perform **2** and **3** within the first 10 presses of the HomeLink[®] button after programming has been completed.

- 2 Press a programmed HomeLink[®] button to operate a garage door.
- 3 Within 1 minute of pressing the HomeLink[®] button, after the garage door operation has stopped, press the "Learn" or "Smart" button on the garage door opener motor. Within 5 seconds of the establishment of 2-way communication with the garage door opener, both garage door operation indicators in the vehicle will flash rapidly (green) and the light on the garage door opener motor will blink twice, indicating that 2-way communication is enabled.

■ Reprogramming a single HomeLink[®] button

When the following procedure is performed, buttons which already have devices registered to them can be overwritten:

- 1 With one hand, press and hold the desired HomeLink[®] button.
- 2 When the HomeLink[®] indicator starts flashing (orange), continue to hold the HomeLink[®] button and perform "Programming HomeLink[®]" **1** (it takes 20 seconds for the HomeLink[®] indicator to start flashing).

Operating HomeLink[®]

 
Press the appropriate HomeLink[®] button. The HomeLink[®] indicator light should turn on.

Lexus Enform Safety Connect (if equipped)

Safety Connect is a subscription-based telematics service that uses Global Positioning System (GPS) data and embedded cellular technology to provide safety and security features to subscribers. Safety Connect is supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Safety Connect service is available by subscription on select, telematics hardware-equipped vehicles.

System components

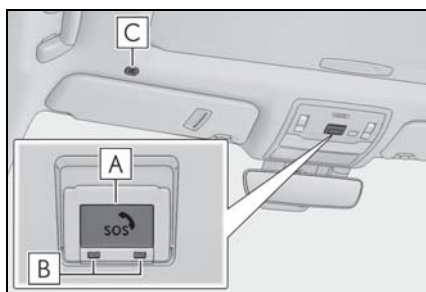

- A** "SOS" button
- B** LED light indicators
- C** Microphone

Services

Subscribers have the following Safety Connect services available:

- **Automatic Collision Notification**

In case of either airbag deployment or severe rear-end collision, the system is designed to automatically call the response center. The responding agent receives the vehicle's location and attempts to speak with the vehicle occupants to assess the level of emergency. If the occupants are unable to communicate, the agent automatically treats the call as an emergency, contacts the nearest emergency services provider to describe the situation, and requests that assistance be sent to the location.

- **Stolen Vehicle Location**

If your vehicle is stolen, Safety Connect can work with local authorities to assist them in locating and recovering the vehicle. After filing a police report, call the Safety Connect response center at 1-800-25-LEXUS (1-800-255-3987) in the United States, 1-877-539-8777 in Puerto Rico or 1-800-265-3987 in Canada, and follow the prompts for Safety Connect to initiate this service.

In addition to assisting law enforcement with recovery of a stolen vehicle, Safety-Connect-equipped vehicle location data may, under certain circumstances, be shared with third parties to locate your vehicle. Further information is available at Lexus.com.

- **Emergency Assistance Button ("SOS")**

In the event of an emergency on the road, push the "SOS" button to reach the Safety Connect response center. The answering agent will determine your vehicle's location, assess the emergency, and dispatch the necessary assistance required.

If you accidentally press the "SOS" button, tell the response-center agent that you are not experiencing an emergency.

- **Enhanced Roadside Assistance**

Enhanced Roadside Assistance adds GPS data to the already included warranty-based Lexus roadside service.

Subscribers can press the "SOS" button to reach a Safety Connect response-center agent, who can help with a wide range of needs, such as: towing, flat tire, fuel delivery, etc. For a description of the Roadside Assistance services and their limitations, please see the Safety Connect Terms and Conditions, which are available at Lexus.com.

Subscription

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services.

A variety of subscription terms is available for purchase. Contact your Lexus dealer, call the following or push the "SOS" button in your vehicle for further subscription details.

- **The United States**

1-800-25-LEXUS (1-800-255-3987)

- **Canada**

1-800-26-LEXUS (1-800-265-3987)

- **Puerto Rico**

1-877-539-8777

Lexus Enform Remote (if equipped)

Lexus Enform Remote is a smartphone application that lets you view and remotely control certain aspects of your vehicle.

For details about the functions and services of this application, refer to <http://www.lexus.com/enform/>.

Function of the Lexus Enform Remote is achieved by using DCM (Data Communication Module).

Subscription

After you sign the Telematics Subscription Service Agreement, download the Lexus app from your smartphone's app store, and register within the app (or enroll and complete registration at the dealer), you can begin using these services.

A variety of subscription terms are available. Contact your Lexus dealer, or call 1-800-25-LEXUS (1-800-255-3987) for further subscription details.

Lexus Enform Service Connect (if equipped)

Lexus Enform Service Connect uses DCM (Data Communication Module) to collect and transmit vehicle data that allows Lexus to provide:

- Vehicle Health Report (VHR) (Safety Recalls, Service Campaigns, Current Vehicle Alerts, Required Maintenance, and Vehicle Condition Status)
- Maintenance Notifications
- Vehicle Alert Notifications

For details about this service and how to register, refer to <http://www.lexus.com/enform/>.

The Lexus Enform Service Connect is achieved by using a DCM (Data Communication Module) built in the vehicle.

SiriusXM Satellite Radio

A SiriusXM Satellite Radio is a tuner designed exclusively to receive broadcasts provided under a separate subscription.

For details, refer to "NAVIGATION AND MULTIMEDIA SYSTEM OWNER'S MANUAL".

Subscription

For SiriusXM Services requiring a subscription (such as SiriusXM Satellite Radio), the following paragraph shall be included.

Required SiriusXM Radio monthly subscriptions sold separately after trial period. Subscription fee is consumer only. All fees and programming subject to change. Subscriptions are subject to the Customer Agreement available at www.siriusxm.com (U.S.A.) or www.siriusxm.ca (Canada) XM service only available in the 48 contiguous United States and 10 Canadian provinces. © 2011 Sirius XM Radio Inc. Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc. All other marks, channel names and logos are the property of their respective owners.

For more information, program schedules, and to subscribe or extend subscription after complimentary trial period; more information is available at:

► **U.S.A. Customers:**

Visit www.siriusxm.com or call 1-877-447-0011

► **Canadian Customers:**

Visit www.siriusxm.ca or call 1-877-438-9677

 
Door Locks

The vehicle can be locked and unlocked using the entry function, wireless remote control or door lock switches.

For details about the entry function or wireless remote control, refer to P.16, 18.


Unlocking and locking the doors from the inside

■ Door lock switches (to lock/unlock)

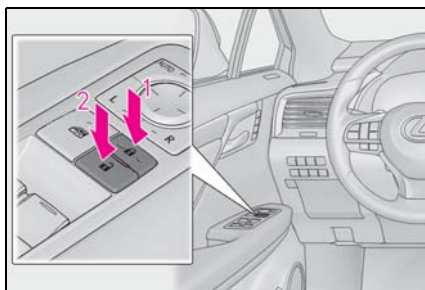


- 1** Locks all the doors
- 2** Unlocks all the doors

 ■ Inside lock buttons (to lock)

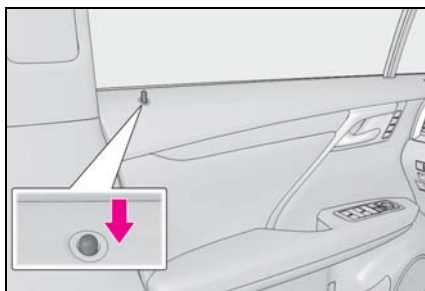

Push down the inside lock button to lock the door.

 ■ Inside door handles (to unlock)

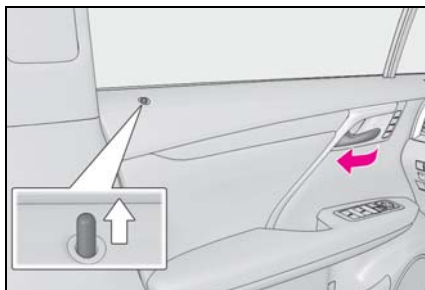

► For the front doors

Pull the handle to unlock and open the door.

 
When the door is unlocked, the inside lock button will pop up.

► For the rear doors

Pull the handle to unlock the door. Pull the handle a second time to open the door.

When the door is unlocked, the inside lock button will pop up.

Rear door child-protector lock

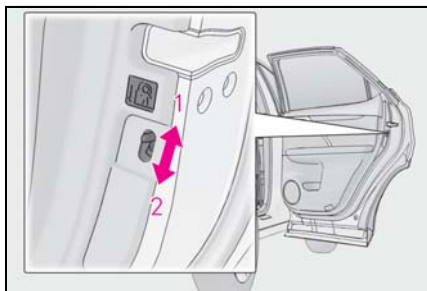

The door cannot be opened from inside the vehicle when the lock is set.

 
1 Unlock

2 Lock

These locks can be set to prevent children from opening the rear doors. Push down on each rear door switch to lock both rear doors.

Power Windows


Opening and closing the power windows

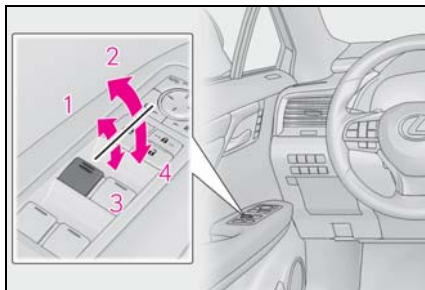

- 1** Closing
- 2** One-touch closing*
- 3** Opening
- 4** One-touch opening*

*: To stop the window partway, operate the switch in the opposite direction.

 Preventing accidental operation (window lock switch)

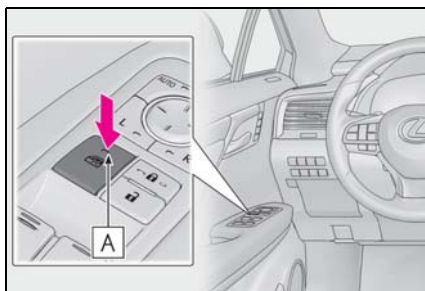

Press the switch.

 
The indicator **A** will come on and the passenger windows will be locked.

The passenger windows can still be opened and closed using the driver's switch even if the lock switch is on.

Moon Roof (if equipped)

Operating the moon roof

■ Opening and closing

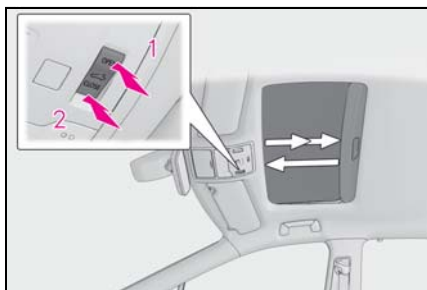

1 Opens the moon roof*

 
The moon roof stops slightly before the fully open position to reduce wind noise.

Press the switch again to fully open the moon roof.

2 Closes the moon roof*

*: Lightly press either side of the moon roof switch to stop the moon roof partway.

■ Tilting up and down

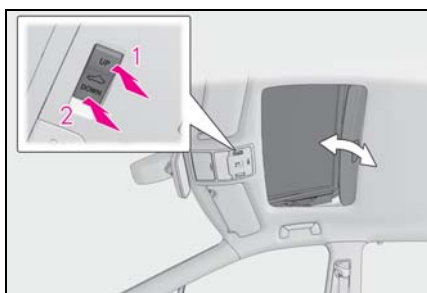

1 Tilts the moon roof up*

 
2 Tilts the moon roof down*

*: Lightly press either side of the moon roof switch to stop the moon roof partway.

Panoramic Moon Roof (if equipped)

Operating the panoramic moon roof

Opening and closing the electronic sunshade

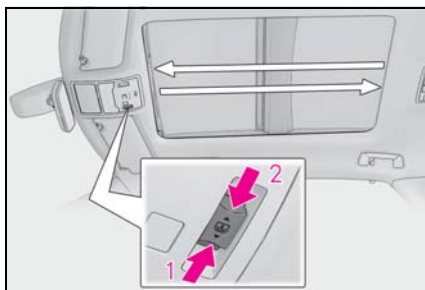

- 1** Opens the electronic sunshade

 
Slide and hold the  switch backward. The electronic sunshade will fully open automatically.*

- 2** Closes the electronic sunshade

Slide and hold the  switch forward. The electronic sunshade will fully close automatically.*

*: Quickly slide and release the  switch in either direction to stop the electronic sunshade partway.

Tilting the panoramic moon roof up and down

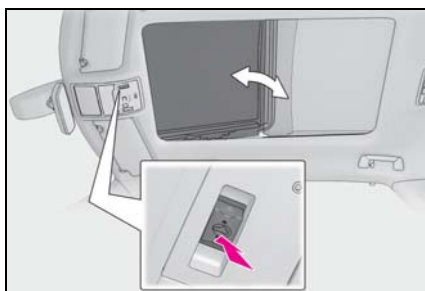

Tilts the panoramic moon roof up (press)*

 
When the panoramic moon roof is tilted up, the electronic sunshade will open to the half-open position of the roof.

*: Lightly press the  switch again to stop the panoramic moon roof partway.

Tilts the panoramic moon roof down (press and hold)

The panoramic moon roof can be tilted down only when it is in the tilt-up position.

■ Opening and closing the panoramic moon roof

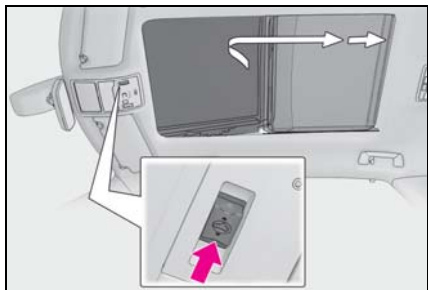


Opens the panoramic moon roof*

Slide and hold the  switch backward. The panoramic moon roof and electronic sunshade will open automatically.

The panoramic moon roof can be opened from the tilt-up position.

 *: Quickly slide and release the  switch in either direction to stop the panoramic moon roof partway.

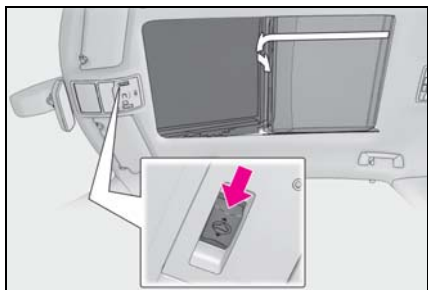

Closes the panoramic moon roof

 
Slide and hold the  switch forward. The panoramic moon roof will fully close automatically.

Fuel Tank Cap

Before refueling the vehicle

- Close all the doors and windows, and turn the power switch off.
- Confirm the type of fuel.

Opening the fuel tank cap

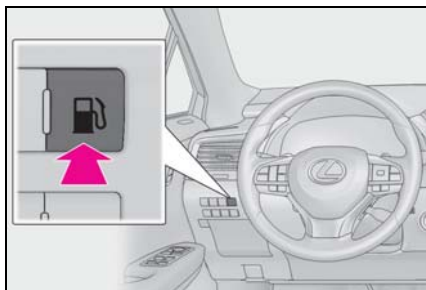


- 1** Press the switch to open the fuel filler door.

The fuel filler door will open within about 10 seconds of the switch being pressed. Before refueling is possible, a message will be shown on the multi-information display in the instrument cluster to indicate the progress of the fuel filler door opener.

- 2** Open the fuel filler door until it is securely locked.

 
- 3** Turn the fuel tank cap slowly and remove it, then put it into the holder on the fuel filler door.

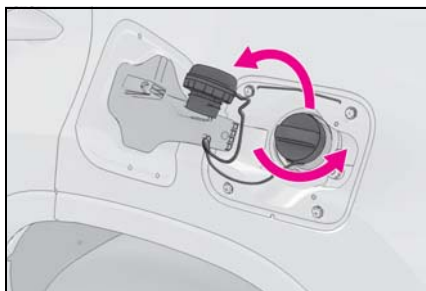

Power Back Door

Opening/closing the power back door

 ■ From the inside

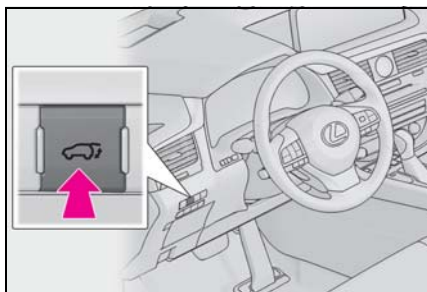

Press and hold the switch for approximately 1 second.

A buzzer will sound and the power back door will automatically open or close.

■ From the outside

▶ Smart access system with push-button start

 
→P.18

▶ Wireless remote control

→P.16

▶ Back door opener switch

● Open

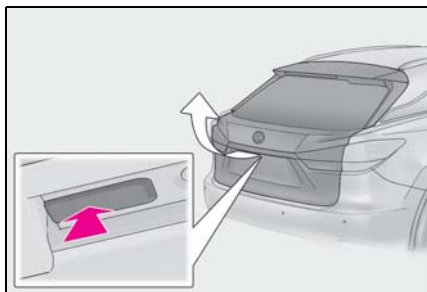


When the power back door is unlocked:
Press the back door opener switch.

When the power back door is locked:
While carrying an electronic key, press and hold the back door opener switch.

A buzzer will sound and the power back door will automatically open.

 
● Close

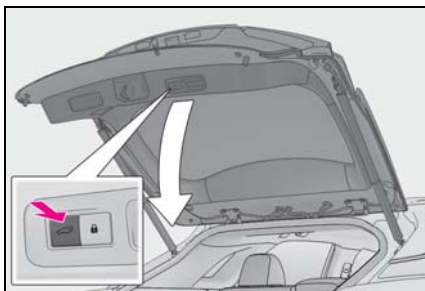

Press the  switch.

A buzzer will sound and the power back door will automatically close.

 ● Close the back door and lock all doors (close & lock function)

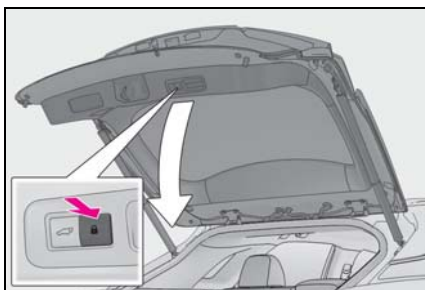


Press the  switch.

The power back door will close and all of the doors will be locked at the same time.

A different buzzer than the normal one will sound and the power back door will begin closing automatically. When the power back door is closed, all of the doors will lock simultaneously and operation signals will indicate that all of the doors have been locked.

 ■ Hands Free Power Back Door (if equipped)

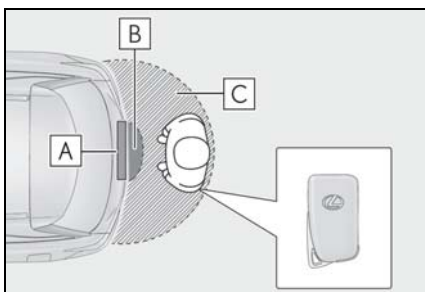


1 While carrying an electronic key, stand within the smart access system with push-button start operation range, approximately 19.7 to 23.6 in. (50 to 60 cm) from the rear bumper.

A Kick sensor

B Hands Free Power Back Door operation detection area

 C Smart access system with push-button start operation detection area

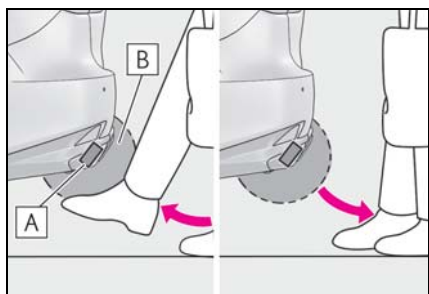

2 Perform a kick operation by moving your foot to within approximately 3.9 in. (10 cm) of the rear bumper and then pulling it back.

- Perform the entire kick operation within 1 second.
- The Hands Free Power Back Door will not start operating while a foot is detected under the rear bumper.
- Operate the Hands Free Power Back Door without contacting the rear bumper with your foot.
- If another electronic key is in the cabin or luggage compartment, it may take slightly longer than normal for the operation to occur.

A Kick sensor

B Hands Free Power Back Door operation detection area

3 When the kick sensor detects that your foot is pulled back, a buzzer will sound and the power back door will automatically fully open/close.

If kick operation is performed again in the middle of back door operating, the operation will stop.

■ Hands free close & lock function* (vehicles with Hands Free Power Back Door)

*: This setting can be customized by your Lexus dealer.

If the power back door is closed using a Hands Free Power Back Door close operation, all of the doors will be locked at the same time.

A different buzzer than the normal one will sound before the power back door begins to close. The door lock operation signals will operate to indicate that the power back door has closed and all of the doors have locked simultaneously.

What to do if...

List of Warning/Indicator Lights

Immediately stop the vehicle in a safe place and contact your Lexus dealer. Continuing to drive the vehicle may be dangerous.



(U.S.A.)

Brake system warning light



Charging system warning light



(Canada)

(Red)

Immediately stop the vehicle in a safe place and contact your Lexus dealer.



Low engine oil pressure warning light

Have the vehicle inspected by your Lexus dealer immediately.



(yellow)

Brake system warning light



(Blinking and then continuously on)

Tire pressure warning light



(U.S.A.)

Malfunction indicator lamp



(flashes)

Intuitive parking assist OFF indicator (if equipped)



(Canada)



(flashes)

RCTA OFF indicator (if equipped)



SRS warning light



(flashes)

PKSB OFF indicator (if equipped)



(U.S.A.)

ABS warning light



(flashes or illuminates)

PCS warning light



(Canada)



Slip indicator



(Red or yellow)

Electric power steering system warning light



(Flashes)

Brake hold operated indicator

For further information, refer to the "OWNER'S MANUAL".

What to do if...

Follow the correction procedures.



Brake Override System warning light/Drive-Start Control warning light



Low fuel level warning light



Driver's and front passenger's seat belt reminder light



Rear passengers' seat belt reminder light



Rear passengers' seat belt reminder light



(Illuminates without blinking)

Tire pressure warning light*



(orange)

LTA indicator



Intuitive parking assist OFF indicator (if equipped)



RCTA OFF indicator (if equipped)



PKSB OFF indicator (if equipped)



PCS warning light



(U.S.A.)

Parking brake indicator



(Canada)



Master warning light

Stop and check.



High coolant temperature warning light



Hybrid system overheat warning light

For further information, refer to the "OWNER'S MANUAL".

What to do if...

See the “OWNER’S MANUAL”



Turn signal indicator



Headlight indicator (U.S.A.)



Tail light indicator (Canada)



Headlight high beam indicator



Automatic High Beam indicator



Fog light indicator (if equipped)



PCS warning light



Cruise control indicator



Dynamic radar cruise control indicator



Cruise control “SET” indicator



LTA indicator



LTA indicator



LTA indicator



BSM outside rear view mirror indicators (if equipped)



BSM indicator (if equipped)



Intuitive parking assist OFF indicator (if equipped)



RCTA OFF indicator (if equipped)



PKSB OFF indicator (if equipped)



Slip indicator



VSC OFF indicator



Smart access system with push-button start indicator



“READY” indicator



EV drive mode indicator



(U.S.A.)
Parking brake indicator



(Canada)



Brake hold standby indicator



Brake hold operated indicator



EV indicator



Low outside temperature indicator



Security indicator

For further information, refer to the “OWNER’S MANUAL”.

What to do if...

See the “OWNER’S MANUAL”



(U.S.A.)

(U.S.A.)

“AIR BAG
ON/OFF”
indicator



(Canada)

(Canada)

● Drive mode indicators

► Except F SPORT models



Eco drive mode indicator



Sport mode indicator
(if equipped)

► F SPORT models



Customize mode indicator



Sport S mode indicator



Eco drive mode indicator



Sport S+ mode indicator



Sport mode indicator
(if equipped)

For further information, refer to the “OWNER’S MANUAL”.

*: It also comes on due to natural causes such as natural air leaks and tire inflation pressure changes caused by temperature. Adjust the tire inflation pressure to the specified level. The light will turn off after a few minutes. In case the light does not turn off even if the tire inflation pressure is adjusted, have the system checked by your Lexus dealer.

 
What to do if...

If the electronic key does not operate properly


Locking and unlocking the doors

■ Unlocking the door

Use the mechanical key in order to perform the following operations:

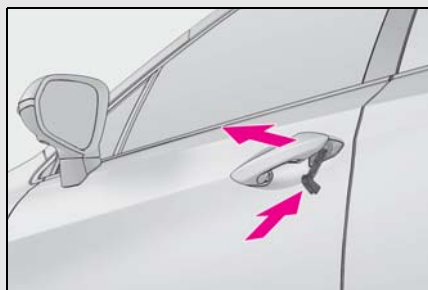

 
- 1 Insert the mechanical key while pulling on the driver's door handle.

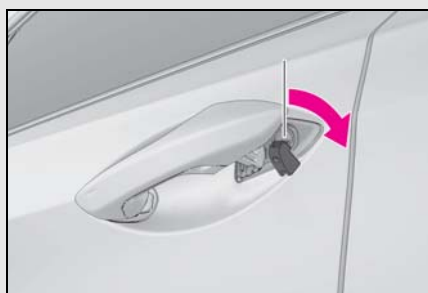

- 2 Unlock the door.
Turning the key rearward unlocks the driver's door. Turning the key again unlocks the other doors.

- 3 Remove the key, return the handle, and then pull the handle again.

 ■ Locking the door

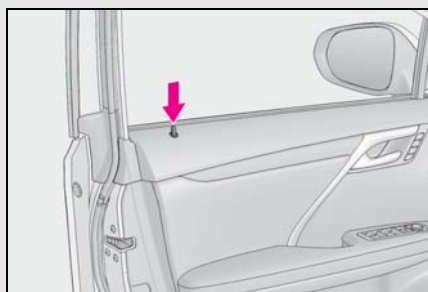

- 1 With the door open, push down the inside lock button.

- 2 Close the door.

Starting the hybrid system



- 1** Ensure that the shift lever is in P and depress the brake pedal.
- 2** Touch the Lexus emblem side of the electronic key to the power switch.

When the electronic key is detected, a buzzer sounds and the power switch will turn to ON mode.

When the smart access system with push-button start is deactivated in customization setting, the power switch will turn to ACCESSORY mode.

- 3** Firmly depress the brake pedal and check that  is shown on the multi-information display.
- 4** Press the power switch shortly and firmly.

In the event that the hybrid system still cannot be started, contact your Lexus dealer.

If the electronic key battery becomes depleted, a warning message will be shown on the multi-information display. Replace the battery with a new one. For instructions on replacing the battery, refer to the "OWNER'S MANUAL".

If you need further assistance, contact your Lexus dealer.

What to do if...

If the hybrid system doesn't start

Make sure that the correct operating procedures have been followed.

Brake pedal

Make sure that the brake pedal is firmly depressed when attempting to start the hybrid system. (→P.19)

If the hybrid system still does not start, see the "OWNER'S MANUAL" for more information or contact your Lexus dealer.



Your Lexus dealer

Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, please call the following number:

■ U.S. OWNERS

- In the U.S. mainland or Canada:

Lexus Roadside Assistance

1-800-25-LEXUS or 1-800-255-3987 (Toll-Free)

- In Hawaii:

Servco Automotive Roadside Assistance/Customer Services

1-800-25-LEXUS or 1-800-255-3987 (Toll-Free)

■ CANADIAN OWNERS

- In Canada or the U.S. mainland:

Lexus Roadside Assistance/Customer Service

1-800-26-LEXUS or 1-800-265-3987 (Toll-Free)

Please access our **websites** for further information.

- The U.S. mainland: **www.lexus.com**

- Hawaii: **www.servcolexus.com**

- Canada: **www.lexus.ca**

©2020 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.