



ToyotaOwnersOnline.com

CUSTOMER EXPERIENCE CENTER

1-800-331-4331

YARIS LB

2 0 1 0

QUICK REFERENCE
GUIDE



Mixed Sources

Product group from well-managed
forests, controlled sources and
recycled wood or fiber
www.fsc.org Cert no. SGS-COC-005612
© 1996 Forest Stewardship Council



2010 Yaris Liftback

This *Quick Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Quick Reference Guide* is not intended as a substitute for the *Owner's Manual* located in your vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Yaris.


! A word about safe vehicle operations

This *Quick Reference Guide* is not a full description of Yaris operations. Every Yaris owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Quick Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.


Child comfort guide

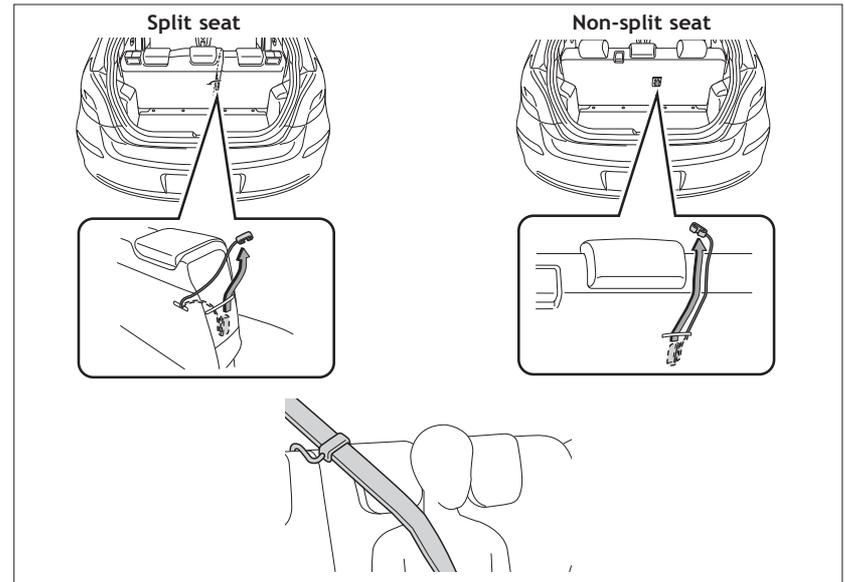


Rear seat center position guides provide added comfort for children who have outgrown child restraints.

Spare tire & tools

Tool location

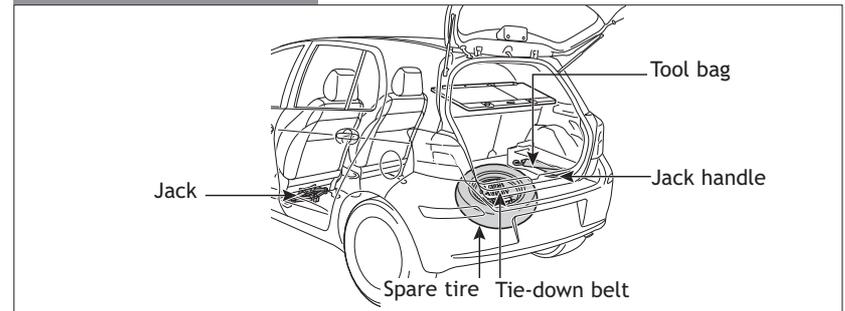

Removing the spare tire

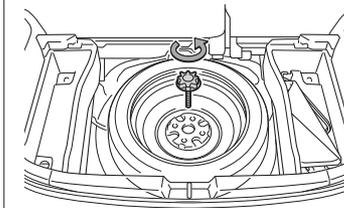

Loosen and remove the bolt.
Refer to the *Owner's Manual* for tire changing and jack positioning procedures.

INDEX

OVERVIEW

Engine maintenance	7
Fuel tank door release and cap	6
Hood release	7
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Keyless entry*	6

FEATURES/OPERATIONS

Air Conditioning/Heating	13
Audio	14
Automatic Transmission	8
Clock	14
Cruise control	13
Door-Back	15
Light control-Instrument panel	9
Lights & turn signals	9
Luggage storage box	15
Parking brake	8
Power outlet	15
Seat adjustments-Front	10
Seat adjustments-Rear	10
Seat-Folding rear seat	11
Seats-Head restraints	10
Tilt steering wheel	8
VSC OFF button	15
Windows-Power	12
Windshield wipers & washers	12


SAFETY AND EMERGENCY FEATURES

Child comfort guide	17
Door locks-Power	16
Seatbelts	16
Spare tire & tools	17
Tire Pressure Monitoring (warning) System	16


* Visit your Toyota dealer for information on customizing this feature.

OVERVIEW

Instrument panel

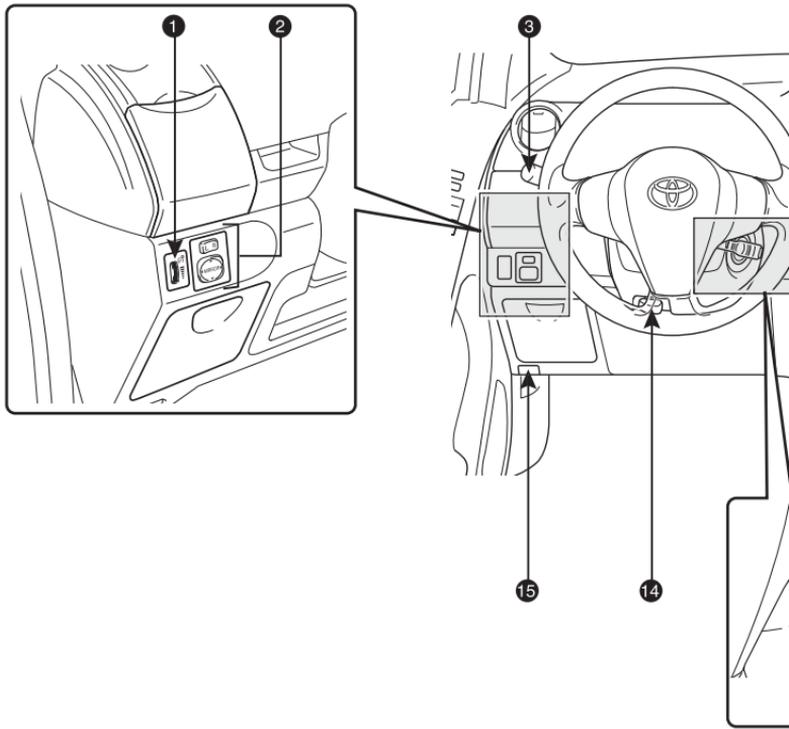

- ① Instrument panel light control
- ② Power rearview mirror control switches*
- ③ Headlight, turn signal and front fog light* controls
- ④ Wiper and washer controls
- ⑤ Emergency flasher switch
- ⑥ "AIR BAG ON" and "AIR BAG OFF" indicator
- ⑦ Front passenger seatbelt reminder light
- ⑧ Audio system*

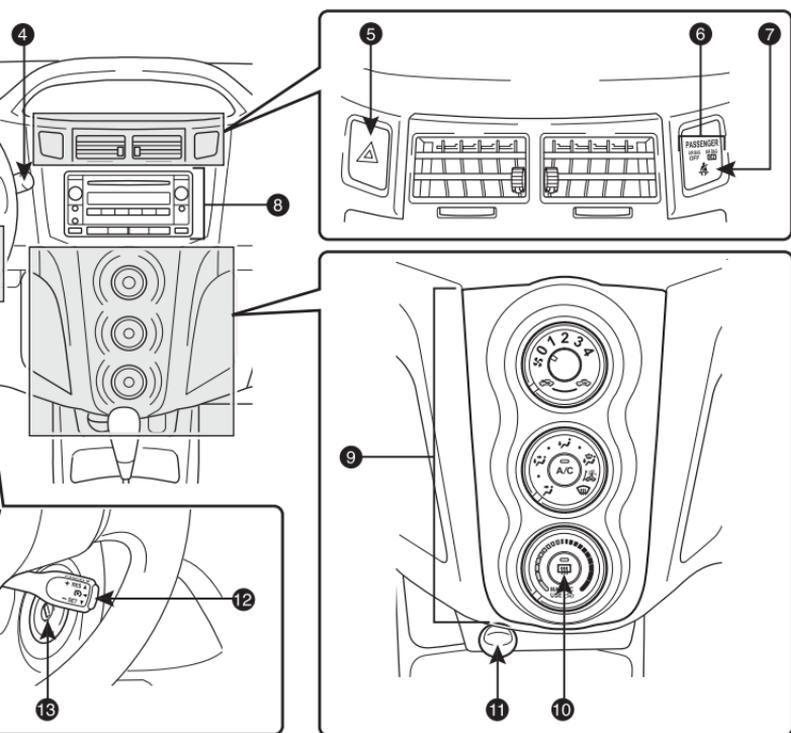


- 9 Air Conditioning controls
- 10 Rear window/Outside rearview mirror defogger switch*
- 11 12V DC Power outlet
- 12 Cruise control*
- 13 Ignition switch
- 14 Tilt steering lock release lever
- 15 Hood release


* If equipped

Instrument cluster

Without tachometer

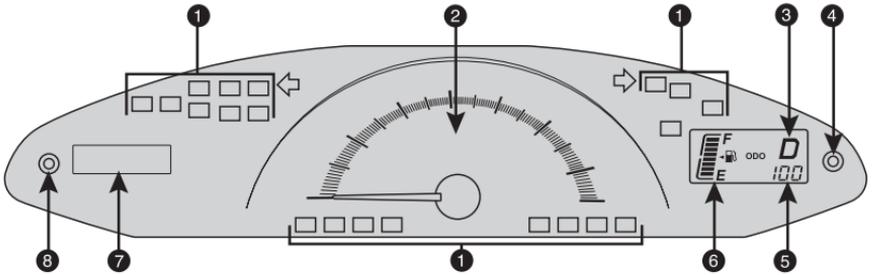

With tachometer

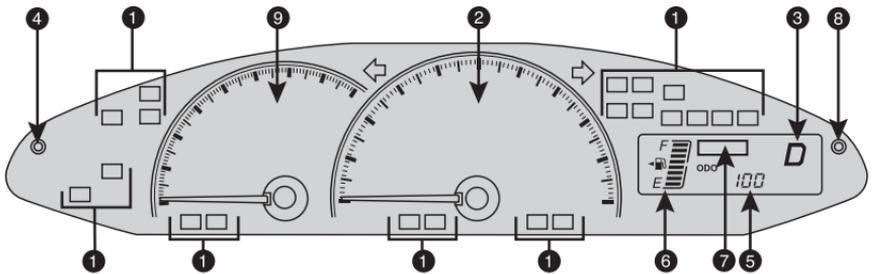

- ① Service indicator and reminder
- ② Speedometer
- ③ Automatic Transmission shift position indicator
- ④ Odometer/Trip meter switch and trip meter reset button
- ⑤ Odometer and two trip meters
- ⑥ Fuel gauge
- ⑦ Clock
- ⑧ Clock reset button
- ⑨ Tachometer

Indicator symbols

For details, refer to “Indicators and warning lights,” Section 2-2, 2010 *Owner’s Manual*.

- | | |
|------------------|--|
| BRAKE | Brake system warning ^{1,2} |
| | Driver seatbelt reminder ²
(alarm will sound if speed is over 12 mph) |
| PASSENGER | Front passenger seatbelt reminder ²
(alarm will sound if speed is over 12 mph) |
| | Charging system warning ^{1,2} |


¹ If indicator does not turn off within a few seconds of starting engine, there may be a malfunction. Have vehicle inspected by your Toyota dealer.

	Malfunction/Check Engine indicator ^{1,2}
	Low engine oil pressure warning ^{1,2}
	Open door warning ²
	Airbag SRS warning ^{1,2}
	Low windshield washer fluid level warning ²
P/S	Electric power steering system warning ^{1,2}
	Low fuel level warning
MAINT REQD	Engine oil replacement reminder ^{1,2}
AIR BAG ON	AIR BAG ON indicator
AIR BAG OFF	AIR BAG OFF indicator
	Headlight low beam indicator
	Headlight high beam indicator
	Front fog light indicator
	Turn signal indicator
	High engine coolant temperature warning ^{1,2}
	Low engine coolant temperature indicator ³
	Slip indicator ^{1,2}
	Vehicle Stability Control OFF indicator ¹
TRAC OFF	Traction Control OFF indicator
	Cruise control indicator
SET	Cruise control SET indicator
ABS	Anti-lock Brake System warning ^{1,2}
	Low Tire Pressure Warning ^{1,2}

² For details, refer to “If a warning light turns on or a warning buzzer sounds,” Section 5-2, 2010 Owner’s Manual.

³ For details, refer to “If your vehicle overheats,” Section 5-2, 2010 Owner’s Manual.

Fuel tank door release and cap

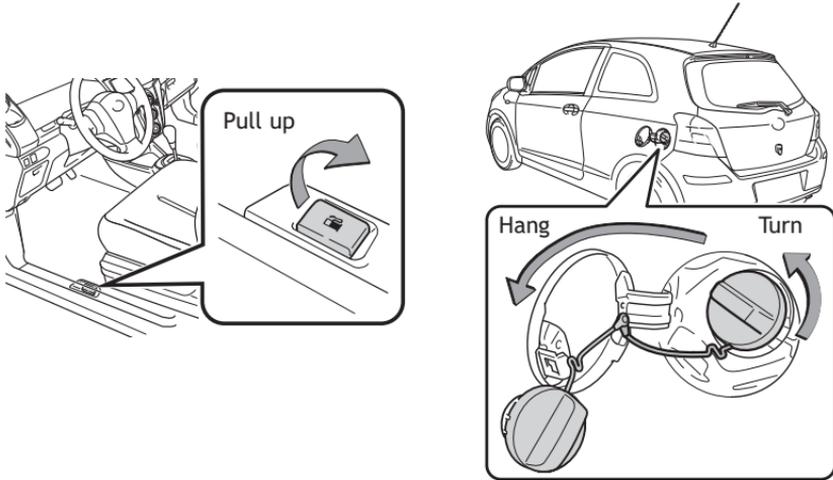


Pull up

Hang **Turn**

NOTE: Tighten until one click is heard. If the cap is not tightened enough, Check Engine “” indicator may illuminate.


Keyless entry (if equipped)

Locking operation

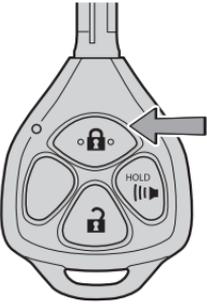

Push 

Unlocking operation

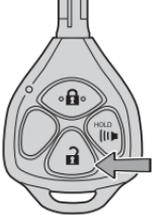

Push ONCE: Driver door
TWICE: All doors 


NOTE: If a door is not opened within 30 seconds of unlocking, all doors will relock for safety.

Panic button




Push and hold 

Hood release

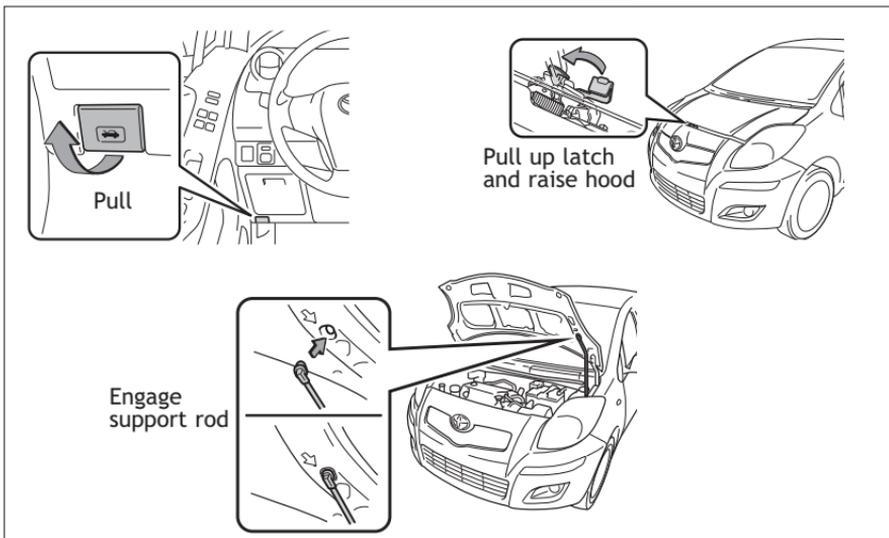

Engine maintenance

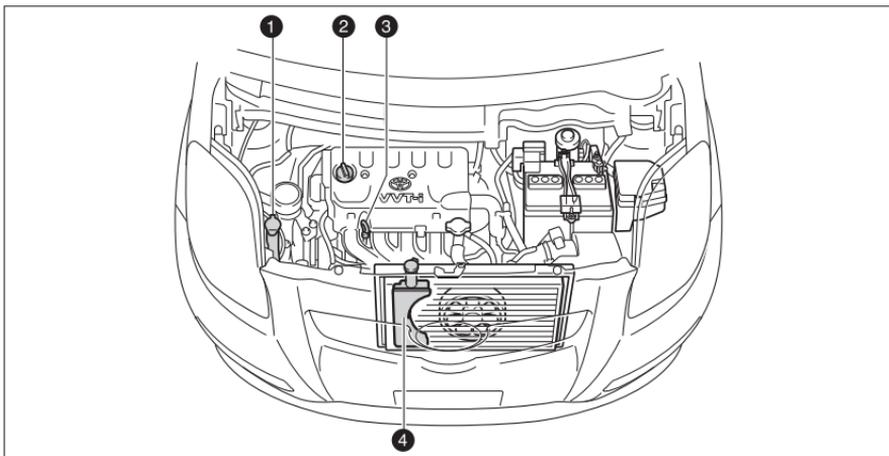


- 1 Windshield washer and rear window washer fluid tank
- 2 Engine oil filler cap
- 3 Engine oil level dipstick
- 4 Engine coolant reservoir

NOTE: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the "Warranty Maintenance Guide."

FEATURES/OPERATIONS


Automatic Transmission (if equipped)

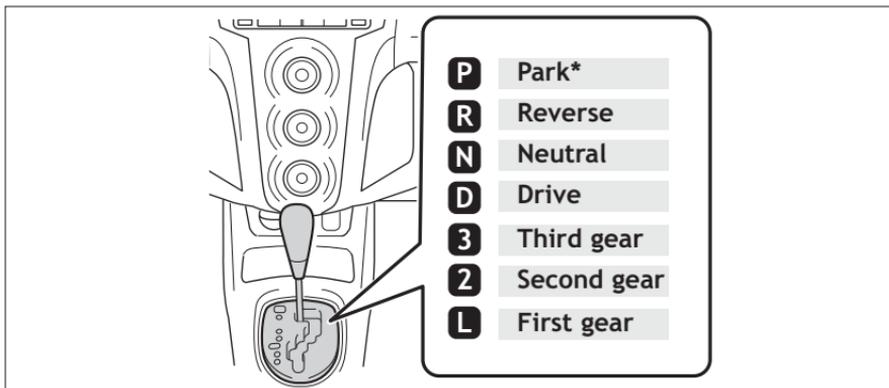

* The ignition switch must be "ON" and the brake pedal depressed to shift from Park.

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.


Tilt steering wheel

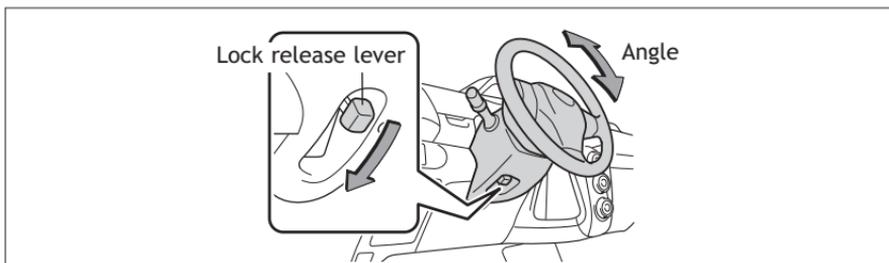


Hold wheel, push lever down, set angle and return lever.

NOTE: Do not attempt to adjust while the vehicle is in motion.

Parking brake

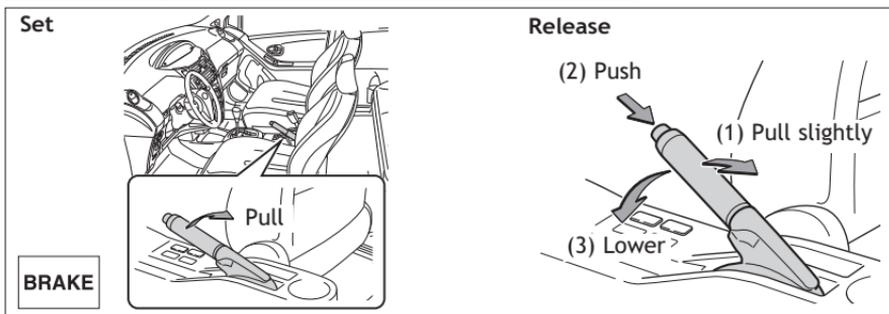


Light control-Instrument panel

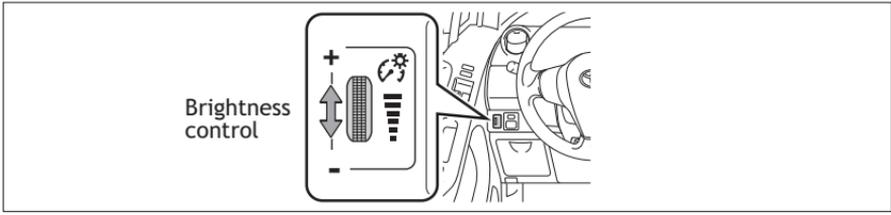


Lights & turn signals

Headlights

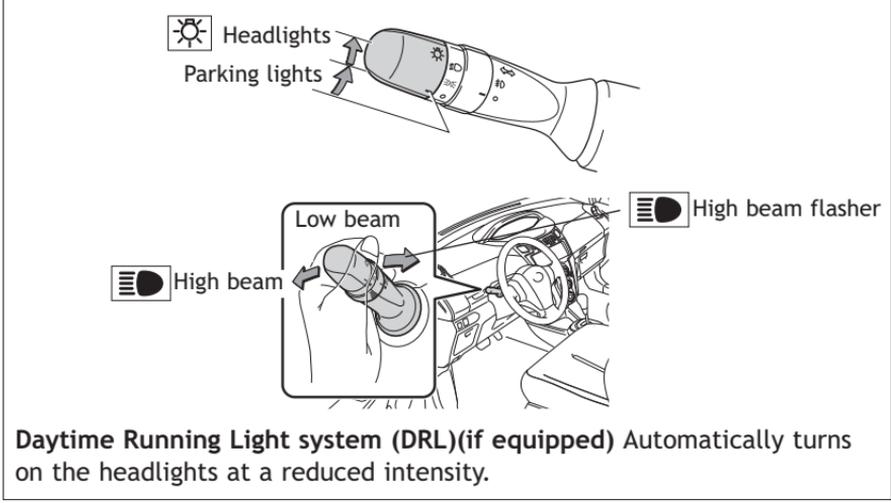


Daytime Running Light system (DRL)(if equipped) Automatically turns on the headlights at a reduced intensity.

Turn signals

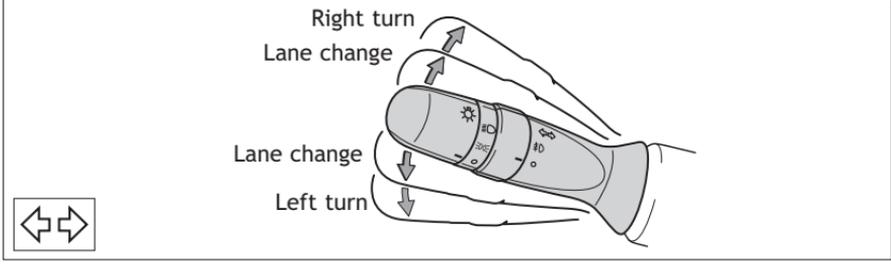

Front fog lights (if equipped)

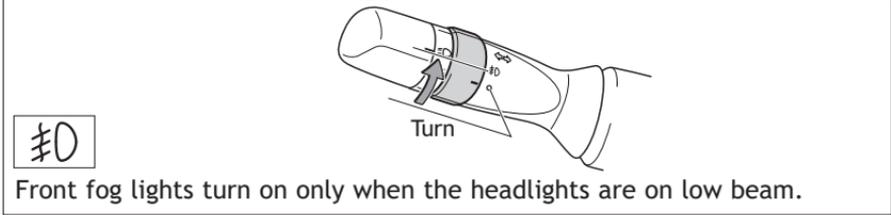

Front fog lights turn on only when the headlights are on low beam.

Seat adjustments-Front

Seat position
(forward/backward)




Seatback angle

Seat adjustments-Rear

Non-split seat


Angle

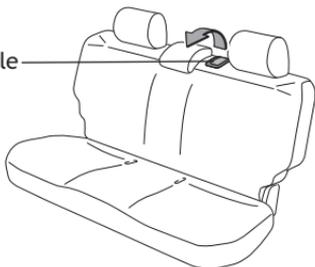

Split seat

Seatback angle/Fold

Position

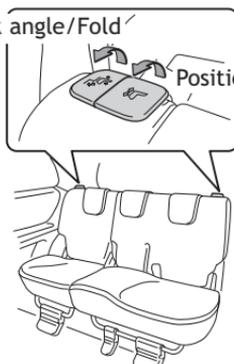


Seats-Head restraints


Front seats

Height


Lock release button

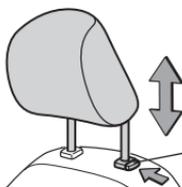

Rear seats (non-split seat)

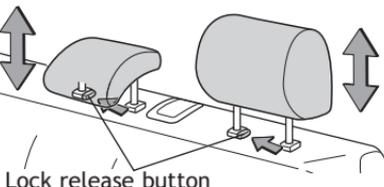


Rear seat (split seat)

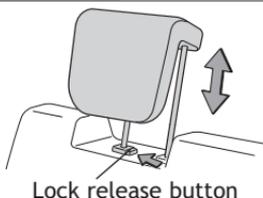


Seat-Folding rear seat


Before folding

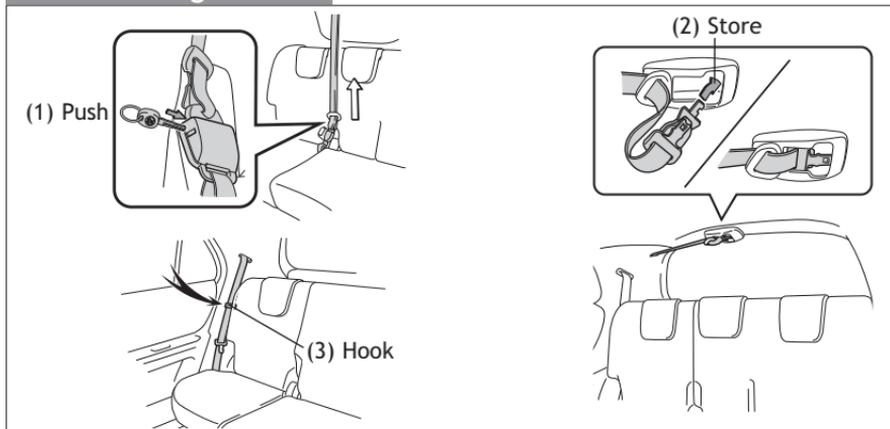

Fold (split seat)


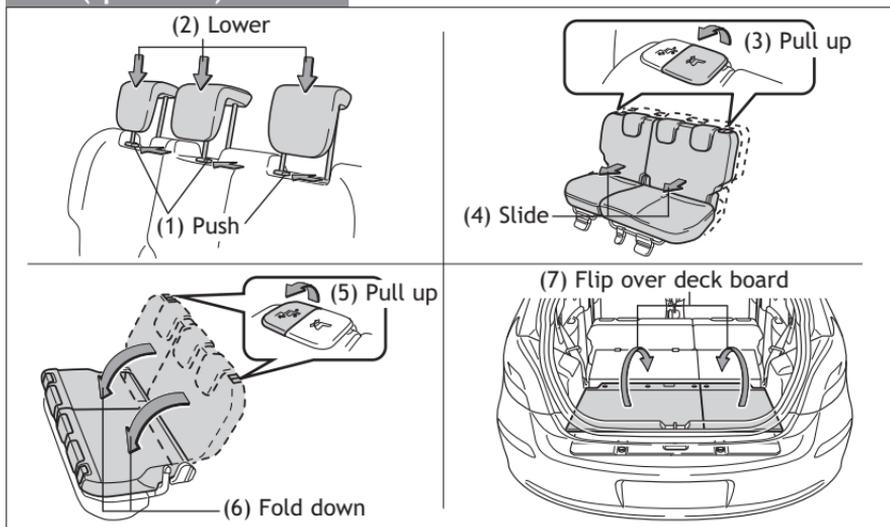


Fold (non-split seat)

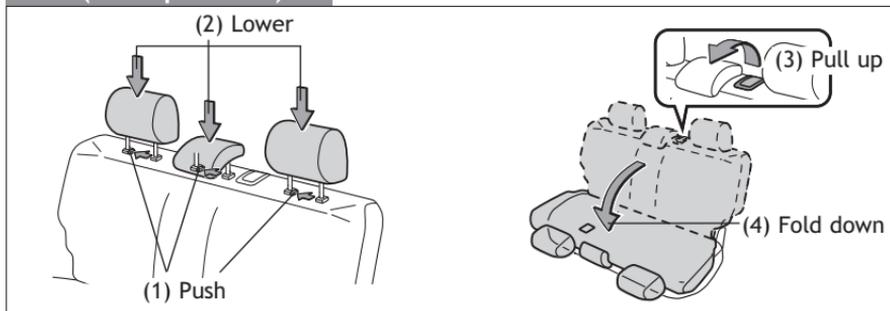

Windows-Power (if equipped)

Driver side

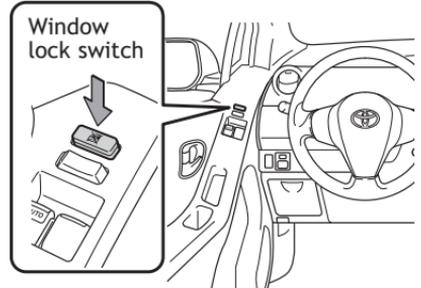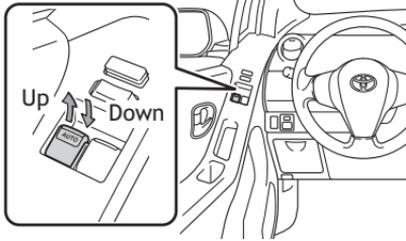

Window operation


Automatic operation (driver's window only) Push the switch completely down and release to fully open. To stop window midway, lightly pull the switch up.

Window lock switch Deactivates all passenger windows. Driver's window remains operable.


Windshield wipers & washers

Front


*** Intermittent windshield wiper frequency adjustment (if equipped)**
Rotate to increase/decrease wiper frequency.

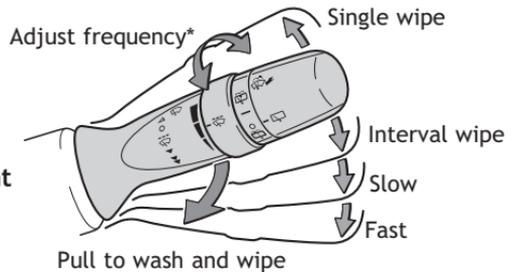

Rear (if equipped)

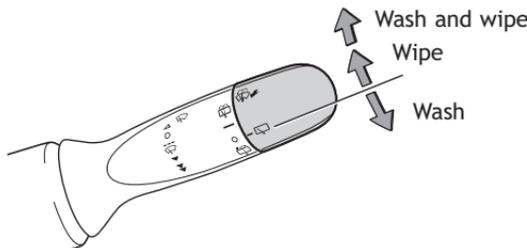


Air Conditioning/Heating

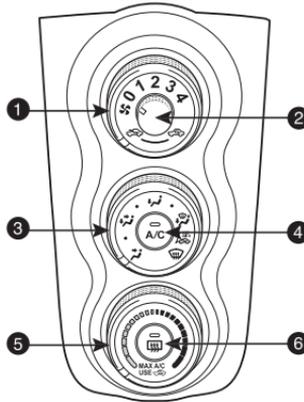


- ❶ Fresh or recirculated cabin air
- ❷ Fan speed
- ❸ Airflow vent
In “” mode, use fresh air to reduce window fogging.
- ❹ Air Conditioning ON/OFF
- ❺ Temperature selector
- ❻ Rear window defogger

Cruise control (if equipped)

Turning system ON/OFF

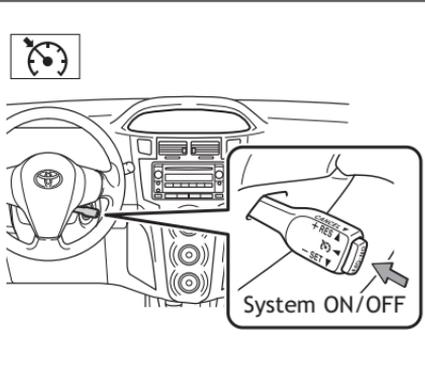

Functions

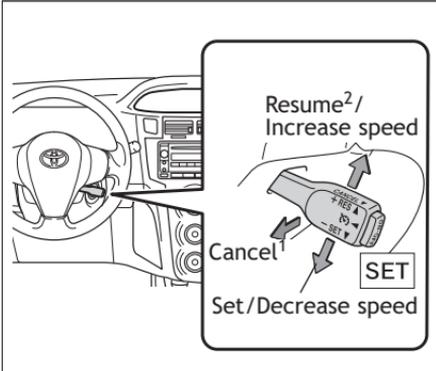


¹ The set speed may also be cancelled by depressing the brake pedal or the clutch pedal (Manual Transmission).

² Unless vehicle speed drops below 10 mph, the set speed may be resumed once vehicle exceeds 25 mph.

Refer to the *Owner's Manual* for more details.

Audio (if equipped)

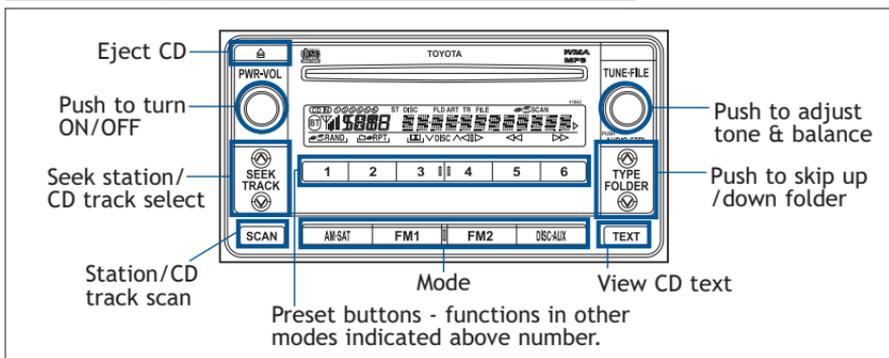

CD PLAYER


To scan tracks on a disc Push "SCAN." Push again to hold selection.

RADIO

To preset stations Tune in the desired station and hold down a preset button (1-6) until you hear a beep. Push desired preset button (1-6) to select.


To scan stations Push "SCAN." Push and hold to scan preset stations. Push again to hold selection.

AUX audio jack (if equipped)

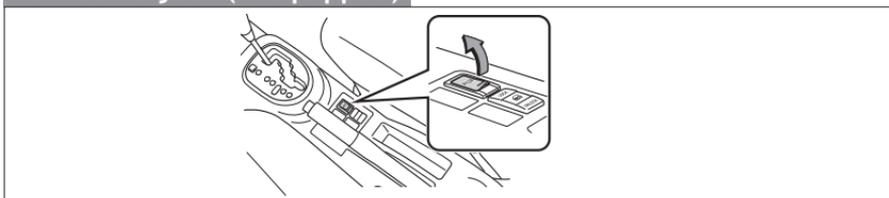

By inserting a mini plug of a commercially available component into the AUX audio jack, you can listen to music from a portable audio device through the vehicle's speaker system while in AUX mode.


Clock

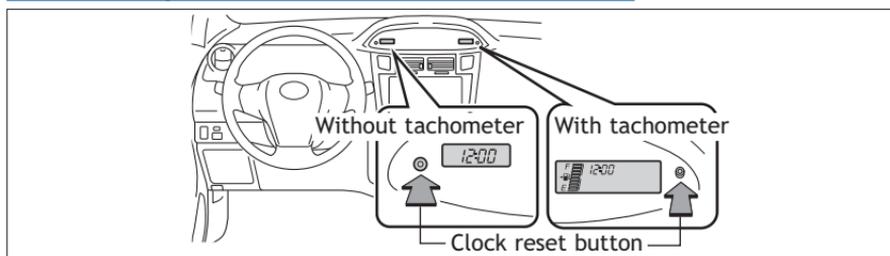

Press and hold clock reset button for adjustment mode. Press again to adjust minutes and hours, waiting 5 seconds after each.


Refer to the *Owner's Manual* for adjustment instructions.

Power outlet

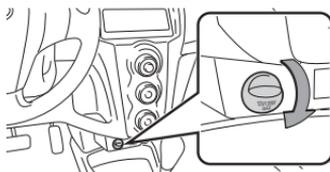

Designed for 12V car accessories. Key must be in the “ACC” or “ON” position to be used.

VSC OFF button

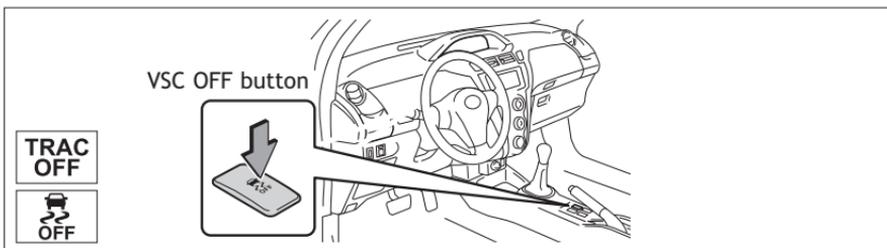


The VSC OFF button is used to switch between modes related to the TRAC and VSC.

Refer to Section 2-4 of the *Owner's Manual* for more information.

Door-Back

Open/Close

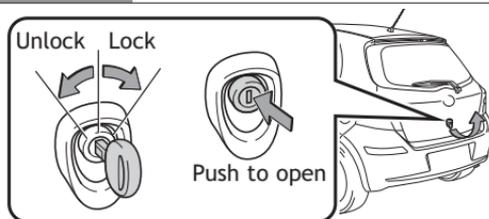


Luggage storage box

Open


Right side:
Turn to unlock

Left side:
Turn to unlock

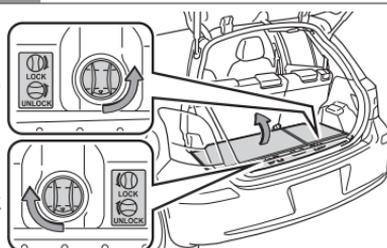


SAFETY AND EMERGENCY FEATURES

Door locks-Power (if equipped)

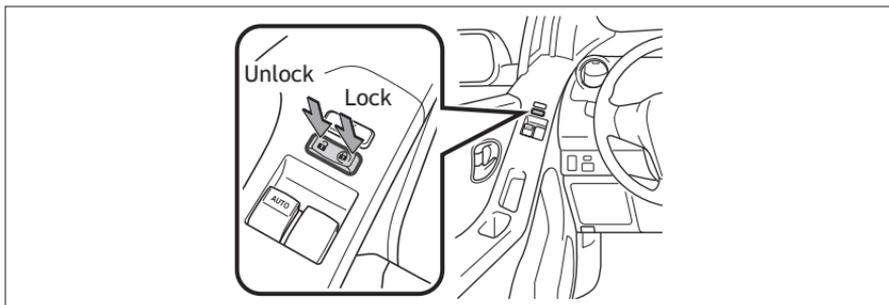

Seatbelts

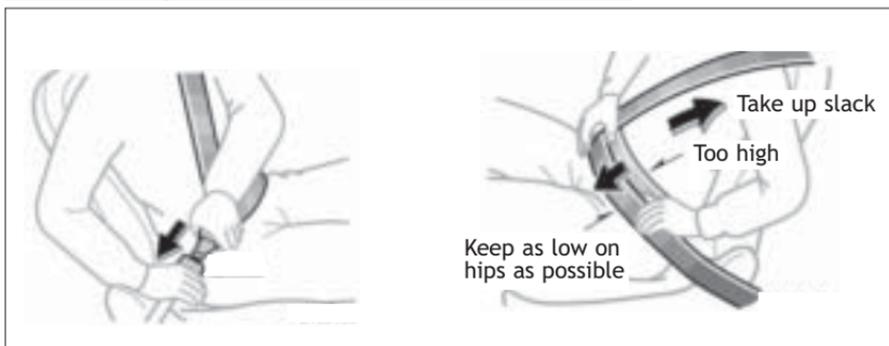

If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seatbelts, and how to install a child restraint system, refer to the *Owner's Manual*.

Tire Pressure Monitoring (warning) System

If tire pressure becomes critically low on any of the tires (excluding the spare), “(!)” indicator will illuminate. Correctly adjusting tire inflation will turn off the light after a few minutes. If the light does not turn off, have the system checked by your Toyota dealer.

Refer to the *Owner's Manual* for more details.