

ToyotaOwnersOnline.com

CUSTOMER EXPERIENCE CENTER

1-800-331-4331

LAND CRUISER

2 0 1 0

QUICK REFERENCE GUIDE



Mixed Sources

Product group from well-managed
forests, controlled sources and
recycled wood or fiber
www.fsc.org Cert no. SGS-COC-005612
© 1996 Forest Stewardship Council



2010 Land Cruiser

This *Quick Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Quick Reference Guide* is not intended as a substitute for the *Owner's Manual* located in your vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Land Cruiser.

! A word about safe vehicle operations


This *Quick Reference Guide* is not a full description of Land Cruiser operations. Every Land Cruiser owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Quick Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

Doors-Child safety locks


Rear door

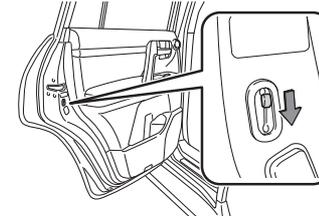


Moving the lever to "LOCK" will allow the door to be opened only from the outside.

Spare tire & tools

Tool location

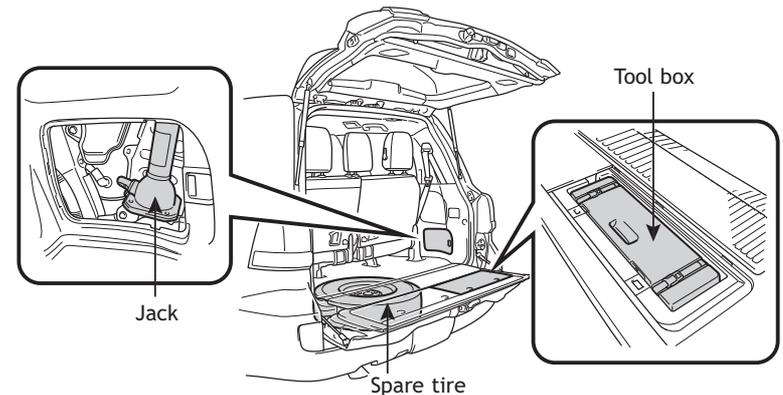

Removing the spare tire

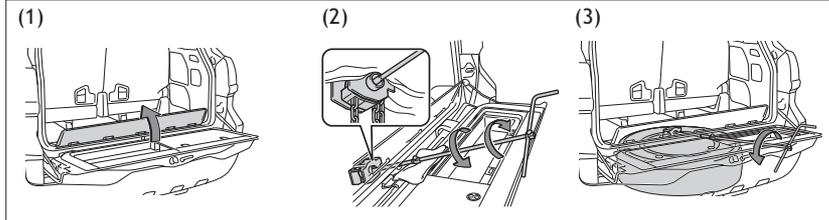

- (1) Remove the cover.
- (2) Insert the jack handle extension into the lowering screw.
- (3) Lower the spare tire completely to the ground.

Refer to the *Owner's Manual* for tire changing and jack positioning procedures.

INDEX

OVERVIEW

| | |
|---------------------------------------|----------|
| Engine maintenance | 9 |
| Fuel tank door release and cap | 8 |
| Hood release | 8 |
| Indicator symbols | 4-5 |
| Instrument cluster | 4 |
| Instrument panel | 2-3 |
| Keyless entry¹ | 6 |
| Light control-Instrument panel | 9 |
| Smart Key system^{1,2} | 7 |

FEATURES/OPERATIONS

| | |
|--|-----------|
| Air Conditioning/Heating | 18-19 |
| Audio | 20-21 |
| Auto lock functions¹ | 10 |
| Automatic Transmission | 10 |
| Back door | 17 |
| Clock | 24 |
| Cool box | 27 |
| Crawl control | 22 |
| Cruise control | 22 |
| Cup holders | 27 |
| Door locks | 25 |
| Four-wheel drive | 11 |
| Garage door opener (HomeLink®) ³ | 23 |
| Lights¹ & turn signals | 15 |
| Moonroof | 17 |
| Multi-information display² | 24 |
| Parking brake | 27 |
| Power outlets-12V DC | 23 |
| Power outlets-115V AC | 23 |
| Rear seat entertainment system | 26 |
| Seat adjustments-Front | 12 |
| Seat adjustments-Rear | 12 |
| Seat heaters | 19 |
| Seats-Head restraints | 12 |
| Seats-Tumbling second row seats | 13 |
| Seats-Tumbling third row seats | 14-15 |
| Steering lock release | 11 |
| Tilt and telescopic steering wheel | 26 |
| Telephone controls (Bluetooth®) | 25 |
| Windows-Power | 16 |
| Window wipers & washers | 16 |

SAFETY AND

EMERGENCY FEATURES

| | |
|---|----|
| Doors-Child safety locks | 29 |
| Seat belts | 28 |
| Seat belts-Shoulder belt anchor | 28 |
| Spare tire & tools | 29 |
| Tire Pressure Monitoring (warning) System | 28 |

¹ Visit your Toyota dealer for information on customizing this feature.



² Programmable by customer. Refer to the Owner's Manual for instructions and more information.

³ HomeLink® is a registered trademark of Johnson Controls, Inc.




OVERVIEW

Instrument panel

Steering wheel controls (if equipped)

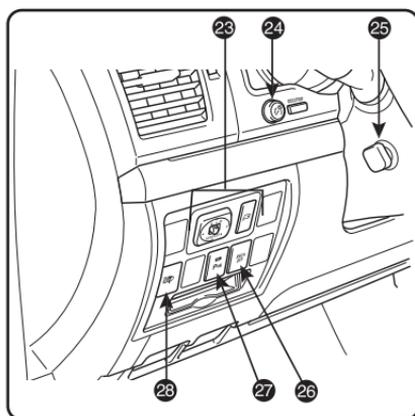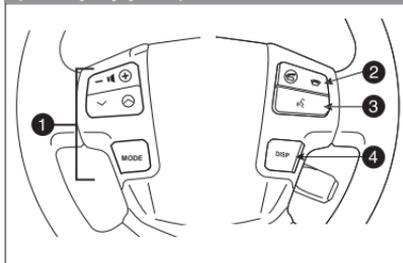

- 1 Steering wheel audio controls
- 2 Telephone controls^{1,2}
- 3 Voice command button¹
- 4 Multi-information display button
- 5 Headlight, turn signal and front fog light controls
- 6 Multi-information display
- 7 Wiper and washer controls
- 8 Audio system²
- 9 "AIR BAG ON" and "AIR BAG OFF" indicator
- 10 Clock
- 11 Front passenger seatbelt reminder light
- 12 Theft deterrent system/Engine immobilizer indicator
- 13 Emergency flasher button
- 14 Windshield wiper de-icer switch¹
- 15 Outside rearview mirrors/Rear window defogger button
- 16 Air Conditioning controls²
- 17 "ENGINE START STOP" switch

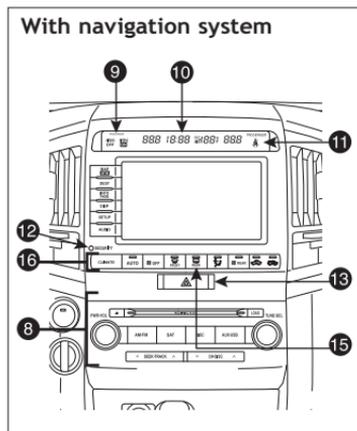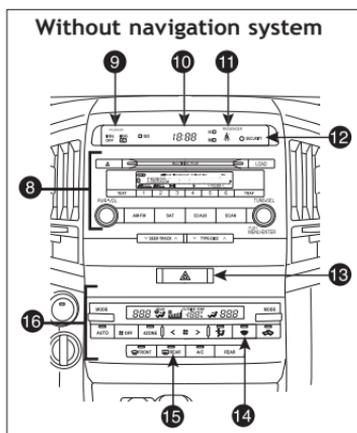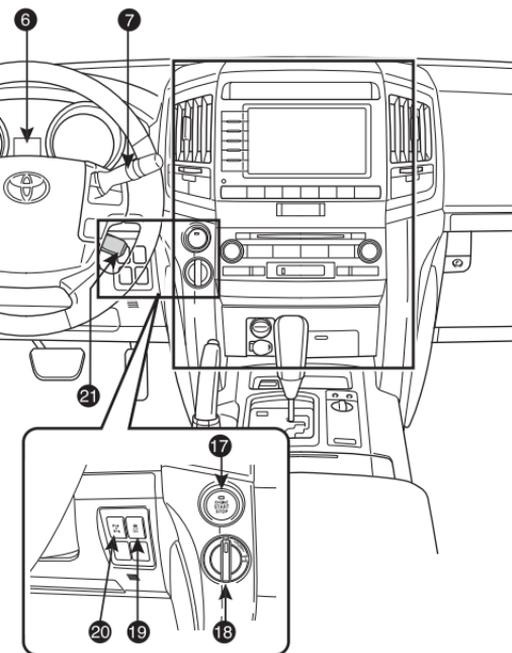


- 18 Four-wheel drive control switch
- 19 VSC/TRAC OFF switch
- 20 Center differential lock/unlock switch
- 21 Cruise control
- 22 Tire Pressure Monitoring (warning) System reset
- 23 Power rearview mirror control
- 24 Instrument panel light control
- 25 Tilt and telescopic steering control
- 26 Roll Sensing of Curtain shield Airbag OFF switch
- 27 Intuitive park assist switch¹
- 28 Headlight cleaner¹

¹ If equipped

² Vehicles with navigation system: for details, refer to the "Navigation System Owner's Manual."

Instrument cluster

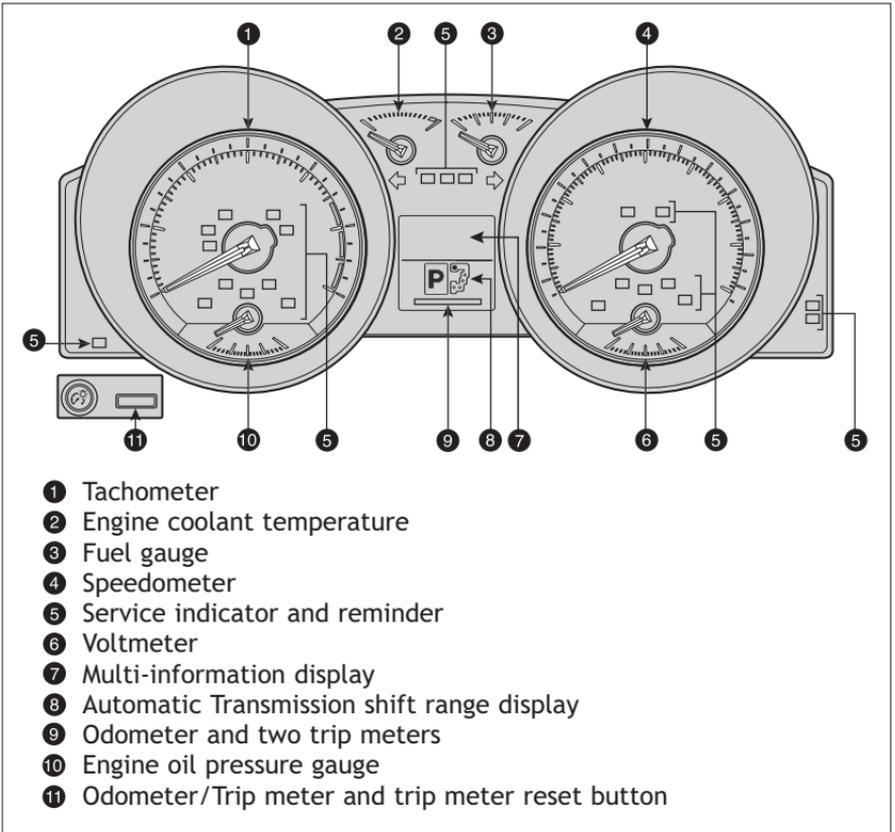

Indicator symbols

For details, refer to “Indicators and warning lights,” Section 2-2, 2010 *Owner’s Manual*.

| | |
|--|---|
| BRAKE | Brake system warning ¹ |
| | Driver seatbelt reminder (alarm will sound if speed is over 12 mph) |
| PASSENGER | Front passenger seatbelt reminder (alarm will sound if speed is over 12 mph) |
| | Charging system warning ¹ |
| PASSENGER AIR BAG OFF AIR BAG ON | AIR BAG ON and AIR BAG OFF indicator ¹ |
| PCS | Pre-Collision System warning light ¹ |
| | Malfunction/Check Engine indicator ¹ |

| | |
|---|---|
| A/T P | Unengaged Park warning light |
|  | Low fuel level warning |
|  | Open door warning |
|  | Airbag SRS warning ¹ |
|  | Master warning ¹ |
|  | Crawl control indicator ¹ |
|  | Low Tire Pressure Warning ¹ |
| RSCA OFF | Roll Sensing of Curtain shield Airbag OFF indicator ¹ |
| ECT PWR | Power mode indicator |
| 2nd STRT | Automatic Transmission second start indicator |
|  |  Headlight low/high beam indicator |
|  | Turn signal indicator |
|  | Fog light indicator |
|  | Slip indicator ¹ |
| 4LO | Low speed four-wheel drive indicator |
|  | Center differential lock indicator |
| CRUISE | Cruise control indicator |
| ABS | Anti-lock Brake System warning ¹ |

¹ If indicator does not turn off within a few seconds of starting engine, there may be a malfunction. Have vehicle inspected by your Toyota dealer.

Keyless entry

Locking operation



Push



Unlocking operation



Push ONCE: Driver door
TWICE: All doors



NOTE: If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.

Panic button




Push and hold



Smart Key system

Start function

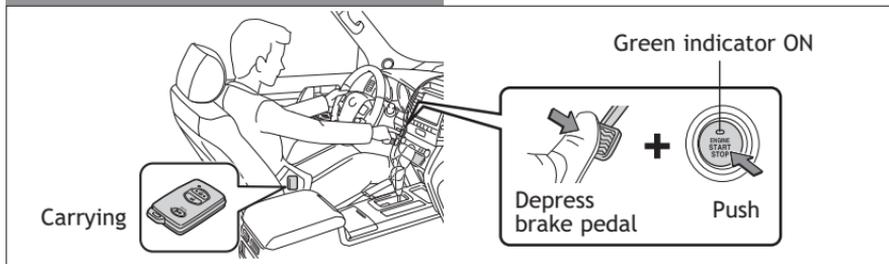

NOTE: Gear shift lever must be in Park and brake pedal depressed.

Power (without starting engine)

Without depressing the brake pedal, pressing the "ENGINE START STOP" switch will change the operation mode in succession from:

ACCESSORY

Accessories such as the radio will operate.


ON

Power ON; the engine not running.


OFF

All systems OFF.


Locking operation

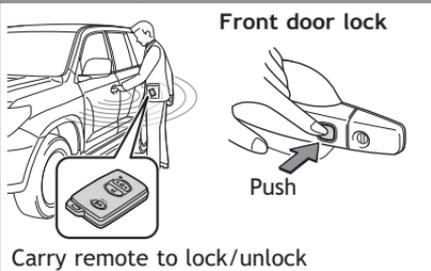

Unlocking operation

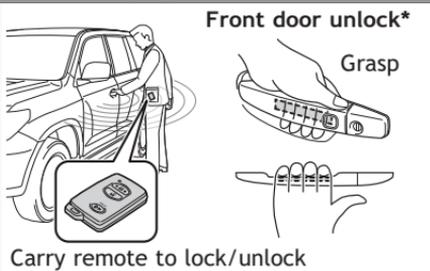




Back door lock/unlock

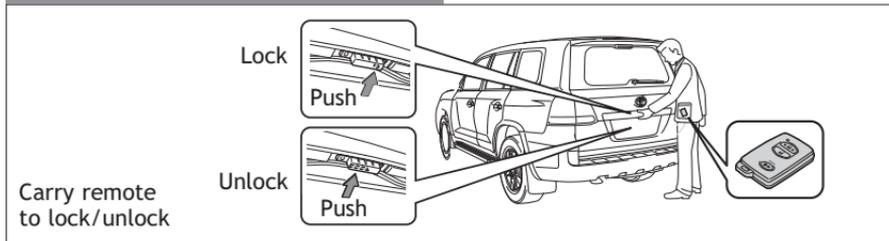

* Driver door unlocking function can be programmed to unlock driver door only, or all doors. Grasping passenger door handle will unlock all doors.


NOTE: Doors may also be locked/unlocked using remote.

Fuel tank door release and cap

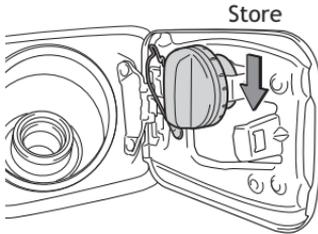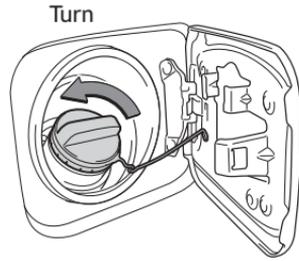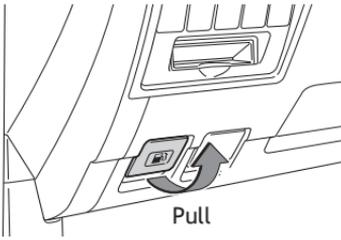


NOTE: Tighten until one click is heard. If the cap is not tightened enough, Check Engine "CHECK" indicator may illuminate.


Hood release

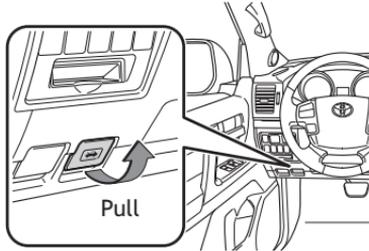


Pull up latch and raise hood

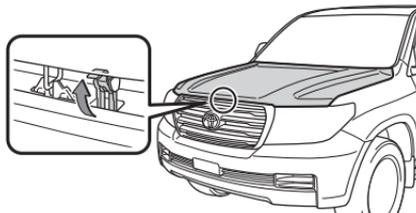

Light control-Instrument panel

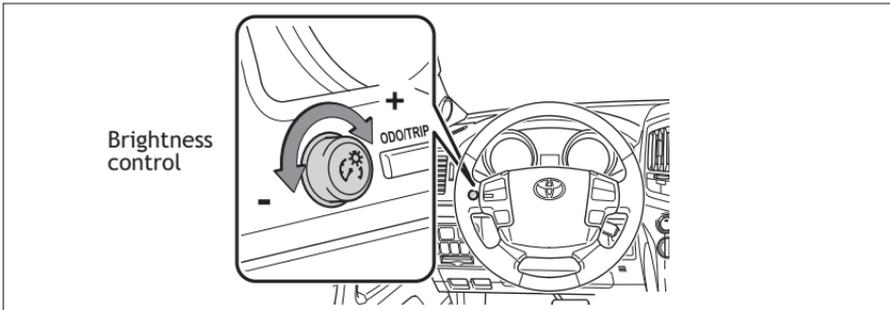

Engine maintenance

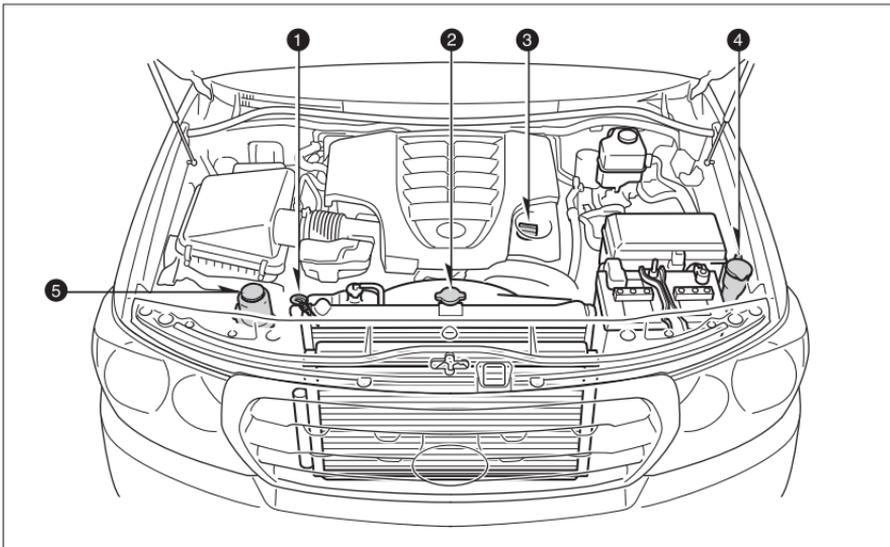

- 1 Engine oil level dipstick
- 2 Engine coolant reservoir
- 3 Engine oil filler cap
- 4 Windshield washer fluid tank
- 5 Power steering fluid reservoir

NOTE: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the "Warranty Maintenance Guide."

FEATURES/OPERATIONS


Auto lock functions

Automatic door locks can be programmed to operate in two different modes, or turned OFF.

- Doors lock when shifting from Park.
- Doors lock when the vehicle speed is approximately 12 mph or higher.
- Doors unlock when shifting into Park.
- Doors unlock when the driver's door is opened within 10 seconds after turning the "ENGINE START STOP" switch OFF.

Refer to the *Owner's Manual* for more details.

Automatic Transmission

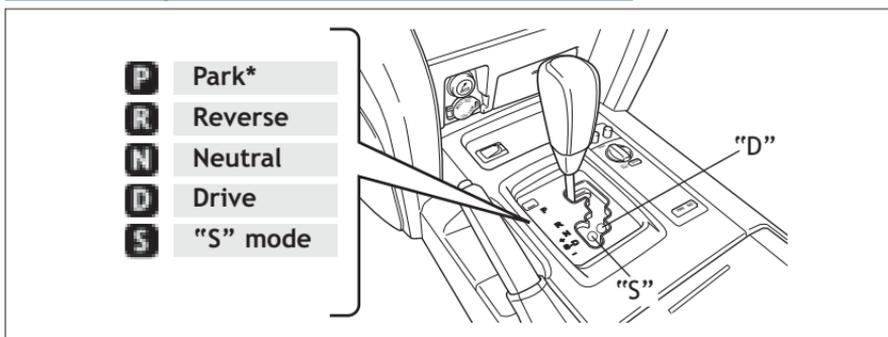

* The "ENGINE START STOP" switch must be in "IGNITION ON" mode and the brake pedal depressed to shift from Park.

"S" (Sequential) mode


Shift the shift lever to "S" position from "D" position.

Floor shift type:


- +: Upshift (push and release)
- : Downshift (pull and release)

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.


Power mode

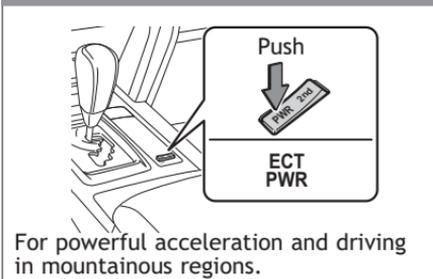

Second start mode

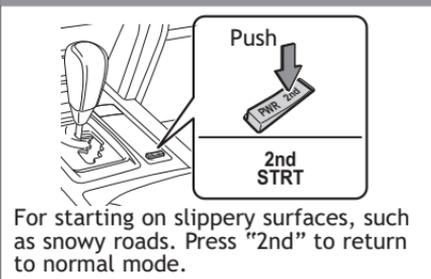


Steering lock release

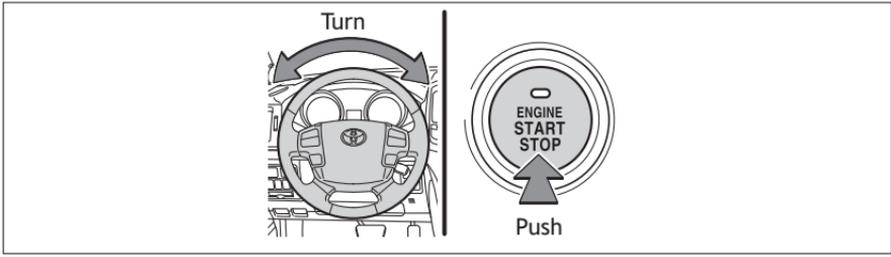

Four-wheel drive

Four-wheel drive control switch

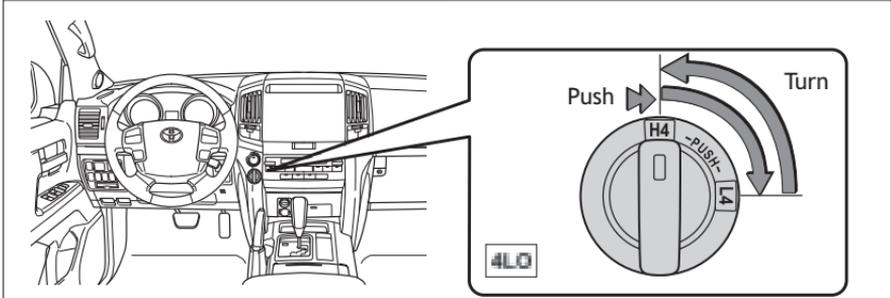


High speed



Low speed


Shift to "N" position when stopped, then push and turn to "L4."

Center differential lock/unlock switch

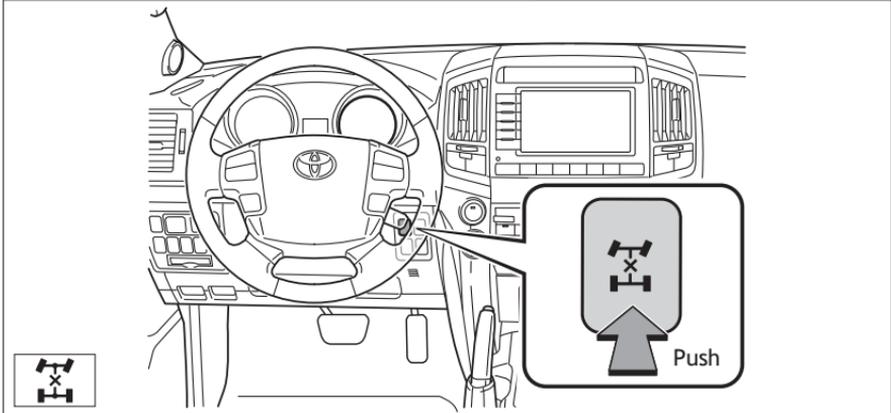


Lock the center differential when your vehicle's wheels get stuck in a ditch or when driving on a slippery or bumpy surface.

Seat adjustments-Front

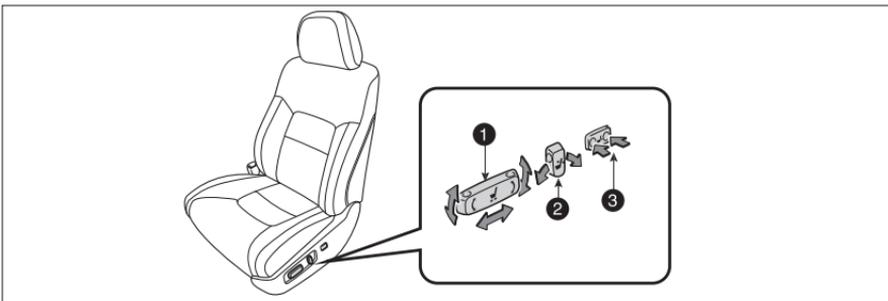

- ① Seat position, cushion angle and height
- ② Seatback angle
- ③ Lumbar support (driver side only)


Seat adjustments-Rear

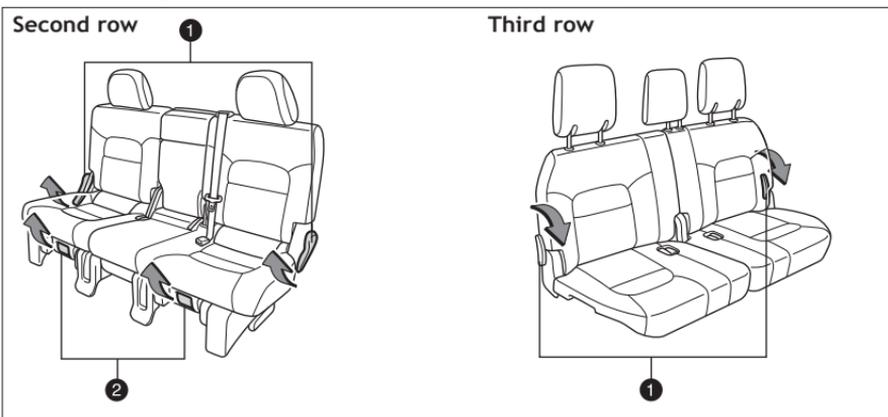


- ① Seatback angle
- ② Seat position

Refer to the *Owner's Manual* for more details.


Seats-Head restraints

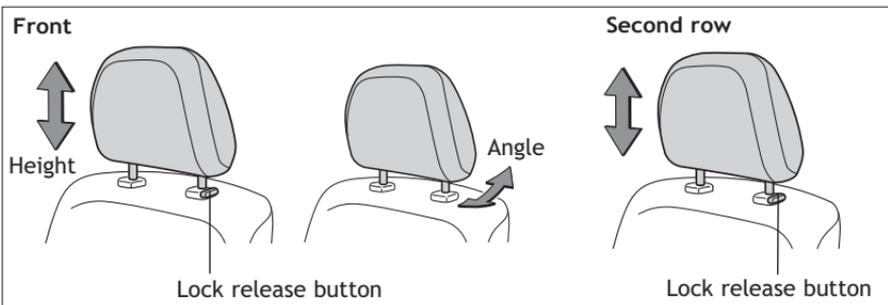


Seats-Tumbling second row seats

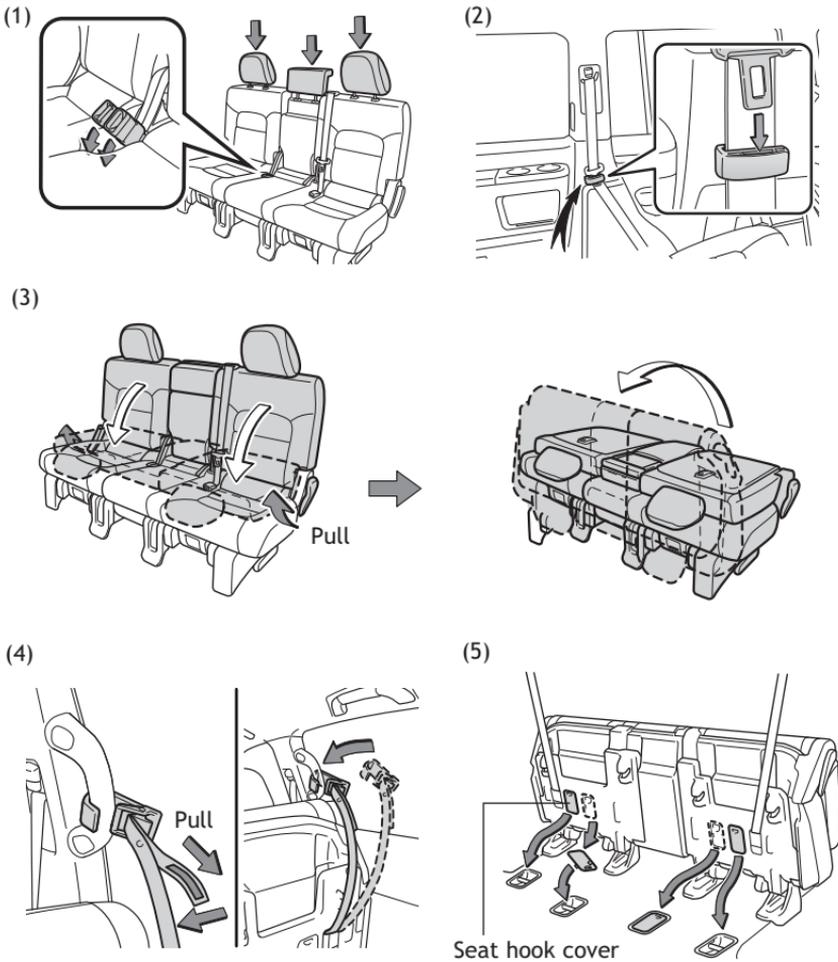

Seats-Tumbling third row seats

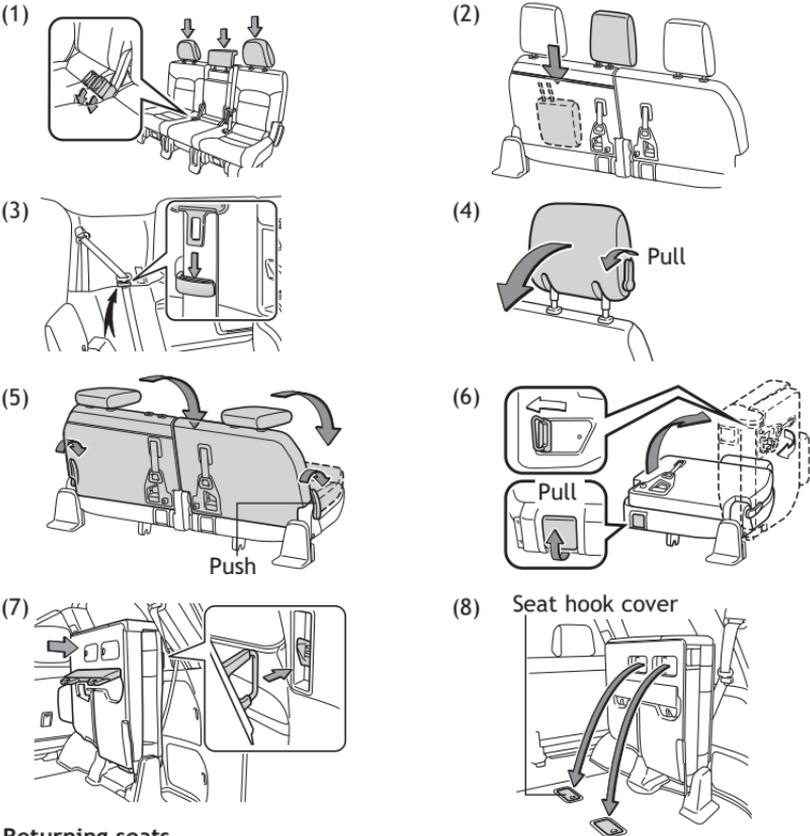

Returning seats

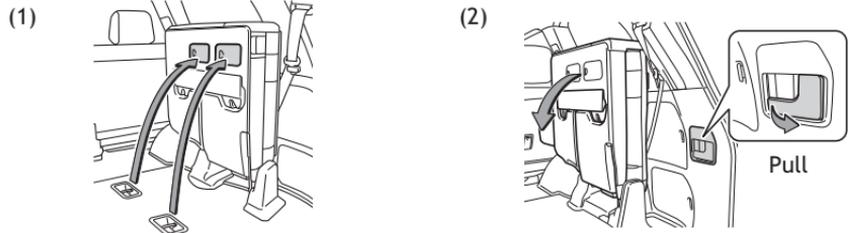


- (1) Stow the seatbelt buckles.
- (2) Stow the center head restraint.
- (3) Hook the seatbelt to the seatbelt hangers.
- (4) Fold down the outer head restraints.
- (5) Fold the seats.
- (6) Lift the seats sideward.
- (7) Lock the seats.
- (8) Install the seat hook covers on the seat hooks.

Returning seats

- (1) Install the seat hook covers into the back of the seat cushions.
- (2) Lower the seats to their original position.


Lights & turn signals

Headlights

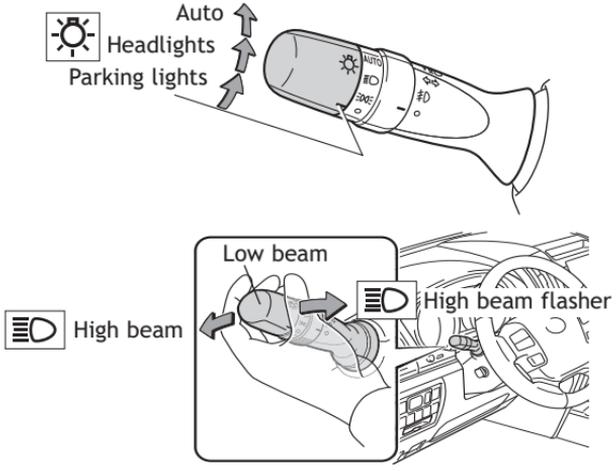


- Daytime Running Light system (DRL) Automatically turns on the turn signal lights at a reduced intensity.
- Automatic light cut off system Automatically turns lights off after a delay of 30 seconds.

Front fog lights

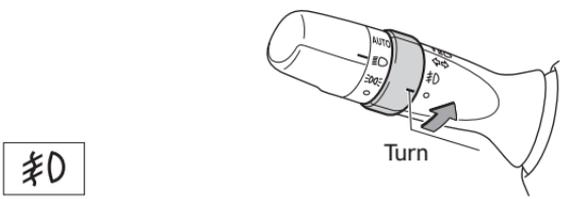


Front fog lights come on only when the headlights are on low beam.

Turn signals

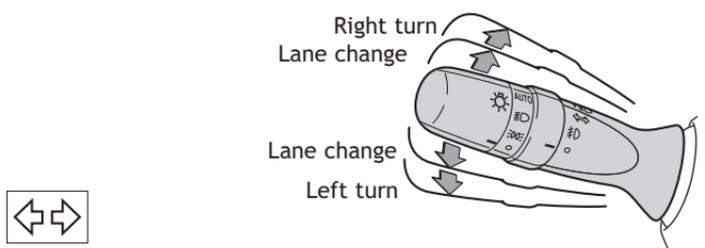


Window wipers & washers

Front

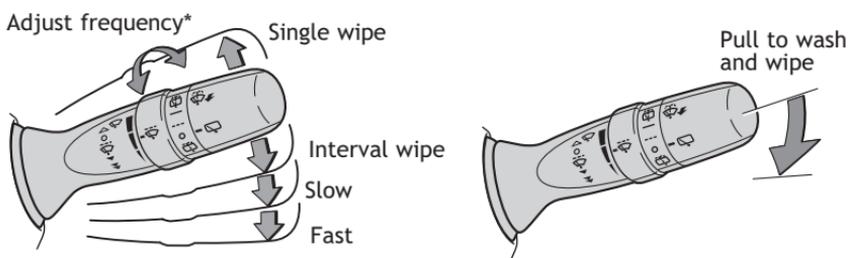



* Intermittent windshield wiper frequency adjustment
Rotate to increase/decrease wipe frequency.

Rear

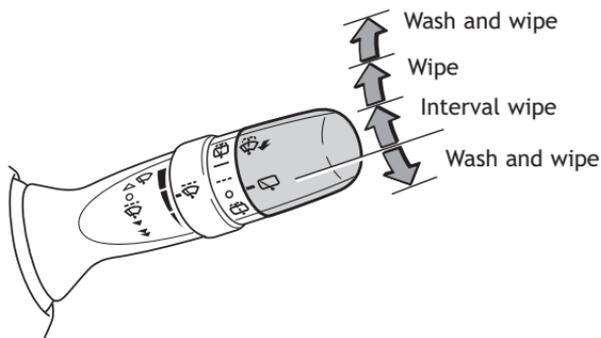

Windows-Power


Driver side

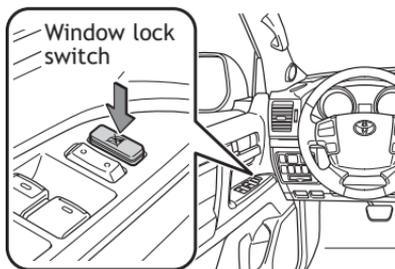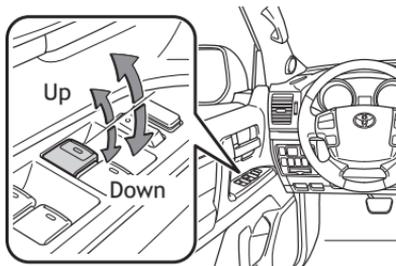

Automatic operation Push the switch completely down or pull it completely up and release to fully open or close. To stop window midway, lightly push the switch in the opposite direction.

Window lock switch Deactivates all passenger windows. Driver's window remains operable.

Back door

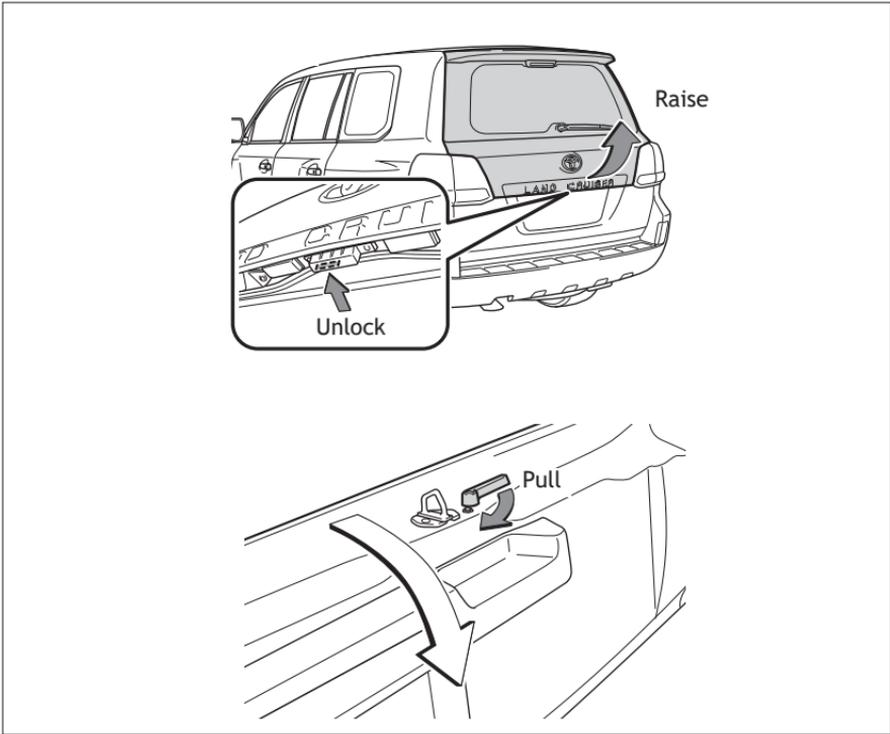


The back door can be locked and unlocked using the entry function, wireless remote control or door lock switch.

Moonroof


Sliding operation

Push once to open partway; again to open completely.

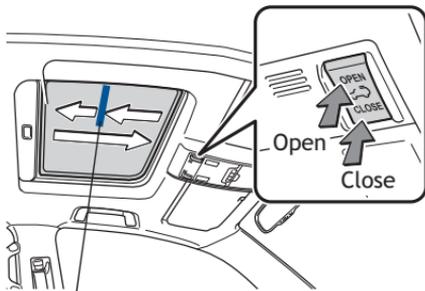

Recommended driving position to minimize wind noise.


Tilting operation

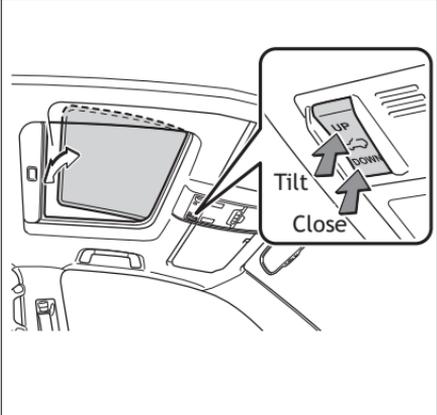

Air Conditioning/Heating

NOTE: For vehicles without navigation system. For information on vehicles with navigation system, refer to the "Navigation System Owner's Manual."

Front Air Conditioning

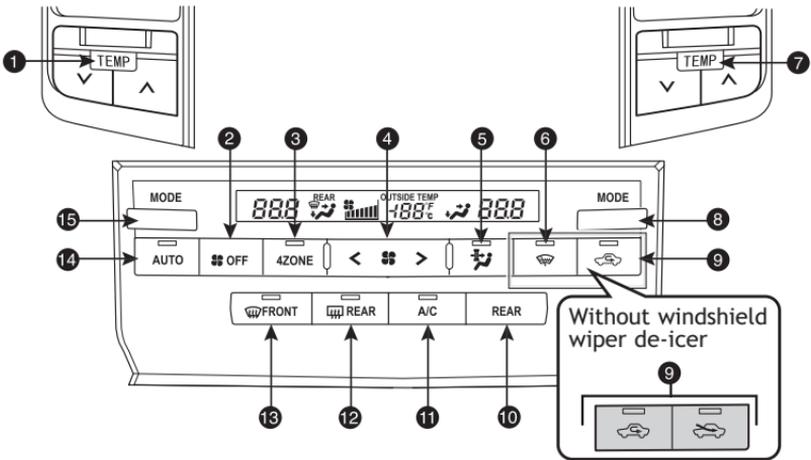

- 1 Temperature selector (driver side/rear left passenger side*)
- 2 Climate control OFF
- 3 "4ZONE" button

Indicator ON: Separate temperature settings for driver, front passenger and rear passengers.

Indicator OFF: Synchronize temperature settings for driver and all passengers.

- 4 Fan speed (front/rear*)
- 5 Micro dust and pollen removal mode ON/OFF
- 6 Windshield wiper de-icer
- 7 Temperature selector (front and rear right passenger side*)
- 8 Airflow vent (front passenger side/rear passenger side*)


- 9 Fresh or recirculated cabin air
- 10 Rear Air Conditioning operation mode ON/OFF
- 11 Air Conditioning ON/OFF
- 12 Outside rearview mirror/Rear window defogger
- 13 Windshield airflow/defogger (fresh air only)
- 14 Automatic climate control ON

Adjusting the temperature setting will cause the airflow vents, air intake and fan to adjust automatically.

- 15 Airflow vent (driver side/rear passenger side*)
In " " mode, use fresh air (" " indicator ON or " " indicator OFF) to reduce window fogging.

* To change the rear seat setting, press the "REAR" button.


Rear Air Conditioning

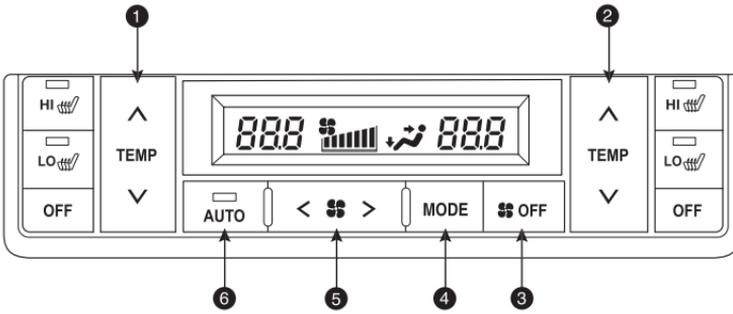

- ① Temperature selector (left side)
- ② Temperature selector (right side)
- ③ Climate control OFF
- ④ Airflow vent
- ⑤ Fan speed
- ⑥ Automatic climate control ON


Seat heaters

Front seats

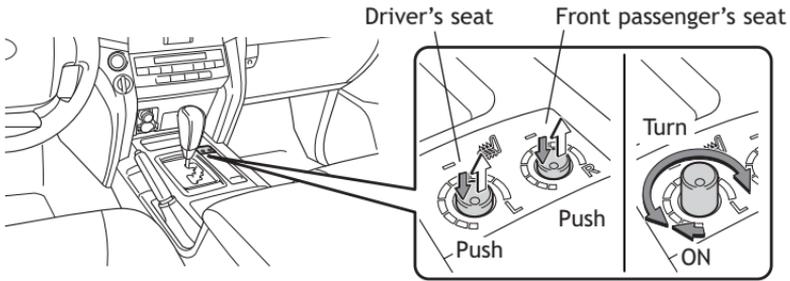


Push knob to pop the controller out. Turn clockwise for heater.

Second seats (if equipped)

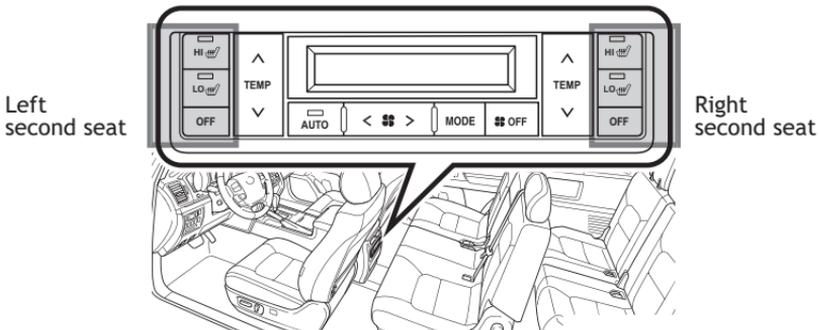

Audio

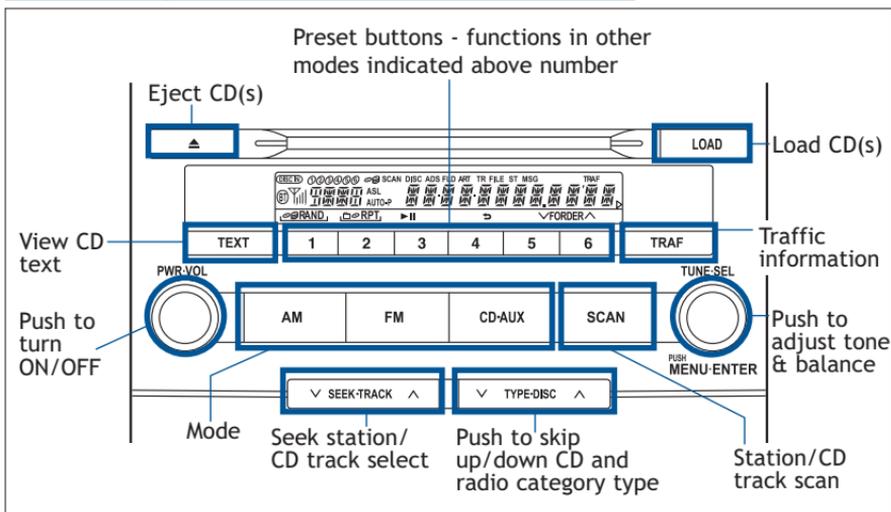

CD PLAYER

To scan tracks on a disc Push and hold "SCAN." Push again to hold selection.

CD changer

-To load one disc Push "LOAD" and insert one disc.

-To load multiple discs Push and hold "LOAD" until you hear a beep. Insert one disc. Shutter will close and then re-open for next disc.

To select a file (MP3/WMA only) Turn "TUNE-FILE."


To select a folder (MP3/WMA only) Push the preset button "5" or "6."

RADIO

To preset stations Tune in the desired station and hold down a preset button (1-6) until you hear a beep. Push desired preset button (1-6) to select.

To scan stations Push and hold "SCAN" to scan preset stations. Push again to hold selection.

AUX audio jack/USB adapter

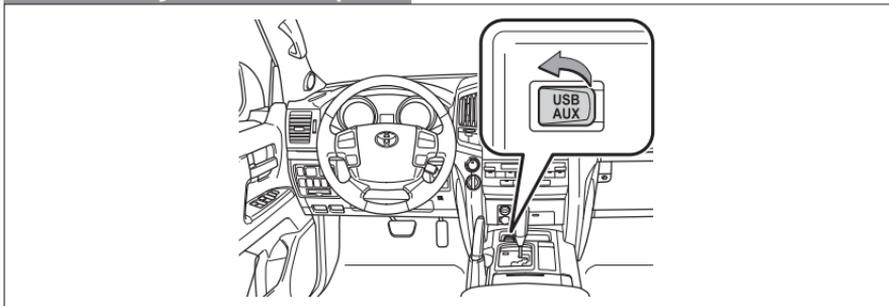


AUX audio jack

By inserting a mini plug (not included) into the AUX audio jack, you can listen to music from a portable audio device through the vehicle's speaker system while in AUX mode.

USB adapter

By connecting a USB memory or USB-compatible portable audio device to the USB adapter, you can listen to music from the portable audio device or USB memory through the vehicle's speaker system.

Steering wheel switches

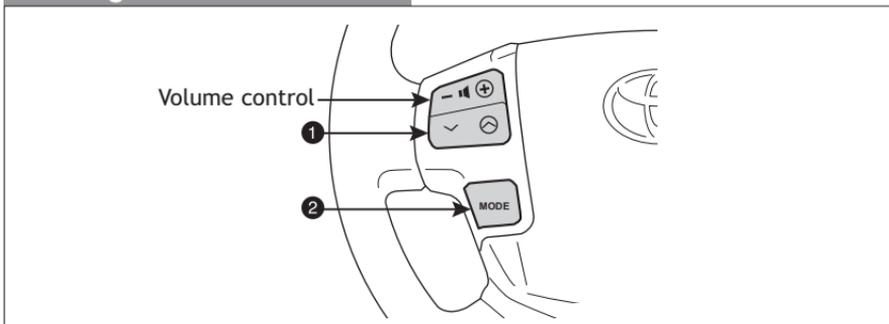

① "V A"

-In radio mode Push to select a preset station; push and hold to seek the next strong station.


-In CD mode Push to skip up or down to next/previous track.

② "MODE"


Push to turn audio ON and to select an audio mode. Push and hold to turn audio system OFF.

Cruise control

Turning system ON/OFF

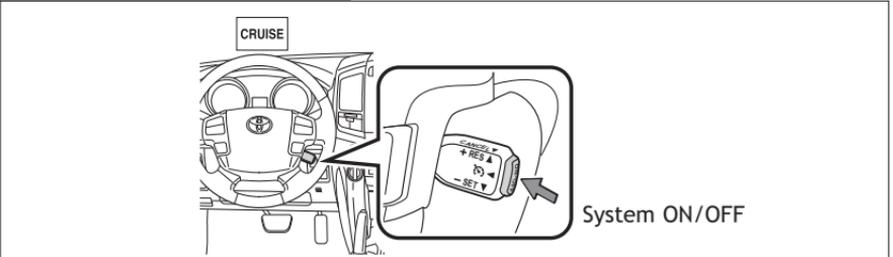

Functions

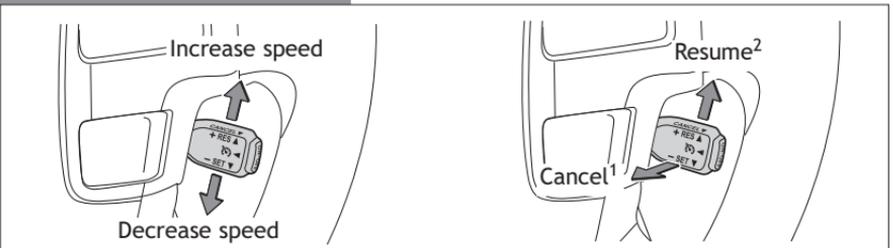

¹ The set speed may also be cancelled by depressing the brake pedal.

² The set speed may be resumed once vehicle speed exceeds 25 mph.

Crawl control

A diagram of the vehicle's dashboard showing the 'Speed : Lo Med Hi' indicator and two icons (a truck and a car). A callout box shows a close-up of the 'Speed selection switch' on the dashboard. The switch has three positions: 'Low mode', 'Medium mode', and 'High mode'. Below the switch is an 'ON/OFF' button with a 'Push' label and an upward arrow.

Low mode: Effective when traveling on rocks and pebbles.


Medium mode: Effective when traveling on snow or descending a rocky slope.

High mode: Effective when ascending a rocky slope, or traveling on snow, dirt, mud, sand, gravel, grass, etc.

Crawl control allows travel on extremely rough off-road surfaces at a fixed low speed without pressing the accelerator or brake pedal.


Refer to the *Owner's Manual* for more details.

Power outlets-12V DC

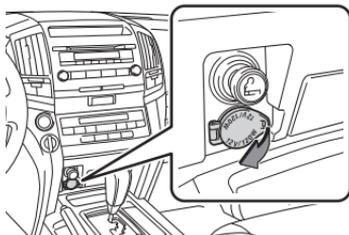


The “ENGINE START STOP” switch must be in “ACCESSORY” or “IGNITION ON” mode to be used.

Power outlets-115V AC

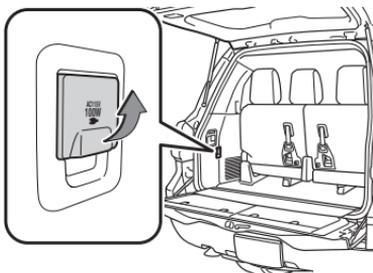

The “ENGINE START STOP” switch must be in “IGNITION ON” mode to be used.

Garage door opener (HomeLink®)*



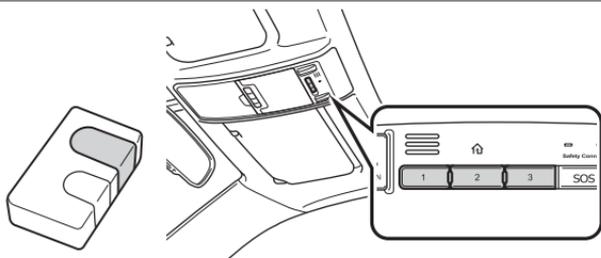


Garage door openers manufactured under license from HomeLink®* can be programmed to operate garage doors, estate gates, security lighting, etc.

Refer to “Garage door opener,” Section 3-7 in the *Owner’s Manual* for more details.

* HomeLink® is a registered trademark of Johnson Controls, Inc.


Multi-information display

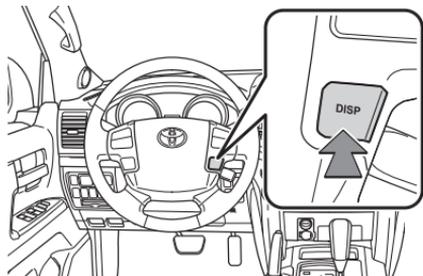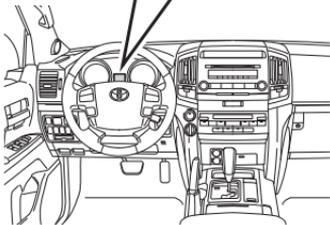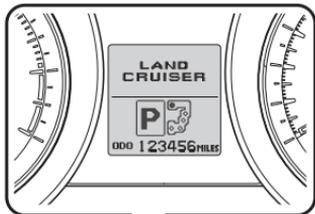

Push "DISP" to change information in the following:

- (1) Current gas mileage
- (2) Average gas mileage after refueling
- (3) Miles left on remaining fuel
- (4) Average vehicle speed
- (5) Running distance from engine start
- (6) Tire inflation pressure (if equipped)

Clock

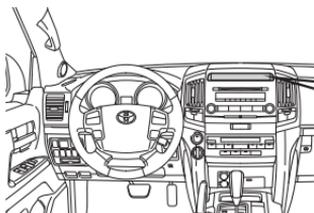


H-Hour set
M-Minute set
:00-round off minutes


Refer to the *Owner's Manual* for details on adjusting time.

Telephone controls (Bluetooth® (if equipped))


Display

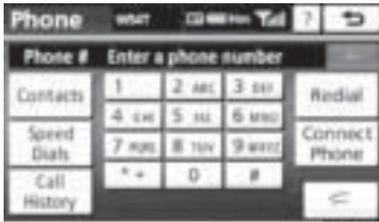

Microphone

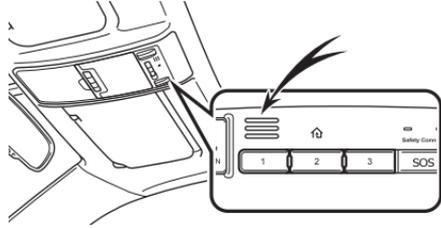


Steering wheel telephone switches

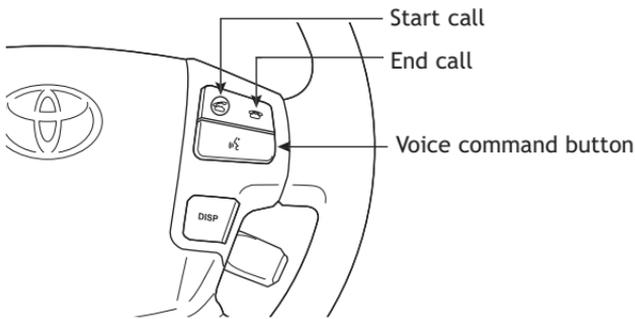


Bluetooth® technology allows dialing or receipt of calls without taking hands from the steering wheel or using a cable to connect the telephone and the system.

Refer to "Hands-free system (for cellular phone)," Section 5 in the *Navigation System Owner's Manual* for more details.

Door locks

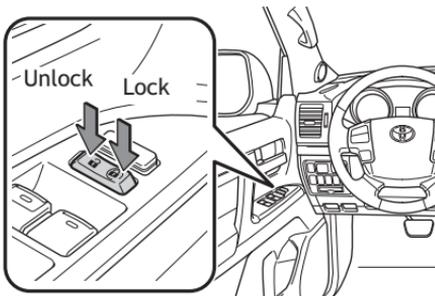


Tilt and telescopic steering wheel

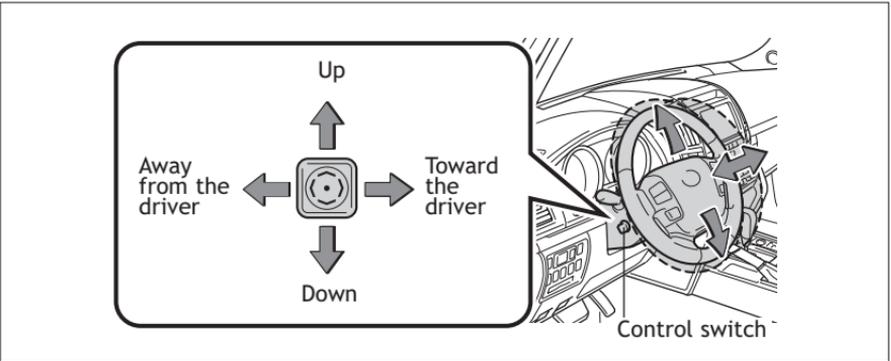

NOTE: Do not attempt to adjust while the vehicle is in motion.


Rear seat entertainment system (if equipped)

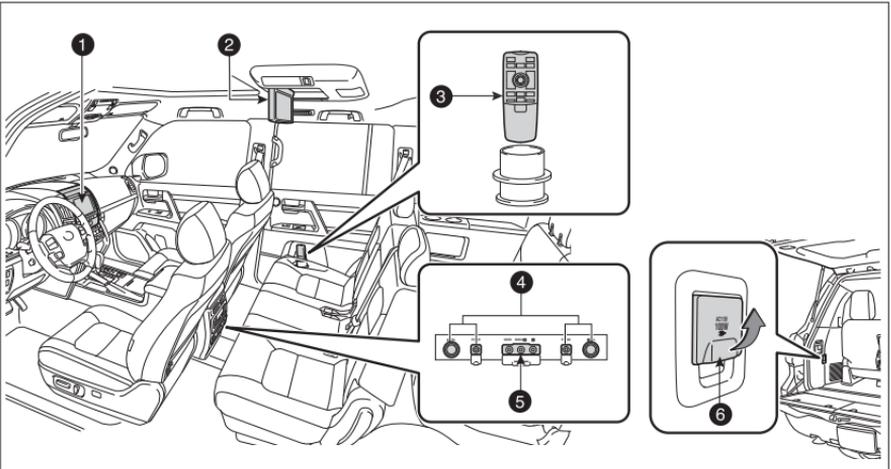


- 1 Front audio system (DVD player)
- 2 DVD screen
- 3 Remote control
- 4 Headphone volume control and headphone jacks
- 5 A/V input adapter
- 6 115V AC Power outlet

For details, refer to the "Navigation System Owner's Manual."


Parking brake

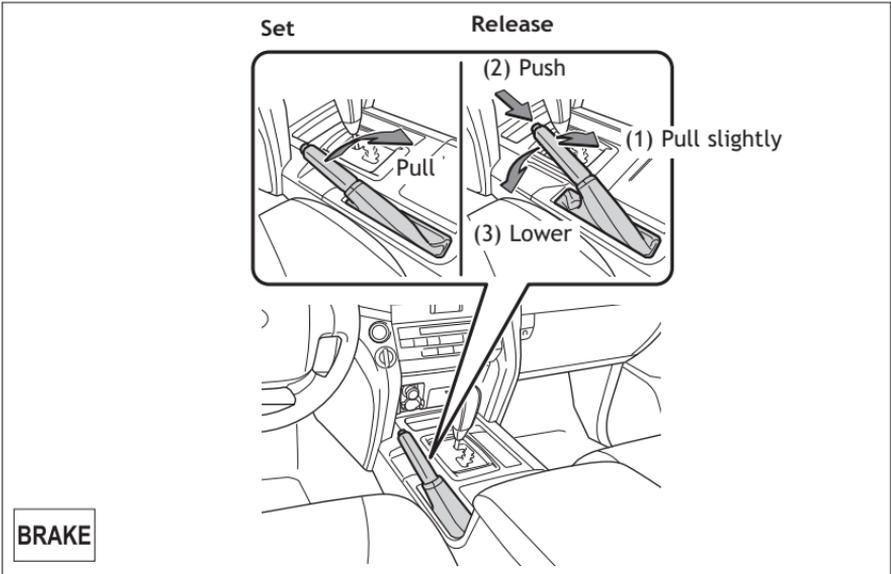

Cup holders

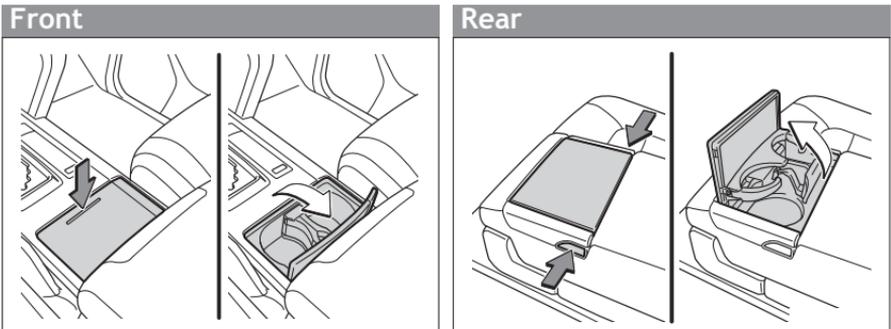


Cool box (if equipped)

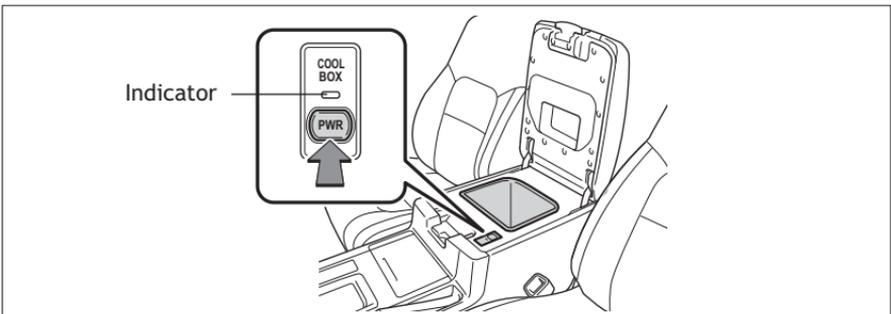

Push "PWR" button to turn cool box ON; indicator will illuminate.

SAFETY AND EMERGENCY FEATURES

Seat belts

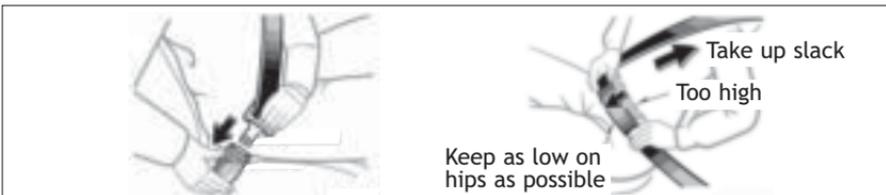


If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seatbelts, and how to install a child restraint system, refer to the *Owner's Manual*.

Seatbelts-Shoulder belt anchor



Tire Pressure Monitoring (warning) System

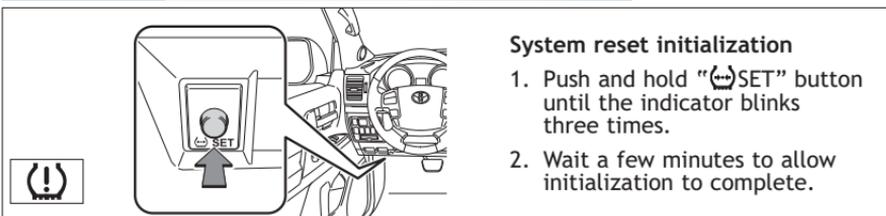

System reset initialization

1. Push and hold "SET" button until the indicator blinks three times.
2. Wait a few minutes to allow initialization to complete.

After adjusting tire pressures, or after tires have been rotated or replaced, turn the "ENGINE START STOP" switch to ON and press and hold the "SET" button until indicator blinks three times. Let the vehicle sit for a few minutes to allow initialization to complete.

Refer to the load label on the door jamb or the *Owner's Manual* for tire inflation specifications.

If the tire pressure indicator flashes for more than 60 seconds and then remains on, take the vehicle to your local Toyota dealer.

NOTE: The warning light may come on due to temperature changes or changes in tire pressure from natural air leakage. If the system has not been initialized recently, setting the tire pressures to factory specifications should turn off the light.