



[ToyotaOwnersOnline.com](http://ToyotaOwnersOnline.com)

CUSTOMER EXPERIENCE CENTER

1-800-331-4331

# CAMRY

2 0 1 0



## QUICK REFERENCE GUIDE

# 2010 Camry

This *Quick Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Quick Reference Guide* is not intended as a substitute for the *Owner's Manual* located in your vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Camry.

## ! A word about safe vehicle operations

This *Quick Reference Guide* is not a full description of Camry operations. Every Camry owner should review the *Owner's Manual* that accompanies this vehicle.

 
Pay special attention to the boxed information highlighted in color throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Quick Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

## Spare tire & tools


### Tool location

#### With compact spare tire

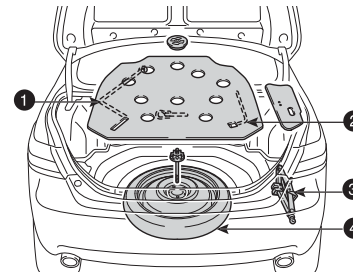


- ① Jack handle
- ② Wheel nut wrench
- ③ Jack
- ④ Spare tire

#### Without compact spare tire

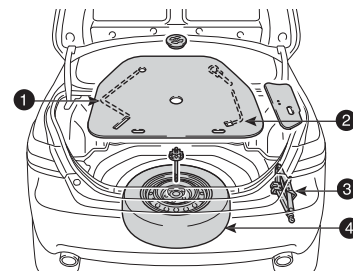 


### Removing the spare tire

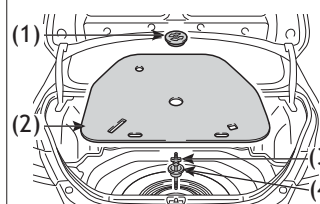 

- (1) Loosen and remove the nut.
- (2) Remove the spare tire cover.
- (3) Loosen and remove the bolt.
- (4) Remove the spacer (with aluminum wheels).

Refer to the *Owner's Manual* for tire changing and jack positioning procedures.

### Trunk-Internal release

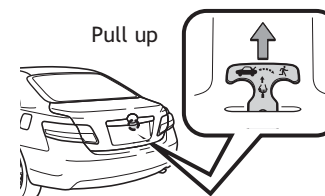 

# INDEX

## OVERVIEW

|                                       |          |
|---------------------------------------|----------|
| Engine maintenance                    | 9        |
| Fuel tank door release and cap        | 8        |
| Hood release                          | 9        |
| Indicator symbols                     | 4-5      |
| Instrument cluster                    | 4        |
| Instrument panel                      | 2-3      |
| <b>Keyless entry<sup>1,2</sup></b>    | <b>6</b> |
| Light control-Instrument panel        | 8        |
| <b>Smart Key system<sup>1,2</sup></b> | <b>7</b> |

## FEATURES/OPERATIONS

|                                              |           |
|----------------------------------------------|-----------|
| Air Conditioning/Heating                     | 18-19     |
| Audio                                        | 20-21     |
| <b>Auto lock functions<sup>2</sup></b>       | <b>10</b> |
| Automatic Transmission                       | 10        |
| Clock                                        | 18        |
| Cruise control                               | 16        |
| Cup holders                                  | 22        |
| Garage door opener (HomeLink®) <sup>3</sup>  | 16        |
| <b>Lights<sup>1</sup> &amp; turn signals</b> | <b>14</b> |
| Moonroof                                     | 12        |
| Multi-information display                    | 15        |
| Parking brake                                | 11        |
| Power outlets-12V DC                         | 15        |
| Seat adjustments-Front                       | 13        |
| Seat adjustments-Rear                        | 13        |
| Seat heaters                                 | 19        |
| Seats-Head restraints                        | 12        |
| Steering lock release                        | 11        |
| Steering wheel switches                      | 21        |
| Sunshade-Rear                                | 17        |
| Telephone controls (Bluetooth®)              | 17        |
| Tilt and telescopic steering wheel           | 11        |
| Windows-Power                                | 12        |
| Windshield wipers & washers                  | 14        |

## SAFETY AND EMERGENCY FEATURES

|                                           |    |
|-------------------------------------------|----|
| Child comfort guide                       | 24 |
| Door locks                                | 23 |
| Doors-Child safety locks                  | 23 |
| Seatbelts                                 | 23 |
| Seatbelts-Shoulder belt anchor            | 24 |
| Spare tire & tools                        | 25 |
| Tire Pressure Monitoring (warning) System | 24 |
| Trunk-Internal release                    | 25 |

<sup>1</sup> Visit your Toyota dealer for information on customizing this feature.

<sup>2</sup> Programmable by customer. Refer to the Owner's Manual for instructions and more information.

 
<sup>3</sup> HomeLink® is a registered trademark of Johnson Controls, Inc.

# OVERVIEW

## Instrument panel



### Steering wheel controls

#### XLE and LE models

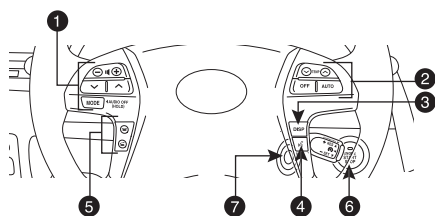


### Steering wheel controls

  
#### SE model

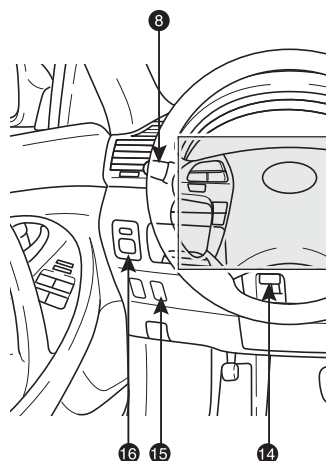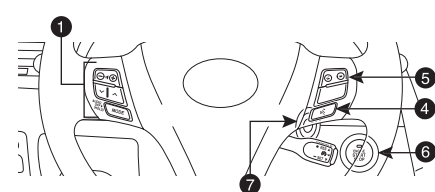



- ① Steering wheel audio controls<sup>2</sup>
- ② Steering wheel climate controls<sup>1</sup>
- ③ Multi-information display button<sup>1</sup>
- ④ Voice command button<sup>1,2</sup>
- ⑤ Telephone controls<sup>1,2</sup>
- ⑥ "ENGINE START STOP" button (Smart Key)<sup>1</sup>
- ⑦ Ignition switch (standard key)<sup>1</sup>
- ⑧ Headlight and turn signal controls/Headlight, turn signal and front fog light<sup>1</sup> controls
- ⑨ Wiper and washer controls
- ⑩ Emergency flasher button

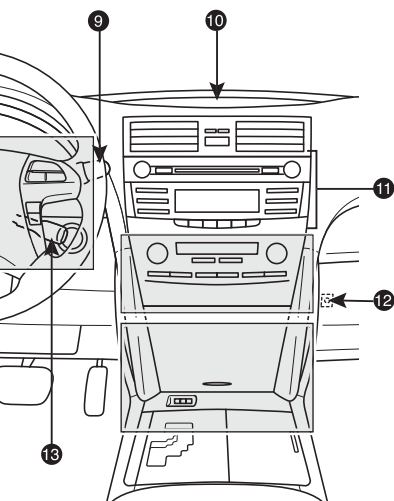 

### Automatic Air Conditioning

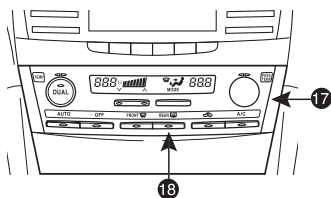 

### Manual Air Conditioning

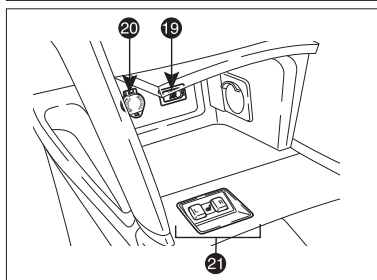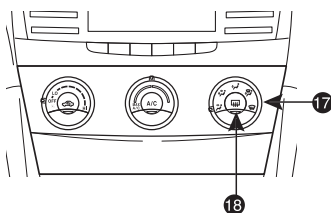  


- 11 Audio system<sup>2</sup>
- 12 Tire Pressure Monitoring (warning) System
- 13 Cruise control
- 14 Tilt and telescopic steering lock release
- 15 VSC OFF switch
- 16 Power outside rearview mirror controls
- 17 Air Conditioning controls
- 18 Outside rearview mirror<sup>1</sup>/Rear window defogger button
- 19 AUX or USB/AUX audio jack
- 20 12V DC Power outlet
- 21 Seat heater controls<sup>1</sup>

<sup>1</sup> If equipped


<sup>2</sup> For details, refer to the "Navigation System Owner's Manual."

## Instrument cluster

 With multi-information display

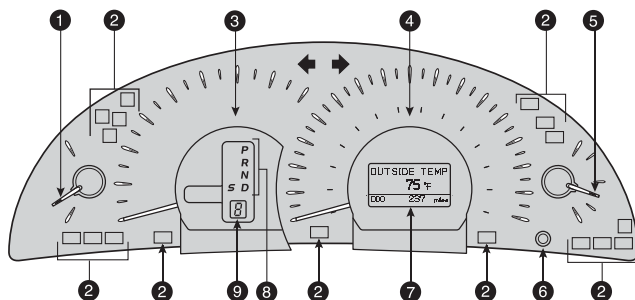

Without multi-information display

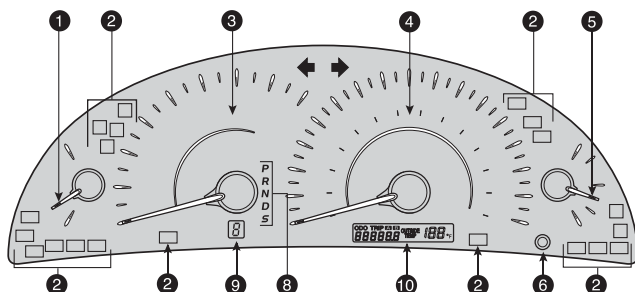 

- ① Engine coolant temperature
- ② Service indicator and reminder
- ③ Tachometer
- ④ Speedometer
- ⑤ Fuel gauge
- ⑥ Trip meter reset/Instrument panel light control
- ⑦ Multi-information display
- ⑧ Automatic Transmission shift position indicator
- ⑨ Sequential shift display (if equipped)
- ⑩ Odometer, two trip meters and outside temperature display

## Indicator symbols

For details, refer to "Indicators and warning lights," Section 2-2, 2010 Owner's Manual.

**BRAKE** Brake system warning<sup>1</sup>

<sup>1</sup> If indicator does not turn off within a few seconds of starting engine, there may be a malfunction. Have vehicle inspected by your Toyota dealer.

 
|                                                                                    |                                                                                                  |
|------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------|
|    | Driver seatbelt reminder<br>(alarm will sound if speed is over 12 mph)                           |
|    | Front passenger seatbelt reminder<br>(alarm will sound if speed is over 12 mph)                  |
|    | Charging system warning <sup>1</sup>                                                             |
|    | Front passenger occupant classification or front passenger AIR BAG ON/OFF indicator <sup>1</sup> |
|    | Low engine oil pressure warning <sup>1</sup>                                                     |
|    | Malfunction/Check Engine indicator <sup>1</sup>                                                  |
|    | Engine oil replacement reminder <sup>1</sup>                                                     |
|    | Low fuel level warning                                                                           |
|    | Open door warning                                                                                |
|    | Airbag SRS warning <sup>1</sup>                                                                  |
|    | Master warning                                                                                   |
|    | Low Tire Pressure Warning <sup>1</sup>                                                           |
|    | Low windshield washer fluid level warning <sup>1</sup>                                           |
|    | Theft deterrent/Engine immobilizer system indicator                                              |
|   | Headlight low/high beam indicator                                                                |
|  | Turn signal indicator                                                                            |
|  | Front fog light indicator                                                                        |
|  | Slip indicator <sup>1</sup>                                                                      |
|  | Vehicle Stability Control OFF indicator <sup>1</sup>                                             |
|  | Traction Control OFF indicator <sup>1</sup>                                                      |
|  | Cruise control indicator <sup>2</sup>                                                            |
|  | Cruise control set indicator <sup>2</sup>                                                        |
|  | Anti-lock Brake System warning <sup>1</sup>                                                      |
|  | Smart Key System warning                                                                         |

<sup>2</sup> If this light flashes, refer to "Cruise control," Section 2-4, 2010 Owner's Manual.

## Keyless entry (if equipped)

### Locking operation

Without Smart Key system

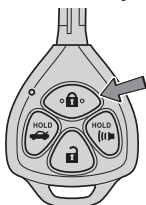

With Smart Key system




Push



### Unlocking operation

 Without Smart Key system

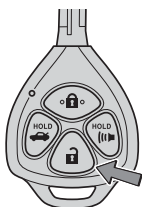

With Smart Key system




Push ONCE: Driver door  
TWICE: All doors




**NOTE:** If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.

### Trunk lid

 Without Smart Key system

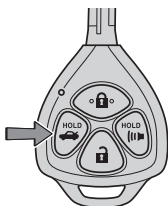

With Smart Key system

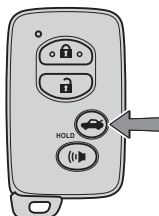 

Push and hold



### Panic button

 


Push and hold



## Smart Key system (if equipped)

### Start function

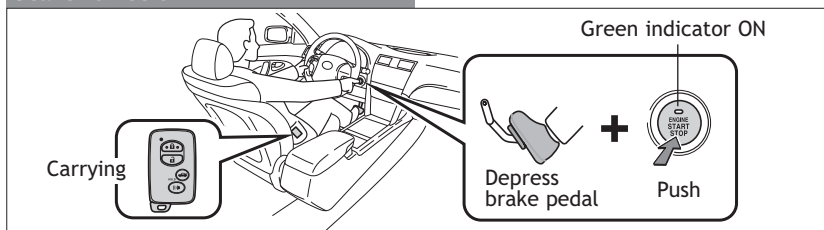


**NOTE:** Gear shift lever must be in Park and brake pedal depressed.

### Power (without starting engine)

 
Without depressing the brake pedal, pressing the "ENGINE START STOP" switch will change the operation mode in succession from:

|            |                                             |
|------------|---------------------------------------------|
| <b>ACC</b> | Accessories such as the radio will operate. |
| <b>ON</b>  | Power ON; the engine not running.           |
| <b>OFF</b> | All systems OFF.                            |


### Locking operation

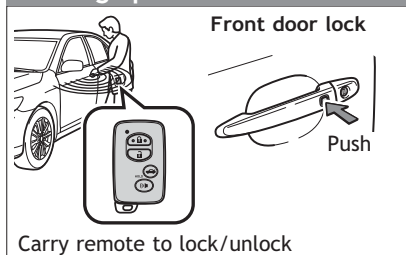

### Unlocking operation

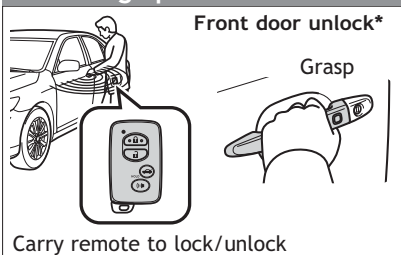 




### Back door lock/unlock

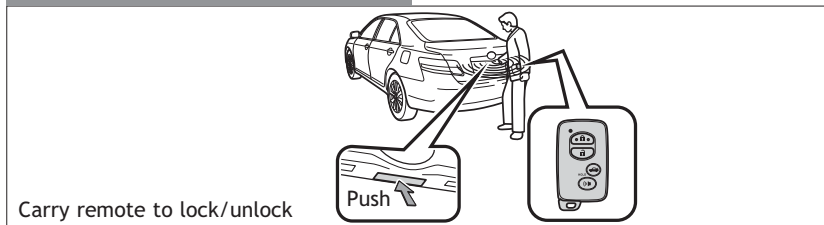 

\* Driver door unlocking function can be programmed to unlock driver door only, or all doors. Grasping front passenger door handle will unlock all doors.

**NOTE:** Doors may also be locked/unlocked using remote.


## Fuel tank door release and cap

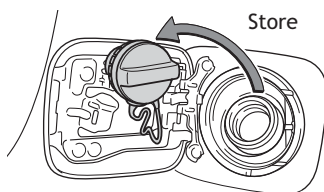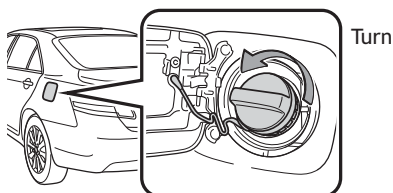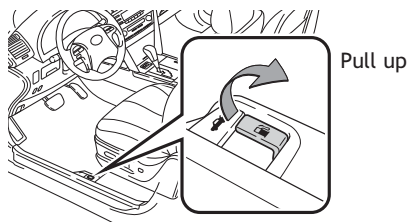   


**NOTE:** Tighten until one click is heard. If the cap is not tightened enough, Check Engine “” indicator may illuminate.

## Light control-Instrument panel

 Brightness control

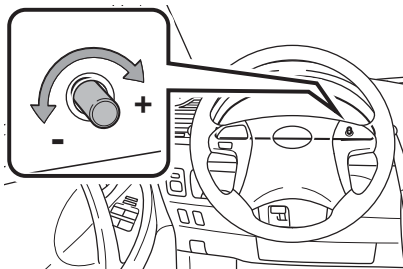


## Hood release

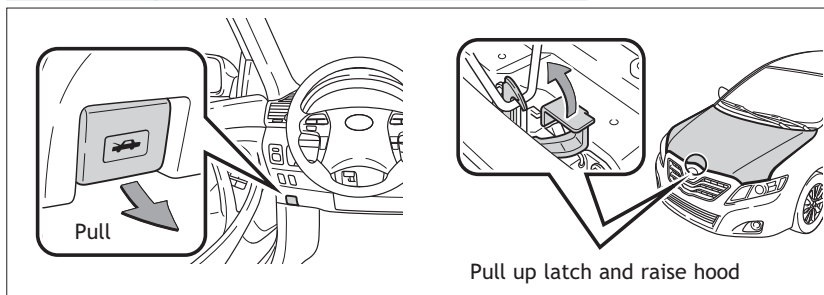 


## Engine maintenance
 
### 4 cylinder (2AR-FE) engine

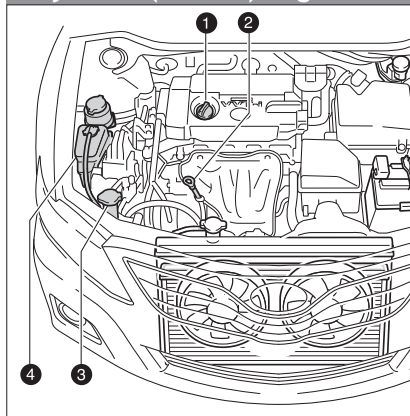

### 6 cylinder (2GR-FE) engine

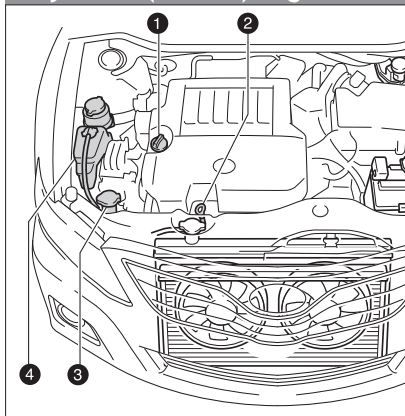 

- ① Engine oil filler cap
- ② Engine oil level dipstick
- ③ Windshield washer fluid tank
- ④ Engine coolant reservoir

**Note:** Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the "Owner's Warranty Information Booklet," "Scheduled Maintenance Guide" or "Owner's Manual Supplement."

# FEATURES/OPERATIONS

## Auto lock functions

Automatic door locks can be programmed to operate in four different modes, or turned OFF.

- Doors lock when shifting from Park.\*
- Doors lock when the vehicle speed goes above approximately 12 mph.
- Doors unlock when shifting into Park.\*

### Vehicles without Smart Key system

- Doors unlock when the engine switch is set from "ON" to "ACC" or "LOCK" and driver's door is opened.

 
### Vehicles with Smart Key system

- Doors unlock when the "ENGINE START STOP" switch is set to OFF and driver's door is opened.

\* Automatic Transmission only

Refer to the *Owner's Manual* for more details.

## Automatic Transmission (if equipped)

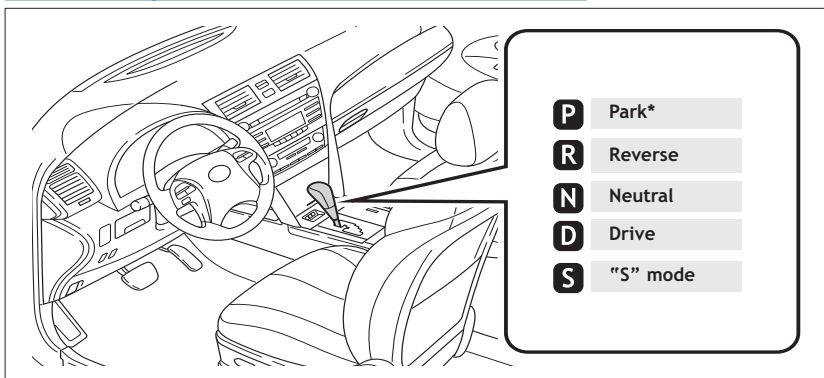

\* The "ENGINE START STOP"/engine switch must be "ON" and the brake pedal depressed to shift from Park.

### "S" (Sequential) mode

Shift the shift lever to "S" position from "D" position.

 
#### Floor shift type:

- + : Upshifting (push and release)
- : Downshifting (pull and release)


Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.

## Steering lock release

### Smart Key system\*

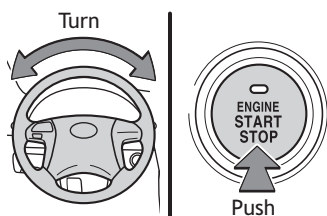


### Without Smart Key system

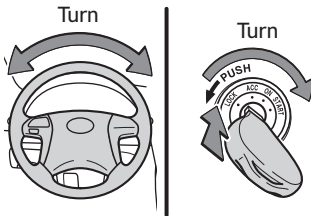 

\* Gently turn wheel while pressing the ENGINE START STOP switch. If the lock does not release, the switch will flash green.

## Tilt and telescopic steering wheel

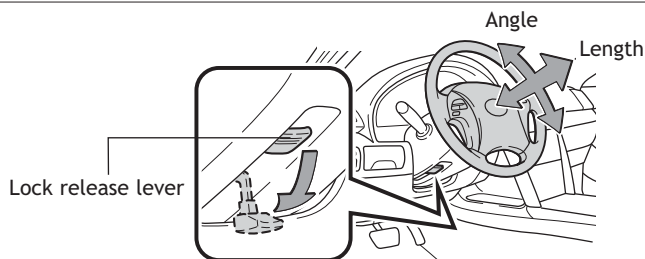 


Hold wheel, push lever down, set angle and length, and return lever.


**Note:** Do not attempt to adjust while the vehicle is in motion.

## Parking brake
 
### Lever type

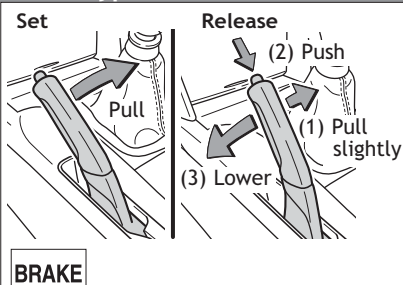


### Pedal type

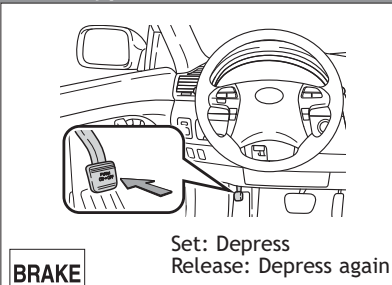 


## Windows-Power

 Driver side

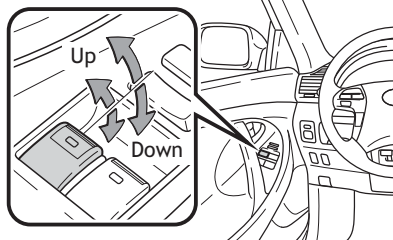

Window lock switch

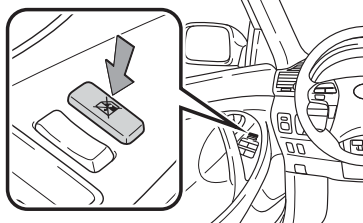 


**Automatic operation** Push the switch completely down or pull it completely up and release to fully open or close. To stop window midway, lightly push the switch in the opposite direction.

**Window lock switch** Deactivates all passenger windows. Driver's window remains operable.

## Moonroof (if equipped)

 
Sliding operation

Push once to open partway; again to open completely.

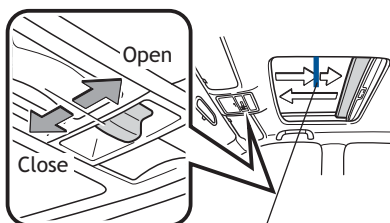


Recommended driving position to minimize wind noise.

 Tilting operation

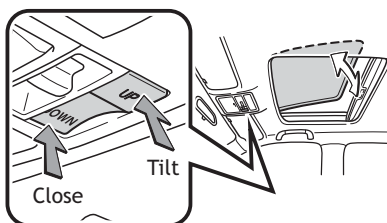

Push once to open; moonroof will automatically stop at the recommended position. Push again to open completely.

## Seats-Head restraints

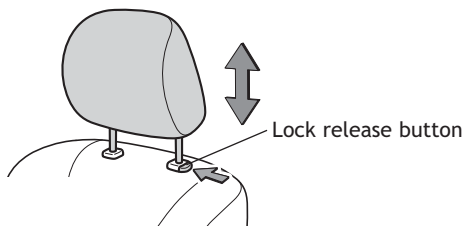 


## Seat adjustments-Front

### Manual seat



 
### Power seat

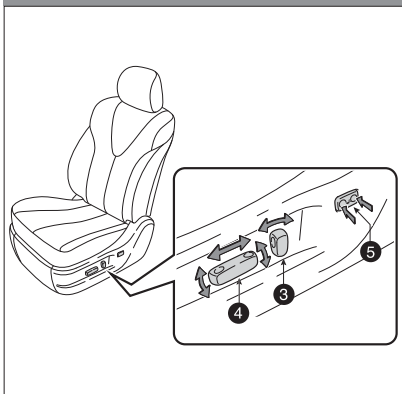


- ① Seat position (forward/backward)
- ② Height crank (driver side only)
- ③ Seatback angle
- ④ Position, cushion angle (driver side only) and height (driver side only)
- ⑤ Lumbar support (driver side only)

## Seat adjustments-Rear (if equipped)
 
### Reclining type (XLE model)

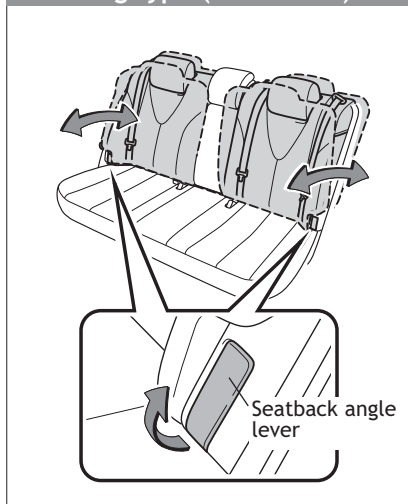


### Fold down type (LE model)

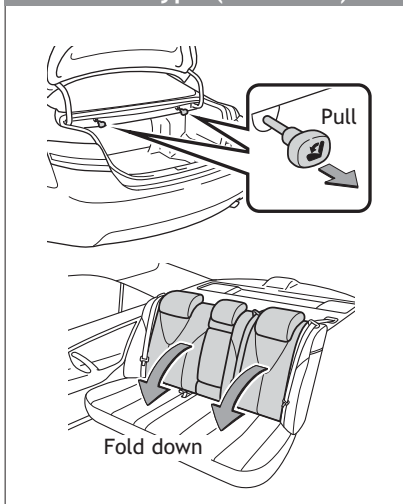 

Refer to the *Owner's Manual* for more details.


## Windshield wipers & washers

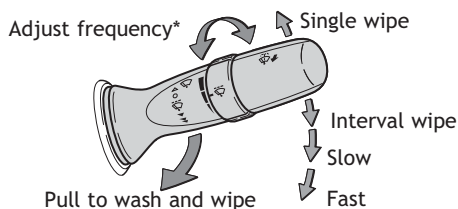 

**\* Intermittent windshield wiper frequency adjustment**  
Rotate to increase/decrease wipe frequency.

## Lights & turn signals

 
### Headlights

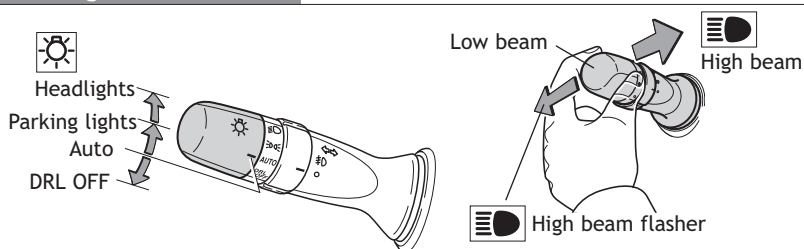

**-Daytime Running Light system (DRL)** Automatically turns on the headlights at a reduced intensity.


**-Automatic light cut off system** Automatically turns lights off after a delay of 30 seconds, or the lock switch on remote may be pushed after locking.

### Front fog lights (if equipped)

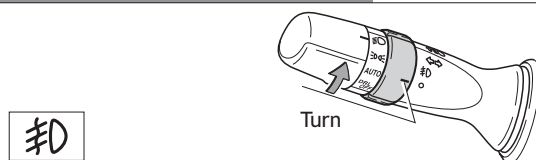 


Front fog lights come on only when the headlights are on low beam.

### Turn signals

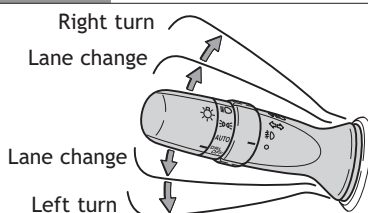 

## Power outlets-12V DC

 Front console


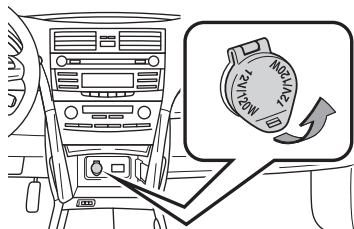


Center console (if equipped)



The "ENGINE START STOP" switch/engine switch must be in the "ACC" or "ON" position to be used.


## Multi-information display (if equipped)

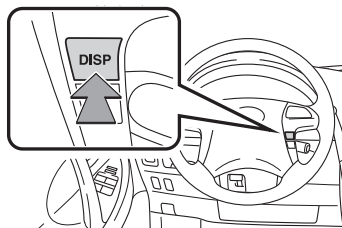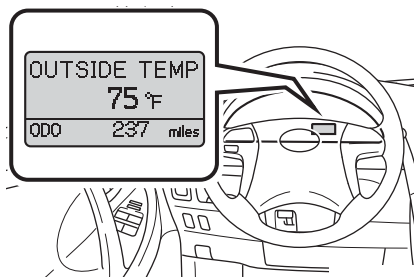  

Push "DISP" to change information in the following:

- (1) Outside temperature
- (2) Miles left on remaining fuel
- (3) Current gas mileage
- (4) Running distance from engine start
- (5) Average vehicle speed from engine start
- (6) Multi-information display OFF
- (7) Zoom display of odometer and trip meter

## Garage door opener (HomeLink®)\* (if equipped)

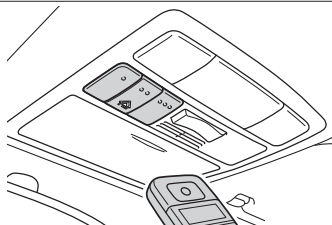 

Garage door openers manufactured under license from HomeLink®\* can be programmed to operate garage doors, estate gates, security lighting, etc.


Refer to "Garage door opener," Section 3-7 in the *Owner's Manual* for more details.

For programming assistance, contact the Toyota Customer Experience Center at 1-800-331-4331, or visit <http://www.homelink.com>.


\* HomeLink® is a registered trademark of Johnson Controls, Inc.

## Cruise control
 
### Turning system ON/OFF

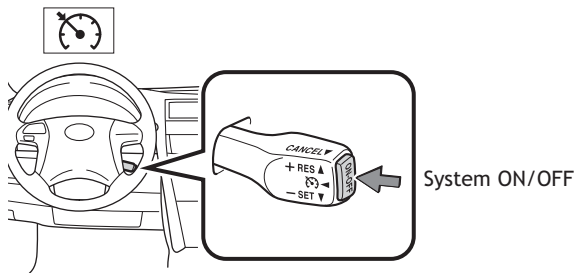

### Functions

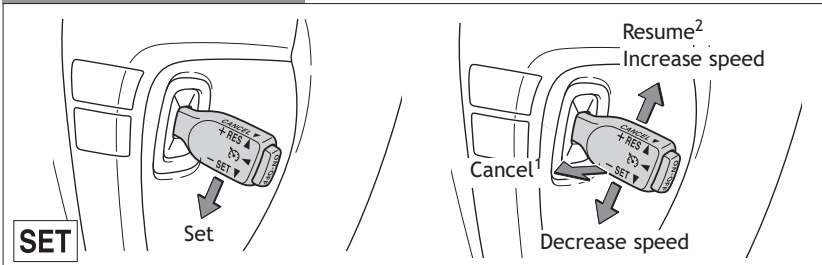 


<sup>1</sup> The set speed may also be cancelled by depressing the brake pedal or clutch pedal (Manual Transmission only).


<sup>2</sup> The set speed may be resumed once vehicle speed exceeds 25 mph.

## Telephone controls (Bluetooth®) (if equipped)
 
### Audio unit

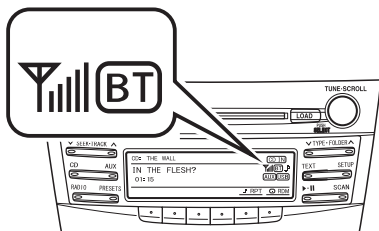


### Microphone

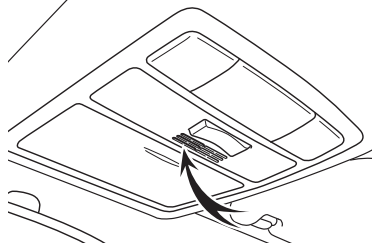 


### Steering wheel telephone switches
 
#### XLE and LE models

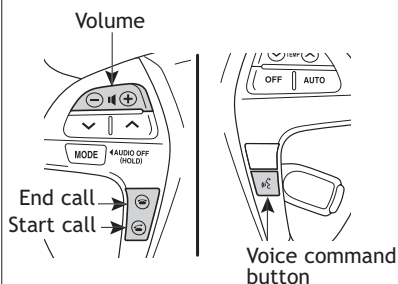


#### SE model

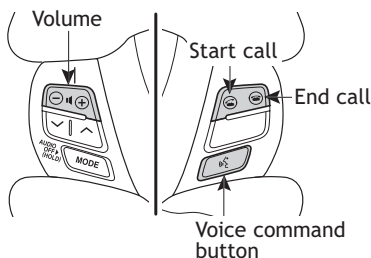 


Bluetooth® technology allows dialing or receipt of calls without taking hands from the steering wheel or using a cable to connect the compatible telephone and the system.

Refer to "Hands-free phone system (for cellular phone)," Section 3-4 in the *Owner's Manual* for more details.

## Sunshade-Rear (if equipped)

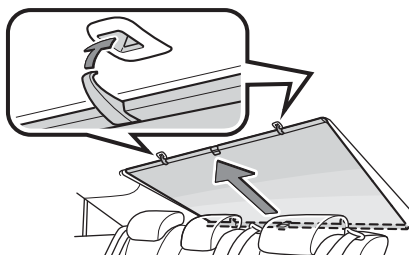 


## Clock

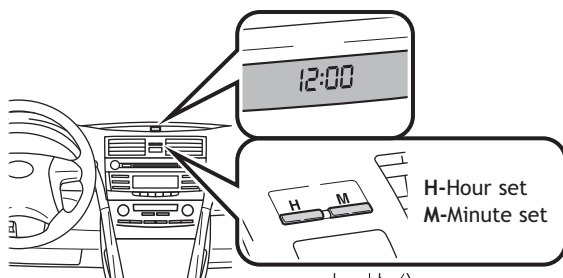 

## Air Conditioning/Heating

 
### Manual Air Conditioning

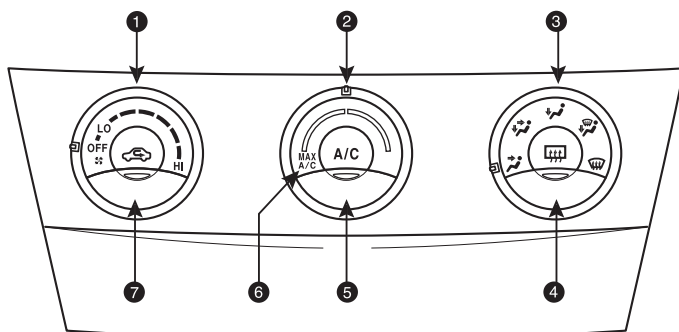

- ❶ Fan speed
- ❷ Temperature selector
- ❸ Airflow vent  
In "❸" mode, use fresh air ("❸" indicator OFF) to reduce window fogging. "❸" mode uses fresh air only.
- ❹ Outside rearview mirror\*/Rear defogger
- ❺ Air Conditioning ON/OFF  
Use fresh air to quickly cool interior, then change to recirculate for cooler air.
- ❻ Select for maximum cooling. Air intake will automatically be set to recirculate. It is not possible to change intake to fresh, or to turn A/C OFF in this mode.
- ❼ Fresh or recirculated cabin air

\* If equipped

## Automatic Air Conditioning

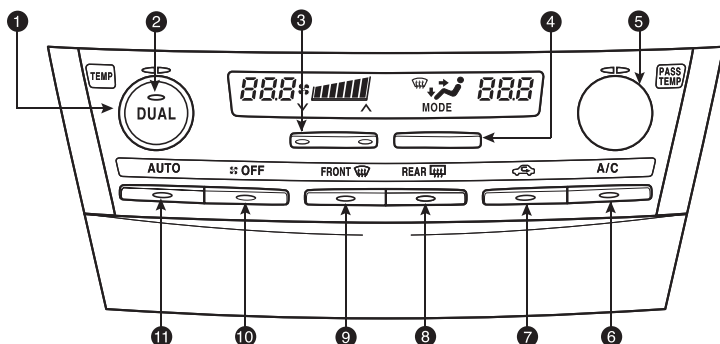 

① Temperature selector (driver side)

② "DUAL" button

**Indicator ON:** Separate temperature settings for driver and passengers.

**Indicator OFF:** Synchronize temperature settings for driver and passengers.

③ Fan speed

④ Airflow vent

In "F" mode, use fresh air ("F" indicator OFF) to reduce window fogging. "F" mode uses fresh air only.

⑤ Temperature selector (passenger side)

⑥ Air Conditioning ON/OFF

⑦ Fresh or recirculated cabin air

⑧ Outside rearview mirror/Rear defogger


⑨ Windshield airflow/defogger

⑩ Climate control OFF

⑪ Automatic climate control ON


Adjusting the temperature setting will cause the airflow vents, air intake and fan to adjust automatically.

## Seat heaters (if equipped)

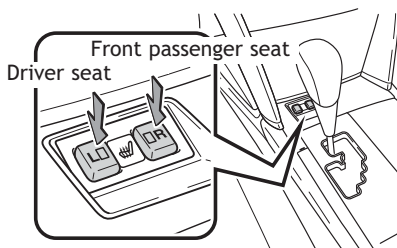 


## Audio

 
### Type 1

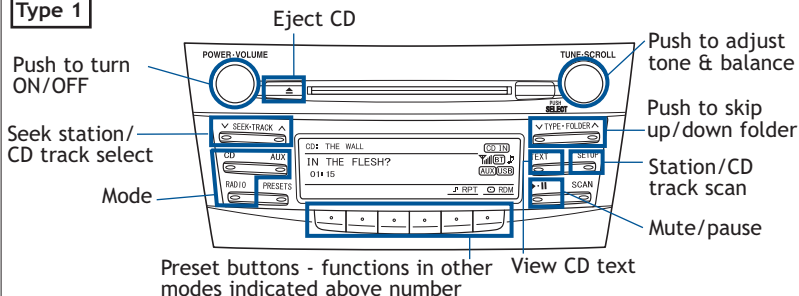

### Type 2 additional functions

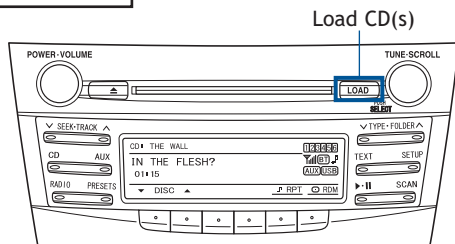 

### Type 3

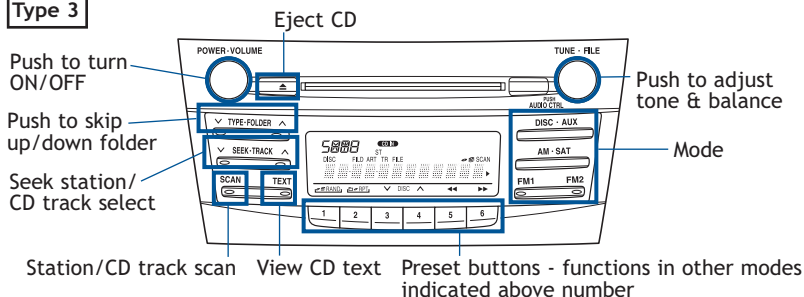 

## CD PLAYER

To scan tracks on a disc Push and hold "SCAN." Push again to hold selection.

### CD changer (Type 2 only)

-To load one disc Push "LOAD" and insert one disc.

-To load multiple discs Push and hold "LOAD" until you hear a beep. Insert one disc. Shutter will close and then re-open for next disc.

To select a file (MP3/WMA only) Turn "TUNE-FILE" OR "TUNE-SCROLL."

 
To select a folder (MP3/WMA only) Push either side of "FOLDER."

## RADIO

**To preset stations** Tune in the desired station and hold down a preset button until you hear a beep. Push desired preset button to select.


**To scan stations** Push and hold "SCAN" to scan preset stations. Push again to hold selection.

## AUX or USB/AUX audio jack

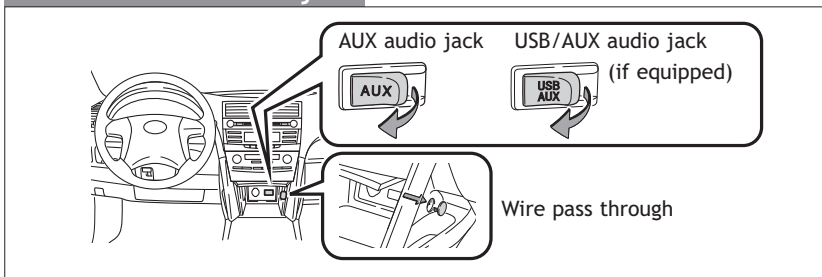

By inserting a mini plug into the AUX or USB/AUX audio jack, you can listen to music from a portable audio device through the vehicle's speaker system while in AUX or USB/AUX mode.

## Steering wheel switches (if equipped)

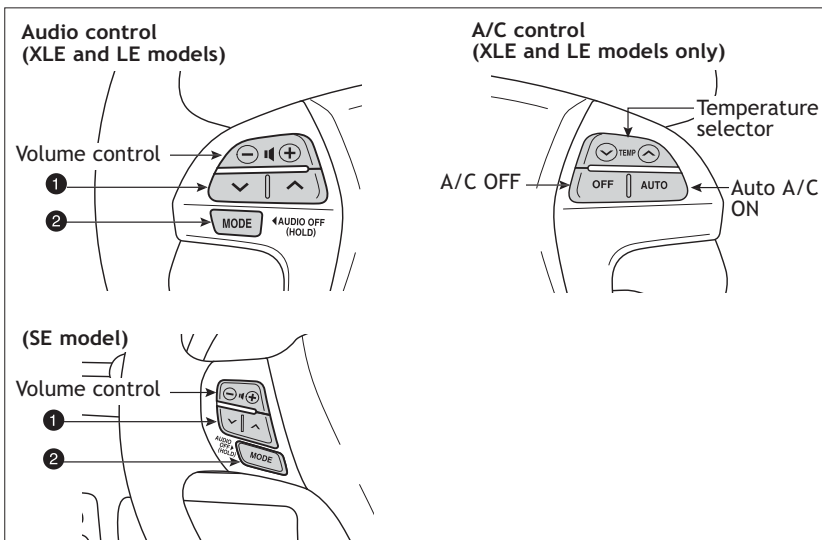 

### ① "V A"

-In **radio mode** Push to select a preset station; push and hold to seek the next strong station.

-In **CD mode** Push to skip up or down to next/previous track.

 
### ② "MODE"

Push to turn audio ON and select an audio mode. Push and hold to turn the audio system OFF.

## Cup holders


### Front

#### Manual Transmission models

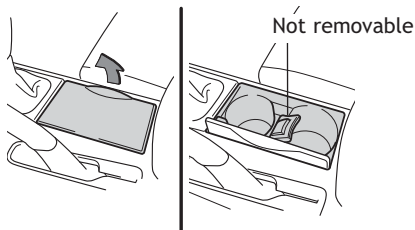


#### Automatic Transmission models
 
##### XLE and SE models

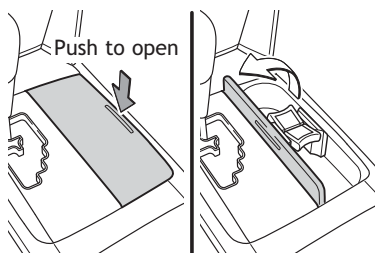


##### LE model

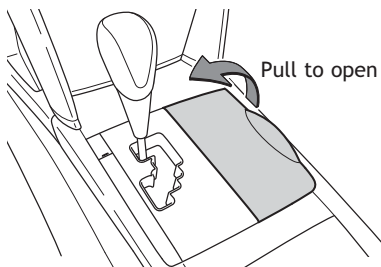 


### Rear
 
#### XLE and SE models

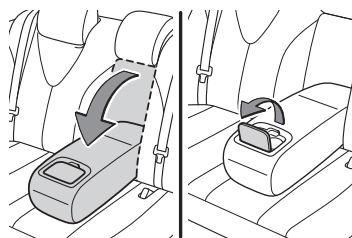


#### LE model

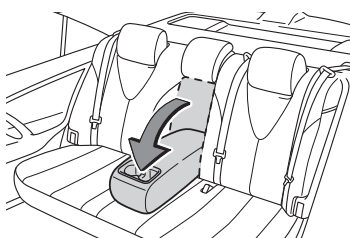 


# SAFETY AND EMERGENCY FEATURES
 
## Door locks

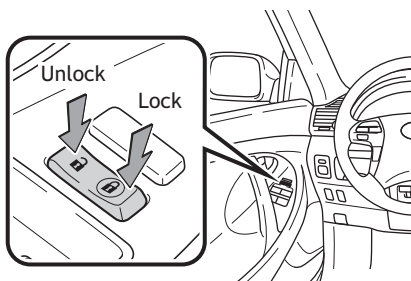


## Doors-Child safety locks

 Rear door

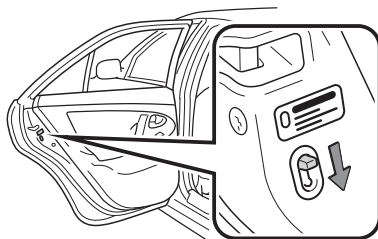

Moving the lever to "LOCK" will allow the door to be opened only from the outside.


## Seatbelts

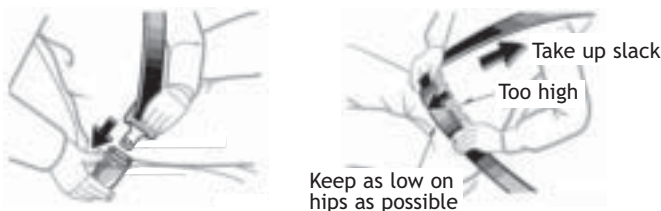 


If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seatbelts, and how to install a child restraint system, refer to the *Owner's Manual*.


### Seatbelts-Shoulder belt anchor

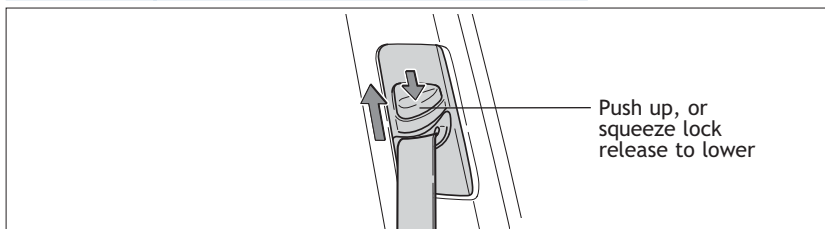 

### Child comfort guide

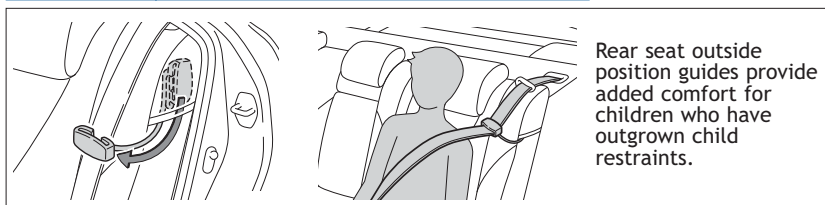 

### Tire Pressure Monitoring (warning) System

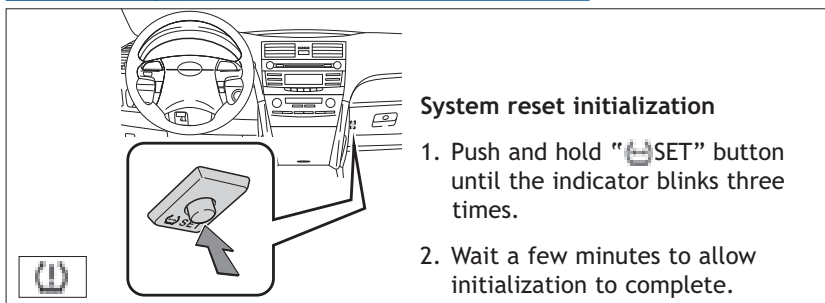 

After adjusting tire pressures, or after tires have been rotated or replaced, turn the ignition switch to "ON" and press and hold the "SET" button until indicator blinks three times. Let the vehicle sit for a few minutes to allow initialization to complete.

Refer to the load label on the door jamb or the *Owner's Manual* for tire inflation specifications.

If the tire pressure indicator flashes for more than 60 seconds and then remains on, take the vehicle to your local Toyota dealer.

**Note:** The warning light may come on due to temperature changes or changes in tire pressure from natural air leakage. If the system has not been initialized recently, setting the tire pressures to factory specifications should turn off the light.