

YARIS SEDAN

2 0 1 1

QUICK REFERENCE
GUIDE



TOYOTA

2011 Yaris Sedan

This *Quick Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Quick Reference Guide* is not intended as a substitute for the *Owner's Manual* located in your vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Yaris.

! A word about safe vehicle operations

This *Quick Reference Guide* is not a full description of Yaris operations. Every Yaris owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Quick Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

INDEX

OVERVIEW

Engine maintenance	7
Fuel tank door release and cap	6
Hood release	7
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Keyless entry*	6
Light control-Instrument panel	6

FEATURES/OPERATIONS

Air Conditioning/Heating	13
Audio	12
Automatic Transmission	8
Bottle holders-Front seat	15
Clock	15
Cruise control	14
Cup holders	15
Lights & turn signals	11
Parking brake	9
Power outlet	13
Seat adjustments-Front	9
Seat adjustments-Rear	10
Seats-Head restraints	10
Tilt steering wheel	8
Trunk release	8
VSC OFF button	14
Windows-Power	9
Windshield wipers & washers	11


SAFETY AND EMERGENCY FEATURES

Door locks-Power	16
Doors-Child safety locks	16
Seat belts	16
Seat belts-Shoulder belt anchor	17
Spare tire & tools	17
Trunk-Internal release	17
Tire Pressure Monitoring (warning) System	16


* Visit your Toyota dealer for information on this and other customizable options.

OVERVIEW

Instrument panel

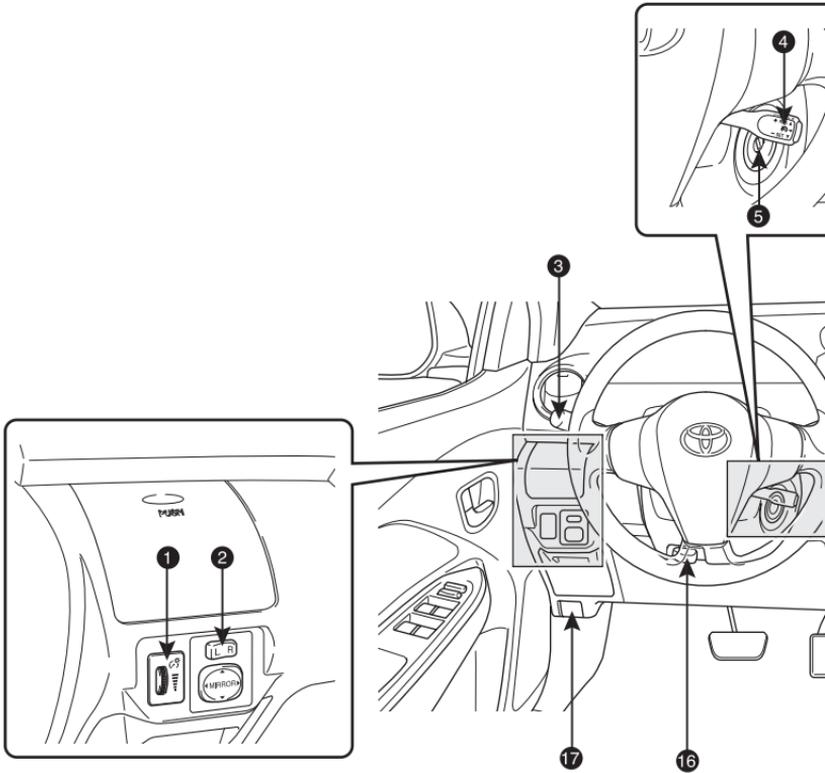

- ① Instrument panel light control
- ② Power outside rearview mirror controls*
- ③ Headlight, turn signal and front fog light* controls
- ④ Cruise control*
- ⑤ Ignition switch
- ⑥ Wiper and washer controls
- ⑦ Emergency flasher button
- ⑧ Front passenger seat belt reminder light
- ⑨ Clock adjust button
- ⑩ Odometer/Trip meter switch and trip meter reset button

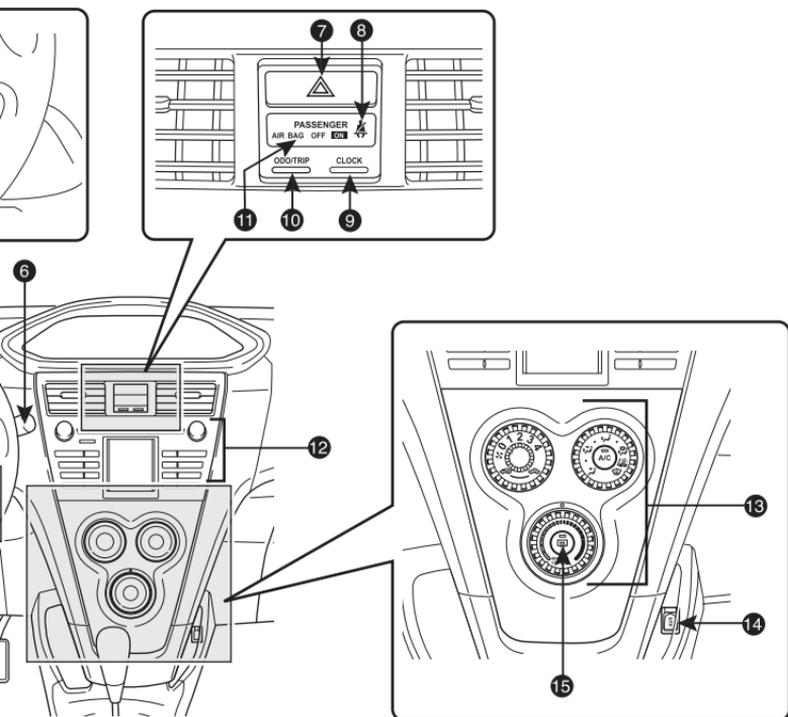


- 11 "AIR BAG ON" and "AIR BAG OFF" indicator
- 12 Audio system*
- 13 Air Conditioning controls
- 14 AUX port*
- 15 Rear window defogger switch*
- 16 Tilt steering lock release lever
- 17 Hood release


* If equipped

Instrument cluster

With optitron type meter

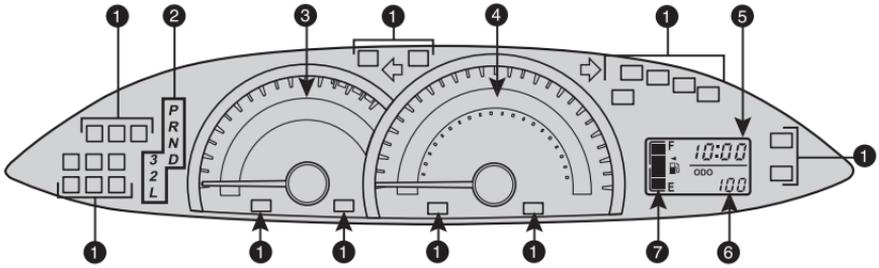

Without optitron type meter

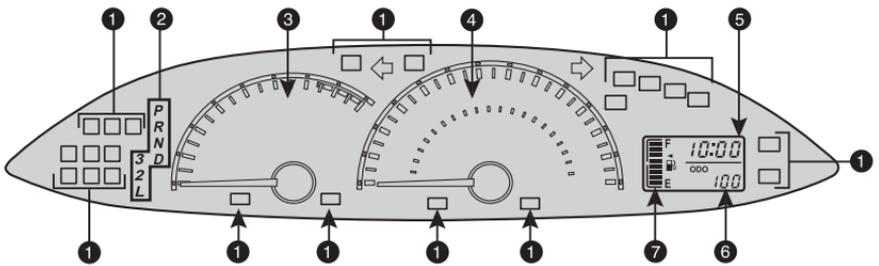

- 1 Service indicator and reminder
- 2 Gear shift position indicator (if equipped)
- 3 Tachometer
- 4 Speedometer
- 5 Clock
- 6 Odometer and two trip meters
- 7 Fuel gauge

Indicator symbols

For details, refer to "Indicators and warning lights," Section 2-2, 2011 Owner's Manual.

-  BRAKE Brake system warning¹
-  Driver seat belt reminder (alarm will sound if speed is over 12 mph)
-  PASSENGER Front passenger seat belt reminder (alarm will sound if speed is over 12 mph)
-  Charging system warning¹

¹ If indicator does not turn off within a few seconds of starting engine, there may be a malfunction. Have vehicle inspected by your Toyota dealer.

² For details, refer to "If your vehicle overheats," Section 5-2, 2011 Owner's Manual.

	Malfunction/Check Engine indicator ¹
	Low engine oil pressure warning ¹
	Open door warning
	Airbag SRS warning ¹
	Low windshield washer fluid level warning
	Electric power steering system warning ¹
	Low fuel level warning
MAINT REQD	Engine oil replacement reminder ¹
AIR BAG ON	AIR BAG ON indicator
AIR BAG OFF	AIR BAG OFF indicator
	Headlight low beam indicator
	Headlight high beam indicator
	Front fog light indicator
	Turn signal indicator
	High engine coolant temperature warning ¹
	Low engine coolant temperature indicator ²
	Slip indicator ¹
	Vehicle Stability Control OFF indicator ¹
TRAC OFF	Traction Control OFF indicator ¹
	Cruise control indicator ³
SET	Cruise control SET indicator
ABS	Anti-lock Brake System warning ¹
	Low Tire Pressure Warning ¹

³ If this light flashes, refer to "Cruise control," Section 2-4, 2011 Owner's Manual.

Fuel tank door release and cap


Driver seat

Pull up

Turn

Hang

NOTE: Tighten until one click is heard. If the cap is not tightened enough, Check Engine "CHECK" indicator may illuminate.

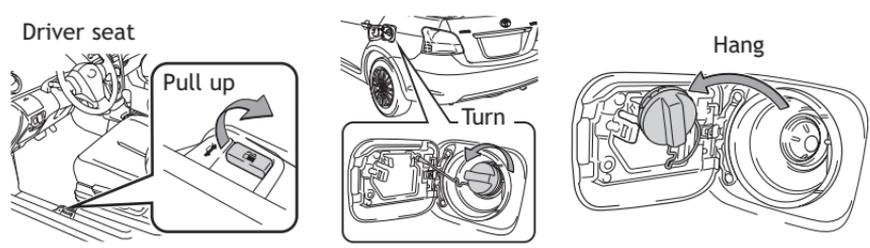

Keyless entry (if equipped)


Locking operation

Unlocking operation

Push

Push ONCE: Driver door
TWICE: All doors

NOTE: If a door is not opened within 30 seconds of unlocking, all doors will relock for safety.

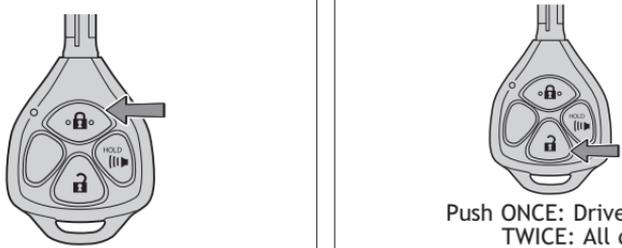


Panic button

Push and hold




Light control-Instrument panel


Brightness control

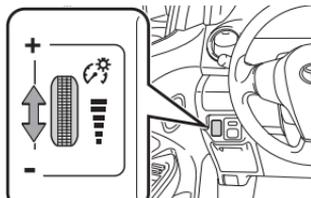

Hood release

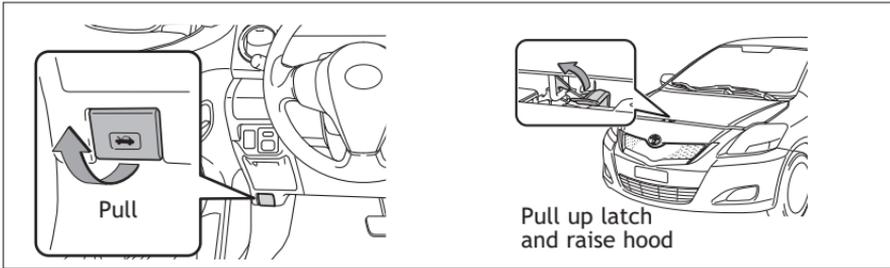

Engine maintenance

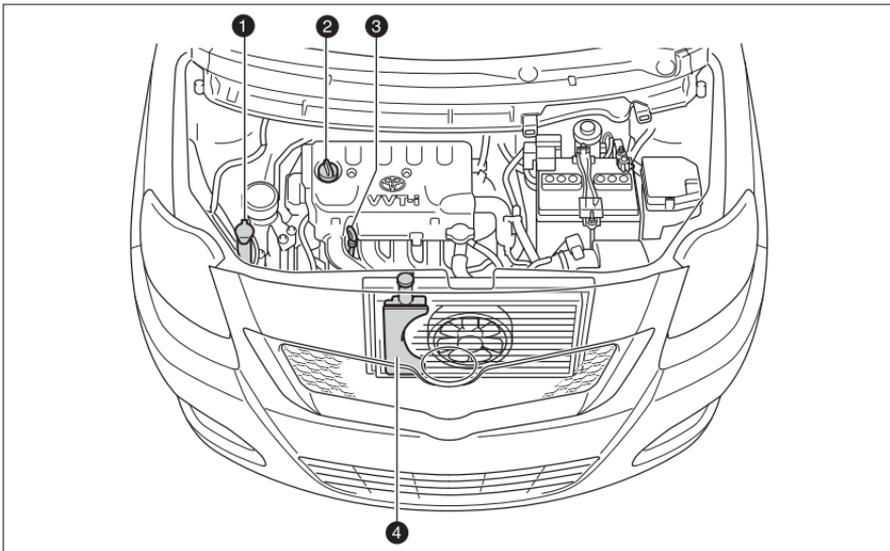


- ① Windshield washer fluid tank
- ② Engine oil filler cap
- ③ Engine oil level dipstick
- ④ Engine coolant reservoir

NOTE: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the "Warranty Maintenance Guide."

FEATURES/OPERATIONS


Automatic Transmission (if equipped)

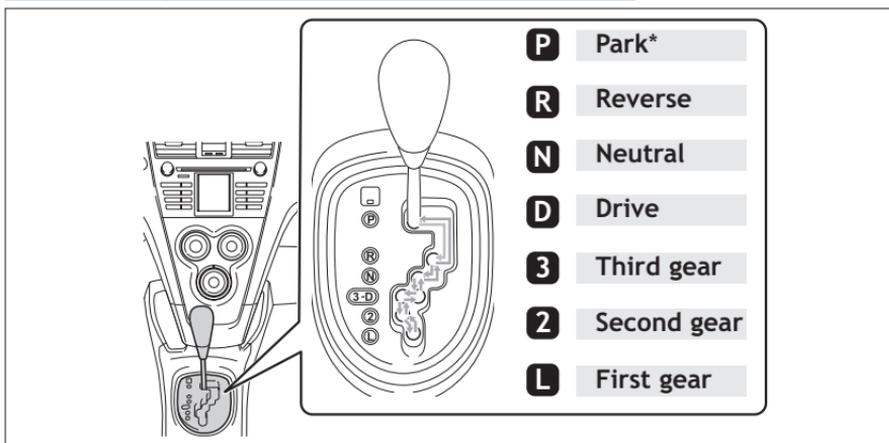

* The engine switch must be "ON" and the brake pedal depressed to shift from Park.

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.


Tilt steering wheel

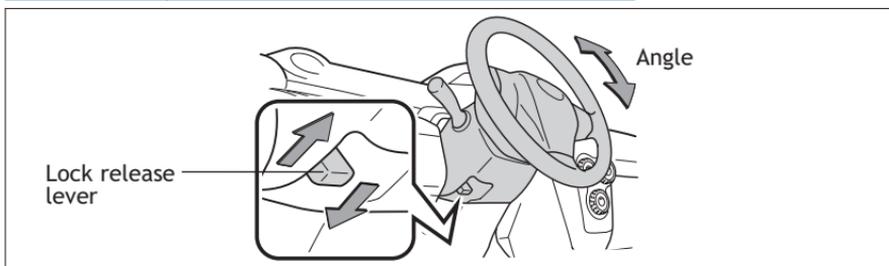


Hold wheel, push lever down, set angle and return lever.

NOTE: Do not attempt to adjust while the vehicle is in motion.


Trunk release

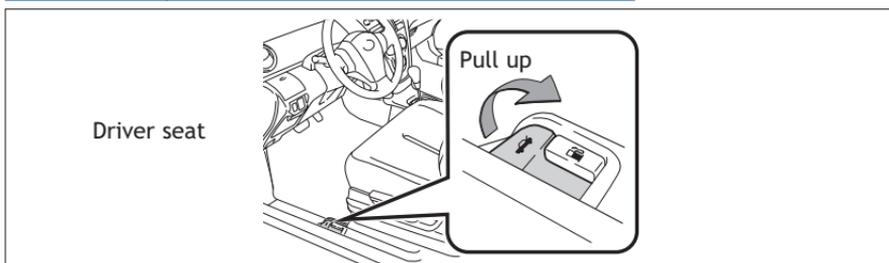

Parking brake

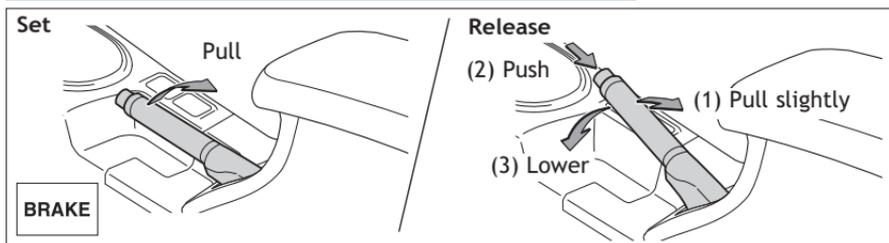

Windows-Power (if equipped)

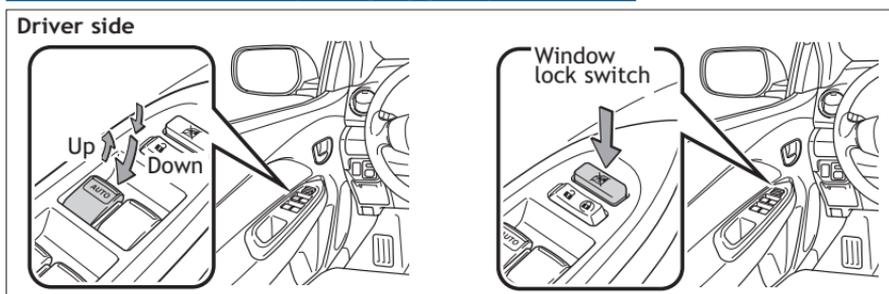


Window operation

Automatic down operation (driver side only) Push the switch completely down and release to fully open. To stop window at any point, lightly pull the switch up.

Window lock switch Deactivates all passenger windows. Driver's window remains operable.


Seat adjustments-Front

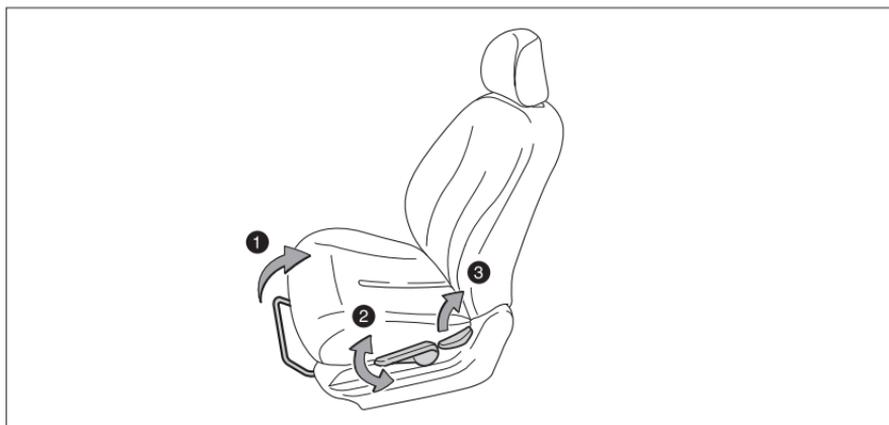


- ① Seat position (forward/backward)
- ② Height crank (driver side only)
- ③ Seatback angle

Seat adjustments-Rear (fold-down type)

Before folding

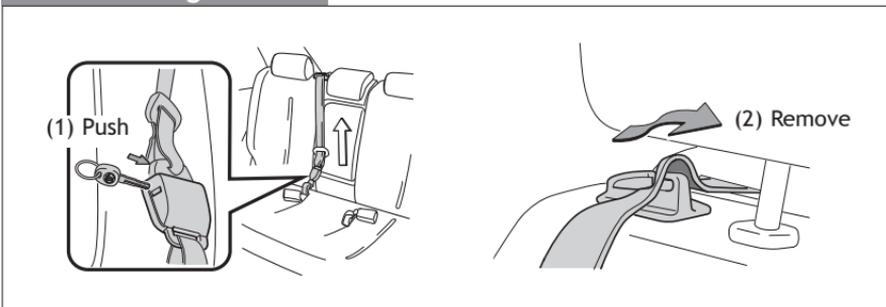

Fold

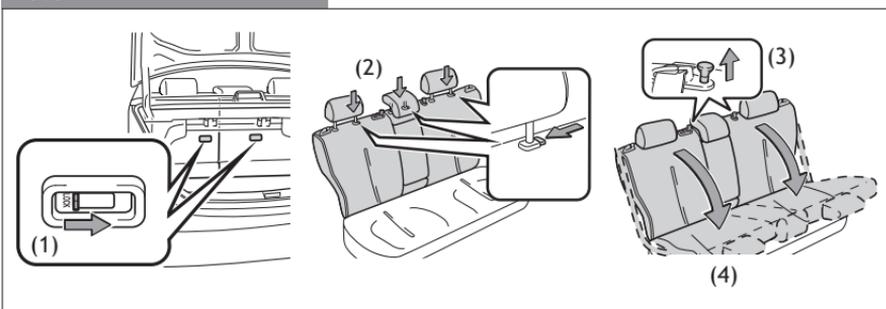


To fold down the rear seatback

- (1) Slide the seatback security lock to the right unlock position from the trunk area.
- (2) Lower the seat head restraints.
- (3) Pull the lock release knob up.
- (4) Fold the seatback down.


Refer to the *Owner's Manual* for more details.

Seats-Head restraints

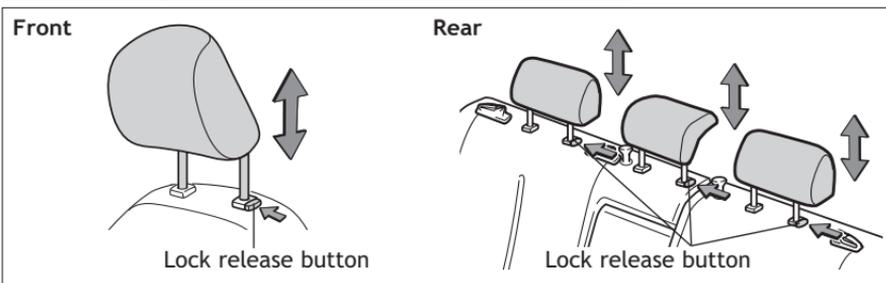


Lights & turn signals


Headlights

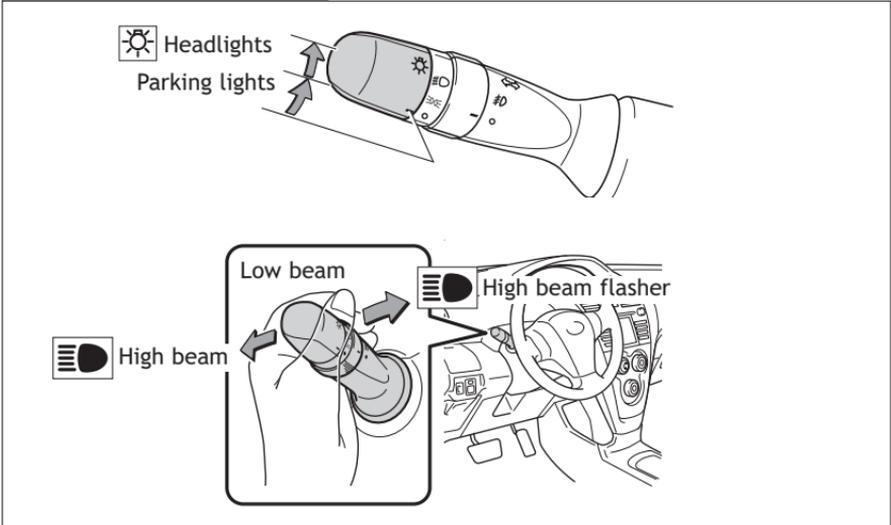

Turn signals

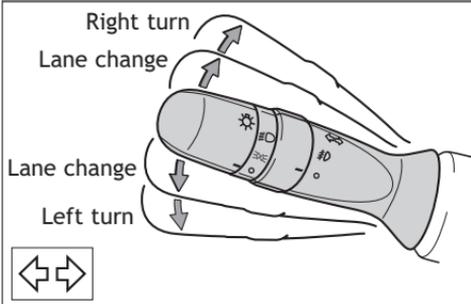


Front fog lights (if equipped)

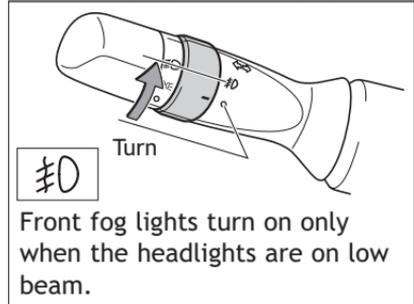


Windshield wipers & washers

With interval adjuster

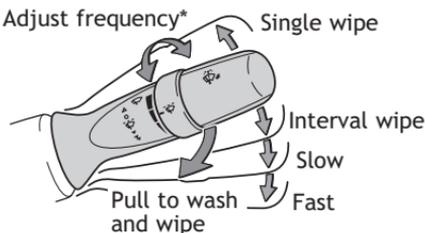


* Intermittent windshield wiper frequency adjustment
Rotate to increase/decrease wipe frequency.

Without interval adjuster

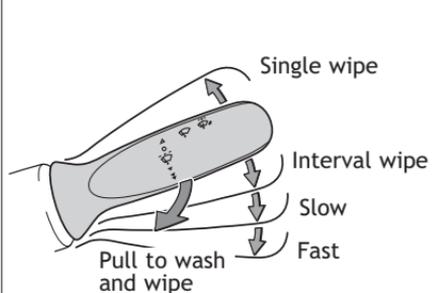

Audio (if equipped)

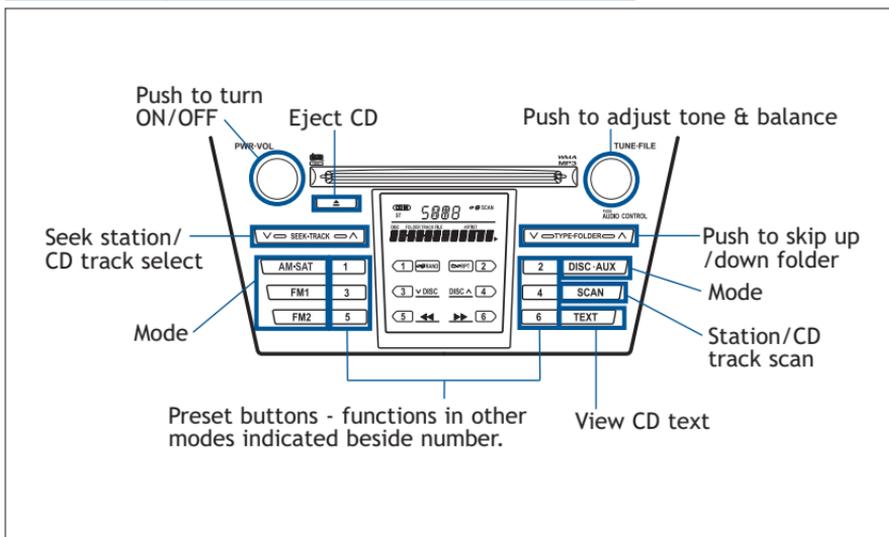

CD player


To scan tracks on a disc Push "SCAN." Push again to hold selection.

Radio

To preset stations Tune in the desired station and hold down a preset button (1-6) until you hear a beep. Push desired preset button (1-6) to select.

To scan stations Push "SCAN." Push and hold to scan preset stations. Push again to hold selection.


AUX port (if equipped)

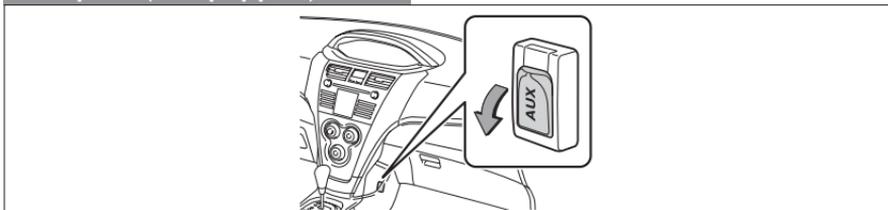

By inserting a mini plug of a commercially available component into the AUX port, you can listen to music from a portable audio device through the vehicle's speaker system while in AUX mode.


NOTE: An iPod®-dedicated port is standard on all sedans with an S-Package.

Air Conditioning/Heating

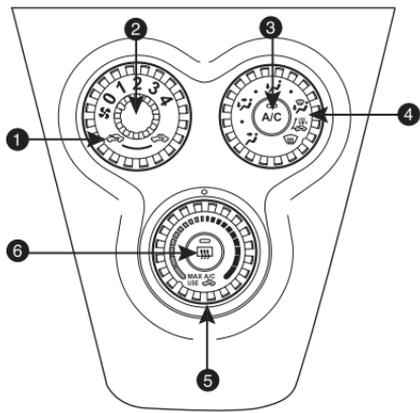

- ① Recirculate cabin air (fresh air when OFF)
- ② Fan speed
- ③ Air Conditioning ON/OFF
- ④ Airflow vent
In " " mode, use fresh air to reduce window fogging.
- ⑤ Temperature selector
- ⑥ Rear defogger


Power outlet

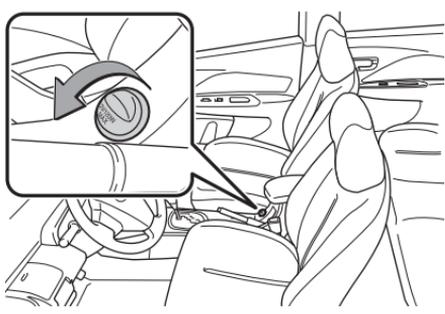


Designed for 12V car accessories. Key must be in the "ACC" or "ON" position to be used.

Cruise control (if equipped)

Turning system ON/OFF

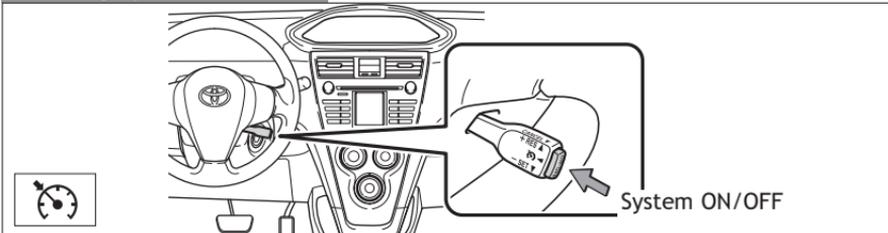

Functions

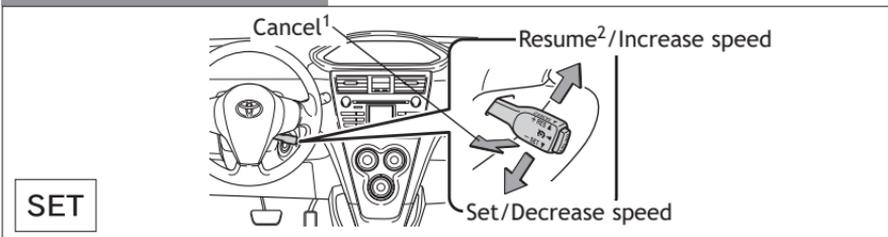


¹ The set speed may also be cancelled by depressing the brake pedal or the clutch pedal (Manual Transmission).

² Unless vehicle speed drops below 10 mph, the set speed may be resumed once vehicle exceeds 25 mph.

Refer to the *Owner's Manual* for more details.


VSC OFF button

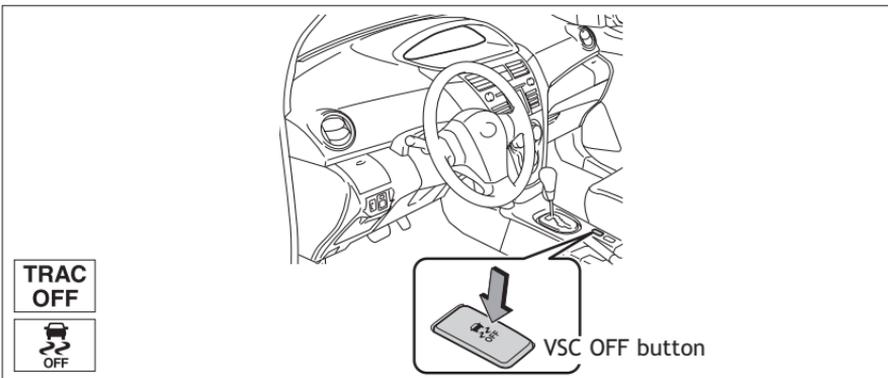

The VSC OFF button is used to switch between modes related to the TRAC and VSC.

Refer to Section 2-4 of the *Owner's Manual* for more information.


Clock

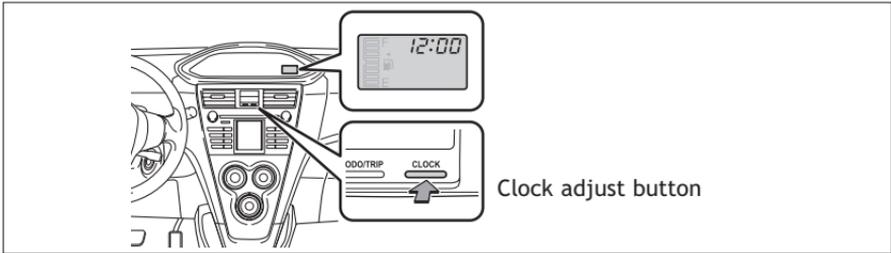

- (1) Push and hold the CLOCK button to enter adjustment mode. (2) Press CLOCK button to adjust hours. (3) Wait five seconds to adjust the minutes. (4) Wait another five seconds for process to complete.


Cup holders

Front

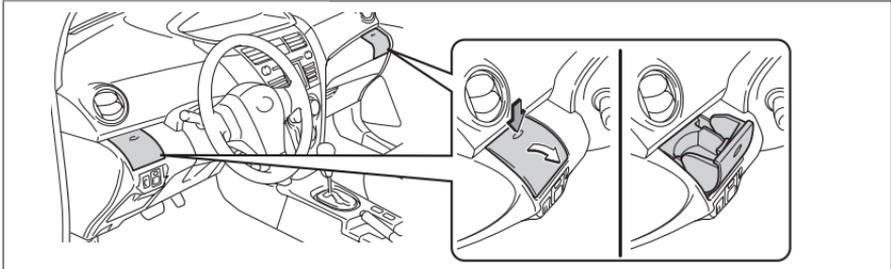


Rear


Rear console box

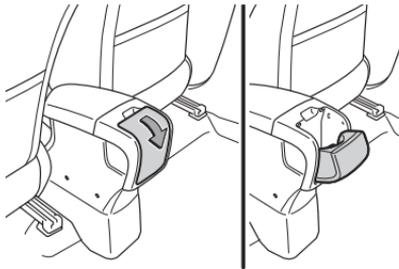

Rear seat armrest (if equipped)

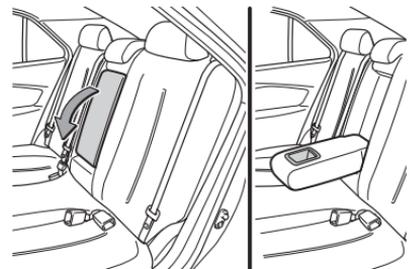


Bottle holders-Front seat

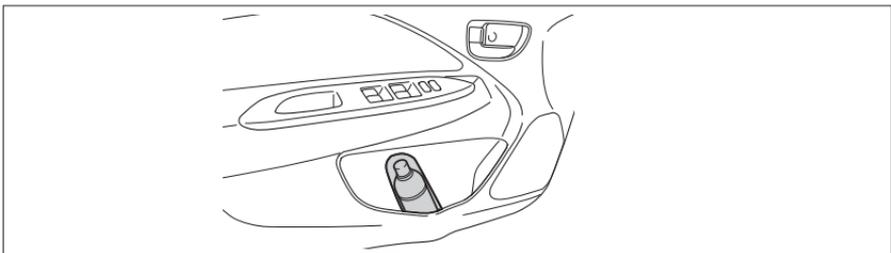


SAFETY AND EMERGENCY FEATURES

Door locks-Power (if equipped)

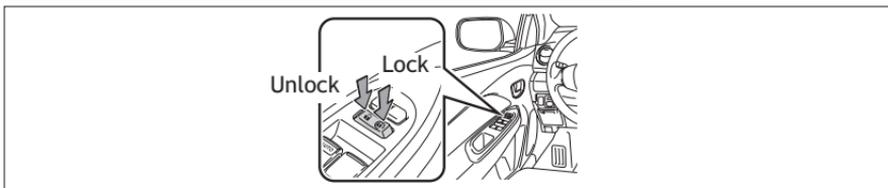


Doors-Child safety locks

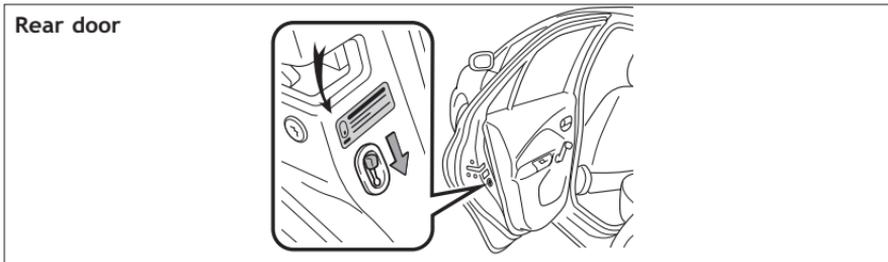

Moving the lever to "LOCK" will allow the door to be opened only from the outside.

Seat belts

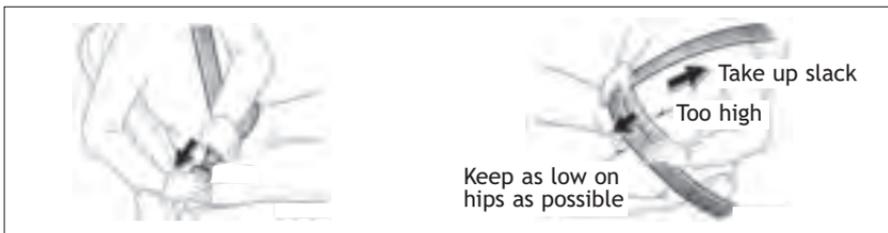

If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.


To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.

Tire Pressure Monitoring (warning) System

If tire pressure becomes critically low on any of the tires (excluding the spare), "(!)" indicator will illuminate. Correctly adjusting tire inflation will turn off the light after a few minutes. If the light does not turn off, have the system checked by your Toyota dealer.


Refer to the *Owner's Manual* for more details.

Seat belts-Shoulder belt anchor

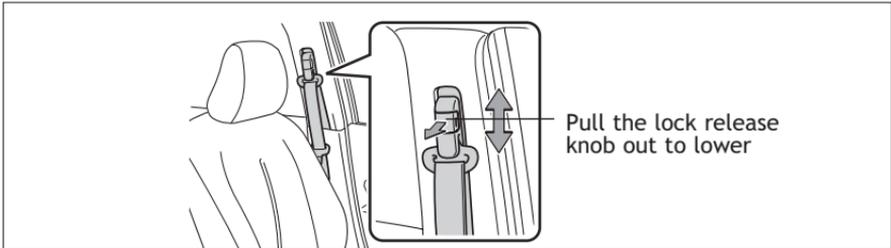

Spare tire & tools


Tool location

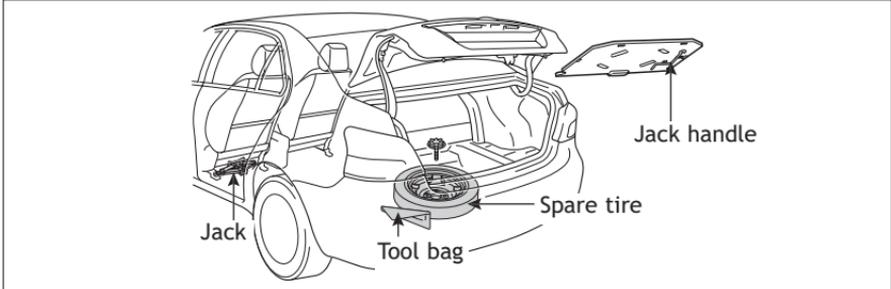

Removing the spare tire



Trunk-Internal release

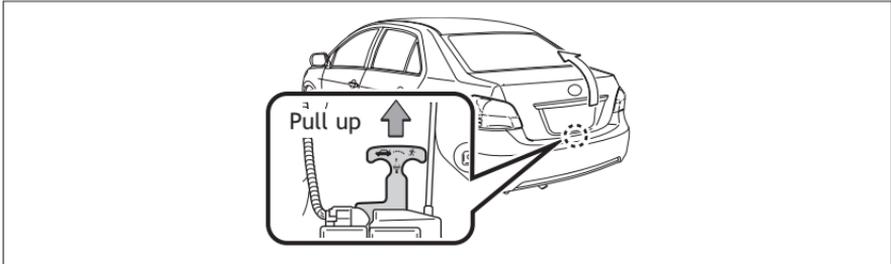



CUSTOMER EXPERIENCE CENTER

1-800-331-4331



Mixed Sources

Product group from well-managed
forests, controlled sources and
recycled wood or fiber

www.fsc.org Cert no. SGSNA-COC-005612
© 1996 Forest Stewardship Council

