



MATRIX

2 0 1 1

QUICK REFERENCE
GUIDE



TOYOTA

2011 Corolla Matrix

This *Quick Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Quick Reference Guide* is not intended as a substitute for the *Owner's Manual* located in your vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Corolla Matrix.

! A word about safe vehicle operations

This *Quick Reference Guide* is not a full description of Corolla Matrix operations. Every Corolla Matrix owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Quick Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

INDEX

OVERVIEW

Engine maintenance	7
Fuel tank door release and cap	6
Hood release	7
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Keyless entry¹	6

FEATURES/OPERATIONS

Air Conditioning/Heating	16
Audio	14-15
Auto lock/unlock²	8
Automatic Transmission	8
Auxiliary storage	17
Bottle holders	19
Clock	10
Cruise control	17
Cup holders	18
Door-Back	13
Door locks-Power	13
Light control-Instrument panel	16
Lights & turn signals	11
Moonroof	13
Parking brake	10
Power outlet-12V DC	19
Power outlet-115V AC	19
Seat adjustments-Front	9
Seat adjustments-Rear	9
Seats-Head restraints	9
Telephone controls (Bluetooth®)	18
Tilt and telescopic steering wheel	10
Windows-Power	12
Windshield wipers & washers	12

SAFETY AND

EMERGENCY FEATURES

Doors-Child safety locks	20
Seat belts	21
Seat belts-Shoulder belt anchor	20
Spare tire & tools	21
Tire Pressure Monitoring (warning) System	20


¹ Visit your Toyota dealer for information on customizing this feature.

² Programmable by customer. Refer to the Owner's Manual for instructions and more information.


OVERVIEW

Instrument panel

Steering wheel controls

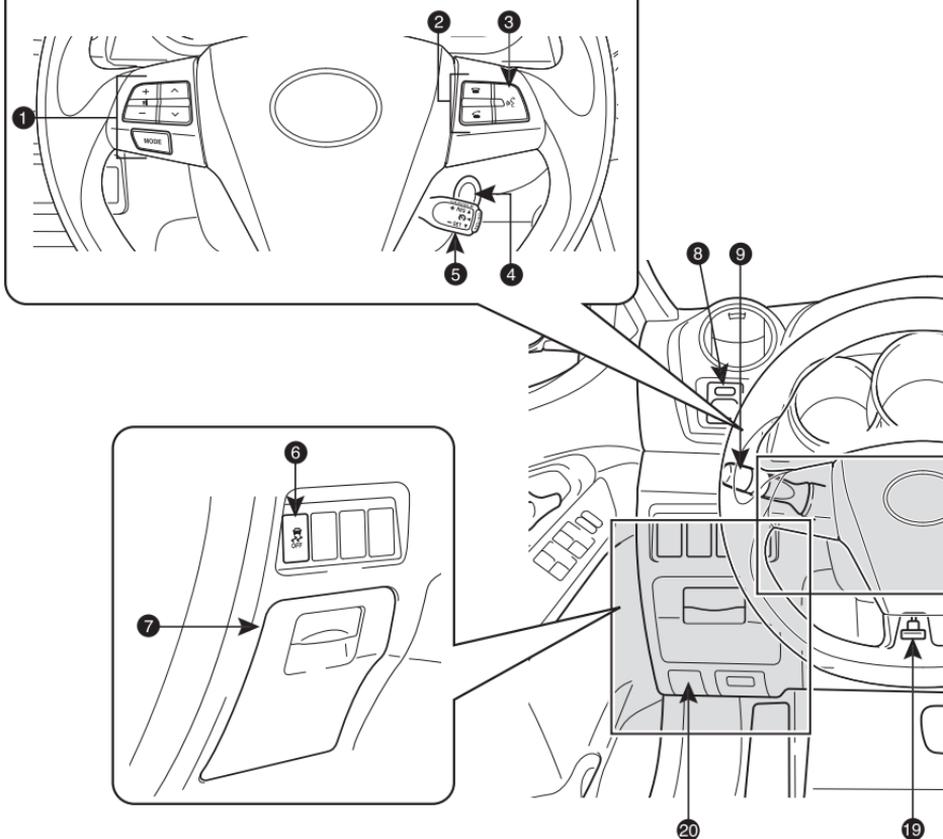


- 1 Steering wheel audio controls
- 2 Telephone controls*
- 3 Voice command button*
- 4 Ignition switch
- 5 Cruise control*
- 6 VSC/TRAC OFF switch
- 7 Auxiliary storage
- 8 Power outside rearview mirror control
- 9 Headlight, turn signal and front fog light* controls
- 10 Wiper and washer controls
- 11 "AIR BAG ON" and "AIR BAG OFF" indicator

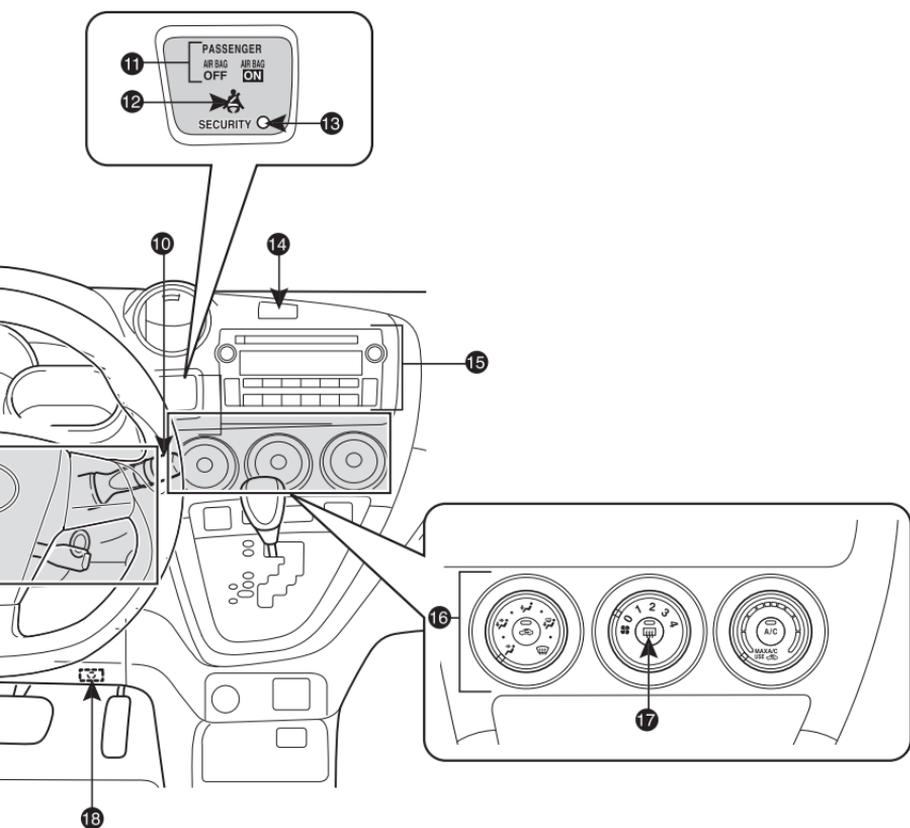

- 12 Front passenger seat belt reminder light
- 13 Engine immobilizer indicator
- 14 Emergency flasher button
- 15 Audio system
- 16 Air Conditioning controls
- 17 Outside rearview mirrors*/Rear window defogger button
- 18 Tire Pressure Monitoring (warning) System reset
- 19 Tilt and telescopic steering control
- 20 Hood lock release lever

* If equipped

Instrument cluster

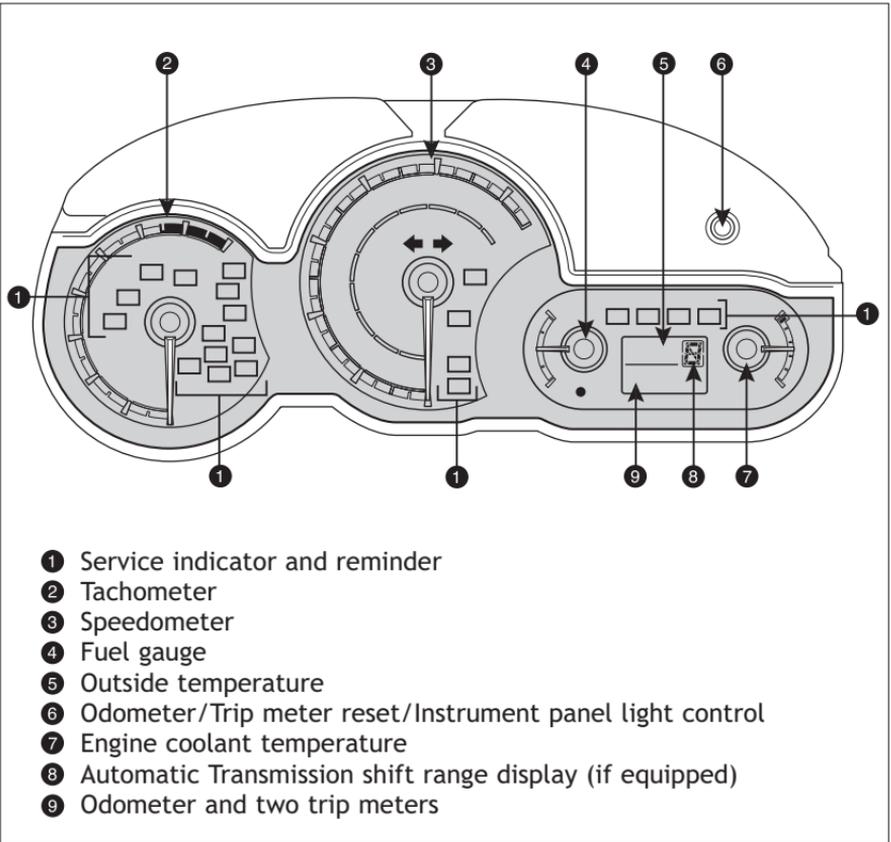

Indicator symbols

For details, refer to “Indicators and warning lights,” Section 2-2, 2011 Owner’s Manual.


BRAKE	Brake system warning ¹
	Driver seat belt reminder (alarm will sound if speed is over 12 mph) Front passenger seat belt reminder (alarm will sound if speed is over 12 mph)
	Charging system warning ¹
AIR BAG OFF AIR BAG ON	AIR BAG ON and AIR BAG OFF indicator

¹ If indicator does not turn off within a few seconds of starting engine, there may be a malfunction. Have vehicle inspected by your Toyota dealer.

	Electric power steering warning ¹
	Malfunction/Check Engine indicator ¹
	Low fuel level warning
	Open door warning
	SRS Airbag warning ¹
	Low Tire Pressure Warning ¹
	Headlight low/high beam indicator
	Turn signal indicator
	Fog light indicator
	Slip indicator ¹
	Engine immobilizer system indicator
	Vehicle Stability Control off indicator ¹
	Traction control OFF indicator ¹
	Cruise control indicator
	Cruise control SET indicator
	Anti-lock Brake System warning ¹
	Low engine oil pressure warning ¹
	Maintenance/Service required indicator ¹
	Active torque control 4WD system warning ¹

Keyless entry (if equipped)

Locking operation

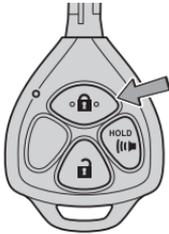

Push 


Unlocking operation



Push ONCE: Driver door
TWICE: All doors 




NOTE: If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.

Panic button

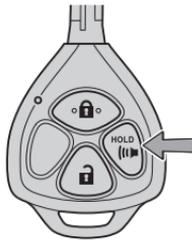


Push and hold 

Fuel tank door release and cap

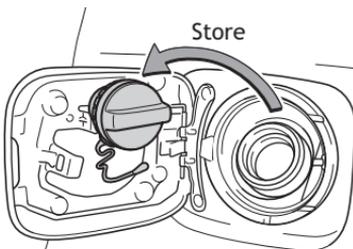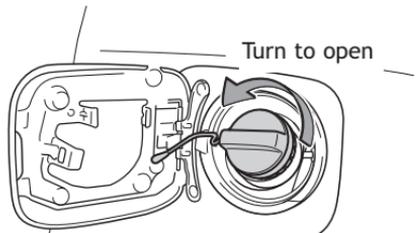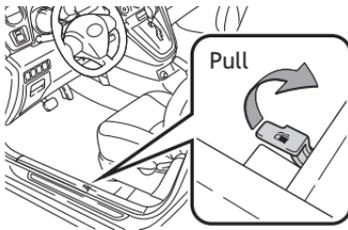


NOTE: Tighten until one click is heard. If the cap is not tightened enough, Check Engine "  " indicator may illuminate.

Hood release

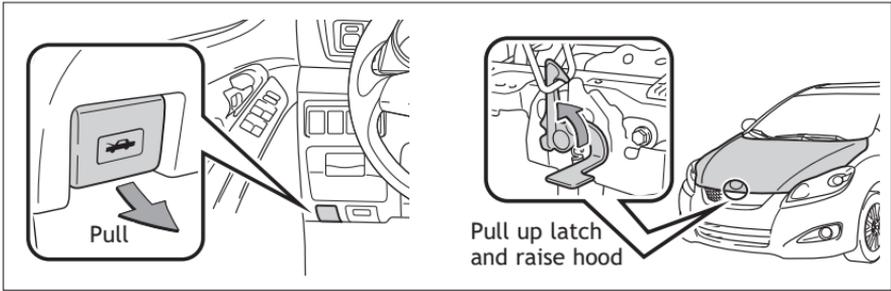


Engine maintenance

4 cylinder (2AZ-FE) engine

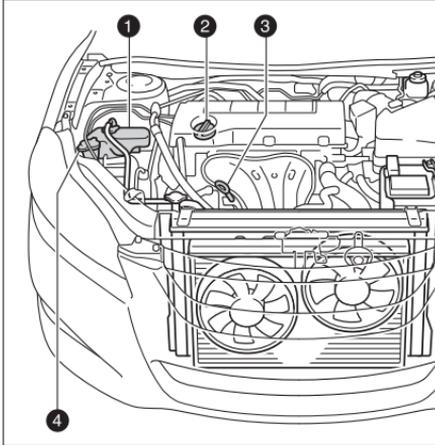

4 cylinder (2ZR-FE) engine

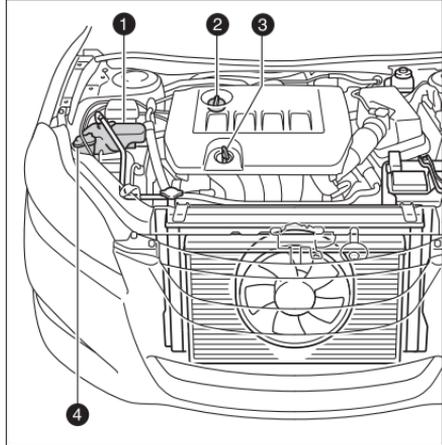

- 1 Engine coolant reservoir
- 2 Engine oil filler cap
- 3 Engine oil level dipstick
- 4 Windshield washer fluid tank

NOTE: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the "Warranty Maintenance Guide."

FEATURES/OPERATIONS

Auto lock/unlock (if equipped)


Automatic door locks can be programmed to operate in three different modes, or turned OFF.

- Doors lock when shifting from Park.
- Doors unlock when shifting into Park.
- Doors unlock when the driver's door is opened within 10 seconds after setting the ignition switch to "ACC" or "LOCK" position.


Refer to the *Owner's Manual* for more details.

Automatic Transmission (if equipped)

Standard type

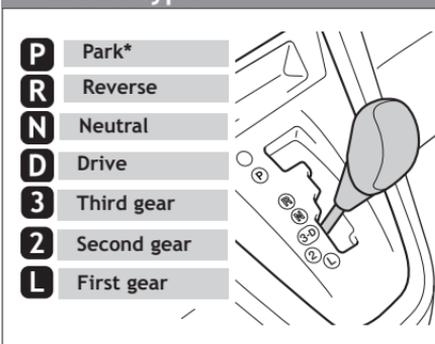

Multi-mode type

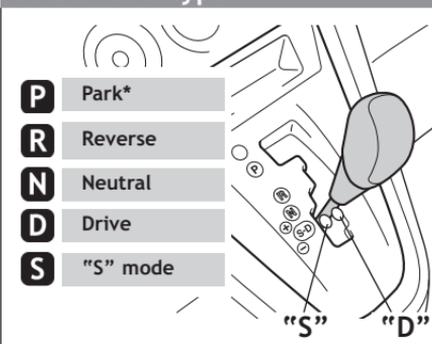

* The ignition switch must be "ON" and the brake pedal depressed to shift from Park.

"S" (Sequential) mode

Shift the shift lever to "S" position from "D" position.

- +: Upshift (push and release)
- : Downshift (pull and release)

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.


Seat adjustments-Front



- ❶ Seat position (forward/backward)
- ❷ Height crank (driver side only)
- ❸ Seatback angle


Seats-Head restraints

Front

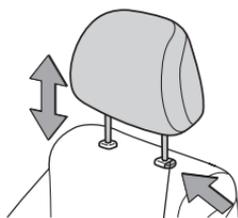


Lock release button

Rear

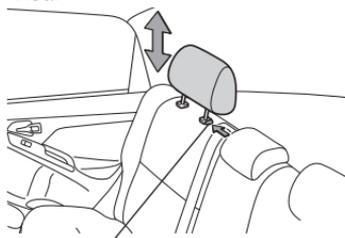


Lock release button


Seat adjustments-Rear

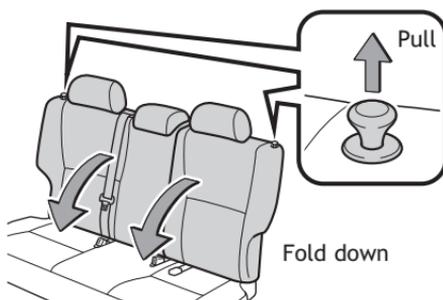

Parking brake

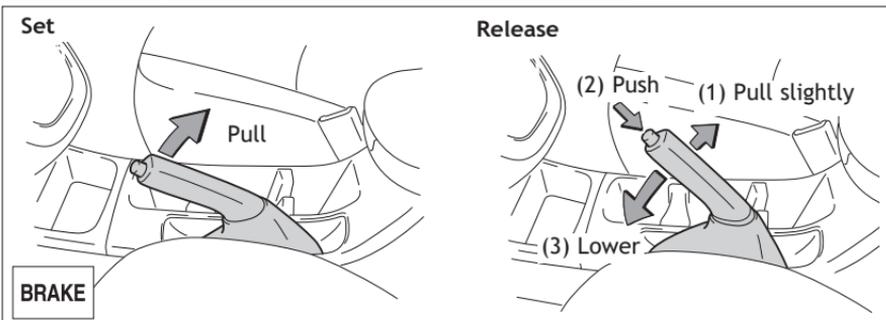


Tilt and telescopic steering wheel

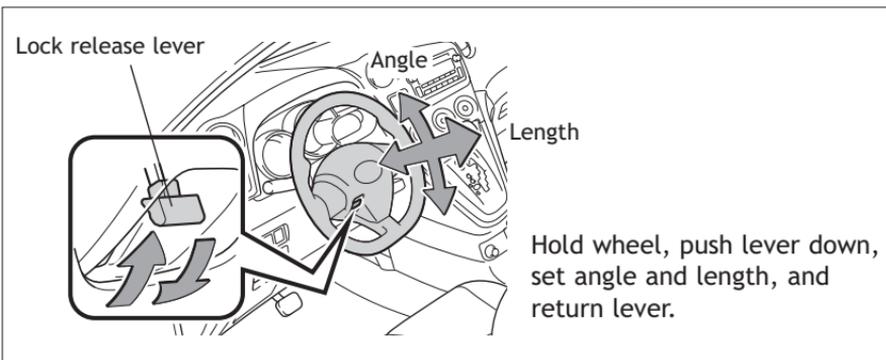

NOTE: Do not attempt to adjust while the vehicle is in motion.


Clock

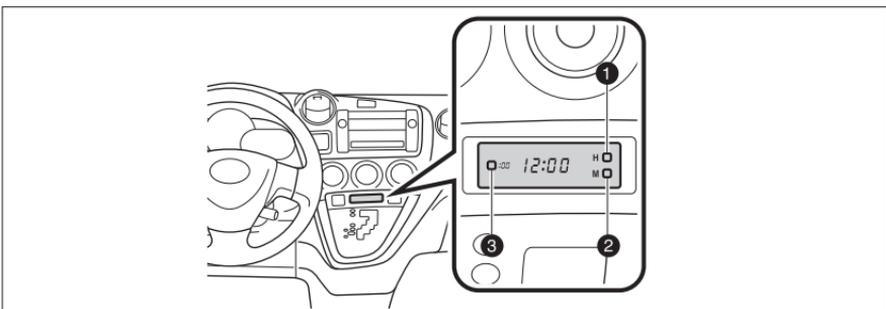

- ① Hour set
- ② Minute set
- ③ Round off minutes


Lights & turn signals

Headlights

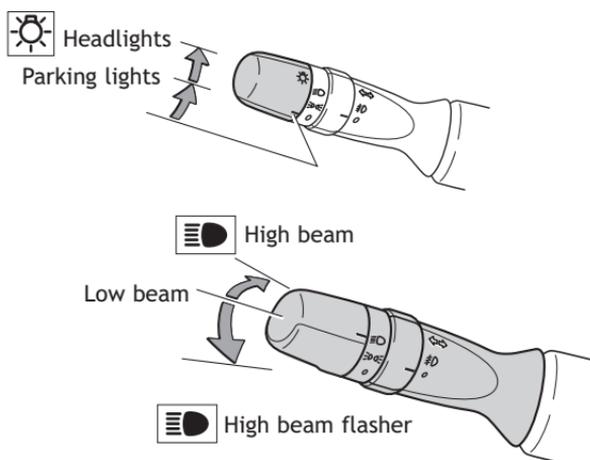


Daytime Running Light system (DRL) Headlights turn on automatically upon starting engine. The brightness of the headlights will automatically change depending on the darkness of the surroundings.

Front fog lights (if equipped)

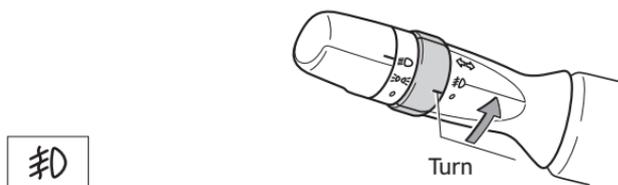


Front fog lights come on only when the headlights are on low beam.

Turn signals

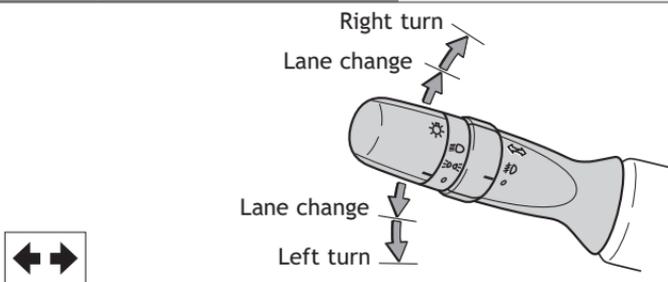


Windshield wipers & washers

Front

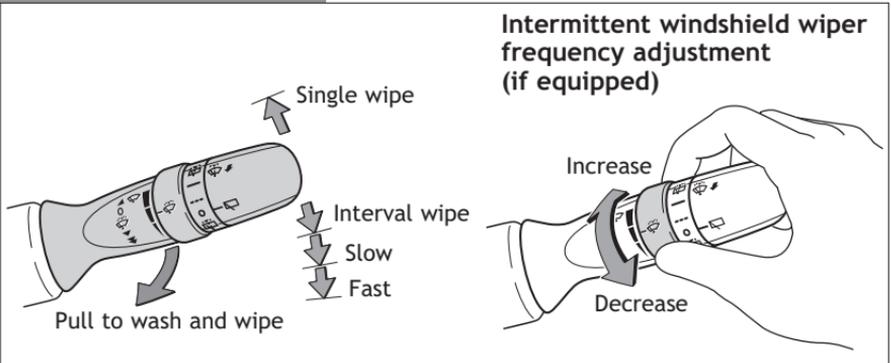


Rear (if equipped)

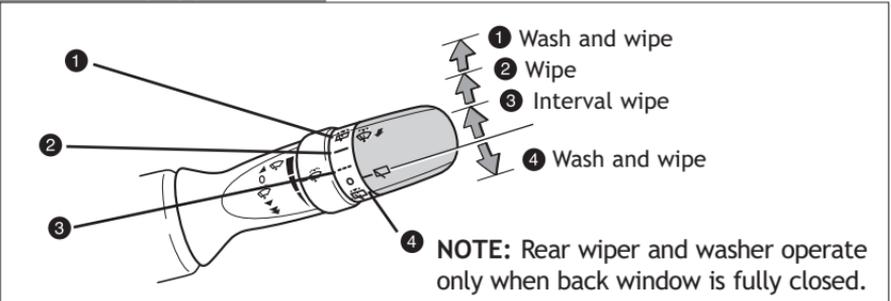

Windows-Power (if equipped)

Driver side

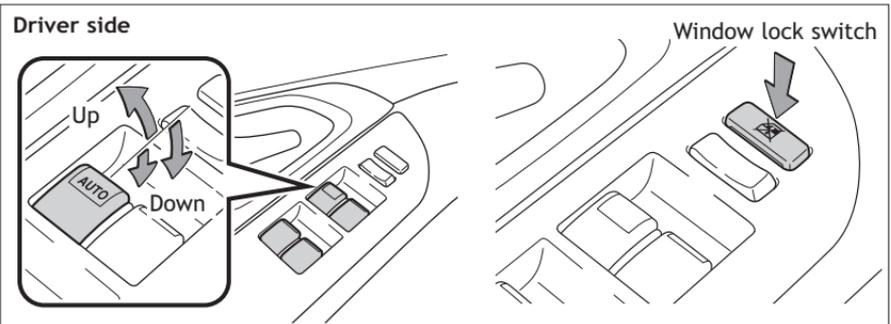


Automatic operation (driver side only) Push the switch completely down and release to fully open. To stop window midway, lightly push the switch in the opposite direction.

Window lock switch Deactivates all passenger windows. Driver's window remains operable.

Moonroof (if equipped)


Sliding operation

Recommended open position to minimize wind noise.

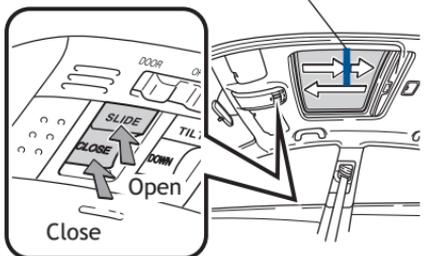


Push once to open partway; again to open completely.


Tilting operation

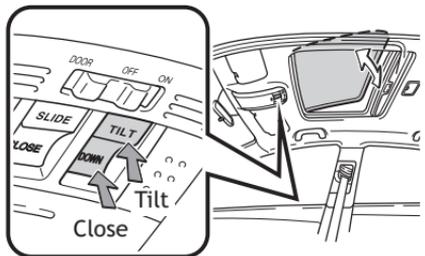

Door-Back

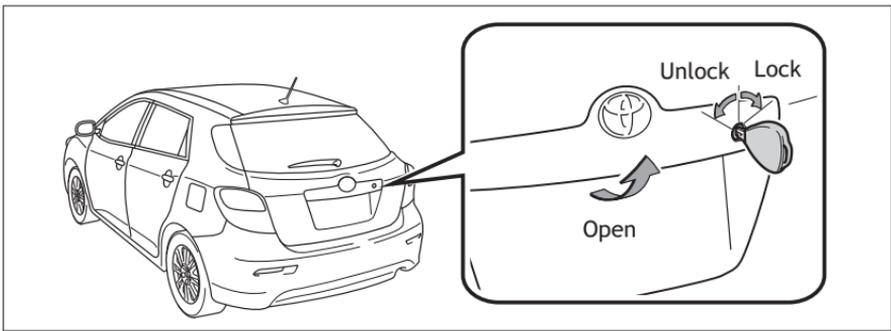


Door locks-Power (if equipped)

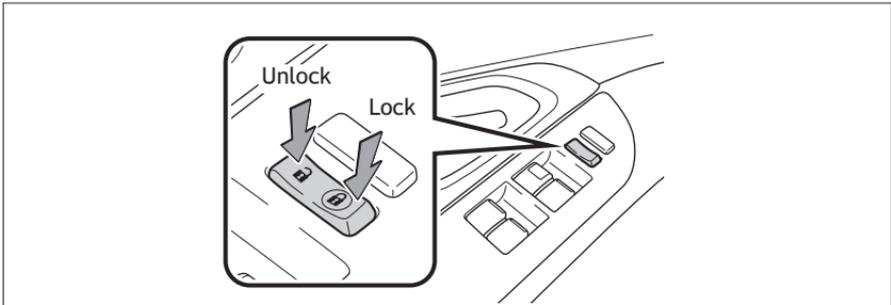


Audio

Type 1 functions

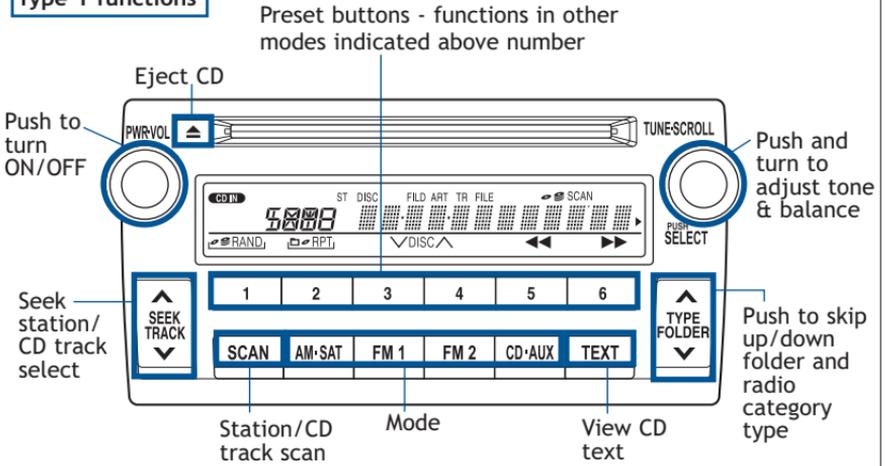

Type 2 functions

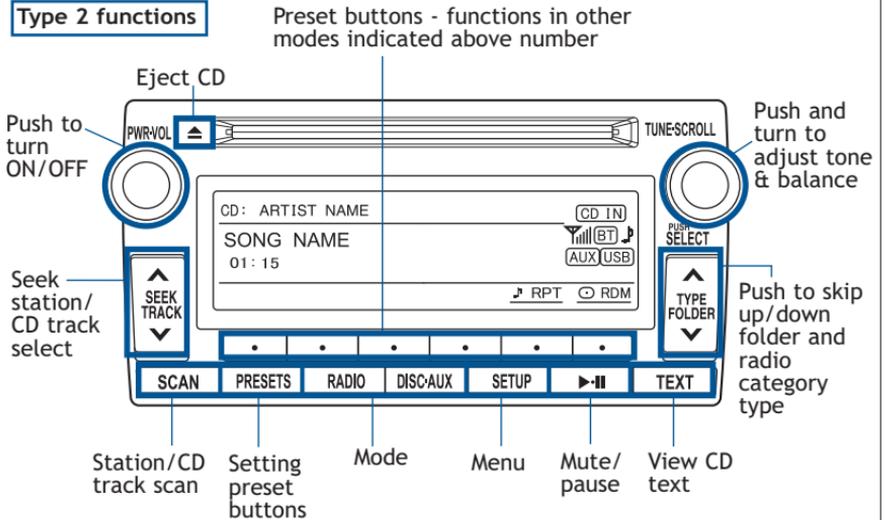

CD player

To scan tracks on a disc Push and hold "SCAN." Push again to hold selection.


To select a file (MP3/WMA only) Turn "TUNE-SCROLL."

Radio

To preset stations Tune in the desired station and hold down a preset button (from **1** to **6** or one of **0**) until you hear a beep. Push desired preset button (from **1** to **6** or one of **0**) to select.

To scan stations Push and hold "SCAN" to scan preset stations. Push again to hold selection.

AUX port or USB/AUX port

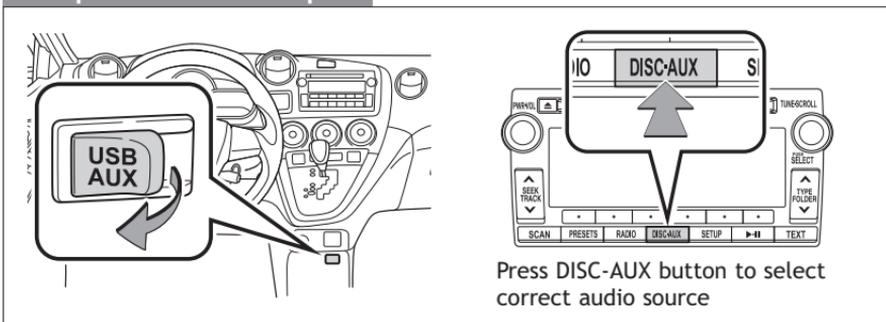

Press DISC-AUX button to select correct audio source


AUX port

By inserting a mini plug into the AUX port, you can listen to music from a portable audio device through the vehicle's speaker system while in AUX mode.

USB port (if equipped)

By connecting a USB-compatible portable audio device or USB memory to the USB port, you can listen to music from the portable audio device or USB memory through the vehicle's speaker system while in USB mode.

Steering wheel switches

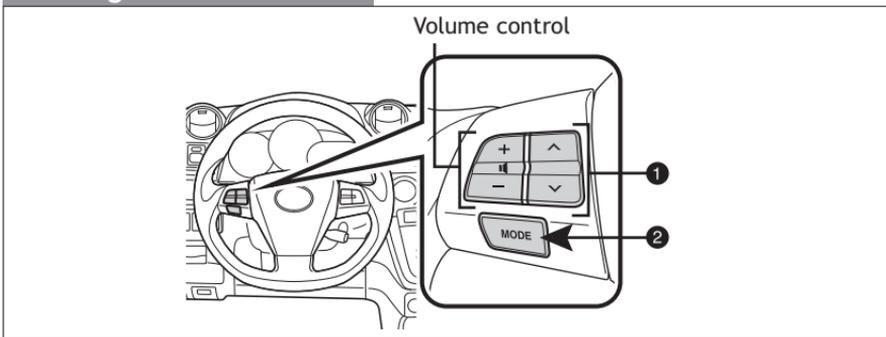


1 "V ▲"

Use to search within the selected audio medium (radio, CD, iPod®, etc.).

2 "MODE"


Push to turn audio ON and to select an audio mode. Push and hold to turn the audio system OFF.

Air Conditioning/Heating

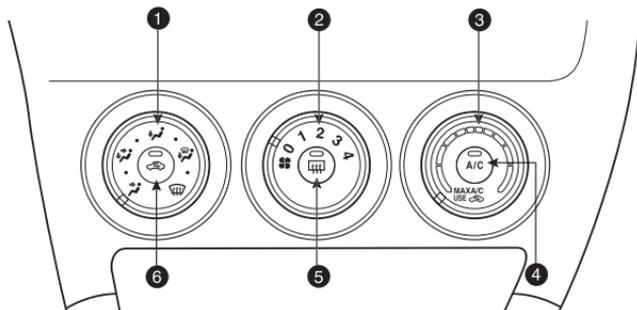


- ① Airflow vent
Use “” or “” mode to reduce window fogging (system automatically switches to fresh air mode).
- ② Fan speed
- ③ Temperature selector
For quick cooling, turn to MAX A/C position and select recirculated air mode (“” indicator ON).
- ④ Air Conditioning ON/OFF
- ⑤ Outside rearview mirror (if equipped)/Rear window defogger
- ⑥ Recirculate cabin air (fresh air when OFF)

Light control-Instrument panel

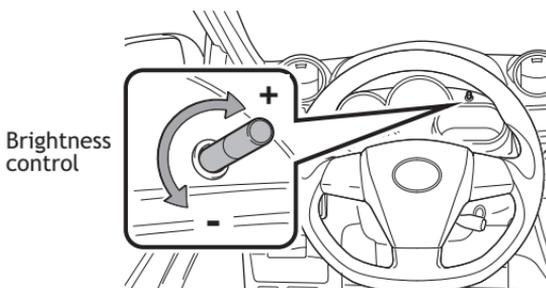


Cruise control (if equipped)

Turning system ON/OFF

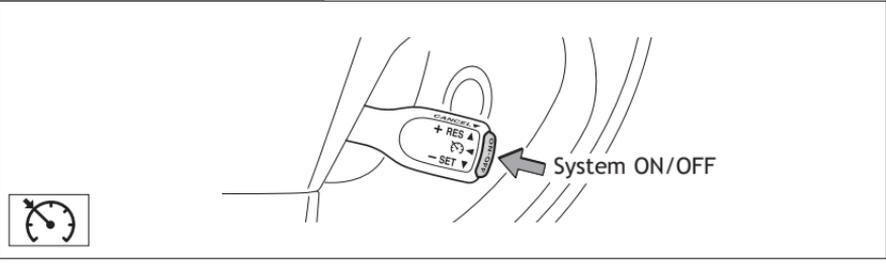


Functions

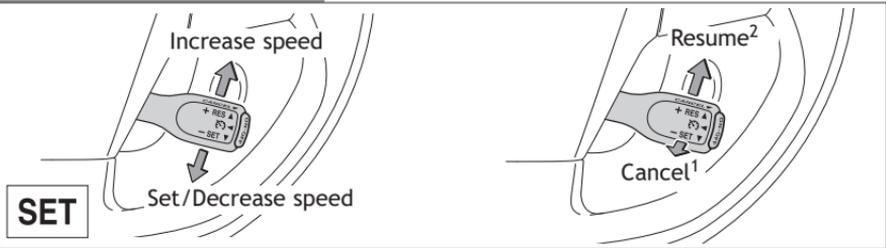


- ¹ The set speed may also be cancelled by depressing the brake pedal.
- ² The set speed may be resumed once vehicle speed exceeds 25 mph.

Auxiliary storage


Instrument panel

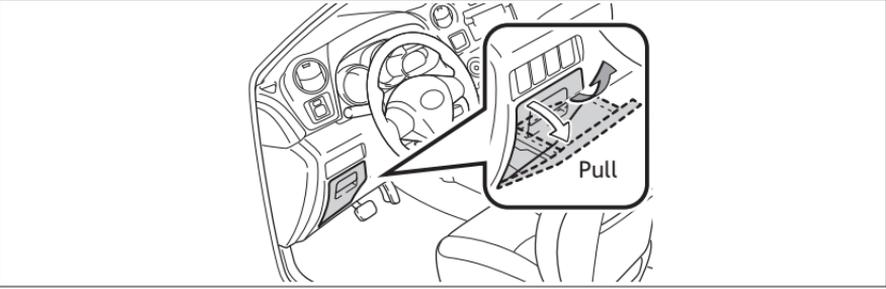

Overhead console (if equipped)

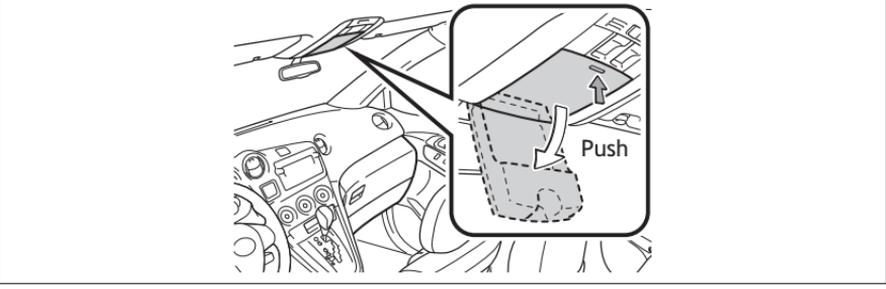


Telephone controls (Bluetooth®) (if equipped)

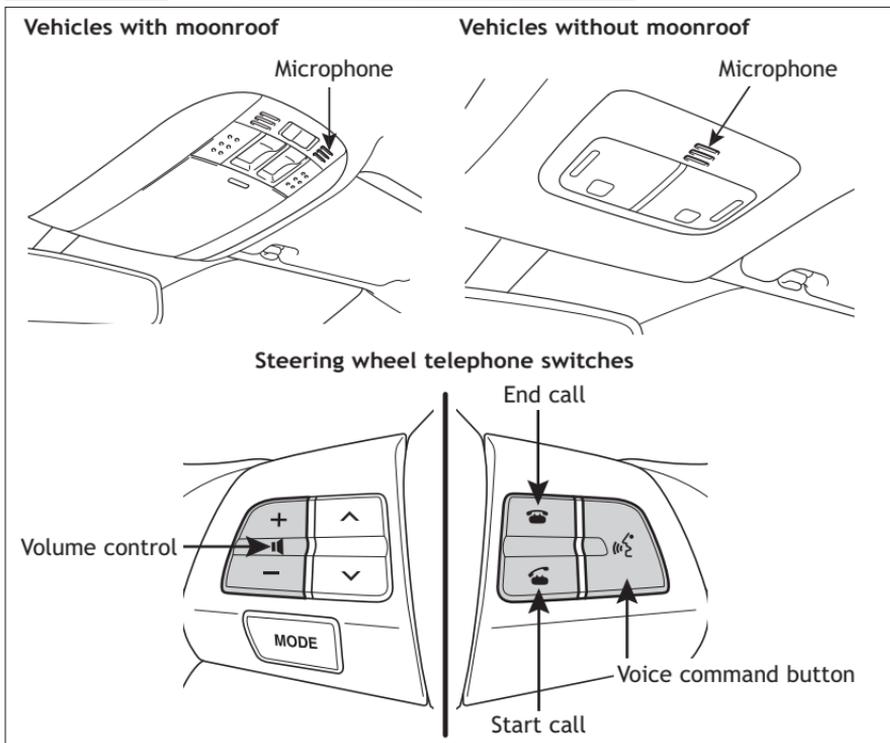


Bluetooth® technology allows dialing or receipt of calls without taking hands from the steering wheel or using a cable to connect the compatible telephone and the system.

Refer to “Using the hands-free phone system (for cellular phones),” Section 3-4 in the *Owner’s Manual*, or go to Toyota.LetsTalk.com for more information about phone connections and compatibility.


Cup holders

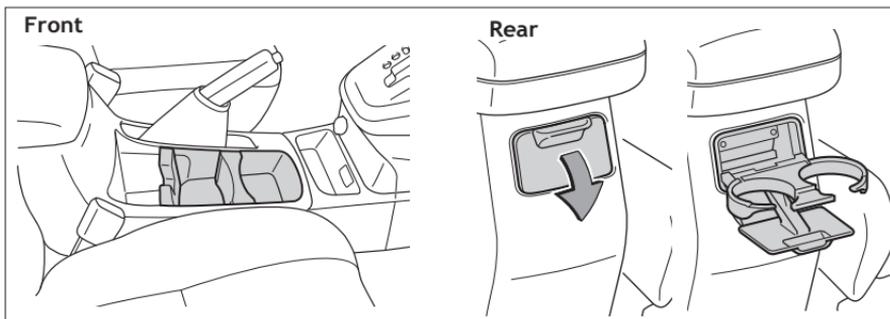

Bottle holders

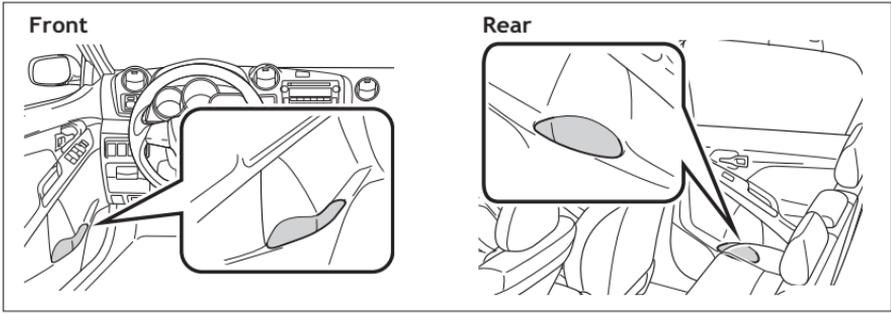


Power outlet-12V DC

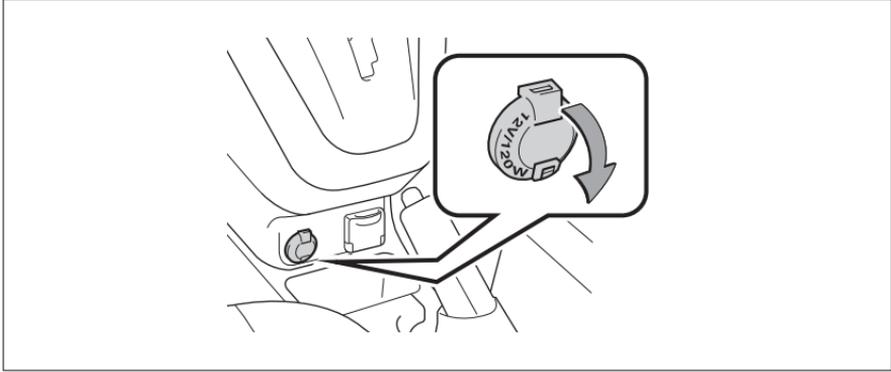

Designed for 12V car accessories.
The ignition switch must be in the "ACC" or "ON" position.

Power outlet-115V AC (if equipped)

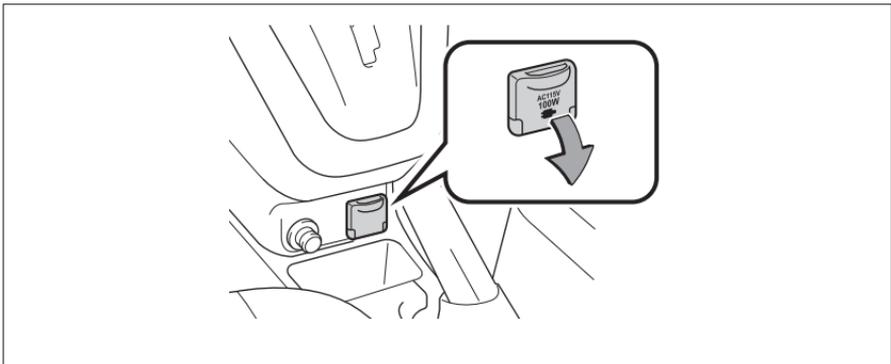

The ignition switch must be in the "ON" position.

SAFETY AND EMERGENCY FEATURES

Doors-Child safety locks

Rear door



Moving the lever to "LOCK" will allow the door to be opened only from the outside.

Tire Pressure Monitoring (warning) System



System reset initialization

1. Push and hold "SET" button until the indicator blinks three times.
2. Wait a few minutes to allow initialization to complete.

After adjusting tire pressures, or after tires have been rotated or replaced, turn the ignition switch to "ON" and press and hold the "SET" button until indicator blinks three times. Let the vehicle sit for a few minutes to allow initialization to complete.


Refer to the load label on the door jamb or the *Owner's Manual* for tire inflation specifications.

If the tire pressure indicator flashes for more than 60 seconds and then remains on, take the vehicle to your local Toyota dealer.


NOTE: The warning light may come on due to temperature changes or changes in tire pressure from natural air leakage. If the system has not been initialized recently, setting the tire pressures to factory specifications should turn off the light.

Seat belts-Shoulder belt anchor

Push up, or squeeze lock release to lower

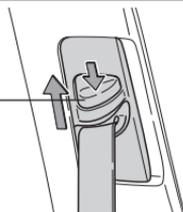

Seat belts

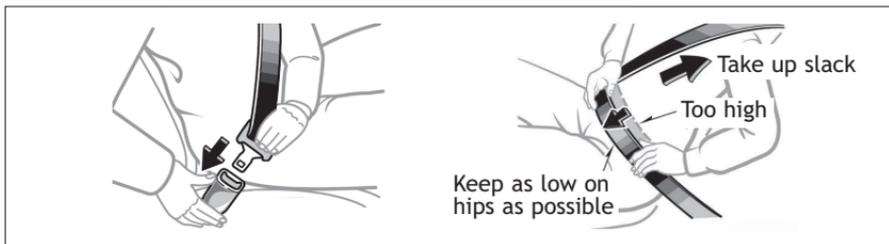


If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.


To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.

Spare tire & tools

Tool location

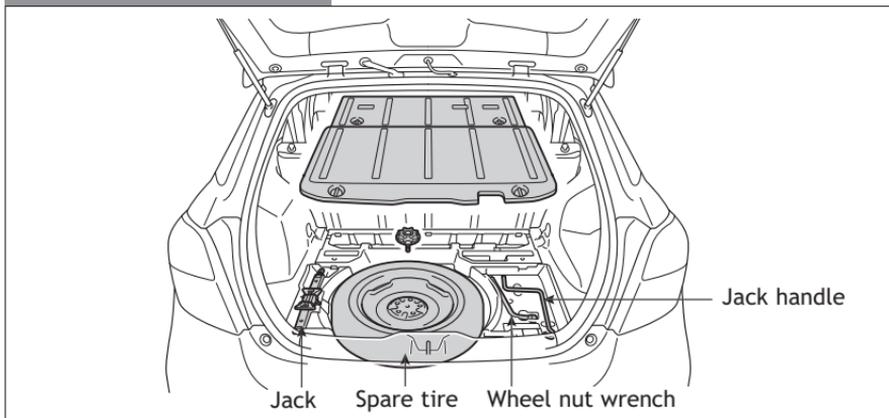

Removing the spare tire

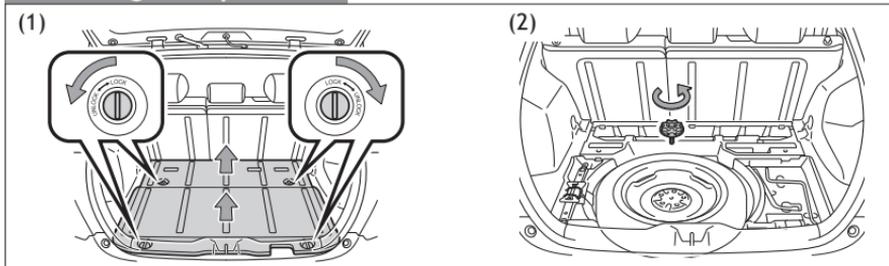

- (1) Turn the knobs to the "UNLOCK" position and remove the deck boards.
- (2) Loosen the center fastener that secures the spare tire.

Refer to the *Owner's Manual* for tire changing and jack positioning procedures.



CUSTOMER EXPERIENCE CENTER

1-800-331-4331

