

**2011
Camry Hybrid**

2011 Camry Hybrid

This *Quick Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Quick Reference Guide* is not intended as a substitute for the *Owner's Manual* located in your vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Camry Hybrid.

! A word about safe vehicle operations

This *Quick Reference Guide* is not a full description of Camry Hybrid operations. Every Camry Hybrid owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Quick Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

INDEX

OVERVIEW

Engine maintenance	9
Fuel tank door release and cap	8
Hood release	9
Indicator symbols	5
Instrument cluster	4
Instrument panel	2-3
Keyless entry¹	6
Light control-Instrument panel	8
Smart Key system^{1,2}	7

FEATURES/OPERATIONS

Air Conditioning/Heating	20-21
Audio	18-19
Auto lock functions²	11
Clock	21
Cruise control	15
Cup holders	22
Door locks	22
Garage door opener (HomeLink [®]) ³	15
Hybrid Synergy Drive System	10
Lights¹ & turn signals	13
Moonroof	17
Multi-information display	17
Parking brake	12
Power outlets	22
Seat adjustments-Front	14
Seat heaters	21
Seats-Folding rear seats	14
Seats-Head restraints	14
Steering lock release	11
Steering wheel switches	19
Telephone controls (Bluetooth [®])	16
Tilt and telescopic steering wheel	12
Transmission	11
Windows-Power	12
Windshield wipers & washers	13

SAFETY AND EMERGENCY FEATURES

Child comfort guide	24
Doors-Child safety locks	23
Fuel filler door-Internal release	23
Seat belts	23
Seat belts-Shoulder belt anchor	25
Spare tire & tools	25
Tire Pressure Monitoring (warning) System	24
Trunk-Internal release	25

¹ Visit your Toyota dealer for information on customizing this feature.



² Programmable by customer. Refer to the Owner's Manual for instructions and more information.

³ HomeLink[®] is a registered trademark of Johnson Controls, Inc.


OVERVIEW

Instrument panel

Steering wheel controls

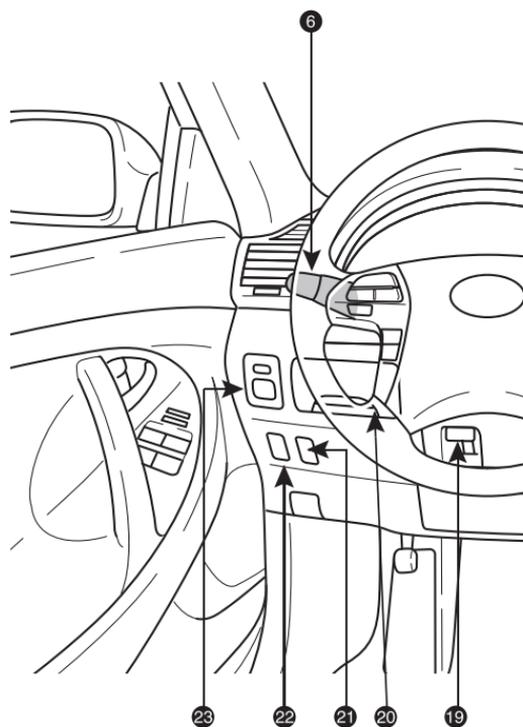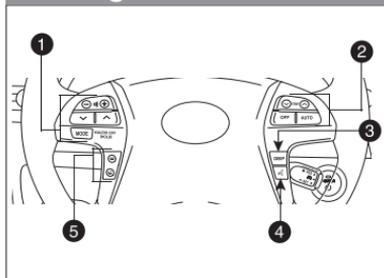

- ① Steering wheel audio controls
- ② Steering wheel climate controls
- ③ Multi-information display button
- ④ Voice command button^{1,2}
- ⑤ Telephone controls^{1,2}
- ⑥ Headlight, turn signal and front fog light¹ controls
- ⑦ Wiper and washer controls
- ⑧ Emergency flasher button
- ⑨ Audio system or navigation system with integrated audio system^{1,2}
- ⑩ Air Conditioning controls
- ⑪ Tire Pressure Monitoring (warning) System (in glove box)
- ⑫ Rear window and outside rearview mirror defogger switch¹
- ⑬ 12V DC Power outlet

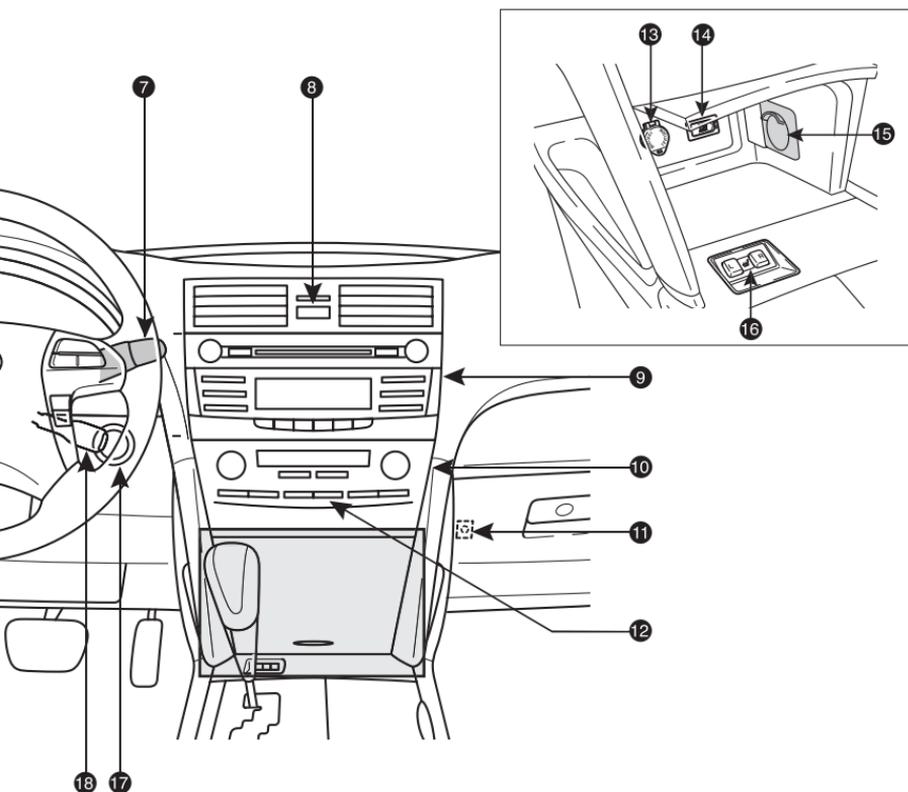


- 14 AUX or USB/AUX audio jack
- 15 Wire pass through
- 16 Seat heater controls¹
- 17 "POWER" switch
- 18 Cruise control
- 19 Tilt and telescopic steering lock release
- 20 Auxiliary boxes
- 21 Air Conditioning/Heating economy (ECO) mode switch
- 22 Fuel filler door opener
- 23 Power outside rearview mirror controls

¹ If equipped

² For details, refer to the "Navigation System Owner's Manual."

Instrument cluster

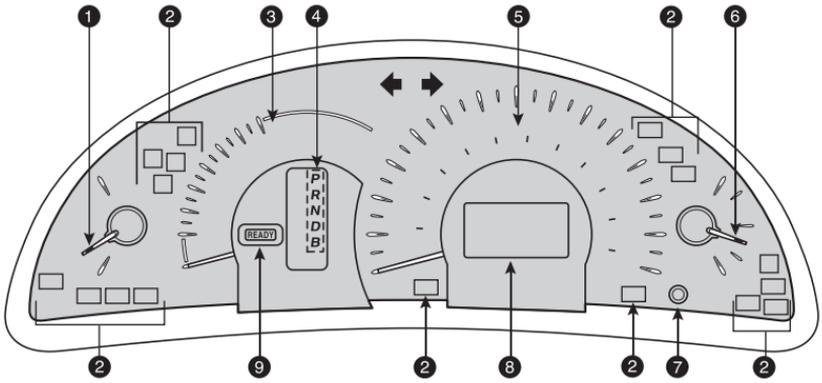

- ① Engine coolant temperature
- ② Service indicator and reminder
- ③ Fuel economy meter
- ④ Gear shift position indicator
- ⑤ Speedometer
- ⑥ Fuel gauge
- ⑦ Odometer/trip meter/instrument panel light control and trip meter reset button
- ⑧ Multi-information display
- ⑨ Driving ready light

Indicator symbols

For details, refer to “Indicators and warning lights,” Section 2-2, 2011 Owner’s Manual.

	Brake system warning ¹
	Brake system warning light ¹
	Driver seat belt reminder (alarm will sound if speed is over 12 mph)
 PASSENGER	Front passenger seat belt reminder (alarm will sound if speed is over 12 mph)
	Charging system warning ¹
	Front passenger occupant classification or front passenger AIR BAG ON/OFF indicator
	Driving ready light
	Malfunction/Check Engine indicator ¹
	Low fuel level warning
	Open door warning
	Airbag SRS warning ¹
	Master warning
	Low Tire Pressure Warning ¹
	Electric power steering system warning ¹
	Theft deterrent/Engine immobilizer system indicator
	Headlight low/high beam indicator
	Turn signal indicator
	Slip indicator ¹
	Cruise control indicator ²
	Cruise control SET indicator ²
	Anti-lock Brake System warning ¹
	Front fog light indicator

¹ If indicator does not turn off within a few seconds of starting engine, there may be a malfunction. Have vehicle inspected by your Toyota dealer.

² If this light flashes, refer to “Cruise control,” Section 2-4, 2011 Owner’s Manual.


Keyless entry

Locking operation



Push 


Unlocking operation

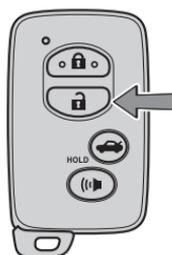

Push ONCE: Driver door
TWICE: All doors 

NOTE: If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.

Trunk lid operation

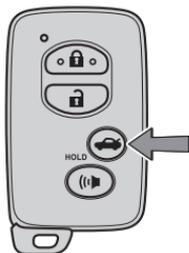

Push and hold 


Panic button



Push and hold 

Smart Key system

Start function

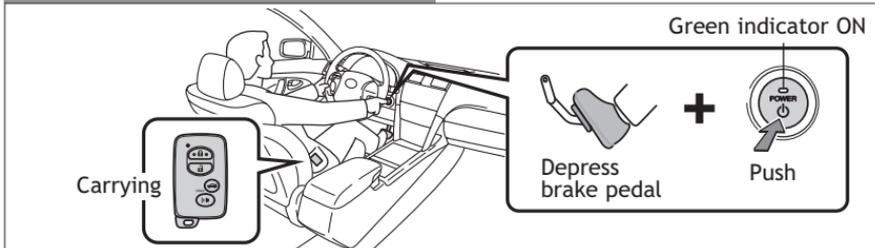


NOTE: Gear shift lever must be in Park and brake pedal depressed.

Power (without starting Hybrid System)


Without depressing the brake pedal, pressing the “POWER” switch will change the operation mode in succession from:

ACC	Accessories such as the radio will operate.
ON	Power ON; the Hybrid System not running.
OFF	All systems OFF.


Locking operation

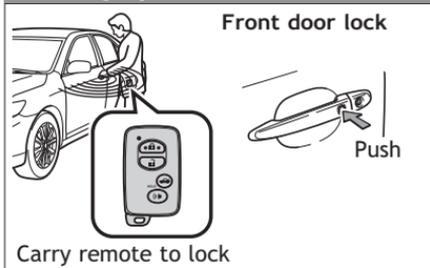

Unlocking operation

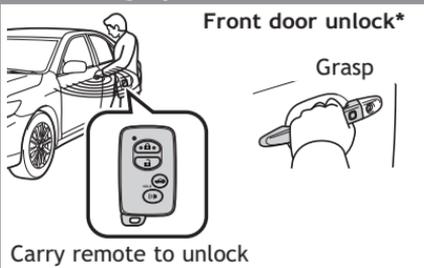

Back door lock/unlock

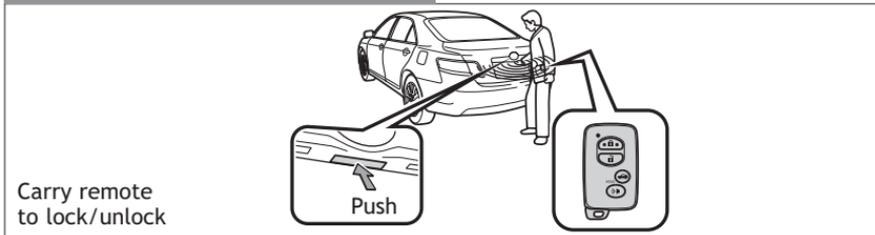


* Driver door unlocking function can be programmed to unlock driver door only, or all doors. Grasping front passenger door handle will unlock all doors.

NOTE: Doors may also be locked/unlocked using remote.

Fuel tank door release and cap


(1)

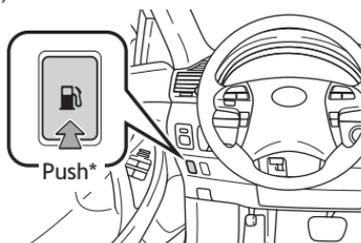


(2)




(3)

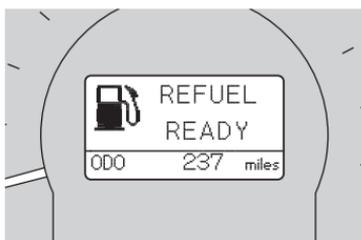

(4)

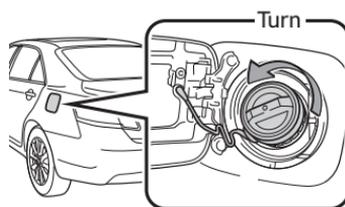

(5)

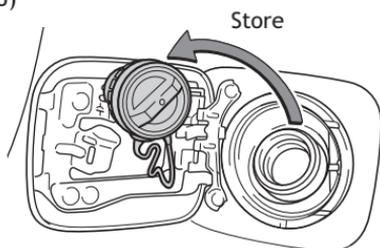


NOTE: Tighten until one click is heard. If the cap is not tightened enough, Check Engine “” indicator may illuminate.

* It may take up to 10 seconds after pushing button for the door to open if the internal tank pressure is high.


Light control-Instrument panel

Brightness control

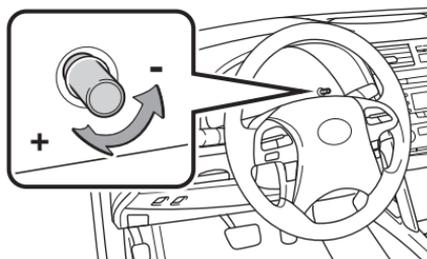


NOTE: This is also the trip meter reset button.

Hood release

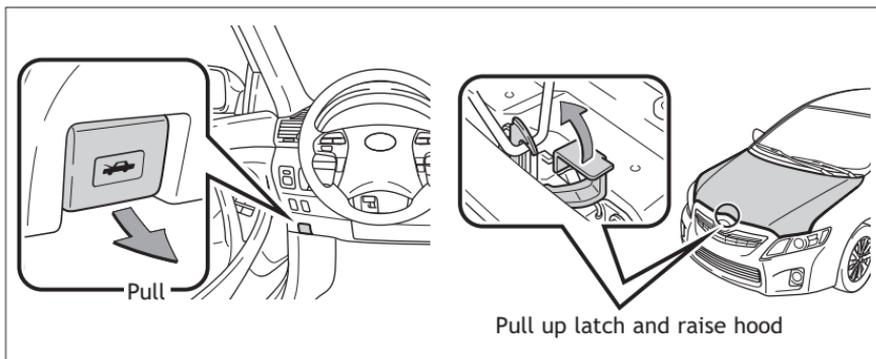

Engine maintenance

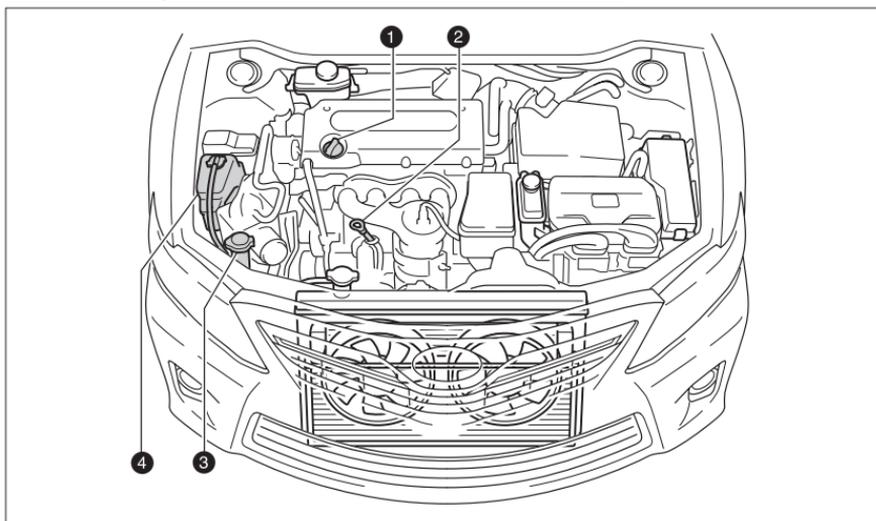

- 1 Engine oil filler cap
- 2 Engine oil level dipstick
- 3 Windshield washer fluid tank
- 4 Engine coolant reservoir

NOTE: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the “Warranty Maintenance Guide.”

FEATURES/OPERATIONS

Hybrid Synergy Drive System


The Hybrid Synergy Drive System utilizes a computer-controlled gasoline engine and electric motor to provide the most efficient combination of power for the vehicle. To conserve energy, when the brakes are applied the braking force generates electricity which is then sent to the traction battery. In addition, the engine shuts off when the vehicle is stopped. The benefits are better fuel economy, reduced vehicle emissions and improved performance.

NOTE: Fuel consumption and energy information of the Hybrid System are shown on the multi-information display and/or navigation system screen (if equipped).

Tips for improved fuel economy

1. Ensure tire pressures are maintained at levels specified in the *Owner's Manual*.
2. Link trips to reduce engine cold starts whenever possible.
3. Avoid driving at speeds that are higher than necessary, especially on the highway.
4. When possible, avoid sudden stops to maximize regenerative braking energy.
5. Minimize use of the Air Conditioning.

Starting the Hybrid System

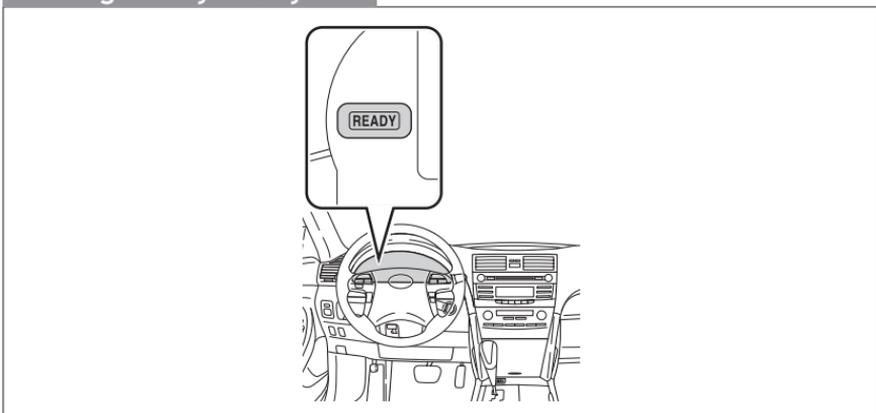

- (1) Put the selector lever in "P."
- (2) Depress the brake pedal, and press the "POWER" switch briefly and firmly.
- (3) The "READY" light will blink. After a few seconds, when the light remains steady and a beep sounds, you may begin driving.


Auto lock functions

Automatic door locks can be programmed to operate in four different modes, or turned OFF.

- Doors lock when shifting from Park.
- Doors lock when the vehicle speed goes above approximately 12 mph.
- Doors unlock when shifting into Park.
- Doors unlock when the “POWER” switch is set from ON to ACC or OFF and driver’s door is opened.

Refer to the *Owner’s Manual* for more details.


Transmission

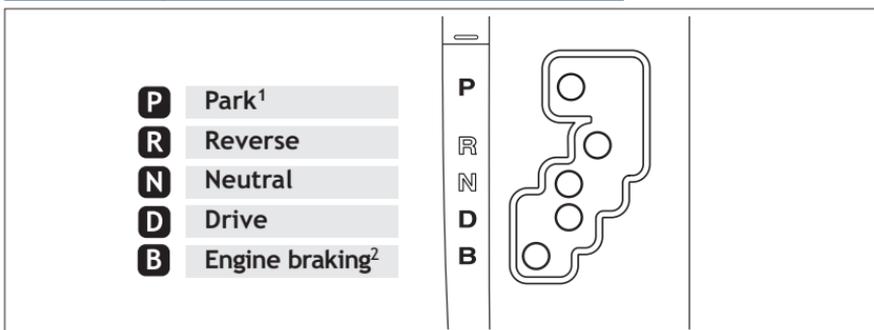

¹ The “POWER” switch must be set at “ON” and the brake pedal depressed to shift from Park.


² The engine brake is the equivalent of downshifting. Shift to “B” when engine braking is desired (i.e. downhill driving, coasting to a stop, etc.).

Steering lock release

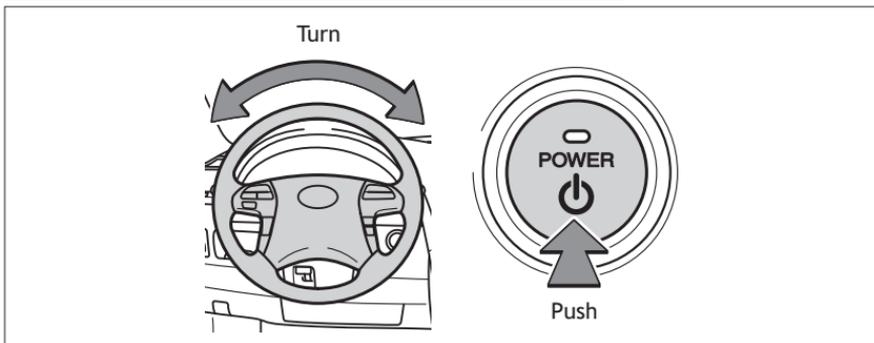

Gently turn wheel while pressing the “POWER” switch. If the lock does not release, the switch indicator will flash green.


Tilt and telescopic steering wheel

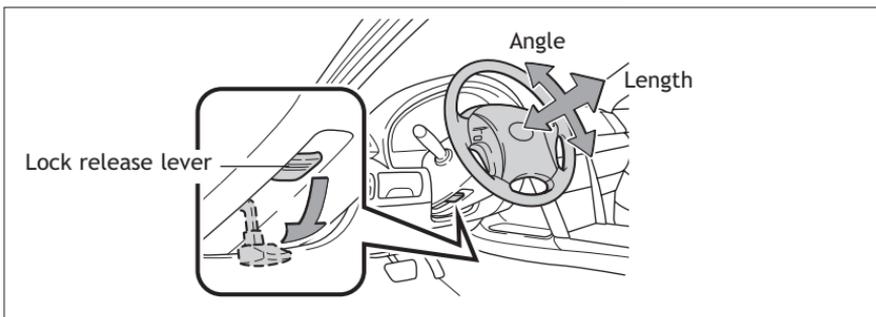


Hold wheel, push lever down, set angle and length, and return lever.

NOTE: Do not attempt to adjust while the vehicle is in motion.

Parking brake

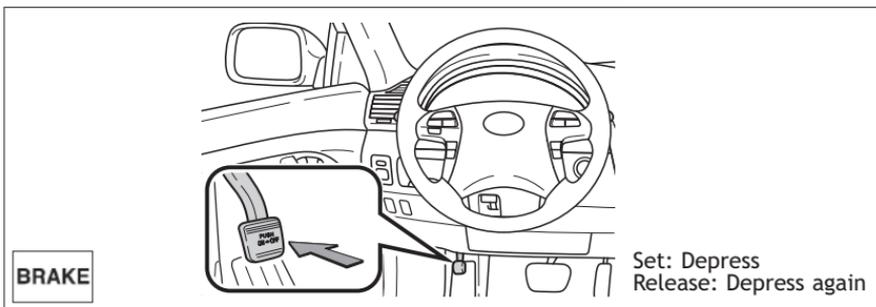


Windows-Power

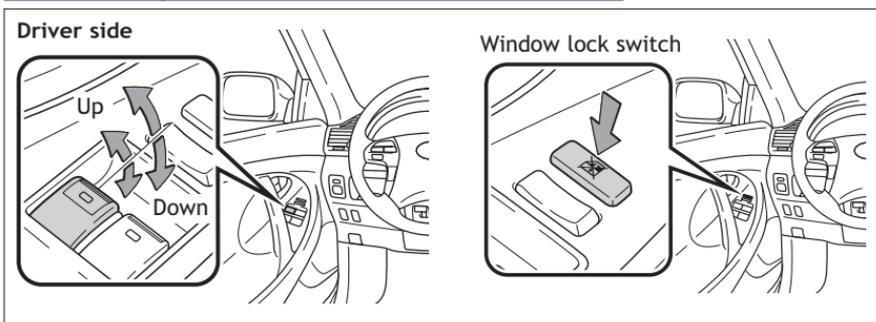

Automatic operation Push the switch completely down or pull it completely up and release to fully open and close. To stop window midway, lightly push the switch in the opposite direction.

Window lock switch Deactivates all passenger windows. Driver's window remains operable.


Windshield wipers & washers

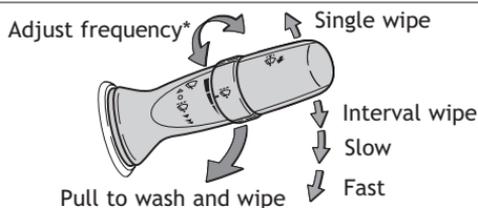

*** Intermittent windshield wiper frequency adjustment**
 Rotate to increase/decrease wipe frequency.


Lights & turn signals

Headlights

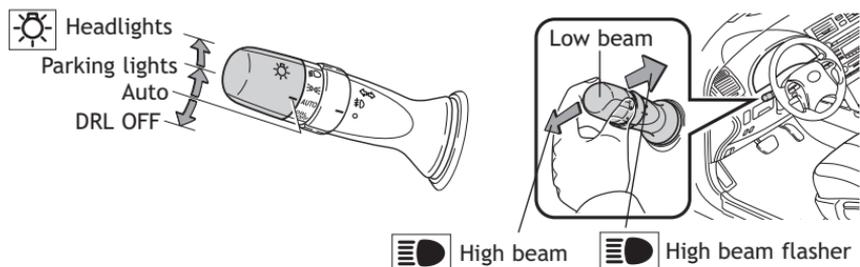


- Daytime Running Light system (DRL)** Automatically turns on the headlights at a reduced intensity.
- Automatic light cut off system** Automatically turns lights off after a delay of 30 seconds, or the lock switch on remote may be pushed after locking.

Front fog lights (if equipped)

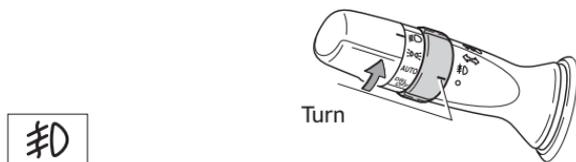

Front fog lights come on only when the headlights are on low beam.

Turn signals

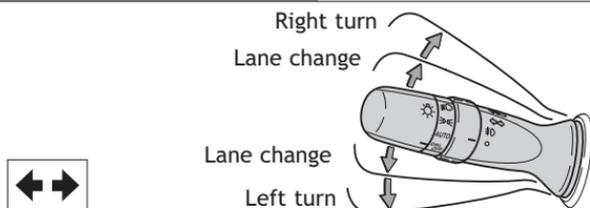


Seat adjustments-Front

Manual seat




Power seat

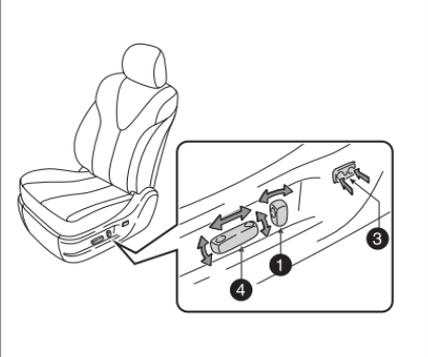


- 1 Seatback angle
- 2 Seat position (forward/backward)
- 3 Lumbar support (driver side only)
- 4 Seat position, cushion angle and height (driver side only)

Seats-Head restraints

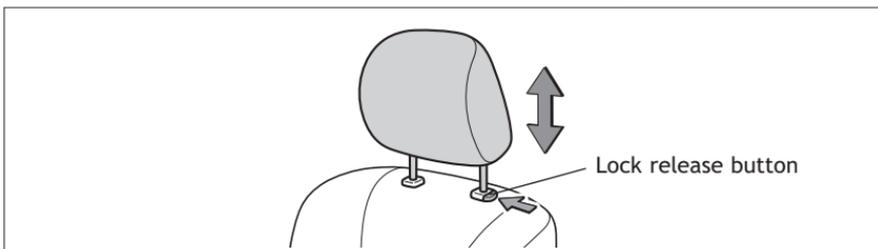


Seats-Folding rear seats

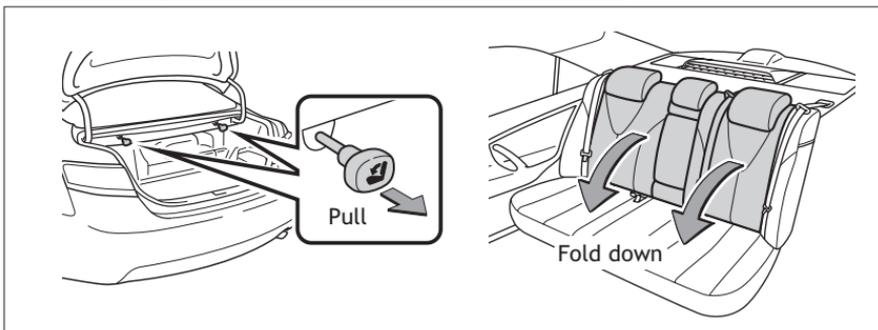


Cruise control

Turning system ON/OFF

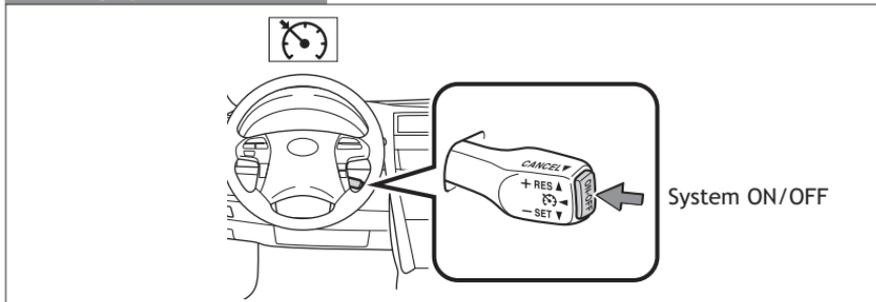


Functions

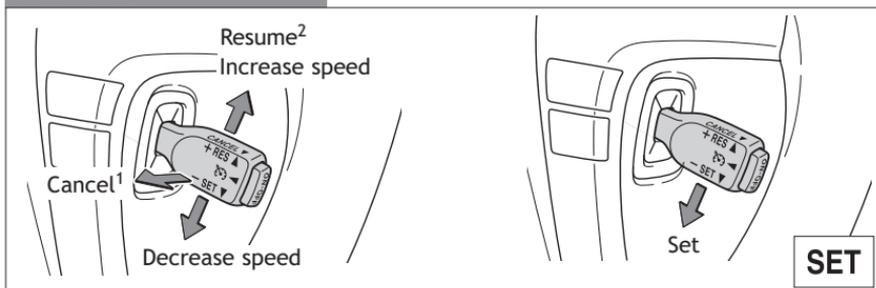

¹ The set speed may also be cancelled by depressing the brake pedal.

² The set speed may be resumed once vehicle speed exceeds 25 mph.

Garage door opener (HomeLink®)* (if equipped)

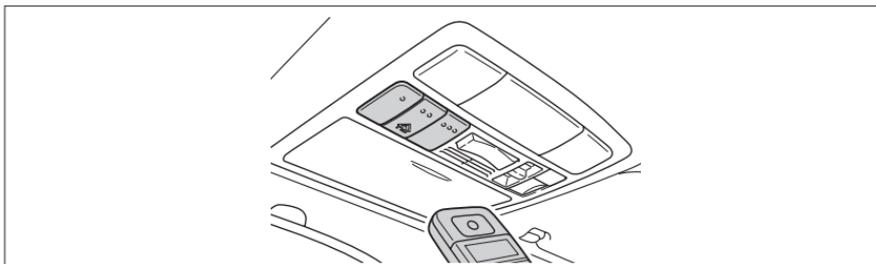

Garage door openers manufactured under license from HomeLink® can be programmed to operate garage doors, estate gates, security lighting, etc.


Refer to “Garage door opener,” Section 3-7 in the *Owner’s Manual* for more details.

For programming assistance, contact HomeLink® at 1-800-355-3515, or visit <http://www.homelink.com>.

* HomeLink® is a registered trademark of Johnson Controls, Inc.

Telephone controls (Bluetooth® (if equipped))


Audio unit

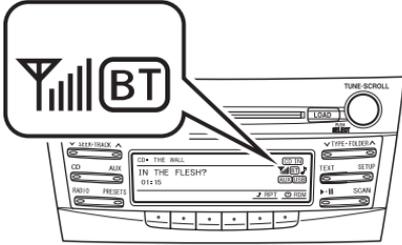

Microphone




Steering wheel telephone switches

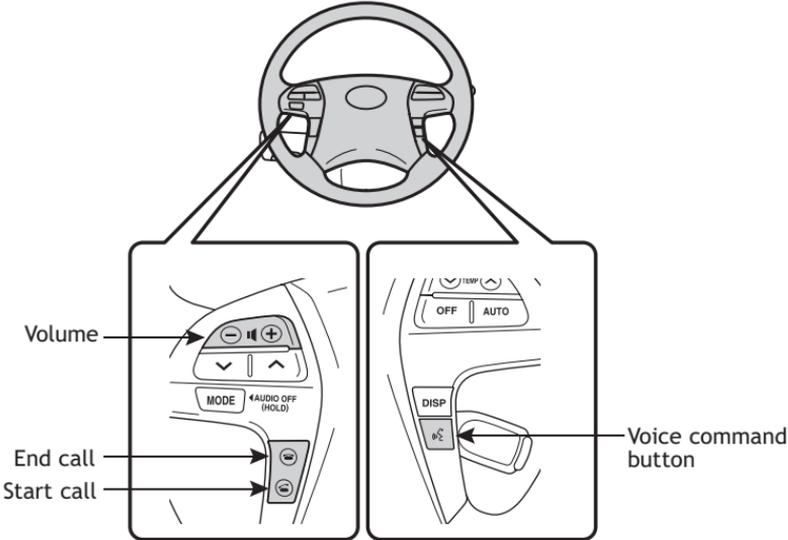

Bluetooth® technology allows dialing or receipt of calls without taking hands from the steering wheel or using a cable to connect the compatible telephone and the system.

Refer to “Hands-free phone system (for cellular phone),” Section 3-4 in the *Owner’s Manual* for more details, or go to Toyota.com and enter “Bluetooth” in the keyword search.

Multi-information display

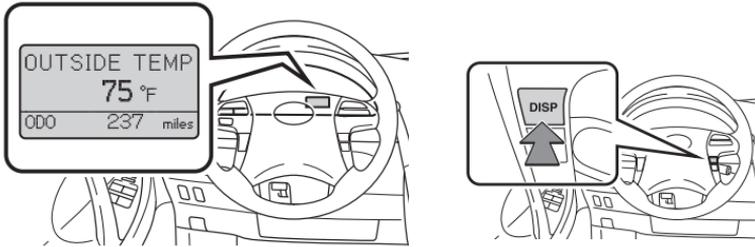


Push “DISP” to change information in the following:

- (1) Outside temperature
- (2) Miles left on remaining fuel
- (3) Current gas mileage
- (4) Running distance from engine start
- (5) Average vehicle speed from engine start
- (6) Multi-information display OFF
- (7) Zoom display of odometer and trip meter
- (8) Energy monitor
- (9) Average gas mileage


Moonroof (if equipped)

Sliding operation

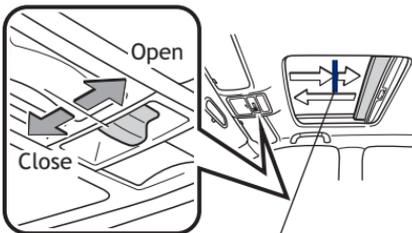

Recommended driving position to minimize wind noise.


Tilting operation

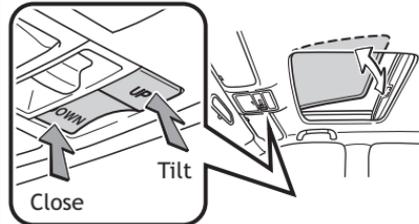


Push once to open; moonroof will automatically stop at the recommended position. Push again to open completely.

Audio

Type 1

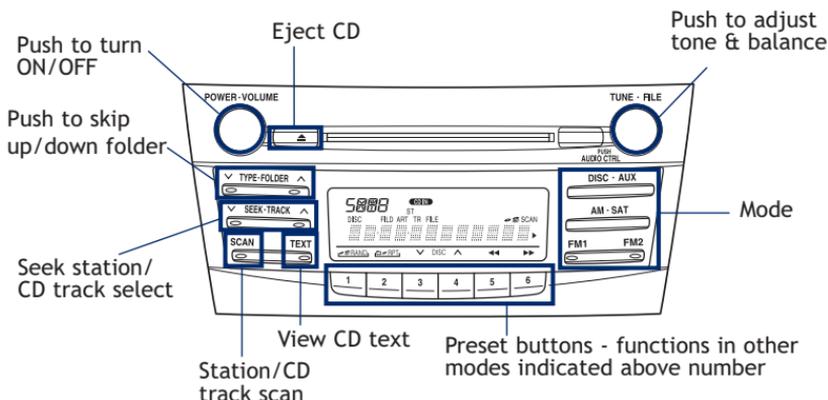

Type 2

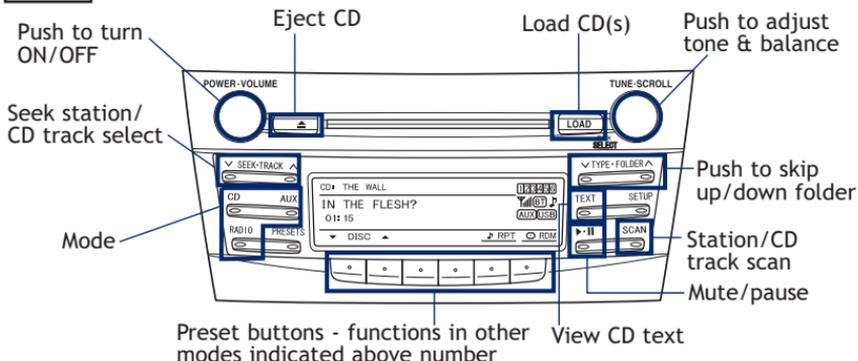

CD PLAYER

To scan tracks on a disc Push and hold “SCAN.” Push again to hold selection.

CD changer (Type 2 only)

-To load one disc Push “LOAD” and insert one disc.

-To load multiple discs Push and hold “LOAD” until you hear a beep.

Insert one disc. Shutter will close and then re-open for next disc.

To select a file (MP3/WMA only) Turn “TUNE-FILE” or “TUNE-SCROLL.”


To select a folder (MP3/WMA only) Push either side of “FOLDER.”

RADIO

To preset stations Tune in the desired station and hold down a preset button until you hear a beep. Push desired preset button to select.


To scan stations Push and hold "SCAN" to scan preset stations. Push again to hold selection.

AUX or USB/AUX audio jack

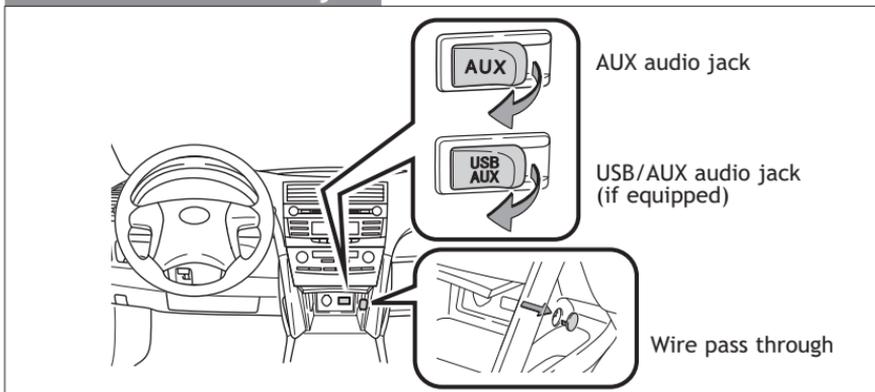


By inserting a mini plug into the AUX or USB/AUX audio jack, you can listen to music from a portable audio device through the vehicle's speaker system while in AUX or USB/AUX mode.

Steering wheel switches

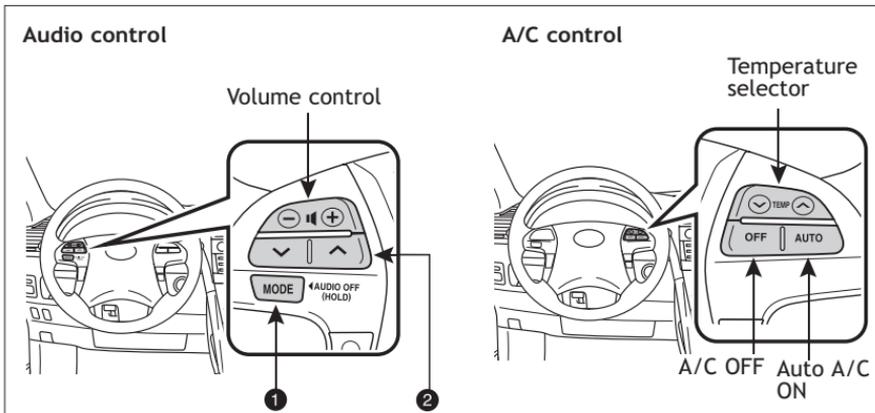


- 1 **"MODE"**
Push to turn audio ON and select an audio mode. Push and hold to turn the audio system OFF.
- 2 **"V A"**
Use to search within the selected audio medium (radio, CD, iPod, etc.).

Air Conditioning/Heating

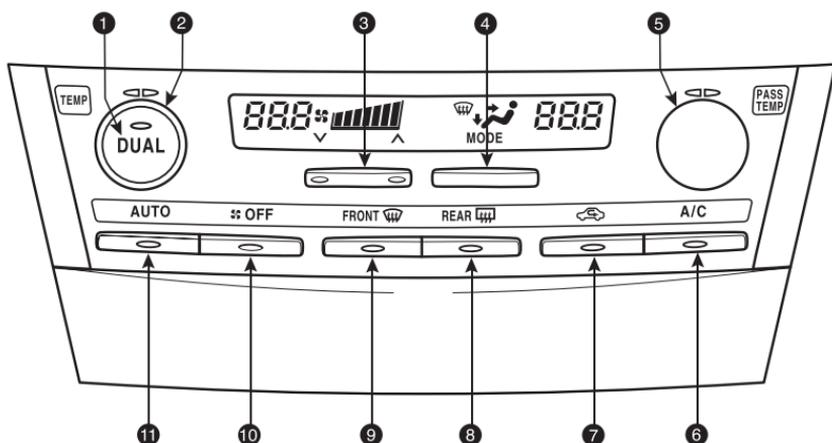

- ① “DUAL” button
Indicator ON: Separate temperature settings for driver and passengers.
Indicator OFF: Synchronize temperature settings for driver and passengers.
- ② Temperature selector (driver side)
- ③ Fan speed
- ④ Airflow vent
 In “” mode, use fresh air (“” indicator OFF) to reduce window fogging. “” mode uses fresh air only.
- ⑤ Temperature selector (passenger side)
- ⑥ Air Conditioning ON/OFF
- ⑦ Fresh or recirculated cabin air
- ⑧ Rear window defogger/Outside rearview mirror defoggers (if equipped)
- ⑨ Windshield airflow/defogger
- ⑩ Climate control OFF
- ⑪ Automatic climate control ON
 Adjusting the temperature setting will cause the airflow vents, air intake and fan to adjust automatically.

“ECO HEAT/COOL” switch

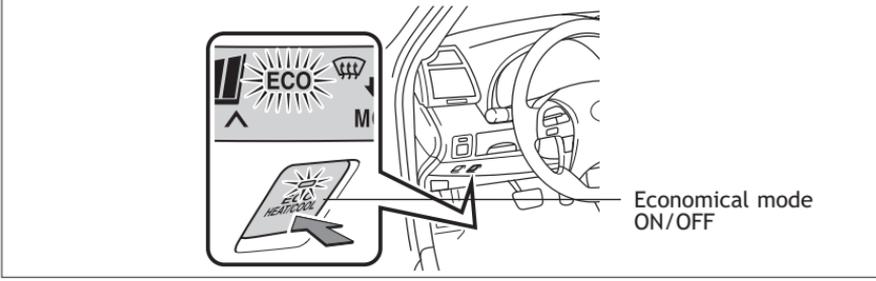

Economical mode ON/OFF


NOTE: Slightly improves gas mileage. It may take longer to reach set cabin temperature.

Plasmacluster™*


Improves air quality by emitting positive and negative ions into the cabin. This system operates from the driver side vent and a low system noise is normal.

* This system adopts the plasmacluster technology, manufactured under license from SHARP Corporation. Plasmacluster™ is a trademark of SHARP Corporation.

Seat heaters (if equipped)

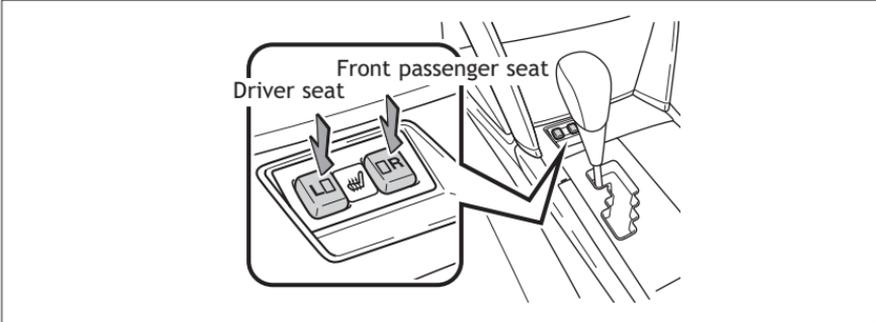


Clock

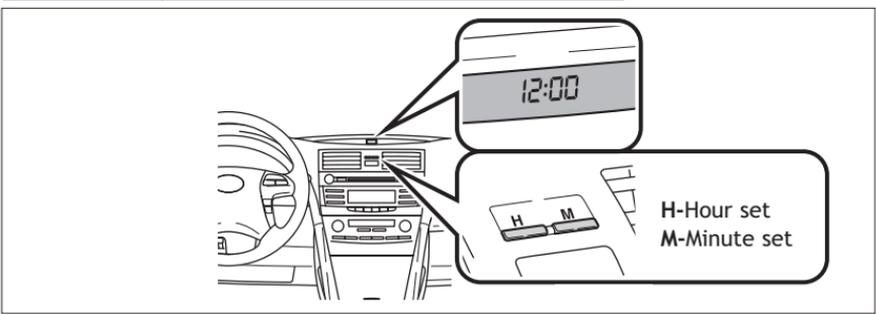


Refer to the *Owner's Manual* for adjusting time.

Door locks


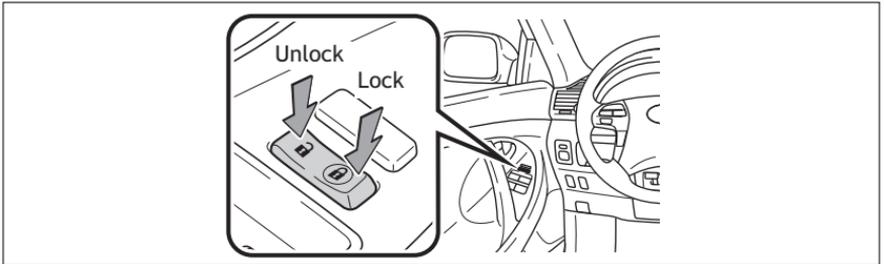


Power outlets

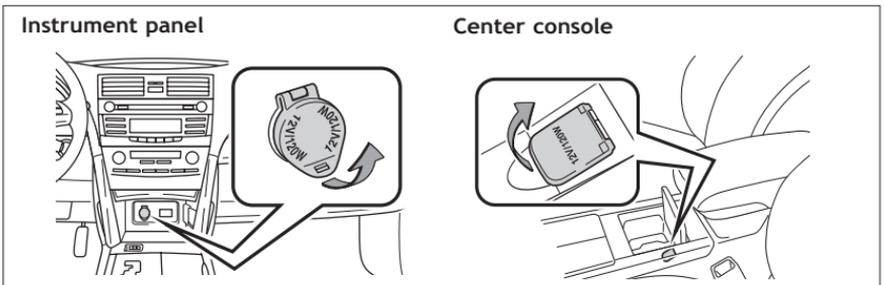

“POWER” switch must be set at “ACC” or “ON” to be used.


Cup holders

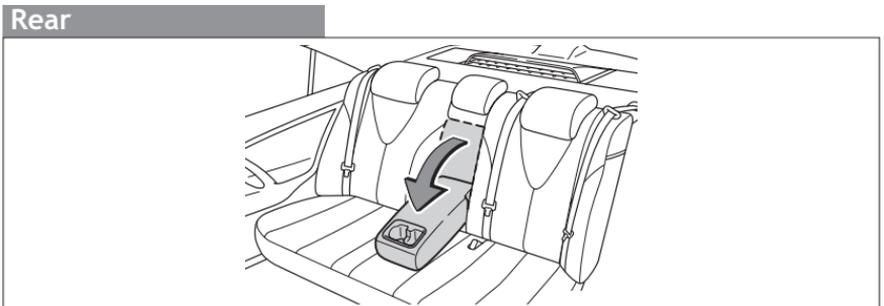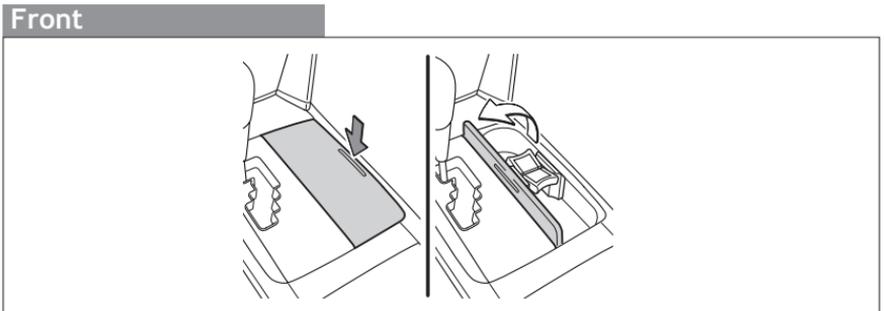

SAFETY AND EMERGENCY FEATURES


Doors-Child safety locks

Rear door

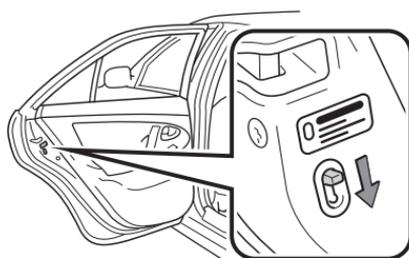

Moving the lever to “LOCK” will allow the door to be opened only from the outside.


Seat belts

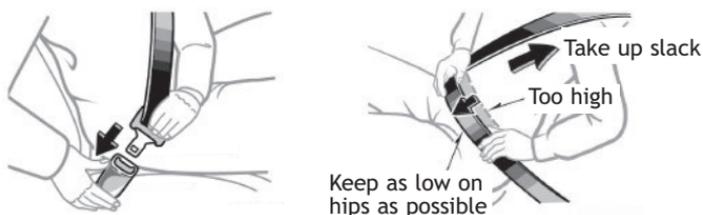


If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.

Fuel filler door-Internal release

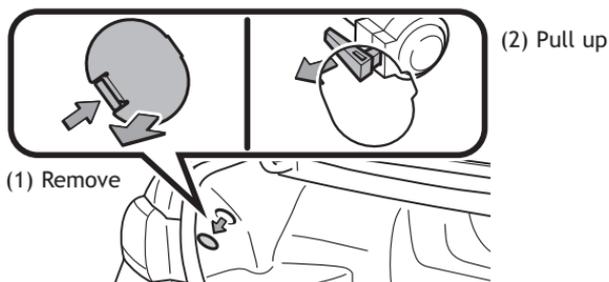


Child comfort guide

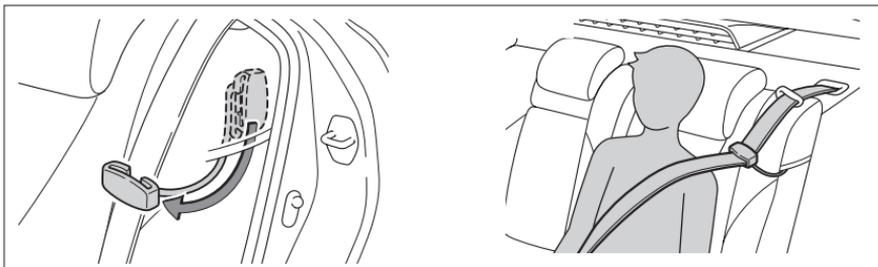

Rear seat outside position guides provide added comfort for children who have outgrown child restraints.

Tire Pressure Monitoring (warning) System

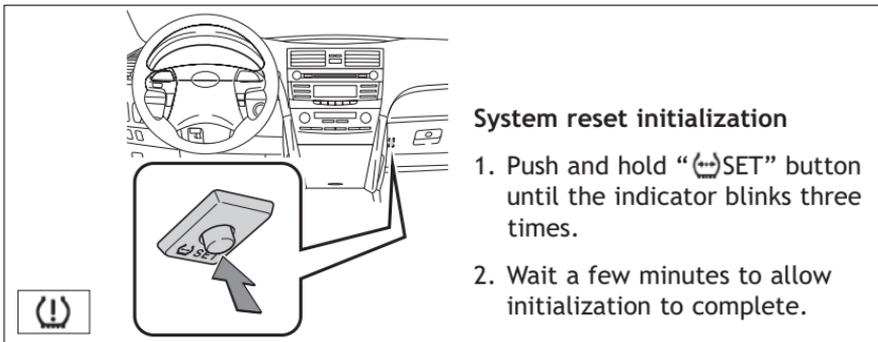

System reset initialization

1. Push and hold “SET” button until the indicator blinks three times.
2. Wait a few minutes to allow initialization to complete.


After adjusting tire pressures, or after tires have been rotated or replaced, turn the POWER switch to “ON” mode, and press and hold the “SET” button until indicator blinks three times. Let the vehicle sit for a few minutes to allow initialization to complete.

Refer to the load label on the door jamb or the *Owner's Manual* for tire inflation specifications.

If the tire pressure indicator flashes for more than 60 seconds and then remains on, take the vehicle to your local Toyota dealer.


NOTE: The warning light may come on due to temperature changes or changes in tire pressure from natural air leakage. If the system has not been initialized recently, setting the tire pressures to factory specifications should turn off the light.

Seat belts-Shoulder belt anchor

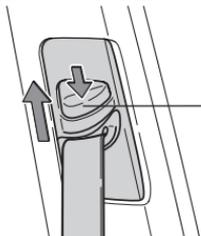

Push up, or squeeze lock release to lower


Trunk-Internal release

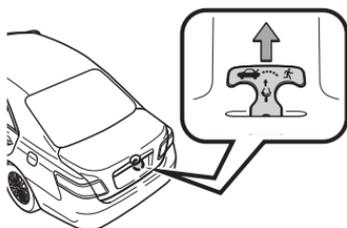


Pull up

Spare tire & tools

Tool location

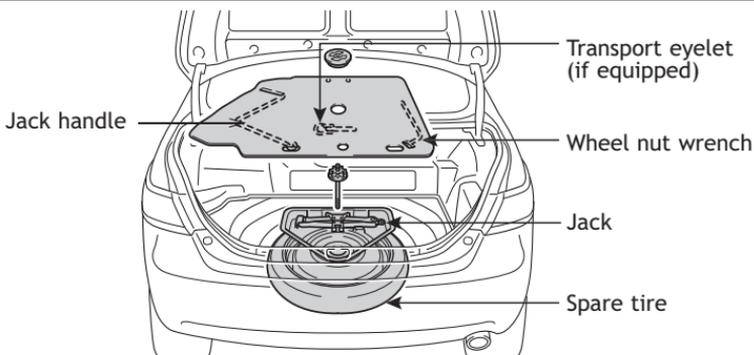

Removing the spare tire

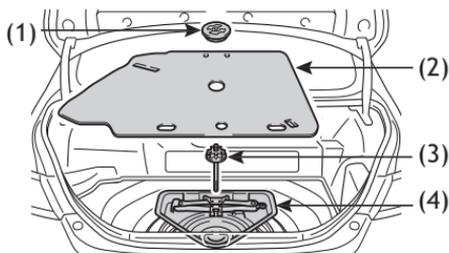

- (1) Loosen and remove the nut.
- (2) Remove the spare tire cover.
- (3) Loosen and remove the bolt.
- (4) Remove the jack tray.

Refer to the *Owner's Manual* for tire changing and jack positioning procedures.

