



PRIUS

2 0 1 1

QUICK REFERENCE
GUIDE



TOYOTA

2011 Prius

This *Quick Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Quick Reference Guide* is not intended as a substitute for the *Owner's Manual* located in your vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Prius.

! A word about safe vehicle operations

This *Quick Reference Guide* is not a full description of Prius operations. Every Prius owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Quick Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

INDEX

OVERVIEW

| | |
|---------------------------------------|----------|
| Engine maintenance | 9 |
| Fuel tank door release and cap | 8 |
| Hood release | 8 |
| Indicator symbols | 4-5 |
| Instrument cluster | 4 |
| Instrument panel | 2-3 |
| Keyless entry¹ | 6 |
| Light control-Instrument panel | 9 |
| Smart Key system^{1,2} | 7 |

FEATURES/OPERATIONS

| | |
|--|-----------|
| Air Conditioning/Heating | 16 |
| Audio | 18-19 |
| Auto lock/unlock functions¹ | 10 |
| Clock | 23 |
| Cruise control | 20 |
| Dynamic Radar Cruise Control | 20-21 |
| EV-Drive Mode | 12 |
| Garage door opener (HomeLink [®]) ³ | 23 |
| Hill-start Assist Control (HAC) | 23 |
| Hybrid Synergy Drive System | 10 |
| Lights¹ & turn signals | 15 |
| LKA (Lane Keep Assist) | 21 |
| Moonroof | 17 |
| Multi-information display² | 22 |
| Parking brake | 12 |
| Power outlets | 19 |
| Seat adjustments-Front | 13 |
| Seat heaters | 16 |
| Seat-Folding down rear seat | 13 |
| Seats-Head restraints | 13 |
| Solar ventilation system | 17 |
| Steering wheel switches | 19 |
| Telephone controls (Bluetooth [®]) | 22 |
| Tilt and telescopic steering wheel | 12 |
| Transmission | 11 |
| Windows-Power | 14 |
| Windshield wipers & washers | 14 |

SAFETY AND EMERGENCY FEATURES

| | |
|---|----|
| Doors-Child safety locks | 25 |
| Door locks | 25 |
| Seat belts | 24 |
| Seat belts-Shoulder belt anchor | 24 |
| Spare tire & tools | 25 |
| Tire Pressure Monitoring (warning) System | 24 |

¹ Visit your Toyota dealer for information on customizing this feature.




² Programmable by customer. Refer to the Owner's Manual for instructions and more information.

³ HomeLink[®] is a registered trademark of Johnson Controls, Inc.

OVERVIEW



Instrument panel

Steering wheel controls

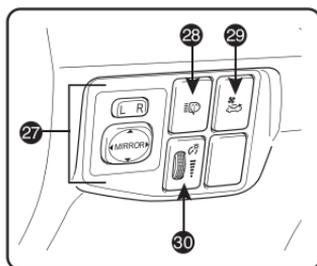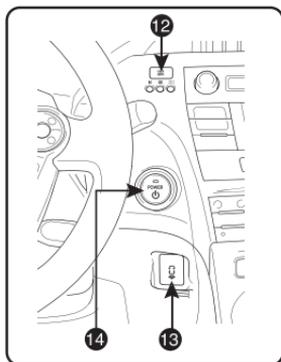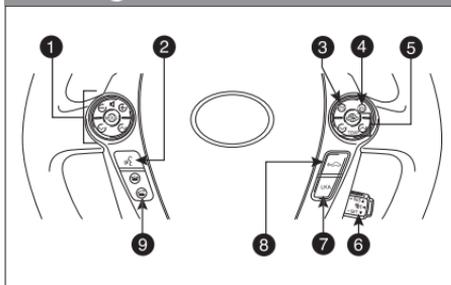

- 1 Steering wheel audio controls
- 2 Voice command button^{1,2}
- 3 "TRIP" button
- 4 Multi-information display button
- 5 Steering wheel climate controls
- 6 Cruise control¹
- 7 "LKA" switch¹
- 8 Distance switch¹
- 9 Telephone controls^{1,2}
- 10 Headlight and turn signal controls/Headlight, turn signal and front fog light controls¹
- 11 Wiper and washer controls
- 12 Mph or km/h button
- 13 Advanced Parking Guide System/Intelligent Parking Assist pre-support switch^{1,2}
- 14 Power button
- 15 Multi-information display
- 16 Audio system or navigation system-integrated audio system^{1,2}

Air Conditioning system

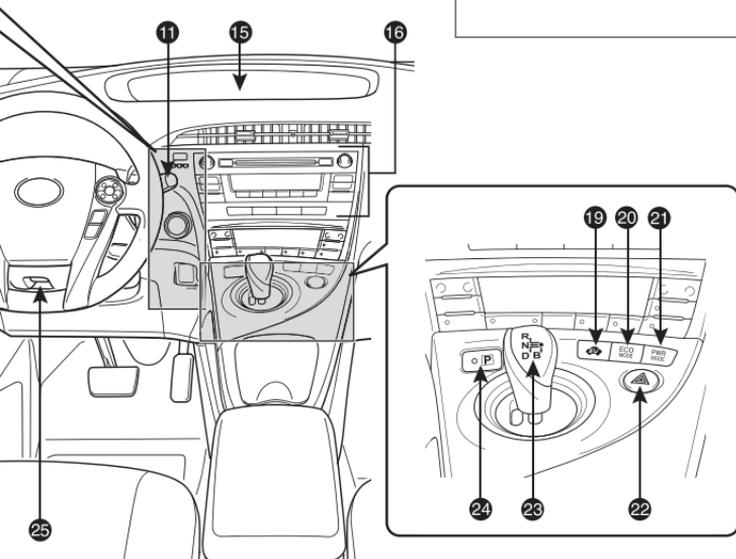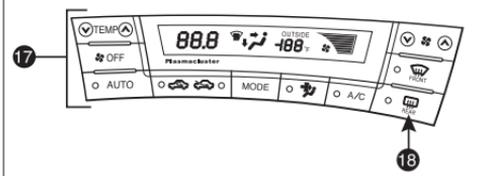


- 17 Air Conditioning controls
- 18 Outside rearview mirror¹/Rear window defogger button
- 19 "EV" switch¹
- 20 "ECO MODE" switch
- 21 "PWR MODE" switch
- 22 Emergency flasher button
- 23 Shift lever
- 24 "P" position switch
- 25 Tilt and telescopic steering lock release lever
- 26 Fuel filler door opener
- 27 Power rearview mirror control
- 28 Headlight cleaner switch¹
- 29 Solar ventilation switch¹
- 30 Instrument panel light control

¹ If equipped

² For vehicles with a navigation system, refer to the "Navigation System Owner's Manual."

Instrument cluster

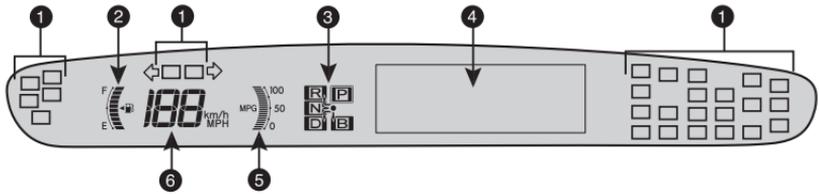

- ❶ Service indicators and reminders
- ❷ Fuel gauge
- ❸ Transmission shift position indicator
- ❹ Multi-information display
- ❺ Instantaneous fuel consumption
- ❻ Speedometer

Indicator symbols

For details, refer to “Indicators and warning lights,” Section 2-2, 2011 Owner’s Manual.

| | | |
|--|------------------------------------|--|
| | BRAKE | Brake system warning ¹ |
| | | Brake system warning light (yellow indicator) ¹ |
| | | Driver seat belt reminder (alarm will sound if speed is over 12 mph) |
| | PASSENGER | Front passenger seat belt reminder (alarm will sound if speed is over 12 mph) |
| | AIRBAG OFF AIRBAG ON | Charging system warning ¹ |
| | AIRBAG OFF AIRBAG ON | Front passenger occupant classification or front passenger airbag ON/OFF indicator |
| | CHECK | Malfunction/Check Engine indicator ¹ |
| | | Low fuel level warning |
| | | Open door warning |
| | | Airbag SRS warning ¹ |


¹ If indicator does not turn off within a few seconds of starting hybrid system, there may be a malfunction. Have vehicle inspected by your Toyota dealer.

| | |
|--|---|
|  | Master warning ¹ |
|  | Low Tire Pressure Warning ¹ |
|  | Electric power steering system warning ¹ |
|  | Theft deterrent/Engine immobilizer system indicator |
|  | Headlight low/high beam indicator |
|  | Turn signal indicator |
|  | READY indicator |
|  | EV Drive Mode indicator |
|  | Eco Mode indicator |
|  | Power Mode indicator |
|  | Front fog light indicator |
|  | Slip indicator/Hill-start Assist Control indicator ¹ |
|  | Cruise control indicator ² |
|  | Lane Keep Assist indicator |
|  | Anti-lock Brake System warning ¹ |
|  | Automatic headlight leveling system warning ¹ |
|  | Pre-Collision System warning light ¹ |
|  | High coolant temperature warning light ¹ |

² If this light flashes, refer to "Cruise control," Section 2-4, 2011 Owner's Manual.


Keyless entry

Locking operation

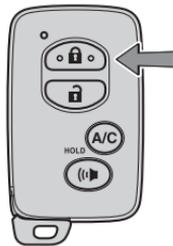

Push 


Unlocking operation

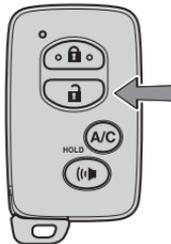

Push ONCE: Driver door
TWICE: All doors 

NOTE: If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.

Remote Air Conditioning system operation (if equipped)

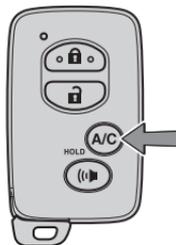

Will automatically shut off after three minutes, or if a door is opened.

Push and hold 


Panic button



Push and hold 

Smart Key system (if equipped)

Start function

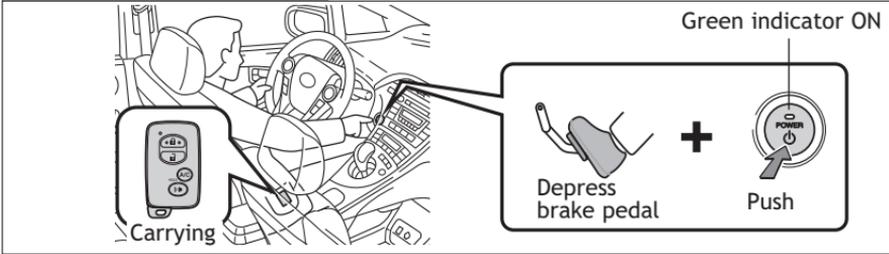

Power (without starting Hybrid System)

Without depressing the brake pedal, pressing the "POWER" switch will change the operation mode in succession from:

ACCESSORY

Accessories such as the radio will operate.


ON

Power ON; Hybrid System is not engaged.


OFF

All systems OFF.


Locking operation (if equipped)

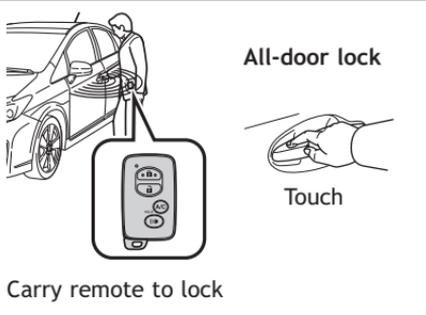

Unlocking operation (if equipped)

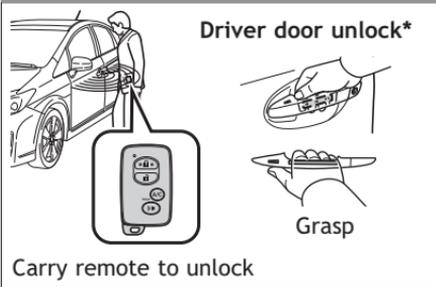




Back door lock/unlock (if equipped)

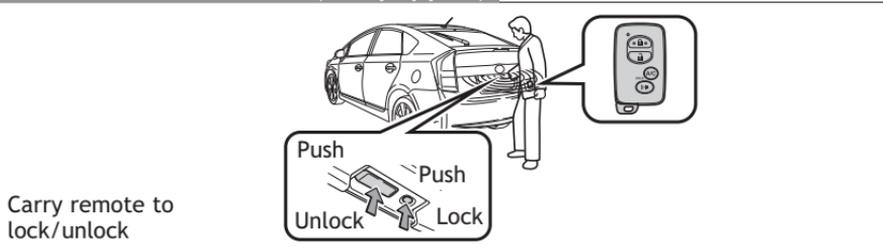

* Driver door unlocking function can be programmed to unlock driver door only, or all doors. Grasping passenger door handle will unlock all doors.




NOTE: Doors may also be locked/unlocked using remote.

Fuel tank door release and cap

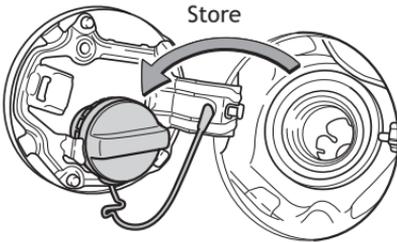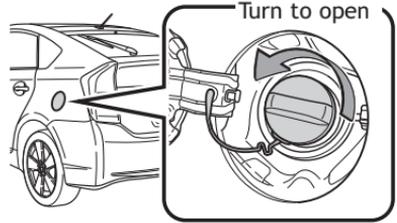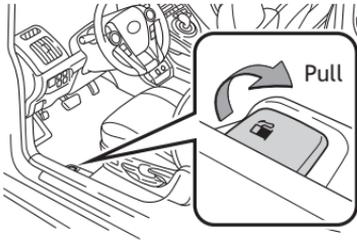


NOTE: Tighten until one click is heard. If the cap is not tightened enough, Check Engine "CHECK" indicator may illuminate.


Hood release

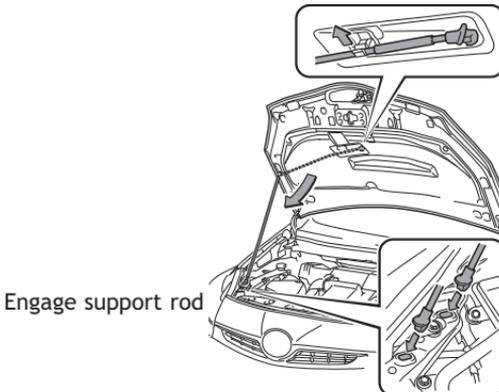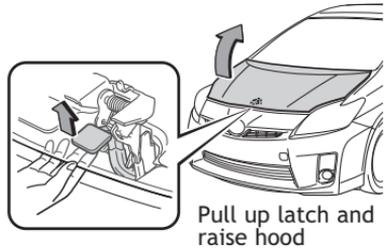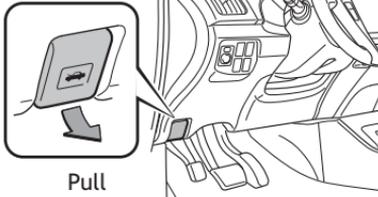

Light control-Instrument panel

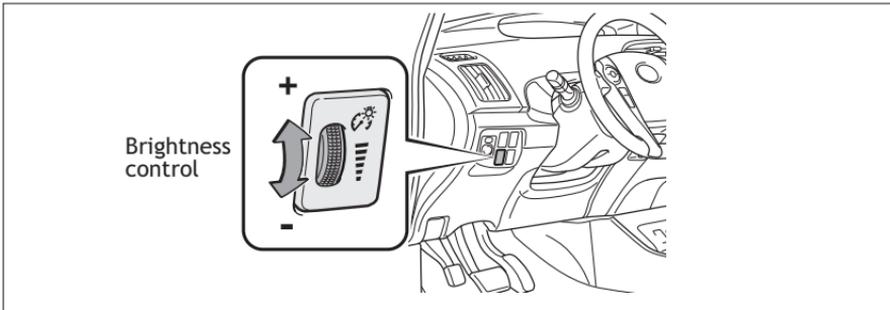

Engine maintenance

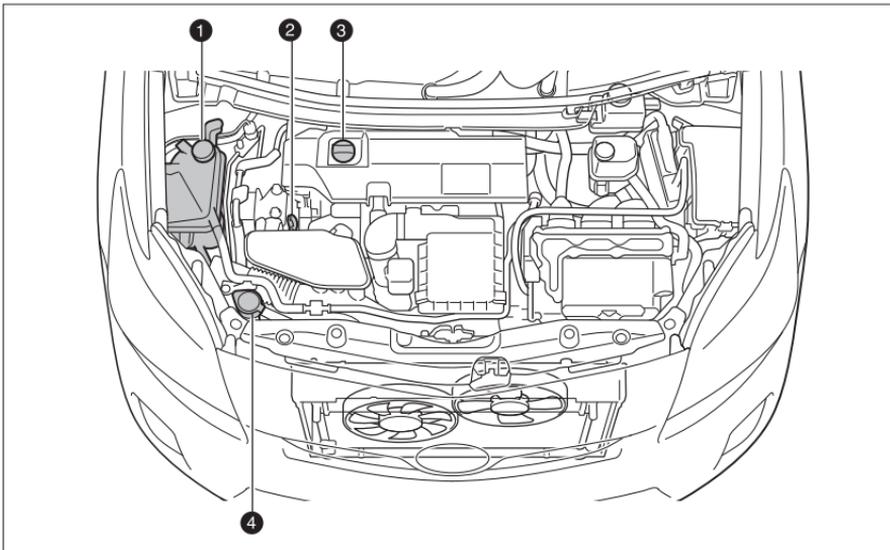

- ① Engine coolant reservoir
- ② Engine oil level dipstick
- ③ Engine oil filler cap
- ④ Windshield washer fluid tank

NOTE: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the "Warranty Maintenance Guide."

FEATURES/OPERATIONS

Hybrid Synergy Drive System

The Hybrid Synergy Drive System utilizes a computer-controlled gasoline engine and electric motor to provide the most efficient combination of power for the vehicle. To conserve energy, when the brakes are applied the braking force generates electricity which is then sent to the traction battery. In addition, the engine shuts off when the vehicle is stopped. The benefits are better fuel economy, reduced vehicle emissions and improved performance.

NOTE: Fuel consumption and energy information of the Hybrid System are shown on the multi-information display.

Tips for improved fuel economy

- Ensure tire pressures are maintained at levels specified in the *Owner's Manual*.
- When possible, link trips to reduce engine cold starts.
- Avoid driving at speeds that are higher than necessary, especially on the highway.
- When possible, avoid sudden stops to maximize regenerative braking energy.
- Minimize use of the Air Conditioning.

Starting the Hybrid System



- (1) Depress the brake pedal, and press the "POWER" switch briefly and firmly.
- (2) The "READY" light will blink. After a few seconds, when the light remains steady and a beep sounds, you may begin driving.


Auto lock/unlock functions

Automatic door locks can be programmed to operate in two different modes, or turned OFF.

- Doors lock when shifting from Park.
- Doors lock when the vehicle speed is approximately 12 mph or higher.
- Doors unlock when shifting into Park.
- Doors unlock when the driver's door is opened within 10 seconds after turning the "POWER" switch OFF.


Refer to the *Owner's Manual* for more details.

Transmission

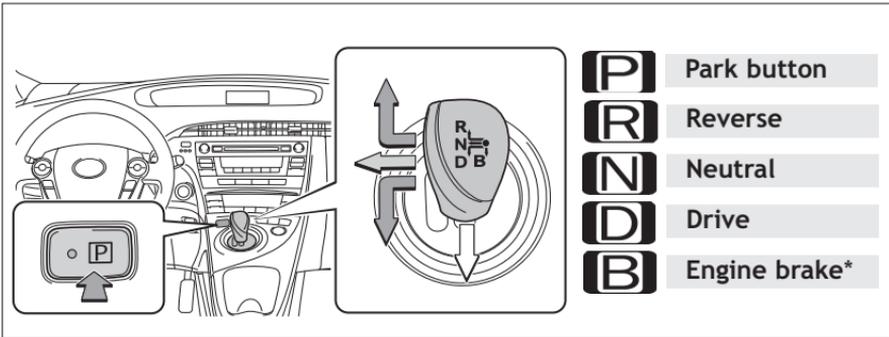

* The engine brake is the equivalent of downshifting. Shift to "B" when engine braking is desired (i.e. downhill driving, coasting to a stop, etc.).


Eco Mode

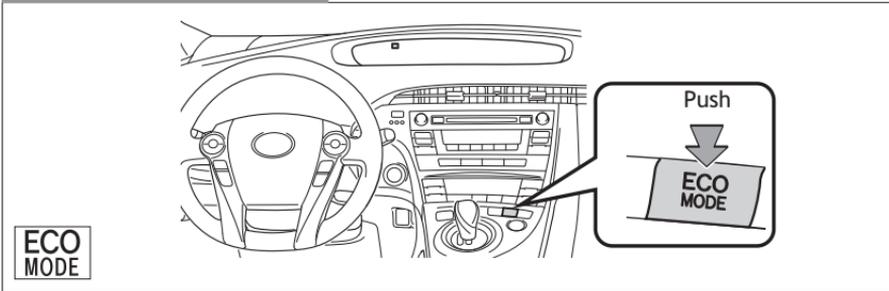

Eco Mode helps achieve low fuel consumption during trips that involve frequent accelerating and braking.

Refer to the *Owner's Manual* for more details.


Power Mode

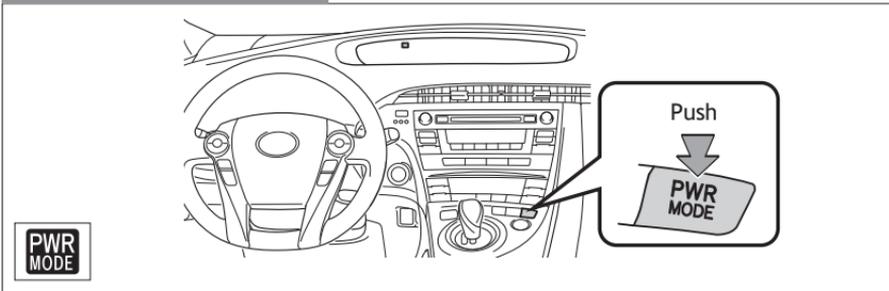

Use when a higher level of response is desired, such as when driving in mountainous regions.

Refer to the *Owner's Manual* for more details.


EV-Drive Mode (if equipped)

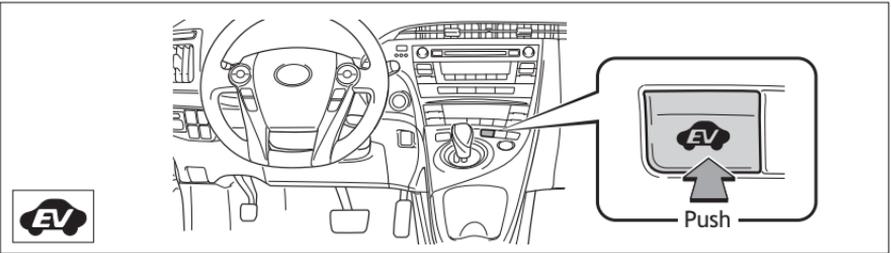

EV-Drive Mode allows the electric motor (traction motor), powered by the hybrid battery (traction battery), to be used to drive the vehicle under certain driving conditions.

Refer to the *Owner's Manual* for more details.


Tilt and telescopic steering wheel

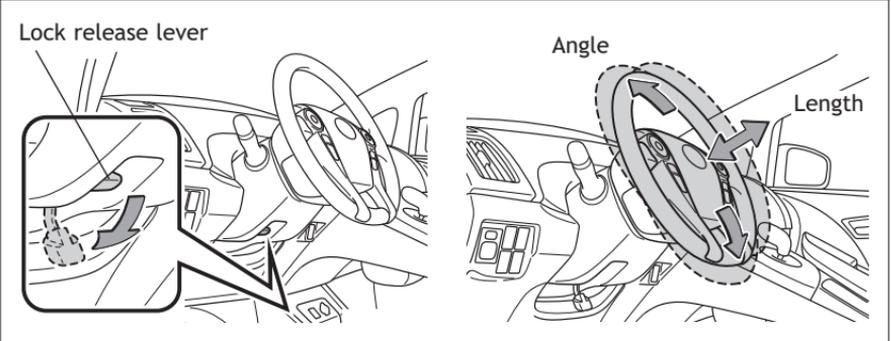


Hold wheel, push lever down, set angle and length, and return lever.

NOTE: Do not attempt to adjust while the vehicle is in motion.

Parking brake

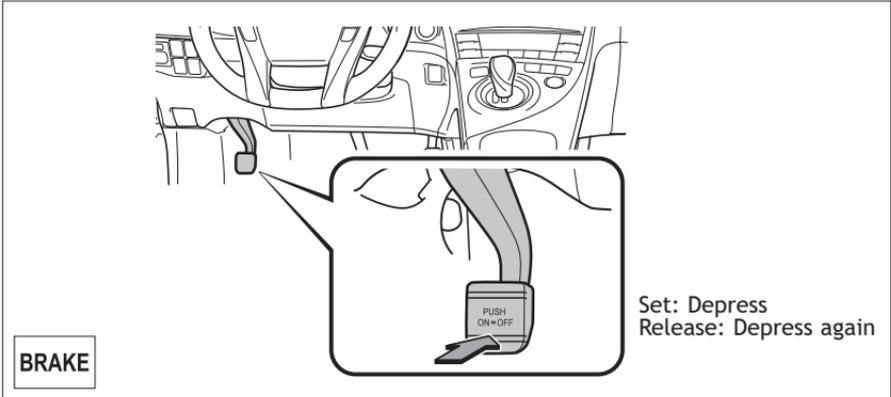


Seat adjustments-Front

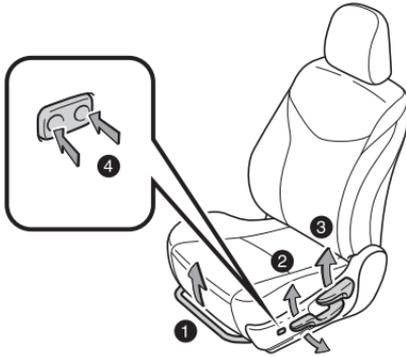

- ① Seat position (forward/backward)
- ② Height crank (driver side; if equipped)
- ③ Seatback angle
- ④ Lumbar support (driver side; if equipped)


Seats-Head restraints

Front

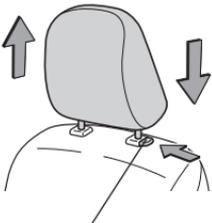


Lock release button

Rear center

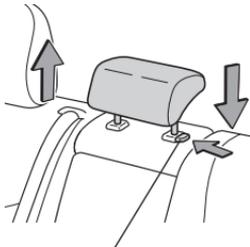


Lock release button

Rear outboard

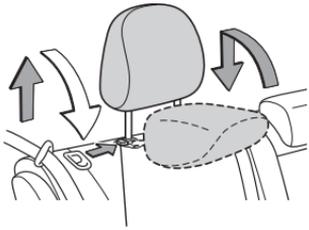


Lock release button

Seat-Folding down rear seat

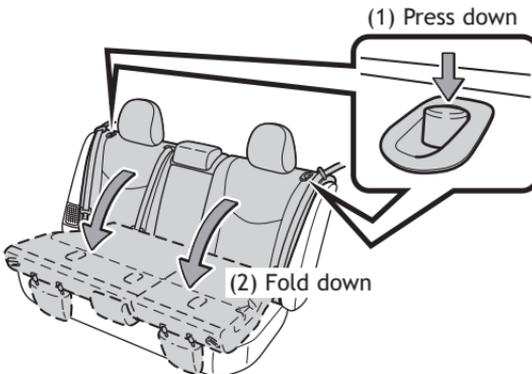

Windows-Power

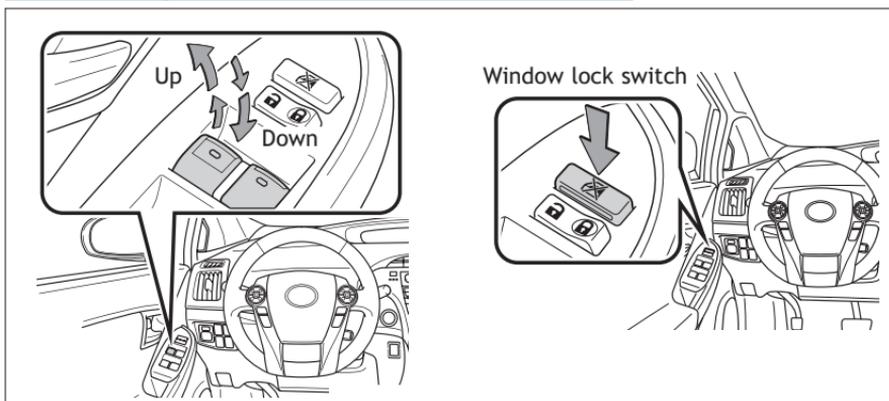


Automatic operation Push the switch completely down or pull it completely up and release to fully open or close. To stop window midway, push the switch in the opposite direction.


Window lock switch Deactivates all passenger windows. Driver's window remains operable.

Windshield wipers & washers

Front

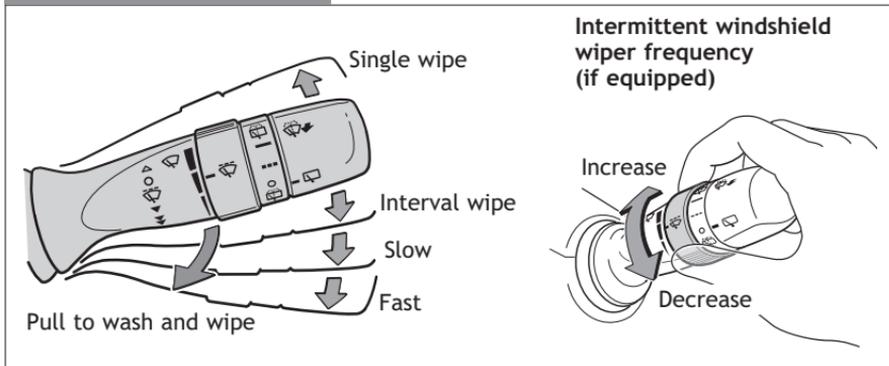


Rear (if equipped)

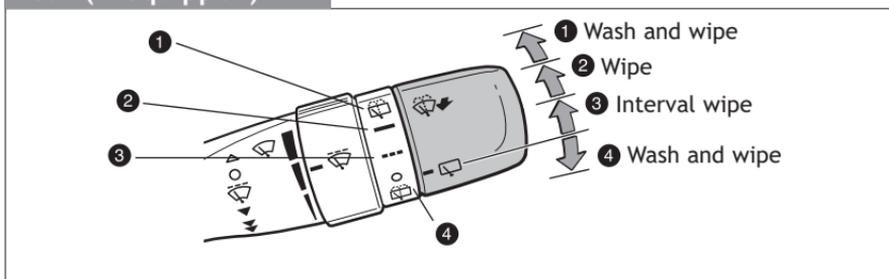


Lights & turn signals

Headlights

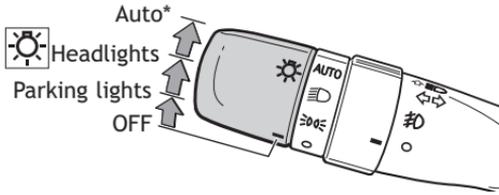


* If equipped

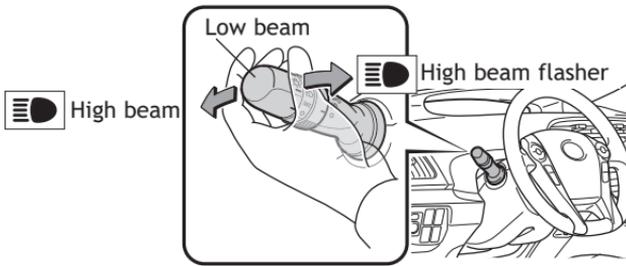


Automatic light cutoff system Automatically turns lights off after a delay of 30 seconds.

Front fog lights (if equipped)

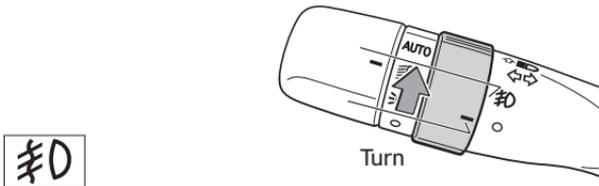


Front fog lights come on only when the headlights are on low beam.


Turn signals

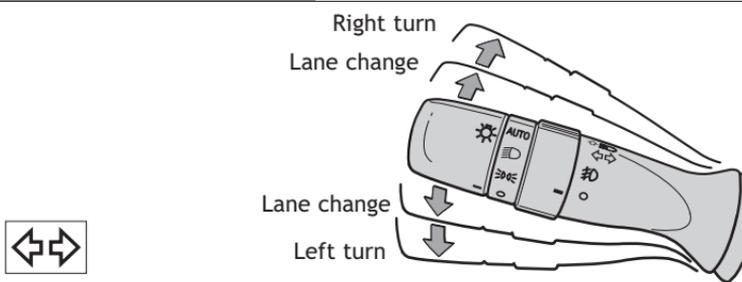

Seat heaters (if equipped)

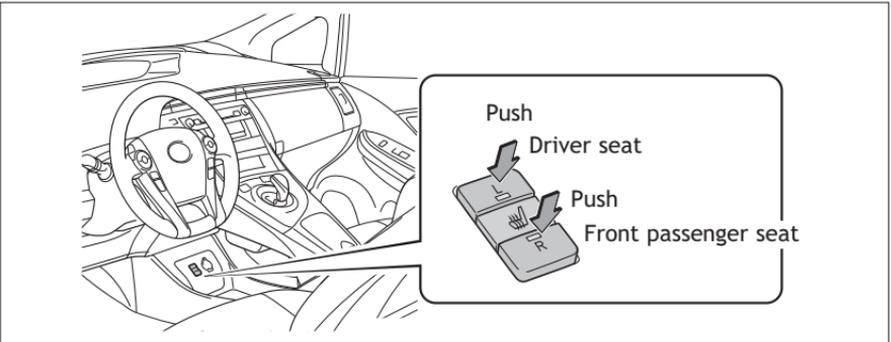


Air Conditioning/Heating

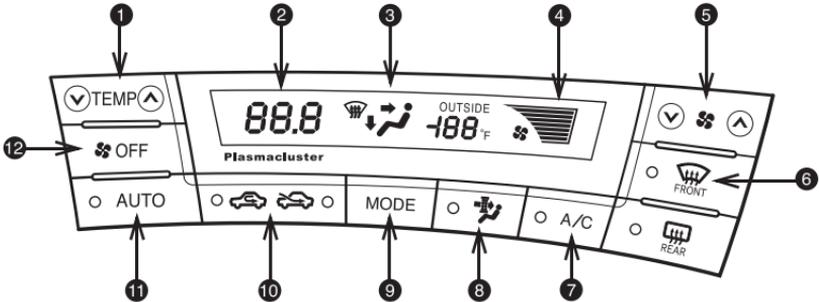

- 1 Temperature selector
- 2 Temperature setting display
- 3 Air outlet display
- 4 Fan speed display
- 5 Fan speed control
- 6 Windshield defogger
- 7 Air Conditioning ON/OFF
- 8 Micro dust and pollen filter mode (turns off automatically after 3 minutes)
- 9 Airflow vent
Use “” or “” mode to reduce window fogging (system automatically switches to fresh air mode).
- 10 Recirculated cabin air (fresh air when OFF)
- 11 Automatic climate control ON
Adjusting the temperature setting will cause the airflow vents, air intake and fan to adjust automatically.
- 12 Climate control OFF

Solar ventilation system (if equipped)

With the "POWER" switch in ON mode, turn on the solar ventilation switch.

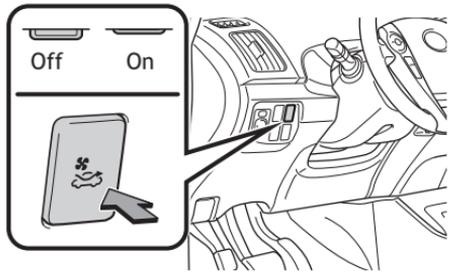



The solar ventilation system allows ventilation of the vehicle interior when the vehicle is parked in direct sunlight.

Refer to the *Owner's Manual* for more details.

Moonroof (if equipped)



Opening operation

Push once to tilt up, again to open partway, and again to open completely.

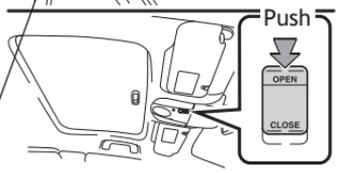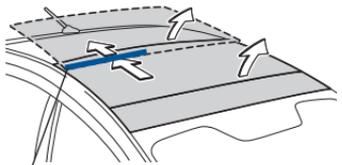

Recommended open position to minimize wind noise.


Closing operation

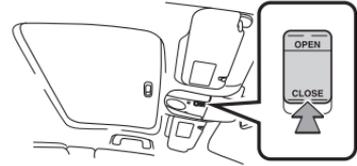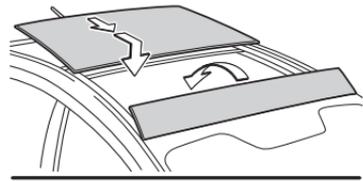


Push and hold to close partway; again to close completely.

Audio

Type 1

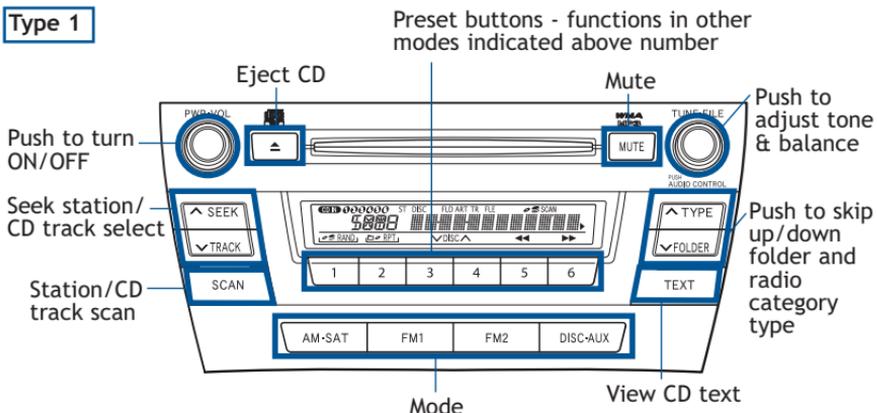

Type 2 (with JBL speakers and Bluetooth® function)

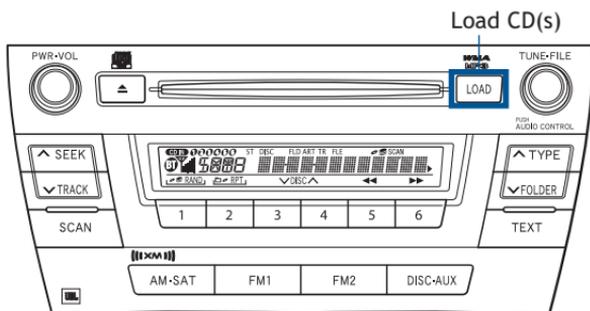

CD player

To scan tracks on a disc Push and hold "SCAN." Push again to hold selection.

CD changer (Type 2 only)

-To load one disc Push "LOAD" and insert one disc.

-To load multiple discs Push and hold "LOAD" until you hear a beep.

Insert one disc. Shutter will close and then re-open for next disc.

To select a file (MP3/WMA only) Turn "TUNE-FILE."


To select a folder (MP3/WMA only) Push either side of "FOLDER."

Radio

To preset stations Tune in the desired station and hold down a preset button (1-6) until you hear a beep. Push desired preset button (1-6) to select.

To scan stations Push and hold "SCAN" to scan preset stations. Push again to hold selection.


AUX or USB/AUX port (if equipped)

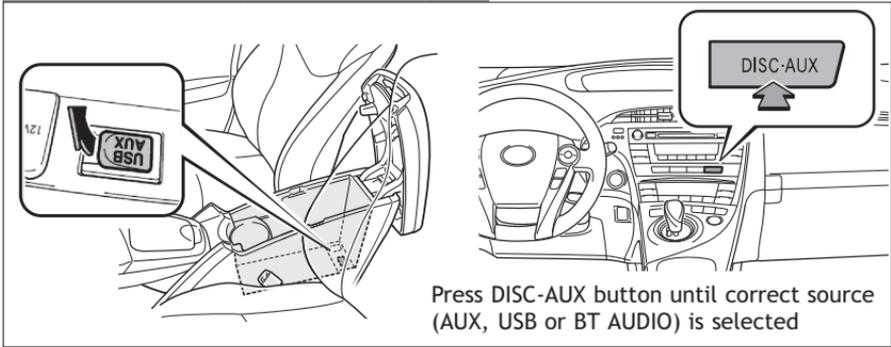

Press DISC-AUX button until correct source (AUX, USB or BT AUDIO) is selected


By inserting a mini plug into the AUX or USB/AUX port, you can listen to music from a portable audio device through the vehicle's speaker system while in AUX or USB/AUX mode.

Power outlets

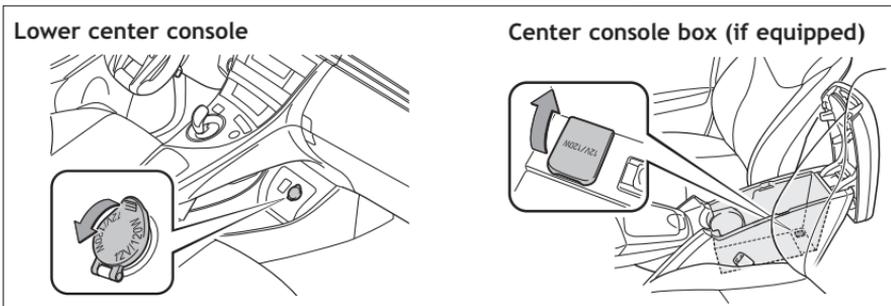

Power switch must be set at "ACCESSORY" or "ON" mode to be used.


Steering wheel switches

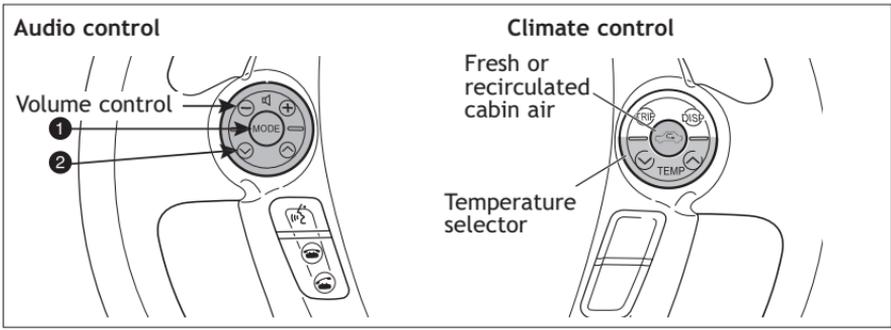


- 1 "MODE"
Push to turn audio ON and select an audio mode. Push and hold to turn the audio system OFF.
- 2 "V A"
Use to search within the selected audio medium (radio, CD, iPod®, etc.).

Cruise control (if equipped)

Turning system ON/OFF

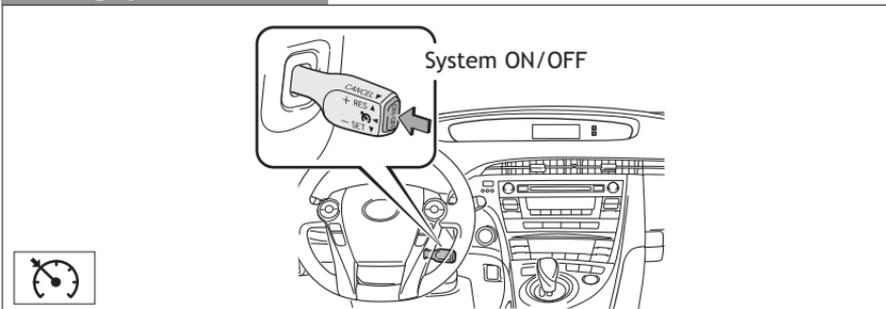

Functions

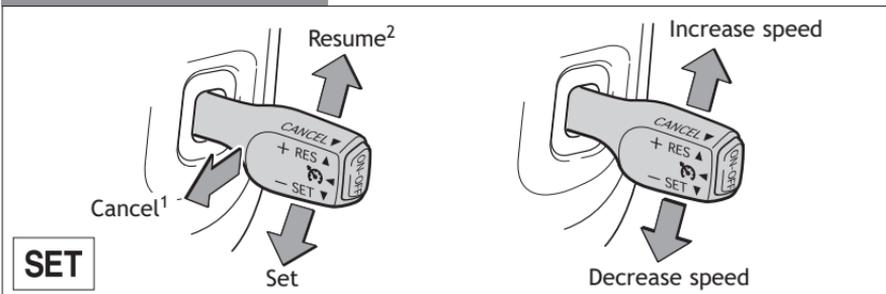


¹ The set speed may also be cancelled by depressing the brake pedal.

² The set speed may be resumed once vehicle speed exceeds 25 mph.

Dynamic Radar Cruise Control (if equipped)


Refer to the *Owner's Manual* for more details and complete safety precautions before attempting to use "Dynamic Radar Cruise Control."

Fixed speed mode

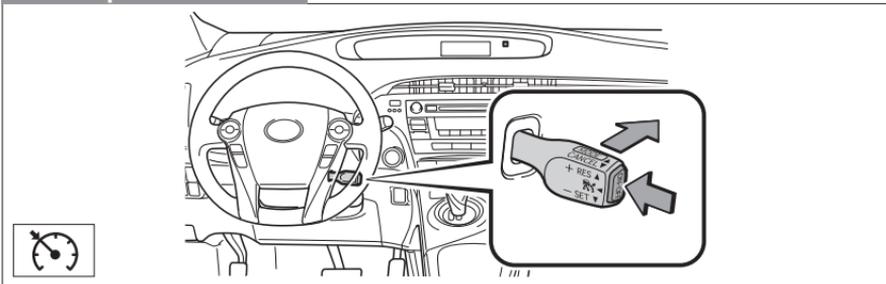


- (1) To select conventional/fixed speed control Push the ON-OFF button. Push the lever forward and hold until the "Ⓢ" indicator appears.
- (2) To set, cancel and resume a speed Refer to instructions in the *Cruise Control* section.

Distance control mode

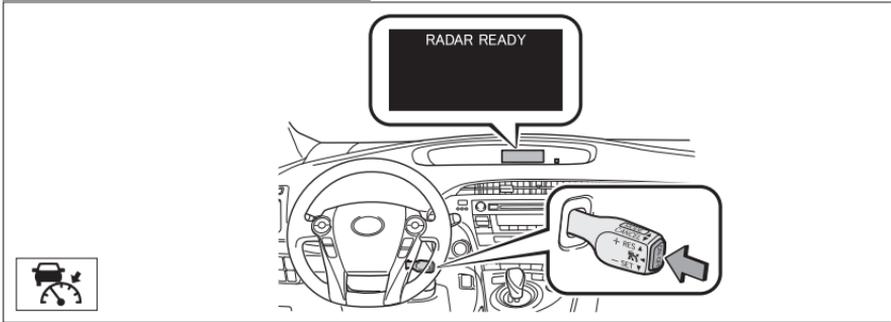


Distance control mode will cruise at a set speed, decelerate to maintain selected distance from a slower vehicle traveling in front of you, and accelerate back up to the selected speed if the vehicle in front of you changes lanes or speeds up.

- (1) To select distance control mode Push the ON-OFF button. The "RADAR READY" and "🚗" will come on.
- (2) To set, cancel and resume a speed Refer to instructions for *Cruise Control* section.

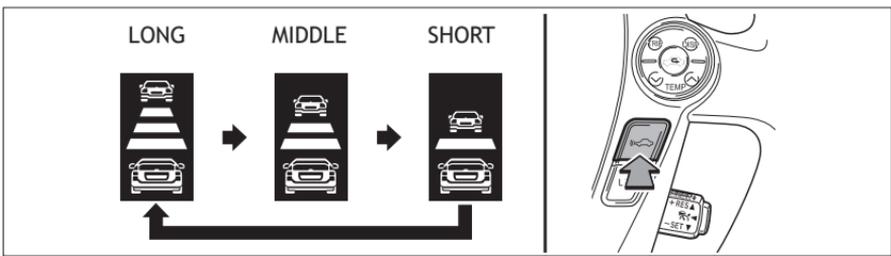

- (3) To change the vehicle-to-vehicle distance Push the distance button to cycle through the settings, which will change progressively from LONG to MIDDLE to SHORT.


LKA (Lane Keep Assist) (if equipped)

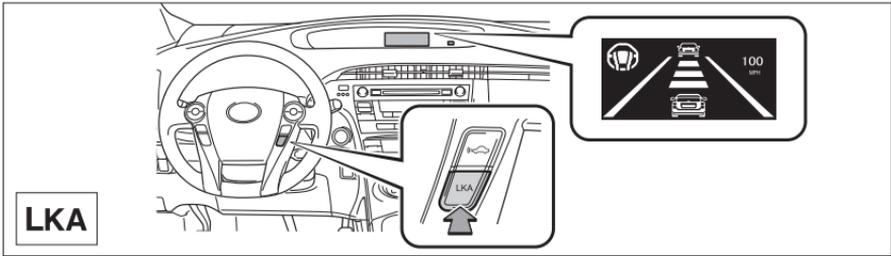

When activated, the LKA system camera detects lane markings and alerts the driver when the vehicle strays from its lane. Driver may also experience a slight steering torque.

Refer to the *Owner's Manual* for more details.

Multi-information display

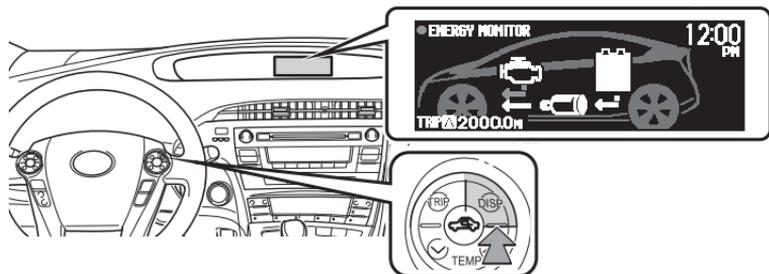


Push "DISP" to change between the following information screens:

- (1) Energy monitor
- (2) Hybrid System Indicator
- (3) 5-minute/1-minute interval fuel consumption display
- (4) Fuel consumption history display


Push and hold "DISP" to set up the displays.

Telephone controls (Bluetooth®) (if equipped)


Microphone (type A)

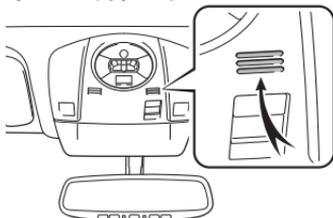


Microphone (type B)

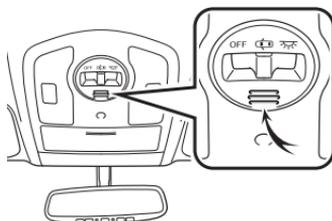

Audio unit

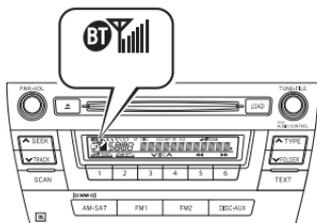


Steering wheel telephone switches

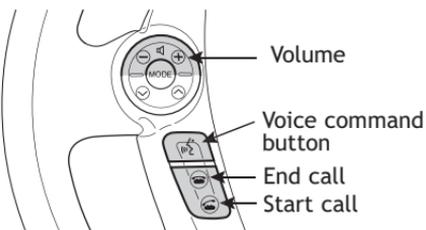

Bluetooth® technology allows dialing or receipt of calls without taking hands from the steering wheel or using a cable to connect the telephone and the system.


Refer to "Hands-free phone system (for cellular phone)," Section 3-3 in the *Owner's Manual*, or go to Toyota.LetsTalk.com for more information about phone connections and compatibility.

Clock

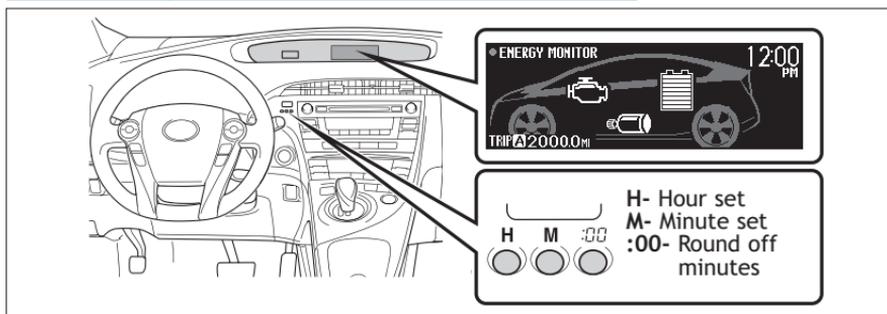

Refer to the *Owner's Manual* for details on adjusting time.


Hill-start Assist Control (HAC)

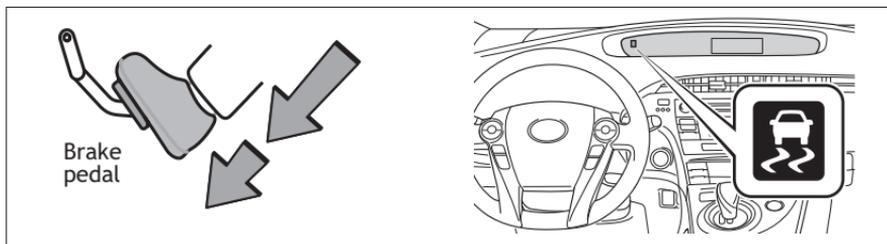

HAC helps prevent rolling backwards on an incline. To engage, push further down on brake pedal while at a complete stop until a beep sounds and slip indicator illuminates. HAC holds for approximately two seconds after releasing brake pedal.

Refer to the *Owner's Manual* for more details.

Garage door opener (HomeLink®)* (if equipped)

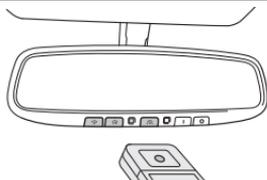

Garage door openers manufactured under license from HomeLink®* can be programmed to operate garage doors, estate gates, security lighting, etc.


Refer to "Garage door opener," Section 3-6 in the *Owner's Manual* for more details.

For programming assistance, contact HomeLink® at 1-800-355-3515, or visit <http://www.homelink.com>.

* HomeLink® is a registered trademark of Johnson Controls, Inc.

SAFETY AND EMERGENCY FEATURES


Seat belts

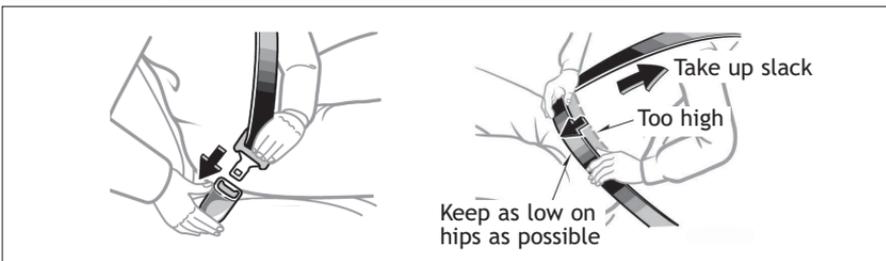

If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.

Seat belts-Shoulder belt anchor

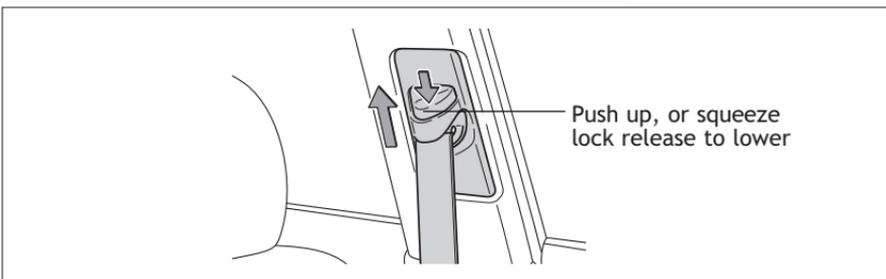

Tire Pressure Monitoring (warning) System


If the Tire Pressure Warning indicator “” illuminates without blinking, adjust tire pressures to factory-specified levels.* The light will turn off after a few minutes. The warning light may come on due to temperature changes or changes in tire pressure from natural air leakage.

If the tire pressure indicator flashes for more than 60 seconds and then remains on, take the vehicle to your local Toyota dealer.


Refer to the *Owner's Manual* for more details.

* Refer to load label on door jamb or the *Owner's Manual* for tire inflation specifications.

Door locks

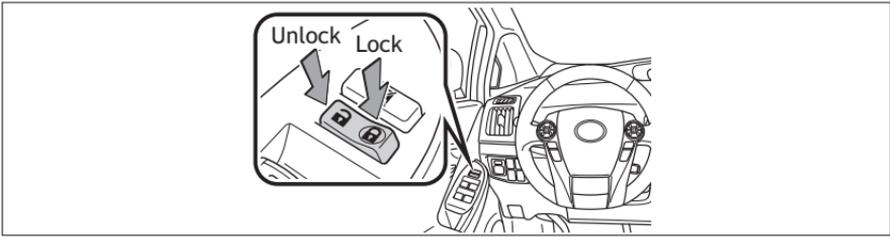

Doors-Child safety locks

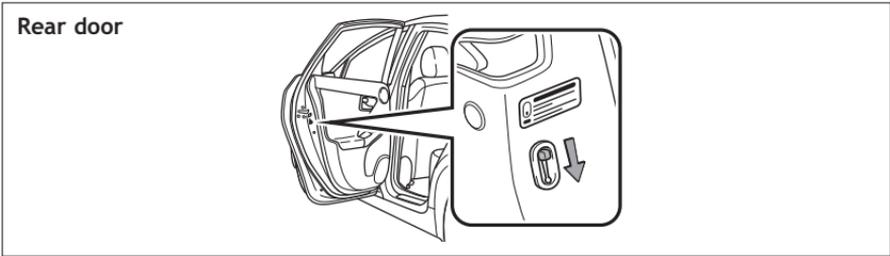


Rear door


Moving the lever to "LOCK" will allow the door to be opened only from the outside.

Spare tire & tools

Tool location

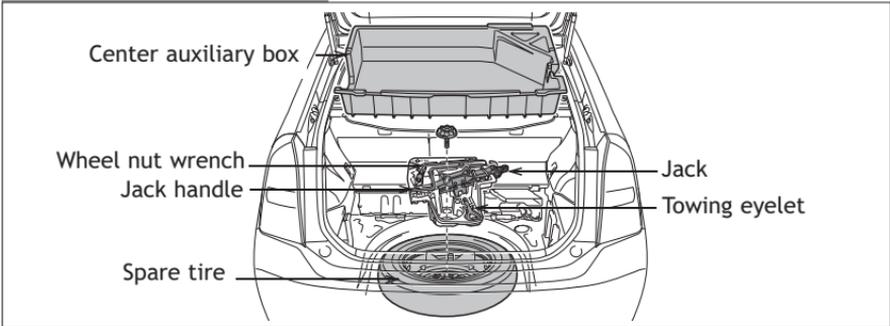

Removing the spare tire

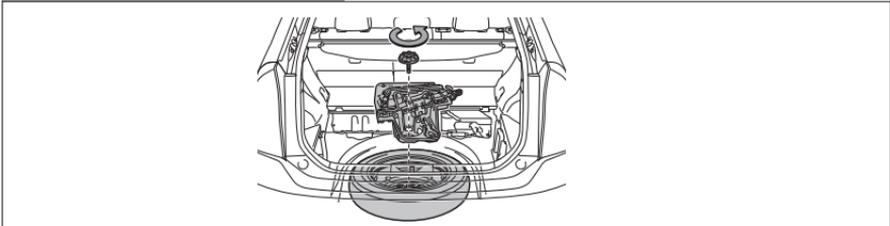

Refer to the *Owner's Manual* for tire changing and jack positioning procedures.



CUSTOMER EXPERIENCE CENTER

1-800-331-4331

