

SEQUOIA

2 0 1 2



QUICK REFERENCE GUIDE

2012 Sequoia

This *Quick Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Quick Reference Guide* is not intended as a substitute for the *Owner's Manual* located in your vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Sequoia.

! A word about safe vehicle operations

This *Quick Reference Guide* is not a full description of Sequoia operations. Every Sequoia owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Quick Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

INDEX

OVERVIEW

Engine maintenance	10
Fuel tank door release and cap	9
Hood release	10
Indicator symbols	6-7
Instrument cluster	5
Instrument panel	2-4
Keyless entry¹	8
Light control-Instrument panel	9

FEATURES/OPERATIONS

Accessory meter	20
Air Conditioning/Heating	22-23
Audio	24-25
Auto lock/unlock¹	11
Automatic Transmission	11
BSM (Blind Spot Monitor)	13
Cruise control	26
Cup holders	31
Door locks	28
Door-Power back	19
Dynamic Laser Cruise Control	27
Four-wheel drive	12
Garage door opener (HomeLink [®]) ³	26
Lights¹ & turn signals	17
Moonroof	20
Multi-information display²	28
Parking brake	12
Power outlets-12V DC	30
Power outlets-120V AC	30
Rear seat entertainment system	31
Seat adjustments-Front	15
Seat adjustments-Rear	14
Seat ventilators/heaters	23
Seats-Folding second row seats	15
Seats-Folding third row seats	16
Seats-Head restraints	13
Steering wheel switches	25
Telephone controls (Bluetooth [®])	29
Tilt and telescopic steering wheel	21
“TOW/HAUL” switch	11
VSC OFF button	21
Window-Back	19
Windows	18
Windshield wipers & washers	18

SAFETY AND EMERGENCY FEATURES

Doors-Child safety locks	33
Floor mat installation	35
Seat belts	32
Seat belts-Shoulder belt anchor	33
Spare tire & tools	33
Star Safety System [™]	34-35
Tire Pressure Monitoring (warning) System	32

¹ Visit your Toyota dealer for information on customizing this feature.



² Programmable by customer. Refer to the Owner's Manual for instructions and more information.

³ HomeLink[®] is a registered trademark of Johnson Controls, Inc.


OVERVIEW

Instrument panel

Steering wheel controls (if equipped)

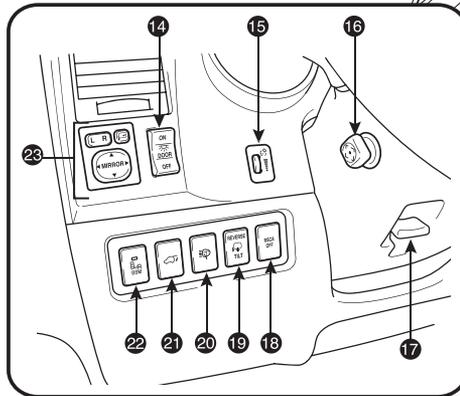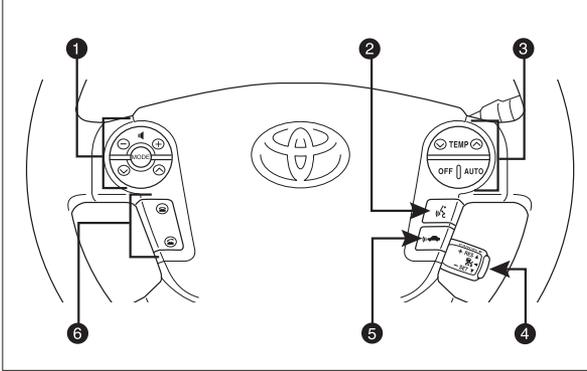

- 1 Steering wheel audio controls¹
- 2 Voice command button¹
- 3 Steering wheel climate controls¹
- 4 Cruise control
- 5 Dynamic Laser Cruise Control distance switch¹
- 6 Telephone controls^{1,2}
- 7 Headlight, turn signal and front fog light¹ controls
- 8 Gauges and meters
- 9 Wiper and washer controls
- 10 Power back window switch
- 11 VSC OFF switch
- 12 Ignition switch
- 13 Tire Pressure Monitoring (warning) System reset
- 14 Personal/Interior light main switch
- 15 Instrument panel light control

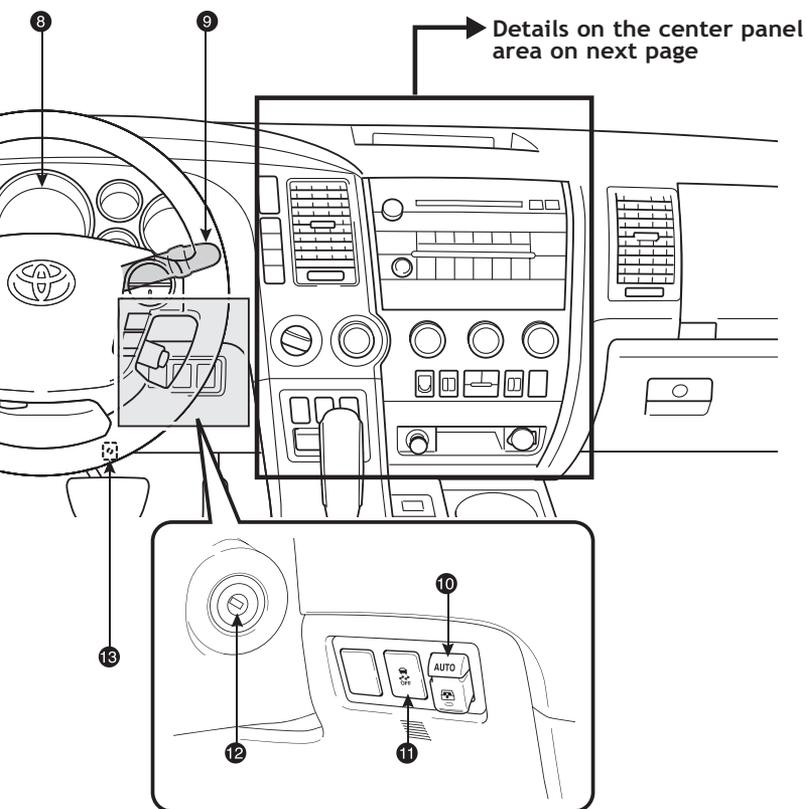


- 16 Tilt and telescopic steering control switch¹
- 17 Tilt and telescopic steering lock release lever¹
- 18 Roll Sensing of Curtain shield Airbag OFF switch¹
- 19 "REVERSE TILT" (side mirrors) switch¹
- 20 Headlight cleaner¹
- 21 Power back door button¹
- 22 BSM (Blind Spot Monitor) main switch¹
- 23 Power rearview mirror controls

¹ If equipped

² Vehicles with navigation system: for details, refer to the "Navigation System Owner's Manual."

OVERVIEW

Center panel area

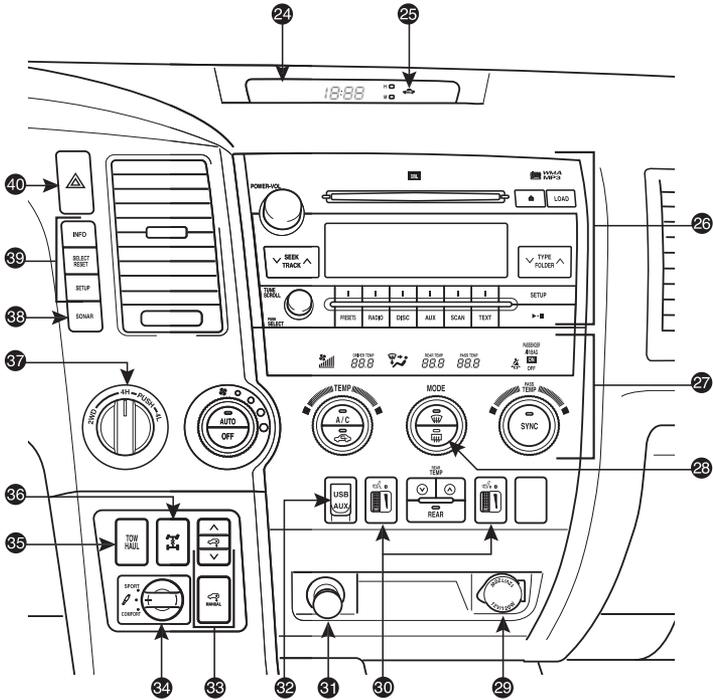


- 24 Accessory meter
- 25 Theft deterrent/Engine immobilizer system indicator
- 26 Audio system or navigation system^{1,2}
- 27 Air Conditioning controls
- 28 Outside rearview mirrors/Back window defogger/Windshield wiper de-icer button¹
- 29 12V DC Power outlet
- 30 Seat heater¹ and ventilator¹ controls
- 31 Cigarette lighter
- 32 AUX audio jack/USB port¹
- 33 Height control switch¹
- 34 AVS switch¹
- 35 “TOW/HAUL” button¹
- 36 Center differential lock/unlock switch¹
- 37 Front-wheel drive control switch¹
- 38 Intuitive parking assist button¹
- 39 Multi-information display control buttons¹ and/or accessory meter control buttons¹
- 40 Emergency flasher button

¹ If equipped


² Vehicles with navigation system: for details, refer to the “Navigation System Owner’s Manual.”

Instrument cluster

With multi-information display

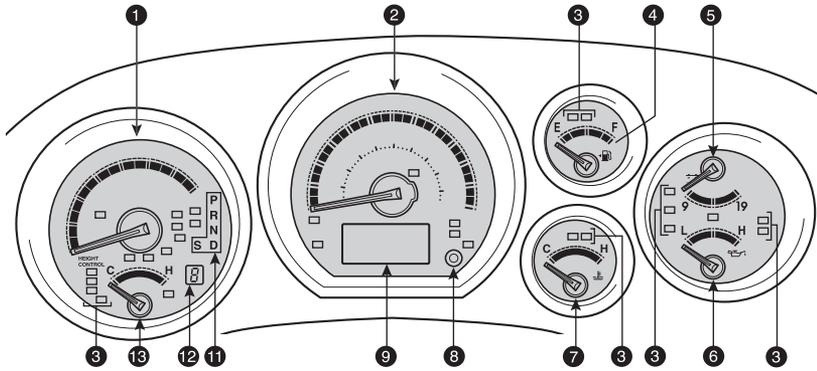

Without multi-information display

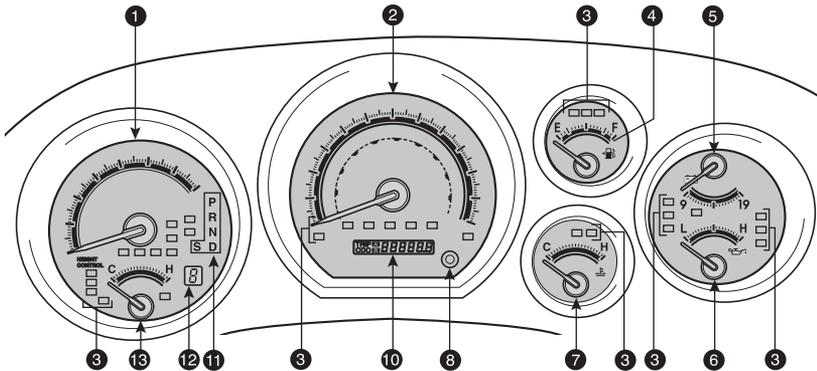


- 1 Tachometer
- 2 Speedometer
- 3 Service indicator and reminder
- 4 Fuel gauge
- 5 Voltmeter
- 6 Engine oil pressure gauge
- 7 Engine coolant temperature
- 8 Odometer/Trip meter and trip meter reset button
- 9 Multi-information display
- 10 Odometer and two trip meters
- 11 Automatic Transmission shift position indicator
- 12 Automatic Transmission shift range display
- 13 Automatic Transmission fluid temperature gauge¹

¹ If equipped

OVERVIEW

Indicator symbols

 For details, refer to “Indicators and warning lights,” Section 2-2, *2012 Owner’s Manual*.

	Brake system warning ¹
	Driver seat belt reminder (alarm will sound if speed is over 12 mph)
	Front passenger seat belt reminder (alarm will sound if speed is over 12 mph)
	Charging system warning ¹
	AIR BAG ON indicator
	AIR BAG OFF indicator
	Malfunction/Check Engine indicator ¹
	Engine oil replacement reminder
	Low fuel level warning
	Open door warning
	Airbag SRS warning ¹
	Low windshield washer fluid level warning
	Master warning
	Low Tire Pressure Warning ¹
	Theft deterrent/Engine immobilizer system indicator
	Power steering warning ¹
	Roll Sensing of Curtain shield Airbag OFF indicator ¹
	Headlight low/high beam indicator
	Turn signal indicator
	Shift position and shift range indicators
	Vehicle Stability Control OFF indicator ¹
	TOW/HAUL mode indicator


AUTO LSD	AUTO Limited Slip Differential indicator ¹
	Slip indicator ¹
4 HI 4 LO	High/Low speed four-wheel drive indicator
HI <input type="checkbox"/> N <input type="checkbox"/> LO <input type="checkbox"/>	Height control indicator ¹
MAN	Height control/MANUAL indicator ¹
	Center differential lock indicator
CRUISE	Cruise control indicator
ABS	Anti-lock Brake System warning ¹
A/T OIL TEMP	Automatic Transmission fluid temperature warning ¹
TRAC OFF	Traction Control OFF indicator ¹

¹ If indicator does not turn off within a few seconds of starting engine, there may be a malfunction. Have vehicle inspected by your Toyota dealer.

Keyless entry

Locking operation

With power back door

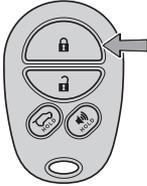


Without power back door




Push 

Unlocking operation

With power back door

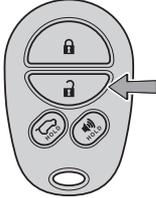

Without power back door

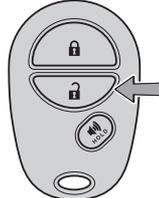

Push ONCE: Driver door
TWICE: All doors 

NOTE: If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.

Power back door operation (if equipped)




Push and hold 

Panic button




Push and hold 


Fuel tank door release and cap

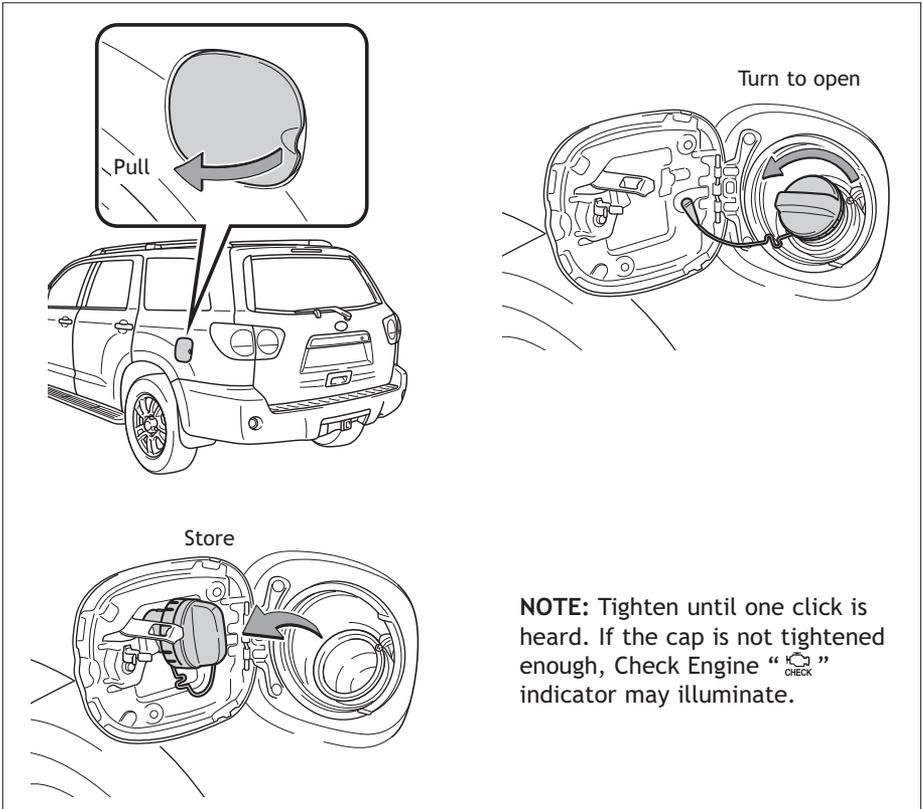


Light control-Instrument panel

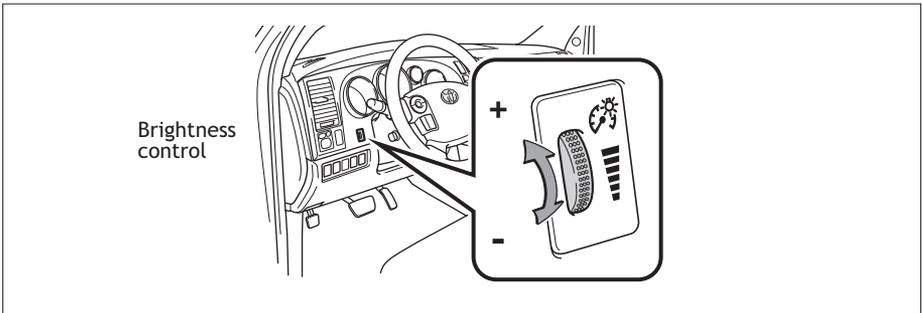

Hood release

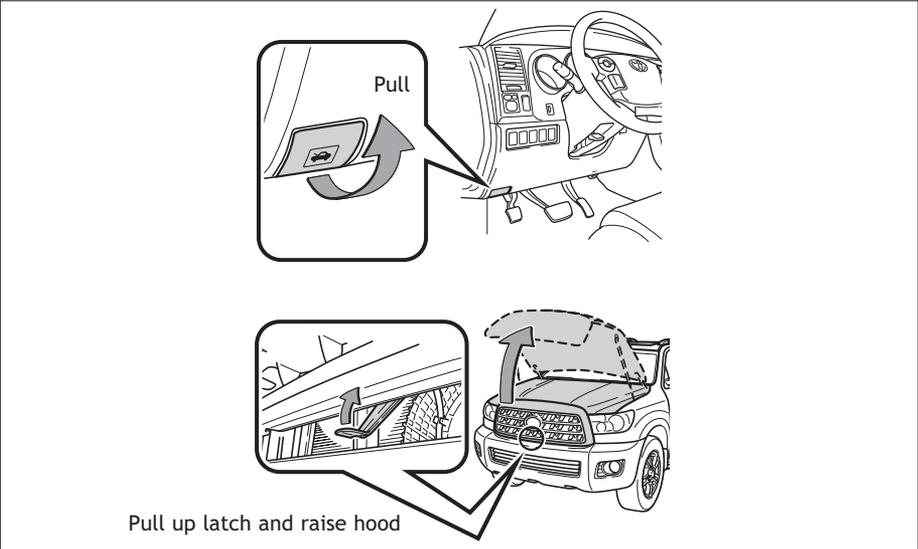

Engine maintenance

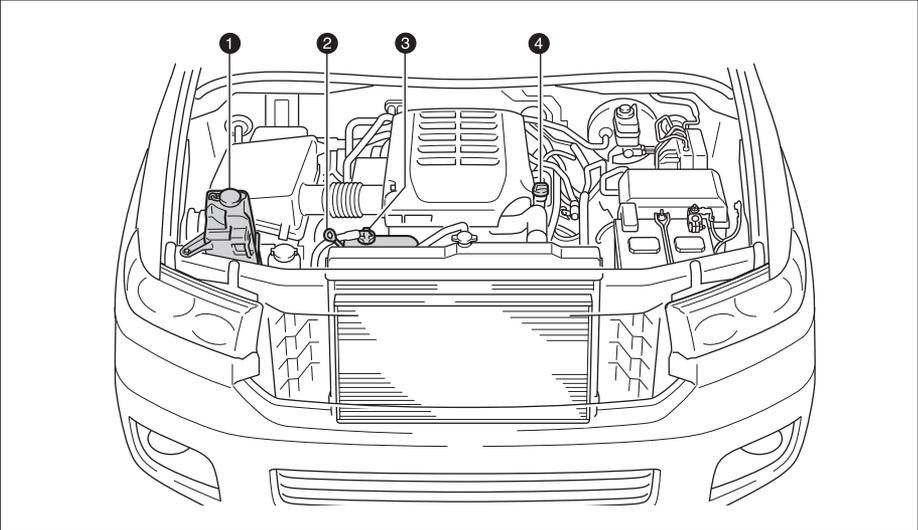


- ① Windshield washer fluid tank
- ② Engine oil level dipstick
- ③ Engine coolant reservoir
- ④ Engine oil filler cap

NOTE: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the “Warranty Maintenance Guide.”

FEATURES/OPERATIONS

Automatic Transmission

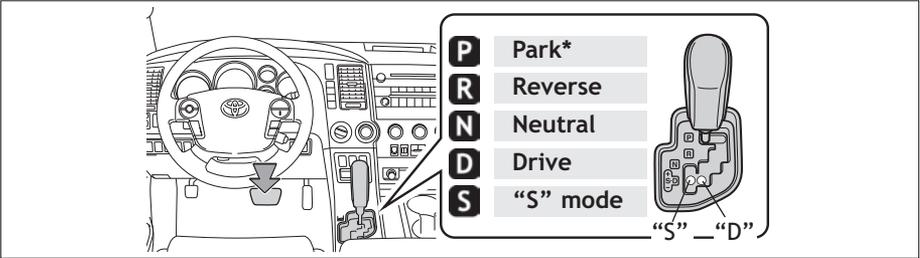

* The ignition switch must be “ON” and the brake pedal depressed to shift from Park.


“S” (Sequential) mode

Shift the shift lever to “S” position from “D” position.

- + : Upshift (push and release)
- : Downshift (pull and release)

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the “D” position.

“TOW/HAUL” switch (if equipped)

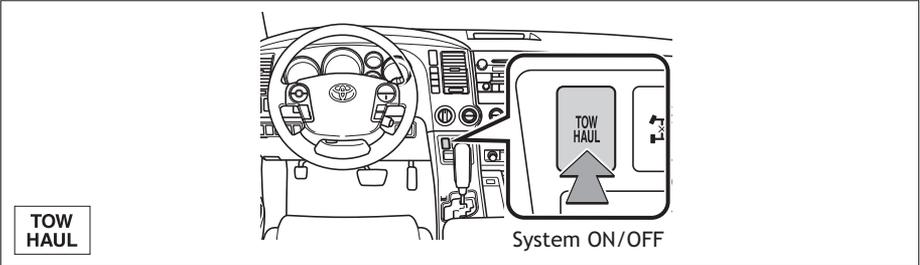

“TOW/HAUL” mode can be used when carrying heavy loads. As fuel economy is reduced while in “TOW/HAUL” mode, deactivating when driving without a load is recommended.

Refer to the *Owner’s Manual* for more details on this system before attempting to use it.

Auto lock/unlock


Automatic door locks can be programmed to operate in four different modes, or turned OFF.

- Doors lock when shifting from Park.
- Doors lock when the vehicle speed is approximately 12 mph or higher.
- Doors unlock when shifting into Park.
- Doors unlock when the driver’s door is opened within 10 seconds after turning the ignition switch to the “ACC” or “LOCK” position.

Refer to the *Owner’s Manual* for more details.

Four-wheel drive (if equipped)

Four-wheel drive control switch

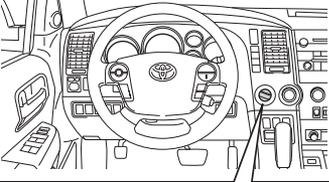


Turn



4HI 4H

Turn

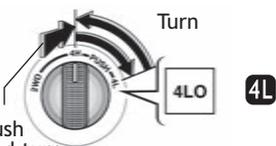


4LO 4L

Push and turn

- 2WD** High speed (2WD)
- 4H** High speed (4WD)
Turn to “4H” with speed below 62 mph.
- 4L** Low speed (4WD)
Shift to “N” position when stopped, then push and turn to “4L.”

For best fuel economy and performance under normal driving conditions, keep in “2WD” position.

Center differential lock/unlock switch

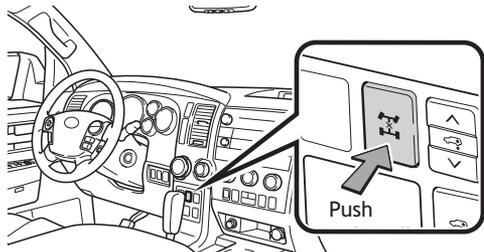


Push



Lock the center differential if the vehicle’s wheels get stuck in a ditch or when driving on a slippery or bumpy surface.

Parking brake

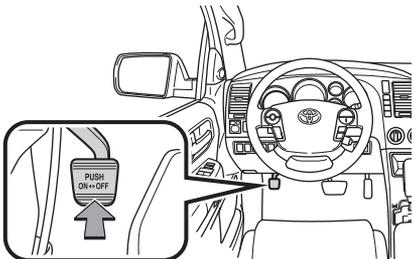


BRAKE

PUSH ON/OFF

Set: Depress
Release: Depress again


BSM (Blind Spot Monitor)(if equipped)

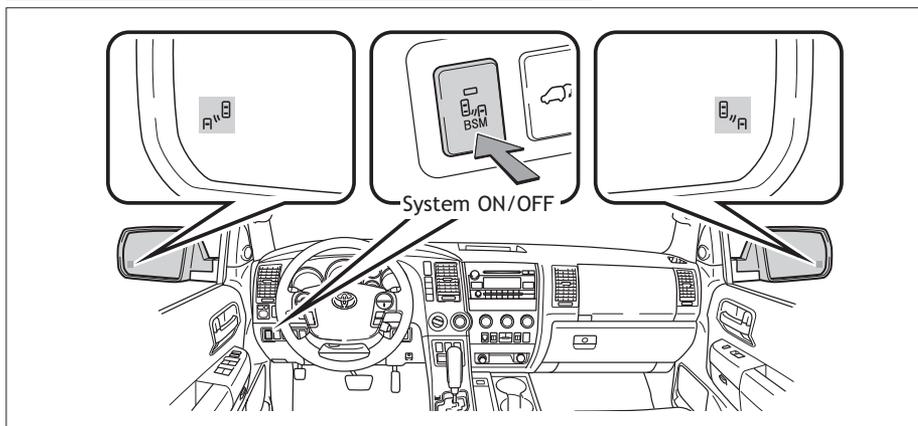

The Blind Spot Monitor is a system that assists the driver to confirm safety when changing lanes. The system uses radar sensors to detect vehicles that are traveling in an adjacent lane in the area that is not reflected in the outside rearview mirror (the blind spot), and advises the driver of the vehicles' existence via the outside rearview mirror indicator.

Refer to the *Owner's Manual* for more details on this system before attempting to use it.


Seats-Head restraints

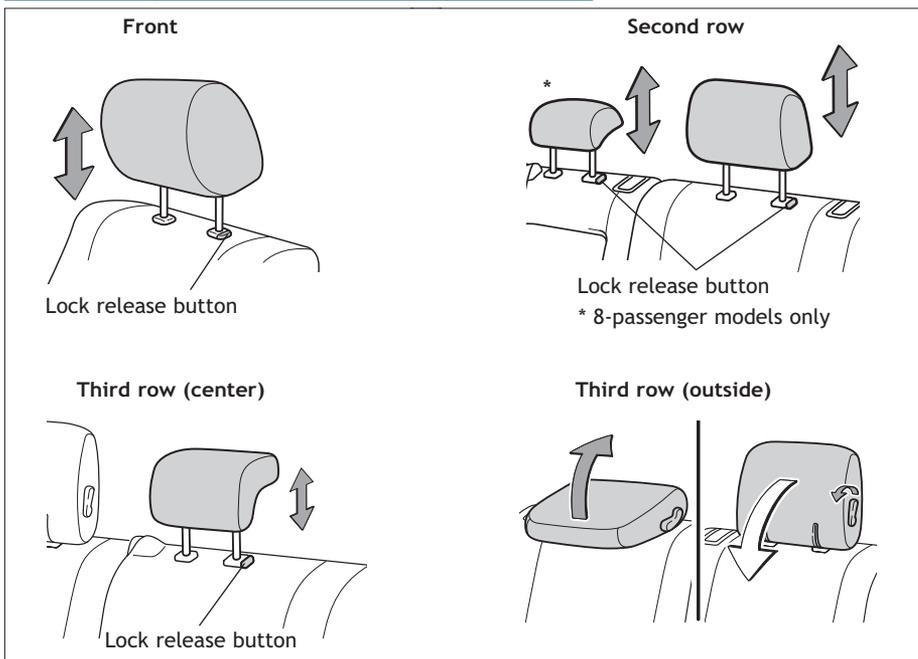


Seat adjustments-Rear

Second row

Separate seat

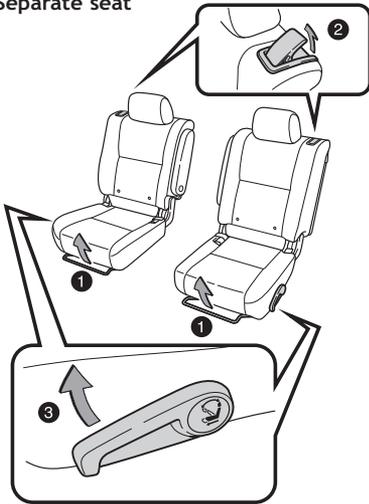


Bench seat

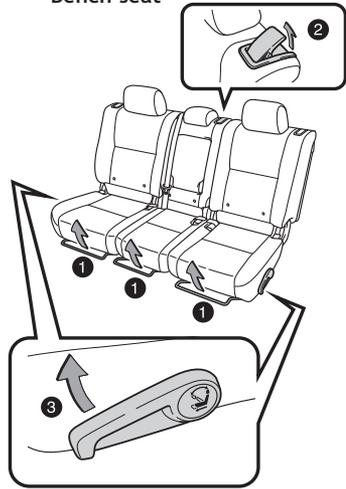


Third row

Manual seat

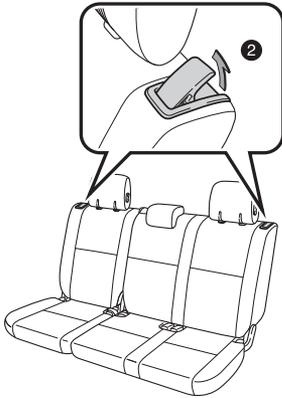


Power seat

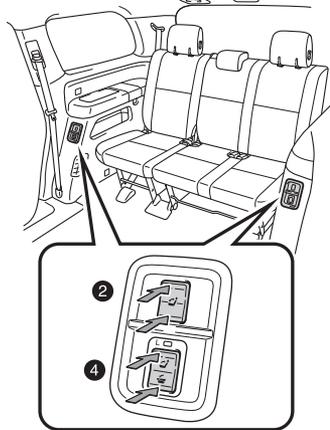

- ① Seat position (forward/backward)
- ② Seatback angle
- ③ Seatback lock release and slide
- ④ Seatback folding/returning


Refer to the *Owner's Manual* for more details.

Seat adjustments-Front

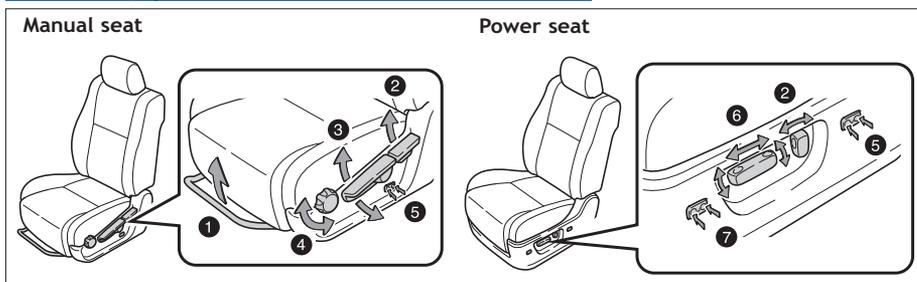









- ① Seat position (forward/backward)
- ② Seatback angle
- ③ Seat height
- ④ Seat cushion angle
- ⑤ Lumbar support
- ⑦ Position, cushion angle and height
- ⑥ Leg support (if equipped)

Seats-Folding second row seats

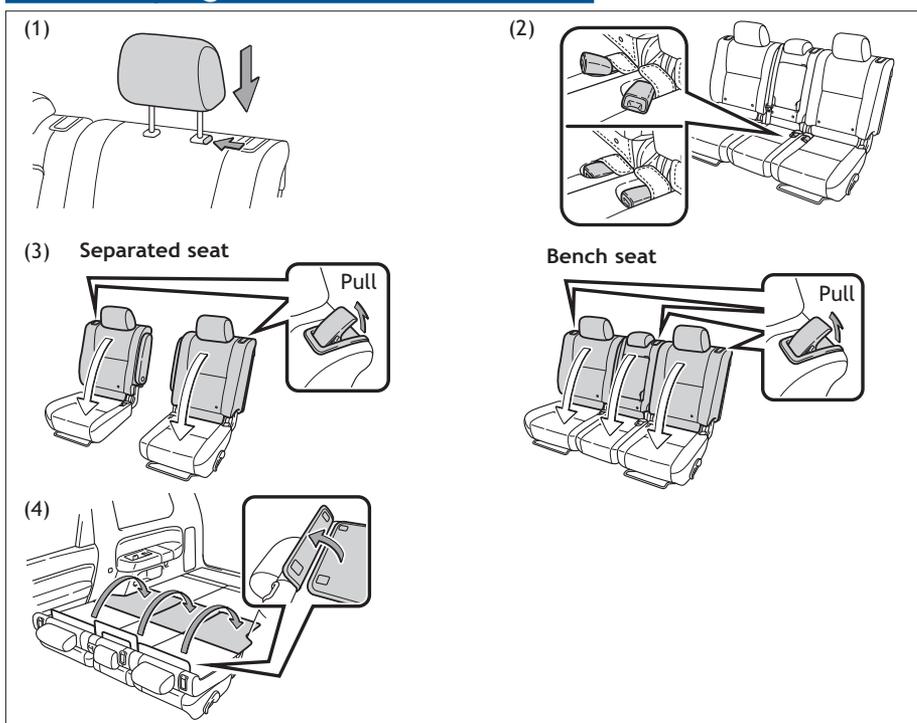

- (1) Lower the head restraints.
- (2) Stow the seat belt buckles.
- (3) Fold down the seatback.
- (4) Fold out the board (if equipped) from the seatback.

Seats-Folding third row seats

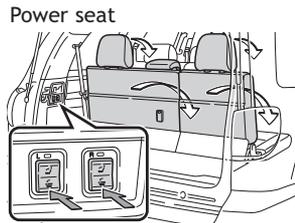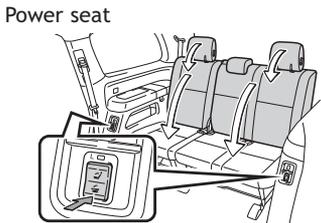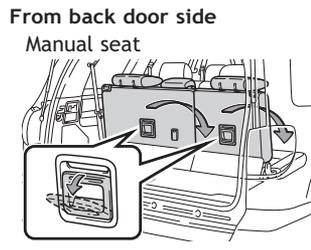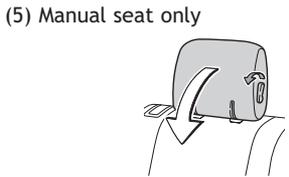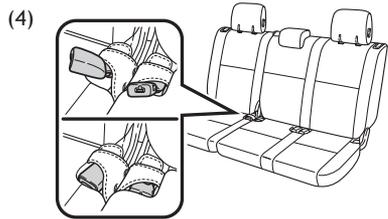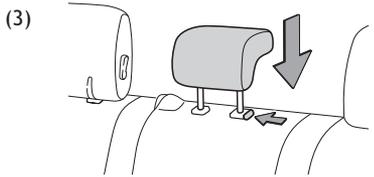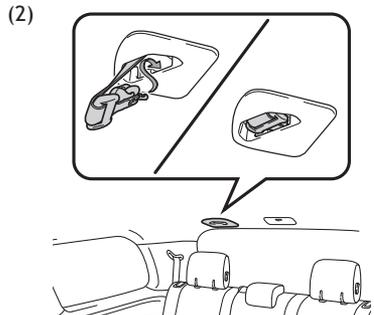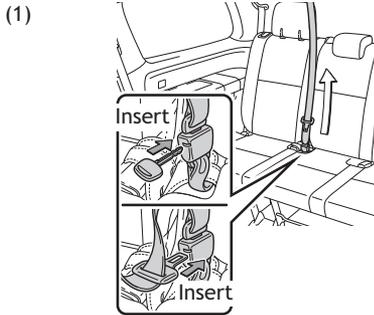


- (1) Release the center seat belt tab.
- (2) Stow the center seat belt tab.
- (3) Lower the head restraint.
- (4) Stow the seat belt buckles.
- (5) Fold the head restraint.
- (6) Fold the seats.


Lights & turn signals

Headlights


Type A

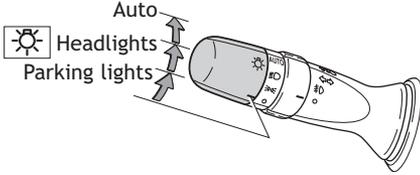



Type B

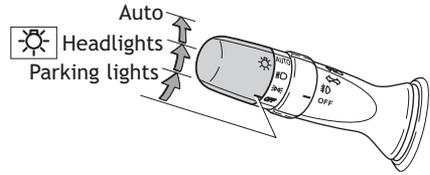

Type C

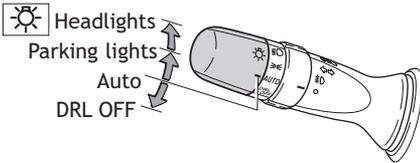

Type D

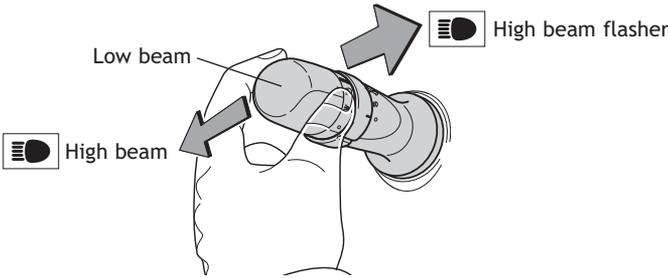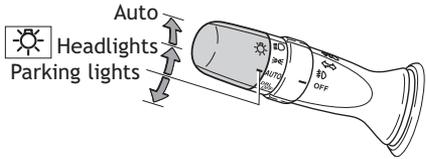


-**Daytime Running Light system (DRL)** Automatically turns on the front turn signal lights upon starting engine and releasing parking brake.


-**Automatic light cut off system** Automatically turns lights off after a delay of 30 seconds, or the lock switch on remote may be pushed after locking.

Front fog lights (if equipped)

Type A

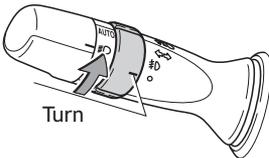


Type B

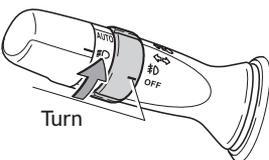

Front fog lights come on only when the headlights are on low beam.


Turn signals

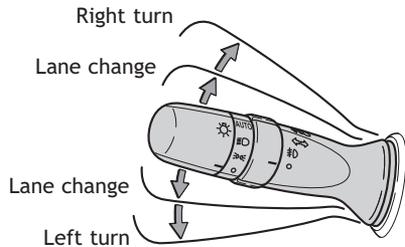



Windshield wipers & washers

Front

Type A

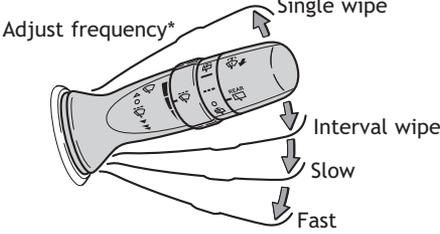


Type B

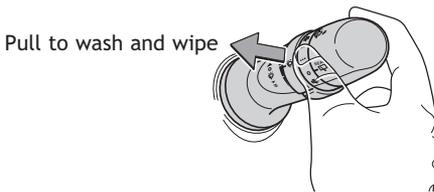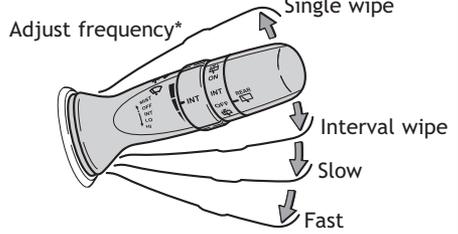


*** Intermittent windshield wiper frequency adjustment**
 Rotate to increase/decrease wipe frequency.

Rear



Type A

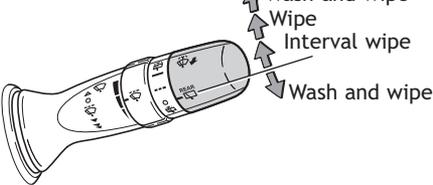

Type B

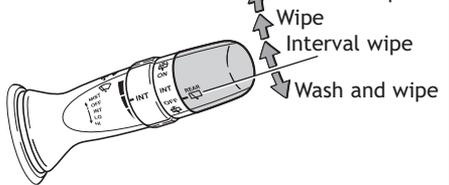

Windows

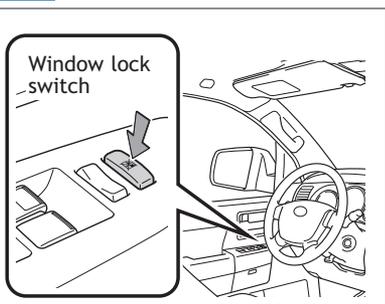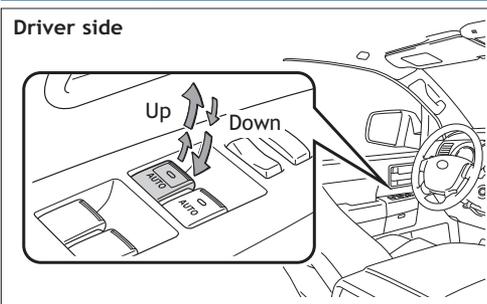


Automatic operation Push the switch completely down or pull it completely up and release to fully open or close. To stop window midway, lightly push the switch in the opposite direction.

Window lock switch Deactivates all passenger windows and back window. Driver's window remains operable.


Window-Back

Operating from inside

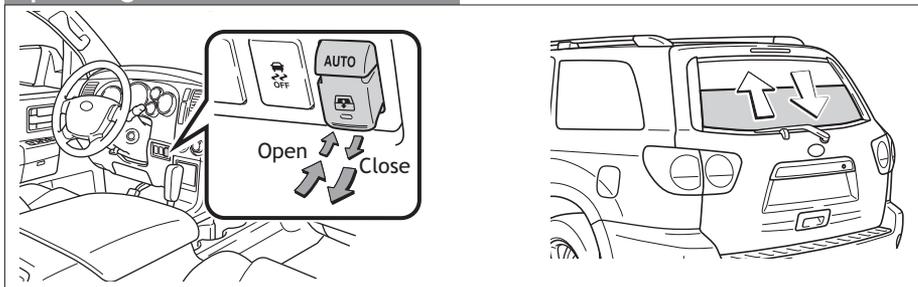


Automatic operation Push the switch completely in or pull it completely out and release to fully open or close. To stop window midway, lightly push the switch in the opposite direction.

Operating from outside

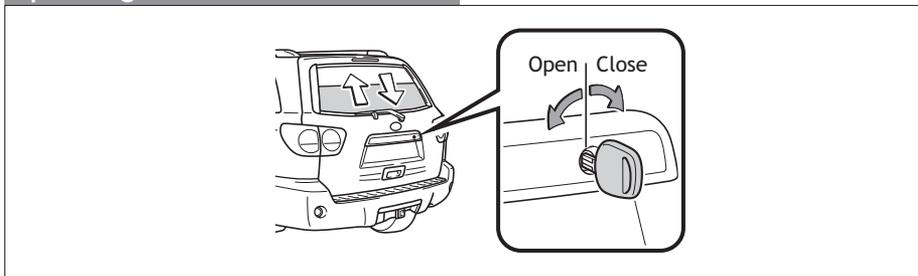


Door-Power back (if equipped)

Instrument panel

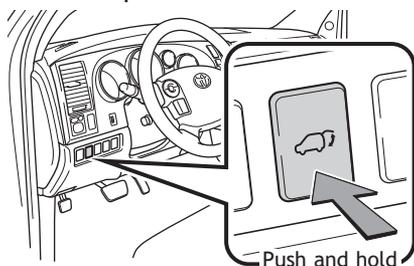



Open: Push and hold
Close: Push and hold again

Back door (close only)

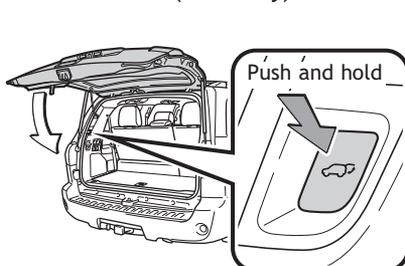


NOTE: If battery is disconnected, the power back door needs to be reinitialized. Refer to the *Owner's Manual* for more details.

Moonroof (if equipped)

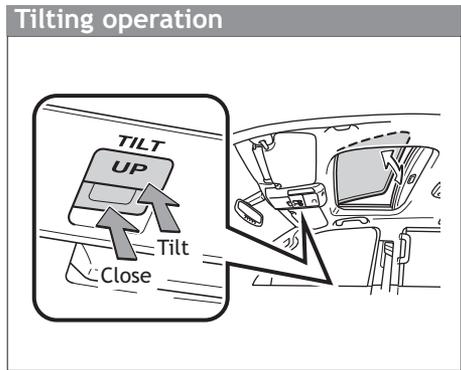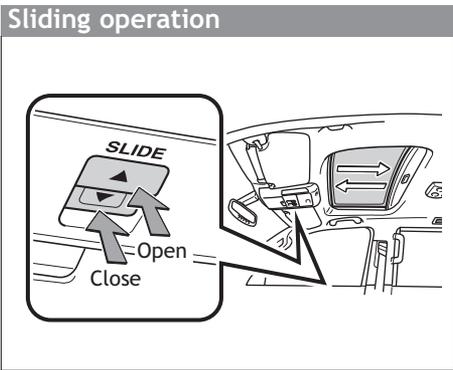

Push once to open/close completely. To stop partway, press the switch lightly.

Accessory meter

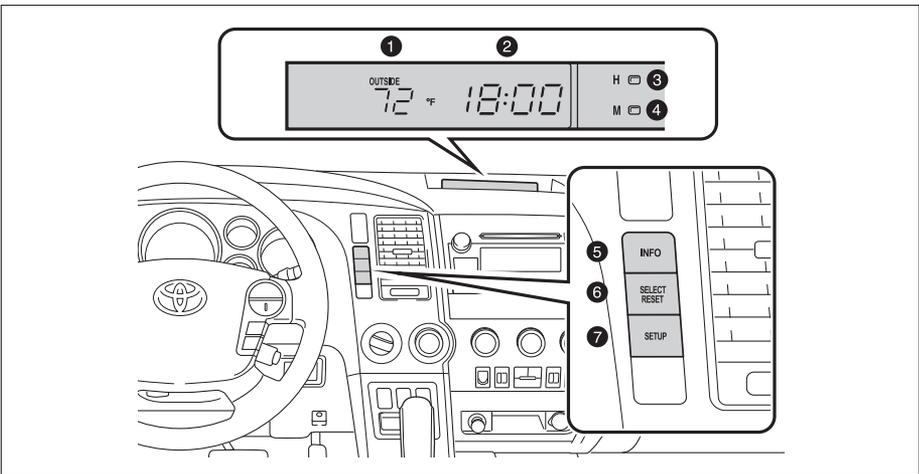


- ① Outside temperature/Cruise information display (if equipped)
- ② Clock
- ③ Hour set
- ④ Minute set
- ⑤ Change information (if equipped)
- ⑥ “SELECT RESET” button (if equipped)
- ⑦ “SETUP” button to customize unit (if equipped)

Refer to your *Owner’s Manual* for complete details on this system before attempting to use it.


Tilt and telescopic steering wheel

Manual

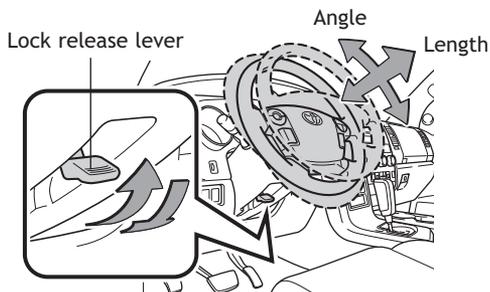

Hold wheel, push lever down, set angle and length and return lever.


Power

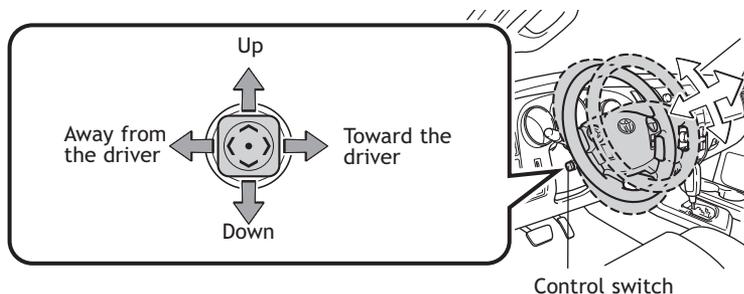

Toggle the control switch to set angle and length.

NOTE: Do not attempt to adjust while the vehicle is in motion.

VSC OFF button

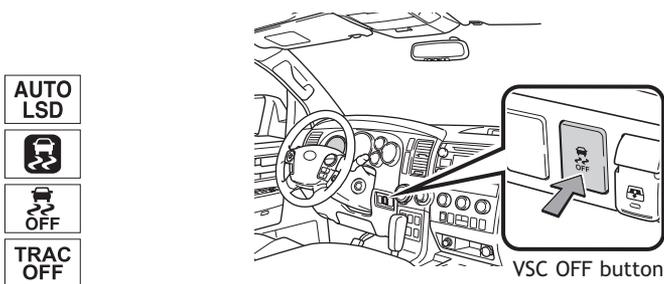


The VSC OFF button is used to switch between modes related to the TRAC, VSC and Auto LSD functions.

Refer to Section 2-4 of the *Owner's Manual* for more information.

Air Conditioning/Heating

Front Air Conditioning

Control panel

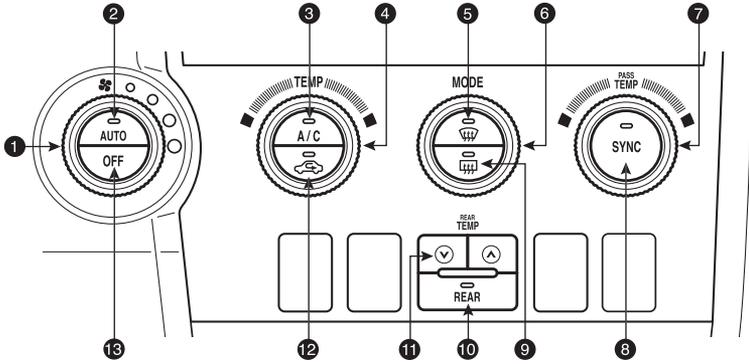


Display



- ① Fan speed
- ② Automatic climate control ON
Adjusting the temperature setting will cause the airflow vents, air intake and fan to adjust automatically.
- ③ Air Conditioning ON/OFF
- ④ Temperature selector (driver side)
- ⑤ Windshield defogger (fresh air only)
- ⑥ Airflow vent
In “” mode, use fresh air (“” indicator “OFF”) to reduce window fogging.
- ⑦ Temperature selector (front passenger side)
- ⑧ “SYNC” button
Indicator ON: Synchronize temperature settings for driver, front passenger and rear seats.
Indicator OFF: Separate temperature settings for driver, front passenger and rear seats.
- ⑨ Outside rearview mirror/Back window defogger or windshield wiper de-icer (if equipped)
- ⑩ Rear Air Conditioning ON/OFF
- ⑪ Temperature selector (rear passenger area*)
- ⑫ Recirculate cabin air (fresh air when OFF)
- ⑬ Climate control OFF

* To change the rear seat setting, press the “REAR” button.

Rear Air Conditioning

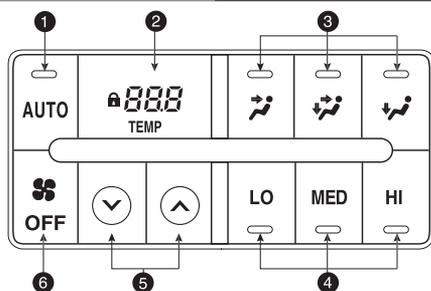


- ① Automatic climate control ON
- ② Display
- ③ Airflow vent
- ④ Fan speed
- ⑤ Temperature selector
- ⑥ Climate control OFF




Seat ventilators/heaters (if equipped)

Front seats


With ventilators

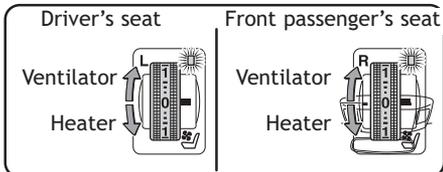

Heater only

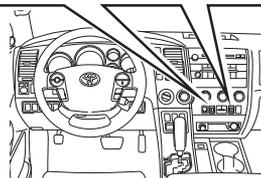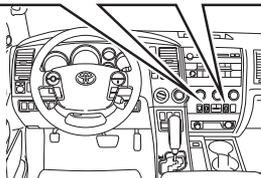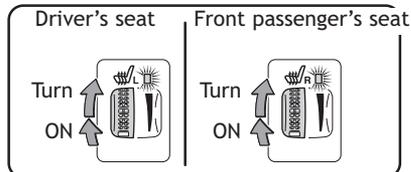


Second seats

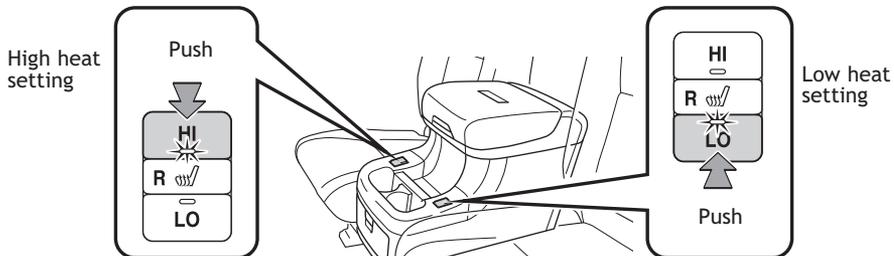


Push lightly in the opposite direction to turn off.

Audio


Type 1

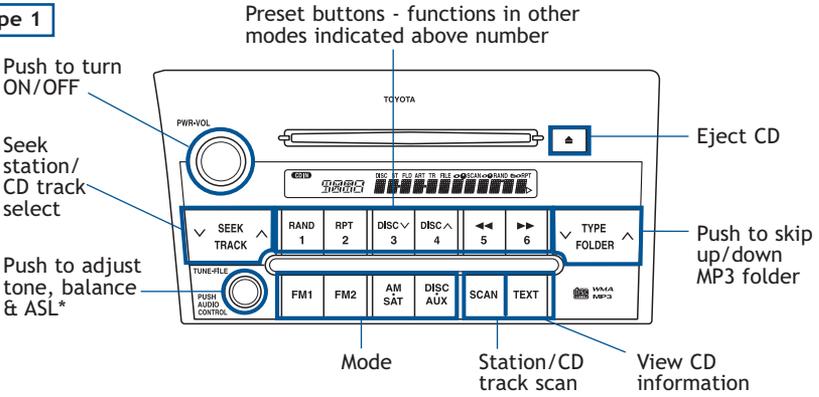

Type 2 additional functions

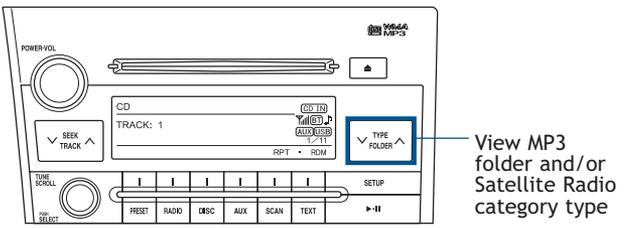

Type 3 (with JBL speakers)

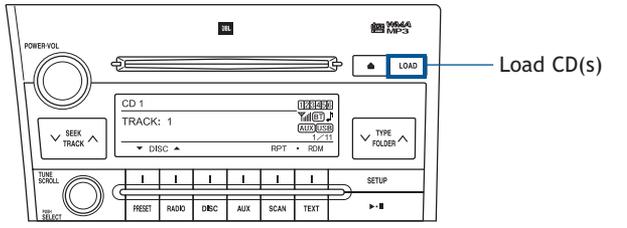

* Automatic Sound Leveling

CD player


- To scan tracks on a disc Push and hold "SCAN." Push again to hold selection.
- CD changer (Type 3 only)
- To load one disc Push "LOAD" and insert one disc.
- To load multiple discs Push and hold "LOAD" until you hear a beep. Insert one disc. Shutter will close and then re-open for next disc.
- To select a file (MP3/WMA only) Turn "TUNE-FILE" or "TUNE SCROLL."
- To select a folder (MP3/WMA only) Push either side of "FOLDER."

Radio

To preset stations Tune in the desired station and hold down a preset button (1-6 or one of ) until you hear a beep. Push desired preset button (1-6 or one of ) to select.

To scan stations Push and hold “SCAN” to scan preset stations. Push again to hold selection.

AUX port/USB port

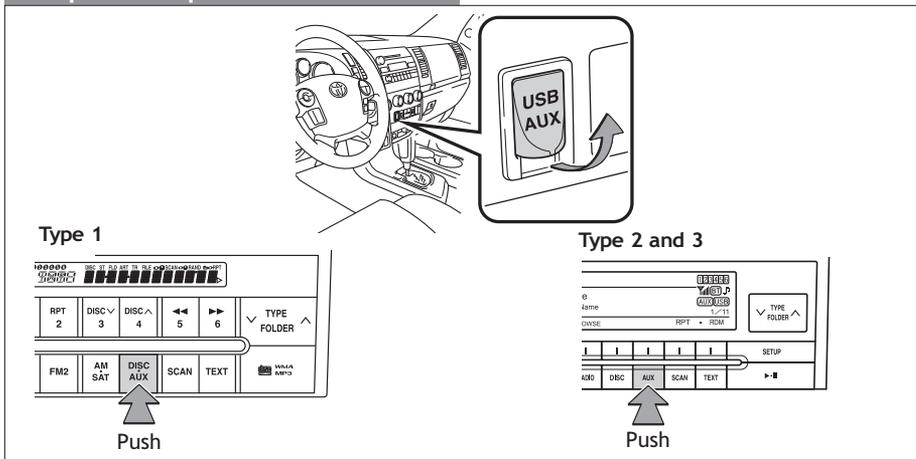


AUX port

By inserting a mini plug into the AUX port, you can listen to music from a portable audio device through the vehicle's speaker system while in AUX mode.

USB port

By connecting a USB-compatible portable audio device or USB memory to the USB port, you can listen to music from the portable audio device or USB memory through the vehicle's speaker system while in USB mode.

Steering wheel switches (if equipped)

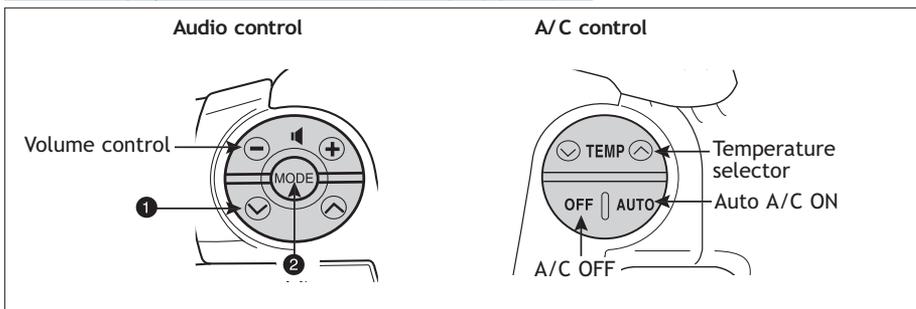


① “”

Use to search within the selected audio medium (radio, CD, iPod®, etc.).

② “MODE”

Push to turn audio ON and select an audio mode. Push and hold to turn the audio system OFF.

**Garage door opener (HomeLink®)*
(if equipped)**

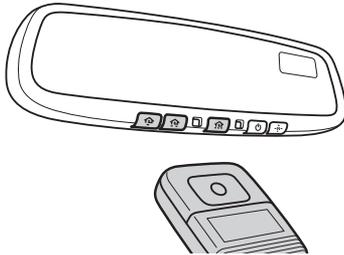

Garage door openers manufactured under license from HomeLink®* can be programmed to operate garage doors, estate gates, security lighting, etc.


Refer to “Garage door opener,” Section 3-8 in the *Owner’s Manual* for more details.

For programming assistance, contact HomeLink® at 1-800-355-3515, or visit <http://www.homelink.com>.


* HomeLink® is a registered trademark of Johnson Controls, Inc.

Cruise control

Turning system ON/OFF

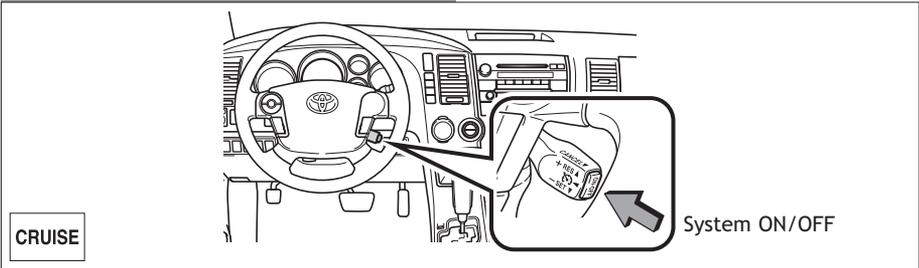

Functions

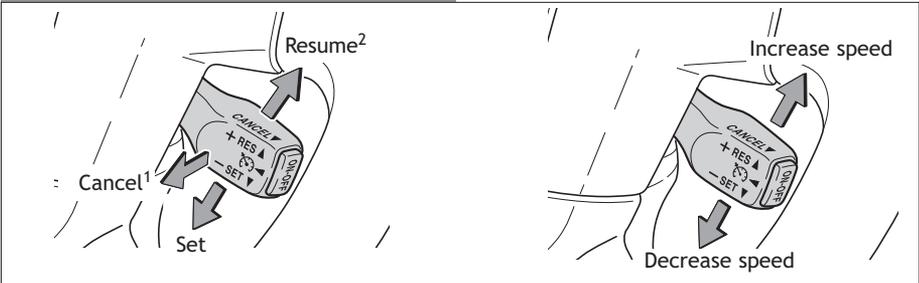


¹ The set speed may also be cancelled by depressing the brake pedal.

² The set speed may be resumed once vehicle speed exceeds 25 mph.

Dynamic Laser Cruise Control (if equipped)


Refer to the *Owner's Manual* for more details and complete safety precautions before attempting to use "Dynamic Laser Cruise Control."

Fixed speed mode

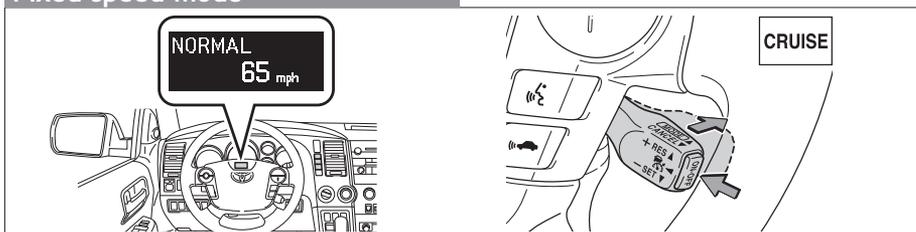

- (1) To select conventional/fixed speed control Push the ON-OFF button. Push the lever forward and hold.
- (2) To set, cancel and resume a speed Refer to instructions for *Cruise Control* in this guide.


Distance control mode

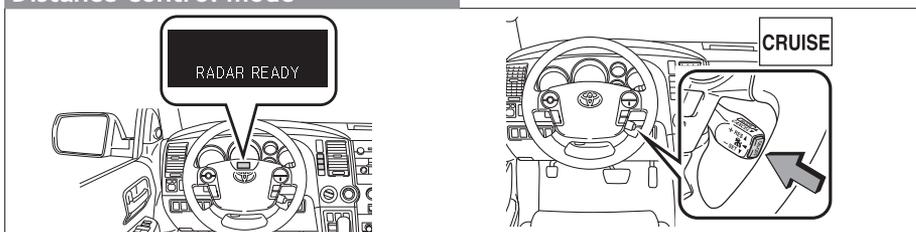

Distance control mode will cruise at a set speed, decelerate to maintain selected distance from a slower vehicle traveling in front of you, and accelerate back up to the selected speed if the vehicle traveling in front of you changes lanes or speeds up.


- (1) To select distance control mode Push the ON-OFF button. The "CRUISE" indicator will come on.
- (2) To set, cancel and resume a speed Refer to instructions for *Cruise Control* in this guide.

NOTE: Once vehicle speed is set, pushing lever up toward "+ RES" will increase speed to the nearest 5 mph, and then in 5 mph increments. Pushing lever down toward "- SET" will reduce speed in the same way.

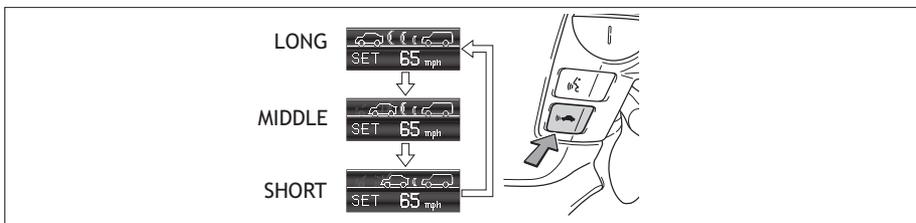

- (3) To change the vehicle-to-vehicle distance Push the distance button to cycle through the settings, which will change progressively from LONG to MIDDLE to SHORT.

Multi-information display (if equipped)

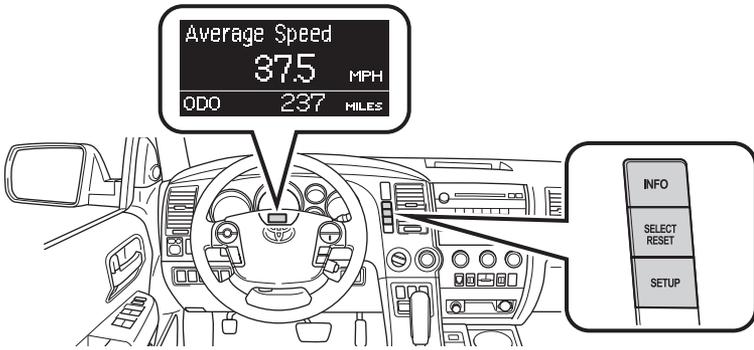


Push “INFO” to change information in the following:

- (1) Zoom display of odometer and trip meter
- (2) Average gas mileage
- (3) Current gas mileage
- (4) Miles left on remaining fuel
- (5) Running time from engine start
- (6) Average vehicle speed

Push “SETUP” to customize to the following settings:


- (1) UNIT
- (2) KEYLESS ENTRY FEEDBACK
- (3) KEYLESS ENTRY RELOCK TIMER
- (4) KEYLESS ENTRY ALL DOORS UNLOCK
- (5) DOOR AUTO LOCKING
- (6) DOOR AUTO UNLOCKING
- (7) HEADLAMPS AUTO OFF TIMER
- (8) COURTESY LAMPS OFF TIMER
- (9) LANGUAGE
- (10) DEFAULT SETTING

Door locks

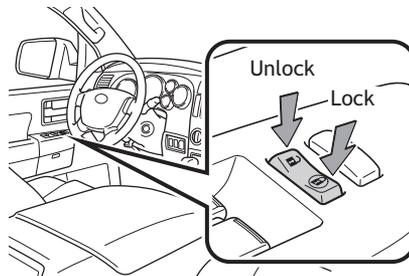


Telephone controls (Bluetooth®) (if equipped)

Audio unit

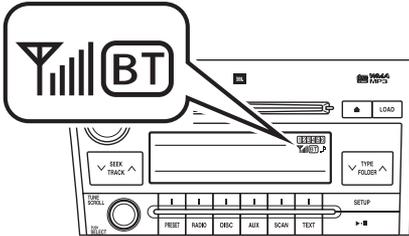


Microphone

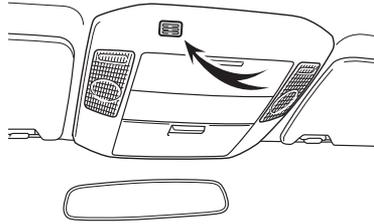


Steering wheel telephone switches

Type A

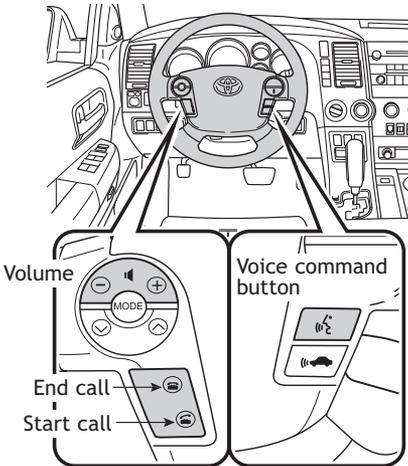

Type B

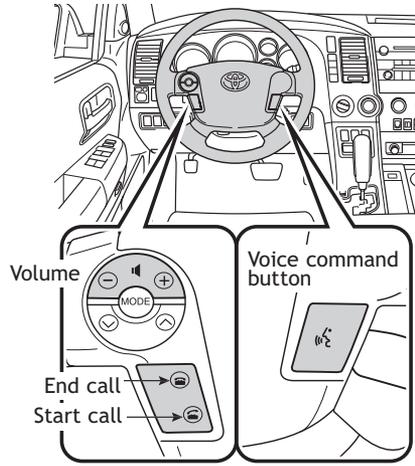


Bluetooth® technology allows dialing or receipt of calls without taking hands from the steering wheel or using a cable to connect the compatible telephone and the system.


Refer to “Using the hands-free phone system (for cellular phone),” Section 3-5 in the *Owner’s Manual*, for more details.

Power outlets-12V DC (if equipped)


Instrument panel

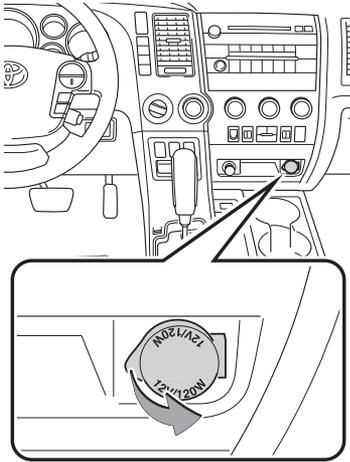


Inside of the center console box

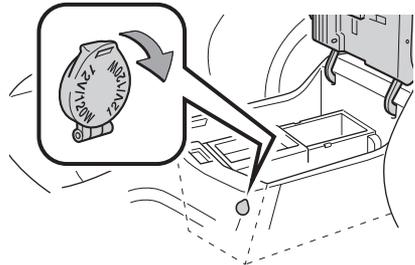

Back of the center console box

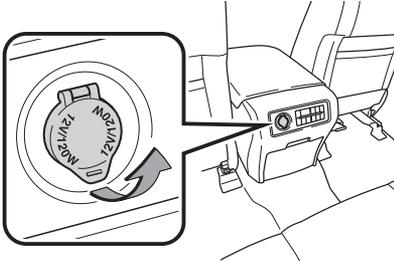


Luggage compartment

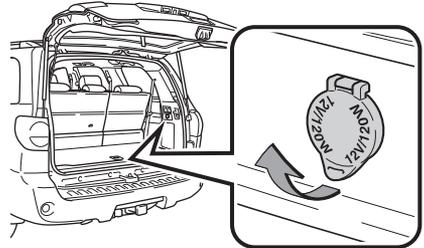


Key must be in the “ACC” or “ON” position to be used.

Power outlets-120V AC (if equipped)

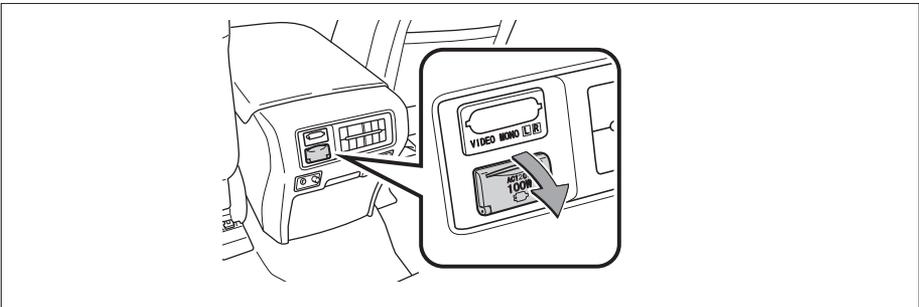

Key must be in the “ON” position to be used.

Rear seat entertainment system (if equipped)

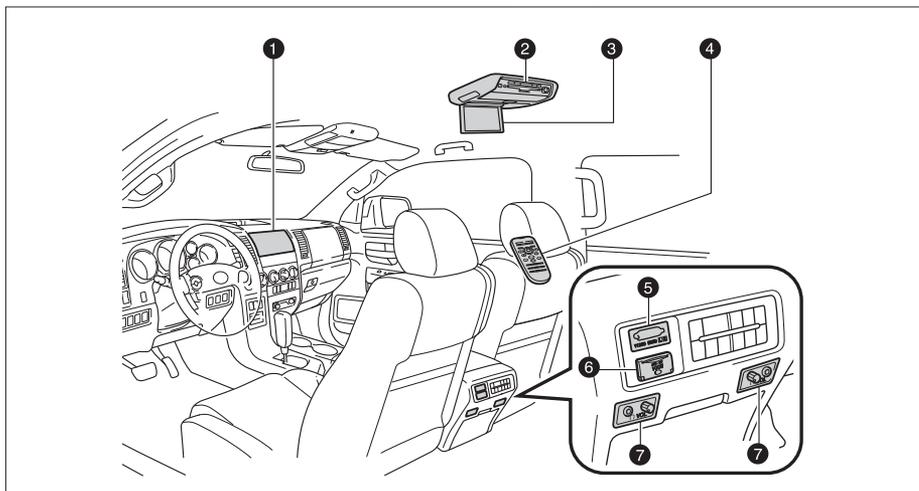


- ❶ Front audio system
- ❷ DVD player
- ❸ DVD screen
- ❹ Remote control
- ❺ A/V input port
- ❻ 120V AC Power outlet
- ❼ Headphone volume controls and headphone jacks

Vehicles with navigation system: for details, refer to the “Navigation System Owner’s Manual.”


Cup holders

Front

Front console

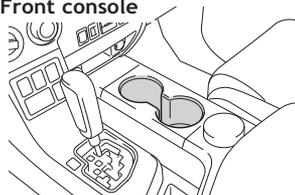


Back of the front console

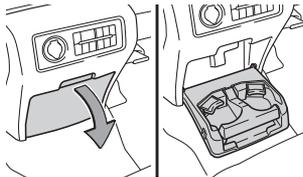


Rear

Rear side trim

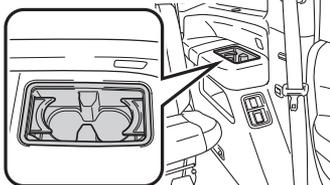


Rear console box (if equipped)

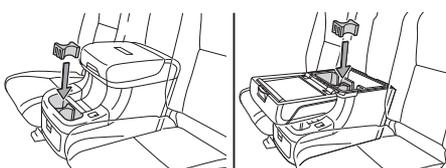

SAFETY AND EMERGENCY FEATURES

Tire Pressure Monitoring (warning) System

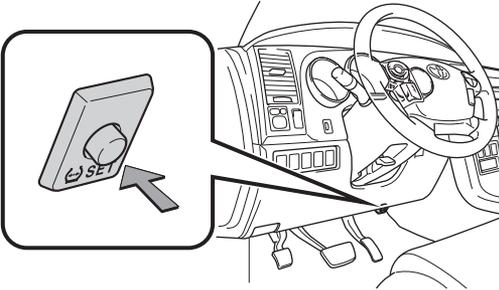

System reset initialization

1. Push and hold “ SET” button until the indicator blinks three times.
2. Wait a few minutes to allow initialization to complete.




After adjusting tire pressures, or after tires have been rotated or replaced, turn the ignition switch to “ON” and press and hold the “ SET” button until indicator blinks three times. Let the vehicle sit for a few minutes to allow initialization to complete.

Refer to the load label on the door jamb or the *Owner's Manual* for tire inflation specifications.

If the tire pressure indicator flashes for more than 60 seconds and then remains on, take the vehicle to your local Toyota dealer.

NOTE: The warning light may come on due to temperature changes or changes in tire pressure from natural air leakage. If the system has not been initialized recently, setting the tire pressures to factory specifications should turn off the light.

Seat belts

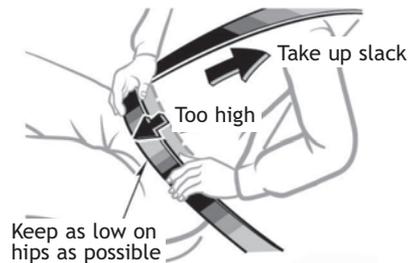


If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.


Seat belts-Shoulder belt anchor

Squeeze lock release to lower Push up

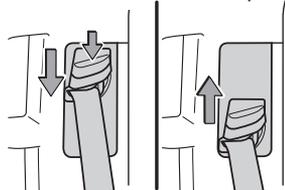

Doors-Child safety locks



Rear door

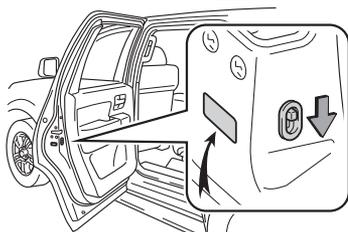


Moving the lever to “LOCK” will allow the door to be opened only from the outside.

Spare tire & tools

Spare tire, jack and tool location

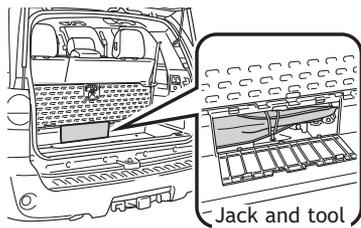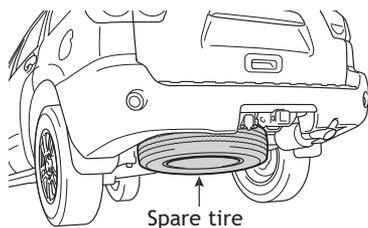

Removing the spare tire

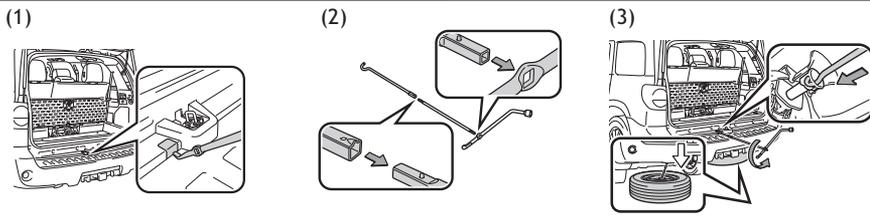

- (1) Remove the cover.
- (2) Assemble the jack handle.
- (3) Insert the jack handle extension into the lowering screw. Lower the spare tire completely to the ground.

Refer to the *Owner's Manual* for tire changing and jack positioning procedures.

SAFETY AND EMERGENCY FEATURES

Star Safety System™

All new Toyota vehicles come standard with the Star Safety System™, which combines Vehicle Stability Control (VSC), Traction Control (TRAC), Anti-lock Braking System (ABS), Electronic Brake-force Distribution (EBD), Brake Assist (BA) and Smart Stop Technology (SST).

Vehicle Stability Control (VSC)

VSC helps prevent loss of traction during cornering by reducing engine power and applying brake force to selected wheels.

Toyota's VSC monitors steering angle and the direction your vehicle is traveling. When it senses that the front or rear wheels begin to lose traction, VSC reduces engine power and applies braking to selected wheels. This helps restore traction and vehicle control.

Traction Control (TRAC)

VSC helps prevent loss of traction during cornering by reducing engine power, and Traction Control helps maintain traction on loose gravel and wet, icy, or uneven surfaces by applying brake force to the spinning wheel(s).

Toyota's TRAC sensors are activated when one of the drive wheels starts to slip. TRAC limits engine output and applies the brakes to the spinning wheel. This transfers power to the wheels that still have traction to help you drive safely.

Anti-Lock Brake System (ABS)

ABS helps prevent brakes from locking up by "pulsing" brake pressure to each wheel. This limits brake lockup and provides the maximum brake effectiveness for the current road conditions.

Toyota's ABS sensors detect which wheels are locking up and limits wheel lockup by "pulsing" each wheel's brakes independently. Pulsing releases brake pressure repeatedly for fractions of a second. This helps the tires attain the maximum traction that the current road conditions will allow, helping you stay in control.

Electronic Brake Force Distribution (EBD)

Toyota's ABS technology has Electronic Brake-force Distribution (EBD) to help maintain stability and balance when braking. Abrupt stops cause the vehicle to tilt forward, reducing the braking power of the rear wheels. EBD responds to sudden stops by redistributing brake force to maximize the braking effectiveness of all four wheels.

Brake Assist (BA)

Brake Assist is designed to detect sudden or "panic" braking, and then add braking pressure to decrease the vehicle's stopping distance. When there's only a split second to react, Brake Assist can add additional brake pressure more quickly than just the driver alone can.

Smart Stop Technology (SST)

Smart Stop Technology automatically reduces engine power when the accelerator and brake pedals are pressed simultaneously under certain conditions.

SST engages when the accelerator is depressed first and the brakes are applied firmly for longer than one-half second at speeds greater than five miles per hour.


SST doesn't engage if the brake pedal is depressed before the accelerator pedal, allowing vehicles to start on a steep hill and safely accelerate without rolling backward.

Floor mat installation

There are two types of Toyota floor mats: carpeted and all-weather. Each vehicle has model-specific floor mats. Installation is easy.

For safety, follow these steps:

- Only use floor mats designed for your specific model.
- Use only one floor mat at a time, using the retaining hooks to keep the mat in place.
- Install floor mats right side up.

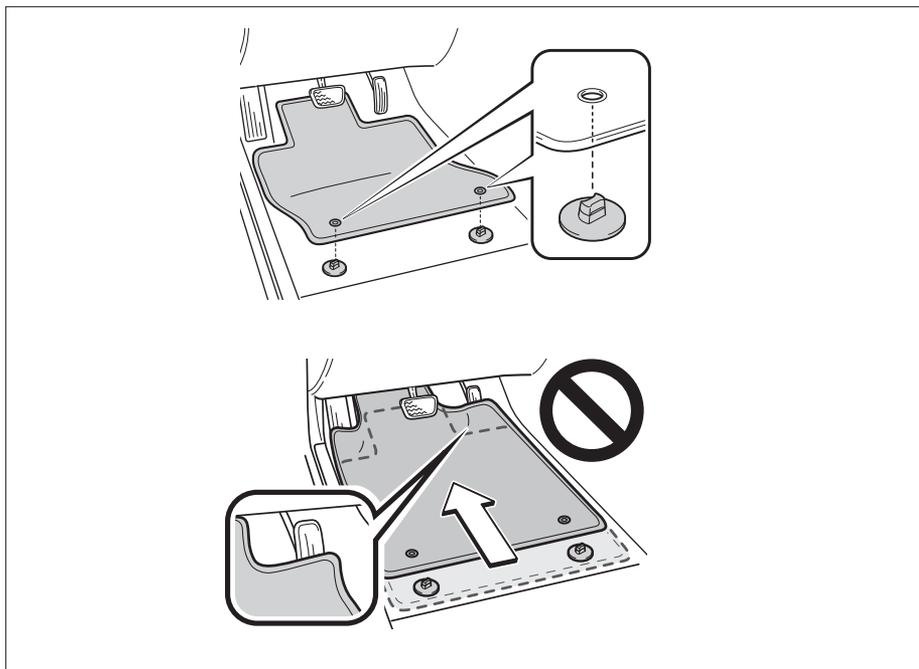

NOTES



TOYOTA Owners

toyota.com/owners

CUSTOMER EXPERIENCE CENTER

1-800-331-4331

