

# SIENNA

2 0 1 2



QUICK REFERENCE GUIDE

# 2012 Sienna

This *Quick Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Quick Reference Guide* is not intended as a substitute for the *Owner's Manual* located in the vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of the vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Sienna.

## **! A word about safe vehicle operations**

This *Quick Reference Guide* is not a full description of Sienna operations. Every Sienna owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Quick Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

# INDEX

<b>OVERVIEW</b>	Engine maintenance	9
	Fuel tank door release and cap	8
	Hood release	8
	Indicator symbols	4-5
	Instrument cluster	4
	Instrument panel	2-3
	<b>Keyless entry<sup>1</sup></b>	<b>6</b>
Light control-Instrument panel	9	
<b>Smart Key system<sup>1,2</sup></b>	<b>7</b>	
<b>FEATURES/OPERATIONS</b>	Air Conditioning/Heating	24-26
	Audio	22-23
	<b>Auto lock/unlock<sup>2</sup></b>	<b>10</b>
	Automatic Transmission	10
	Bottle holders	31
	Clock	19
	Cruise control	20
	Cup holders	31
	Door-Power back	18
	Doors-Sliding	17
	Dynamic radar cruise control	20-21
	Enhanced VSC OFF button	28
	<b>Garage door opener (HomeLink®)<sup>2,3</sup></b>	<b>29</b>
	Hill-start Assist Control (HAC)	29
	<b>Lights<sup>1</sup> &amp; turn signals</b>	<b>11-12</b>
	Moonroof	19
	Parking brake	10
	Power outlets-12V DC	30
	Power outlets-120V AC	30
	Rear seat entertainment system	28
	Seat adjustments-Front	14
	Seat adjustments-Rear	14
	Seat heaters	26
	Seats-Head restraints	13
	Seats-Removing second row center seat	15
	Seats-Removing second row outside seats	15
	Seats-Stowing third row seats	16
	Sunshade-Side	19
	Telephone controls (Bluetooth®)	27
	Tilt and telescopic steering wheel	11
	Windows	18
Windows-Power quarter	18	
Windshield wipers & washers	13	
<b>SAFETY AND EMERGENCY FEATURES</b>	Door locks	32
	Doors-Child safety locks	32
	Floor mat installation	35
	Seat belts	32
	Seat belts-Shoulder belt anchor	32
	Spare tire & tools	33
	Star Safety System™	34-35
Tire Pressure Monitoring (warning) System	33	

<sup>1</sup> Visit your Toyota dealer for information on customizing this feature.


<sup>2</sup> Programmable by customer. Refer to the Owner's Manual for instructions and more information.

<sup>3</sup> HomeLink® is a registered trademark of Johnson Controls, Inc.




# OVERVIEW

## Instrument panel


### Steering wheel controls

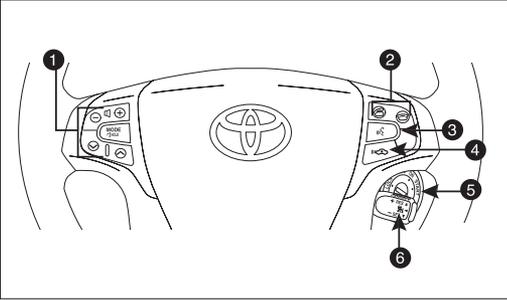

### Automatic Air Conditioning system

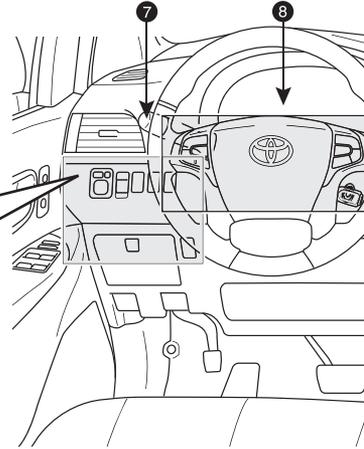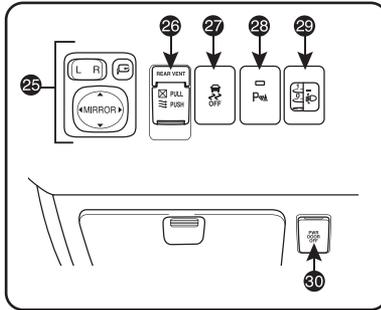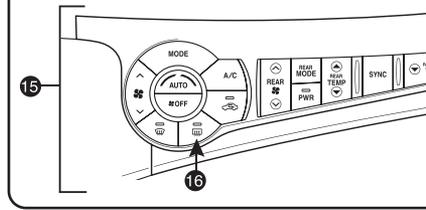

- ① Steering wheel audio controls<sup>1</sup>
- ② Telephone controls<sup>1,2</sup>
- ③ Voice command button<sup>1,2</sup>
- ④ Distance switch<sup>1</sup>
- ⑤ Ignition switch (standard key)<sup>1</sup>
- ⑥ Cruise control<sup>1</sup>
- ⑦ Headlight, turn signal and front fog light<sup>1</sup> controls
- ⑧ Gauges and meters
- ⑨ Wiper and washer controls
- ⑩ Emergency flasher button
- ⑪ Multi-information display<sup>1</sup>
- ⑫ Clock<sup>1</sup>
- ⑬ Audio system/Navigation system<sup>1,2</sup>
- ⑭ “ENGINE START STOP” switch (Smart Key)<sup>1</sup>
- ⑮ Air Conditioning controls
- ⑯ Outside rearview mirrors<sup>1</sup>/Rear window defogger button/Windshield wiper de-icer<sup>1</sup>
- ⑰ Auxiliary box<sup>1</sup>

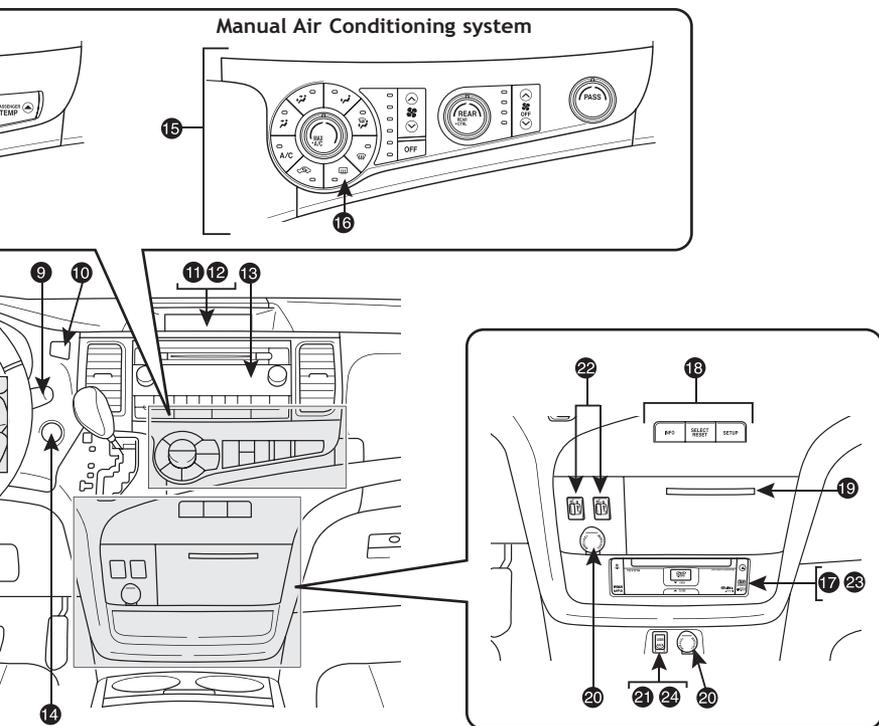


- 18 Multi-information display switches<sup>1</sup>
- 19 Cup holder
- 20 Power outlets (12V)
- 21 AUX port
- 22 Seat heater switches<sup>1</sup>
- 23 DVD player<sup>1</sup>
- 24 USB port<sup>1</sup>
- 25 Power rearview mirror controls
- 26 Power quarter window switch<sup>1</sup>
- 27 Enhanced VSC/TRAC OFF switch
- 28 Intuitive parking assist switch<sup>1</sup>
- 29 Headlight beam level control dial<sup>1</sup>
- 30 Power sliding door/power back door main switch<sup>1</sup>

<sup>1</sup> If equipped

<sup>2</sup> For vehicles with navigation system, refer to the “Navigation System Owner’s Manual.”

**Instrument cluster**

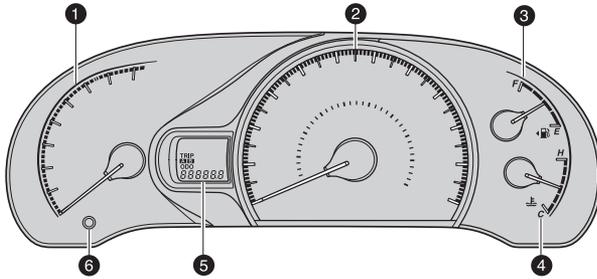

- ❶ Tachometer
- ❷ Speedometer
- ❸ Fuel gauge
- ❹ Engine coolant temperature
- ❺ Odometer and two trip meters display
- ❻ Odometer/trip meter display change button

**Indicator symbols**

For details, refer to “Indicators and warning lights,” Section 2-2, 2012 Owner’s Manual.

	Brake system warning <sup>1,2</sup>
	Driver seat belt reminder <sup>2</sup> (alarm will sound if speed is over 12 mph)
	Front passenger seat belt reminder <sup>2</sup> (alarm will sound if speed is over 12 mph)
	Charging system warning <sup>1,2</sup>
	Malfunction/Check Engine indicator <sup>1,2</sup>
	Low engine oil pressure warning <sup>1,2</sup>
	Open door warning <sup>2</sup>
	Airbag SRS warning <sup>1,2</sup>
	SRS AIR BAG ON-OFF indicator
	Vehicle Stability Control OFF indicator <sup>1,6</sup>

<sup>1</sup> If indicator does not turn off within a few seconds of starting engine, there may be a malfunction. Have vehicle inspected by your Toyota dealer.

<sup>2</sup> For details, refer to “If a warning light turns on or a warning buzzer sounds...,” Section 5-2, 2012 Owner’s Manual.

<sup>3</sup> If this light flashes, refer to “Cruise control,” Section 2-4, 2012 Owner’s Manual.

	Low Tire Pressure Warning <sup>1,2</sup>
	Low windshield washer fluid level warning <sup>1,2</sup>
<b>MAINT REQD</b>	Engine oil replacement reminder <sup>1,2</sup>
<b>3RD SEAT</b>	Third seat fold incomplete warning <sup>2</sup>
<b>ABS</b>	Anti-lock Brake System warning <sup>1,2</sup>
	Electric power steering system warning light <sup>1,2</sup>
	Master warning light <sup>1,2</sup>
	Low fuel level warning light <sup>2</sup>
<b>AWD</b>	Active Torque Control 4WD system warning light <sup>1,2</sup>
	Headlight low/high beam indicator
	Automatic high beam indicator <sup>5</sup>
	Fog light indicator
	Turn signal indicator
	Shift position indicators
	Slip indicator/Hill-start Assist Control indicator <sup>1,6</sup>
<b>TRAC OFF</b>	Traction Control OFF indicator <sup>1</sup>
	Cruise control indicator <sup>3,5</sup>
<b>SET</b>	Cruise control SET indicator
	Radar cruise control indicator <sup>4,5</sup>
<b>READY</b>	Radar cruise READY indicator
<b>PCS</b>	Pre-Collision System indicator <sup>1,7</sup>
<b>ECO</b>	ECO driving indicator light <sup>1</sup>
	Security indicator

<sup>4</sup> If this light flashes, refer to “Dynamic radar cruise control,” Section 2-4, 2012 Owner’s Manual.

<sup>5</sup> The indicator flashes to indicate a malfunction.

<sup>6</sup> The indicator flashes to indicate that the system is operating.

<sup>7</sup> The indicator flashes faster than usual to indicate that the system is operating.

# Keyless entry

## Locking operation




<b>Type A</b> 	<b>Type B</b> 	<b>Type C</b> 	Push 
--	--	--	---

## Unlocking operation


<b>Type A</b> 	<b>Type B</b> 	<b>Type C</b> 	Push ONCE: Driver door  TWICE: ALL doors
--	--	--	---

**NOTE:** If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.

## Power sliding door operation (if equipped)

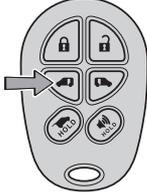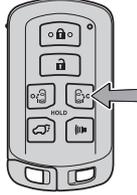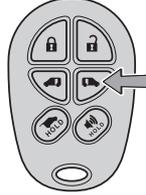Left side power sliding door		Right side power sliding door	
<b>Type A</b> 	<b>Type B</b> 	<b>Type A</b> 	<b>Type B</b> 
Push and hold  		Push and hold  	

## Power back door operation (if equipped)

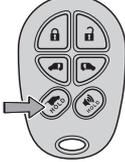
<b>Type A</b> 	<b>Type B</b> 
Push and hold  	

## Panic button


Push and hold  

## Smart Key system (if equipped)

### Start function

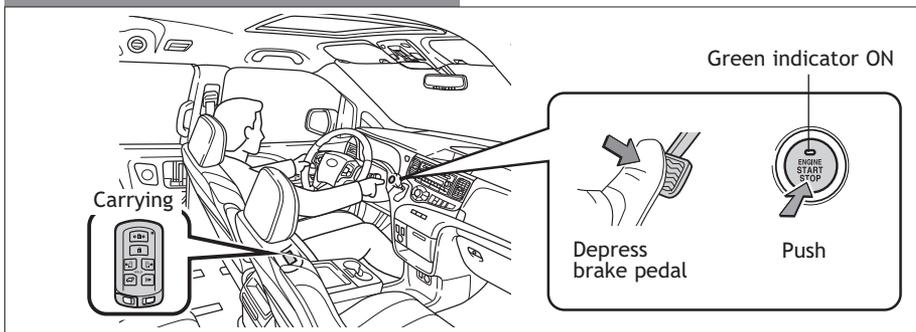


**NOTE:** Gear shift lever must be in Park and brake pedal depressed.

### Power (without starting engine)


Without depressing the brake pedal, pressing the “ENGINE START STOP” switch will change the operation mode in succession from:

<b>ACCESSORY</b>	Accessories such as the radio will operate.
<b>ON</b>	Power ON; the engine not running.
<b>OFF</b>	All systems OFF.


### Locking operation

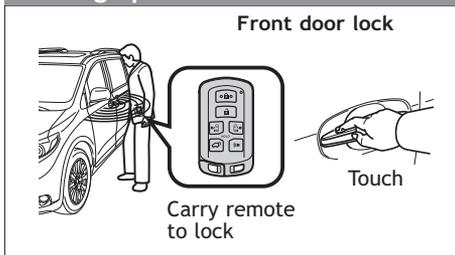

### Unlocking operation

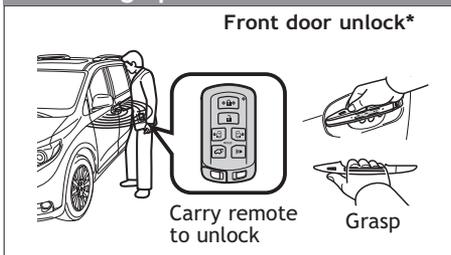


### Back door lock/unlock

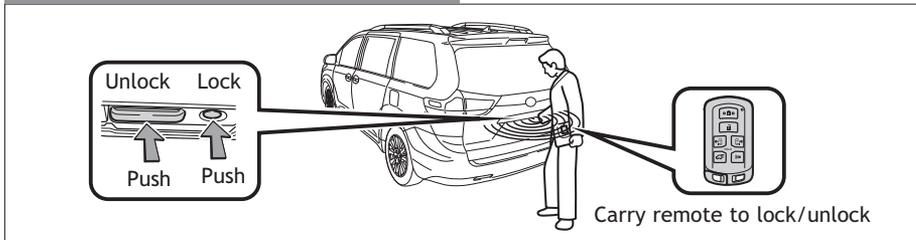

\* Driver door unlocking function can be programmed to unlock driver side doors only, or all doors. Grasping any passenger door handle will unlock all doors.

**NOTE:** Doors may also be locked/unlocked using remote.


### Fuel tank door release and cap

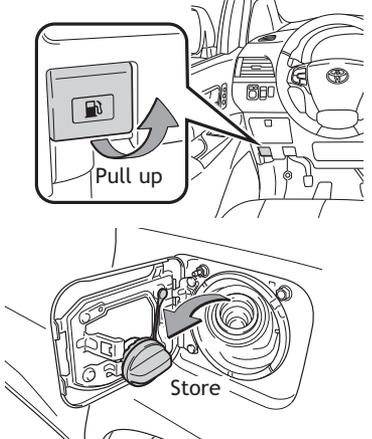

The diagram illustrates the process of opening and closing the fuel tank door. It shows a callout from the driver's side door panel labeled "Pull up" pointing to the fuel tank door. A second callout shows the door being opened, labeled "Turn to open". A third callout shows the door being closed, labeled "Store".


**NOTE:** Tighten until one click is heard. If the cap is not tightened enough, Check Engine "CHECK" indicator may illuminate.

### Hood release

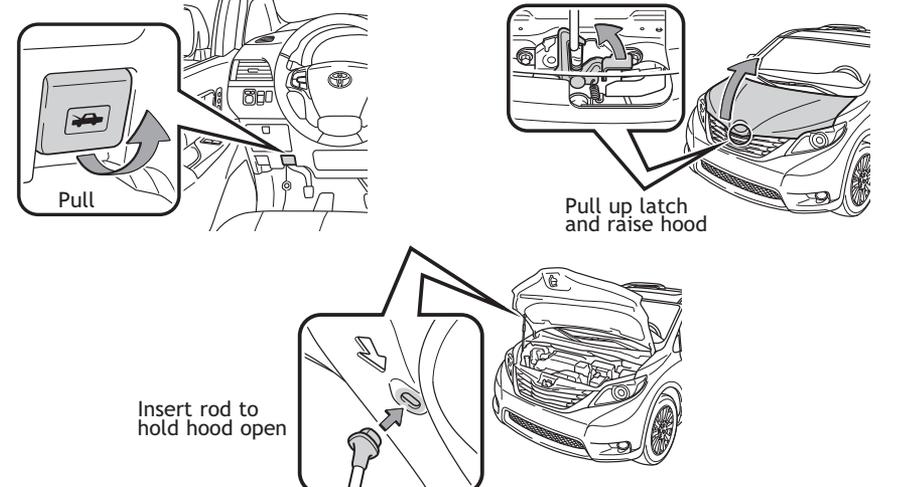

The diagram illustrates the steps to open the hood. It shows a callout from the driver's side door panel labeled "Pull" pointing to the hood release lever. A second callout shows the hood being raised, labeled "Pull up latch and raise hood". A third callout shows a rod being inserted into the hood latch mechanism, labeled "Insert rod to hold hood open".


### Light control-Instrument panel

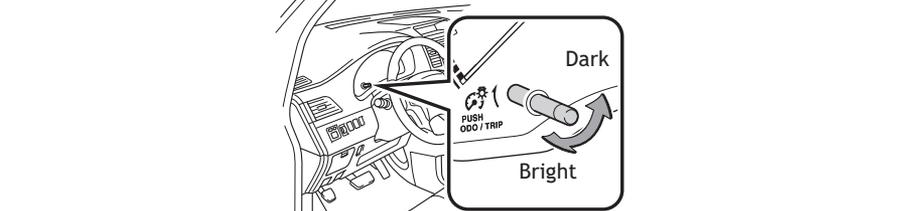


The diagram illustrates the operation of the light control lever. It shows a callout from the instrument panel labeled "Dark" and "Bright" pointing to the lever. The lever has a "PUSH ODO / TRIP" button and a sliding switch.

## Engine maintenance

### 2.7 L4-cylinder (1AR-FE) engine

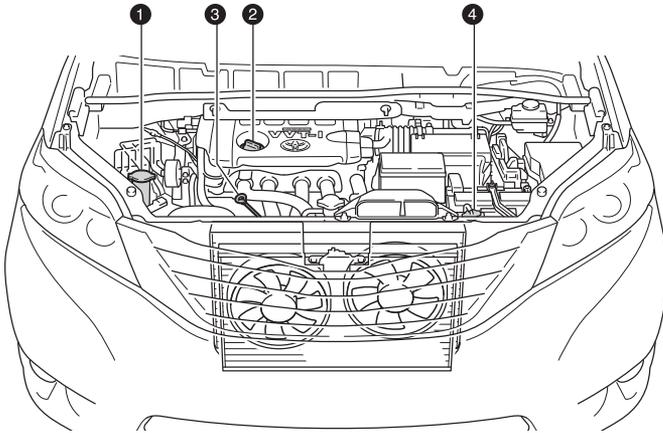

### 3.5L V6 (2GR-FE) engine

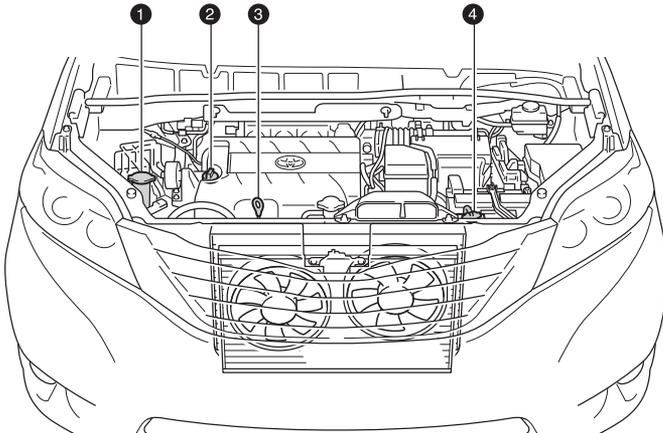

- ❶ Windshield and rear window washer fluid tank
- ❷ Engine oil filler cap
- ❸ Engine oil level dipstick
- ❹ Engine coolant reservoir

**NOTE:** Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the “Warranty Maintenance Guide.”

# FEATURES/OPERATIONS


## Auto lock/unlock

Automatic door locks can be programmed to operate in four different modes, or turned OFF.

- Doors lock when shifting from Park.
- Doors lock when the vehicle speed goes above approximately 12 mph.
- Doors unlock when shifting into Park.
- Doors unlock when the driver's door is opened within 10 seconds after turning the "ENGINE START STOP" switch or ignition switch OFF.

Refer to the *Owner's Manual* for more details.

## Automatic Transmission

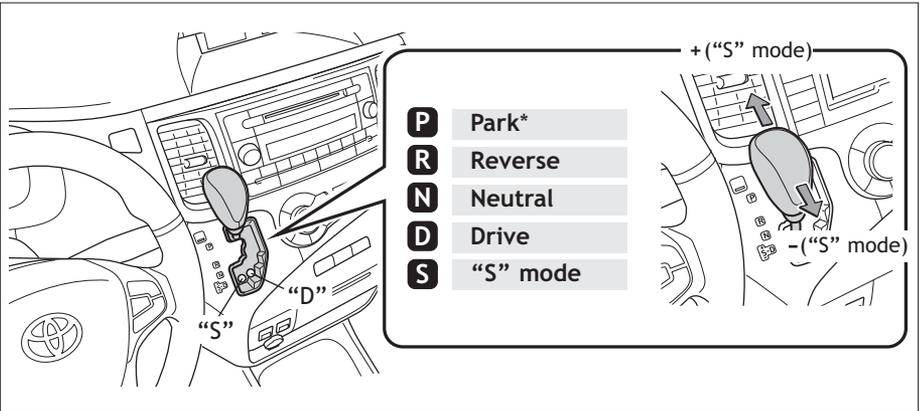

\* The "ENGINE START STOP" switch/ignition switch must be "ON" and the brake pedal depressed to shift from Park.


### "S" (Sequential) mode

Shift the shift lever to "S" position from "D" position.


- + : Upshift (push and release)
- : Downshift (pull and release)

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.

## Parking brake

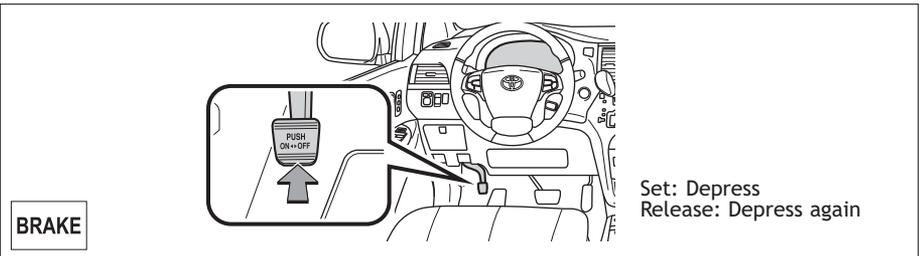

## Tilt and telescopic steering wheel

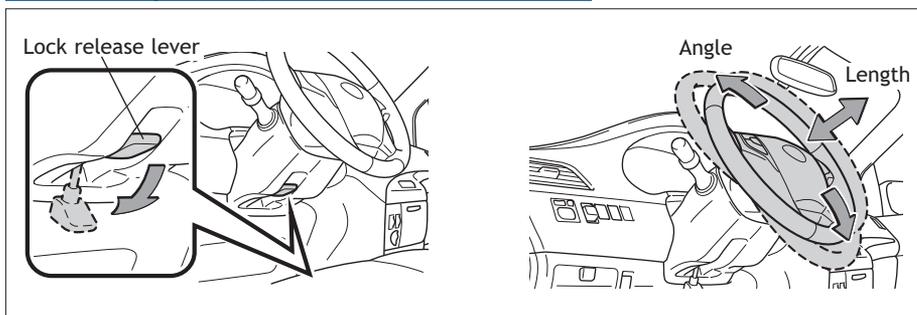


Hold wheel, push lever down, set angle and length, and return lever.

**NOTE: Do not attempt to adjust while the vehicle is in motion.**


## Lights & turn signals

### Headlights


#### Type A

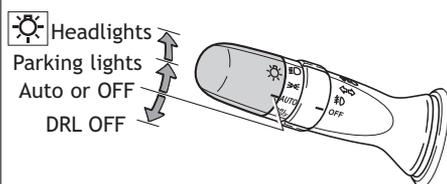

#### Type B

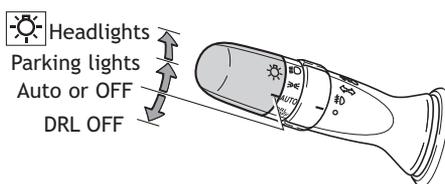

### Without automatic high beam

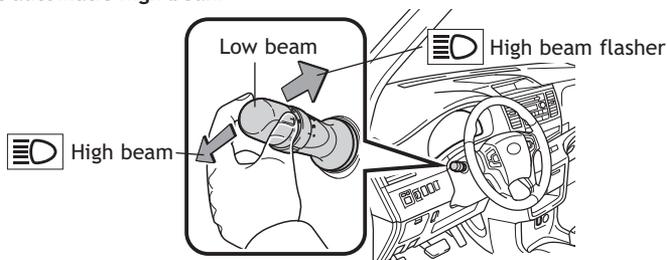


-Daytime Running Light system (DRL) Automatically turns on the headlights at a reduced intensity.

-Automatic light cut off system Automatically turns lights off after a delay of 30 seconds, or the lock switch on remote may be pushed after locking.


# FEATURES/OPERATIONS

## Automatic high beam (if equipped)

Activate\*

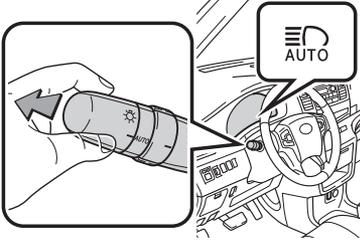


Deactivate

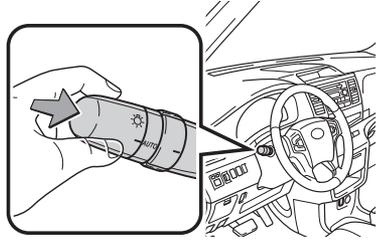

\* Refer to the *Owner's Manual* for details on activating the automatic high beams.

## Front fog lights (if equipped)


Type A

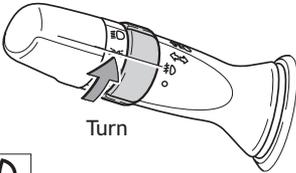

Turn




Type B

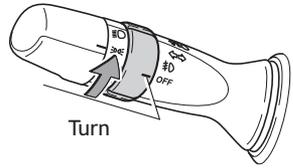



Turn

Front fog lights come on only when the headlights are on low beam.

## Turn signals

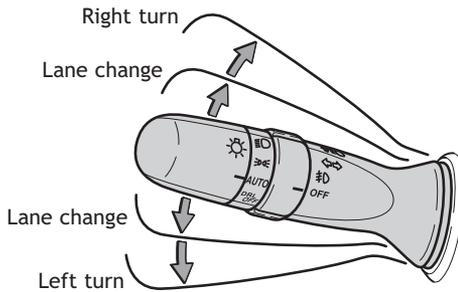

## Headlight beam level control (if equipped)

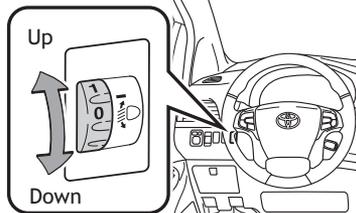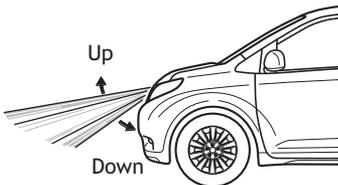


Rotating the dial downward will lower the angle of the beam.

# Windshield wipers & washers

## Front


### Type A

Adjust frequency\*

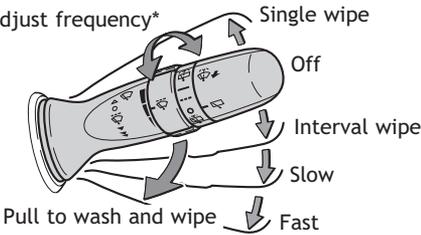

### Type B

Adjust frequency\*

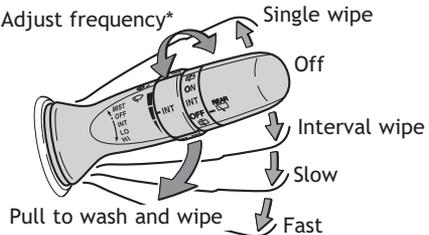


\* Intermittent windshield wiper frequency adjustment

Rotate to increase/decrease wipe frequency.


### Type A

Adjust sensor sensitivity\*

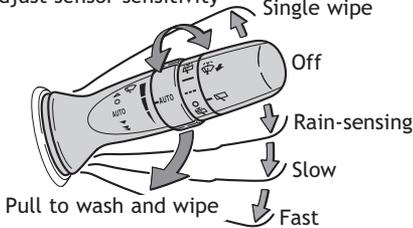

### Type B


Adjust sensor sensitivity\*

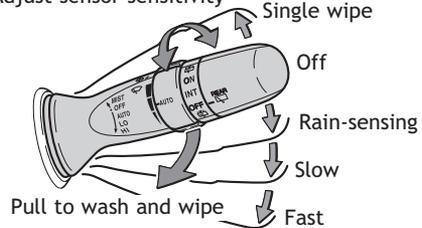


\* Rain-sensing windshield wiper Rotate to increase/decrease sensor sensitivity.

## Rear

### Type A

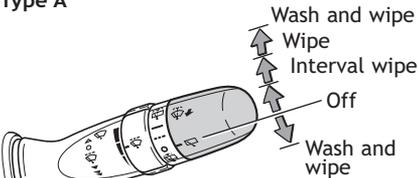

### Type B

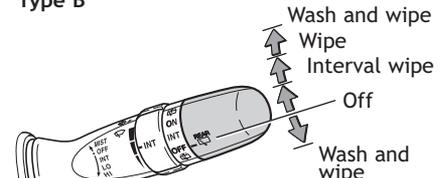


# Seats-Head restraints


Front and second row outside seats





Second row center (8-passenger models) and third row center seats

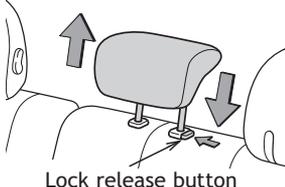

Third row outside seats

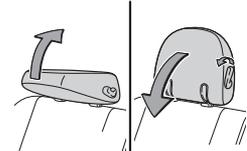



**Seat adjustments-Front**

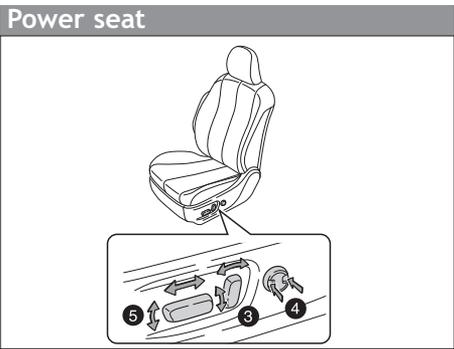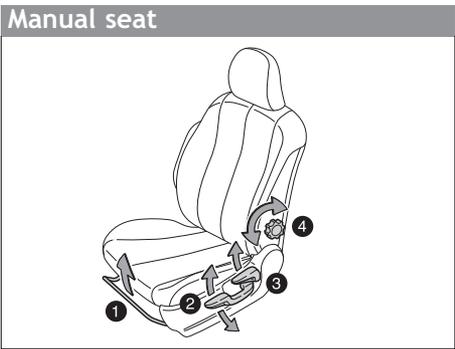



- 1 Seat position (forward/backward)
- 2 Height crank (driver side only)
- 3 Seatback angle
- 4 Lumbar support (driver side only)
- 5 Seat position, cushion angle and height

**Seat adjustments-Rear**

**Second row seat**

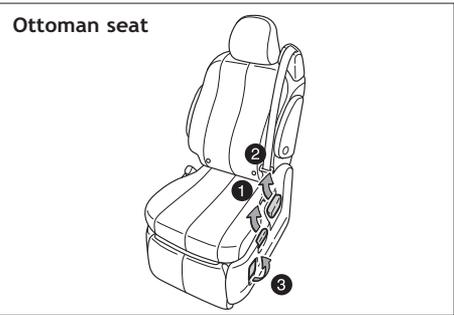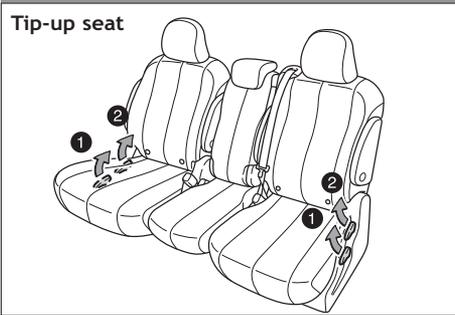

**Third row seat**

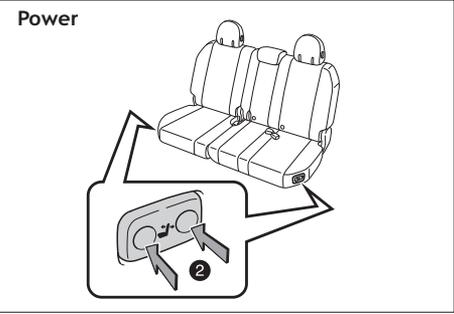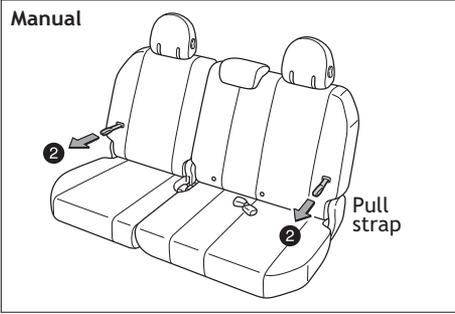


- 1 Seat position (forward/backward)
- 2 Seatback angle
- 3 Ottoman angle


Refer to the *Owner's Manual* for more details.

## Seats-Removing second row outside seats


### Tip-up seats

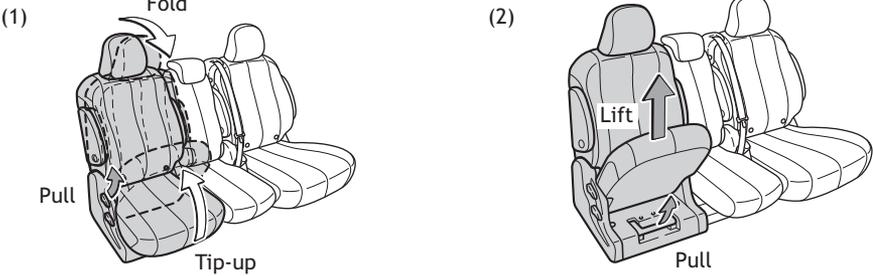

### Ottoman seats

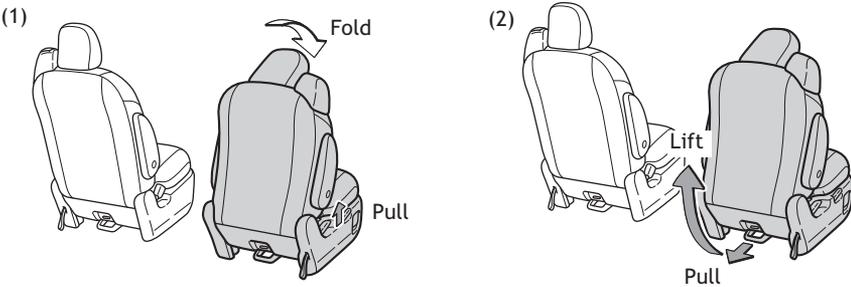


## Seats-Removing second row center seat (if equipped)


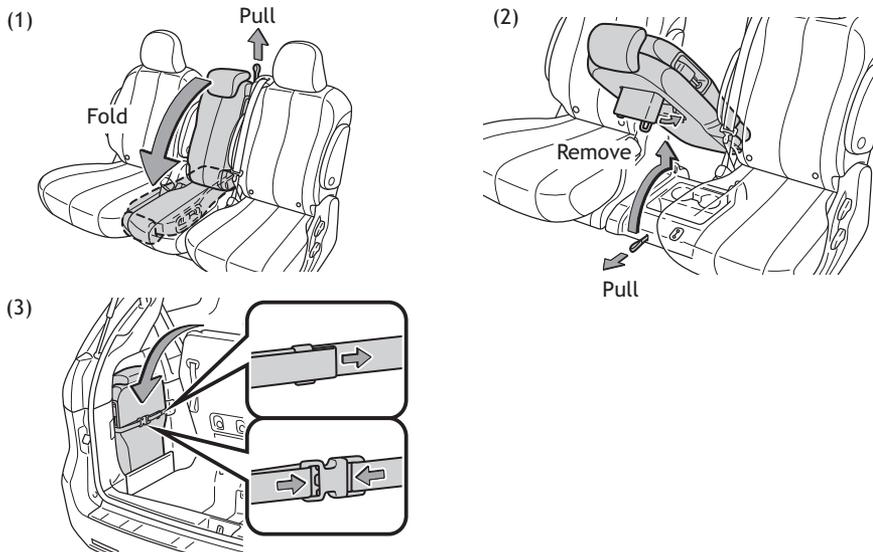


Seats-Stowing third row seats


Manual

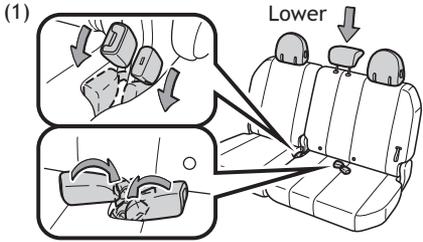



Stow the seat belt buckles

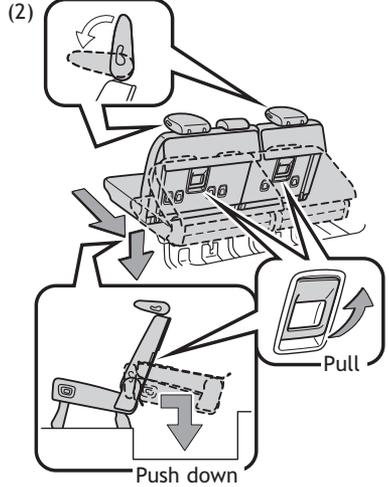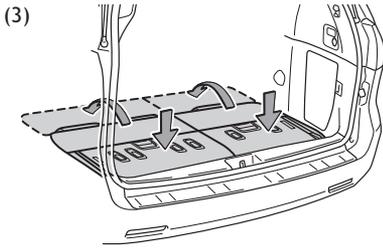

Power

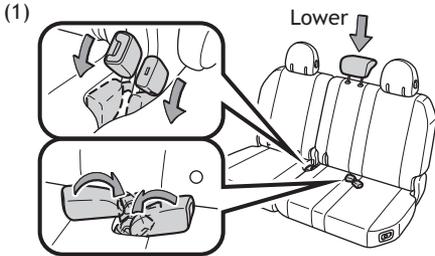

Stow the seat belt buckles

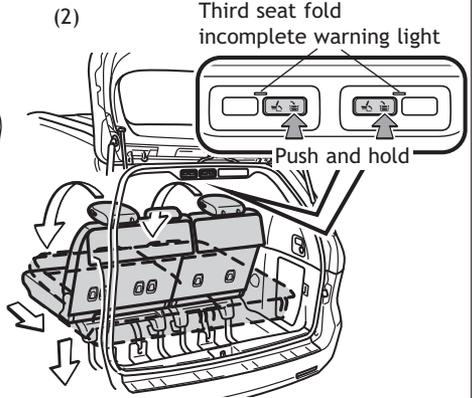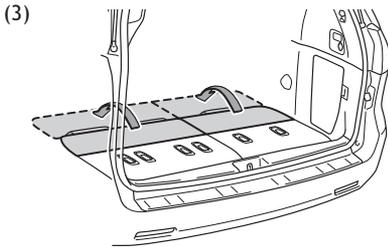


An alarm will sound for 10 seconds and the **3RD SEAT** indicator will light up on the instrument panel if the seat is not fully open or stowed when vehicle is shifted out of Park.

Refer to the *Owner's Manual* for more details.

## Doors-Sliding


### ON/OFF switch

Instrument panel

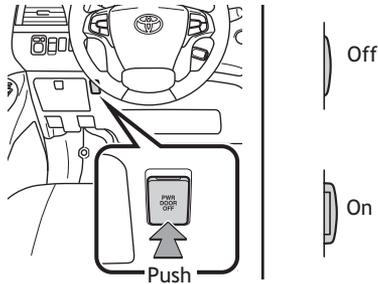


### Opening/Closing

Front overhead console

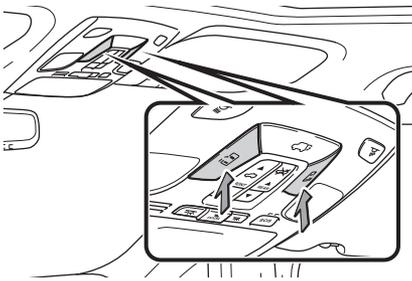

Open: Push  
Close: Push again

Center pillar

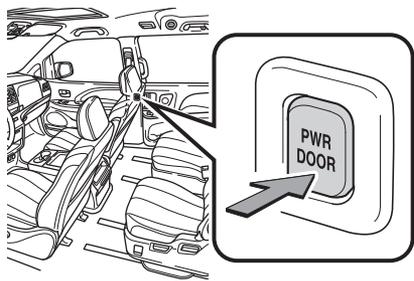

Open: Push  
Close: Push again

### Power

- Sliding doors will not fully open if the sliding door window is open.
- Power sliding doors will open only when gear selector is in the "P" (Park) position, and doors are unlocked. Refer to the *Owner's Manual* for more details.
- An alarm will sound if a sliding door is open and the vehicle is shifted out of Park.
- Left sliding door will not open if gas door is open.
- If battery is disconnected, the power sliding doors need to be reinitialized. Refer to the *Owner's Manual* for more details.

### Manual

- Sliding doors will not lock into the open position if the sliding door window is open.

**Door-Power back (if equipped)**

**ON/OFF switch**  
**Instrument panel**

Off

On

Push

**Opening/Closing**  
**Front overhead console**

Open: Push  
 Close: Push again

**NOTE:** If battery is disconnected, the power back door needs to be reinitialized. Refer to the *Owner's Manual* for more details.

**Windows**

Up

Down

Window lock switch

**Automatic operation** Push the switch completely down or pull it completely up and release to fully open or close. To stop window midway, lightly push the switch in the opposite direction.

**Window lock switch** Deactivates all passenger windows. Driver's window remains operable.

**Windows-Power quarter (if equipped)**

REAR VENT


REAR VENT

Open

Close


## Moonroof (if equipped)

### Front moonroof

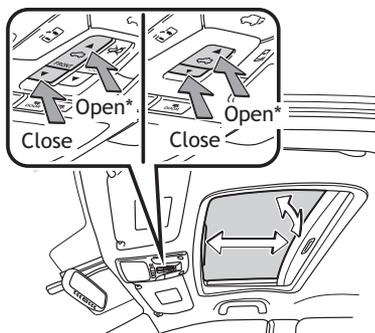

\* Tilt: Push  
Open: Push again


### Rear moonroof (if equipped)

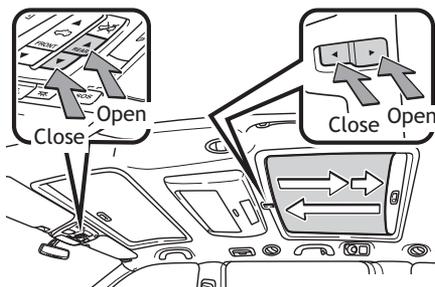


Push once to open partway;  
again to open completely.

## Sunshade-Side (if equipped)


### Rear side window

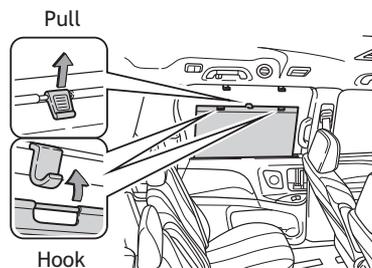

### Rear quarter window

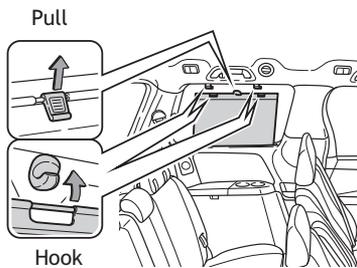


## Clock (if equipped)

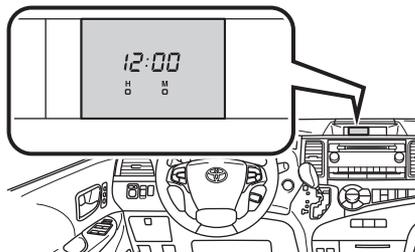


H- Hour set  
M- Minute set

### Cruise control (if equipped)

#### Turning system ON/OFF

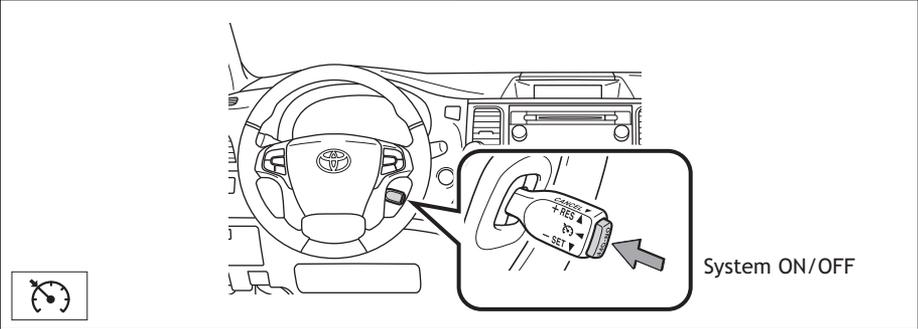

#### Functions

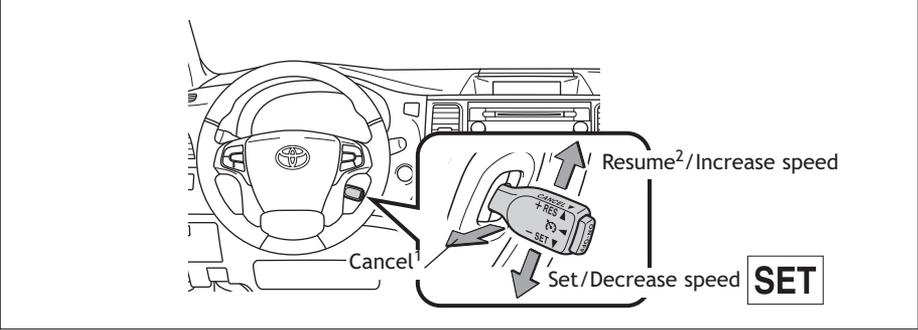


¹ The set speed may also be cancelled by depressing the brake pedal.  
² The set speed may be resumed once vehicle speed reaches 25 mph.

### Dynamic radar cruise control (if equipped)


Refer to the *Owner's Manual* for more details and complete safety precautions before attempting to use "Dynamic radar cruise control."

#### Fixed speed mode

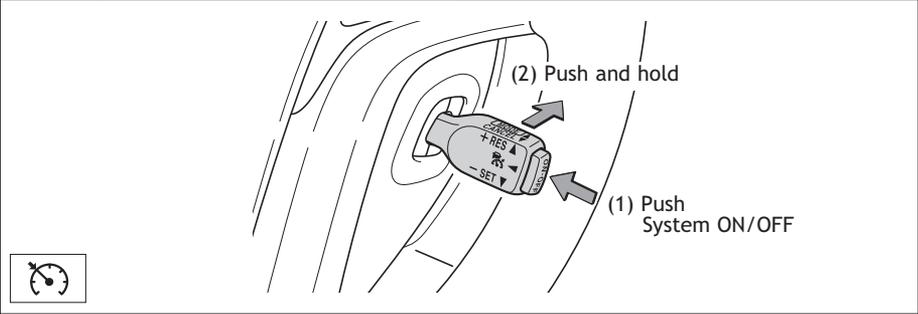

To set, cancel and resume a speed Refer to "Functions" in the *Cruise Control* section, and to the *Owner's Manual* for more details.


## Distance control mode

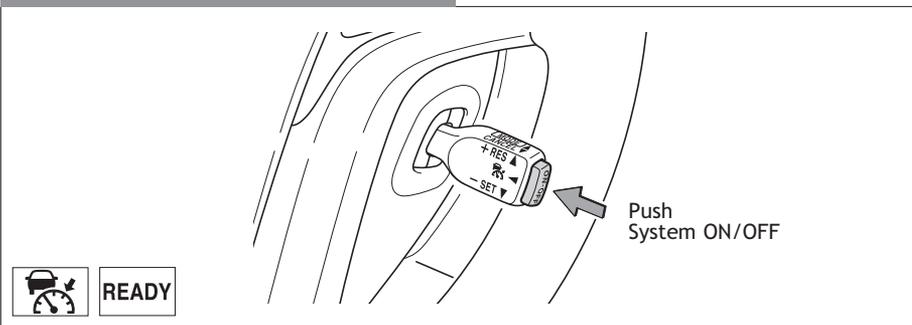

The distance control mode will cruise at a set speed, decelerate to maintain a selected distance from a slower vehicle traveling in front of you, and accelerate back up to the selected speed if the vehicle in front changes lanes or speeds up.

**To set, cancel and resume a speed** Refer to “Functions” in the *Cruise Control* section, and your *Owner’s Manual* for more details.

**NOTE:** Once vehicle speed is set, pushing lever up toward “+ RES” will increase speed to the nearest 5 mph, and then in 5 mph increments. Pushing lever down toward “- SET” will reduce speed in the same way.

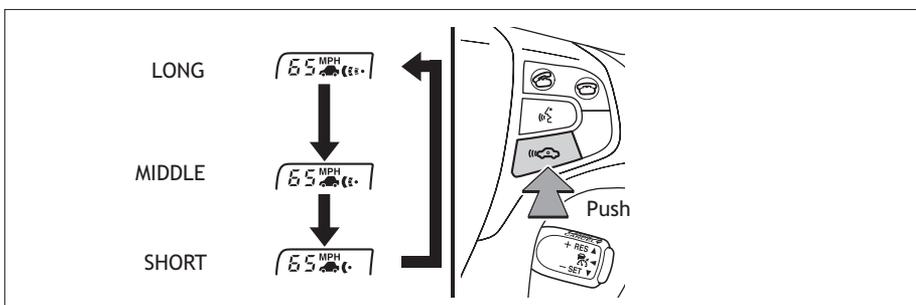


### To change the vehicle-to-vehicle distance


Push the distance button to cycle through the settings, which will change progressively from LONG to MIDDLE to SHORT.

**Audio**


**Type 1**

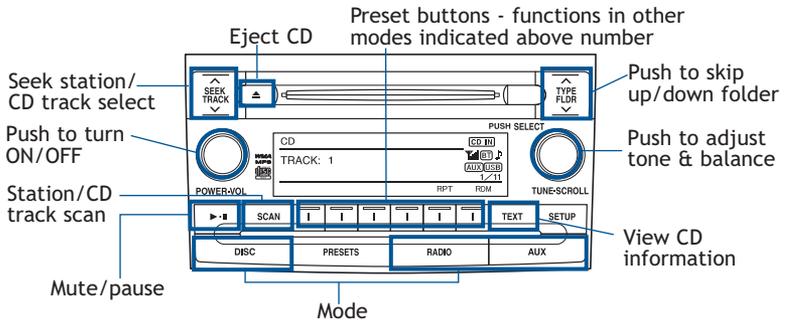

**Type 2 (additional functions)**

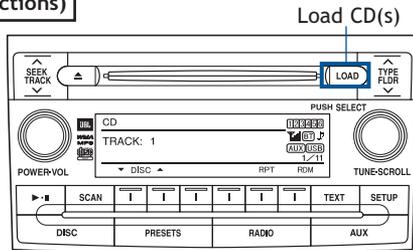

**Type 3**

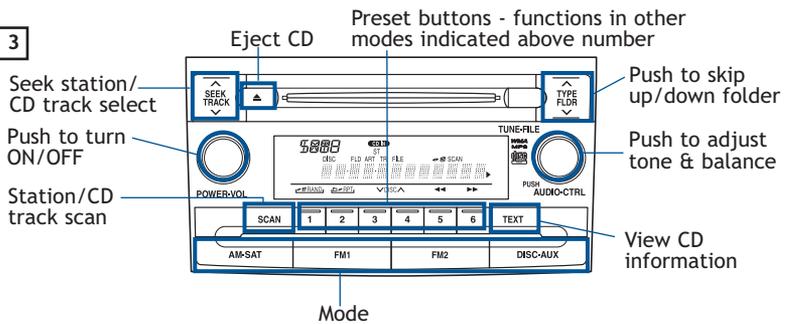

**CD player**

To scan tracks on a disc Push and hold "SCAN." Push again to hold selection.

**CD changer (Type 2 only)**

-To load one disc Push "LOAD" and insert one disc.

-To load multiple discs Push and hold "LOAD" until you hear a beep.

Insert one disc. Shutter will close and then re-open for next disc.

To select a file (MP3/WMA only) Turn "TUNE-FILE," "TUNE-SCROLL" or either side of "SEEK TRACK."


To select a folder (MP3/WMA only) Push either side of "TYPE FLDR."

## Radio

**To preset stations** Tune in the desired station and hold down a preset button (  or from  to  ) until you hear a beep.


**To scan stations** Push and hold “SCAN” to scan preset stations. Push again to hold selection.

## AUX or USB/AUX port

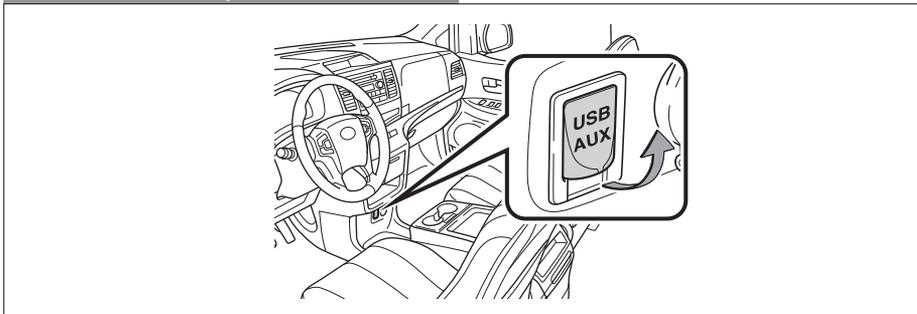

By inserting a mini plug into the AUX or USB/AUX port, you can listen to music from a portable audio device through the vehicle's speaker system while in AUX or USB/AUX mode.

## Steering wheel switches (if equipped)

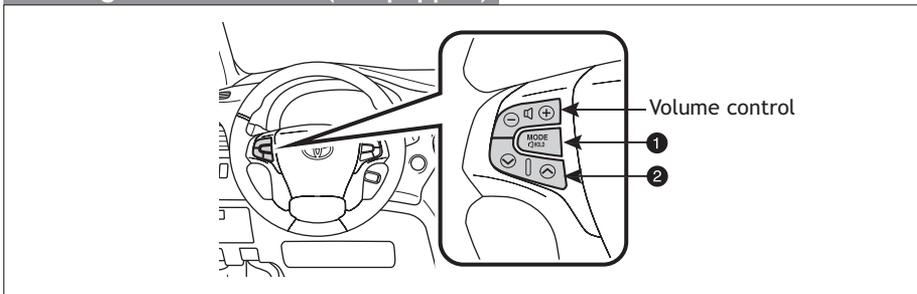

### 1 “MODE”

Push to turn audio ON and select an audio mode. Push and hold to turn the audio system OFF.


### 2 “▲ ▼”

Use to search within the selected audio medium (radio, CD, iPod®, etc.).

## Air Conditioning/Heating

### Front automatic Air Conditioning

Control panel

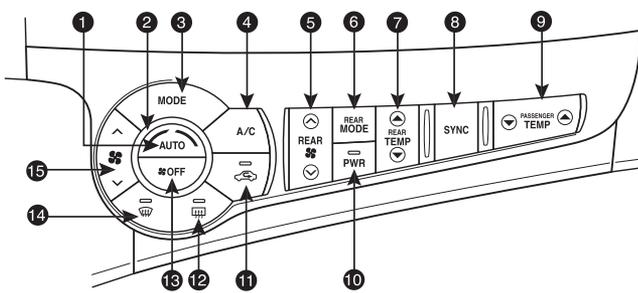


Display



- ① Automatic climate control ON  
Adjusting the temperature setting will cause the airflow vents, air intake and fan to adjust automatically.
- ② Temperature selector (driver side)
- ③ Airflow vent  
In “” mode, use fresh air (“” indicator “OFF”) to reduce window fogging. “” mode uses fresh air only.
- ④ Air Conditioning ON/OFF
- ⑤ Rear fan speed
- ⑥ Rear Airflow vent
- ⑦ Temperature selector (rear passenger area\*)
- ⑧ Synchronizes driver, front passenger and rear temperature settings
- ⑨ Temperature selector (front passenger side)
- ⑩ Rear Air Conditioning ON/OFF
- ⑪ Recirculated cabin air (fresh air when OFF)
- ⑫ Outside rearview mirror/Rear window defogger and windshield wiper de-icer (if equipped)
- ⑬ Climate control OFF
- ⑭ Windshield defogger
- ⑮ Front fan speed


\* To change the rear seat setting, press the “PWR” button.

## Front manual Air Conditioning

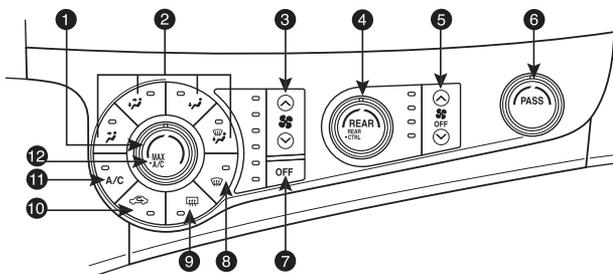


- 1 Temperature selector (driver side)
- 2 Airflow vent  
In “” mode, use fresh air (“” indicator OFF) to reduce window fogging. “” mode uses fresh air only.
- 3 Front fan speed
- 4 Temperature selector (rear passenger area)
- 5 Rear fan speed
- 6 Temperature selector (front passenger side)
- 7 Climate control OFF
- 8 Windshield defogger
- 9 Outside rearview mirror/Rear window defogger and windshield wiper de-icer (if equipped)
- 10 Recirculated cabin air (fresh air when OFF)
- 11 Air Conditioning ON/OFF
- 12 Use for quick cooling. MAX A/C changes air intake to recirculate. It is not possible to change intake to fresh.

## Rear automatic Air Conditioning

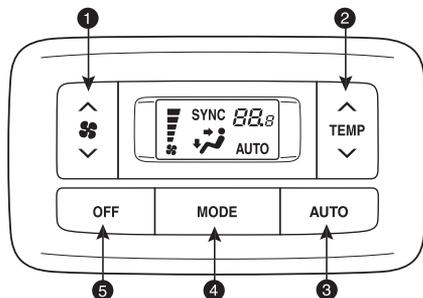



- 1 Fan speed
- 2 Temperature selector
- 3 Automatic climate control ON
- 4 Airflow vent
- 5 Climate control OFF

Rear manual Air Conditioning

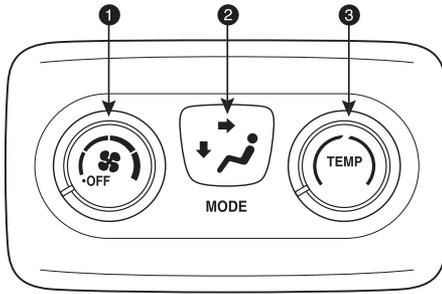


- 1 Fan speed
- 2 Airflow vent
- 3 Temperature selector

Seat heaters (if equipped)

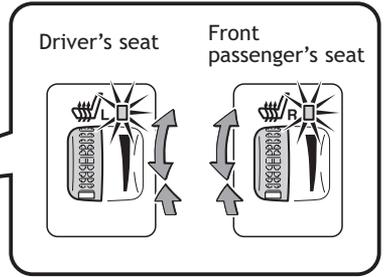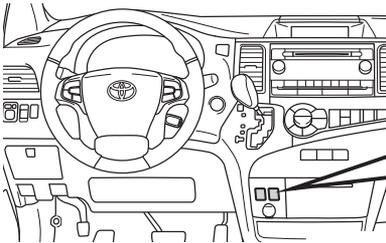


## Telephone controls (Bluetooth®) (if equipped)


### Audio unit

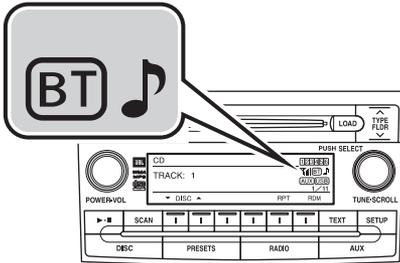

### Microphone

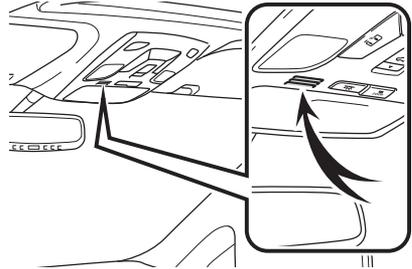


### Steering wheel telephone switches

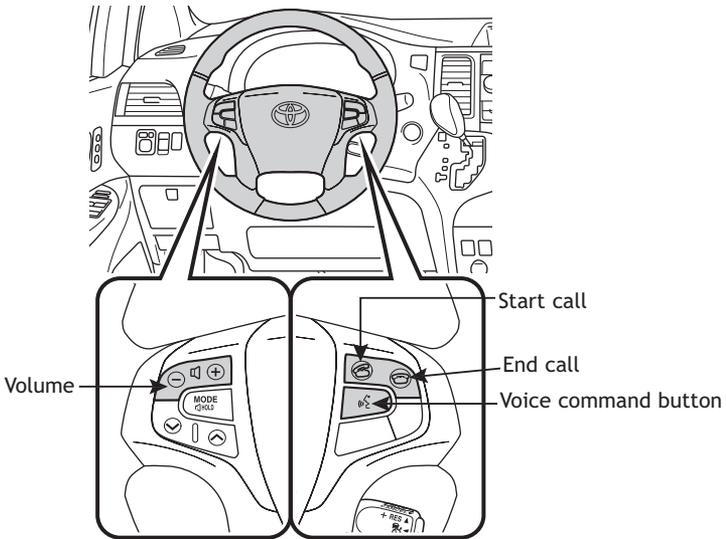

Bluetooth® technology allows dialing or receipt of calls without taking hands from the steering wheel or using a cable to connect the telephone and the system.


Refer to “Using the hands-free phone system (for cellular phone),” Section 3-5 in the *Owner’s Manual*, for more details.

**Rear seat entertainment system  
(if equipped)**

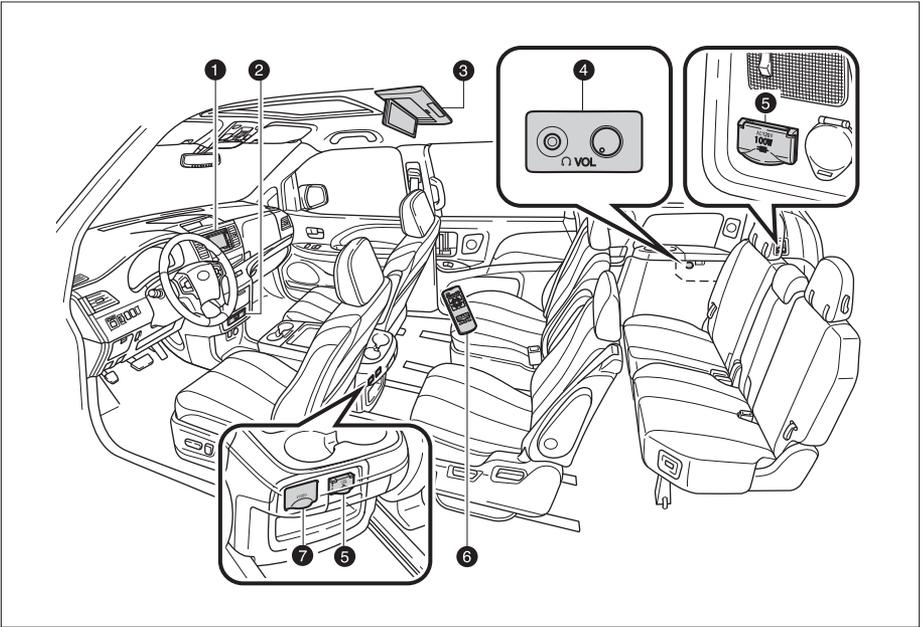

- ① Front audio
- ② DVD player
- ③ Display
- ④ Headphone jacks and headphone volume control
- ⑤ 120V AC Power outlets
- ⑥ Remote control
- ⑦ AV input port


**Enhanced VSC OFF button**

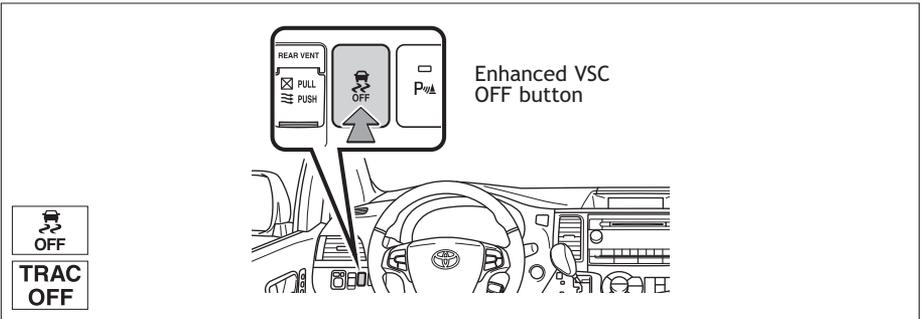

The Enhanced VSC OFF button is used to switch between modes related to the TRAC and Enhanced VSC functions.

Refer to Section 2-4 of the *Owner's Manual* for more information.

## Hill-start Assist Control (HAC) (if equipped)

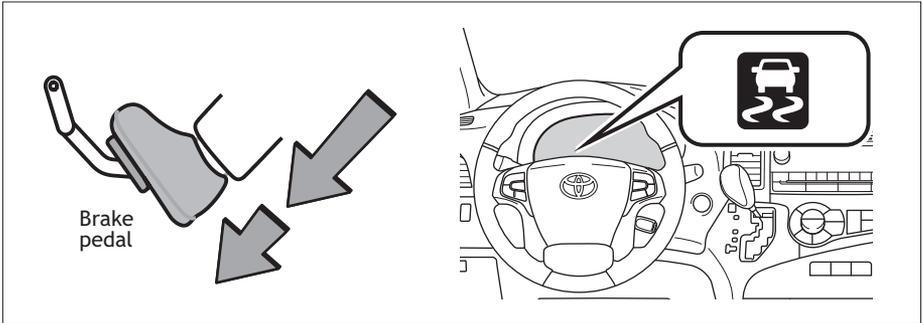

HAC helps prevent rolling backwards on an incline. To engage, push further down on brake pedal while at a complete stop until a beep sounds and slip indicator illuminates. HAC holds for approximately 2 seconds after releasing brake pedal.

Refer to the *Owner's Manual* for more details.

## Garage door opener (HomeLink®)\* (if equipped)



Garage door openers manufactured under license from HomeLink®\* can be programmed to operate garage doors, estate gates, security lighting, etc.

Refer to “Garage door opener,” Section 3-8 in the *Owner's Manual*, for more details.


For programming assistance, contact HomeLink® at 1-800-355-3515, or visit <http://www.homelink.com>.

\* HomeLink® is a registered trademark of Johnson Controls, Inc.


**Power outlets-12V DC**

Instrument panel


Type A

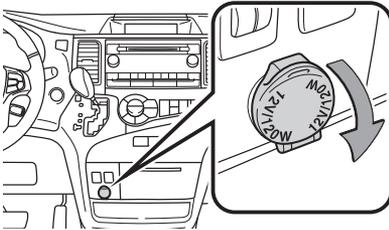

Type B

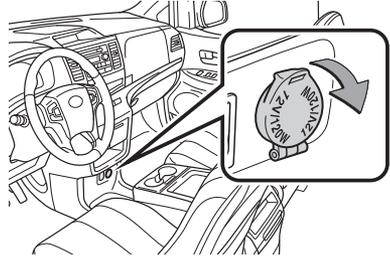

Luggage compartment

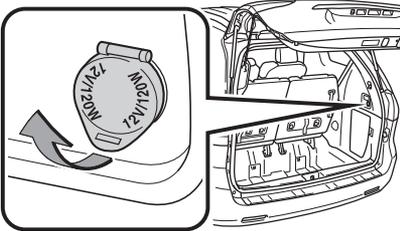


Ignition/“ENGINE START STOP” switch must be in “ACC” or “ON” position for use.


**Power outlets-120V AC (if equipped)**

Console box


Type A

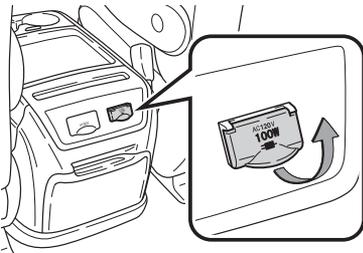

Type B

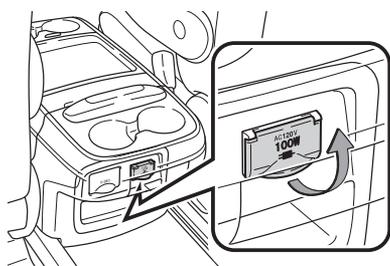


Luggage compartment

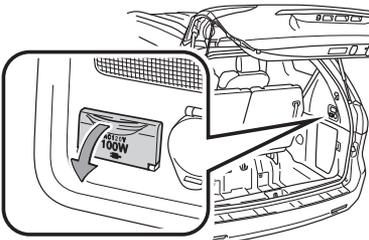


Ignition/“ENGINE START STOP” switch must be in the “ON” position for use.

## Bottle holders

### Front doors

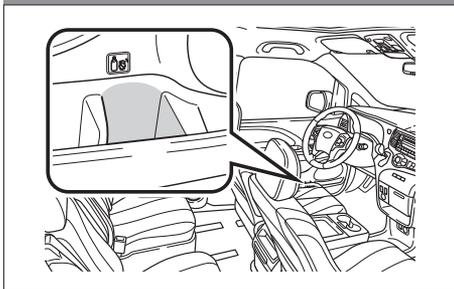


### Sliding doors

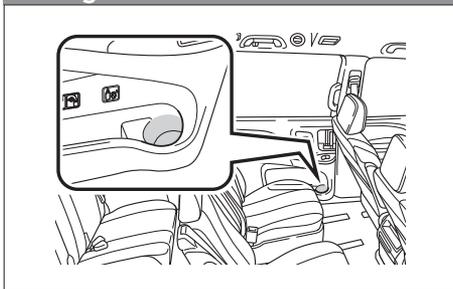

**NOTE:** Do not place open containers in the bottle holders.


## Cup holders

### Instrument panel

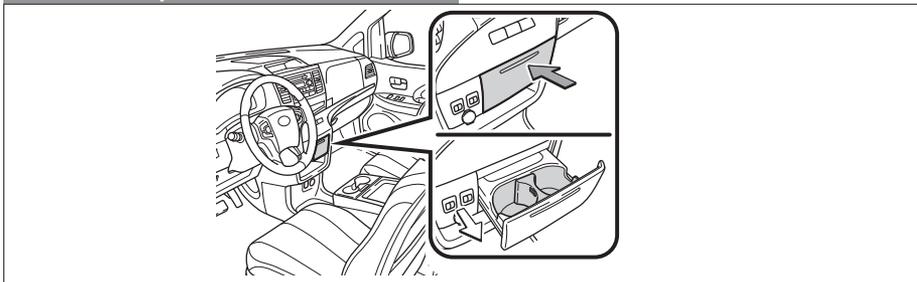


### Console box

#### Front side

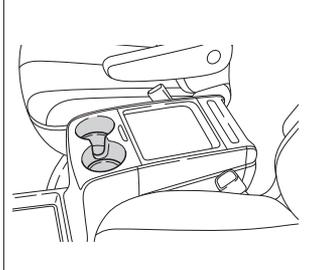


#### Rear side


##### Type A

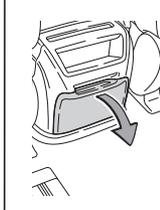


##### Type B

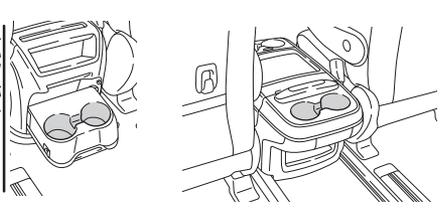

### Second center seat

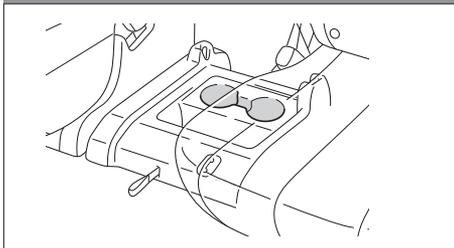


### Third row area

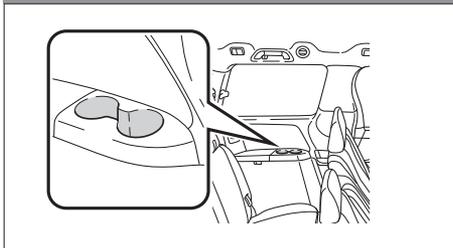


# SAFETY AND EMERGENCY FEATURES

## Door locks

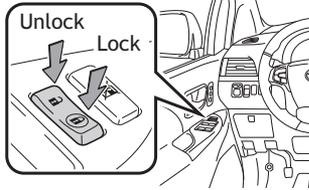


## Doors-Child safety locks

Rear door

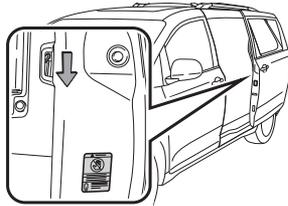


Moving the lever to "LOCK" will allow the door to be opened only from the outside.

## Seat belts-Shoulder belt anchor

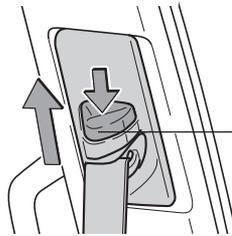

Push up, or squeeze lock release to lower

## Seat belts

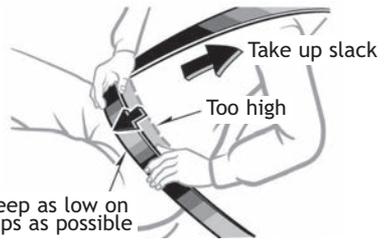

If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.

## Tire Pressure Monitoring (warning) System


If tire pressure becomes critically low on any of the tires (excluding the spare), “(⚠)” indicator will illuminate. Correctly adjusting tire inflation will turn off the light after a few minutes. If the light does not turn off, have the system checked by your Toyota dealer.

Refer to the *Owner's Manual* for more details.

## Spare tire & tools


All-Wheel Drive models are equipped with run-flat tires. Refer to the *Owner's Manual* for more details.

### Tool and spare tire location

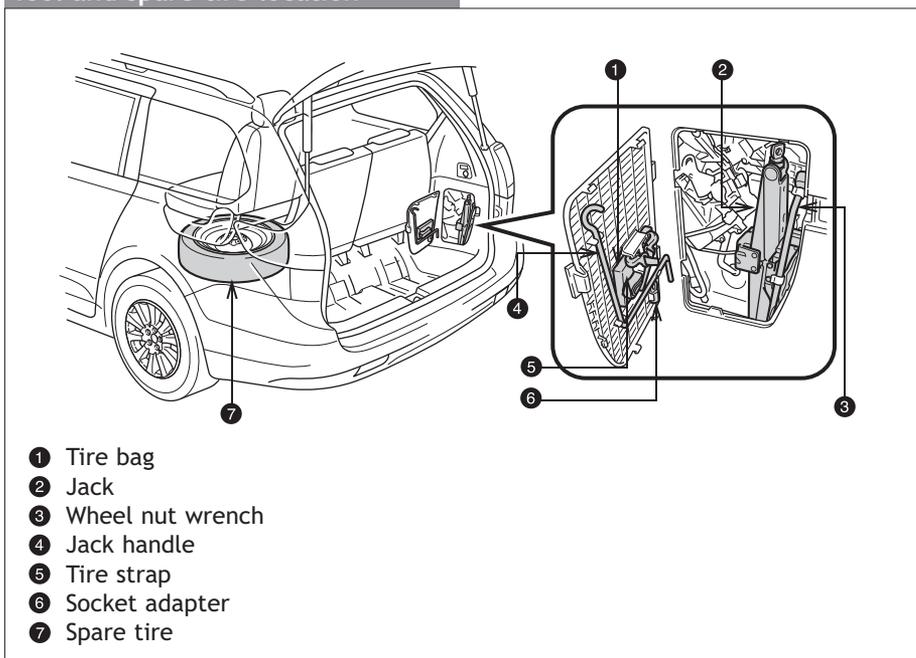

### Removing the spare tire

#### Two-wheel drive models

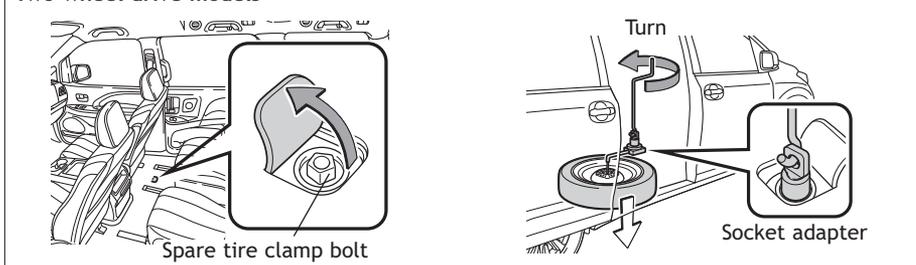

Refer to the *Owner's Manual* for jack positioning and tire changing procedures.

## SAFETY AND EMERGENCY FEATURES

### Star Safety System™

All new Toyota vehicles come standard with the Star Safety System™, which combines Vehicle Stability Control (VSC), Traction Control (TRAC), Anti-lock Braking System (ABS), Electronic Brake-force Distribution (EBD), Brake Assist (BA) and Smart Stop Technology (SST).

#### Vehicle Stability Control (VSC)

VSC helps prevent loss of traction during cornering by reducing engine power and applying brake force to selected wheels.

Toyota's VSC monitors steering angle and the direction your vehicle is traveling. When it senses that the front or rear wheels begin to lose traction, VSC reduces engine power and applies braking to selected wheels. This helps restore traction and vehicle control.

#### Traction Control (TRAC)

VSC helps prevent loss of traction during cornering by reducing engine power, and Traction Control helps maintain traction on loose gravel and wet, icy, or uneven surfaces by applying brake force to the spinning wheel(s).

Toyota's TRAC sensors are activated when one of the drive wheels starts to slip. TRAC limits engine output and applies the brakes to the spinning wheel. This transfers power to the wheels that still have traction to help you drive safely.

#### Anti-Lock Brake System (ABS)

ABS helps prevent brakes from locking up by "pulsing" brake pressure to each wheel. This limits brake lockup and provides the maximum brake effectiveness for the current road conditions.

Toyota's ABS sensors detect which wheels are locking up and limits wheel lockup by "pulsing" each wheel's brakes independently. Pulsing releases brake pressure repeatedly for fractions of a second. This helps the tires attain the maximum traction that the current road conditions will allow, helping you stay in control.

#### Electronic Brake Force Distribution (EBD)

Toyota's ABS technology has Electronic Brake-force Distribution (EBD) to help maintain stability and balance when braking. Abrupt stops cause the vehicle to tilt forward, reducing the braking power of the rear wheels. EBD responds to sudden stops by redistributing brake force to maximize the braking effectiveness of all four wheels.

#### Brake Assist (BA)

Brake Assist is designed to detect sudden or "panic" braking, and then add braking pressure to decrease the vehicle's stopping distance. When there's only a split second to react, Brake Assist can add additional brake pressure more quickly than just the driver alone can.

## Smart Stop Technology (SST)

Smart Stop Technology automatically reduces engine power when the accelerator and brake pedals are pressed simultaneously under certain conditions.

SST engages when the accelerator is depressed first and the brakes are applied firmly for longer than one-half second at speeds greater than five miles per hour.


SST doesn't engage if the brake pedal is depressed before the accelerator pedal, allowing vehicles to start on a steep hill and safely accelerate without rolling backward.

## Floor mat installation

There are two types of Toyota floor mats: carpeted and all-weather. Each vehicle has model-specific floor mats. Installation is easy.

**For safety, follow these steps:**

- Only use floor mats designed for your specific model.
- Use only one floor mat at a time, using the retaining hooks to keep the mat in place.
- Install floor mats right side up.

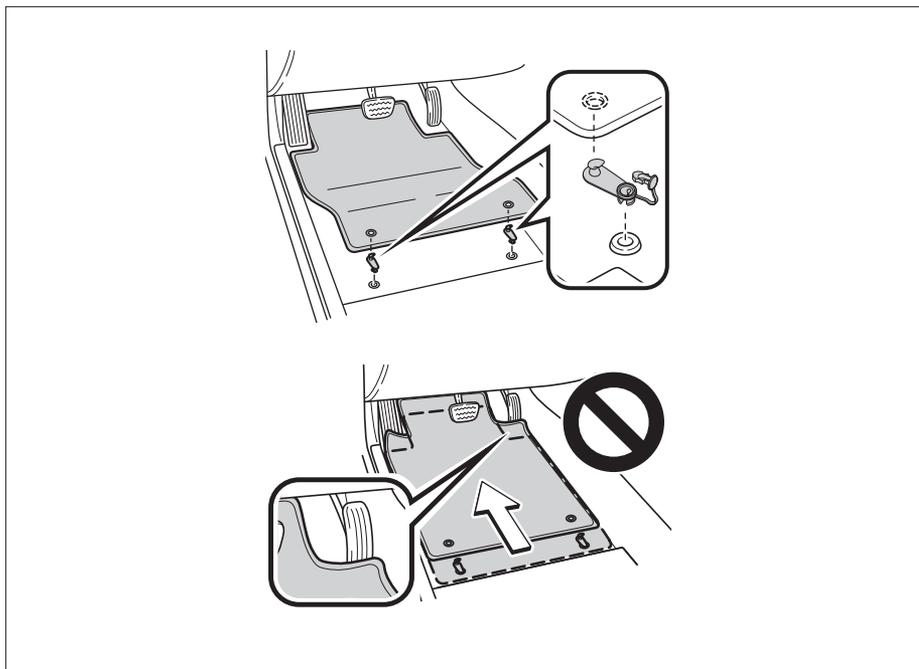

# NOTES





# TOYOTA Owners

[toyota.com/owners](http://toyota.com/owners)

CUSTOMER EXPERIENCE CENTER

1-800-331-4331

