

CAMRY

2 0 1 2



QUICK REFERENCE GUIDE

2012 Camry

This *Quick Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Quick Reference Guide* is not intended as a substitute for the *Owner's Manual* located in your vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Camry.

! A word about safe vehicle operations

This *Quick Reference Guide* is not a full description of Camry operations. Every Camry owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Quick Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

INDEX

OVERVIEW

Engine maintenance	9
Fuel tank door release and cap	8
Hood release	9
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Keyless entry^{1,2}	6
Light control-Instrument panel	8
Smart Key system^{1,2}	7

FEATURES/OPERATIONS

Air Conditioning/Heating	18-19
Audio	20
Auto lock/unlock²	10
Automatic Transmission	10
Bottle holders	22
BSM (Blind Spot Monitor)	17
Clock	17
Cruise control	16
Cup holders	22
Garage door opener (HomeLink [®]) ³	16
iPod [®] /USB/AUX port	21
Lights¹ & turn signals	15
Moonroof	12
Parking brake	11
Power outlets-12V DC	14
Seat adjustments-Front	13
Seat adjustments-Rear	13
Seat heaters	19
Seats-Head restraints	12
Steering lock release	11
Steering wheel switches	21
Tilt and telescopic steering wheel	11
Windows-Power	12
Windshield wipers & washers	14

SAFETY AND

EMERGENCY FEATURES

Door locks	23
Doors-Child safety locks	23
Floor mat installation	27
Seat belts	23
Seat belts-Shoulder belt anchor	24
Spare tire & tools	25
Star Safety System TM	26-27
Tire Pressure Monitoring (warning) System	24
Trunk-Internal release	25

¹ Visit your Toyota dealer for information on customizing this feature.

² Programmable by customer. Refer to the Owner's Manual for instructions and more information.


³ HomeLink[®] is a registered trademark of Johnson Controls, Inc.

OVERVIEW



Instrument panel

Steering wheel controls



Type A

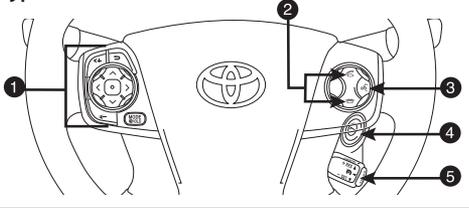




Type B

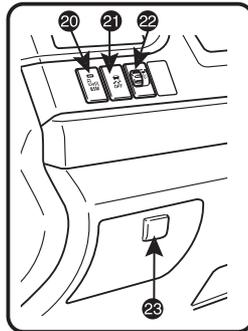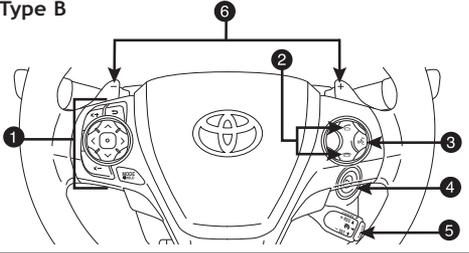

Automatic Air Conditioning

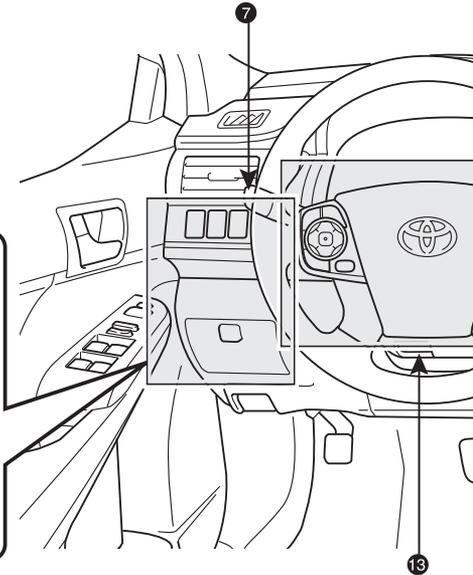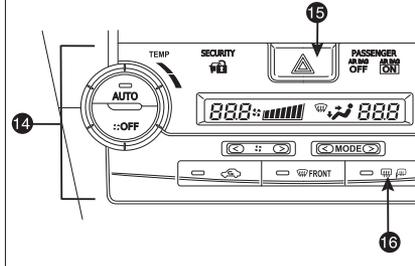

- ① Steering wheel audio controls^{1,2,3}
- ② Telephone controls^{1,2}
- ③ Voice command button^{1,2,3}
- ④ Ignition switch (standard key)¹
- ⑤ Cruise control
- ⑥ Paddle shift switches¹
- ⑦ Headlight and turn signal controls/Headlight, turn signal and front fog light¹ controls
- ⑧ Wiper and washer controls
- ⑨ Clock
- ⑩ Audio system¹/Navigation system^{1,2}/Display audio system^{1,3}
- ⑪ Tire Pressure Monitoring (warning) System
- ⑫ “ENGINE START STOP” button (Smart Key)¹
- ⑬ Tilt and telescopic steering lock release
- ⑭ Air Conditioning controls
- ⑮ Emergency flasher button

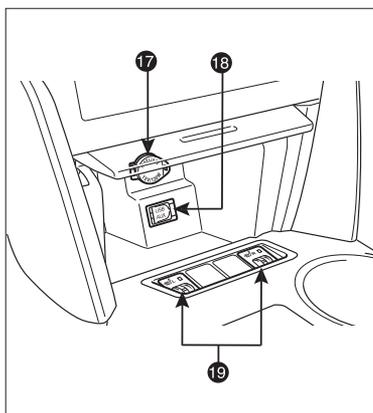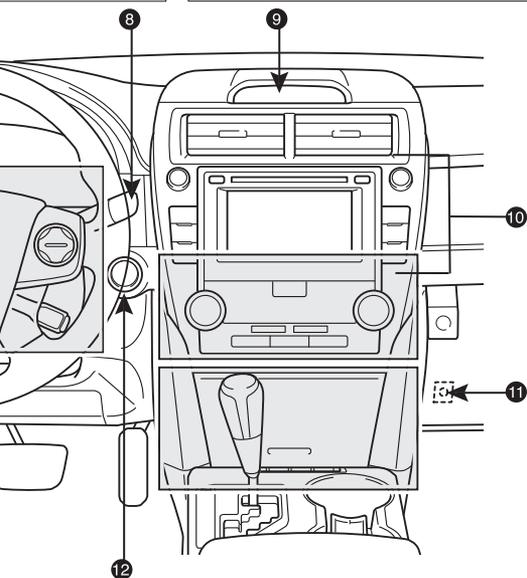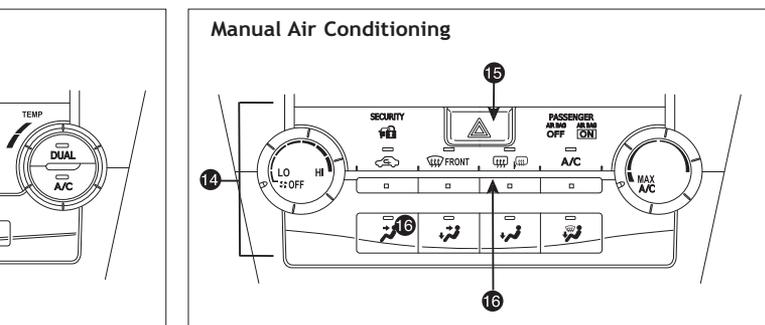

- 16 Outside rearview mirror¹/Rear window defogger button
- 17 12V DC Power outlet
- 18 AUX or USB/AUX port
- 19 Seat heater controls¹
- 20 BSM (Blind Spot Monitor) main switch¹
- 21 VSC OFF switch
- 22 Headlight leveling dial¹
- 23 Coin holder

¹ If equipped


² For details, refer to the “Navigation System Owner’s Manual.”

³ For details, refer to the “Display Audio System Owner’s Manual.”


NOTE: For vehicles equipped with Entune™, please consult the “Navigation System With Entune Quick Reference Guide” or www.toyota.com/entune.

Instrument cluster

Type A

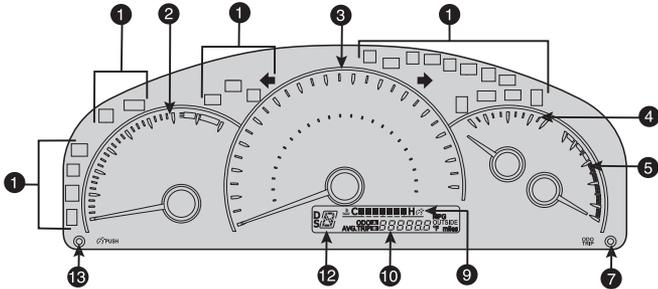

Type B

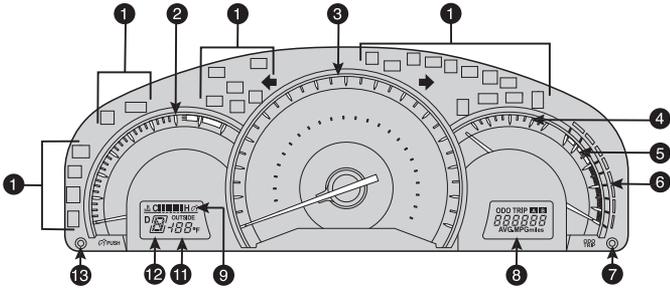

- 1 Service indicators and reminders
- 2 Tachometer
- 3 Speedometer
- 4 Fuel gauge
- 5 Average fuel consumption meter
- 6 Current fuel consumption gauge (if equipped)
- 7 Display change button
- 8 Odometer/trip meter/average fuel consumption display
- 9 Engine coolant temperature display/instrument panel light control display
- 10 Odometer/trip meter/outside temperature/average fuel consumption/current fuel consumption display
- 11 Outside temperature display
- 12 Shift position/shift range display
- 13 Instrument panel light control button

Indicator symbols

For details, refer to “Indicators and warning lights,” Section 2-2, 2012 Owner’s Manual.

BRAKE Brake system warning¹

 Driver/front passenger seat belt reminder (alarm will sound if speed is over 12 mph)

¹ If indicator does not turn off within a few seconds of starting engine, there may be a malfunction. Have vehicle inspected by your Toyota dealer.



	Electric power steering system warning
	Charging system warning ¹
	SRS AIR BAG ON/OFF indicator
	Low engine oil pressure warning ¹
	Malfunction/Check Engine indicator ¹
	Maintenance required reminder ¹
	Low fuel level warning
	Open door warning
	Airbag SRS warning ¹
BSM 	Blind Spot Monitor warning/Blind Spot Monitor outside rearview mirror indicators
	Low Tire Pressure Warning ¹
	Low windshield washer fluid warning ¹
	Theft deterrent/Engine immobilizer system indicator
	 Headlight low/high beam indicator
	Turn signal indicator
	Front fog light indicator
	Slip indicator ¹
	Vehicle Stability Control OFF indicator ¹
	Traction Control OFF indicator ¹
	SET Cruise control indicator ² /Cruise control SET indicator ²
	ABS Anti-lock Brake System warning ¹
	Smart Key system indicator ³
	 Shift position and shift range indicators
	ECO Eco Driving indicator ¹
	 High engine coolant temperature warning

² If this light flashes, refer to "Cruise control," Section 2-4, 2012 Owner's Manual.


³ Light flashes in yellow to indicate a malfunction. Light flashes quickly in green to indicate that the steering lock has not been released.

Keyless entry (if equipped)

Locking operation

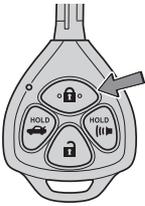
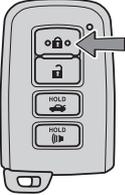
Type A	Type B	Type C
		
Push 		

Unlocking operation

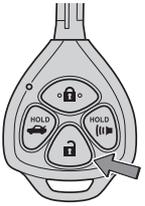Type A	Type B	Type C
		
Push ONCE: Driver door TWICE: All doors 		

NOTE: If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.

Trunk lid

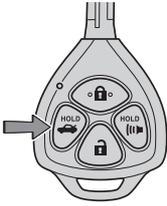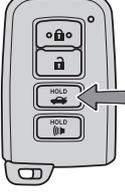
Type A	Type B	Type C
		
Push and hold  		

Panic button

	Push and hold 
---	--

Smart Key system (if equipped)


Start function

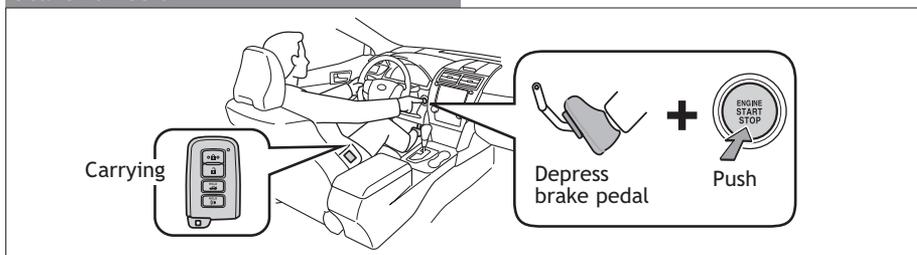

NOTE: Gear shift lever must be in Park and brake pedal depressed.


Power (without starting engine)

Without depressing the brake pedal, pressing the “ENGINE START STOP” switch will change the operation mode in succession from:

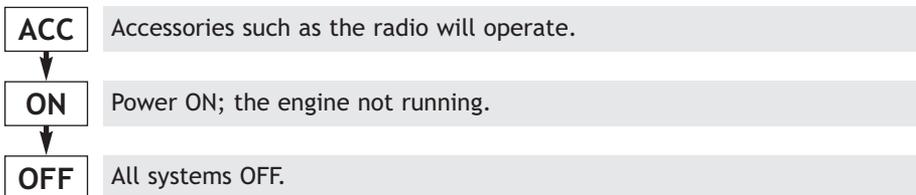

Locking operation


Front door lock

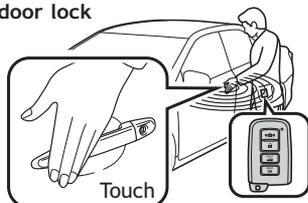

Carry remote to lock


Unlocking operation

Front door unlock*

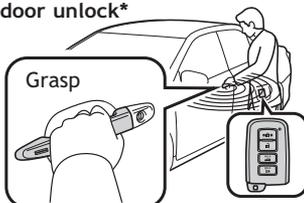

Carry remote to unlock

Trunk lock/unlock



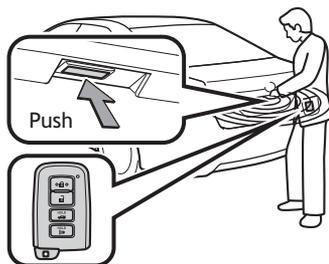


Carry remote to lock/unlock

* Driver door unlocking function can be programmed to unlock driver door only, or all doors. Grasping front passenger door handle will unlock all doors.

NOTE: Doors may also be locked/unlocked using remote.


Fuel tank door release and cap

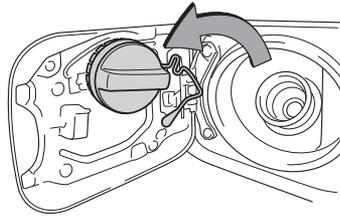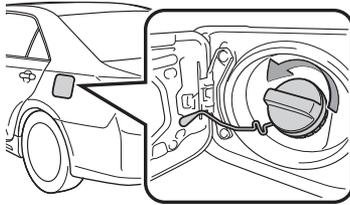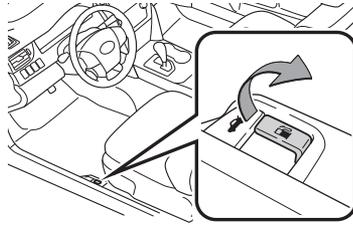


NOTE: Tighten until one click is heard. If the cap is not tightened enough, Check Engine “” indicator may illuminate.

Light control-Instrument panel


Type A

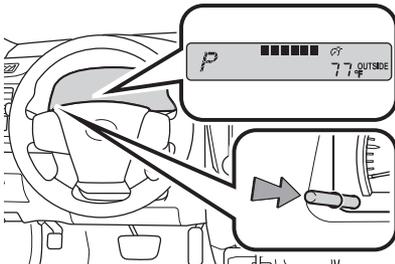

Type B

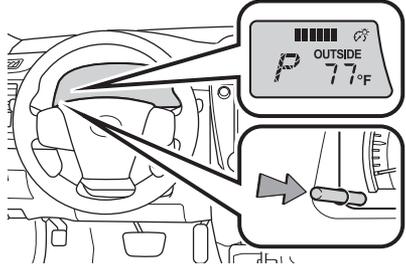


Hood release

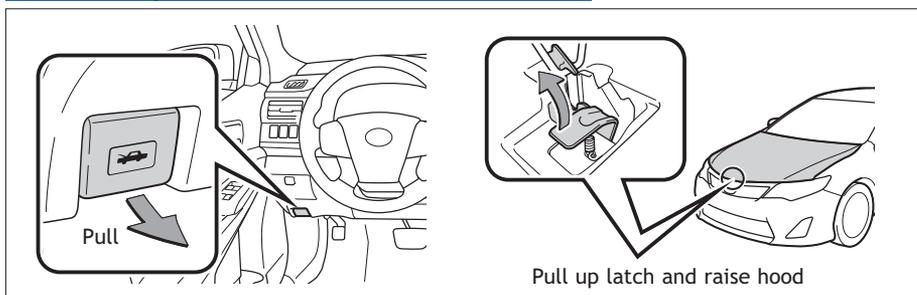


Engine maintenance

4 cylinder (2AR-FE) engine

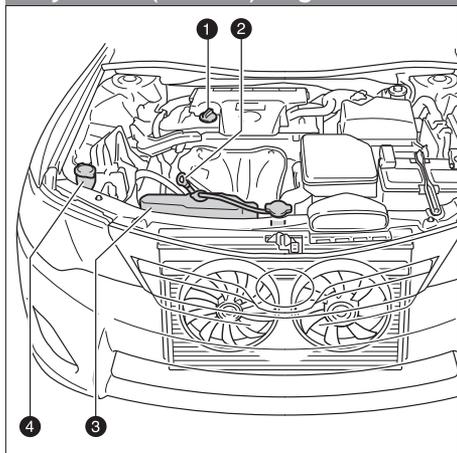

6 cylinder (2GR-FE) engine

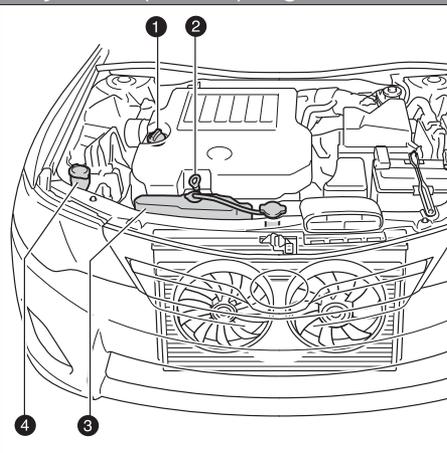

- ① Engine oil filler cap
- ② Engine oil level dipstick
- ③ Engine coolant reservoir
- ④ Windshield washer fluid tank

NOTE: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the “Warranty Maintenance Guide.”

FEATURES/OPERATIONS

Auto lock/unlock

Automatic door locks can be programmed to operate in four different modes, or turned OFF.

- Doors lock when shifting from Park.
- Doors lock when the vehicle speed goes above approximately 12 mph.
- Doors unlock when shifting into Park.

Vehicles without Smart Key system


-Doors unlock when the ignition switch is set from “ON” to “ACC” or “LOCK” and driver’s door is opened.

Vehicles with Smart Key system

-Doors unlock when the “ENGINE START STOP” switch is set to OFF and driver’s door is opened.

Refer to the *Owner’s Manual* for more details.

Automatic Transmission

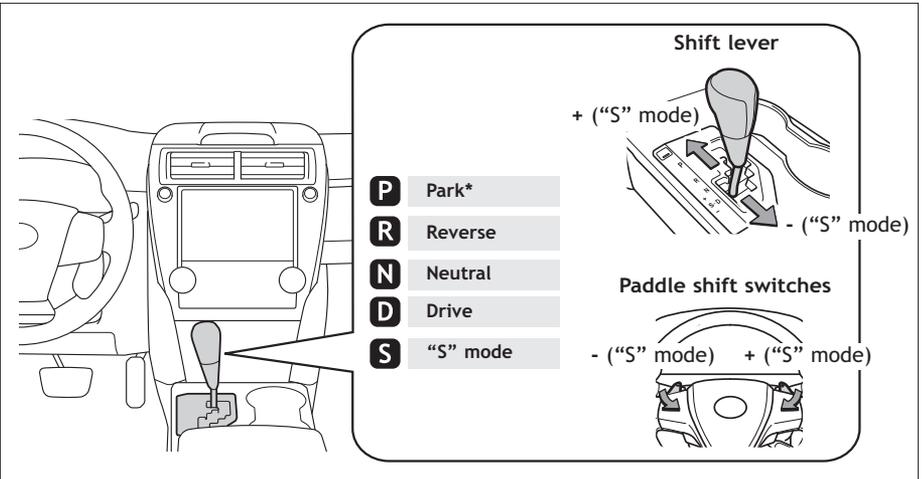

* The “ENGINE START STOP”/ignition switch must be “ON” and the brake pedal depressed to shift from Park.

“S” (Sequential) mode

Shift the shift lever to “S” position from “D” position.


- +: Upshifting
- : Downshifting

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the “D” position.

Steering lock release


Smart Key system*

Without Smart Key system

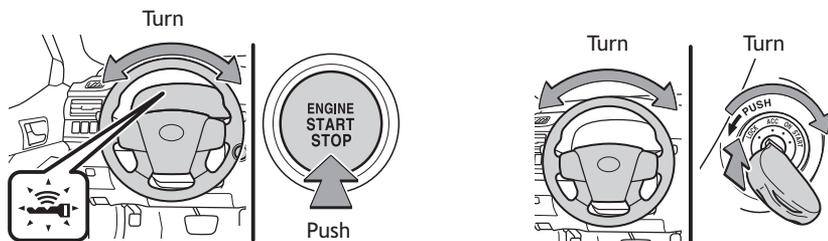

* Gently turn steering wheel while pressing the “ENGINE START STOP” switch. If the lock does not release, the Smart Key system indicator will flash quickly (green).


Tilt and telescopic steering wheel

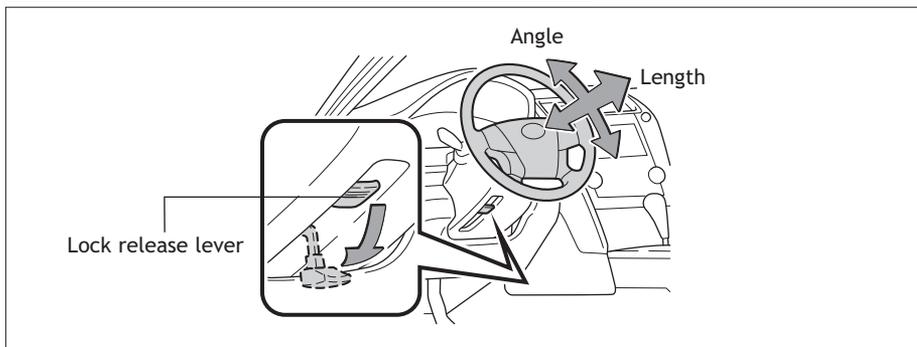

Hold wheel, push lever down, set angle and length, and return lever.


NOTE: Do not attempt to adjust while the vehicle is in motion.

Parking brake

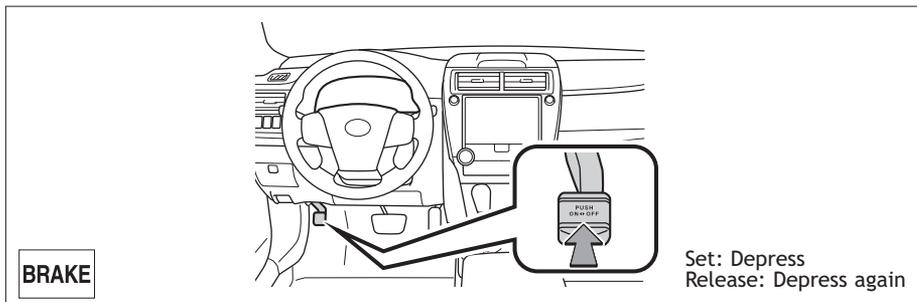

Set: Depress
Release: Depress again


Windows-Power

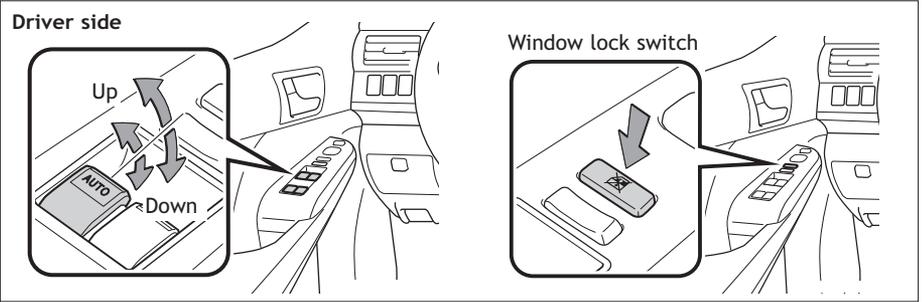

Automatic operation (driver's window only) Push the switch completely down or pull it completely up and release to fully open or close. To stop window midway, lightly push the switch in the opposite direction.


Window lock switch Deactivates all passenger windows. Driver's window remains operable.

Moonroof (if equipped)

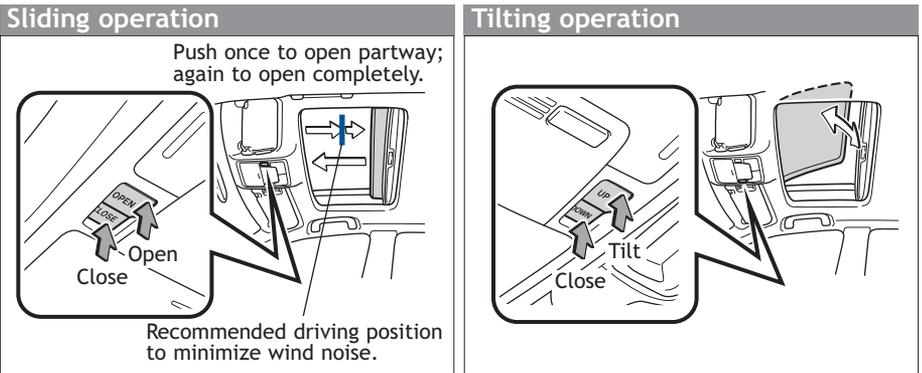

Push once to open; moonroof will automatically stop at the recommended position. Push again to open completely.

Seats-Head restraints

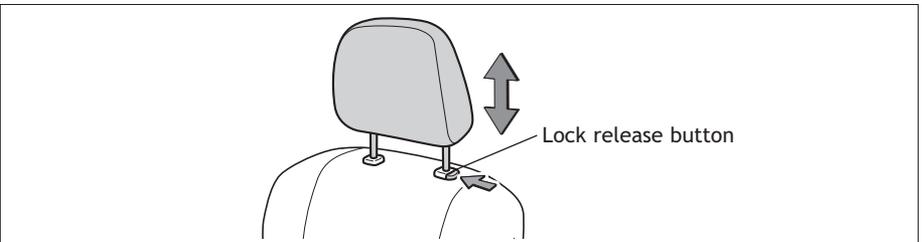


Seat adjustments-Front

Manual seat




Power seat

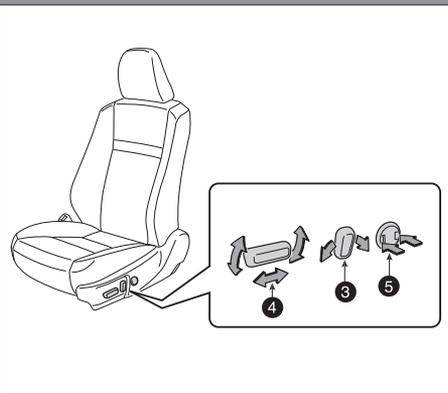

- ❶ Seat position (forward/backward)
- ❷ Height crank (driver side only)
- ❸ Seatback angle
- ❹ Seat position, cushion angle (driver side only) and height (driver side only)
- ❺ Lumbar support (driver side only)


Seat adjustments-Rear

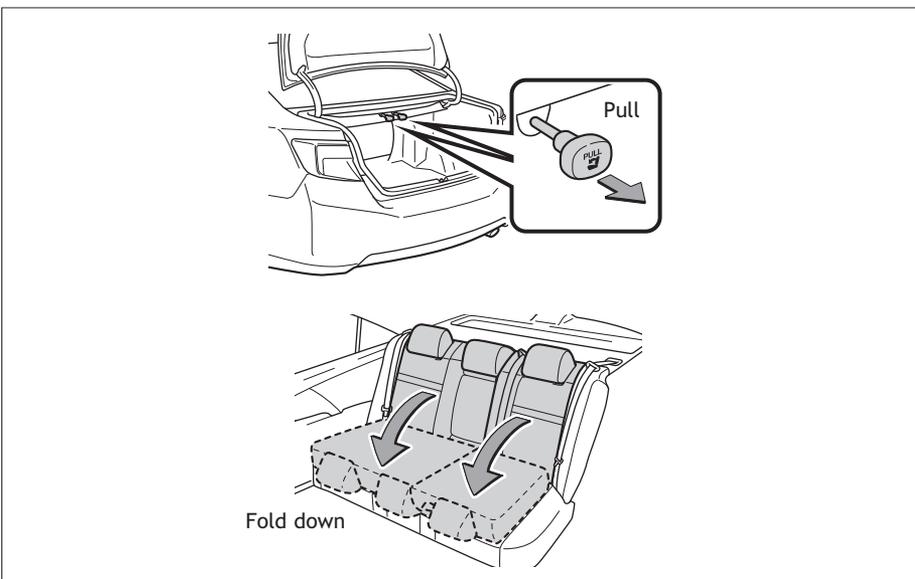

Refer to the *Owner's Manual* for more details.

Windshield wipers & washers

Type A

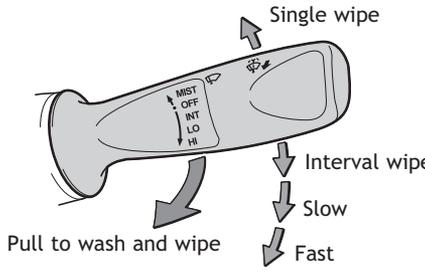

Single wipe


Interval wipe

Slow

Fast

Pull to wash and wipe

Type B

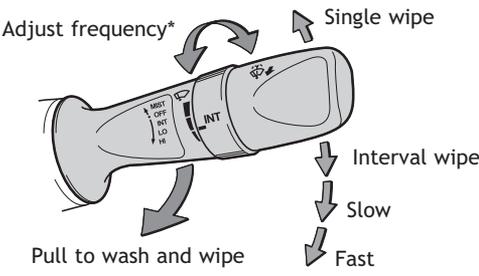

Adjust frequency*

Single wipe

Interval wipe

Slow


Fast

Pull to wash and wipe


*** Intermittent windshield wiper frequency adjustment**
Rotate to increase/decrease wipe frequency.

Power outlets-12V DC

Front console

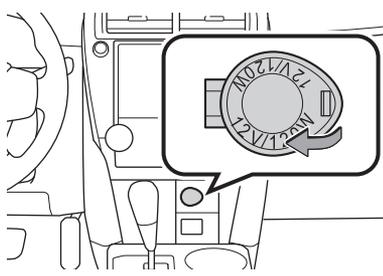

Center console (if equipped)

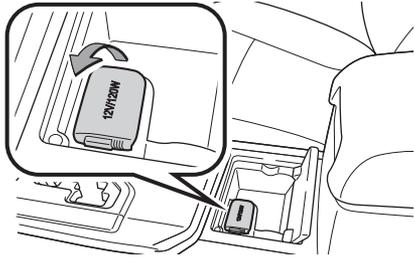


The “ENGINE START STOP” switch/ignition switch must be in the “ACC” or “ON” position for use.



Lights & turn signals

Headlights

Type A

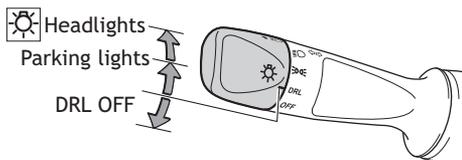


Type B

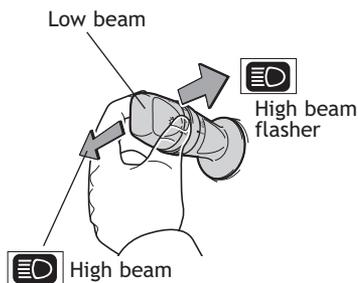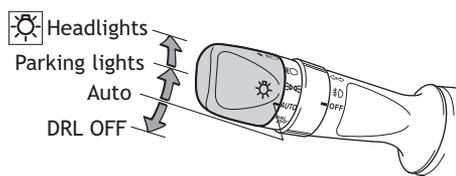

-**Daytime Running Light system (DRL)** Automatically turns on the headlights at a reduced intensity.


-**Automatic light cut off system (Type B only)** Automatically turns lights off after 30-second delay, or lock switch on remote may be pushed after locking.

Front fog lights (if equipped)

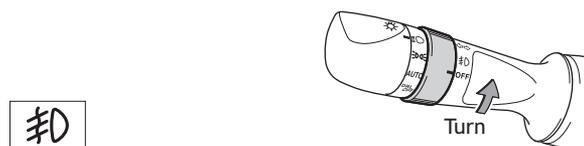


Front fog lights come on only when the headlights are on low beam.

Turn signals

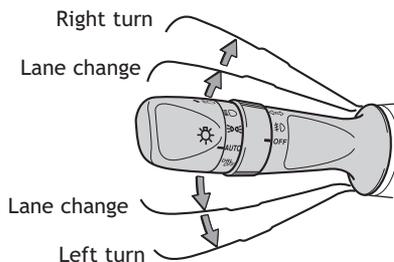

Garage door opener (HomeLink®)* (if equipped)

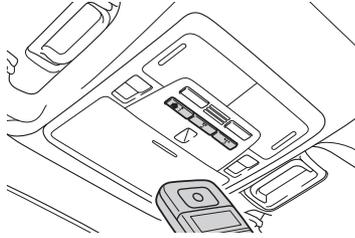

Garage door openers manufactured under license from HomeLink®* can be programmed to operate garage doors, estate gates, security lighting, etc.


Refer to “Garage door opener,” Section 3-5 in the *Owner’s Manual* for more details.

For programming assistance, contact HomeLink® at 1-800-355-3515, or visit <http://www.homelink.com>.


* HomeLink® is a registered trademark of Johnson Controls, Inc.

Cruise control

Turning system ON/OFF

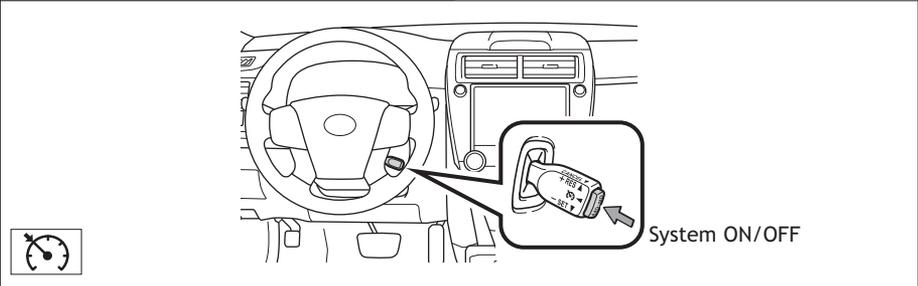


Functions

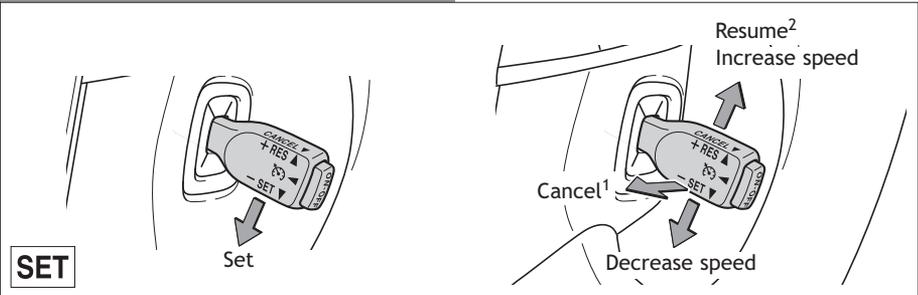

¹ The set speed may also be cancelled by depressing the brake pedal.

² The set speed may be resumed once vehicle speed exceeds 25 mph.


BSM (Blind Spot Monitor)(if equipped)

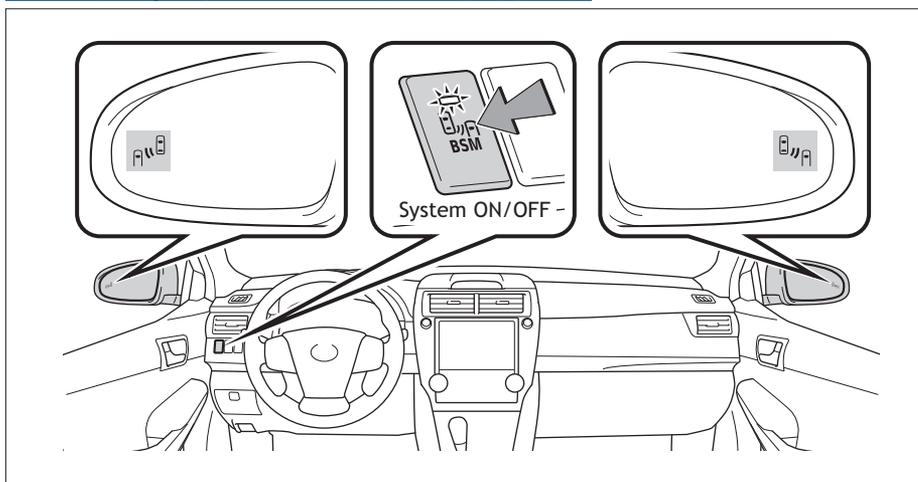

The Blind Spot Monitor is a system that assists the driver to confirm safety when changing lanes. The system uses radar sensors to detect vehicles that are traveling in an adjacent lane in the area that is not reflected in the outside rearview mirror (the blind spot), and advises the driver of the vehicles' existence via the outside rearview mirror indicator.

Refer to the *Owner's Manual* for more details on this system before attempting to use it.


Clock

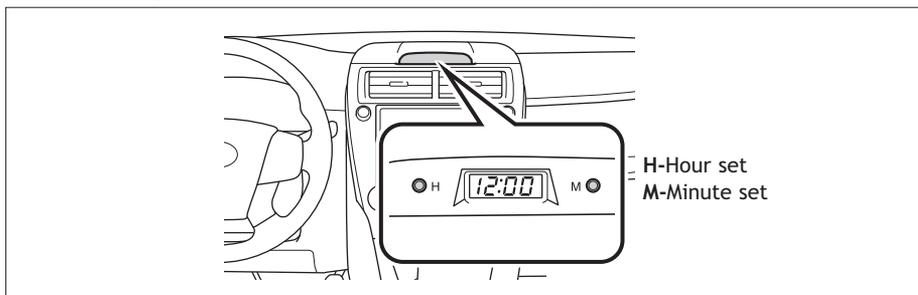

H-Hour set
M-Minute set


Air Conditioning/Heating

Automatic Air Conditioning

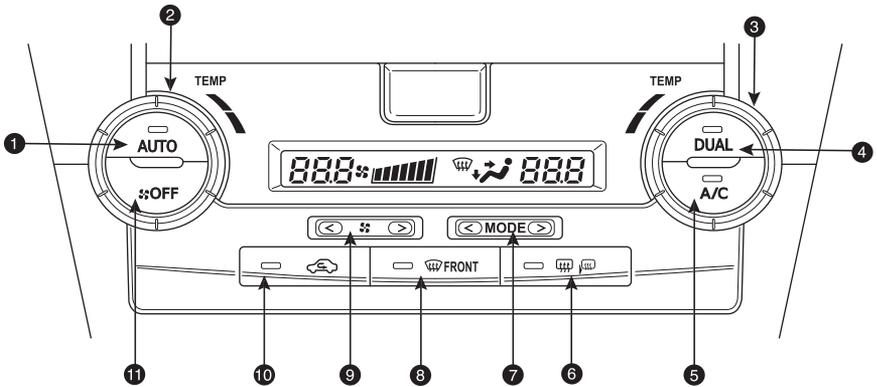

- 1** Automatic climate control ON
Adjusting the temperature setting will cause the airflow vents, air intake and fan to adjust automatically.
- 2** Temperature selector (driver side)
- 3** Temperature selector (passenger side)
- 4** “DUAL” button
Indicator ON: Separate temperature settings for driver and passengers.
Indicator OFF: Synchronized temperature settings for driver and passengers.
- 5** Air Conditioning ON/OFF
- 6** Outside rearview mirror/Rear defogger
- 7** Airflow vent
In “” mode, use fresh air (“” indicator OFF) to reduce window fogging. “” mode uses fresh air only.
- 8** Windshield airflow/defogger
- 9** Fan speed
- 10** Fresh or recirculated cabin air
- 11** Climate control OFF


Manual Air Conditioning

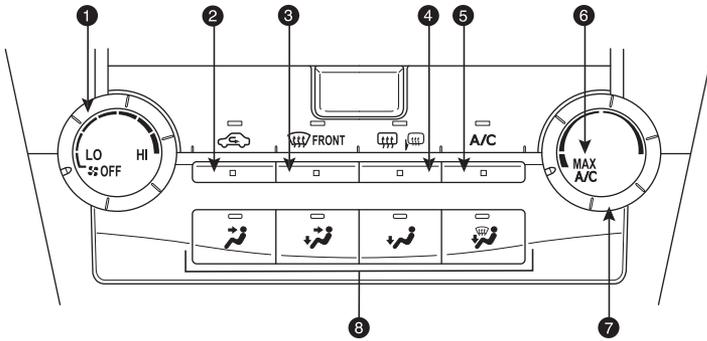

- ① Fan speed
- ② Fresh or recirculated cabin air
- ③ Windshield airflow/defogger
- ④ Outside rearview mirror*/Rear defogger
- ⑤ Air Conditioning ON/OFF
Use fresh air to quickly cool interior, then change to recirculate for cooler air.
- ⑥ Select for maximum cooling. Air intake will automatically be set to recirculate. It is not possible to change intake to fresh, or to turn A/C OFF in this mode.
- ⑦ Temperature selector
- ⑧ Airflow vent
In “” mode, use fresh air (“” indicator OFF) to reduce window fogging. “” mode uses fresh air only.

* If equipped

Seat heaters (if equipped)

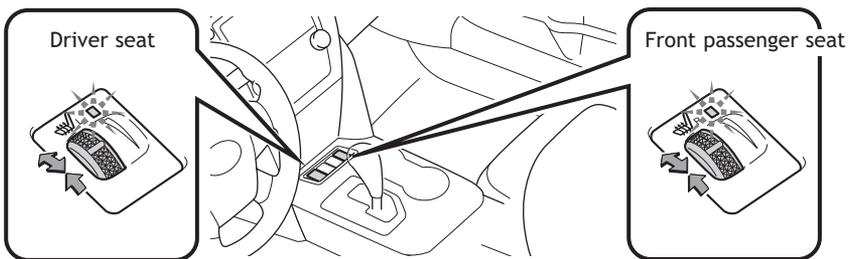

Audio

Type A

The diagram shows a control panel for a Type A audio system. At the top center is an "Eject CD" button. Below it is a "PWR VOL" knob on the left and a "TUNE SCROLL" knob on the right. The left side has a "TEXT" button, a "SEEK" button with a double-headed arrow, and a "TRACK" button with a CD icon. The right side has a "SCAN" button with a double-headed arrow, a "TYPE" button with a CD icon, and a "FOLDER" button with a CD icon. In the center, there are six numbered preset buttons (1-6) and a "MODE" button with a double-headed arrow. Below the preset buttons are "MEDIA" and "RADIO" buttons. A "SETUP" button is located at the top right. Labels with arrows point to these various controls.

Labels for Type A:

- Push to turn ON/OFF
- View CD text
- Seek station/ CD track select
- Eject CD
- Mode
- Preset buttons - functions in other modes indicated above number
- Turn to tune radio stations manually or select tracks or files
- Push to adjust tone & balance
- Station/CD track scan
- Push to skip up/down folder

Type B *1

The diagram shows a control panel for a Type B audio system. It features a central "Touch screen display" and an "Eject CD" button at the top center. On the left, there is a "PWR VOL" knob, an "AUDIO" button, a "SEEK" button with a double-headed arrow, and a "TRACK" button with a CD icon. On the right, there is a "TUNE SCROLL" knob and a "CAR" button. Below the "CAR" button is a callout box with two options: "*2" (Display Audio system) and "*3" (Premium Display Audio system). Labels with arrows point to these controls.

Labels for Type B:

- Push to turn ON/OFF
- Push to display audio screen
- Seek station/ CD track select
- Eject CD
- Touch screen display
- Turn to tune radio stations manually or select tracks or files

*1 Refer to the "Display Audio System Owner's Manual" for instructions and more information.
 *2 Display Audio system
 *3 Premium Display Audio system


CD player (Type A)

- To scan tracks on a disc Push and hold "SCAN." Push again to hold selection.
- To select a file (MP3/WMA only) Turn or "TUNE-SCROLL."
- To select a folder (MP3/WMA only) Push either side of "TYPE" or "FOLDER."

Radio (Type A)

- To preset stations Tune in the desired station and hold down a preset button until you hear a beep. Push desired preset button to select.
- To scan stations Push and hold "SCAN" to scan preset stations. Push again to hold selection.

iPod®/USB/AUX port

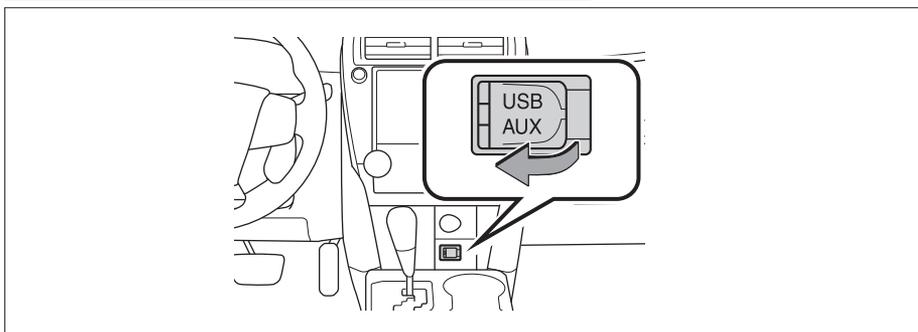


iPod®/USB port

By connecting a USB-compatible portable audio device or USB memory to the USB port, you can listen to music from the portable audio device or USB memory through the vehicle's speaker system.

AUX port

By inserting a mini plug into the AUX port, you can listen to music from a portable audio device through the vehicle's speaker system while in AUX mode.

Steering wheel switches (if equipped)

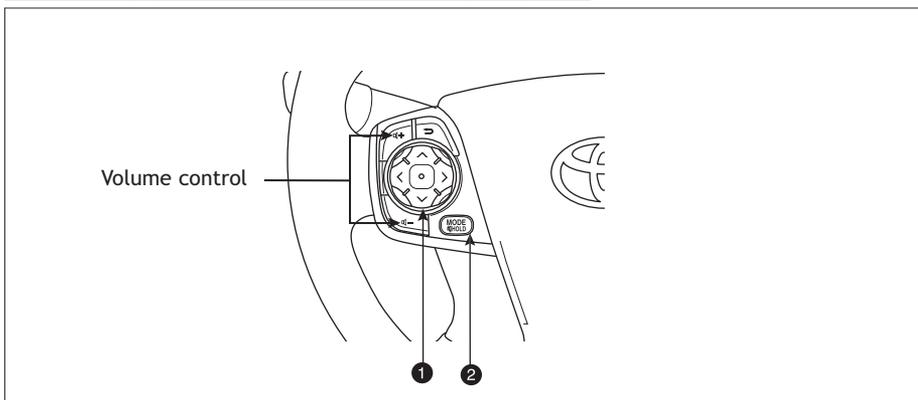

① “V Λ”


Use to search within the selected audio medium (radio, CD, iPod, etc.).

② “MODE”


Push to turn audio ON and select an audio mode. Push and hold to turn the audio system OFF.

Cup holders

Front

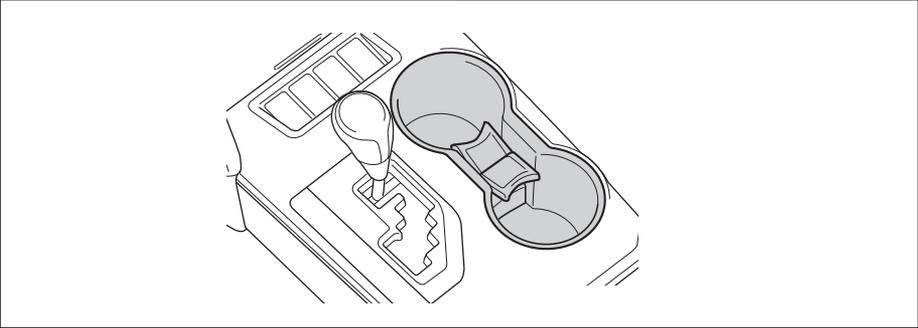


Rear (if equipped)

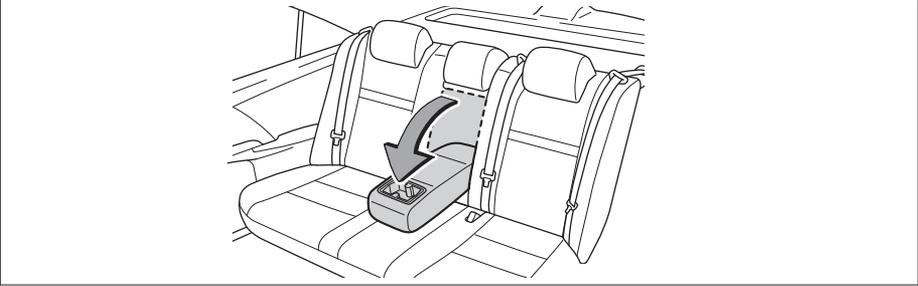


Bottle holders

Front door

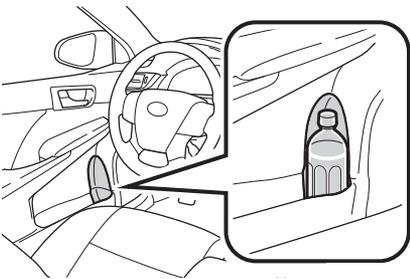


Rear door

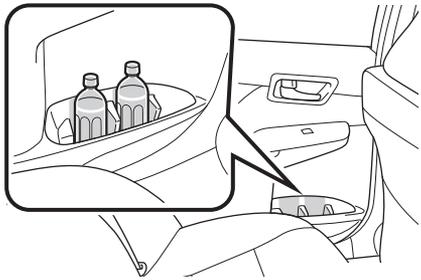


SAFETY AND EMERGENCY FEATURES

Door locks

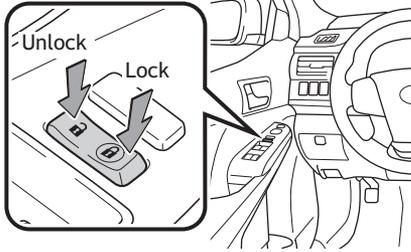


Doors-Child safety locks

Rear door

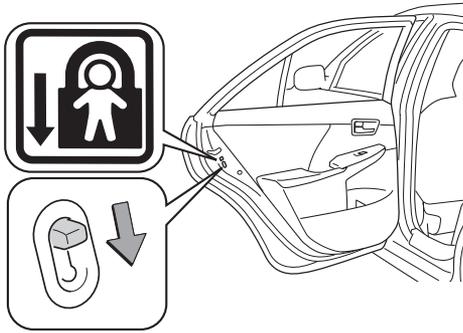

Moving the lever to “LOCK” will allow the door to be opened only from the outside.


Seat belts

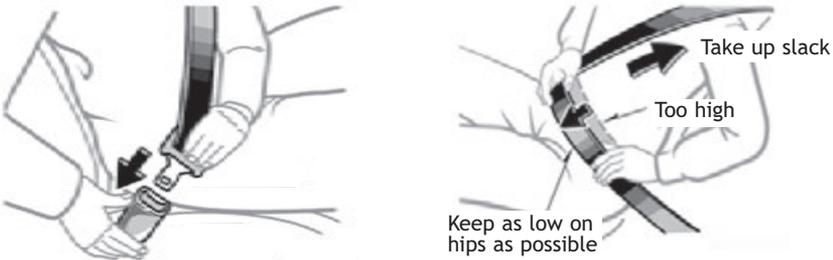

If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.


To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.

Seat belts-Shoulder belt anchor

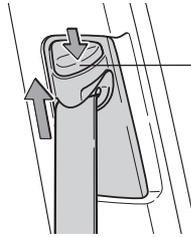

Push up, or squeeze lock release to lower

Tire Pressure Monitoring (warning) System

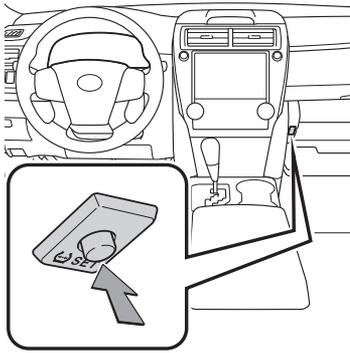

System reset initialization

1. Push and hold “SET” button until the indicator blinks three times.
2. Wait a few minutes to allow initialization to complete.

After adjusting tire pressures, or after tires have been rotated or replaced, turn the ignition switch to “ON” and press and hold the “SET” button until indicator blinks three times. Let the vehicle sit for a few minutes to allow initialization to complete.


Refer to the load label on the door jamb or the *Owner’s Manual* for tire inflation specifications.

If the tire pressure indicator flashes for more than 60 seconds and then remains on, take the vehicle to your local Toyota dealer.

NOTE: The warning light may come on due to temperature changes or changes in tire pressure from natural air leakage. If the system has not been initialized recently, setting the tire pressures to factory specifications should turn off the light.


Spare tire & tools

Tool location

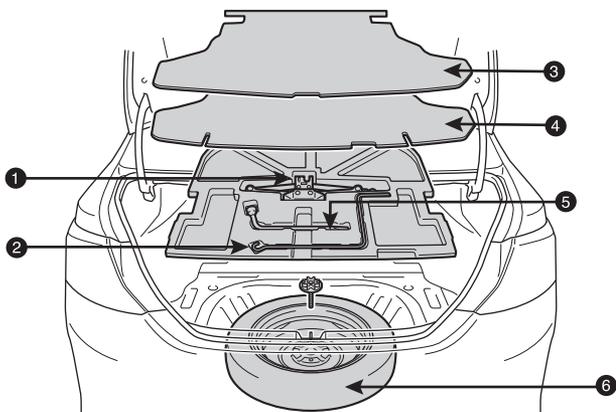

- ① Jack
- ② Jack handle
- ③ Luggage floor cover
- ④ Spare tire cover
- ⑤ Wheel nut wrench
- ⑥ Spare tire


Removing the spare tire

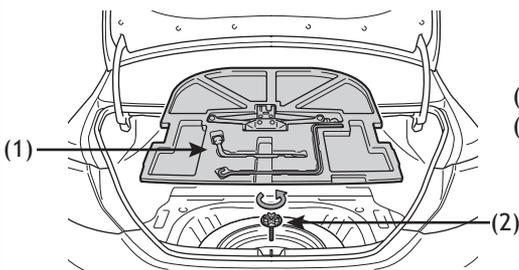

- (1) Remove the tool tray.
- (2) Loosen the center fastener that secures the spare tire.

Refer to the *Owner's Manual* for tire changing and jack positioning procedures.

Trunk-Internal release

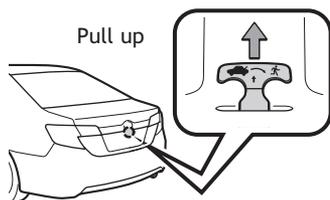

SAFETY AND EMERGENCY FEATURES

Star Safety System™

All new Toyota vehicles come standard with the Star Safety System™, which combines Vehicle Stability Control (VSC), Traction Control (TRAC), Anti-lock Braking System (ABS), Electronic Brake-force Distribution (EBD), Brake Assist (BA) and Smart Stop Technology (SST).

Vehicle Stability Control (VSC)

VSC helps prevent loss of traction during cornering by reducing engine power and applying brake force to selected wheels.

Toyota's VSC monitors steering angle and the direction your vehicle is traveling. When it senses that the front or rear wheels begin to lose traction, VSC reduces engine power and applies braking to selected wheels. This helps restore traction and vehicle control.

Traction Control (TRAC)

VSC helps prevent loss of traction during cornering by reducing engine power, and Traction Control helps maintain traction on loose gravel and wet, icy, or uneven surfaces by applying brake force to the spinning wheel(s).

Toyota's TRAC sensors are activated when one of the drive wheels starts to slip. TRAC limits engine output and applies the brakes to the spinning wheel. This transfers power to the wheels that still have traction to help you drive safely.

Anti-Lock Brake System (ABS)

ABS helps prevent brakes from locking up by "pulsing" brake pressure to each wheel. This limits brake lockup and provides the maximum brake effectiveness for the current road conditions.

Toyota's ABS sensors detect which wheels are locking up and limits wheel lockup by "pulsing" each wheel's brakes independently. Pulsing releases brake pressure repeatedly for fractions of a second. This helps the tires attain the maximum traction that the current road conditions will allow, helping you stay in control.

Electronic Brake Force Distribution (EBD)

Toyota's ABS technology has Electronic Brake-force Distribution (EBD) to help maintain stability and balance when braking. Abrupt stops cause the vehicle to tilt forward, reducing the braking power of the rear wheels. EBD responds to sudden stops by redistributing brake force to maximize the braking effectiveness of all four wheels.

Brake Assist (BA)

Brake Assist is designed to detect sudden or "panic" braking, and then add braking pressure to decrease the vehicle's stopping distance. When there's only a split second to react, Brake Assist can add additional brake pressure more quickly than just the driver alone can.

Smart Stop Technology (SST)

Smart Stop Technology automatically reduces engine power when the accelerator and brake pedals are pressed simultaneously under certain conditions.

SST engages when the accelerator is depressed first and the brakes are applied firmly for longer than one-half second at speeds greater than five miles per hour.

SST doesn't engage if the brake pedal is depressed before the accelerator pedal, allowing vehicles to start on a steep hill and safely accelerate without rolling backward.

Floor mat installation

There are two types of Toyota floor mats: carpeted and all-weather. Each vehicle has model-specific floor mats. Installation is easy.

For safety, follow these steps:

- Only use floor mats designed for your specific model.
- Use only one floor mat at a time, using the retaining hooks to keep the mat in place.
- Install floor mats right side up.



NOTES



TOYOTA Owners

toyota.com/owners

CUSTOMER EXPERIENCE CENTER

1-800-331-4331

