

PRIUS *c*
2 0 1 3

QUICK REFERENCE GUIDE

2013 Prius c

This *Quick Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Quick Reference Guide* is not intended as a substitute for the *Owner's Manual* located in your vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Prius c.

A word about safe vehicle operations

This *Quick Reference Guide* is not a full description of Prius c operations. Every Prius c owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Quick Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

INDEX

OVERVIEW

Engine maintenance	9
Fuel tank door release and cap	8
Hood release	8
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Keyless entry¹	6
Light control-Instrument panel	9
Smart Key system^{1,2}	7

FEATURES/OPERATIONS

Air Conditioning/Heating	16
Audio	18-19
Auto lock/unlock¹	11
Clock	22
Cruise control	20
EV-Drive Mode	21
Hill-start Assist Control (HAC)	23
Hybrid Synergy Drive System	10
Lights¹ & turn signals	15
Moonroof	17
Multi-Information Display²	22
Parking brake	20
Power outlets	19
Seat adjustments-Front	13
Seat heaters	17
Seat-Folding down rear seat	13
Seats-Head restraints	12
Steering wheel switches	19
Telephone controls (Bluetooth®)	23
Tilt and telescopic steering wheel	21
Transmission	11
Windows-Power	14
Windshield wipers & washers	14

SAFETY AND

EMERGENCY FEATURES

Doors-Child safety locks	25
Door locks	25
Floor mat installation	27
Seat belts	24
Spare tire & tools	25
Star Safety System™	26-27
Tire Pressure Monitoring (warning) System	24




¹ Visit your Toyota dealer for information on customizing this feature.

² Programmable by customer. Refer to the Owner's Manual for instructions and more information.


OVERVIEW

Instrument panel

Steering wheel controls

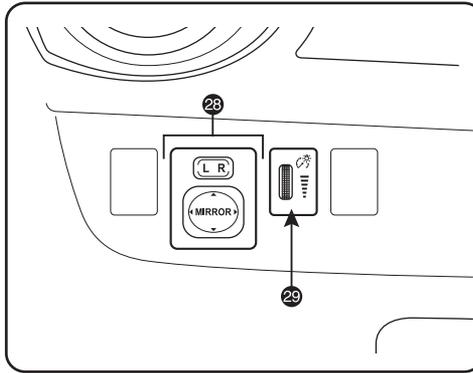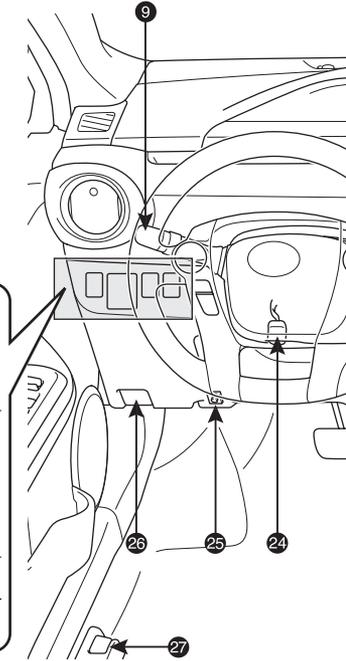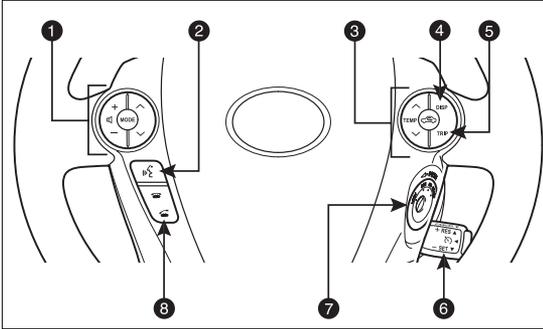

- 1 Steering wheel audio controls
- 2 Voice command button^{1,2}
- 3 Steering wheel climate controls
- 4 Multi-Information Display button
- 5 "TRIP" button
- 6 Cruise control¹
- 7 Ignition switch (standard key)¹
- 8 Telephone controls
- 9 Headlight and turn signal controls/Headlight, turn signal and front fog light controls¹
- 10 Power button (Smart Key)¹
- 11 Emergency flasher button
- 12 Multi-Information Display
- 13 Audio system or Display Audio system^{1,2}
- 14 USB/AUX port
- 15 Air Conditioning/Heating controls
- 16 Outside rearview mirror¹/Rear window defogger button
- 17 12V DC power outlet

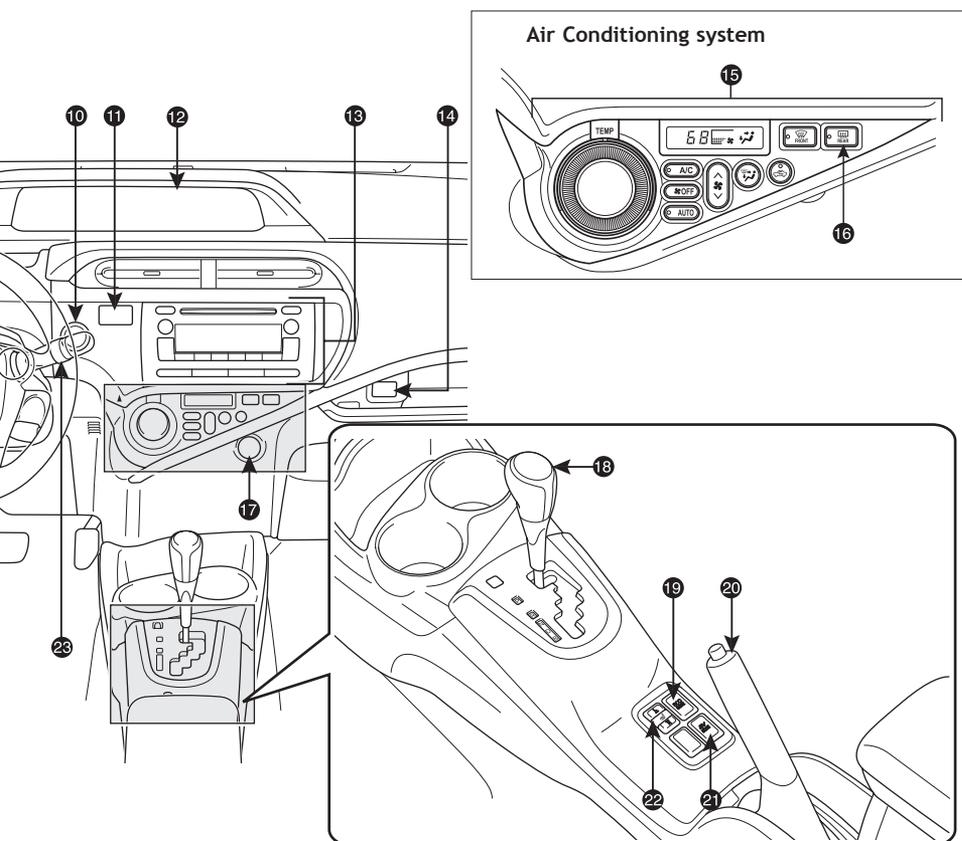


Air Conditioning system

- 18 Shift lever
- 19 “ECO MODE” switch
- 20 Parking brake
- 21 “EV” switch
- 22 Seat heater controls¹
- 23 Wiper and washer controls
- 24 Tilt and telescopic steering lock release lever
- 25 Tire Pressure Monitoring (warning) System reset
- 26 Hood lock release lever
- 27 Fuel filler door opener
- 28 Power rearview mirror controls
- 29 Instrument panel light control

¹ If equipped

² For vehicles with a Display Audio System, refer to the “*Display Audio System Owner’s Manual.*”

Instrument cluster

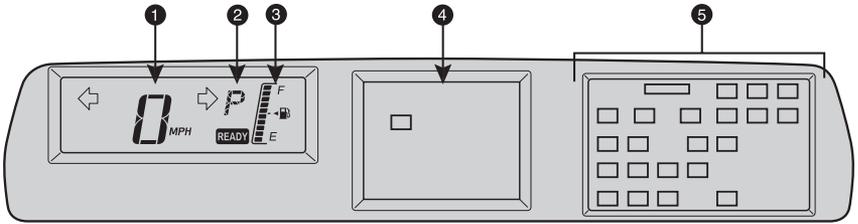

- 1 Speedometer
- 2 Transmission shift position indicator
- 3 Fuel gauge
- 4 Multi-information display
- 5 Service indicators and reminders

Indicator symbols

For details, refer to “Indicators and warning lights,” Section 2-2, 2013 Owner’s Manual.

-  BRAKE Brake system warning¹
-  Brake system warning light (yellow indicator)¹
-  Driver seat belt reminder
(alarm will sound if speed is over 12 mph)
-  Charging system warning¹
-  Malfunction/Check Engine indicator¹
-  Low fuel level warning
-  Airbag SRS warning¹
-  Master warning¹
-  Low Tire Pressure Warning¹
-  Electric power steering system warning¹
-  Immobilizer system indicator

¹ If indicator does not turn off within a few seconds of starting Hybrid System, there may be a malfunction. Have vehicle inspected by your Toyota dealer.

		Headlight low/high beam indicator
		Turn signal indicator
		READY indicator
		EV Drive Mode indicator
		Eco Mode indicator
		EV drive indicator
		Front fog light indicator
		Slip indicator/Hill-start Assist Control indicator ¹
		Cruise control indicator ²
		Anti-lock Brake System warning ¹

² If this light flashes, refer to “Cruise control,” Section 2-4, 2013 Owner’s Manual.

Keyless entry

Locking operation

Type A



Type B



Push 


Detailed description: This diagram illustrates the locking operation for two types of key fobs. On the left, 'Type A' is a standard oval-shaped fob with a lock button (closed padlock icon) and an unlock button (open padlock icon). An arrow points to the lock button. On the right, 'Type B' is a more rectangular fob with a lock button (closed padlock icon) and an unlock button (open padlock icon). An arrow points to the lock button. To the right of the diagrams, the text 'Push' is followed by a small square icon containing a closed padlock symbol.

Unlocking operation

Type A



Type B

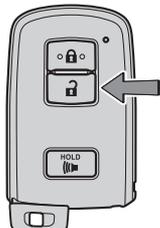

Push ONCE: Driver door
TWICE: All doors 

Detailed description: This diagram illustrates the unlocking operation for two types of key fobs. On the left, 'Type A' is a standard oval-shaped fob with a lock button (closed padlock icon) and an unlock button (open padlock icon). An arrow points to the unlock button. On the right, 'Type B' is a more rectangular fob with a lock button (closed padlock icon) and an unlock button (open padlock icon). An arrow points to the unlock button. To the right of the diagrams, the text 'Push ONCE: Driver door' and 'TWICE: All doors' is displayed above a small square icon containing an open padlock symbol.

NOTE: If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.

Panic button




Push and hold 

Detailed description: This diagram illustrates the panic button function. It shows a car with lightning bolts striking it and sound waves emanating from it, with a silhouette of a person inside. Below the car are two key fobs, one of which has a 'Panic' button. To the right of the diagrams, the text 'Push and hold' is followed by a small square icon containing a button with the word 'HOLD' and a right-pointing arrow.

Smart Key system (if equipped)

Start function

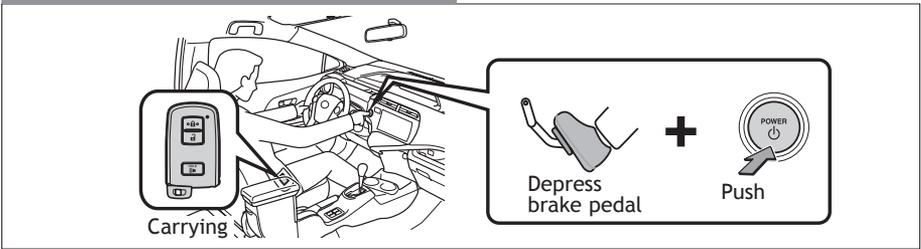


Power (without starting Hybrid System)


Without depressing the brake pedal, pressing the “POWER” switch will change the operation mode in succession from:

- ACCESSORY** Accessories such as the radio will operate.
- ON** Power ON; Hybrid System is not engaged.
- OFF** All systems OFF.


Locking operation (if equipped)

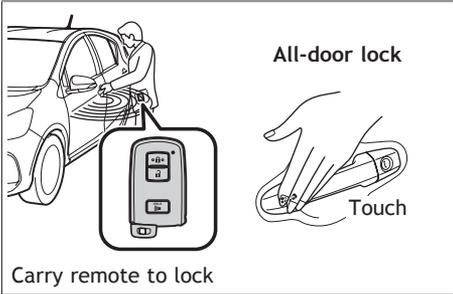

Unlocking operation (if equipped)

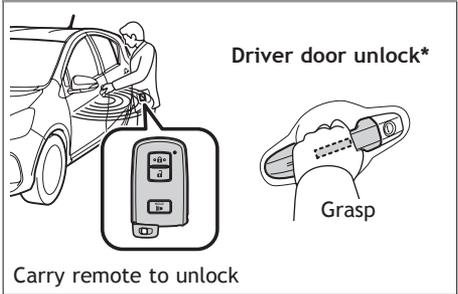




Back door lock/unlock (if equipped)

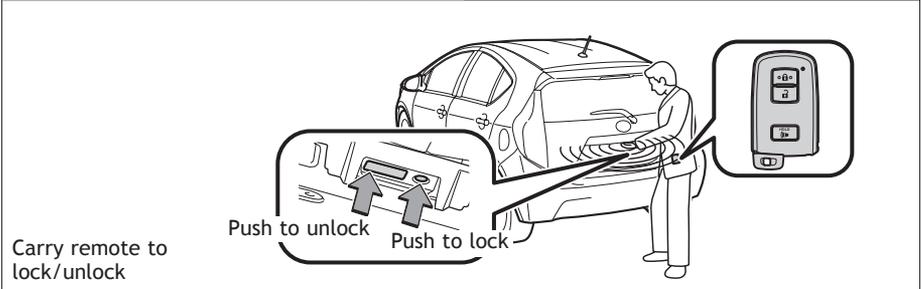

* Driver door unlocking function can be programmed to unlock driver door only, or all doors. Grasping passenger door handle will unlock all doors.




NOTE: Doors may also be locked/unlocked using remote.

Fuel tank door release and cap

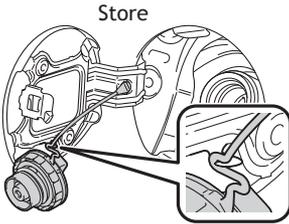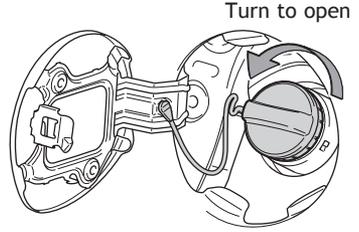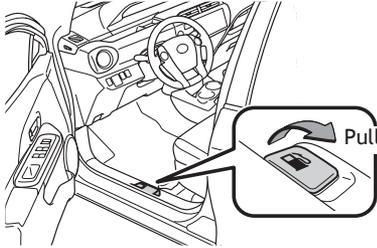


NOTE: Tighten until one click is heard. If the cap is not tightened enough, Check Engine “” indicator may illuminate.


Hood release

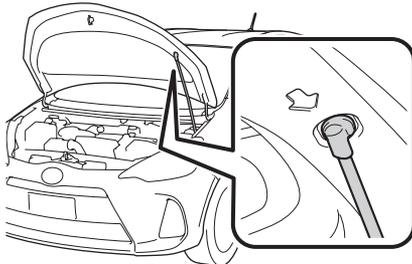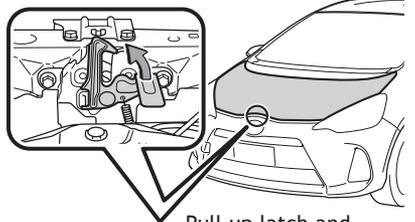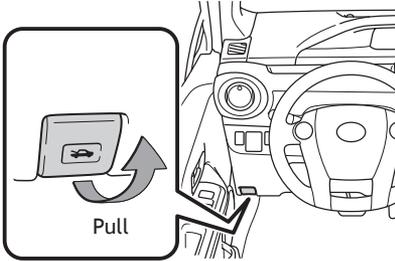

Light control-Instrument panel

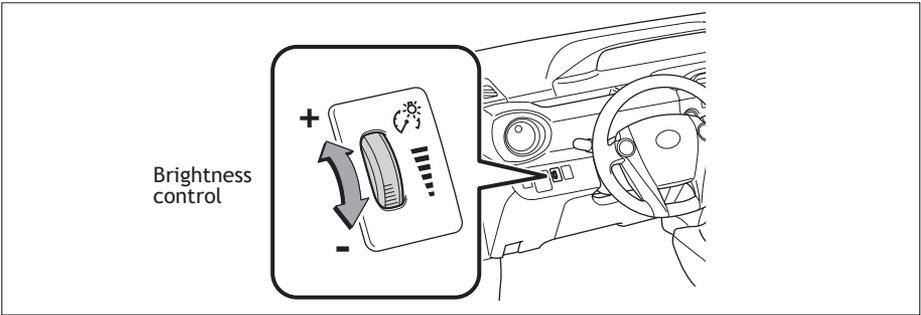

Engine maintenance

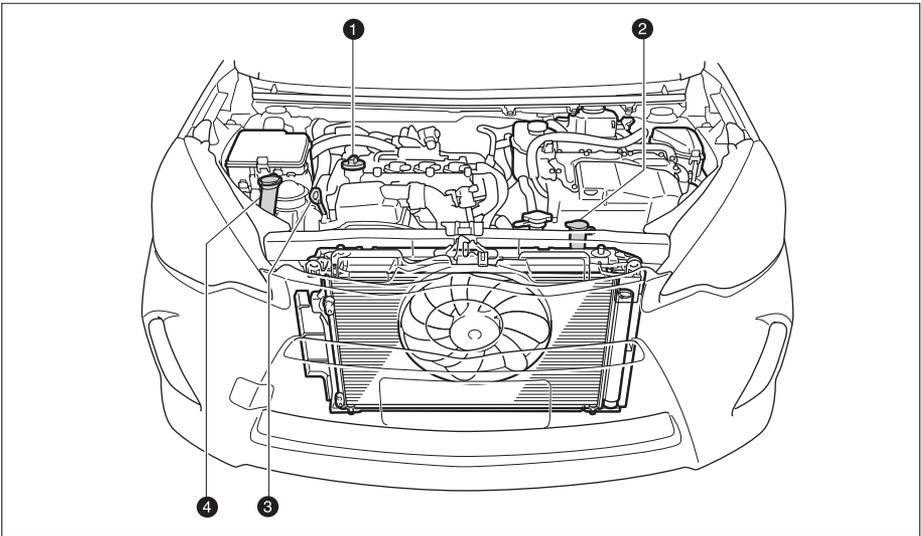

- ① Engine oil filler cap
- ② Engine coolant reservoir
- ③ Engine oil level dipstick
- ④ Windshield washer fluid tank

NOTE: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the “Warranty Maintenance Guide.”

FEATURES/OPERATIONS

Hybrid Synergy Drive System


The Hybrid Synergy Drive System utilizes a computer-controlled gasoline engine and electric motor to provide the most efficient combination of power for the vehicle. To conserve energy, when the brakes are applied the braking force generates electricity which is then sent to the traction battery. In addition, the engine shuts off when the vehicle is stopped. The benefits are better fuel economy, reduced vehicle emissions and improved performance.

NOTE: *Fuel consumption and energy information of the Hybrid System are shown on the multi-information display or the Display Audio System.*

Tips for improved fuel economy


- Ensure tire pressures are maintained at levels specified in the *Owner's Manual*.
- When possible, link trips to reduce engine cold starts.
- Avoid driving at speeds that are higher than necessary, especially on the highway.
- When possible, avoid sudden stops to maximize regenerative braking energy.
- Minimize use of the Air Conditioning.

Starting the Hybrid System

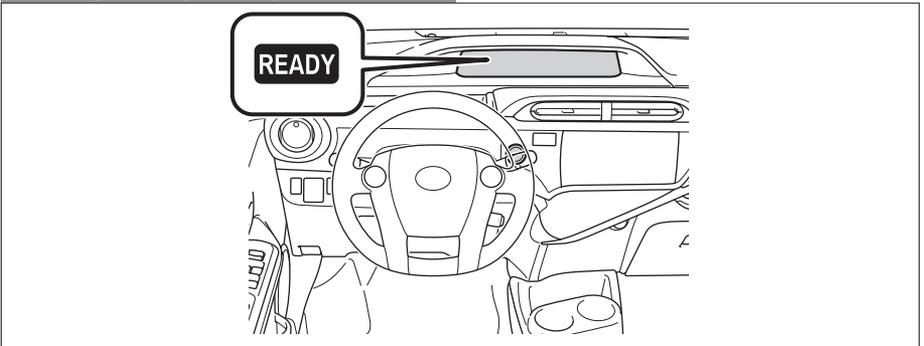

- (1) Put the selector lever in "P."
- (2) **Vehicles with Smart Key system:**
Depress the brake pedal, and press the "POWER" switch briefly and firmly.
Vehicles without Smart Key system:
Depress the brake pedal, and turn the key to the "START" position.
- (3) The "READY" light will blink. After a few seconds, when the light remains steady and a beep sounds, you may begin driving.

Transmission

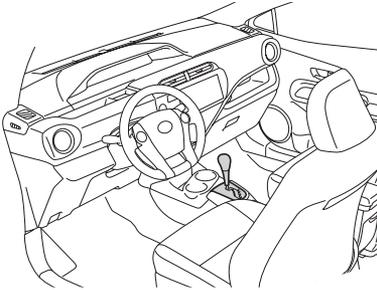


P	Park ¹
R	Reverse
N	Neutral
D	Drive
B	Engine brake ²

¹ The “POWER”/ignition switch must be “ON” and the brake pedal depressed to shift from Park.

² The engine brake is the equivalent of downshifting. Shift to “B” when engine braking is desired (e.g. downhill driving, coasting to a stop).

Eco Mode

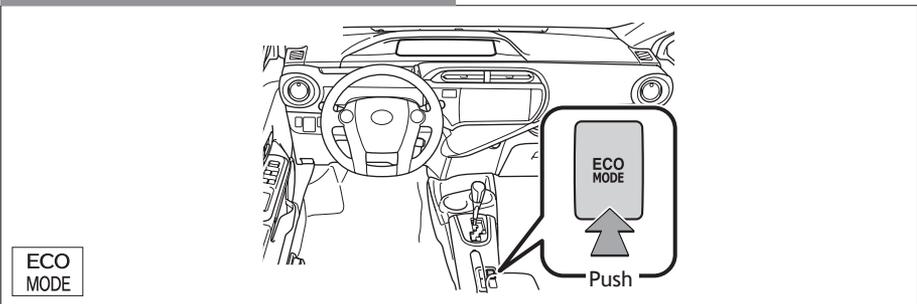

Eco Mode helps achieve low fuel consumption during trips that involve frequent accelerating and braking.

Refer to the *Owner’s Manual* for more details.

Auto lock/unlock

Automatic door locks can be programmed to operate in two different modes, or turned OFF.

- Doors lock when shifting from Park.
- Doors lock when the vehicle speed is approximately 12 mph or higher.
- Doors unlock when shifting into Park.

Vehicles without Smart Key system

-Doors unlock when the ignition switch is set from “ON” to “ACC” or “LOCK” and driver’s door is opened.


Vehicles with Smart Key system

-Doors unlock when the “POWER” switch is set to OFF and driver’s door is opened.


Refer to the *Owner’s Manual* for more details.

Seats-Head restraints


Front (adjustable type)/Rear center

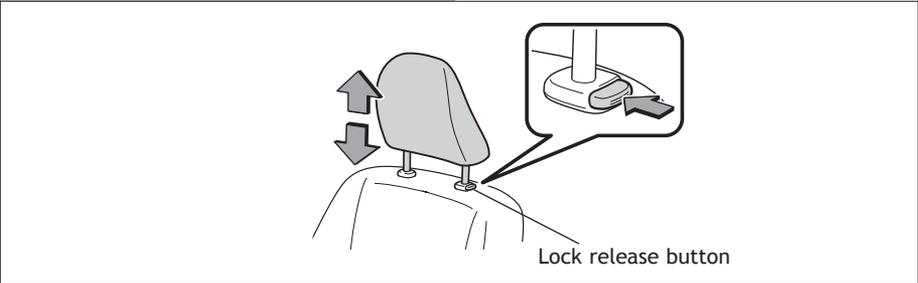

Rear outboard

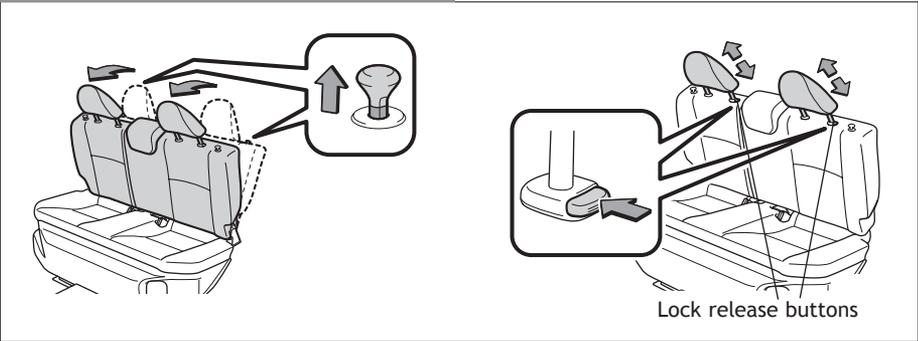


Seat adjustments-Front

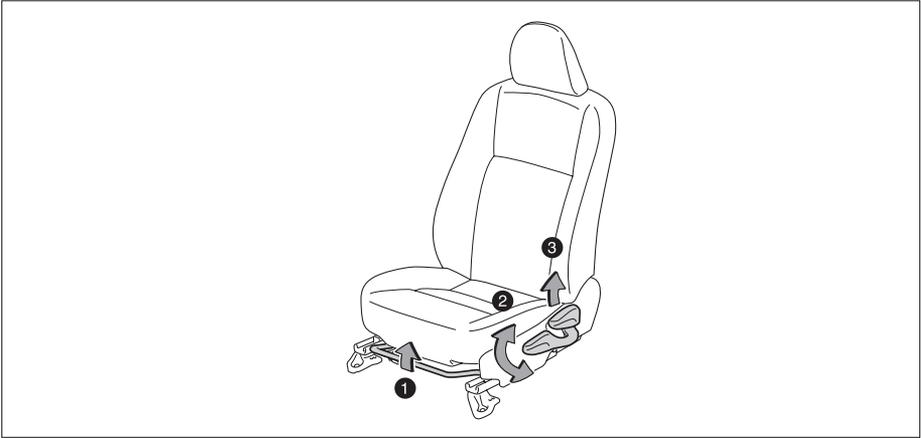


- ① Seat position (forward/backward)
- ② Height crank (driver side; if equipped)
- ③ Seatback angle

Seat-Folding down rear seat

Split rear seats

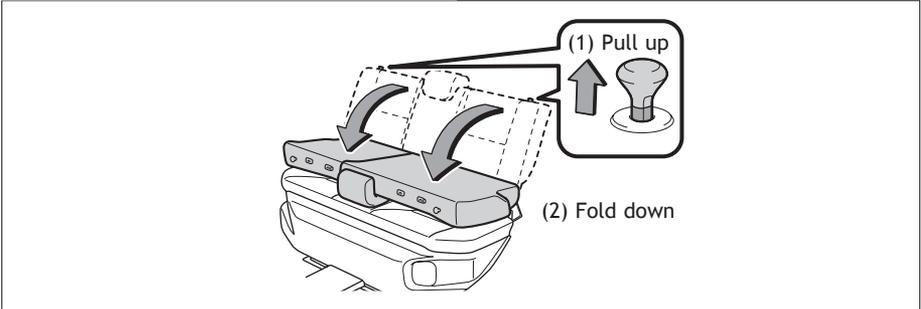


Non-split rear seat

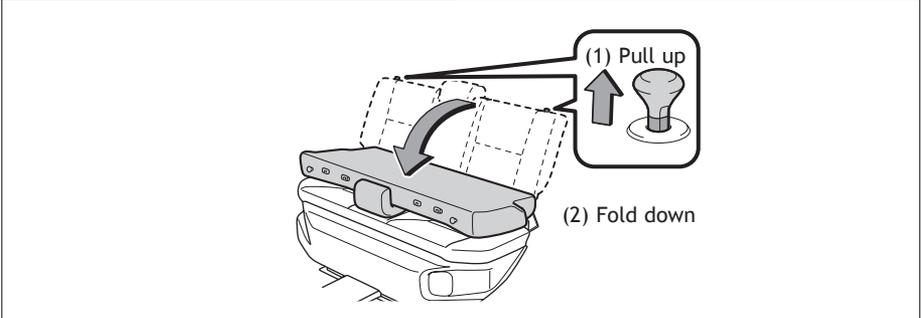


Windows-Power

Driver side

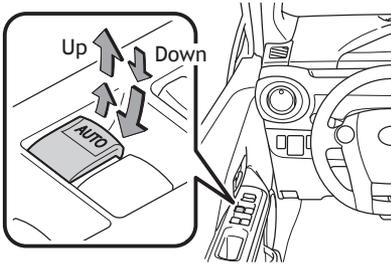

Window lock switch

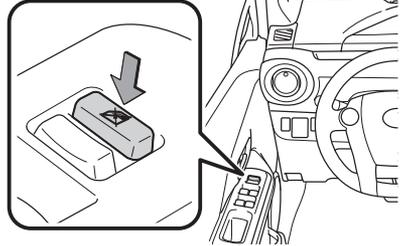


Automatic operation (driver side only) Push the switch completely down or pull it completely up and release to fully open or close. To stop the window partway, operate the switch in the opposite direction.


Window lock switch Deactivates all passenger windows. Driver's window remains operable.

Windshield wipers & washers


Front

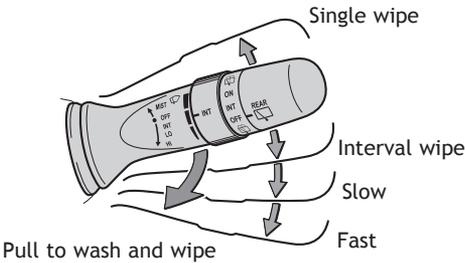

Intermittent windshield wiper frequency (if equipped)

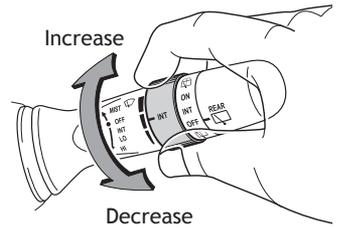


Rear (if equipped)

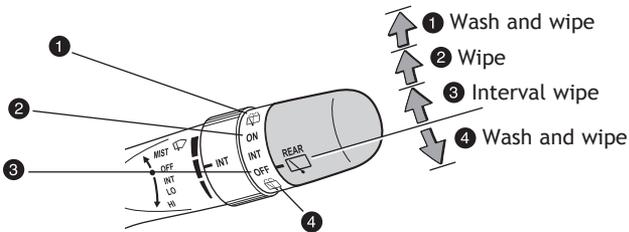


Lights & turn signals

Headlights

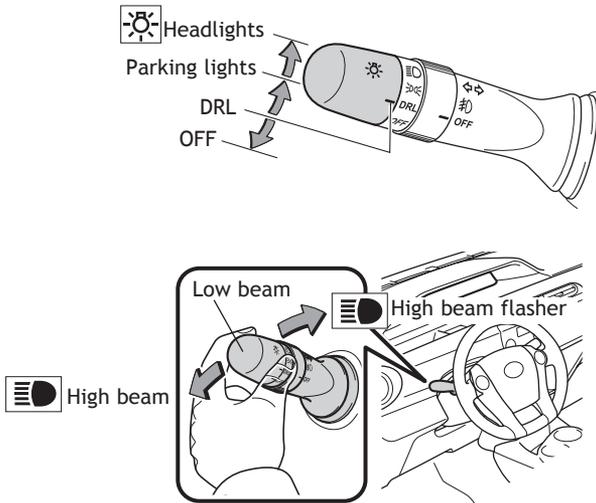


Daytime Running Light system (DRL) Automatically turns on the headlights at a reduced intensity.

Front fog lights (if equipped)

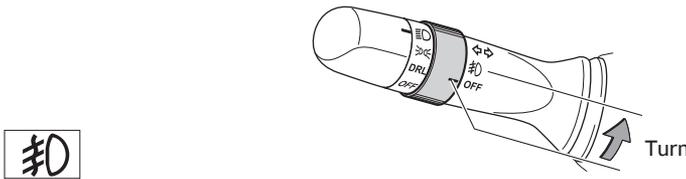


Front fog lights come on only when the headlights are on low beam.

Turn signals

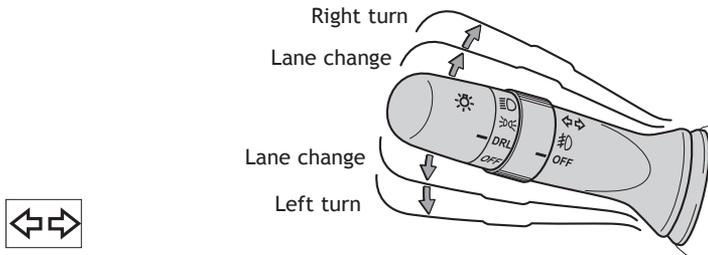

Air Conditioning/Heating

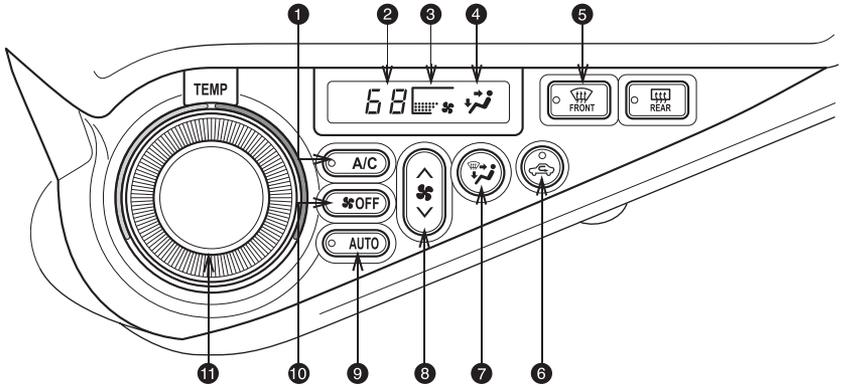

- ① Air Conditioning ON/OFF
- ② Temperature setting display
- ③ Fan speed display
- ④ Air outlet display
- ⑤ Windshield defogger
- ⑥ Recirculate cabin air (fresh air when OFF)
- ⑦ Airflow vent
In “” mode, use fresh air (“” indicator OFF) to reduce window fogging.
- ⑧ Fan speed control
- ⑨ Automatic climate control ON
Adjusting the temperature setting will cause the airflow vents, air intake and fan to adjust automatically.
- ⑩ Climate control OFF
- ⑪ Temperature selector

Moonroof (if equipped)

Sliding operation

Push once to open partway; again to open completely.

Recommended open position to minimize wind noise.

Tilting operation

Push once to open; moonroof will automatically stop at the recommended position. Push again to open completely.

Seat heaters (if equipped)

Driver seat

Front passenger seat

Audio

Type 1

Eject CD

Preset buttons - functions in other modes indicated above button

Push to turn ON/OFF

Seek station/ CD track select

Station/ CD track select

Mode

View CD text

Push and turn to adjust tone & balance

Type 2*

Eject CD

Touch screen display

Seek station/ CD track select

Push to turn ON/OFF

Push to display audio screen

Turn to tune radio stations manually or select tracks or files

Premium Display Audio system

* Refer to the “Display Audio System Owner’s Manual” for instructions and more information.

CD player (Type 1)

To scan tracks on a disc Push “SCAN.” Push again to hold selection.

To select a file (MP3/WMA only) Turn “TUNE·SCROLL.”


To select a folder (MP3/WMA only) Push “ ◻ ” (<) or “ ◻ ” (>).

Radio (Type 1)

To preset stations Tune in the desired station and hold down a preset button until you hear a beep. Push desired preset button to select.

To scan stations Push and hold “SCAN” to scan preset stations. Push again to hold selection.

iPod®/USB/AUX port

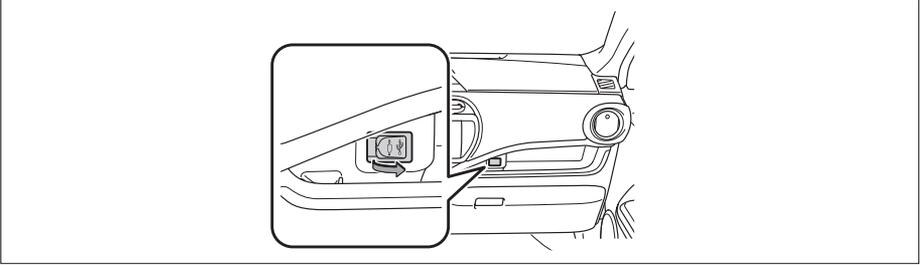


iPod®/USB port

By connecting a USB-compatible portable audio device or USB memory to the USB port, you can listen to music from the portable audio device or USB memory through the vehicle's speaker system.

AUX port


By inserting a mini plug into the AUX port, you can listen to music from a portable audio device through the vehicle's speaker system while in AUX mode.

Power outlets

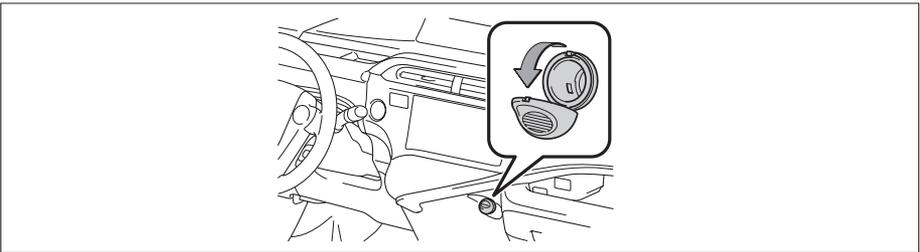

The "POWER"/ignition switch must be set at the "ACC" or "ON" position for use.

Steering wheel switches

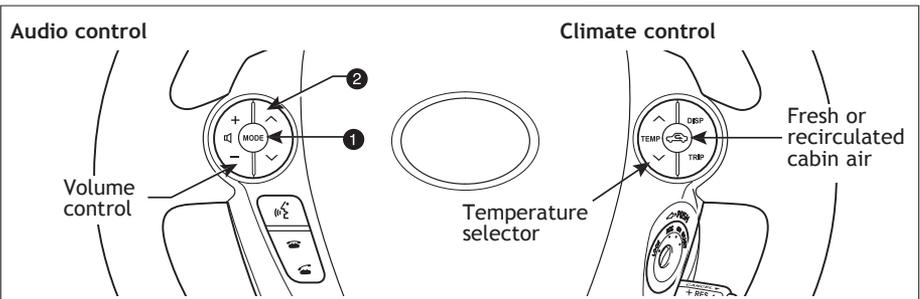

1 "MODE"


Push to turn audio ON and select an audio mode. Push and hold to turn the audio system OFF.

2 "V A"


Use to search within the selected audio medium (radio, CD, iPod®, etc.).

Cruise control (if equipped)

Turning system ON/OFF

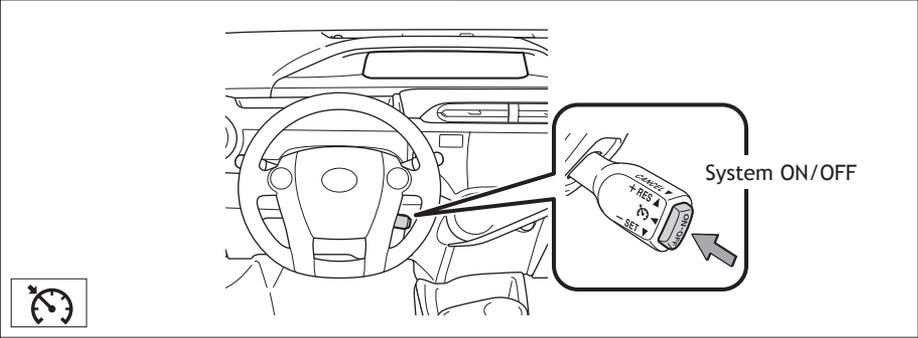


Functions

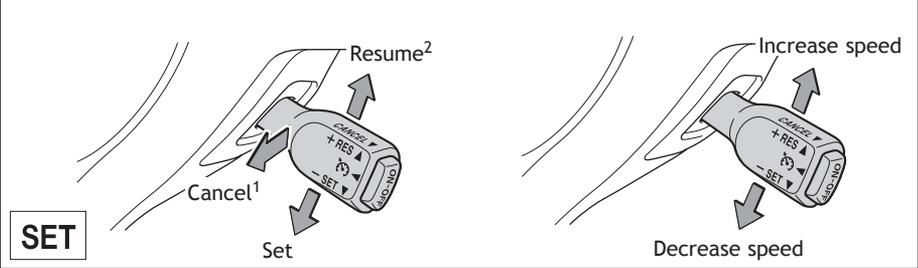


¹ The set speed may also be cancelled by depressing the brake pedal.
² The set speed may be resumed once vehicle speed exceeds 25 mph.

Parking brake

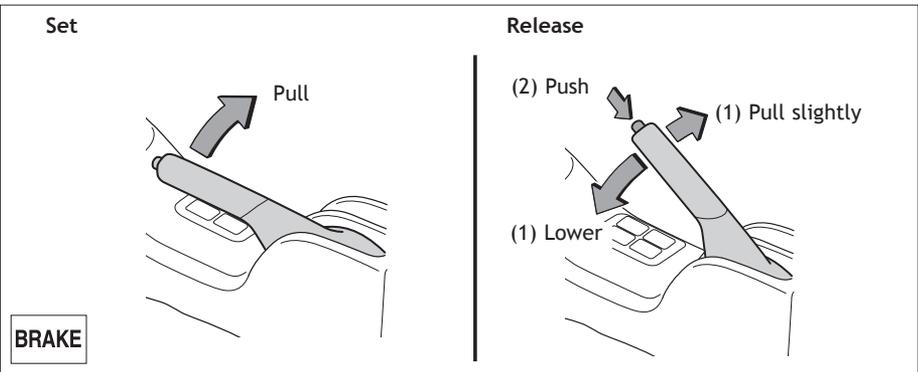


EV-Drive Mode

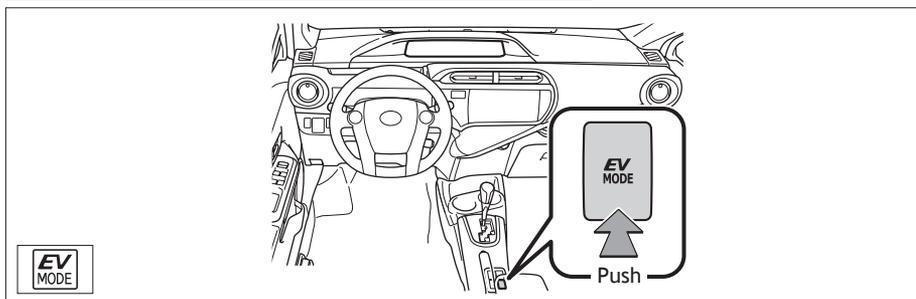

EV-Drive Mode allows the electric motor (traction motor), powered by the hybrid battery (traction battery), to be used to drive the vehicle under certain driving conditions.

Refer to the *Owner's Manual* for more details.


Tilt and telescopic steering wheel

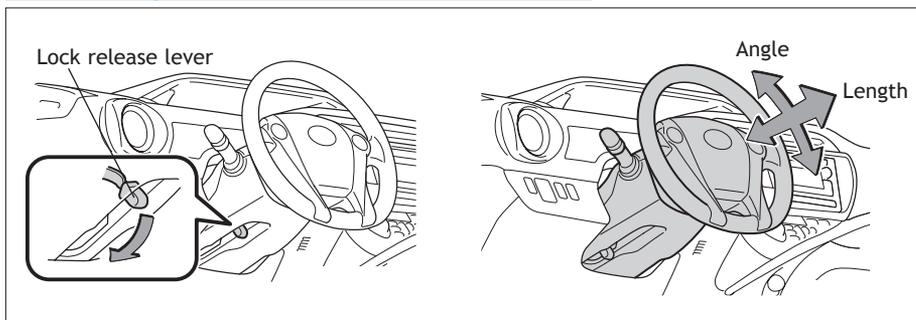

Hold wheel, push lever down, set angle and length, and return lever.

NOTE: Do not attempt to adjust while the vehicle is in motion.

Multi-Information Display

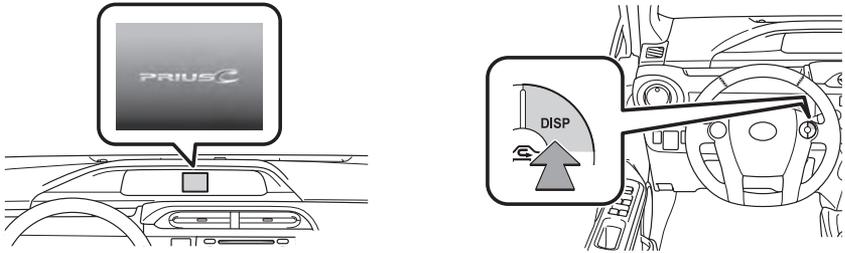


Push “DISP” to scroll through the following information screens:

- (1) Energy Monitor
- (2) Drive Information
- (3) ECO Score
- (4) 5min Consumption*
- (5) ECO Savings
- (6) ECO Savings Record*
- (7) Past Record*
- (8) Settings & Screen Off

* Factory default is OFF. To activate, access settings through “Settings & Screen Off.”

After reaching the desired menu screen (1-7), wait for a moment and the details screen will appear. However, to display the details of “Settings & Screen Off” (8), push and hold the “DISP” button while on that menu screen.


Clock

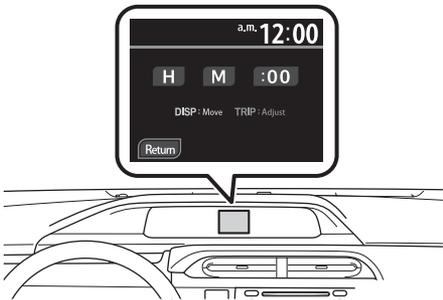


Refer to the *Owner’s Manual* for details on adjusting time.

Telephone controls (Bluetooth®)


Microphone (Type A)

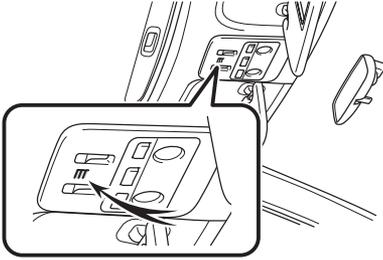


Microphone (Type B)

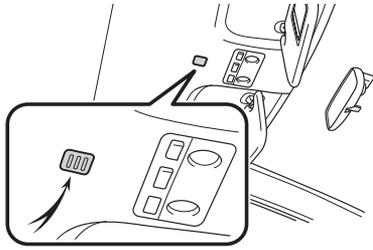

Audio unit

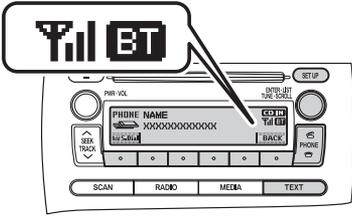



Steering wheel telephone switches

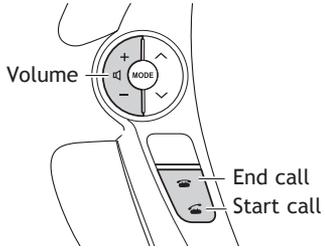

Bluetooth® technology allows dialing or receipt of calls without taking hands from the steering wheel or using a cable to connect the telephone and the system.

Refer to “Bluetooth® audio/phone,” Section 3-3 in the *Owner’s Manual*, for more information about phone connections and compatibility.

Hill-start Assist Control (HAC)

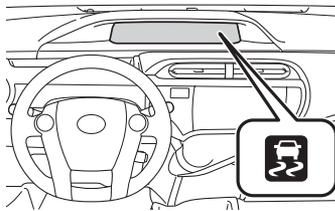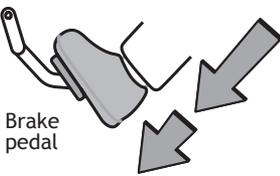


HAC helps prevent rolling backwards on an incline. To engage, push further down on brake pedal while at a complete stop until a beep sounds and slip indicator illuminates. HAC holds for approximately two seconds after releasing brake pedal.

Refer to the *Owner’s Manual* for more details.

SAFETY AND EMERGENCY FEATURES


Seat belts

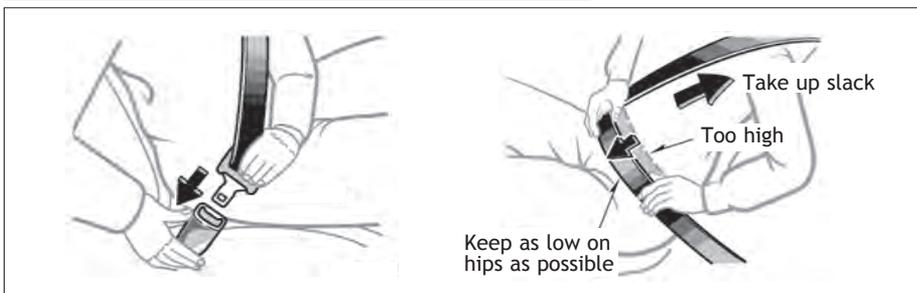

If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.

Tire Pressure Monitoring (warning) System

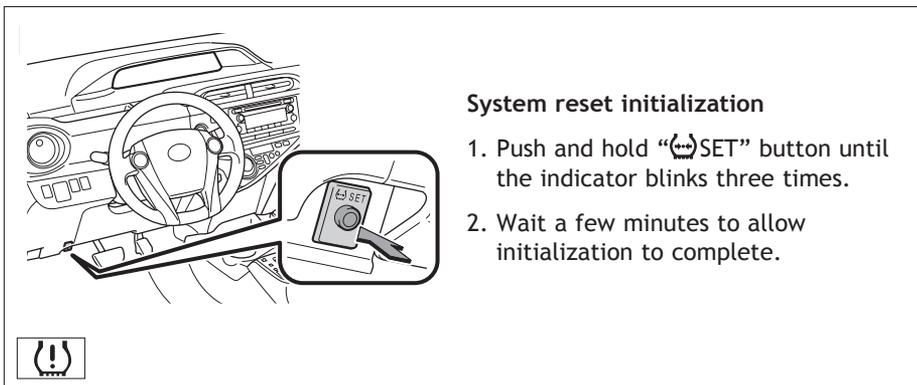

System reset initialization

1. Push and hold “SET” button until the indicator blinks three times.
2. Wait a few minutes to allow initialization to complete.


After adjusting tire pressures, or after tires have been rotated or replaced, turn the “POWER”/ignition switch “ON” and press and hold the “SET” button until indicator blinks three times. Let the vehicle sit for a few minutes to allow initialization to complete.

Refer to the load label on the door jamb or the *Owner's Manual* for tire inflation specifications.


If the tire pressure indicator flashes for more than 60 seconds and then remains on, take the vehicle to your local Toyota dealer.

NOTE: The warning light may come on due to temperature changes or changes in tire pressure from natural air leakage. If the system has not been initialized recently, setting the tire pressures to factory specifications should turn off the light.

Door locks

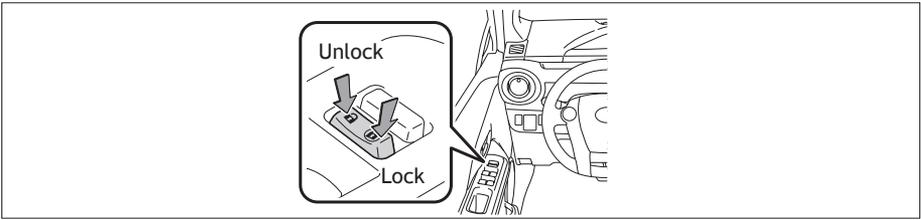


Doors-Child safety locks

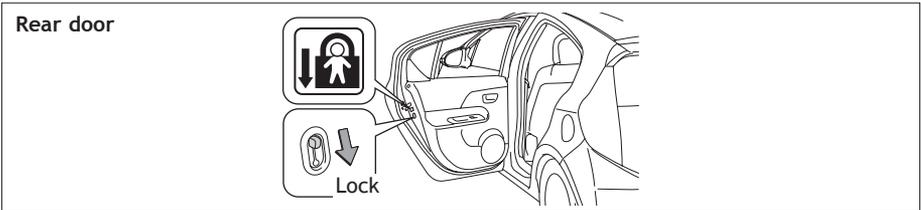


Moving the lever to the lock position will allow the door to be opened only from the outside.

Spare tire & tools

Tool location

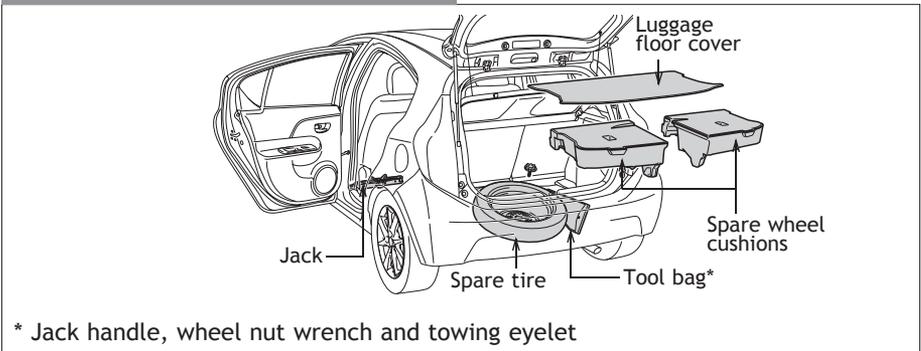

Removing the spare tire

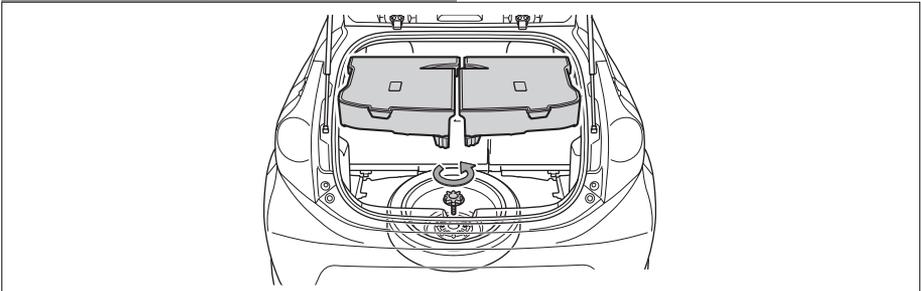

Refer to the *Owner's Manual* for tire changing and jack positioning procedures.

SAFETY AND EMERGENCY FEATURES

Star Safety System™

All new Toyota vehicles come standard with the Star Safety System™, which combines Vehicle Stability Control (VSC), Traction Control (TRAC), Anti-lock Braking System (ABS), Electronic Brake-force Distribution (EBD), Brake Assist (BA) and Smart Stop Technology (SST).

Vehicle Stability Control (VSC)

VSC helps prevent loss of traction during cornering by reducing Hybrid System output and applying brake force to selected wheels.

Toyota's VSC monitors steering angle and the direction your vehicle is traveling. When it senses that the front or rear wheels begin to lose traction, VSC reduces Hybrid System output and applies braking to selected wheels. This helps restore traction and vehicle control.

Traction Control (TRAC)

VSC helps prevent loss of traction during cornering by reducing Hybrid System output, and Traction Control helps maintain traction on loose gravel and wet, icy, or uneven surfaces by applying brake force to the spinning wheel(s).

Toyota's TRAC sensors are activated when one of the drive wheels starts to slip. TRAC limits Hybrid System output and applies the brakes to the spinning wheel. This transfers power to the wheels that still have traction to help keep you on track.

Anti-Lock Brake System (ABS)

ABS helps prevent brakes from locking up by "pulsing" brake pressure to each wheel. This limits brake lockup and helps provide directional control for the current road conditions.

Toyota's ABS sensors detect which wheels are locking up and limits wheel lockup by "pulsing" each wheel's brakes independently. Pulsing releases brake pressure repeatedly for fractions of a second. This helps the tires attain the traction that current road conditions will allow, helping you to stay in directional control.

Electronic Brake Force Distribution (EBD)

Toyota's ABS technology has Electronic Brake-force Distribution (EBD) to help maintain control and balance when braking. Abrupt stops can cause a vehicle to tilt forward, reducing the braking power of the rear wheels. EBD responds to sudden stops by redistributing brake force to enhance the braking effectiveness of all four wheels.

Brake Assist (BA)

Brake Assist is designed to detect sudden or "panic" braking, and then add braking pressure to help decrease the vehicle's stopping distance. When there's only a split second to react, Brake Assist can add additional brake pressure more quickly than just the driver alone can.

Smart Stop Technology (SST)


Smart Stop Technology automatically reduces driving torque when the accelerator and brake pedals are pressed simultaneously under certain conditions.

Floor mat installation

There are two types of Toyota floor mats: carpeted and all-weather. Each vehicle has model-specific floor mats. Installation is easy.

To keep your floor mat properly positioned, follow these steps:

- Only use floor mats designed for your specific model.
- Use only one floor mat at a time, using the retaining hooks to keep the mat in place.
- Install floor mats right side up.

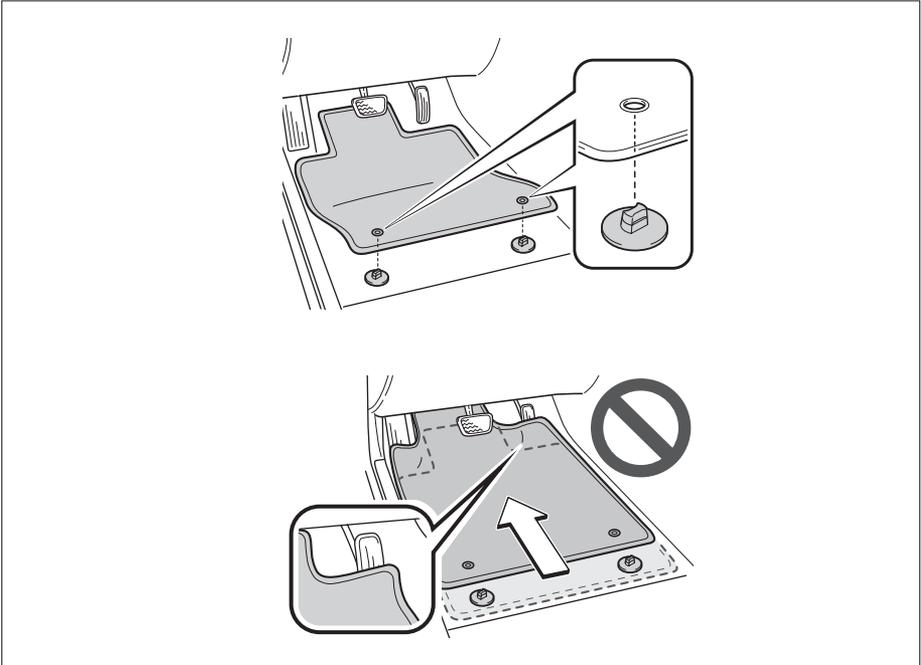

NOTES



TOYOTA Owners

toyota.com/owners

CUSTOMER EXPERIENCE CENTER

1-800-331-4331

