

2014 Tundra
Quick Reference Guide

2014 Tundra

This *Quick Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Quick Reference Guide* is not intended as a substitute for the *Owner's Manual* located in your vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Tundra.

A word about safe vehicle operations

This *Quick Reference Guide* is not a full description of Tundra operations. Every Tundra owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Quick Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

INDEX

OVERVIEW

Engine maintenance	8
Fuel tank door release and cap	7
Hood release	7
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Keyless entry¹	6
Light control-Instrument panel	6

FEATURES/OPERATIONS

Air Conditioning/Heating	20-21
Audio	22-23
Automatic Transmission	9
Bottle holders	28
Blind Spot Monitor (BSM) with Rear Cross Traffic Alert	27
Cruise control	27
Cup holders	29
Door locks	11
Entune™ Audio Plus	24
Four-wheel drive	10
Garage door opener (HomeLink®) ³	21
Lights¹ & turn signals	16
Mirrors-Power side view	10
Moonroof	12
Multi-Information Display²	26
Parking brake	18
Power outlets-12V DC	17
Rear seats-Folding	14
Seat adjustments-Front	13
Seat heaters and ventilators	19
Seats-Head restraints	14
Telephone controls (Bluetooth®)	28
Tilt and telescopic steering wheel	11
TOW/HAUL switch	11
Traffic	25
VSC OFF switch	26
Weather	25
Window-Rear	19
Windows-Power	18
Windshield wipers & washers	15

SAFETY AND

EMERGENCY FEATURES




Doors-Child safety locks	31
Floor mat installation	33
Seat belts	30
Seat belts-Shoulder belt anchor	30
Spare tire & tools	31
Star Safety System™	32-33
Tire Pressure Monitoring (warning) System	30

¹ Visit your Toyota dealer for information on customizing this feature.

² Programmable by customer. Refer to the *Owner's Manual* for instructions and more information.

³ HomeLink® is a registered trademark of Johnson Controls, Inc.

OVERVIEW

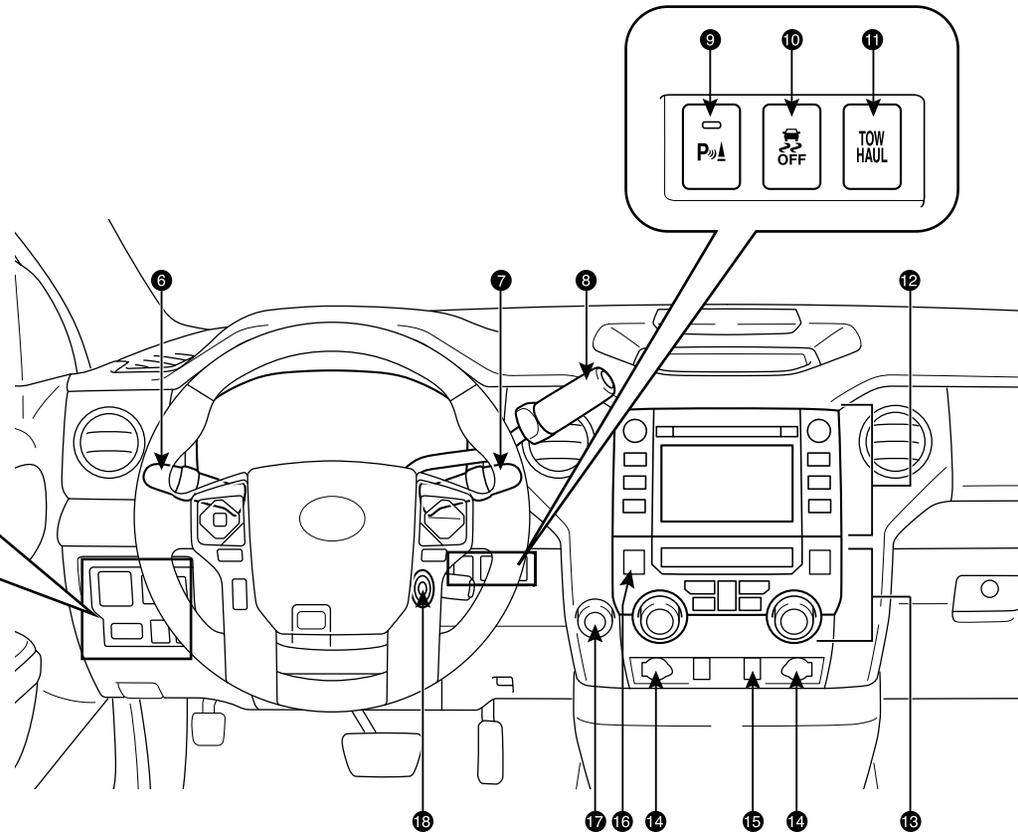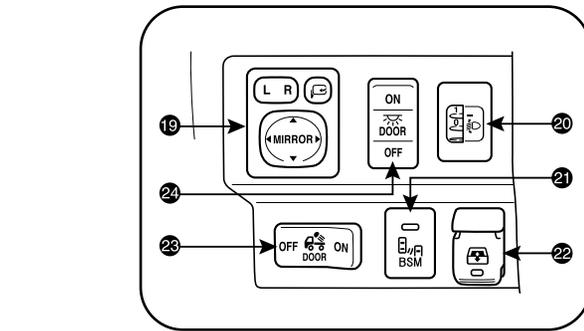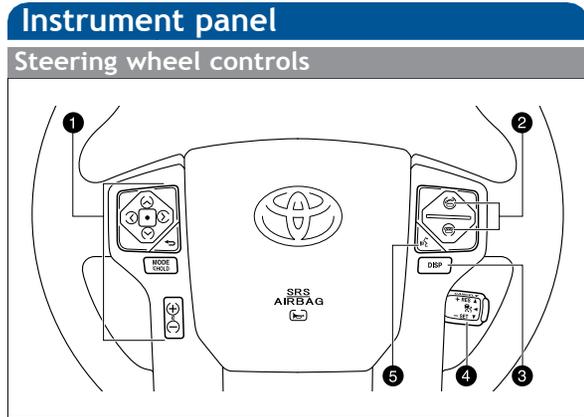

- 1 Steering wheel audio controls²
- 2 Telephone controls²
- 3 Multi-Information Display switch¹
- 4 Cruise control¹
- 5 Voice command button^{1,2}
- 6 Headlight, turn signal and front fog light¹ controls
- 7 Wiper and washer controls
- 8 Automatic Transmission shift lever¹
- 9 Intuitive parking assist button¹
- 10 VSC OFF switch
- 11 TOW/HAUL switch¹
- 12 Display Audio system²
- 13 Air Conditioning controls
- 14 12V DC power outlet


- 15 AUX port/USB port¹
- 16 Emergency flasher switch
- 17 Two-wheel/Four-wheel drive selector¹
- 18 Ignition switch
- 19 Power rearview mirror controls¹
- 20 Headlight leveling dial¹
- 21 BSM (Blind Spot Monitor with Rear Cross Traffic Alert) main switch¹
- 22 Power back window switch¹
- 23 Cargo lamp main switch
- 24 Personal/Interior lights main switch

¹ If equipped


² For vehicles with a navigation system, refer to the "Navigation System Owner's Manual."

Instrument cluster

Without Multi-Information Display

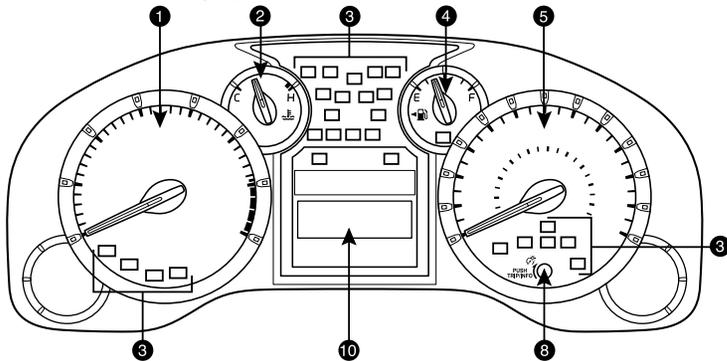

With Multi-Information Display

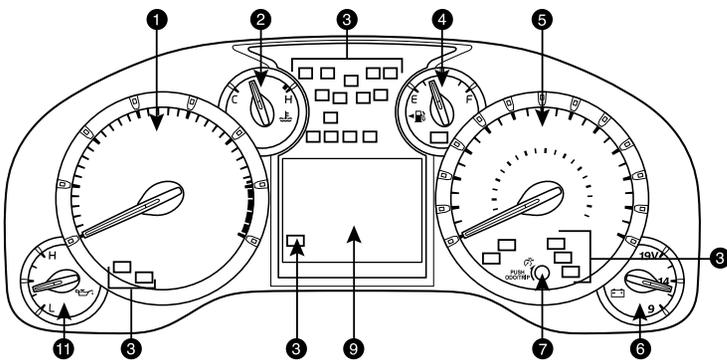

- ❶ Tachometer
- ❷ Engine coolant temperature
- ❸ Service indicator and reminder
- ❹ Fuel gauge
- ❺ Speedometer
- ❻ Voltmeter
- ❼ “ODO/TRIP” and instrument panel light control button
- ❽ “TRIP/INFO” and instrument panel light control button
- ❾ Multi-Information Display
- ❿ Trip information display
- ⓫ Oil pressure gauge

Indicator symbols

For details, refer to “Indicators and warning lights,” Section 2-2, 2014 Owner’s Manual.

- BRAKE Brake system warning¹
- Driver/Front passenger seat belt reminder (alarm will sound if speed is over 12 mph)

- Charging system warning¹
- Front passenger occupant classification or front passenger airbag ON/OFF indicator
- Low engine oil pressure warning¹
- Malfunction/Check Engine indicator¹
- Engine oil replacement reminder¹
- Low fuel level warning
- Open door warning
- Airbag SRS warning¹
- Master warning¹
- Automatic Transmission fluid temperature warning¹
- Low Tire Pressure Warning¹
- Low windshield washer fluid level warning¹
- Theft deterrent/Engine immobilizer system indicator
- Blind Spot Monitor warning¹/Blind Spot Monitor outside rearview mirror indicators
- Headlight low/high beam indicator
- Turn signal indicator
- 4HI 4LO High/Low speed four-wheel drive indicator
- Slip indicator¹
- Vehicle Stability Control OFF indicator¹
- TOW HAUL TOW/HAUL mode indicator
- AUTO LSD AUTO Limited Slip Differential indicator¹
- SET Cruise control indicator²/Cruise control SET indicator
- ABS Anti-lock Brake System warning¹
- TRAC OFF Traction Control OFF indicator¹

¹ If indicator does not turn off within a few seconds of starting engine, there may be a malfunction. Have vehicle inspected by your Toyota dealer.

² If this light flashes, refer to “Cruise control,” Section 4-5, 2014 Owner’s Manual.


Keyless entry (if equipped)

Locking operation



Push 

Unlocking operation

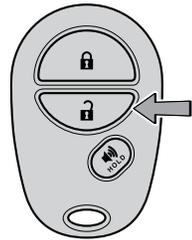

Push ONCE: Driver door
TWICE: All doors 

NOTE: If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.


Panic button





Push and hold 

Light control-Instrument panel

Brightness control


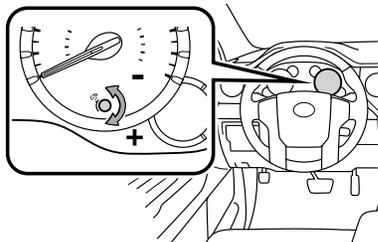


Fuel tank door release and cap

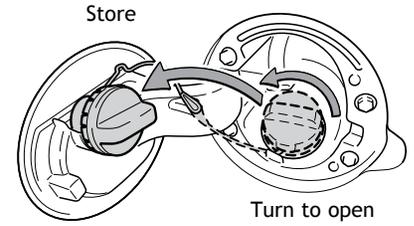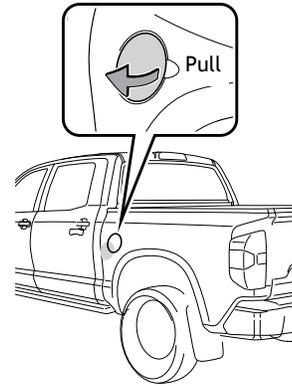

NOTE: Tighten until one click is heard. If the cap is not tightened enough, Check Engine "CHECK" indicator may illuminate.


Hood release

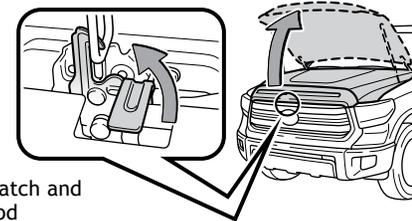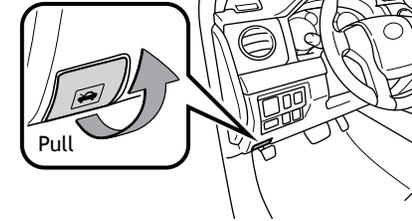


Pull up latch and raise hood

Engine maintenance

4.0L 6 cylinder (1GR-FE) engine

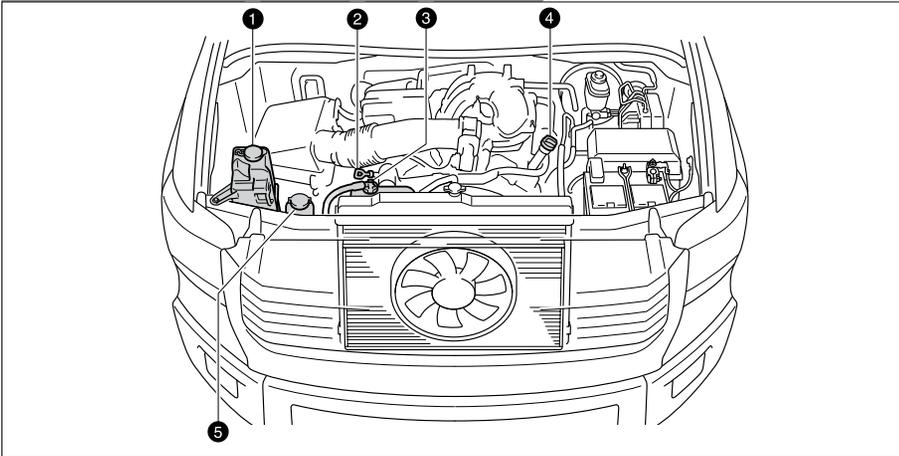

4.6L 8 cylinder (1UR-FE) and 5.7L 8 cylinder (3UR-FE/3UR-FBE) engines

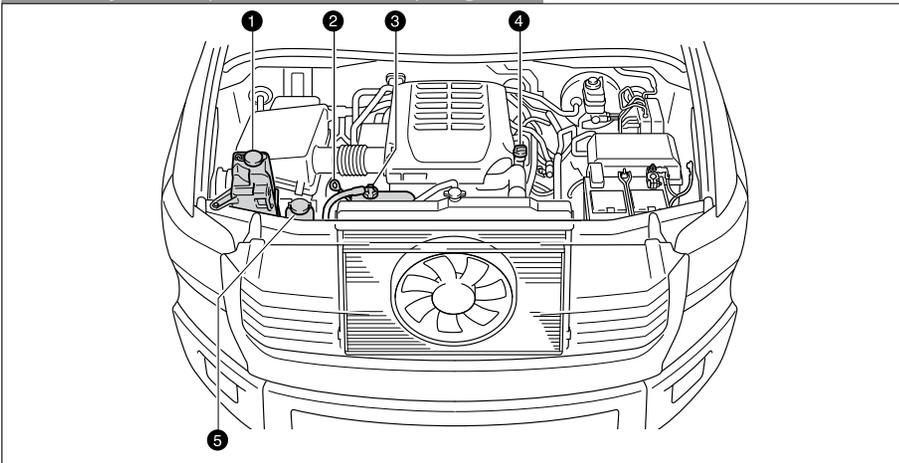


- ❶ Windshield washer fluid tank
- ❷ Engine oil level dipstick
- ❸ Engine coolant reservoir
- ❹ Engine oil filler cap
- ❺ Power steering fluid reservoir


NOTE: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the "Warranty & Maintenance Guide."

Automatic Transmission

Floor shift type

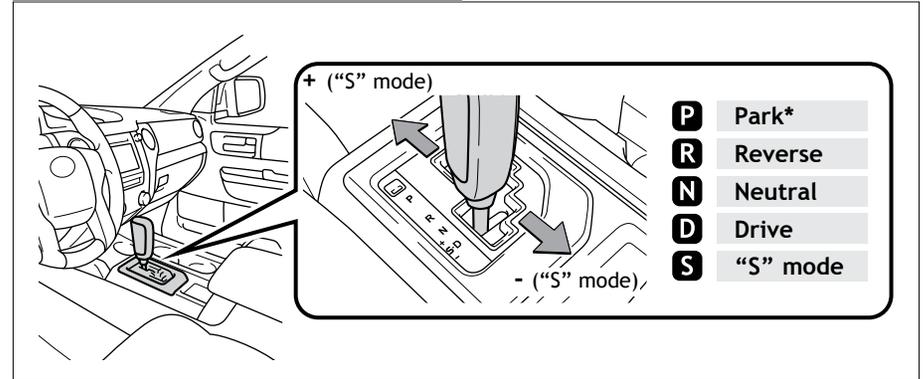

Column shift type

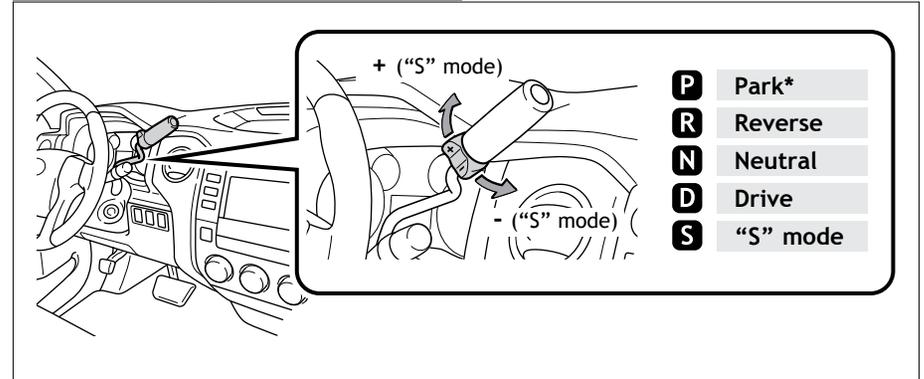

* The ignition switch must be set at "ON" and the brake pedal depressed to shift from Park.

"S" (Sequential) mode

Shift the shift lever to "S" position from "D" position.

Floor shift type:

- +: Upshift (push and release)
- : Downshift (pull and release)

Column shift type:

- +: Upshift (push and release)
- : Downshift (push and release)

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.

Four-wheel drive (if equipped)

Turn
4HI

Push and turn
2WD

Turn
4LO

2WD	High speed (2WD) Turn to "2WD" from "4H" with speed below 62 mph.
4H	High speed (4WD) Turn to "4H" from "2WD" with speed below 62 mph. Shift to "N" position when stopped, then turn to "4H" from "4L."
4L	Low speed (4WD) Shift to "N" position when stopped, then turn to "4L" from "4H."

For best fuel economy and performance under normal driving conditions, keep in "2WD" position.

Mirrors-Power outside rearview (if equipped)

Adjust

Type A, B

Select left or right

Adjust

Fold mirrors in

Return mirrors to original position

Key must be in the "ACC" or "ON" position.

Extend

Type B

Mirrors can be manually slid outward to improve visibility while towing.

Tilt and telescopic (if equipped) steering wheel

Manual

Tilt steering wheel

Angle

Lock release lever

Tilt and telescopic steering wheel

Length

Angle

Lock release lever

Hold wheel, push lever down, set angle and length, and return lever.

Power

Angle

Length

Up

Down

Away from the driver

Toward the driver

Control switch

Push the control switch, set angle and length.


NOTE: Do not attempt to adjust while the vehicle is in motion.

Door locks (if equipped)

Unlock

Lock


TOW/HAUL switch (if equipped)

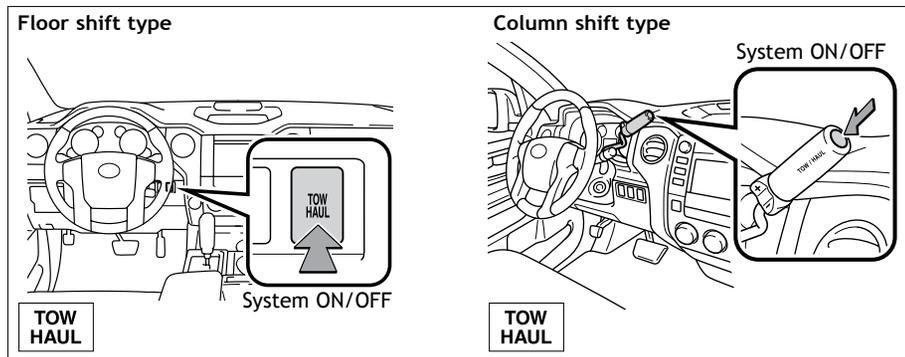

“TOW/HAUL” mode can be used when carrying heavy loads. As fuel economy is reduced while in “TOW/HAUL” mode, deactivating when driving without a load is recommended.



Refer to the *Owner's Manual* for more details on this system before attempting to use it.

Moonroof (if equipped)

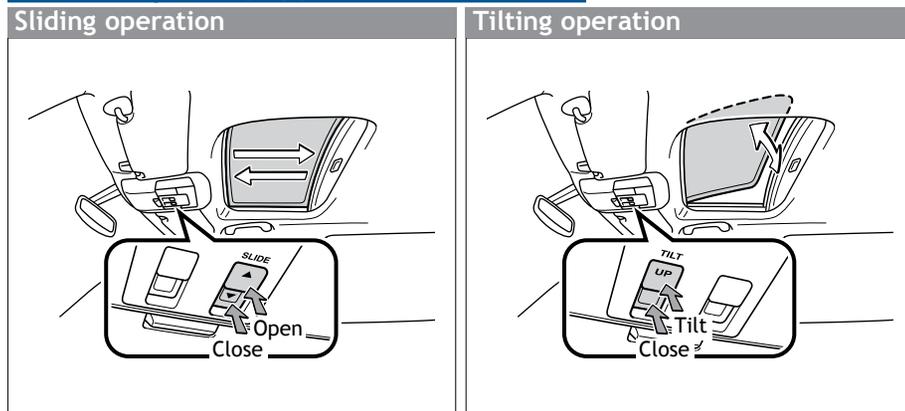


Push once to open/close completely. To stop partway, press the switch lightly.

Seat adjustments-Front

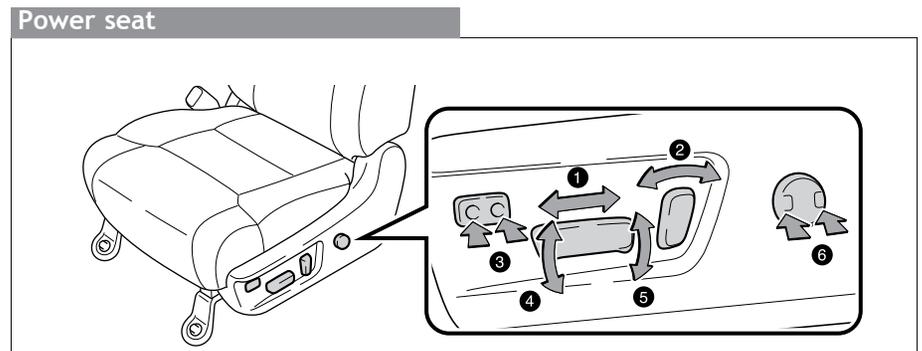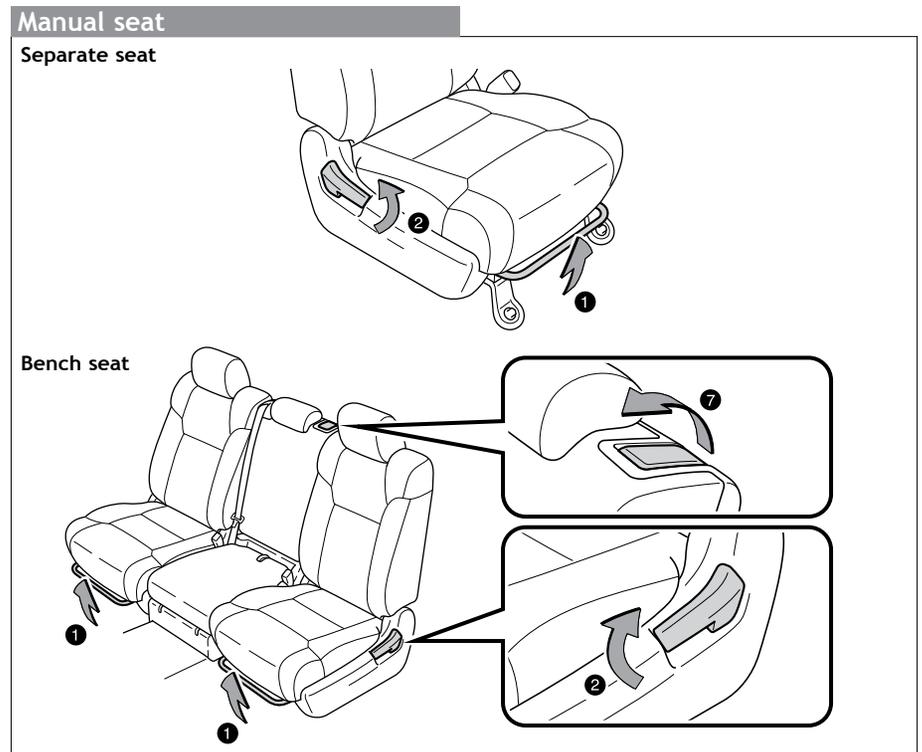


- ① Seat position (forward/backward)
- ② Seatback angle
- ③ Seat cushion length (driver seat only)
- ④ Seat cushion (front) angle (driver seat only)
- ⑤ Seat height (driver seat only)
- ⑥ Lumbar support
- ⑦ Seatback angle (center)

Seats-Head restraints

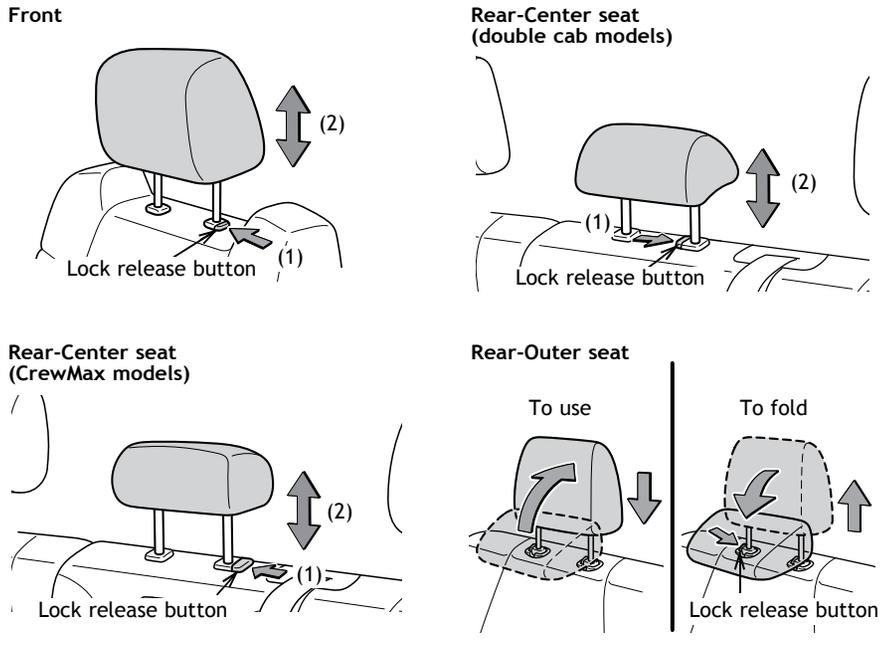


Rear seats-Folding (if equipped)

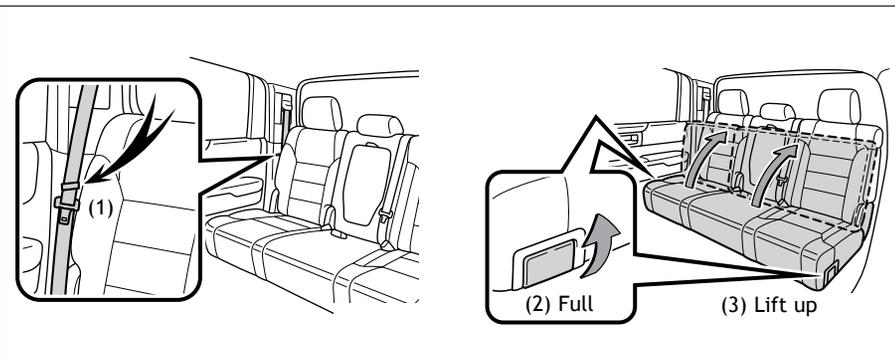


Windshield wipers & washers

With intermittent wiper

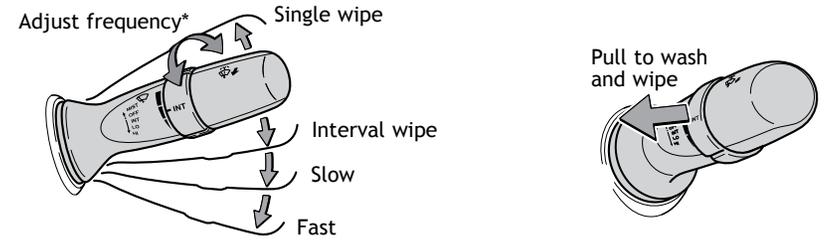


*** Intermittent windshield wiper frequency adjustment**
 Rotate to increase/decrease wipe frequency.

Without intermittent wiper

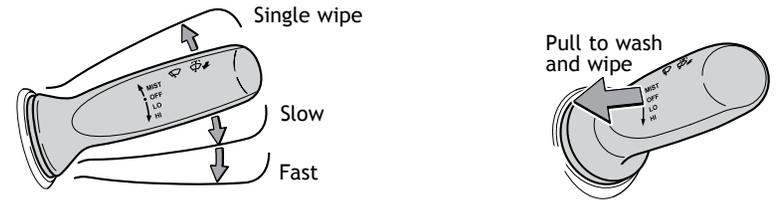


Lights & turn signals

Headlights

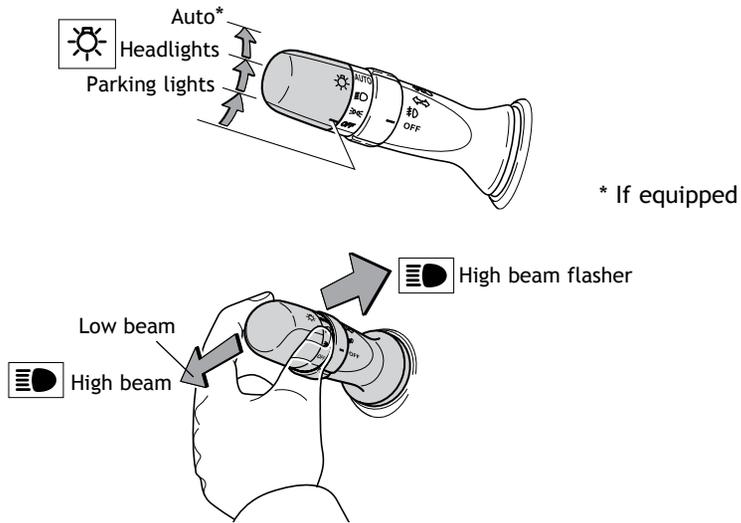


-Daytime Running Light system (DRL) Automatically turns on the headlights to make vehicle more visible to other drivers. Not for use at night.
-Automatic light cut off system Automatically turns lights off after 30-second delay, or lock switch on remote may be pushed after locking.

Front fog lights (if equipped)

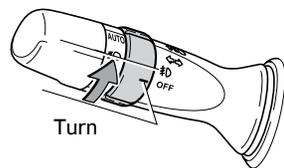

Front fog lights come on only when the headlights are on low beam.


Turn signals

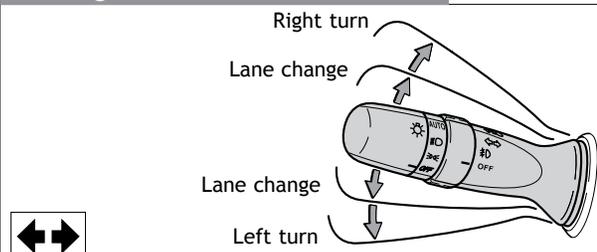


Power outlets-12V DC (if equipped)

Separate seats


Instrument panel

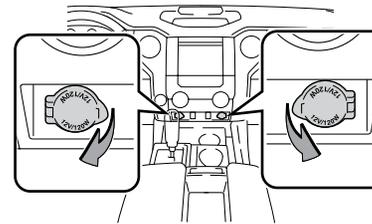


Inside of the console box

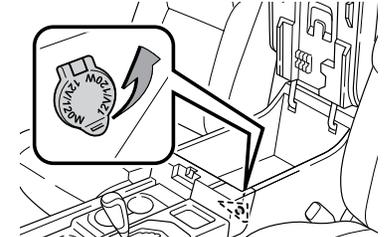

Back of the console box (type A)

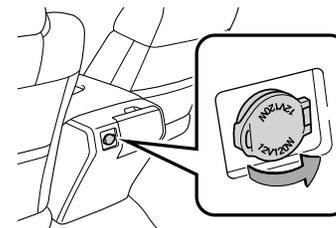


Back of the console box (type B)

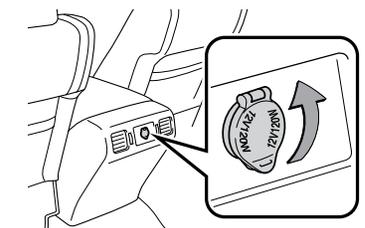


Bench seat


Instrument panel

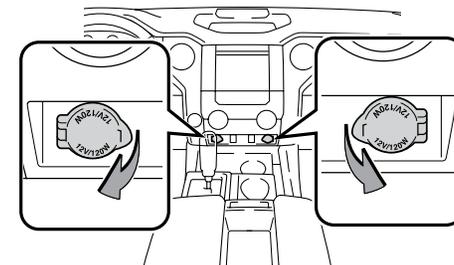

Back of the front center seat (type A)

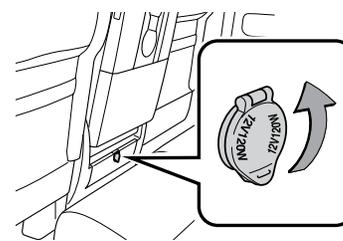


Back of the front center seat (type B)

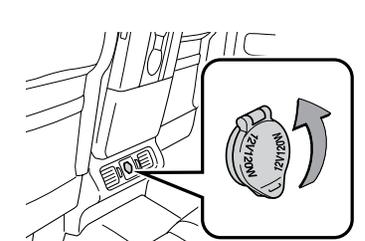


Key must be in the "ACC" or "ON" position to use.

Parking brake

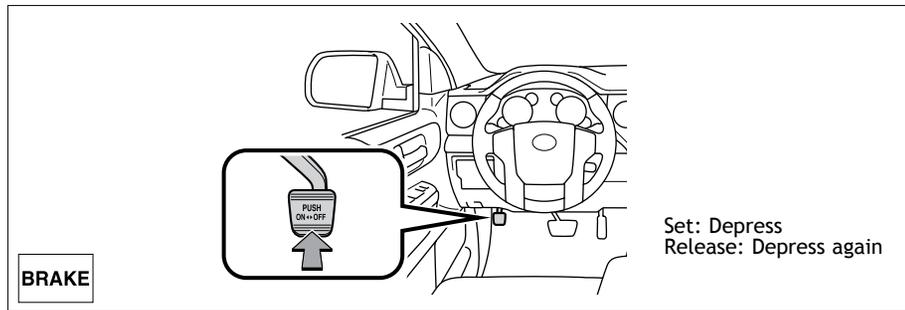

Windows-Power (if equipped)

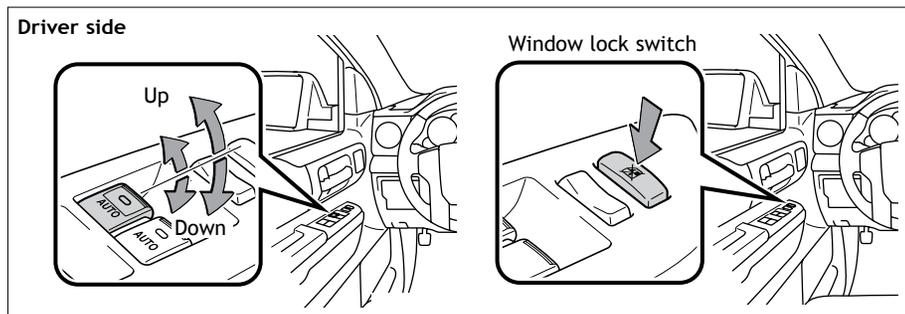


Automatic operation (passenger side for some models and driver side) Push the switch completely down or pull it completely up and release to fully open or close.* To stop window partway, lightly push the switch in the opposite direction.


Window lock switch Deactivates all passenger windows. Driver's window remains operable.

* Not all models are equipped with one-touch close function.


Window-Rear (if equipped)

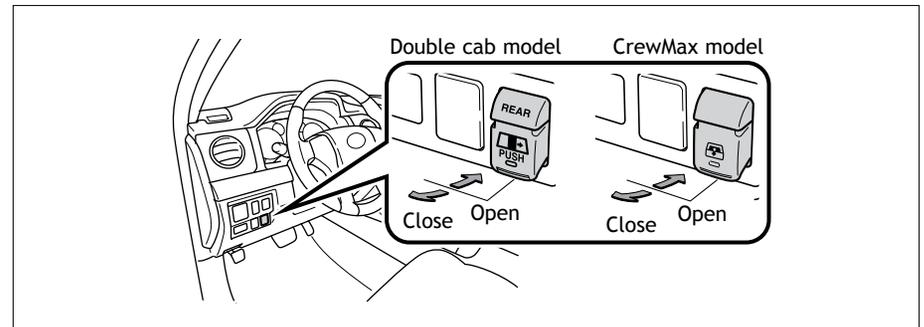

Seat heaters (if equipped) and ventilators (if equipped)

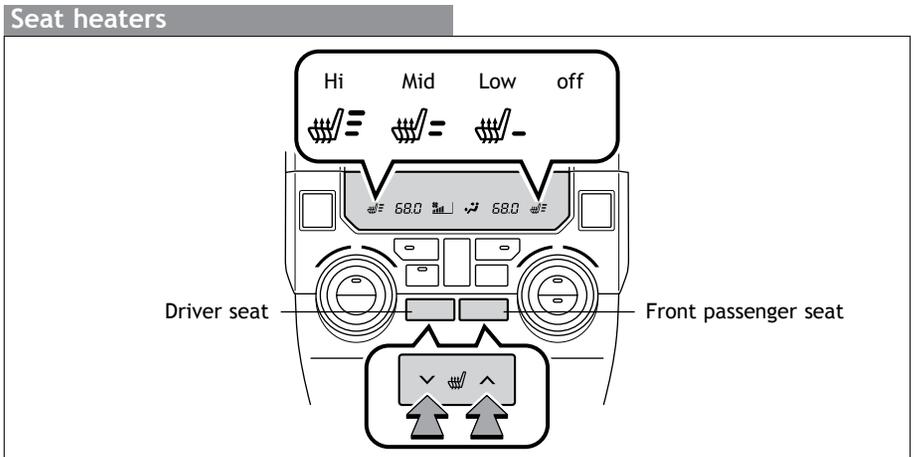


Seat heaters and ventilators

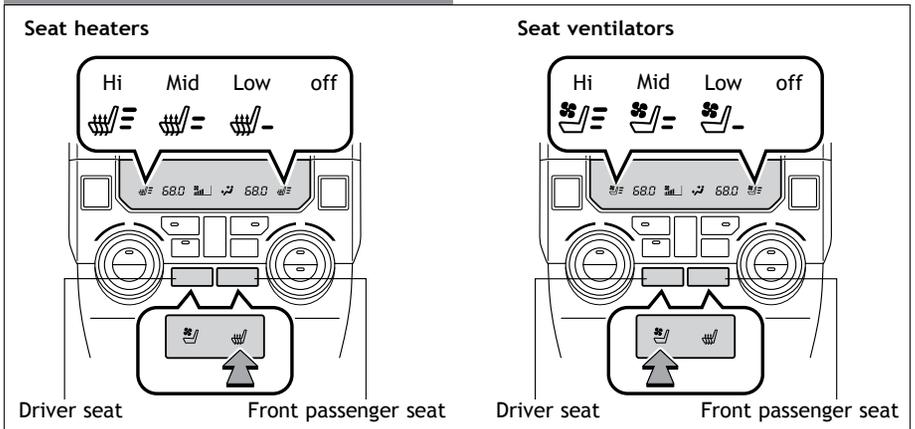


Air Conditioning/Heating

Automatic Air Conditioning

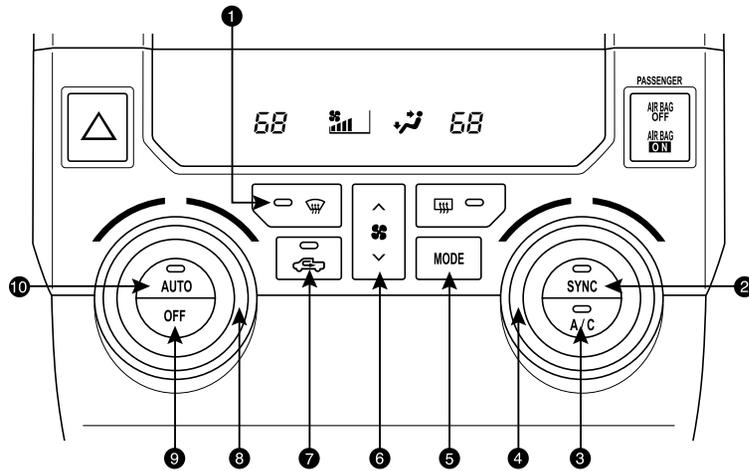


- 1 Windshield defogger (fresh air only)
- 2 Synchronize temperature settings for driver and passenger.
- 3 Air Conditioning ON/OFF
- 4 Temperature selector (front passenger side)
- 5 Airflow vent
- 6 Fan speed
- 7 Recirculate cabin air (fresh air when OFF)
- 8 Temperature selector (driver side)
- 9 Climate control OFF
- 10 Automatic climate control ON
Adjusting the temperature setting will cause the airflow vents, air intake and fan to adjust automatically.

Manual Air Conditioning

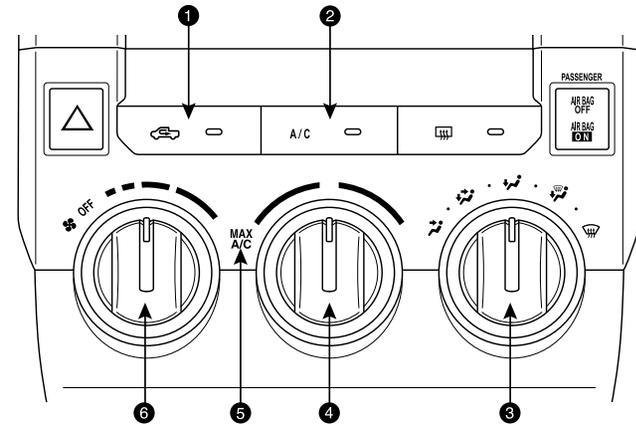

- 1 Recirculate cabin air (fresh air when OFF)
- 2 Air Conditioning ON/OFF
- 3 Airflow vent selector
- 4 Temperature selector
- 5 Select for maximum cooling. Air intake will automatically be set to recirculate.
- 6 Fan speed

Garage door opener (HomeLink®)* (if equipped)

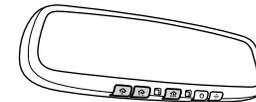

Garage door openers manufactured under license from HomeLink®* can be programmed to operate garage doors, estate gates, security lighting, etc.


Refer to “Garage door opener,” Section 6-4 in the *Owner’s Manual* for more details.

For programming assistance, contact HomeLink® at 1-800-355-3515, or visit <http://www.homelink.com>.


* HomeLink® is a registered trademark of Johnson Controls, Inc.

Audio

Entune Audio

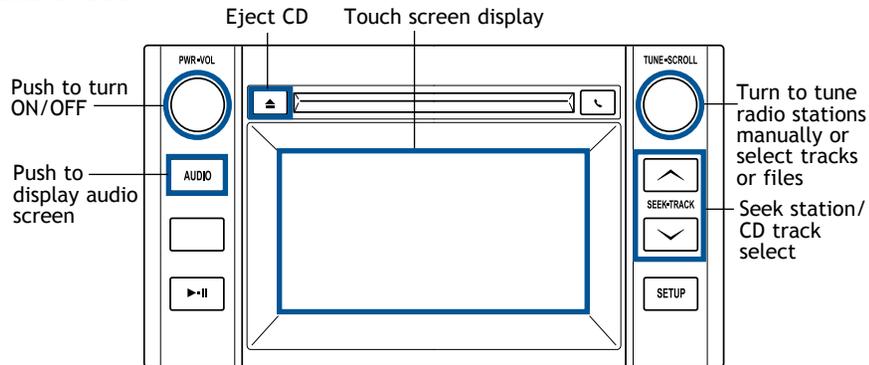


Entune Audio Plus*¹/Entune Premium Audio*¹/Entune Premium JBL Audio*¹

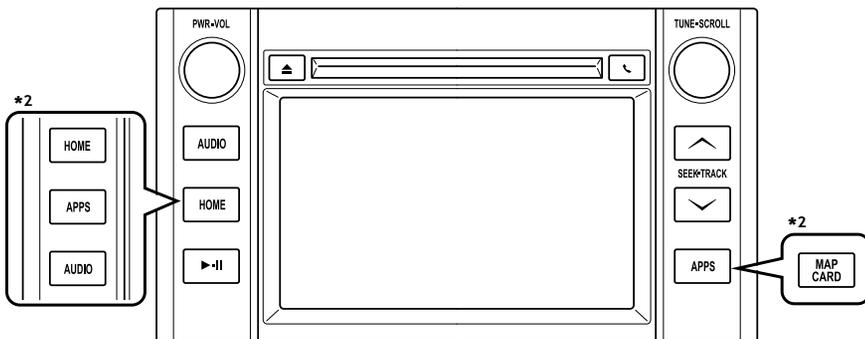

*¹ Refer to the "Navigation System Owner's Manual" for instructions.


*² Entune Premium Audio

Steering wheel switches

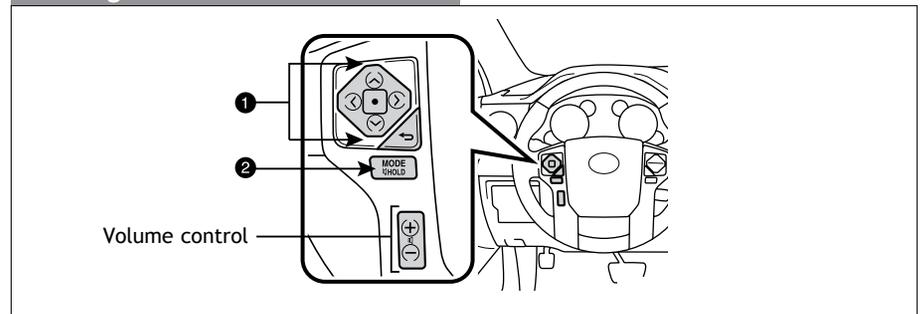

- ① "▲ ▼" "< >"
Use to search within the selected audio medium (radio, CD, iPod®, etc.).
- ② "MODE"
Push to turn audio ON and select an audio mode. Push and hold to pause the music or mute.

iPod®/USB/AUX port

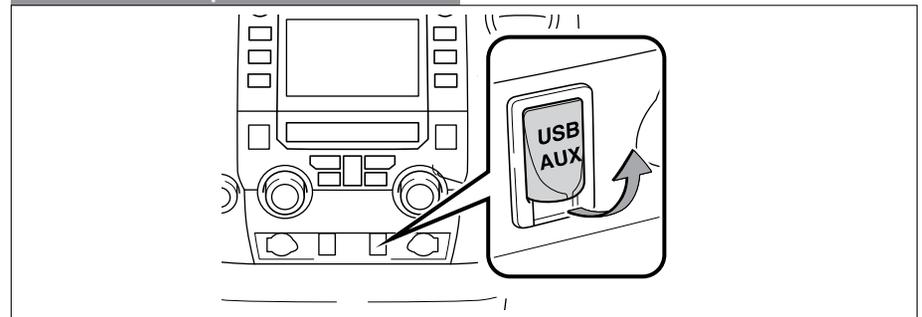

iPod®/USB port

By connecting a USB-compatible portable audio device or USB memory to the USB port, you can listen to music from the portable audio device or USB memory through the vehicle's speaker system.

AUX port

By inserting a mini plug into the AUX port, you can listen to music from a portable audio device through the vehicle's speaker system while in AUX mode.

Entune™ Audio Plus



- 1 AUDIO Button
Access to audio functions.
- 2 HOME Button
Access to Home screen.
- 3 APPS Button
Access to features such as fuel consumption, traffic, and weather.

HOME SCREEN - the home screen offers a two panel and a three panel layout. Information and layout will vary depending on selected set up.

NOTE: Console configuration and position of buttons may vary in some vehicles.


Quick Tip - The USB and AUX port location and design are different depending on the vehicle. For details, see page 23.

Traffic



The Traffic App displays a scrollable map showing local traffic in 3 colors. Traffic conditions are displayed in red, yellow and green for heavy, moderate or light traffic conditions. Use  or  arrows to scroll the map up or down.


Weather

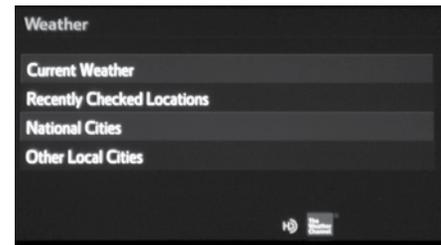

The Weather App options show current weather and recently checked locations weather. You can also search for a weather forecast by national or local cities.

Always drive safely, obey traffic laws & focus on the road while driving. Availability and accuracy of the information provided by HD services is dependent upon many factors. Services not available in every city or roadway. Use common sense when relying on information provided. HD Radio(tm) Technology manufactured under license from iBiquity Digital Corporation U.S. and Foreign Patents. HD Radio(tm) and the HD, HD Radio, and “Arc” logos are proprietary trademarks of iBiquity Digital Corp.

VSC OFF switch

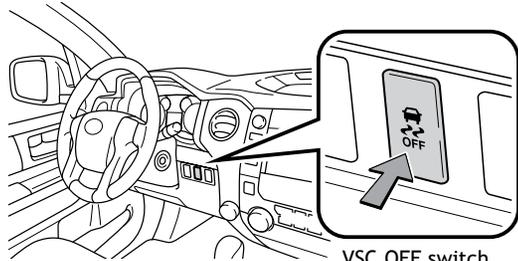

Without Multi-Information Display




With Multi-Information Display



The VSC OFF switch is used to switch between modes related to the TRAC, VSC and Auto LSD functions.

Refer to Section 4-5 of the *Owner's Manual* for more information.

Multi-Information Display

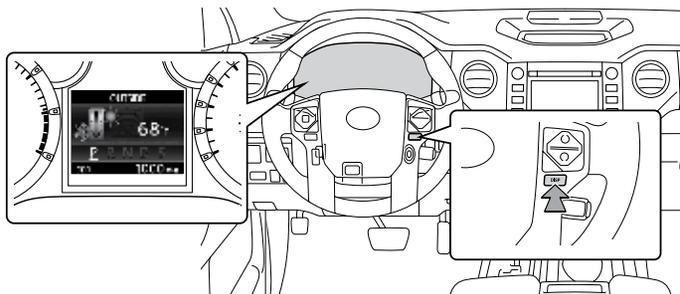

Push "DISP" to scroll through the following:


- (1) Average gas mileage*
- (2) Current gas mileage
- (3) Driving range
- (4) Elapsed time
- (5) Average vehicle speed
- (6) Outside temperature
- (7) Setting display
- (8) Display off

* Push and hold display button to reset.

Refer to your *Owner's Manual* for complete details on this system before attempting to use it.

Cruise control

Turning system ON/OFF

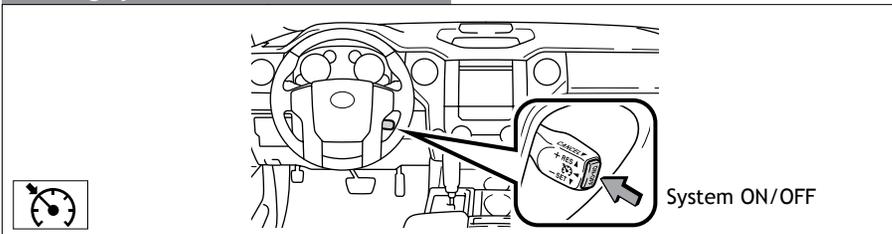


Functions



- ¹ The set speed may also be cancelled by depressing the brake pedal.
- ² The set speed may be resumed once vehicle speed exceeds 25 mph.

Blind Spot Monitor (BSM) with Rear Cross Traffic Alert (if equipped)

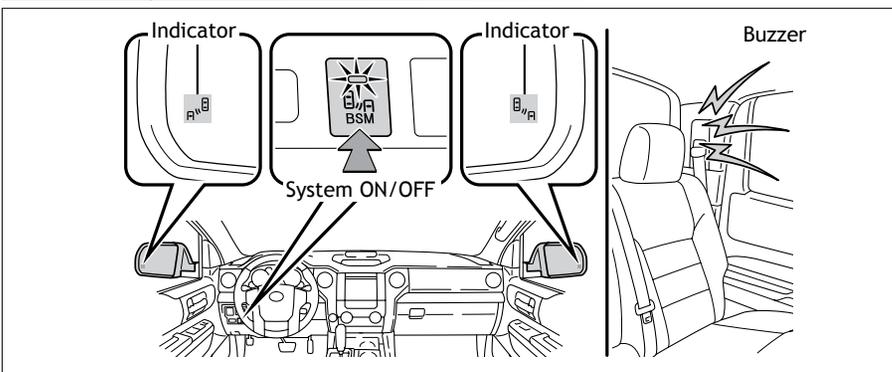


The Blind Spot Monitor is a system that has two functions:

- The Blind Spot Monitor function (assists the driver in decision making when changing lanes)
- The Rear Cross Traffic Alert function (assists the driver when backing up)

The system uses radar sensors to detect vehicles that are traveling in the area that is not reflected in the outside rearview mirror (the blind spot), and advises the driver of the vehicles' existence via the outside rearview mirror indicator.

Refer to the *Owner's Manual* for more details on this system before attempting to use it.


Telephone controls (Bluetooth® (if equipped))

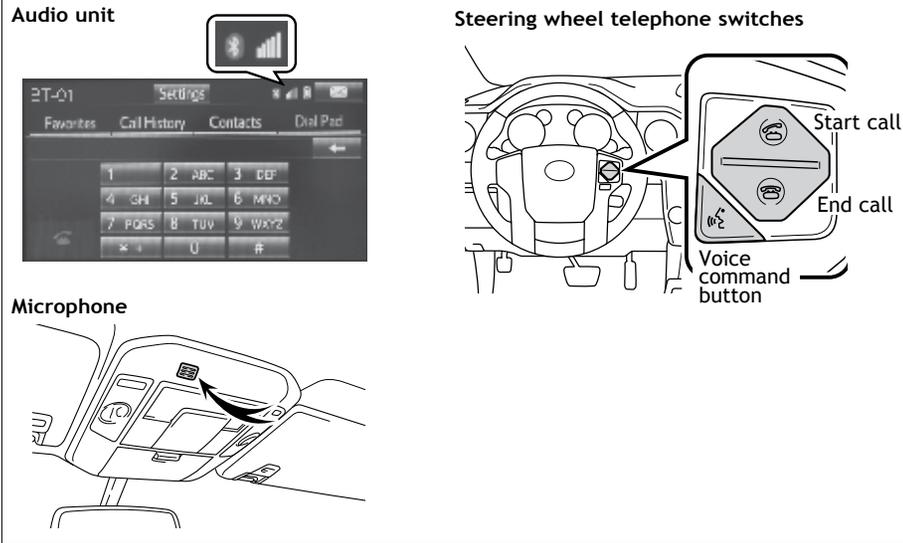


Bluetooth® technology allows dialing or receipt of calls without taking hands from the steering wheel or using a cable to connect the telephone and the system.

Refer to “Using a Bluetooth® phone,” Section 5-9 in the *Owner’s Manual*, for more details.

Bottle holders

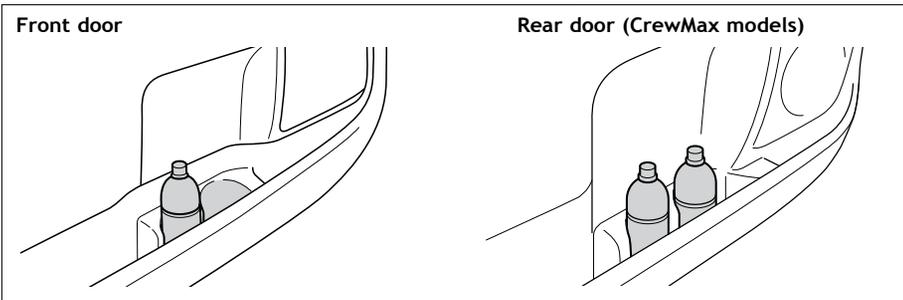


Cup holders

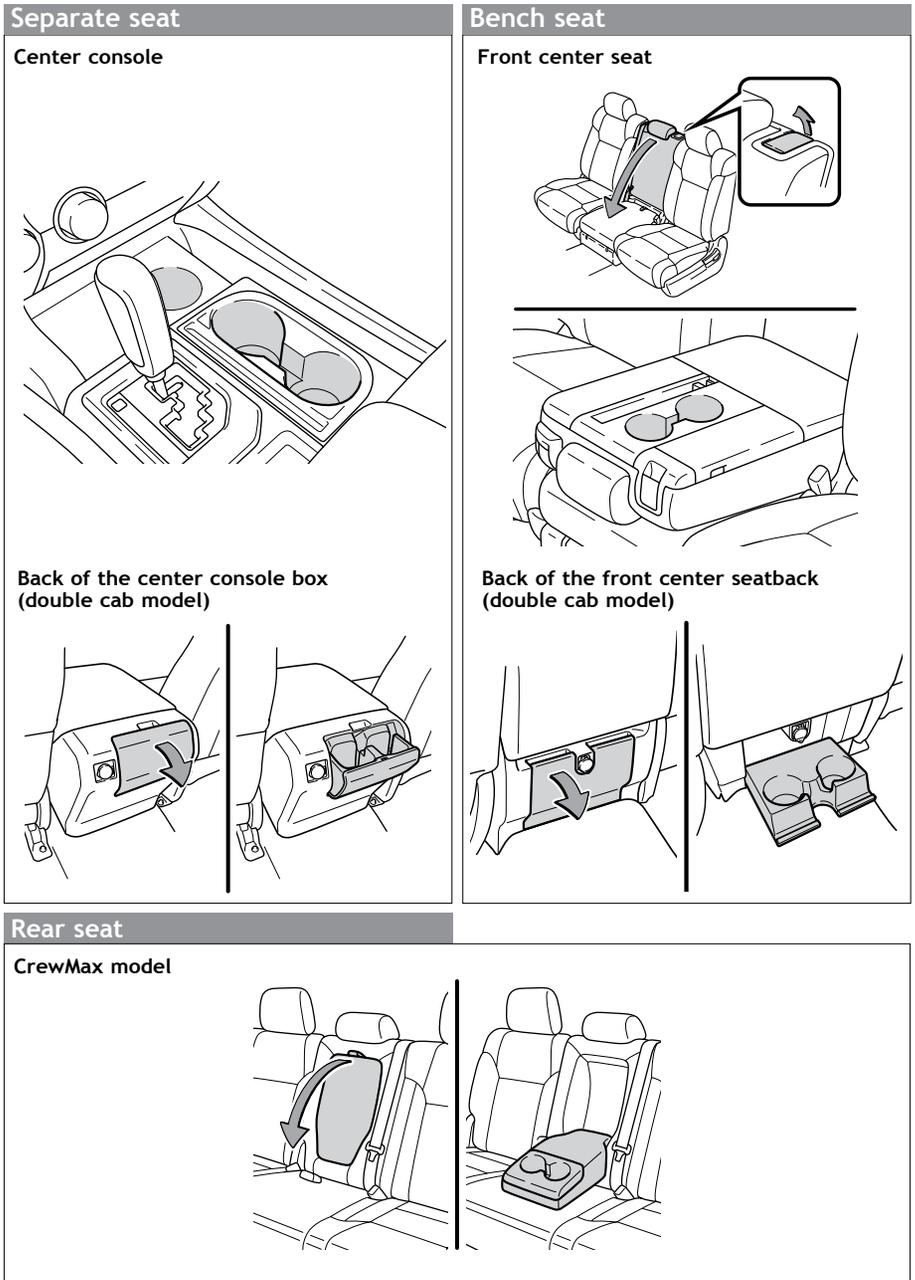

SAFETY AND EMERGENCY FEATURES


Seat belts

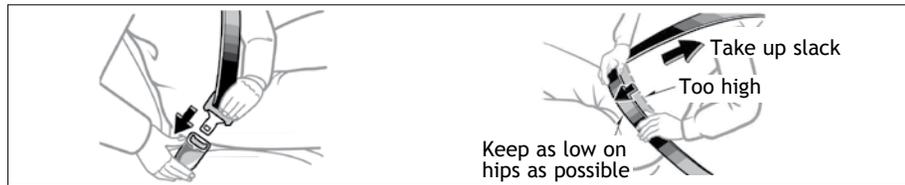


If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.

Seat belts-Shoulder belt anchor (CrewMax and double cab models)

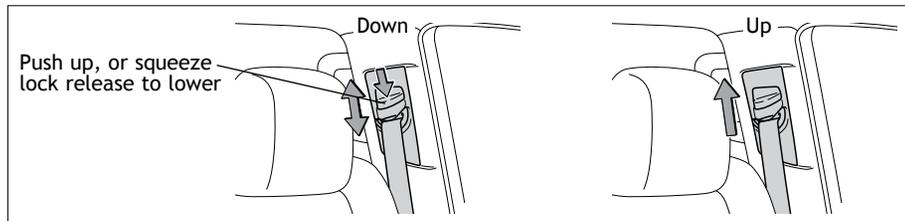

Tire Pressure Monitoring (warning) System

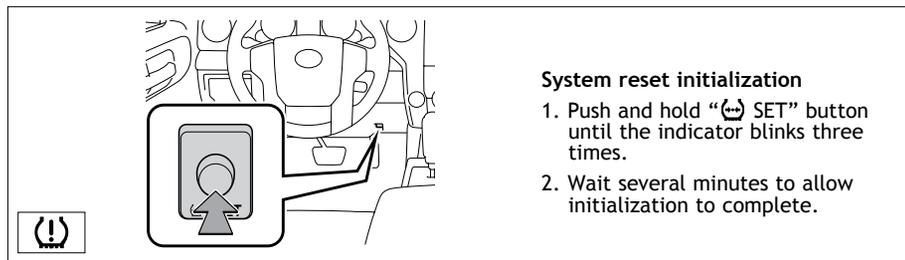


After adjusting tire pressures, or after tires have been rotated or replaced, turn the ignition switch to "ON" and press and hold the "SET" button until indicator blinks three times. Let the vehicle sit for a few minutes to allow initialization to complete.

Refer to the load label on the door jamb or the *Owner's Manual* for tire inflation specifications.

If the tire pressure indicator flashes for more than 60 seconds and then remains on, take the vehicle to your local Toyota dealer.

NOTE: The warning light may come on due to temperature changes or changes in tire pressure from natural air leakage. If the system has not been initialized recently, setting the tire pressures to factory specifications should turn off the light.

Doors-Child safety locks (CrewMax and double cab models)

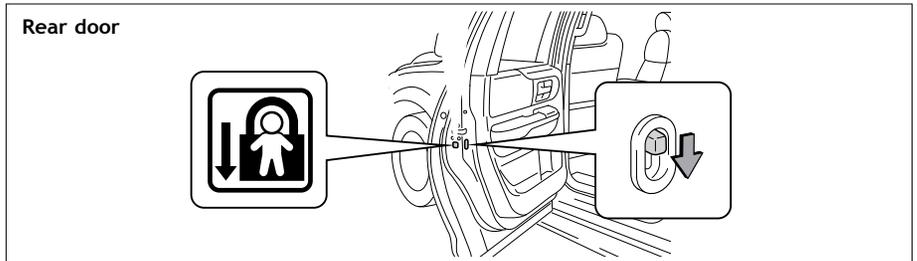


Moving the lever downward will allow the door to be opened only from the outside.


Spare tire & tools

Tool location


Regular cab models
-behind the right seatback

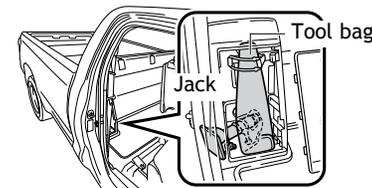


CrewMax models
-behind the right rear seatback

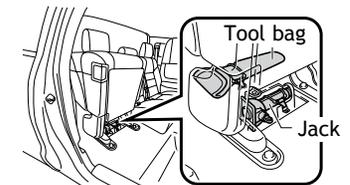


Double cab models
-under the right rear seats
without storage box

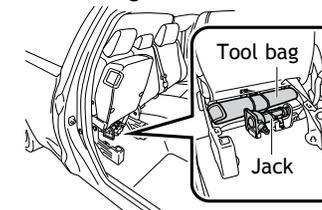

Double cab models
-under the right rear seats
with storage box

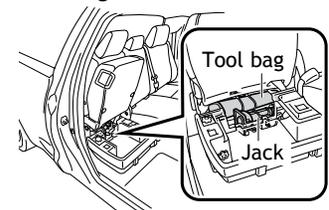

Removing the spare tire

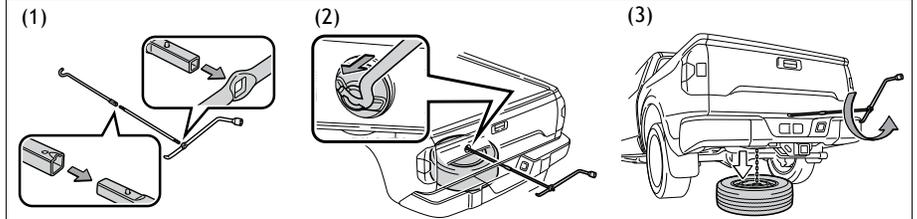

- (1) Assemble the jack handle.
- (2) Insert the jack handle end into the lowering screw.
- (3) Turn the jack handle counterclockwise.

Refer to the *Owner's Manual* for tire changing and jack positioning procedures.

Star Safety System™

All new Toyota vehicles come standard with the Star Safety System™, which combines Vehicle Stability Control (VSC), Traction Control (TRAC), Anti-lock Braking System (ABS), Electronic Brake-force Distribution (EBD), Brake Assist (BA) and Smart Stop Technology (SST).

Vehicle Stability Control (VSC)

VSC helps prevent loss of traction during cornering by reducing engine power and applying brake force to selected wheels.

Toyota's VSC monitors steering angle and the direction your vehicle is traveling. When it senses that the front or rear wheels begin to lose traction, VSC reduces engine power and applies braking to selected wheels. This helps restore traction and vehicle control.

Traction Control (TRAC)

VSC helps prevent loss of traction during cornering by reducing engine power, and Traction Control helps maintain traction on loose gravel and wet, icy, or uneven surfaces by applying brake force to the spinning wheel(s).

Toyota's TRAC sensors are activated when one of the drive wheels starts to slip. TRAC limits engine output and applies the brakes to the spinning wheel. This transfers power to the wheels that still have traction to help keep you on track.

Anti-Lock Brake System (ABS)

ABS helps prevent brakes from locking up by "pulsing" brake pressure to each wheel. This limits brake lockup and helps provide directional control for the current road conditions.

Toyota's ABS sensors detect which wheels are locking up and limits wheel lockup by "pulsing" each wheel's brakes independently. Pulsing releases brake pressure repeatedly for fractions of a second. This helps the tires attain the traction that current road conditions will allow, helping you to stay in directional control.

Electronic Brake Force Distribution (EBD)

Toyota's ABS technology has Electronic Brake-force Distribution (EBD) to help maintain control and balance when braking. Abrupt stops can cause a vehicle to tilt forward, reducing the braking power of the rear wheels. EBD responds to sudden stops by redistributing brake force to enhance the braking effectiveness of all four wheels.

Brake Assist (BA)

Brake Assist is designed to detect sudden or "panic" braking, and then add braking pressure to help decrease the vehicle's stopping distance. When there's only a split second to react, Brake Assist can add additional brake pressure more quickly than just the driver alone can.

Smart Stop Technology (SST)

Smart Stop Technology automatically reduces driving torque when the accelerator and brake pedals are pressed simultaneously under certain conditions.

SST engages when the accelerator is depressed first and the brakes are applied firmly for longer than one-half second at speeds greater than five miles per hour.


SST doesn't engage if the brake pedal is depressed before the accelerator pedal, allowing vehicles to start on a steep hill and safely accelerate without rolling backward.

Floor mat installation

There are two types of Toyota floor mats: carpeted and all-weather. Each vehicle has model-specific floor mats. Installation is easy.

To keep your floor mat properly positioned, follow these steps:

- Only use floor mats designed for your specific model.
- Use only one floor mat at a time, using the retaining hooks to keep the mat in place.
- Install floor mats right side up.

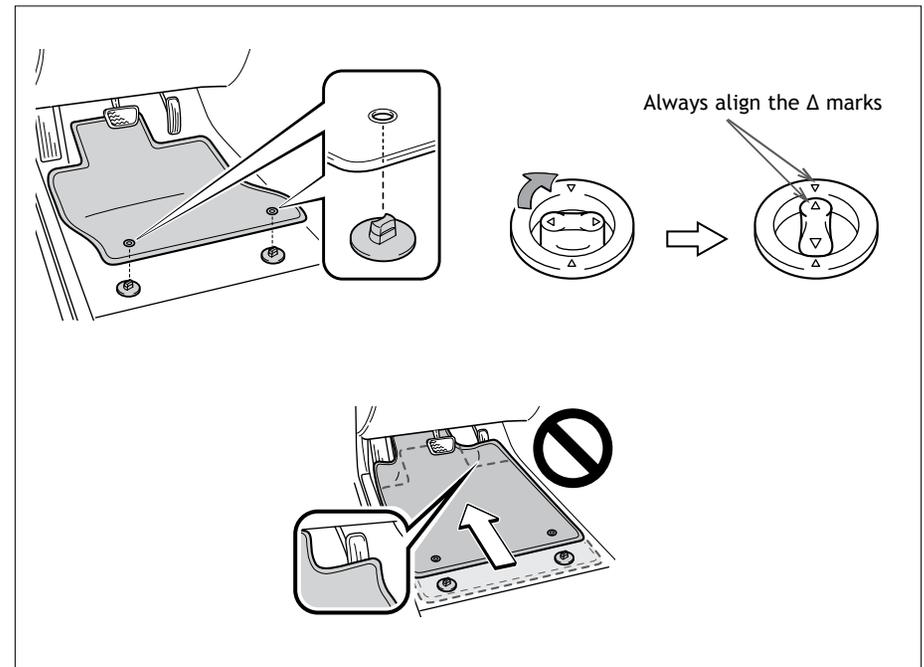

NOTES