

2015 Tundra
Quick Reference Guide

2015 Tundra

This *Quick Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Quick Reference Guide* is not intended as a substitute for the *Owner's Manual* located in your vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Tundra.

A word about safe vehicle operations

This *Quick Reference Guide* is not a full description of Tundra operations. Every Tundra owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Quick Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

INDEX

OVERVIEW

Engine maintenance	8
Fuel tank door release and cap	7
Hood release	7
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Keyless entry¹	6
Light control-Instrument panel	6

FEATURES/OPERATIONS

Air Conditioning/Heating	20-21
Audio	22-23
Automatic Transmission	9
Bottle holders	28
Blind Spot Monitor (BSM) with Rear Cross Traffic Alert	27
Bluetooth® Device Pairing Section	35-44
Cruise control	27
Cup holders	29
Door locks	11
Entune™ Audio Plus	24
Four-wheel drive	10
Garage door opener (HomeLink®) ³	21
Lights¹ & turn signals	16
Mirrors-Power side view	10
Moonroof	12
Multi-Information Display²	26
Parking brake	18
Power outlets-12V DC	17
Rear seats-Folding	14
Seat adjustments-Front	13
Seat heaters and ventilators	19
Seats-Head restraints	14
Telephone controls (Bluetooth®)	28
Tilt and telescopic steering wheel	11
TOW/HAUL switch	11
Traffic	25
Trailer brake controller	15
VSC OFF switch	26
Weather	25
Window-Rear	19
Windows-Power	18
Windshield wipers & washers	15

SAFETY AND

EMERGENCY FEATURES

Doors-Child safety locks	31
Floor mat installation	33
Seat belts	30
Seat belts-Shoulder belt anchor	30
Spare tire & tools	31
Star Safety System™	32-33
Trailer Sway Control	33
Tire Pressure Monitoring (warning) System	30

¹ Visit your Toyota dealer for information on customizing this feature.




² Programmable by customer. Refer to the *Owner's Manual* for instructions and more information.

³ HomeLink® is a registered trademark of Gentex Corporation.

OVERVIEW

Instrument panel

Steering wheel controls

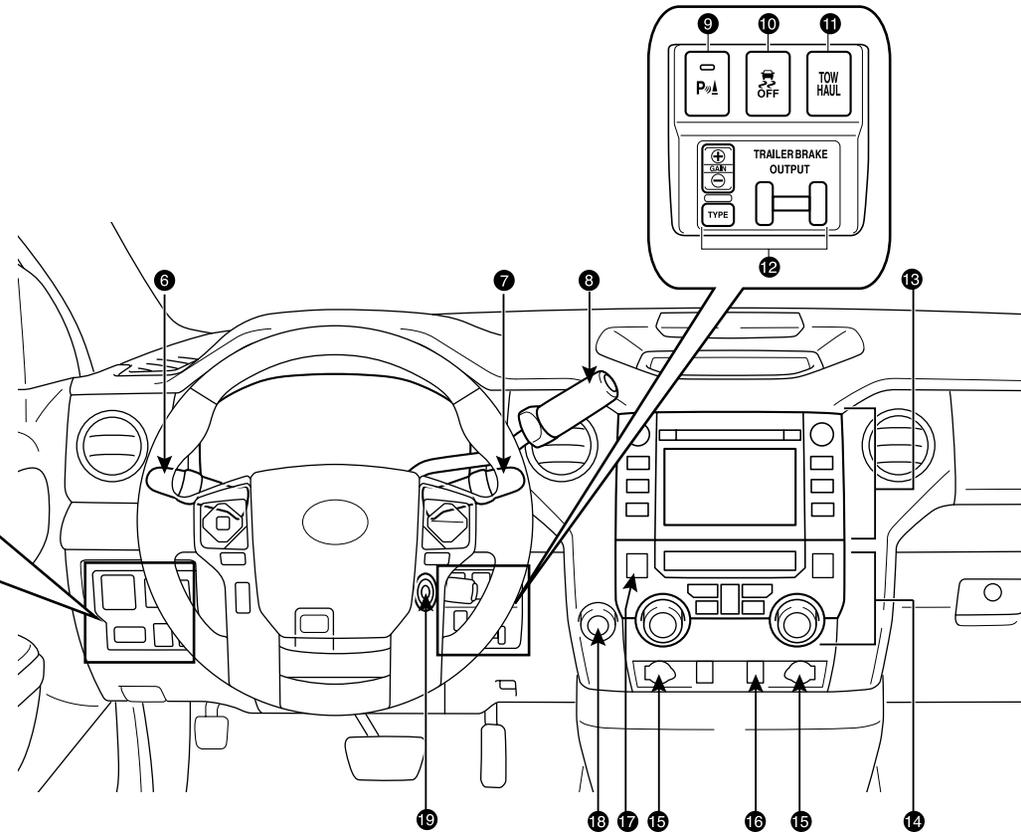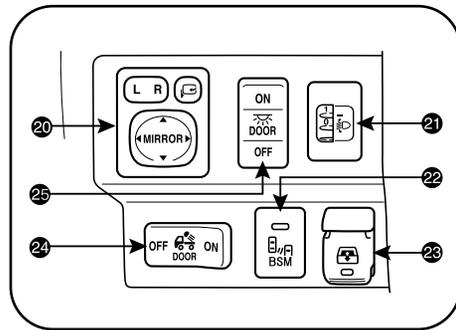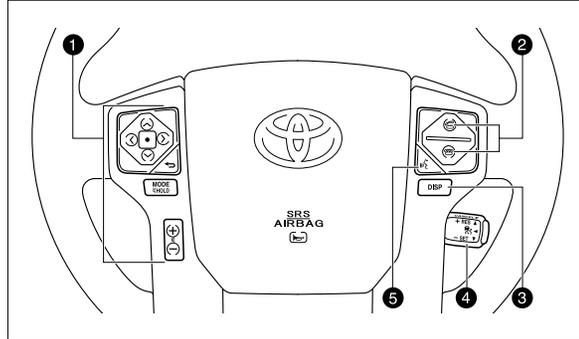

- 1 Steering wheel audio controls²
- 2 Telephone controls²
- 3 Multi-Information Display switch¹
- 4 Cruise control¹
- 5 Voice command button^{1,2}
- 6 Headlight, turn signal and front fog light¹ controls
- 7 Wiper and washer controls
- 8 Automatic Transmission shift lever¹
- 9 Intuitive parking assist button¹
- 10 VSC OFF switch
- 11 TOW/HAUL switch¹
- 12 Trailer brake controller
- 13 Display Audio system²
- 14 Air Conditioning controls


- 15 12V DC power outlet
- 16 AUX port/USB port¹
- 17 Emergency flasher switch
- 18 Two-wheel/Four-wheel drive selector¹
- 19 Ignition switch
- 20 Power rearview mirror controls¹
- 21 Headlight leveling dial¹
- 22 BSM (Blind Spot Monitor with Rear Cross Traffic Alert) main switch¹
- 23 Power back window switch¹
- 24 Cargo lamp main switch
- 25 Personal/Interior lights main switch

¹ If equipped

² For vehicles with a navigation system, refer to the “Navigation System Owner’s Manual.”

Instrument cluster

With Multi-Information Display

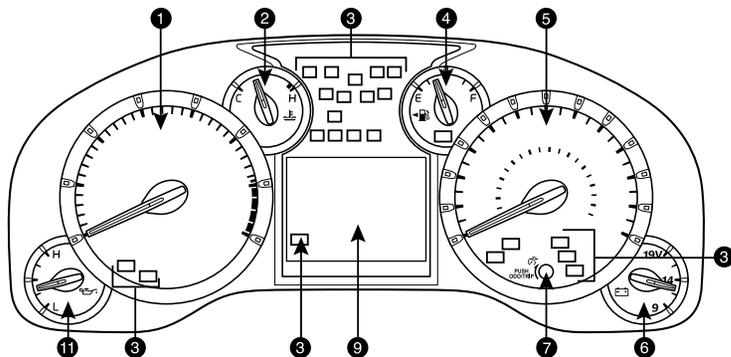

- 1 Tachometer
- 2 Engine coolant temperature
- 3 Service indicator and reminder
- 4 Fuel gauge
- 5 Speedometer
- 6 Voltmeter
- 7 "ODO/TRIP" and instrument panel light control button
- 8 "TRIP/INFO" and instrument panel light control button
- 9 Multi-Information Display
- 10 Trip information display
- 11 Oil pressure gauge

Indicator symbols

For details, refer to "Indicators and warning lights," Section 2-2, 2014 Owner's Manual.

- BRAKE** Brake system warning¹
- Driver/Front passenger seat belt reminder (alarm will sound if speed is over 12 mph)
- Charging system warning¹
- Front passenger occupant classification or front passenger airbag ON/OFF indicator
- Low engine oil pressure warning¹
- Malfunction/Check Engine indicator¹
- MAINT REQD** Engine oil replacement reminder¹
- Low fuel level warning

- Open door warning
- Airbag SRS warning¹
- Master warning¹
- A/T OIL TEMP** Automatic Transmission fluid temperature warning¹
- Low Tire Pressure Warning¹
- Low windshield washer fluid level warning¹
- Theft deterrent/Engine immobilizer system indicator
- Blind Spot Monitor warning¹/Blind Spot Monitor outside rearview mirror indicators
- Headlight low/high beam indicator
- Turn signal indicator
- 4HI 4LO** High/Low speed four-wheel drive indicator
- Slip indicator¹
- OFF** Vehicle Stability Control OFF indicator¹
- TOW HAUL** TOW/HAUL mode indicator
- AUTO LSD** AUTO Limited Slip Differential indicator¹
- SET** Cruise control indicator²/Cruise control SET indicator
- ABS** Anti-lock Brake System warning¹
- TRAC OFF** Traction Control OFF indicator¹

¹ If indicator does not turn off within a few seconds of starting engine, there may be a malfunction. Have vehicle inspected by your Toyota dealer.

² If this light flashes, refer to "Cruise control," Section 4-5, 2015 Owner's Manual.

Keyless entry (if equipped)


Locking operation



Push



Unlocking operation

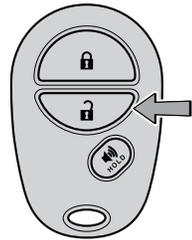

Push ONCE: Driver door
TWICE: All doors



NOTE: If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.

Panic button




Push and hold




Light control-Instrument panel



Brightness control

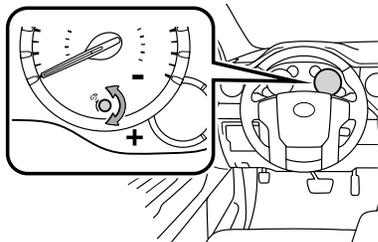

Fuel tank door release and cap

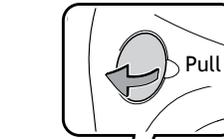

Pull

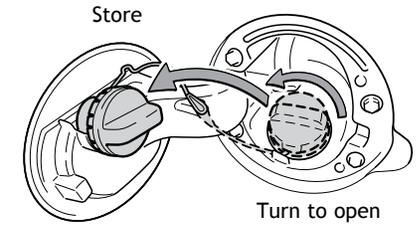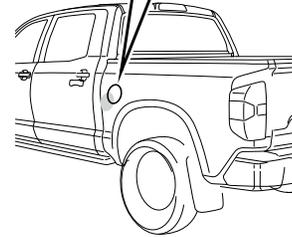


Store



Turn to open

NOTE: Tighten until one click is heard. If the cap is not tightened enough, Check Engine “CHECK ENGINE” indicator may illuminate.


Hood release

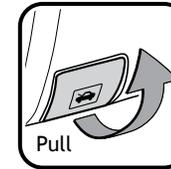

Pull

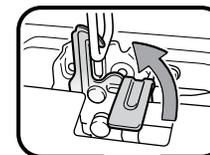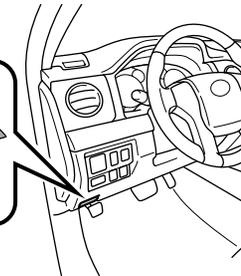


Pull up latch and raise hood

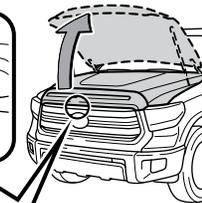

Engine maintenance

4.6L 8 cylinder (1UR-FE) and
5.7L 8 cylinder (3UR-FE/3UR-FBE) engines

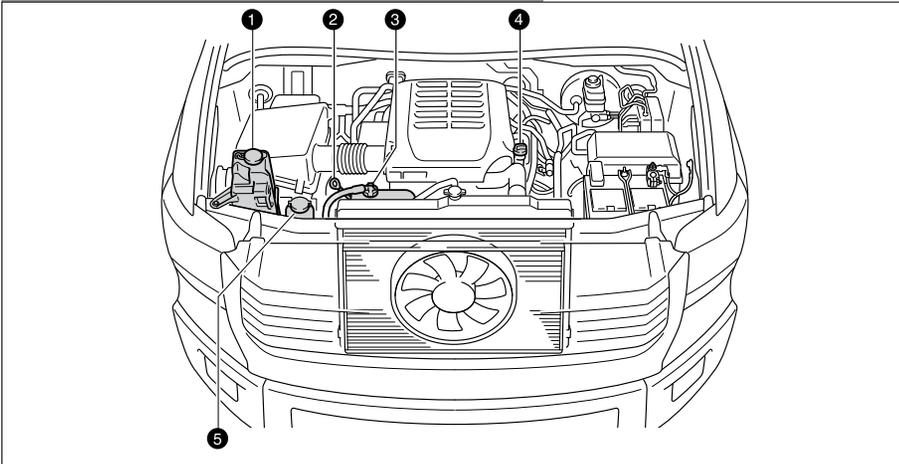


- ❶ Windshield washer fluid tank
- ❷ Engine oil level dipstick
- ❸ Engine coolant reservoir
- ❹ Engine oil filler cap
- ❺ Power steering fluid reservoir


NOTE: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the “Warranty & Maintenance Guide.”

Automatic Transmission

Floor shift type

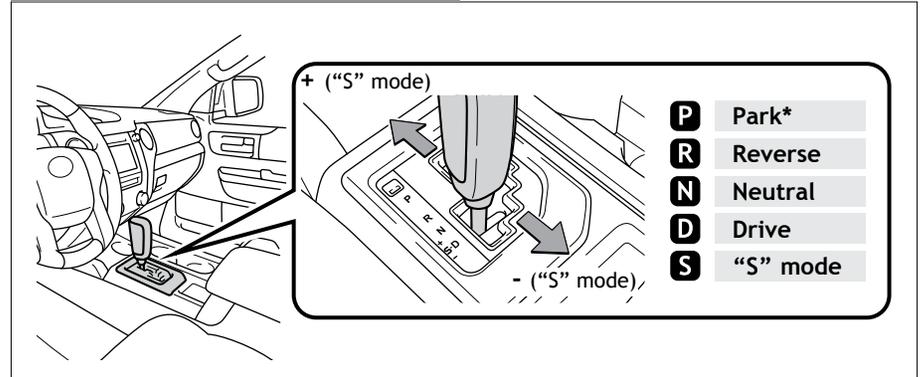

Column shift type

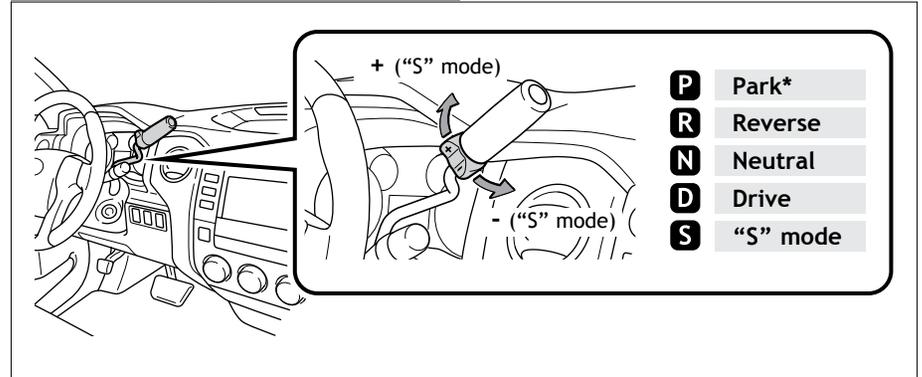

* The ignition switch must be set at “ON” and the brake pedal depressed to shift from Park.

“S” (Sequential) mode

Shift the shift lever to “S” position from “D” position.

Floor shift type:

- +: Upshift (push and release)
- : Downshift (pull and release)

Column shift type:

- +: Upshift (push and release)
- : Downshift (push and release)

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the “D” position.

Four-wheel drive (if equipped)

Turn
4HI

Push and turn
4LO

Turn
2WD

2WD	High speed (2WD) Turn to "2WD" from "4H".
4H	High speed (4WD) Turn to "4H" from "2WD". Shift to "N" position when stopped, then turn to "4H" from "4L."
4L	Low speed (4WD) Shift to "N" position when stopped, then turn to "4L" from "4H."

For best fuel economy and performance under normal driving conditions, keep in "2WD" position.

Mirrors-Power outside rearview (if equipped)

Adjust

Type A, B

Select left or right

Adjust

Fold mirrors in

Return mirrors to original position

Key must be in the "ACC" or "ON" position.

Extend

Type B

Mirrors can be manually slid outward to improve visibility while towing.

Tilt and telescopic (if equipped) steering wheel

Manual

Tilt steering wheel

Angle

Lock release lever

Tilt and telescopic steering wheel

Length

Angle

Lock release lever

Hold wheel, push lever down, set angle and length, and return lever.

Power

Angle

Length

Up

Down

Away from the driver

Toward the driver

Control switch

Push the control switch, set angle and length.


NOTE: Do not attempt to adjust while the vehicle is in motion.

Door locks (if equipped)

Unlock

Lock


TOW/HAUL switch (if equipped)

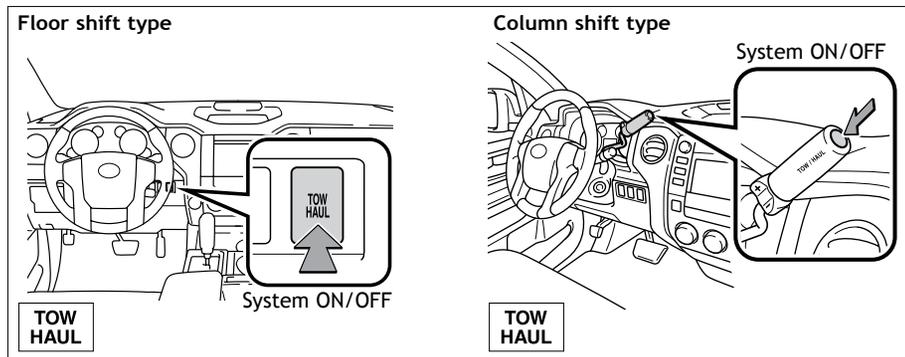

“TOW/HAUL” mode can be used when carrying heavy loads. As fuel economy is reduced while in “TOW/HAUL” mode, deactivating when driving without a load is recommended.



Refer to the *Owner's Manual* for more details on this system before attempting to use it.

Moonroof (if equipped)

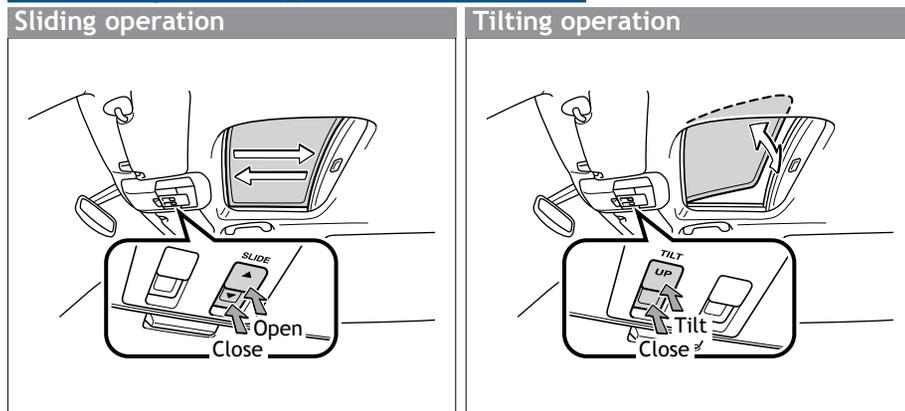


Push once to open/close completely. To stop partway, press the switch lightly.

Seat adjustments-Front

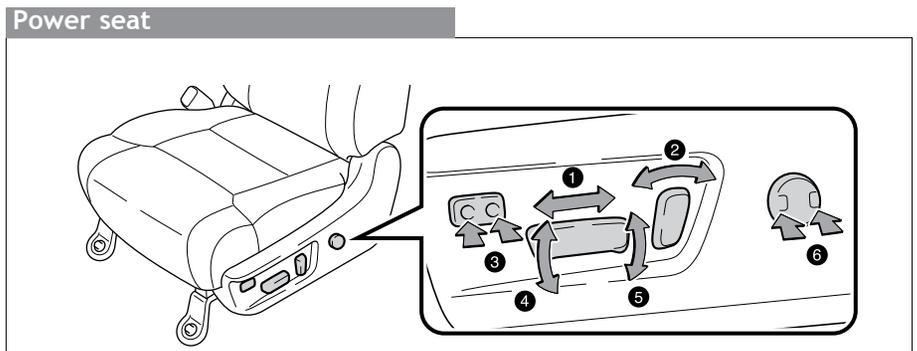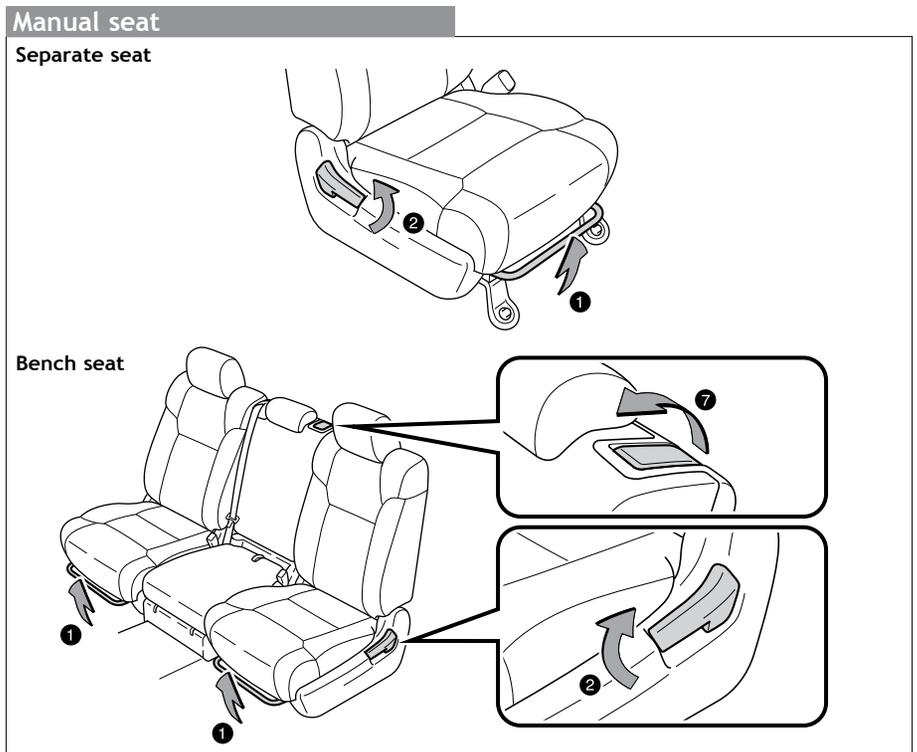


- ① Seat position (forward/backward)
- ② Seatback angle
- ③ Seat cushion length (driver seat only)
- ④ Seat cushion (front) angle (driver seat only)
- ⑤ Seat height (driver seat only)
- ⑥ Lumbar support
- ⑦ Seatback angle (center)



Seats-Head restraints

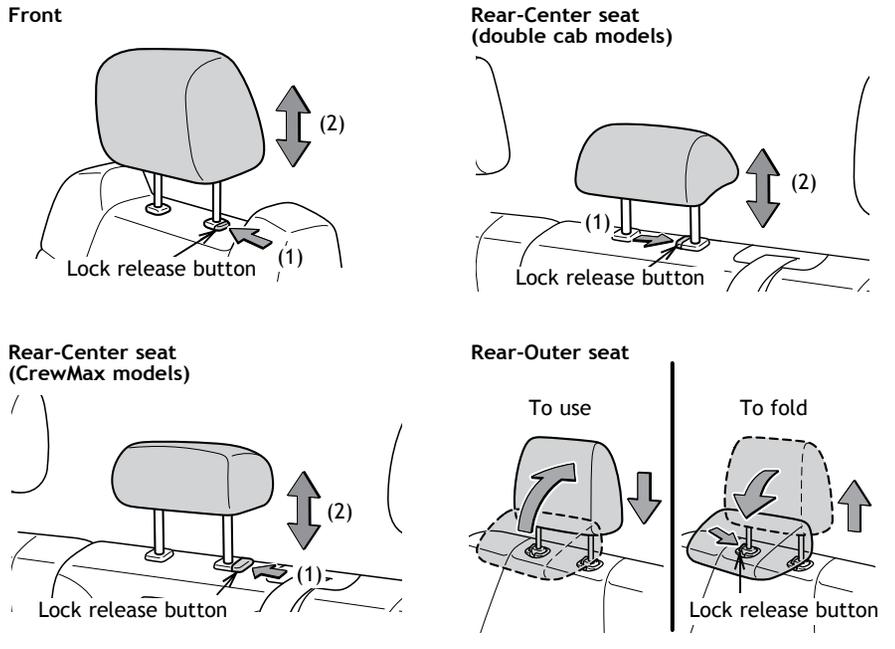


Rear seats-Folding (if equipped)

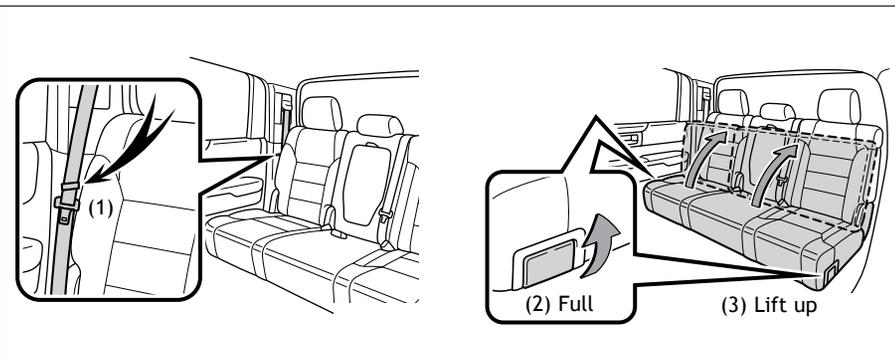

Windshield wipers & washers

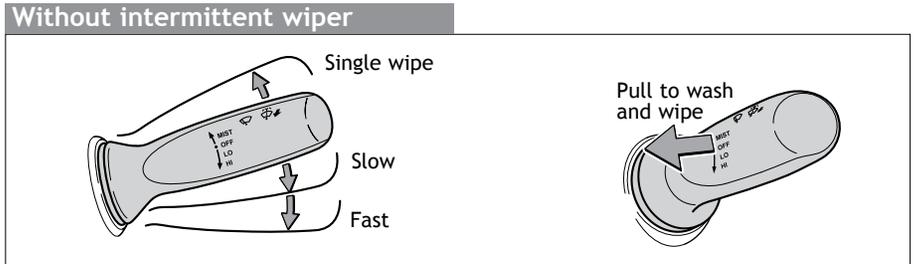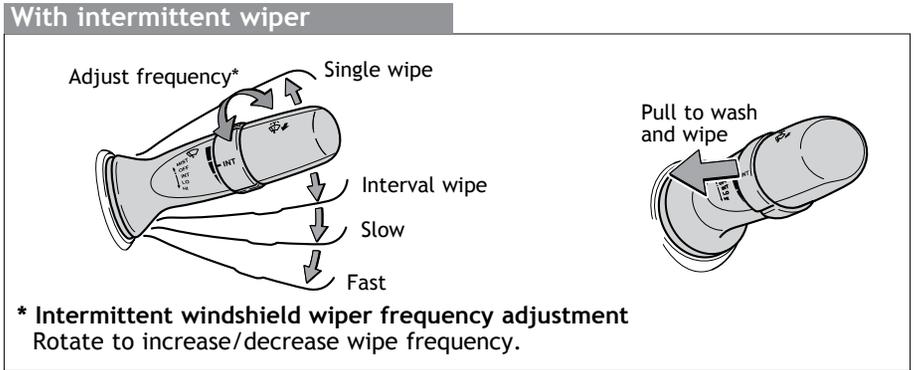

Trailer brake controller (if equipped)¹

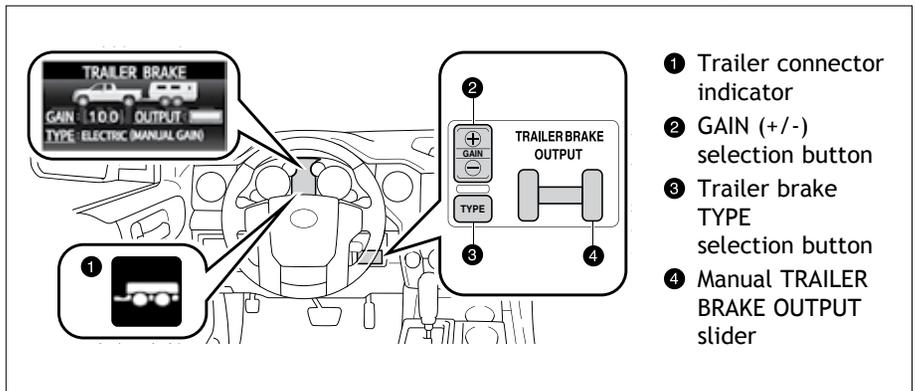


The trailer brakes can be controlled by the Trailer brake controller via the 7-pin connector. By selecting the type of brakes that are being used on the trailer (electric or electric-over-hydraulic) and setting the gain for the controller, the manual TRAILER BRAKE OUTPUT slider is used to slow just the trailer. The vehicle brake pedal will also slow down as well as stop the trailer when applied, also via the same connector. Gain values, manual brake outputs, trailer brake types, and the trailer connection status are displayed in the multi-information display.*

* For more information on Trailer brake controller, please refer to the *OWNER'S MANUAL*.


Lights & turn signals

Headlights

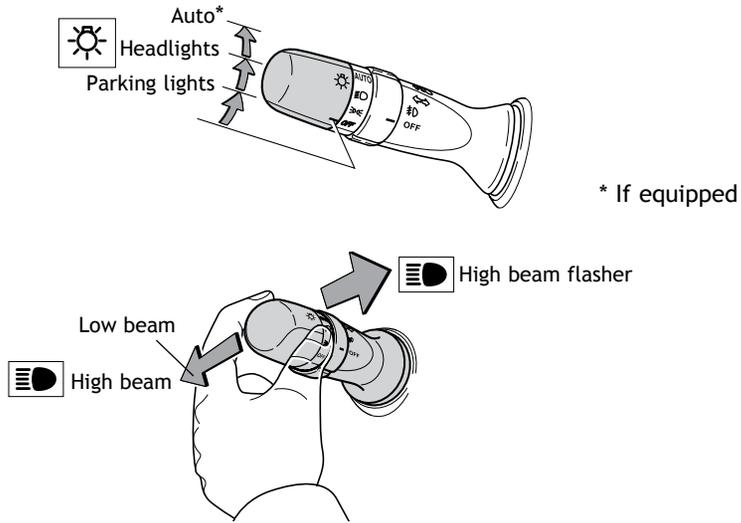


-Daytime Running Light system (DRL) Automatically turns on the headlights to make vehicle more visible to other drivers. Not for use at night.
-Automatic light cut off system Automatically turns lights off after 30-second delay, or lock switch on remote may be pushed after locking.

Front fog lights (if equipped)

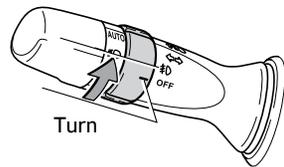

Front fog lights come on only when the headlights are on low beam.


Turn signals

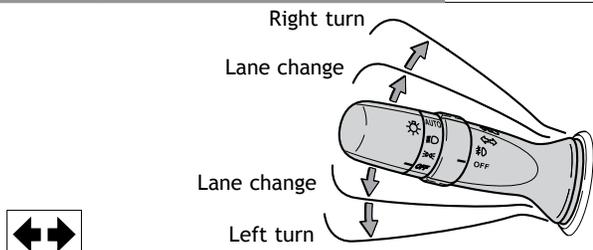


Power outlets-12V DC (if equipped)

Separate seats


Instrument panel

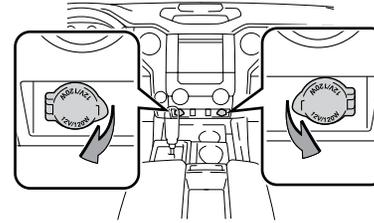


Inside of the console box

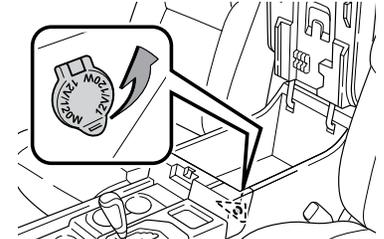

Back of the console box (type A)

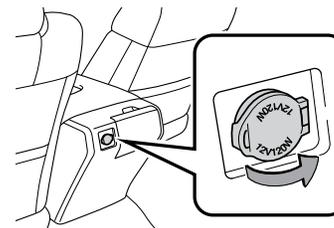


Back of the console box (type B)

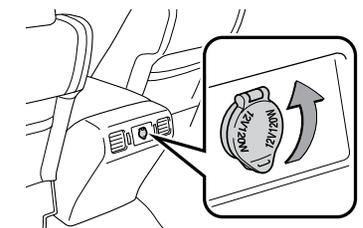


Bench seat


Instrument panel

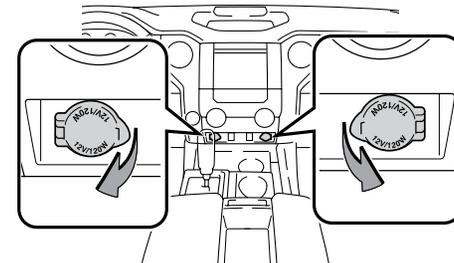

Back of the front center seat (type A)

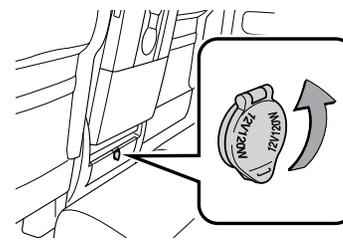


Back of the front center seat (type B)

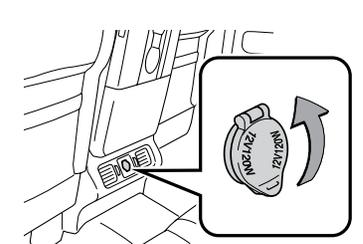


Key must be in the "ACC" or "ON" position to use.


Parking brake

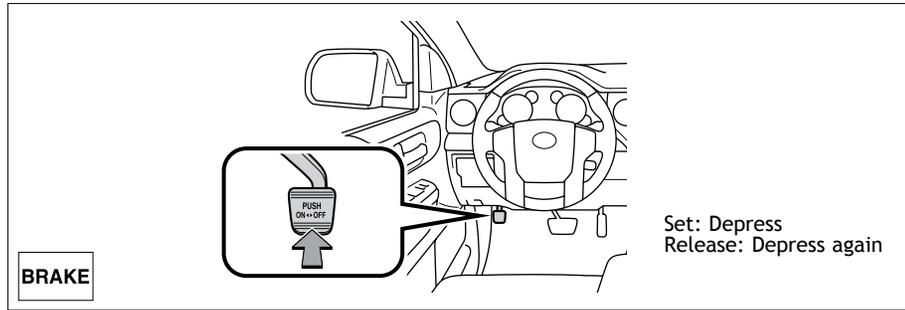

Window-Rear (if equipped)

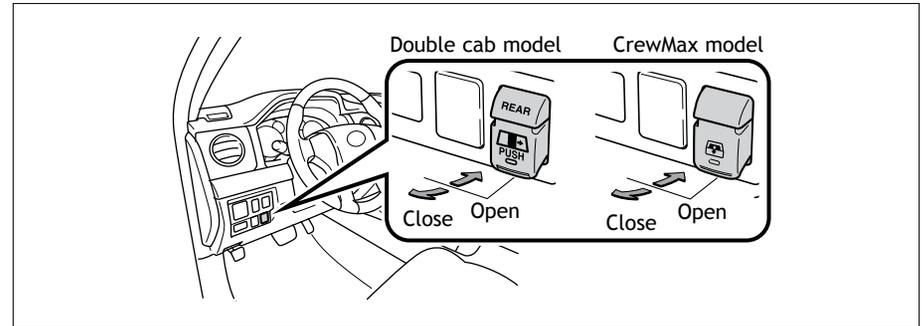

Windows-Power (if equipped)

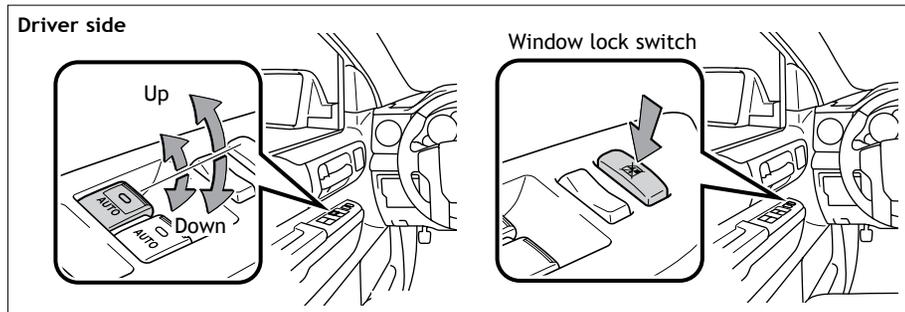


Automatic operation (passenger side for some models and driver side) Push the switch completely down or pull it completely up and release to fully open or close.* To stop window partway, lightly push the switch in the opposite direction.
Window lock switch Deactivates all passenger windows. Driver's window remains operable.


* Not all models are equipped with one-touch close function.

Seat heaters (if equipped) and ventilators (if equipped)

Seat heaters

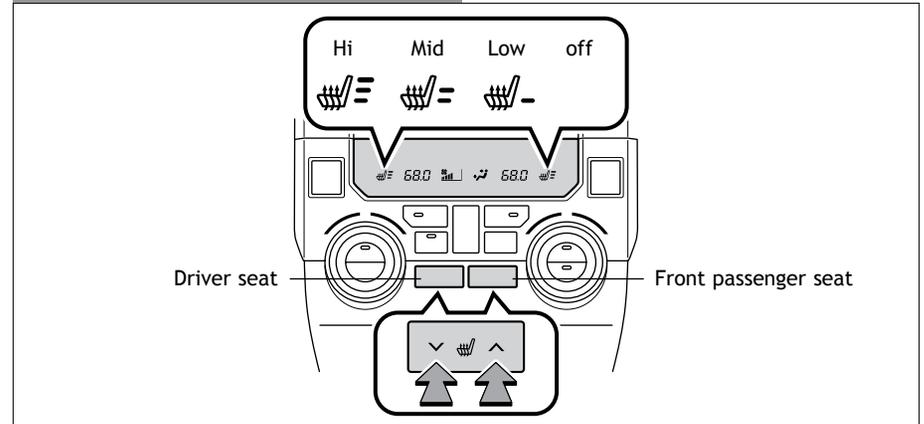


Seat heaters and ventilators

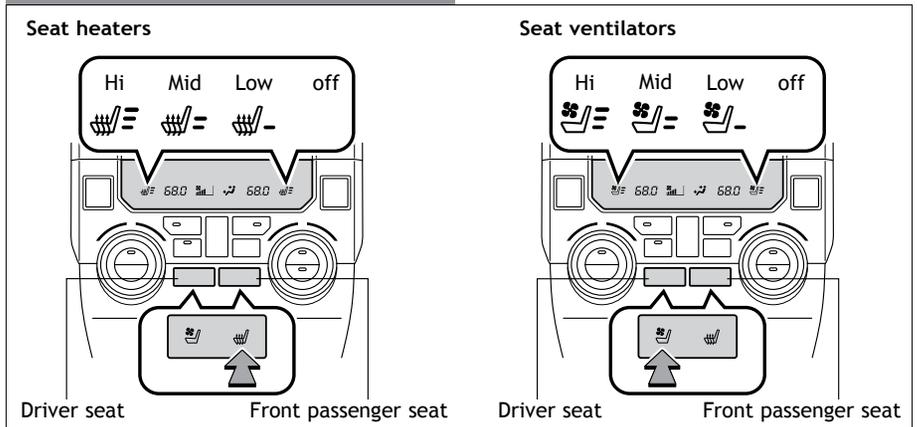


Air Conditioning/Heating

Automatic Air Conditioning

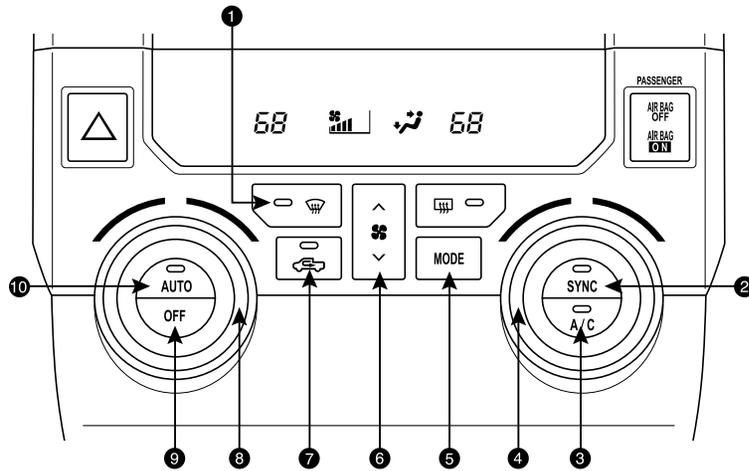


- 1 Windshield defogger (fresh air only)
- 2 Synchronize temperature settings for driver and passenger.
- 3 Air Conditioning ON/OFF
- 4 Temperature selector (front passenger side)
- 5 Airflow vent
- 6 Fan speed
- 7 Recirculate cabin air (fresh air when OFF)
- 8 Temperature selector (driver side)
- 9 Climate control OFF
- 10 Automatic climate control ON
Adjusting the temperature setting will cause the airflow vents, air intake and fan to adjust automatically.

Manual Air Conditioning

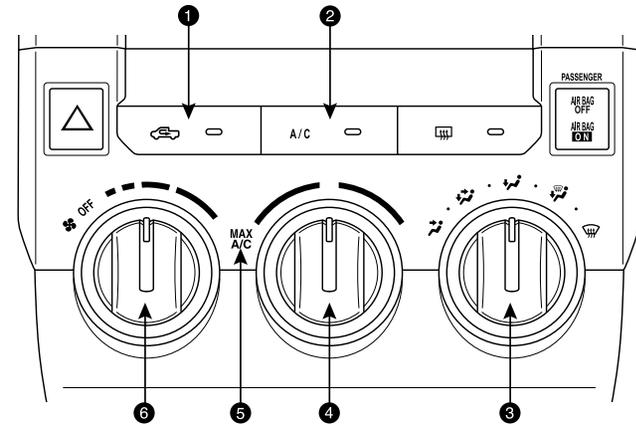

- 1 Recirculate cabin air (fresh air when OFF)
- 2 Air Conditioning ON/OFF
- 3 Airflow vent selector
- 4 Temperature selector
- 5 Select for maximum cooling. Air intake will automatically be set to recirculate.
- 6 Fan speed

Garage door opener (HomeLink®)* (if equipped)

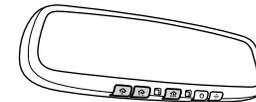

Garage door openers manufactured under license from HomeLink®* can be programmed to operate garage doors, estate gates, security lighting, etc.


Refer to “Garage door opener,” Section 6-4 in the *Owner’s Manual* for more details.

For programming assistance, contact HomeLink® at 1-800-355-3515, or visit <http://www.homelink.com>.


* HomeLink® is a registered trademark of Johnson Controls, Inc.

Audio

Entune Audio

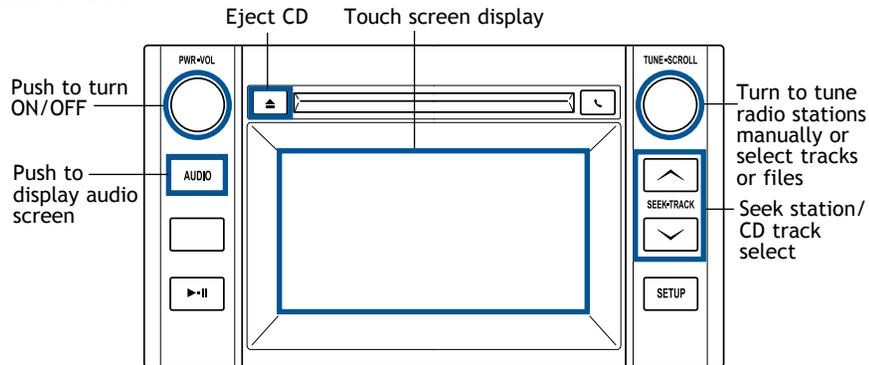


Entune Audio Plus*¹/Entune Premium Audio*¹/Entune Premium JBL Audio*¹

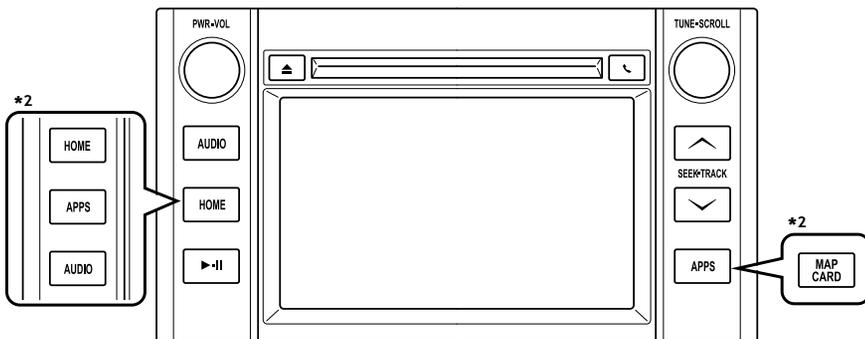

*¹ Refer to the "Navigation System Owner's Manual" for instructions.


*² Entune Premium Audio

Steering wheel switches

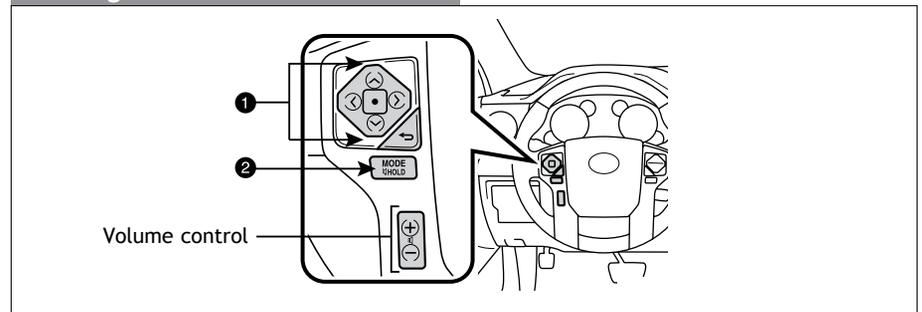

- ① "▲ ▼" "< >"
Use to search within the selected audio medium (radio, CD, iPod®, etc.).
- ② "MODE"
Push to turn audio ON and select an audio mode. Push and hold to pause the music or mute.

iPod®/USB/AUX port

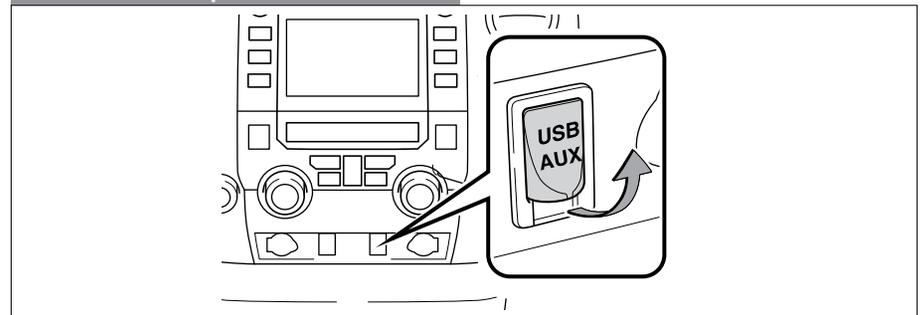


iPod®/USB port

By connecting a USB-compatible portable audio device or USB memory to the USB port, you can listen to music from the portable audio device or USB memory through the vehicle's speaker system.

AUX port

By inserting a mini plug into the AUX port, you can listen to music from a portable audio device through the vehicle's speaker system while in AUX mode.

Entune™ Audio Plus

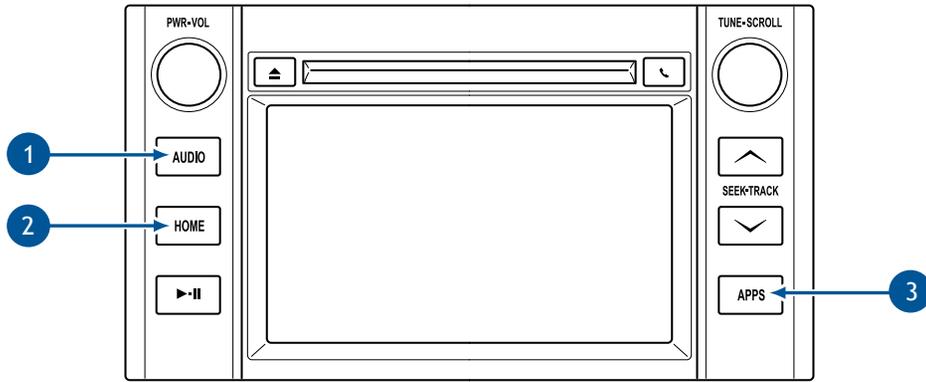

- 1 AUDIO Button
Access to audio functions.
- 2 HOME Button
Access to Home screen.
- 3 APPS Button
Access to features such as fuel consumption, traffic, and weather.

HOME SCREEN - the home screen offers a two panel and a three panel layout. Information and layout will vary depending on selected set up.


NOTE: Console configuration and position of buttons may vary in some vehicles.

Traffic



The Traffic App displays a scrollable map showing local traffic in 3 colors. Traffic conditions are displayed in red, yellow and green for heavy, moderate or light traffic conditions. Use  or  arrows to scroll the map up or down.

Weather

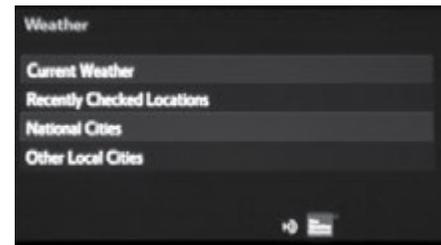


The Weather App options show current weather and recently checked locations weather. You can also search for a weather forecast by national or local cities.

Entune™ Premium Audio / Entune™ Premium JBL Audio
Please refer to the Entune™ Premium Audio with Navigation and App Suite Quick Reference Guide or Toyota Owner's Manual for additional details

Always drive safely, obey traffic laws & focus on the road while driving. Availability and accuracy of the information provided by HD services is dependent upon many factors. Services not available in every city or roadway. Use common sense when relying on information provided. HD Radio(tm) Technology manufactured under license from iBiquity Digital Corporation U.S. and Foreign Patents. HD Radio(tm) and the HD, HD Radio, and "Arc" logos are proprietary trademarks of iBiquity Digital Corp.


VSC OFF switch

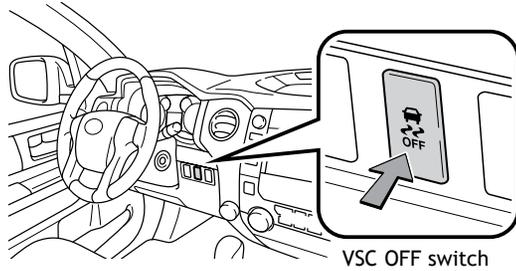

Without Multi-Information Display




With Multi-Information Display

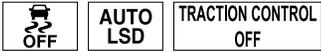

The VSC OFF switch is used to switch between modes related to the TRAC, VSC and Auto LSD functions.

Refer to Section 4-5 of the *Owner's Manual* for more information.

Multi-Information Display (if equipped)

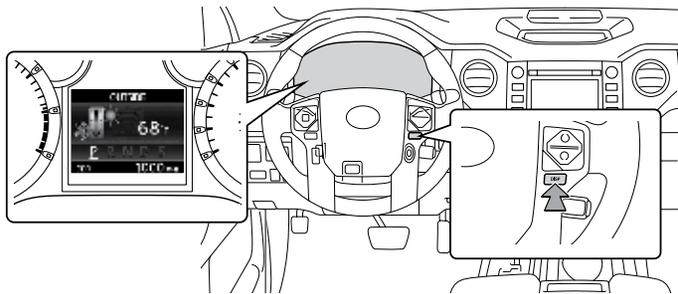

Push "DISP" to scroll through the following:


- (1) Total average fuel economy
- (2) Instantaneous fuel economy
- (3) Cruising range
- (4) Running time after starting
- (5) Average speed after starting
- (6) Trailer Brake Controller*
- (7) Setting

* Push and hold display button to reset.

Refer to your *Owner's Manual* for complete details on this system before attempting to use it.

Cruise control

Turning system ON/OFF

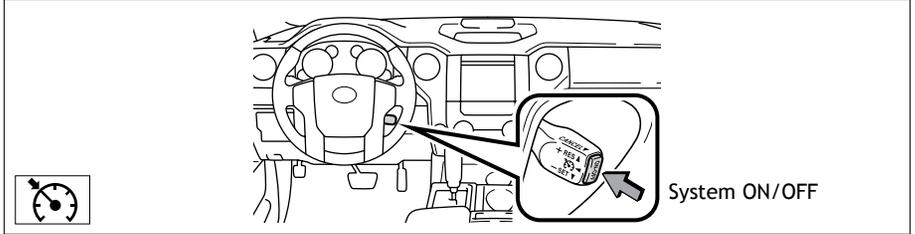


Functions



- ¹ The set speed may also be cancelled by depressing the brake pedal.
- ² The set speed may be resumed once vehicle speed exceeds 25 mph.

Blind Spot Monitor (BSM) with Rear Cross Traffic Alert (if equipped)

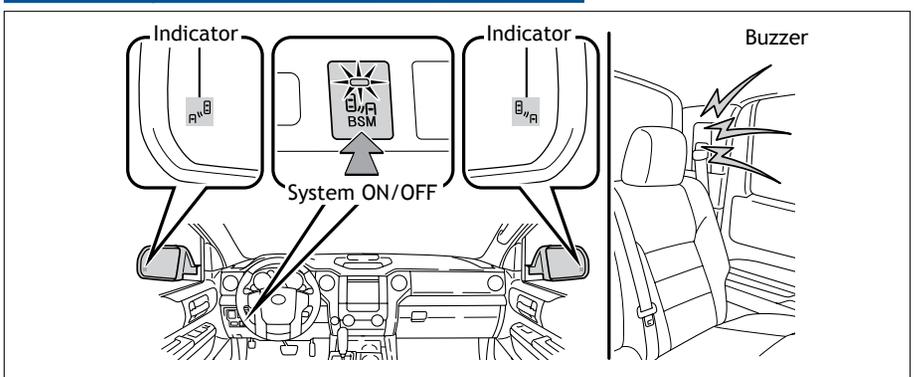


The Blind Spot Monitor is a system that has two functions:

- The Blind Spot Monitor function (assists the driver in decision making when changing lanes)
- The Rear Cross Traffic Alert function (assists the driver when backing up)

The system uses radar sensors to detect vehicles that are traveling in the area that is not reflected in the outside rearview mirror (the blind spot), and advises the driver of the vehicles' existence via the outside rearview mirror indicator.

Refer to the *Owner's Manual* for more details on this system before attempting to use it.


Telephone controls (Bluetooth®)

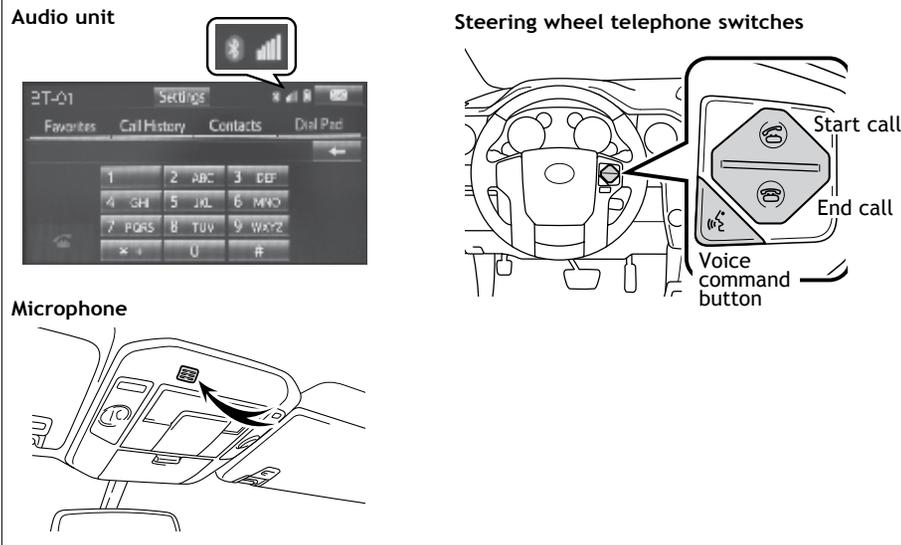


Bluetooth® technology allows dialing or receipt of calls without taking hands from the steering wheel or using a cable to connect the telephone and the system.

Refer to “Using a Bluetooth® phone,” Section 5-9 in the *Owner’s Manual*, for more details.

Bottle holders

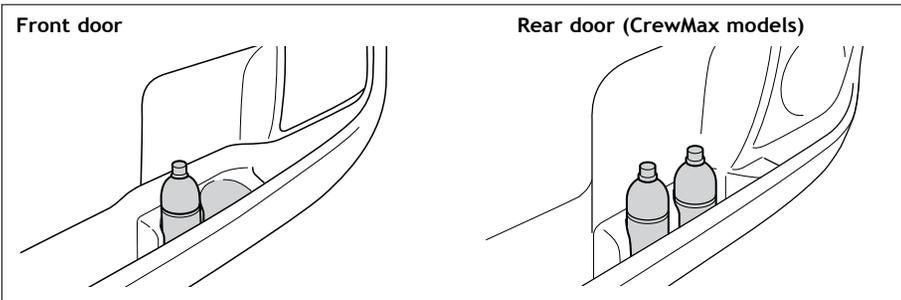


Cup holders

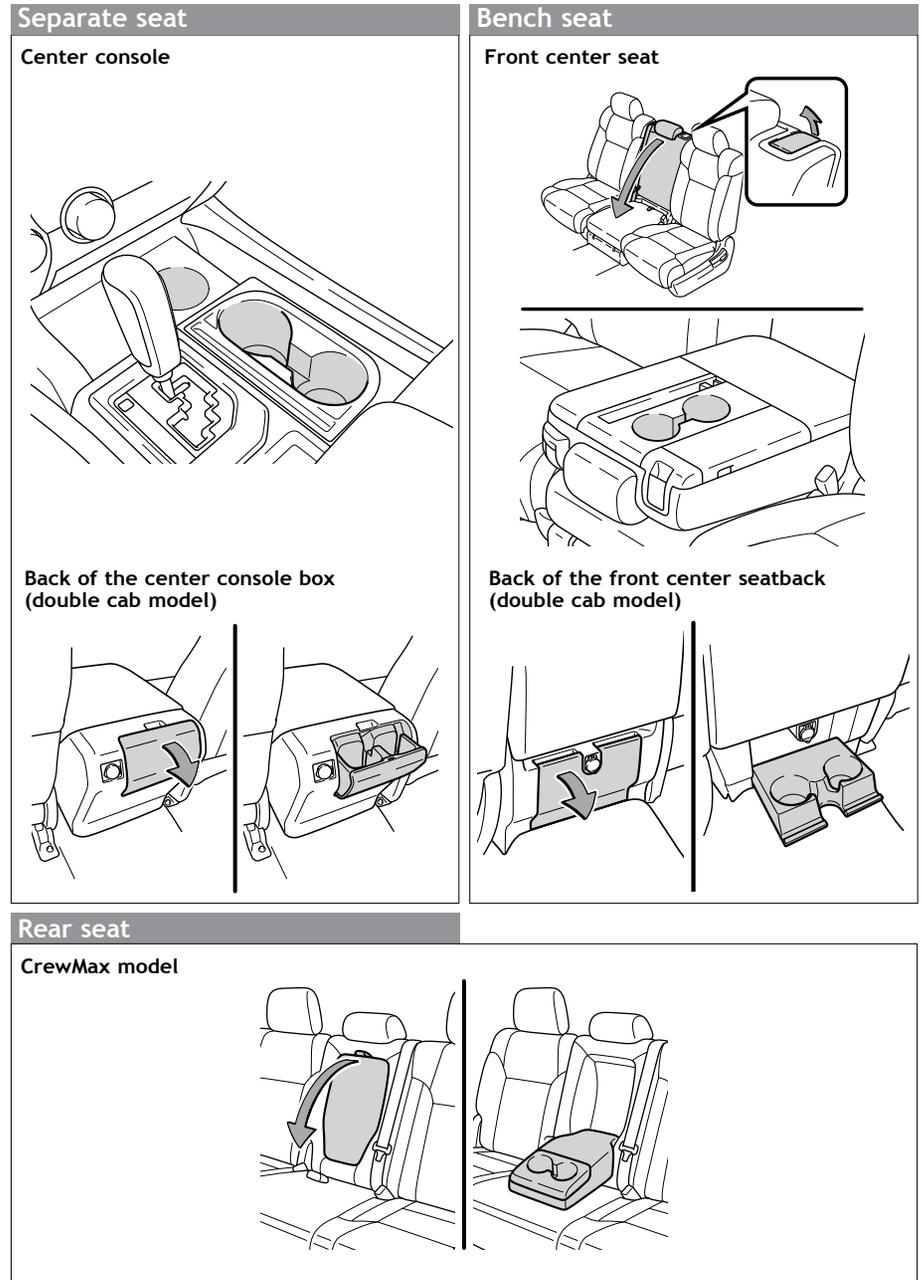

SAFETY AND EMERGENCY FEATURES


Seat belts

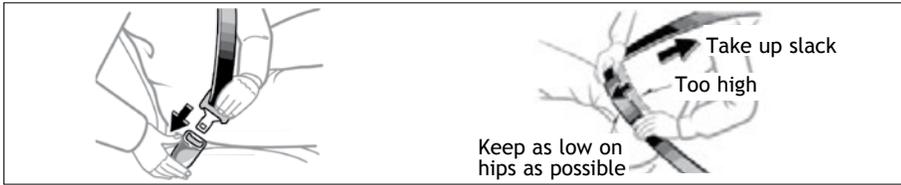

If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.

Seat belts-Shoulder belt anchor (CrewMax and double cab models)

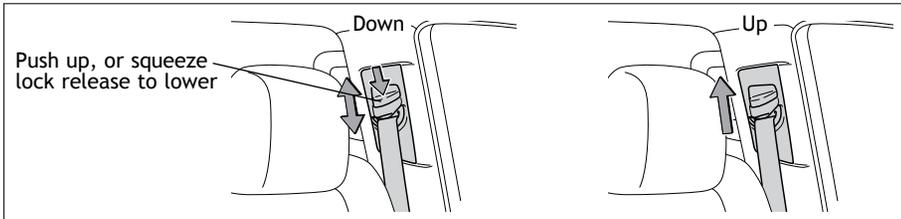

Tire Pressure Monitoring (warning) System



System reset initialization

1. Push and hold “SET” button until the indicator blinks three times.
2. Wait several minutes to allow initialization to complete.


After adjusting tire pressures, or after tires have been rotated or replaced, turn the ignition switch to “ON” and press and hold the “SET” button until indicator blinks three times. Let the vehicle sit for a few minutes to allow initialization to complete.

Refer to the load label on the door jamb or the *Owner's Manual* for tire inflation specifications.

If the tire pressure indicator flashes for more than 60 seconds and then remains on, take the vehicle to your local Toyota dealer.

NOTE: The warning light may come on due to temperature changes or changes in tire pressure from natural air leakage. If the system has not been initialized recently, setting the tire pressures to factory specifications should turn off the light.

Doors-Child safety locks (CrewMax and double cab models)

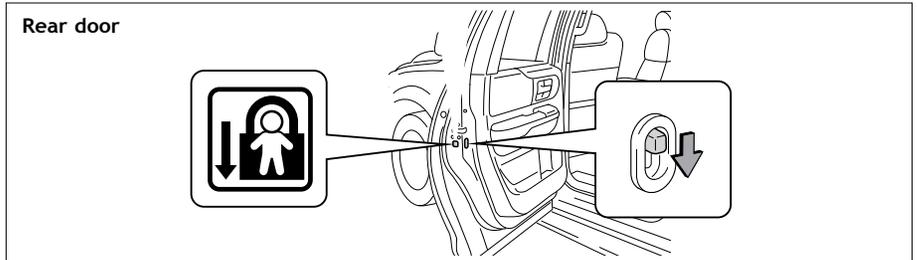


Moving the lever downward will allow the door to be opened only from the outside.


Spare tire & tools

Tool location


Regular cab models
-behind the right seatback

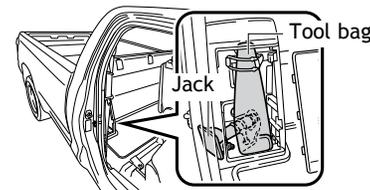


CrewMax models
-behind the right rear seatback

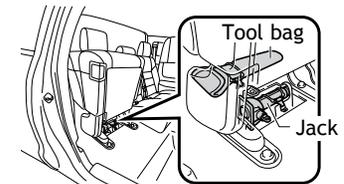


Double cab models
-under the right rear seats
without storage box

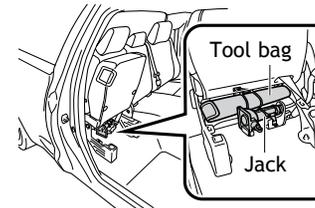

Double cab models
-under the right rear seats
with storage box

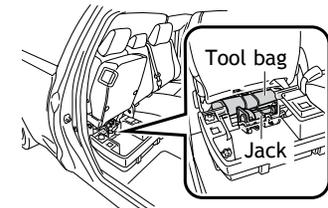

Removing the spare tire

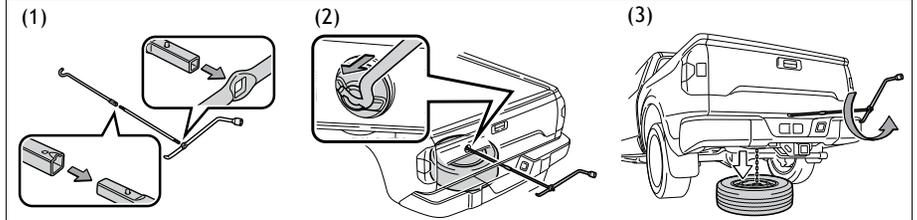

- (1) Assemble the jack handle.
- (2) Insert the jack handle end into the lowering screw.
- (3) Turn the jack handle counterclockwise.

Refer to the *Owner's Manual* for tire changing and jack positioning procedures.

Star Safety System™

All new Toyota vehicles come standard with the Star Safety System™, which combines Vehicle Stability Control (VSC), Traction Control (TRAC), Anti-lock Braking System (ABS), Electronic Brake-force Distribution (EBD), Brake Assist (BA) and Smart Stop Technology (SST).

Vehicle Stability Control (VSC)

VSC helps prevent loss of traction during cornering by reducing engine power and applying brake force to selected wheels.

Toyota's VSC monitors steering angle and the direction your vehicle is traveling. When it senses that the front or rear wheels begin to lose traction, VSC reduces engine power and applies braking to selected wheels. This helps restore traction and vehicle control.

Traction Control (TRAC)

VSC helps prevent loss of traction during cornering by reducing engine power, and Traction Control helps maintain traction on loose gravel and wet, icy, or uneven surfaces by applying brake force to the spinning wheel(s).

Toyota's TRAC sensors are activated when one of the drive wheels starts to slip. TRAC limits engine output and applies the brakes to the spinning wheel. This transfers power to the wheels that still have traction to help keep you on track.

Anti-Lock Brake System (ABS)

ABS helps prevent brakes from locking up by “pulsing” brake pressure to each wheel. This limits brake lockup and helps provide directional control for the current road conditions.

Toyota's ABS sensors detect which wheels are locking up and limits wheel lockup by “pulsing” each wheel's brakes independently. Pulsing releases brake pressure repeatedly for fractions of a second. This helps the tires attain the traction that current road conditions will allow, helping you to stay in directional control.

Electronic Brake Force Distribution (EBD)

Toyota's ABS technology has Electronic Brake-force Distribution (EBD) to help maintain control and balance when braking. Abrupt stops can cause a vehicle to tilt forward, reducing the braking power of the rear wheels. EBD responds to sudden stops by redistributing brake force to enhance the braking effectiveness of all four wheels.

Brake Assist (BA)

Brake Assist is designed to detect sudden or “panic” braking, and then add braking pressure to help decrease the vehicle's stopping distance. When there's only a split second to react, Brake Assist can add additional brake pressure more quickly than just the driver alone can.

Smart Stop Technology (SST)

Smart Stop Technology automatically reduces driving torque when the accelerator and brake pedals are pressed simultaneously under certain conditions.

SST engages when the accelerator is depressed first and the brakes are applied firmly for longer than one-half second at speeds greater than five miles per hour.

SST doesn't engage if the brake pedal is depressed before the accelerator pedal, allowing vehicles to start on a steep hill and safely accelerate without rolling backward.

Trailer Sway Control

Trailer sway may occur when towing a trailer due to strong crosswinds, uneven and/or winding road conditions or the driver's steering input.


Trailer Sway Control uses sensors to detect trailer sway and then simultaneously and automatically helps to suppress the swaying motion of the trailer by integrating brake and engine torque control to optimally reduce speed and to help quickly control the swaying motion of the trailer.

Floor mat installation

There are two types of Toyota floor mats: carpeted and all-weather. Each vehicle has model-specific floor mats. Installation is easy.

To keep your floor mat properly positioned, follow these steps:

- Only use floor mats designed for your specific model.
- Use only one floor mat at a time, using the retaining hooks to keep the mat in place.
- Install floor mats right side up.

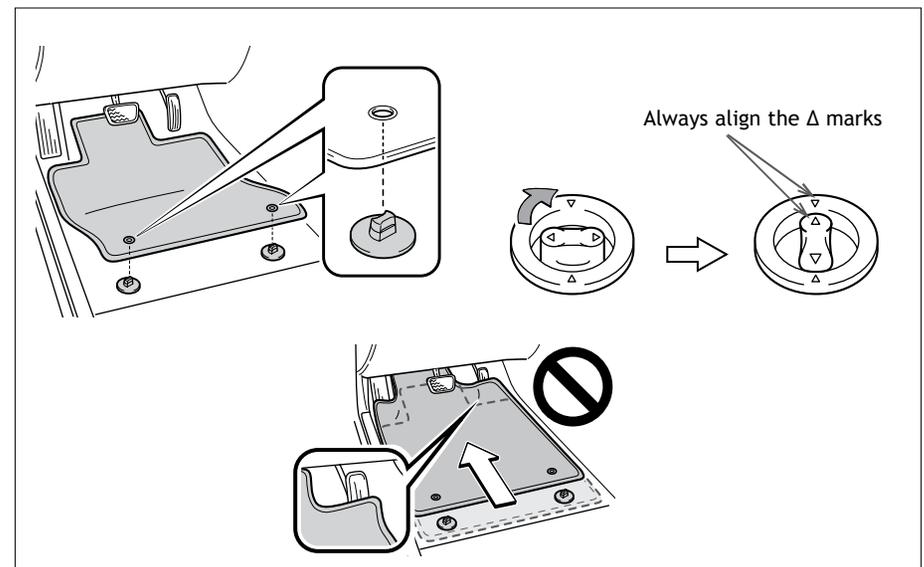


BLUETOOTH® DEVICE PAIRING SECTION

To begin the Bluetooth® Pairing process, press the HOME button on the faceplate of your Toyota Vehicle Entune™ Multimedia Head Unit.¹


Bluetooth® Pairing for Android® phone and Entune™ touch screen system

Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all Android mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.²


Initiate Bluetooth® on your Android®

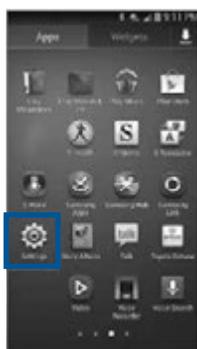


STEP 1
From your APPS SCREEN, select SETTINGS

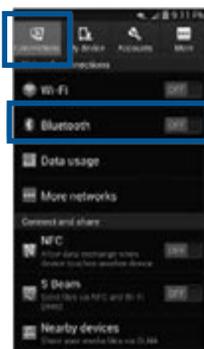

STEP 2
Select CONNECTIONS and select BLUETOOTH

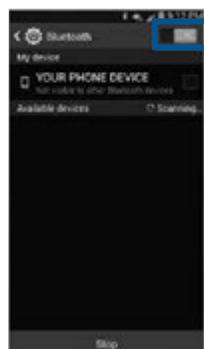

STEP 3
Ensure BLUETOOTH is ON

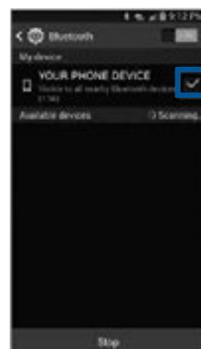

STEP 4
Select YOUR PHONE DEVICE to make it discoverable.


Phone will seek out Bluetooth devices while remaining discoverable.



STEP 5
While your Android device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

Initiate Bluetooth® on your Entune™ Multimedia Head Unit


Once you have Bluetooth enabled on your phone and ready to pair, you will need to initiate Bluetooth on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.

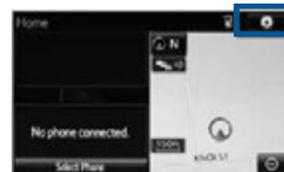


STEP 6
On your Toyota Vehicle Entune Multimedia Head Unit, Select SETUP BUTTON on the Home Screen.



STEP 7
Select BLUETOOTH

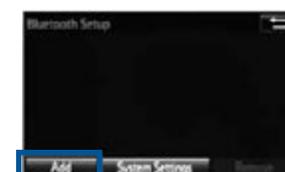

STEP 8
Select ADD, to add your phone device

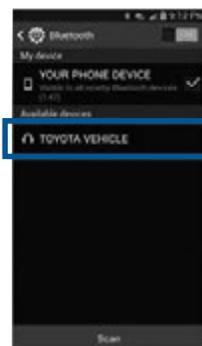


STEP 9
Back on your smartphone, you can now select your TOYOTA VEHICLE in Bluetooth Settings.

You may need to enter the provided Bluetooth PIN on your phone.



STEP 10
Your smartphone is now paired with Entune.

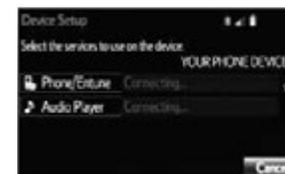


STEP 11
Once paired, Entune will attempt to connect audio and contacts on your phone.

¹ To determine which head unit is installed in your vehicle, refer to page 22.

² Some Android devices may have slightly different SETTINGS screen layout depending on manufacturer of device and Android OS version.


Initiate Bluetooth® on your Entune™ Multimedia Head Unit (continued)

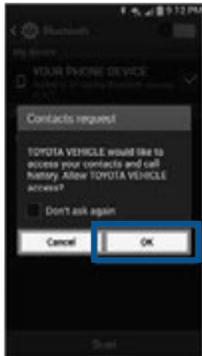

STEP 12

Using your smartphone, you will need to allow Entune access to your messaging and contacts

It is recommended to check the "Don't ask again" box, so as not to have to press OK every time the phone makes a Bluetooth connection with your Toyota

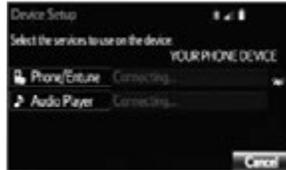

STEP 13

A confirmation will appear once your phone has been paired and connected.

Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:
www.toyota.com/connect

Your Toyota Owner's Manual
Located in the vehicle glovebox

Toyota Customer
Experience Center
(800) 331-4331

Disclosures

- This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.
1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
 2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
 3. Android is a trademark of Google, Inc. All rights reserved. Google is not a participant in or sponsor of this promotion.
 4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.
 5. Bluetooth Pairing Guide for select 2014 models.

Bluetooth® Pairing for iPhone® and Entune™ touch screen system


Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all iPhone mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to "talk" to each other and form a connection. Bluetooth Pairing Guide for select 2014 models.

Initiate Bluetooth® on your iPhone®



STEP 1

From the HOME SCREEN, select SETTINGS

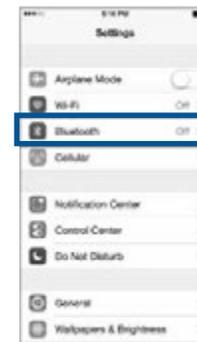

STEP 2

Select BLUETOOTH



STEP 3

Ensure BLUETOOTH is ON



STEP 4

Your iPhone will seek out Bluetooth devices while remaining discoverable



STEP 5

While your iPhone device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

CONTINUE ON THE NEXT PAGE...

Initiate Bluetooth® on your Entune™ Multimedia Head Unit


Once you have Bluetooth enabled on your phone and ready to pair, you will need to initiate Bluetooth on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.



STEP 6
Select **SETUP** BUTTON on the Home Screen.



STEP 7
Select **BLUETOOTH**

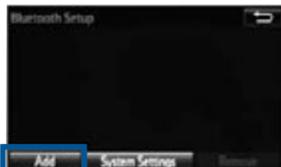

STEP 8
Select **ADD**, to add your phone device




STEP 9
Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.


You may need to enter the provided Bluetooth PIN on your phone.




STEP 10
Your smartphone is now paired with Entune.

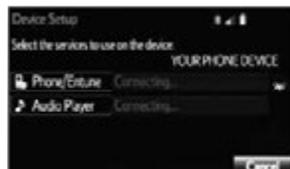

STEP 11
Once paired, Entune will attempt to connect audio and contacts on your phone.

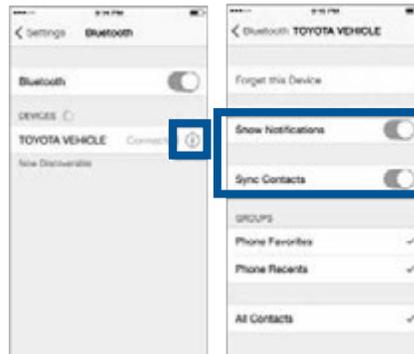

STEP 12
Using your smartphone, you may need to allow Entune access to your messaging and contacts
Only current iPhone text messages can be viewed on the head unit. iPhone does not allow text message reply.

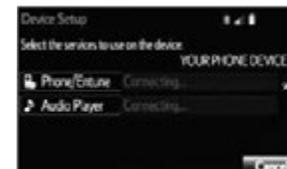

STEP 13
A confirmation will appear once your phone has been paired and connected.

Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:
www.toyota.com/connect

Your Toyota Owner's Manual
Located in the vehicle glovebox

Toyota Customer Experience Center
(800) 331-4331

Disclosures

This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.

1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
3. Android is a trademark of Google, Inc. All rights reserved. Google is not a participant in or sponsor of this promotion.
4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.
5. Bluetooth Pairing Guide for select 2014 models.

Bluetooth® Pairing for Windows Phone® and Entune™ touch screen system

Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all Windows Phone mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection. Bluetooth Pairing Guide for select 2014 models.

Initiate Bluetooth® on your Windows Phone®



STEP 1
From your APP LIST, select **SETTINGS**



STEP 2
Select **BLUETOOTH**



STEP 3
Ensure **BLUETOOTH** is **ON**



STEP 4
Phone will seek out Bluetooth devices while remaining discoverable



STEP 5
While your iPhone device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

CONTINUE ON THE NEXT PAGE...

Initiate Bluetooth® on your Entune™ Multimedia Head Unit


Once you have Bluetooth® enabled on your phone and ready to pair, you will need to initiate Bluetooth® on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.




STEP 6
On your Toyota Vehicle Entune Multimedia Head Unit, Select **SETUP BUTTON** on the Home Screen.



STEP 7
Select **BLUETOOTH**

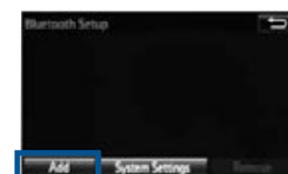

STEP 8
Select **ADD**, to add your phone device

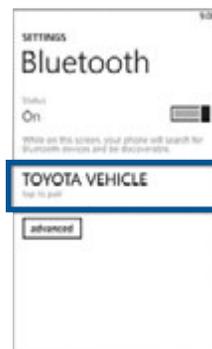


STEP 9
Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.

You may need to enter the provided Bluetooth PIN on your phone.



STEP 10
Your smartphone is now paired with Entune.

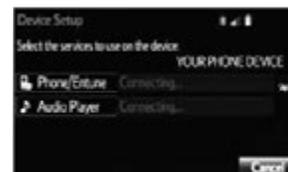


STEP 11
Once paired, Entune will attempt to connect audio and contacts on your phone.

Initiate Bluetooth® on your Entune™ Multimedia Head Unit (continued)



STEP 12

Using your smartphone, you may need to allow Entune access to your contacts

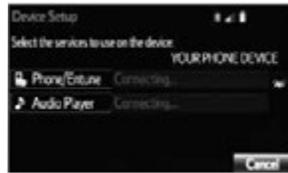

STEP 13

A confirmation will appear that your phone has been paired and connected.

Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:
www.toyota.com/connect

Your Toyota Owner's Manual
Located in the vehicle glovebox

Toyota Customer Experience Center
 (800) 331-4331

- Disclosures
- This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.
1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
 2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
 3. Android is a trademark of Google, Inc. All rights reserved. Google is not a participant in or sponsor of this promotion.
 4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.
 5. Bluetooth Pairing Guide for select 2014 models.

NOTES