

**2015  
Yaris Liftback  
Quick Reference Guide**

# 2015 Yaris Liftback

This *Quick Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Quick Reference Guide* is not intended as a substitute for the *Owner's Manual* located in your vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Yaris.

## A word about safe vehicle operations

This *Quick Reference Guide* is not a full description of Yaris operations. Every Yaris owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Quick Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.


## INDEX

OVERVIEW	Engine maintenance	7
	Fuel tank door release and cap	6
	Hood release	7
	Indicator symbols	4-5
	Instrument cluster	4
	Instrument panel	2-3
	<b>Keyless entry*</b>	<b>6</b>
FEATURES/OPERATIONS	Air Conditioning/Heating	13
	Audio	16
	Automatic Transmission	8
	Bluetooth® Device Pairing	16
	Clock	14
	Cruise control	13
	Cup holders	15
	Door-Back	15
	Light control-Instrument panel	9
	Lights & turn signals	9
	Multi-Information Display	15
	Parking brake	8
	Power outlet	11
	Seat adjustments-Front	10
	Seat-Folding rear seat	10-11
	Seats-Head restraints	11
	Steering wheel switches	14
Tilt steering wheel	8	
USB port/AUX port	14	
Windows-Power	12	
Windshield wipers & washers	12	
SAFETY AND	Door locks-Power	17
	Floor mat installation	21
EMERGENCY FEATURES	Seat belts	17
	Spare tire & tools	19
	SRS Airbags	18
	Star Safety System™	20-21
	Tire Pressure Monitoring (warning) System	18

\* Visit your Toyota dealer for information on customizing this feature.

# OVERVIEW

## Instrument panel

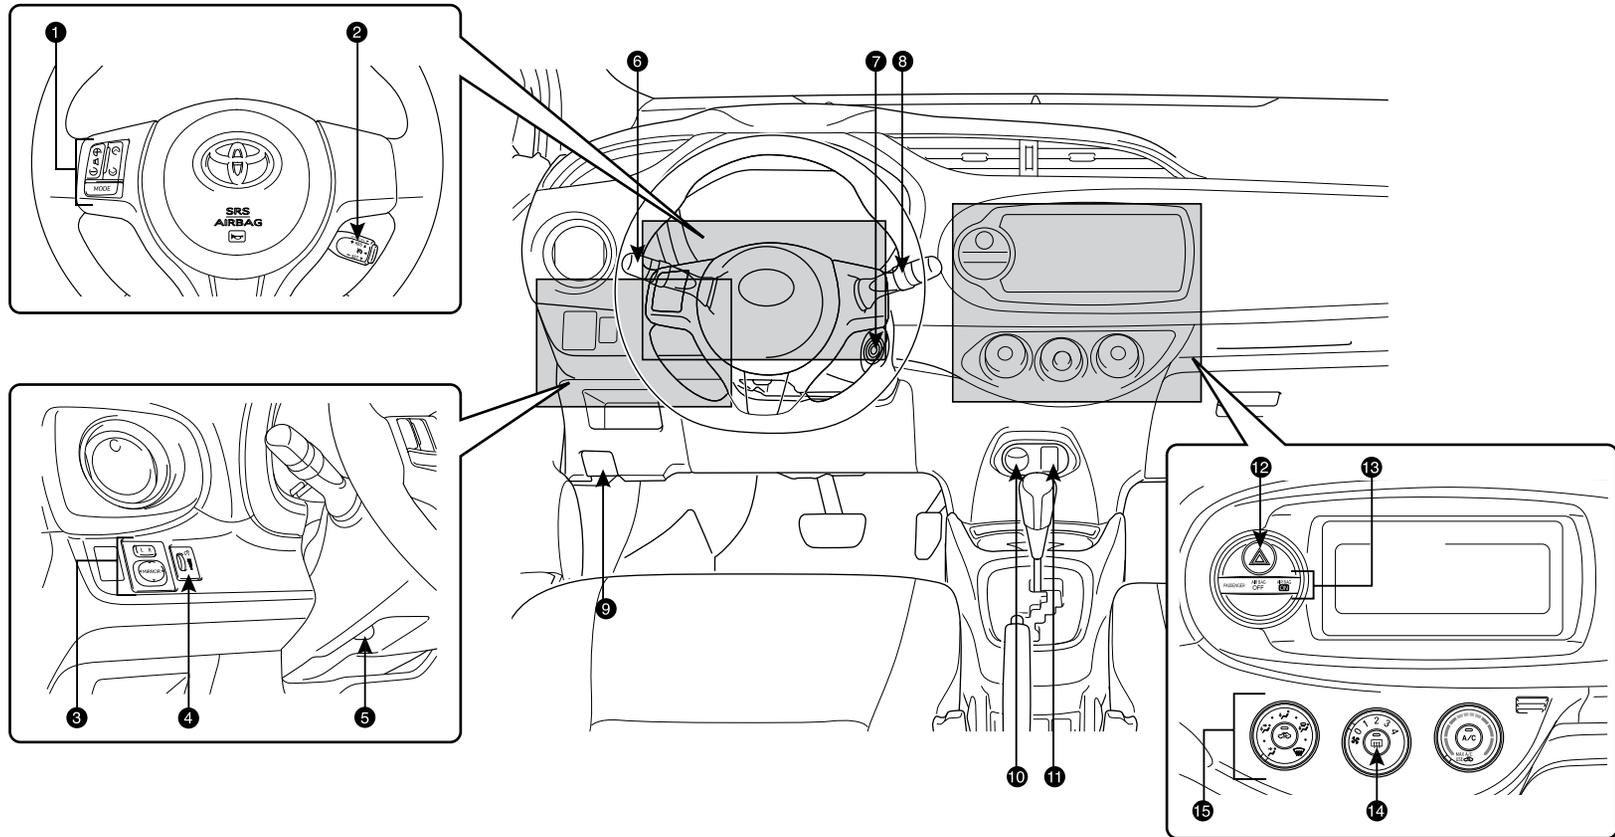


- ❶ Steering wheel audio controls<sup>1,2</sup>
- ❷ Cruise control<sup>1</sup>
- ❸ Power outside rearview mirror control switches<sup>1</sup>
- ❹ Instrument panel light control
- ❺ Tilt steering lock release lever
- ❻ Headlight, turn signal and front fog light<sup>1</sup> controls
- ❼ Ignition switch
- ❽ Wiper and washer controls

- ❾ Hood release
- ❿ 12V DC power outlet
- ⓫ USB port/AUX port<sup>1</sup>
- ⓬ Emergency flasher switch
- ⓭ “AIR BAG ON” and “AIR BAG OFF” indicator
- ⓮ Rear window defogger switch
- ⓯ Air Conditioning controls

<sup>1</sup> If equipped

<sup>2</sup> Refer to the *Toyota Audio System Owner’s Manual* or the *Navigation System Owner’s Manual* for more details.

### Instrument cluster

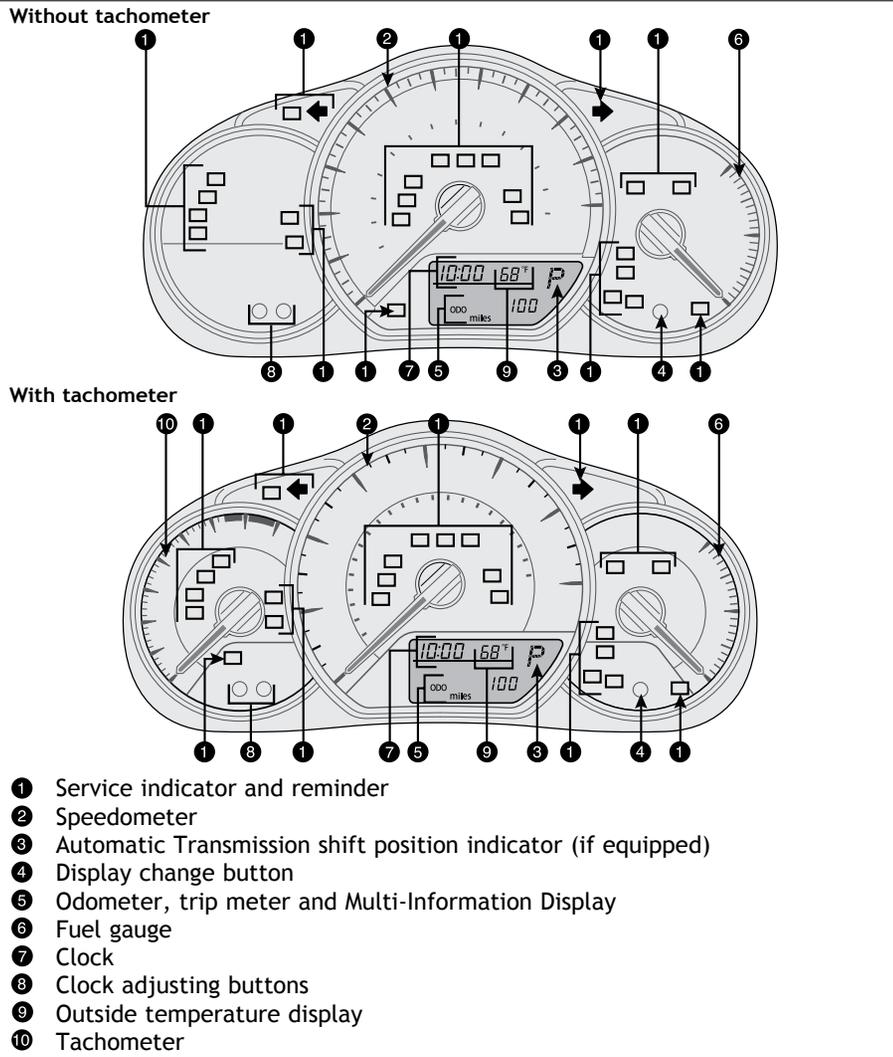

### Indicator symbols

For details, refer to “Indicators and warning lights,” Section 2-2, 2014 Owner’s Manual.

- BRAKE Brake system warning<sup>1</sup>
- Driver seat belt reminder (alarm will sound if speed is over 12 mph)

- Eco Driving indicator light<sup>1</sup>
- Charging system warning<sup>1</sup>
- Malfunction/Check Engine indicator<sup>1</sup>
- Low engine oil pressure warning<sup>1</sup>
- Open door warning
- Airbag SRS warning<sup>1</sup>
- Low windshield washer fluid warning
- Electric power steering system warning<sup>1</sup>
- Low fuel level warning
- Engine oil replacement reminder<sup>1</sup>
- AIR BAG ON indicator
- AIR BAG OFF indicator<sup>1</sup>
- VSC OFF indicator<sup>1</sup>
- TRAC OFF indicator<sup>1</sup>
- Headlight high beam indicator
- Front fog light indicator
- Turn signal indicator
- High engine coolant temperature warning<sup>1</sup>
- Low engine coolant temperature indicator
- Slip indicator<sup>1</sup>
- Cruise control indicator<sup>2</sup>
- Cruise control SET indicator
- Anti-lock Brake System warning<sup>1</sup>
- Low Tire Pressure Warning<sup>1</sup>

<sup>1</sup> If indicator does not turn off within a few seconds of starting engine, there may be a malfunction. Have vehicle inspected by your Toyota dealer.

<sup>2</sup> For details, refer to “Cruise control” Section 2-4, 2014 Owner’s Manual.

### Fuel tank door release and cap

**NOTE:** Tighten until one click is heard. If the cap is not tightened enough, Check Engine “CHECK” indicator may illuminate.

### Keyless entry (if equipped)

#### Locking operation

Type A                      Type B

Push

#### Unlocking operation

Type A                      Type B

Push ONCE: Driver door  
TWICE: All doors

**NOTE:** If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.

#### Panic button

Push and hold

### Hood release

Pull

Pull up latch and raise hood

Engage support rod


### Engine maintenance

- ① Windshield washer and rear window washer fluid tank
- ② Engine oil filler cap
- ③ Engine oil level dipstick
- ④ Engine coolant reservoir

**NOTE:** Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the “Warranty & Maintenance Guide.”

# FEATURES/OPERATIONS


## Automatic Transmission (if equipped)

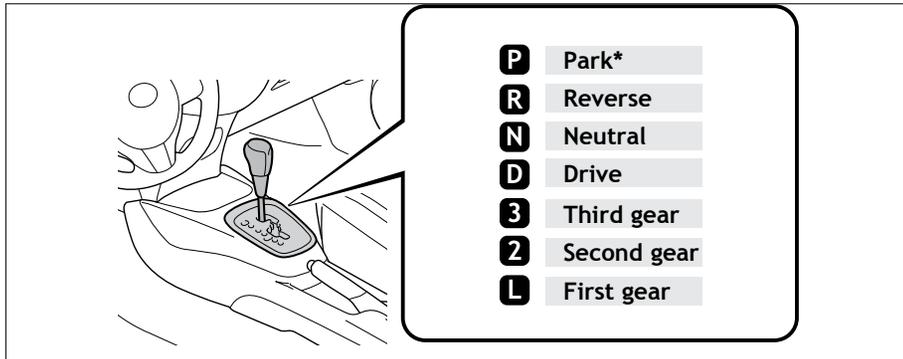

\* The ignition switch must be "ON" and the brake pedal depressed to shift from Park.

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.


## Tilt steering wheel

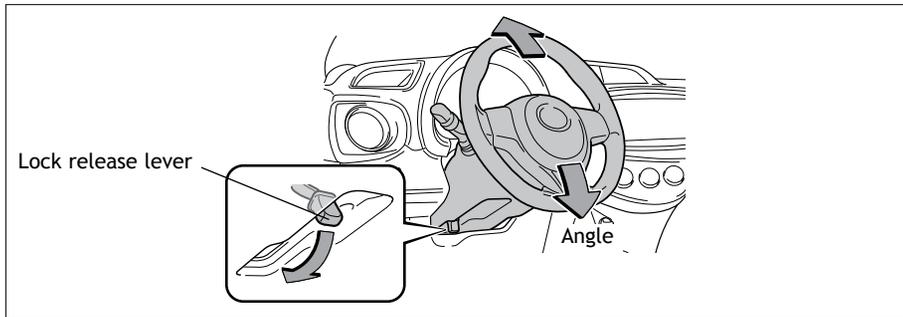


Hold wheel, push lever down, set angle and return lever.

**NOTE:** Do not attempt to adjust while the vehicle is in motion.




## Parking brake

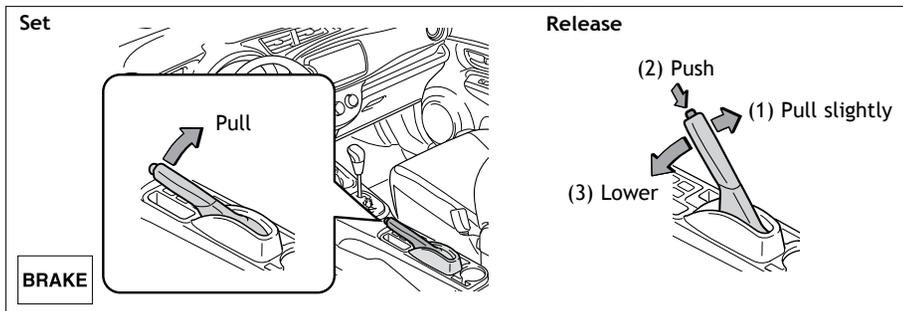


## Light control-Instrument panel

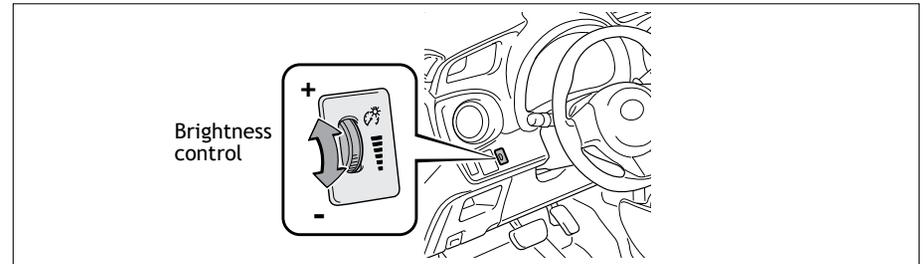


## Lights & turn signals

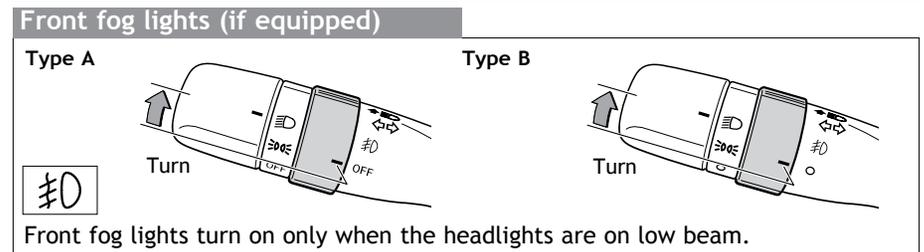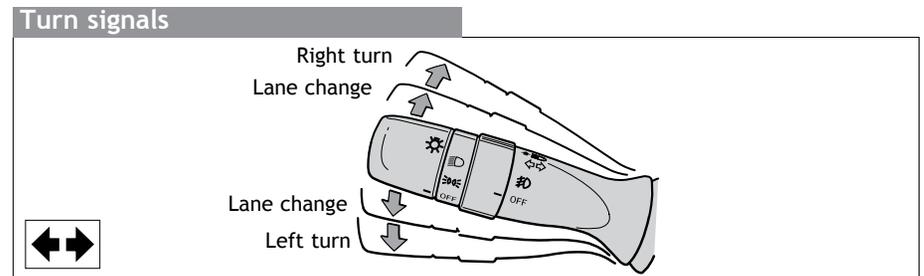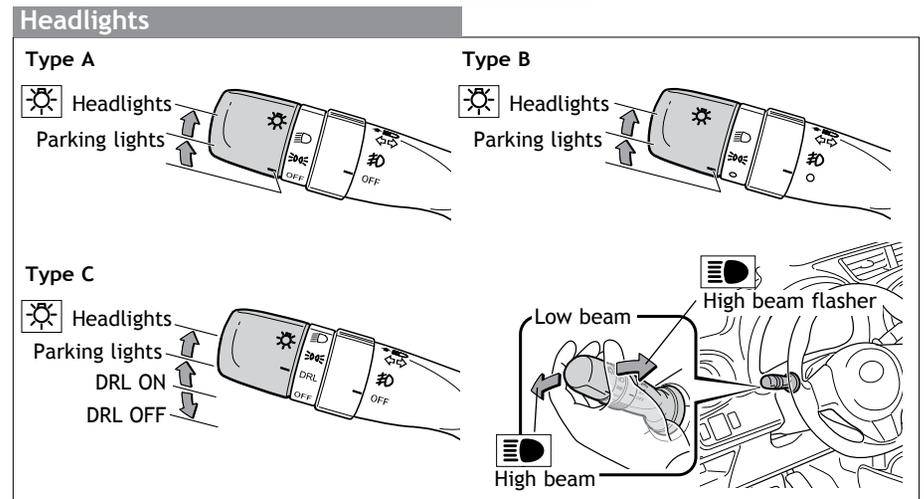


**Seat adjustments-Front**

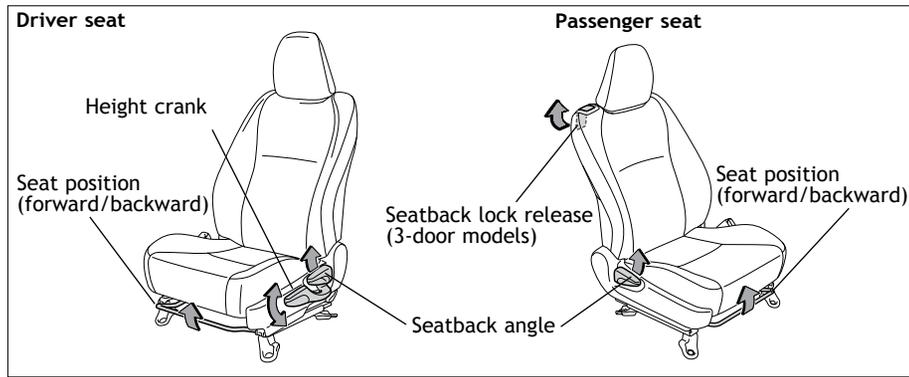


**Seat-Folding rear seat**

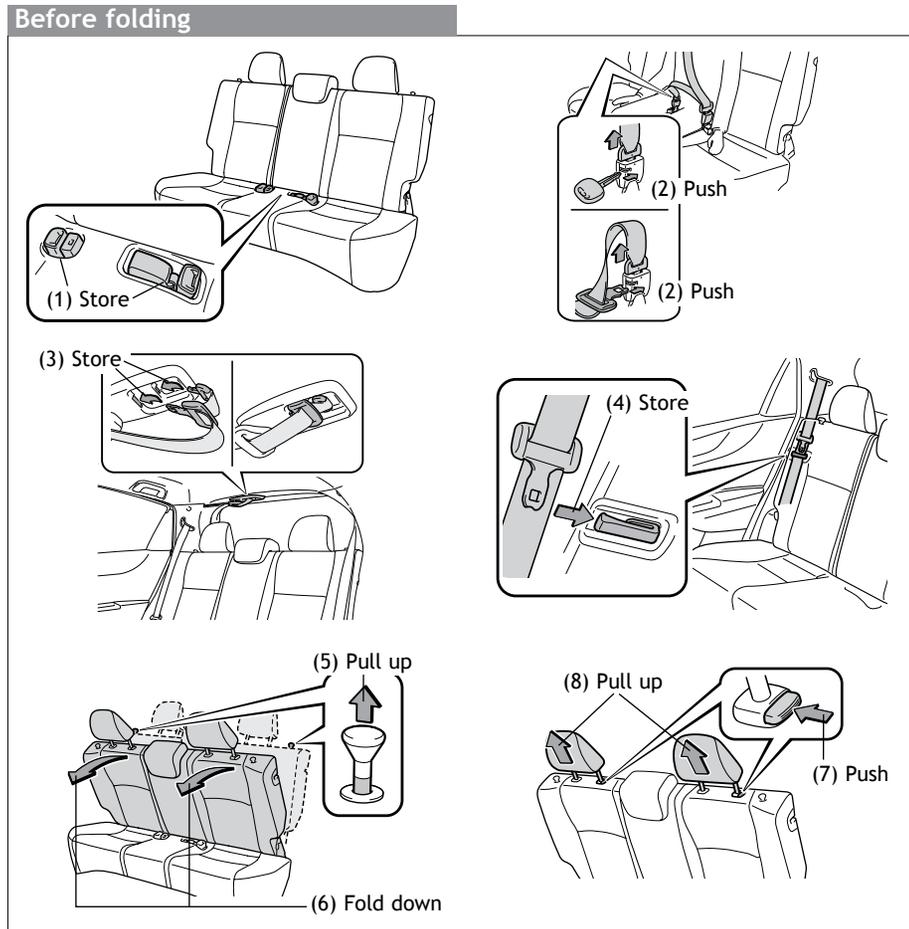


**Fold (split seat)**

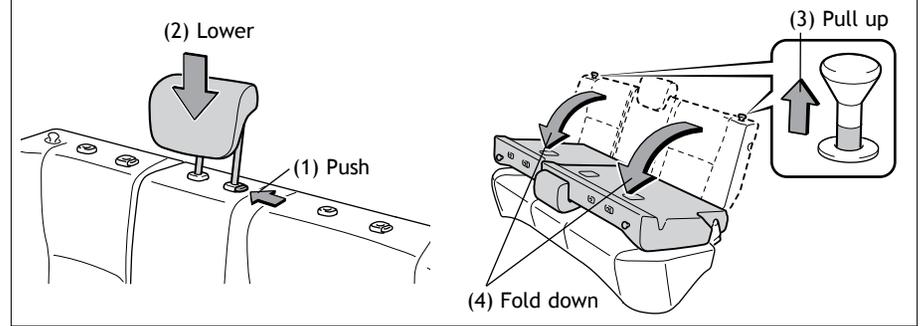

**Seats-Head restraints**

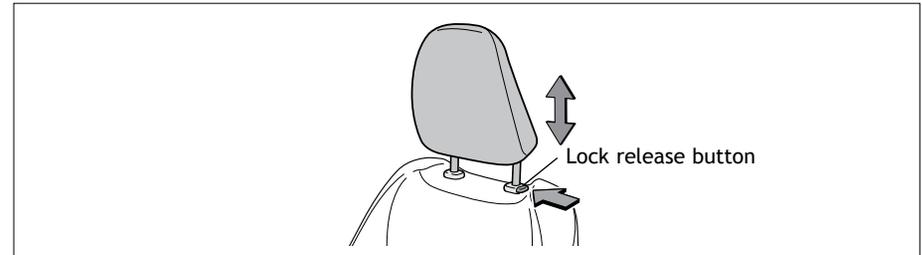


**Power outlet**

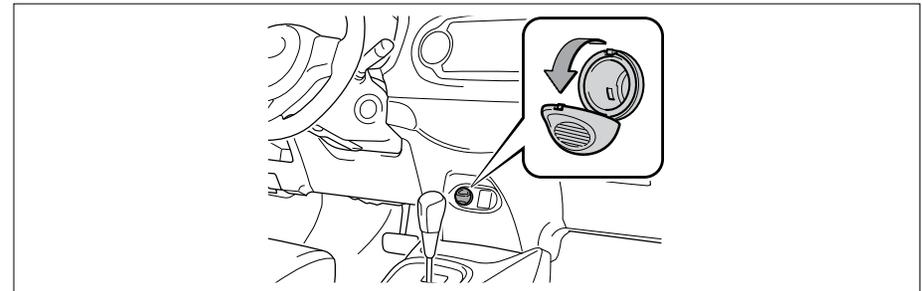

Designed for 12V car accessories. Key must be in the "ACC" or "ON" position to be used.



### Windows-Power

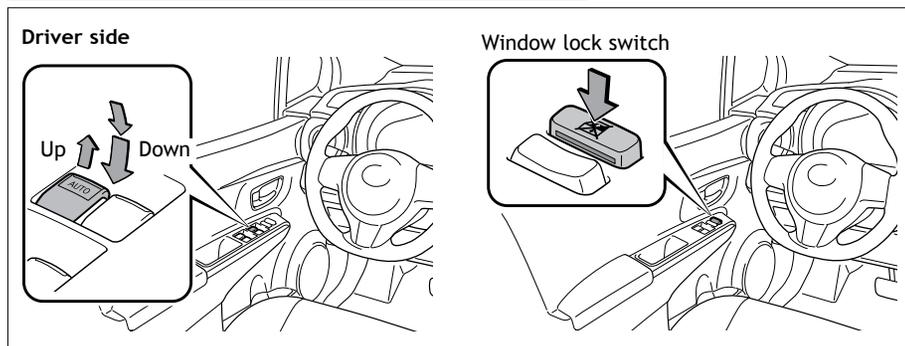


**Automatic operation (driver's window only)** Push the switch completely down and release to fully open. To stop window partway, lightly push the switch in the opposite direction.

**Window lock switch** Deactivates all passenger windows. Driver's window remains operable.

### Windshield wipers & washers

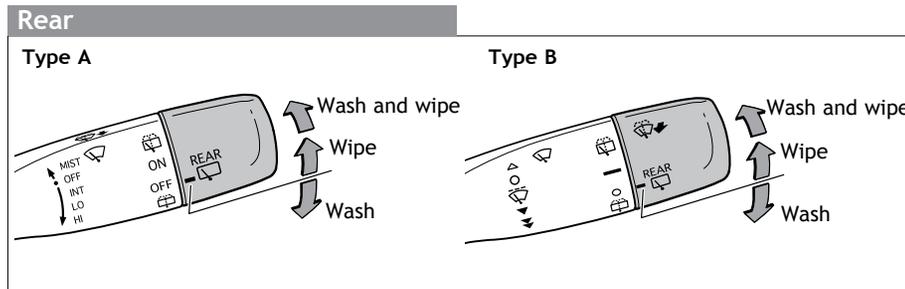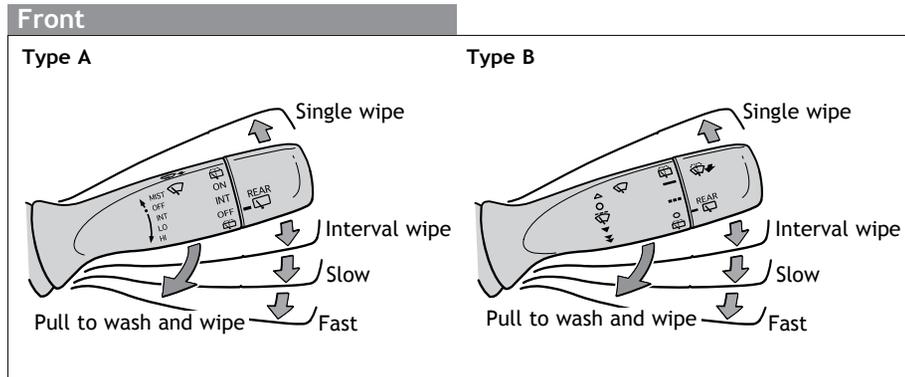


### Air Conditioning/Heating

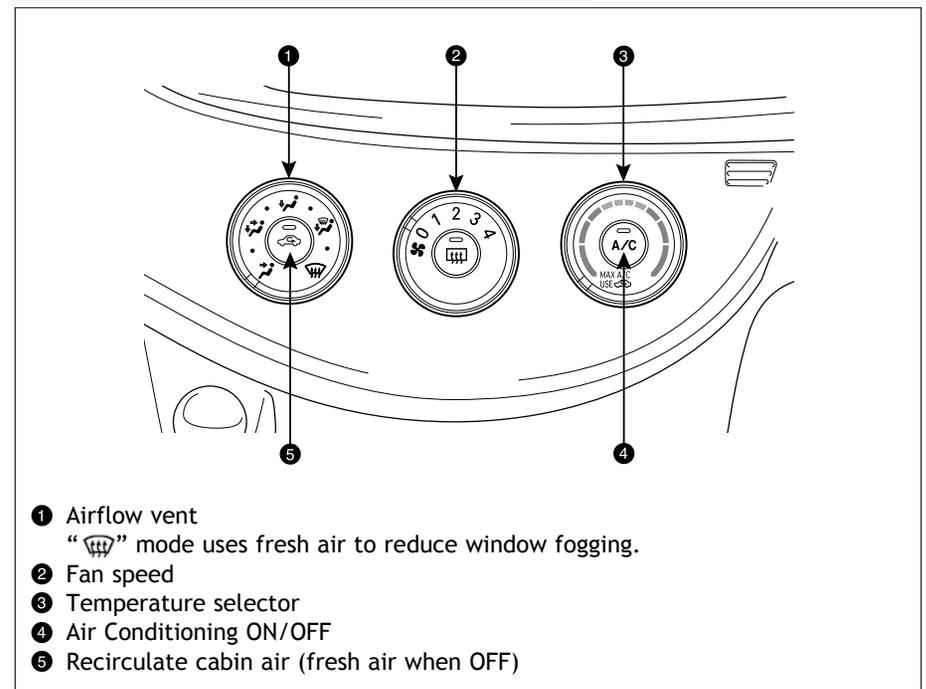

- ① Airflow vent  
“” mode uses fresh air to reduce window fogging.
- ② Fan speed
- ③ Temperature selector
- ④ Air Conditioning ON/OFF
- ⑤ Recirculate cabin air (fresh air when OFF)

### Cruise control (if equipped)

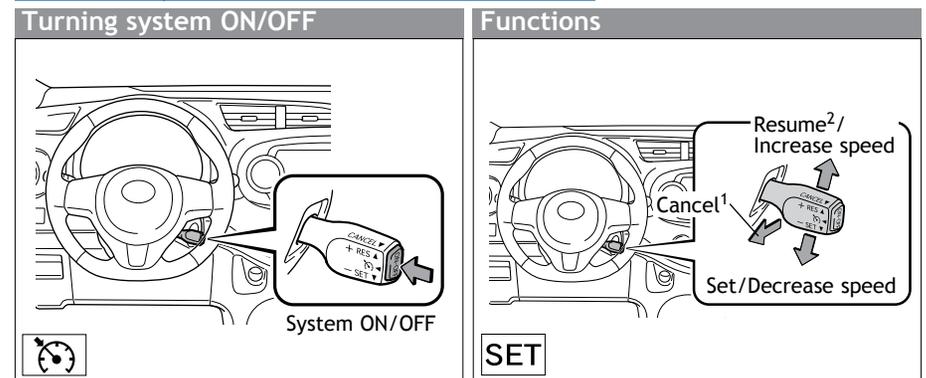


<sup>1</sup> The set speed may also be cancelled by depressing the brake pedal or the clutch pedal (Manual Transmission).

<sup>2</sup> Unless vehicle speed drops below 10 mph, the set speed may be resumed once vehicle exceeds 25 mph.

Refer to the *Owner's Manual* for more details.

### USB port/AUX port (if equipped)

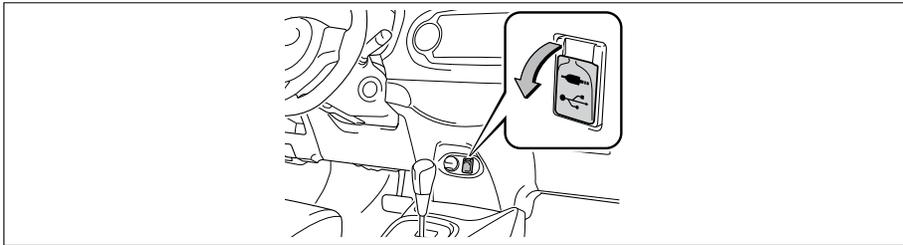

#### USB port


By connecting a USB-compatible portable audio device or USB memory to the USB port, you can listen to music from the portable audio device or USB memory through the vehicle's speaker system.

#### AUX port

By inserting a mini plug into the AUX port, you can listen to music from a portable audio device through the vehicle's speaker system while in AUX mode.

Refer to the *Toyota Audio System Owner's Manual* or *Navigation System Owner's Manual* for more details.

### Steering wheel switches (if equipped)

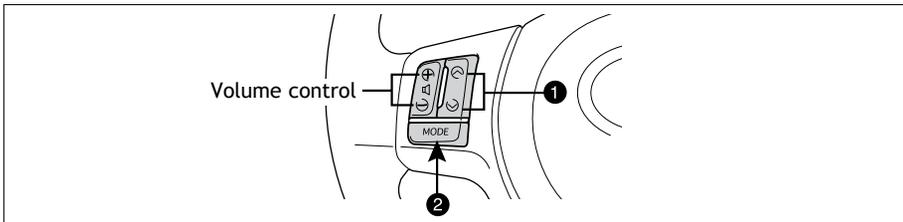

#### ① “V A”

-In radio mode Push to select a preset station; push and hold to seek the next strong station.


-In CD mode Push to skip up or down to a next/previous track.

#### ② “MODE”


Push to turn audio ON and select an audio mode. Push and hold to turn the audio system OFF.

Refer to the *Toyota Audio System Owner's Manual* or *Navigation System Owner's Manual* for more details.

### Clock

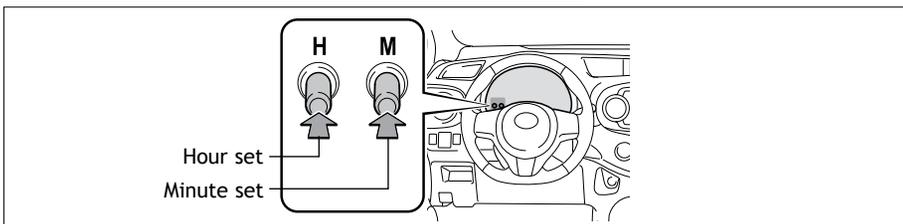

### Multi-Information Display

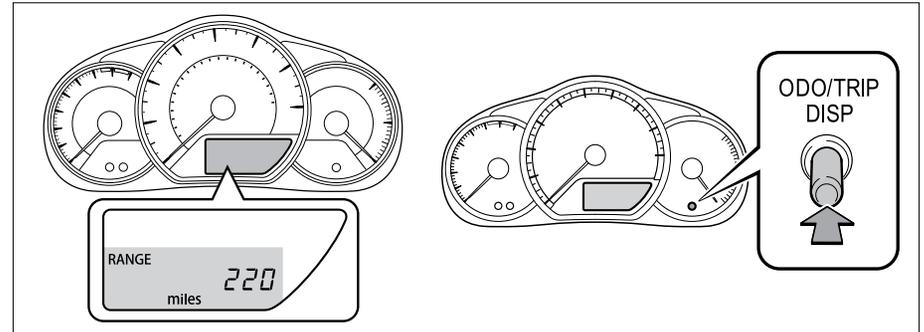


Push button to change information in the following succession:

- (1) Odometer
- (2) Trip meters
- (3) Current gas mileage (MPG)
- (4) Average gas mileage (AVG/MPG)
- (5) Miles left on remaining fuel (RANGE/MI)
- (6) Average vehicle speed from engine start (AVG/MPH)


### Door-Back

#### Open/Close

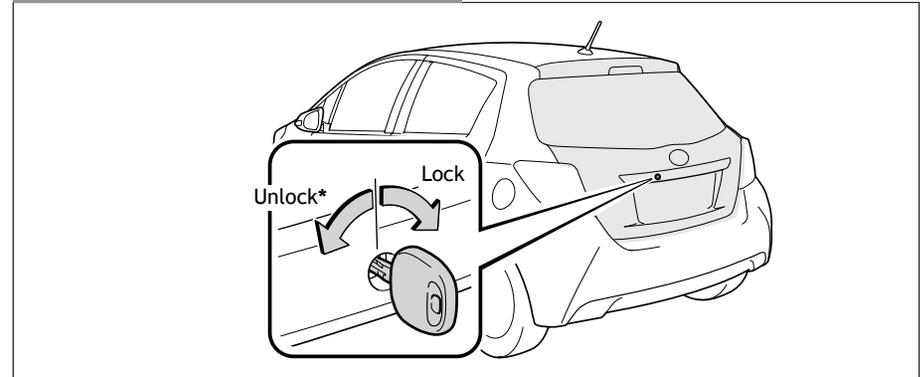


### Cup holders


#### Front

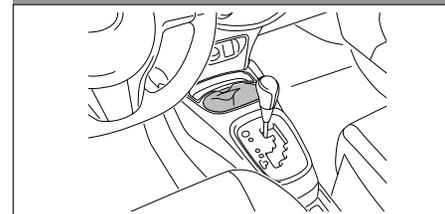

#### Rear

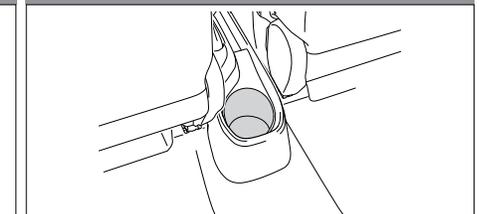

## Audio

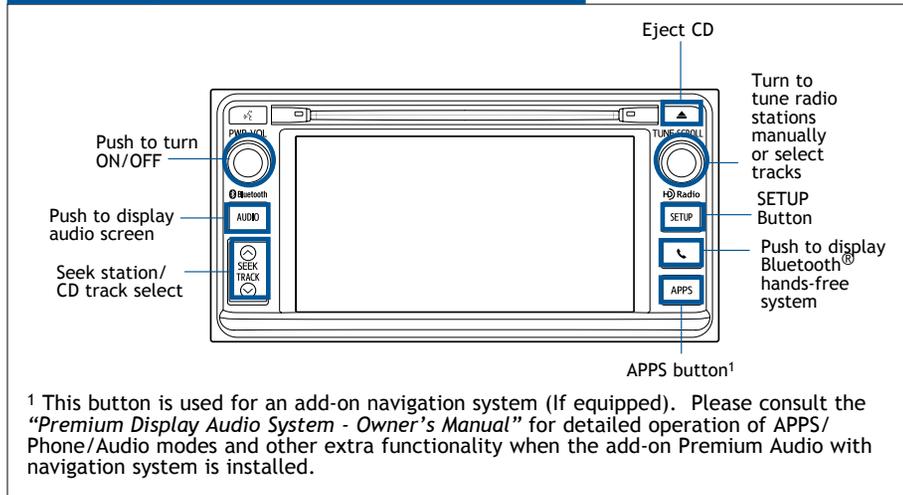


## Pairing a Bluetooth® Device

1. Press the "SETUP" button
2. Touch "Bluetooth" on the "Setup" screen
3. Touch "Registered Devices"
4. Touch "Add New"
4. Go to your Bluetooth Device and access Bluetooth settings
5. On your Bluetooth Device, touch the device to be paired.
6. Input the passcode displayed on the screen into your Bluetooth device
7. When the connection is completed the screen will display "Phone connection successful".


Once you have connected the Bluetooth device, it is automatically connected whenever the engine switch is in the "ACC" or "ON" position.

\*\* For detailed pairing instructions, see your audio system owner's manual.

## Door locks-Power

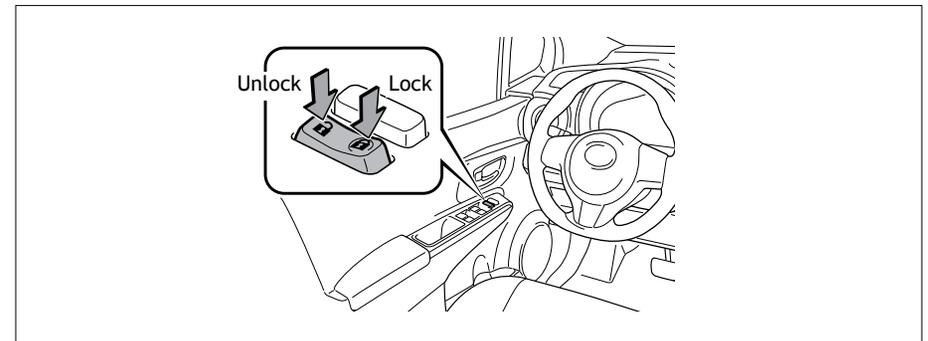


## Seat belts

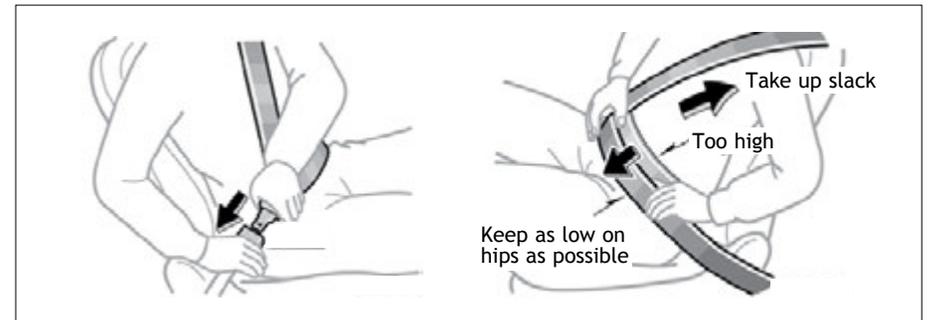

If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.

## SRS Airbags

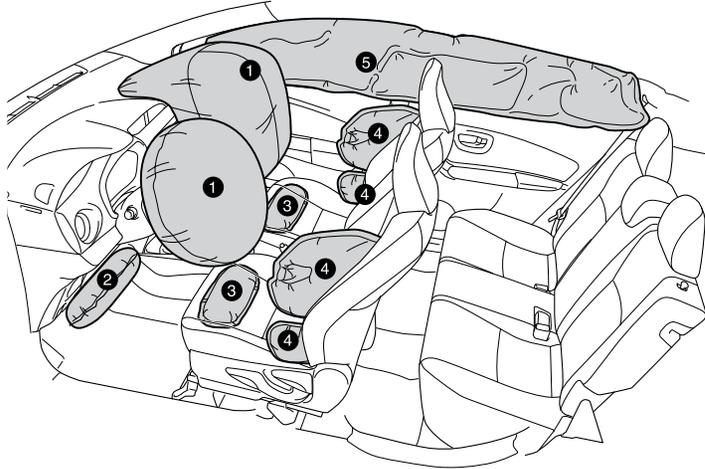

- ❶ SRS driver airbag/front passenger airbag Can help protect the head and chest of the driver and front passenger from impact with interior components
- ❷ SRS driver knee airbag Can help provide driver protection
- ❸ SRS seat cushion airbags Can help restrain the driver and front passenger
- ❹ SRS side airbags Can help protect the torso of the front seat occupants
- ❺ SRS seat cushion airbags Can help restrain the driver and front passenger

The SRS airbags inflate when the vehicle is subjected to certain types of severe impacts that may cause significant injury to the occupants. They work together with the seat belts to help reduce the risk of death or serious injury.

To find more information about this system, refer to the *Owner's Manual*.


## Tire Pressure Monitoring (warning) System

If tire pressure becomes critically low on any of the tires (excluding the spare), “(T)” indicator will illuminate. Correctly adjusting tire inflation will turn off the light after a few minutes. If the light does not turn off, have the system checked by your Toyota dealer.


Refer to the *Owner's Manual* for more details.

## Spare tire & tools

### Tool location

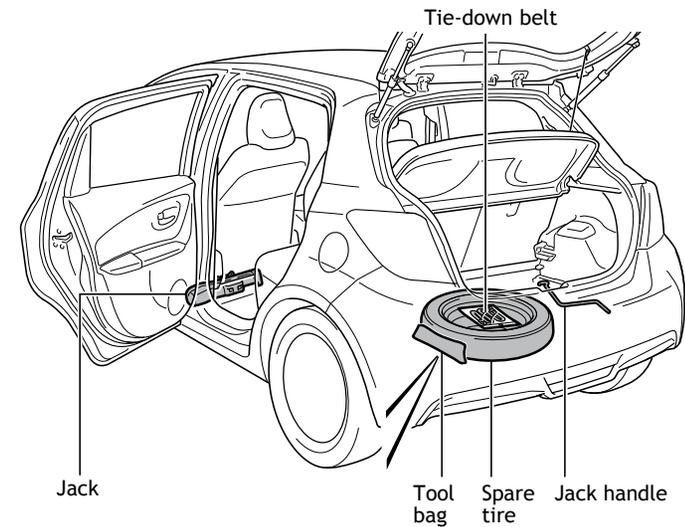

### Removing the spare tire

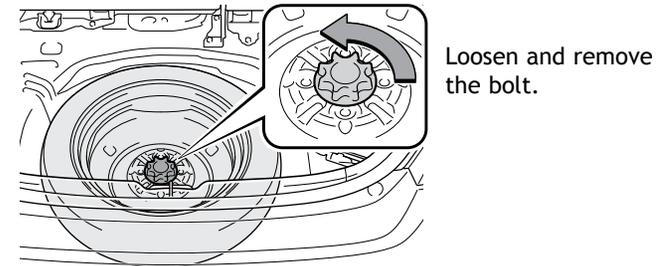

Refer to the *Owner's Manual* for tire changing and jack positioning procedures.

## Star Safety System™

All new Toyota vehicles come standard with the Star Safety System™, which combines Vehicle Stability Control (VSC), Traction Control (TRAC), Anti-lock Braking System (ABS), Electronic Brake-force Distribution (EBD), Brake Assist (BA) and Smart Stop Technology (SST).

### Vehicle Stability Control (VSC)

VSC helps prevent loss of traction during cornering by reducing engine power and applying brake force to selected wheels.

Toyota's VSC monitors steering angle and the direction your vehicle is traveling. When it senses that the front or rear wheels begin to lose traction, VSC reduces engine power and applies braking to selected wheels. This helps restore traction and vehicle control.

### Traction Control (TRAC)

VSC helps prevent loss of traction during cornering by reducing engine power, and Traction Control helps maintain traction on loose gravel and wet, icy, or uneven surfaces by applying brake force to the spinning wheel(s).

Toyota's TRAC sensors are activated when one of the drive wheels starts to slip. TRAC limits engine output and applies the brakes to the spinning wheel. This transfers power to the wheels that still have traction to help keep you on track.

### Anti-Lock Brake System (ABS)

ABS helps prevent brakes from locking up by “pulsing” brake pressure to each wheel. This limits brake lockup and helps provide directional control for the current road conditions.

Toyota's ABS sensors detect which wheels are locking up and limits wheel lockup by “pulsing” each wheel's brakes independently. Pulsing releases brake pressure repeatedly for fractions of a second. This helps the tires attain the traction that current road conditions will allow, helping you to stay in directional control.

### Electronic Brake Force Distribution (EBD)

Toyota's ABS technology has Electronic Brake-force Distribution (EBD) to help maintain control and balance when braking. Abrupt stops can cause a vehicle to tilt forward, reducing the braking power of the rear wheels. EBD responds to sudden stops by redistributing brake force to enhance the braking effectiveness of all four wheels.

### Brake Assist (BA)

Brake Assist is designed to detect sudden or “panic” braking, and then add braking pressure to help decrease the vehicle's stopping distance. When there's only a split second to react, Brake Assist can add additional brake pressure more quickly than just the driver alone can.

### Smart Stop Technology (SST)

Smart Stop Technology automatically reduces driving torque when the accelerator and brake pedals are pressed simultaneously under certain conditions.

SST engages when the accelerator is depressed first and the brakes are applied firmly for longer than one-half second at speeds greater than five miles per hour.

SST doesn't engage if the brake pedal is depressed before the accelerator pedal, allowing vehicles to start on a steep hill and safely accelerate without rolling backward.

## Floor mat installation

There are two types of Toyota floor mats: carpeted and all-weather. Each vehicle has model-specific floor mats. Installation is easy.

**To keep your floor mat properly positioned, follow these steps:**

- Only use floor mats designed for your specific model.
- Use only one floor mat at a time, using the retaining hooks to keep the mat in place.
- Install floor mats right side up.

