

**2015
Sequoia
Quick Reference Guide**

2015 Sequoia

This *Quick Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Quick Reference Guide* is not intended as a substitute for the *Owner's Manual* located in your vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Sequoia.

A word about safe vehicle operations

This *Quick Reference Guide* is not a full description of Sequoia operations. Every Sequoia owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Quick Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

INDEX

OVERVIEW

Engine maintenance	10
Fuel tank door release and cap	9
Hood release	10
Indicator symbols	6-7
Instrument cluster	5
Instrument panel	2-4
Keyless entry¹	8
Light control-Instrument panel	9

FEATURES/OPERATIONS

Accessory meter	20
Air Conditioning/Heating	22-23
Audio	24-25
Auto lock/unlock¹	11
Automatic Transmission	11
Bluetooth® Device Pairing Section	39-48
BSM (Blind Spot Monitor)	13
Cruise control	28
Cup holders	33
Door locks	30
Door-Power back	19
Dynamic Laser Cruise Control	29
Entune™ Audio Plus	26
Four-wheel drive	12
Garage door opener (HomeLink®) ³	28
Lights¹ & turn signals	17
Moonroof	20
Multi-Information Display²	30
Parking brake	12
Power outlets-12V DC	32
Power outlets-120V AC	32
Rear seat entertainment system	33
Seat adjustments-Front	15
Seat adjustments-Rear	14
Seat ventilators/heaters	23
Seats-Folding second row seats	15
Seats-Folding third row seats	16
Seats-Head restraints	13
Telephone controls (Bluetooth®)	31
Tilt and telescopic steering wheel	21
Traffic	27
TOW/HAUL switch	11
VSC OFF switch	21
Weather	27
Window-Back	19
Windows	18
Windshield wipers & washers	18

SAFETY AND

EMERGENCY FEATURES



Doors-Child safety locks	35
Floor mat installation	37
Seat belts	34
Seat belts-Shoulder belt anchor	35
Spare tire & tools	33
Star Safety System™	36-37
Tire Pressure Monitoring (warning) System	35

¹ Visit your Toyota dealer for information on customizing this feature.

² Programmable by customer. Refer to the *Owner's Manual* for instructions and more information.

³ HomeLink® is a registered trademark of Gentex Corporation.

OVERVIEW

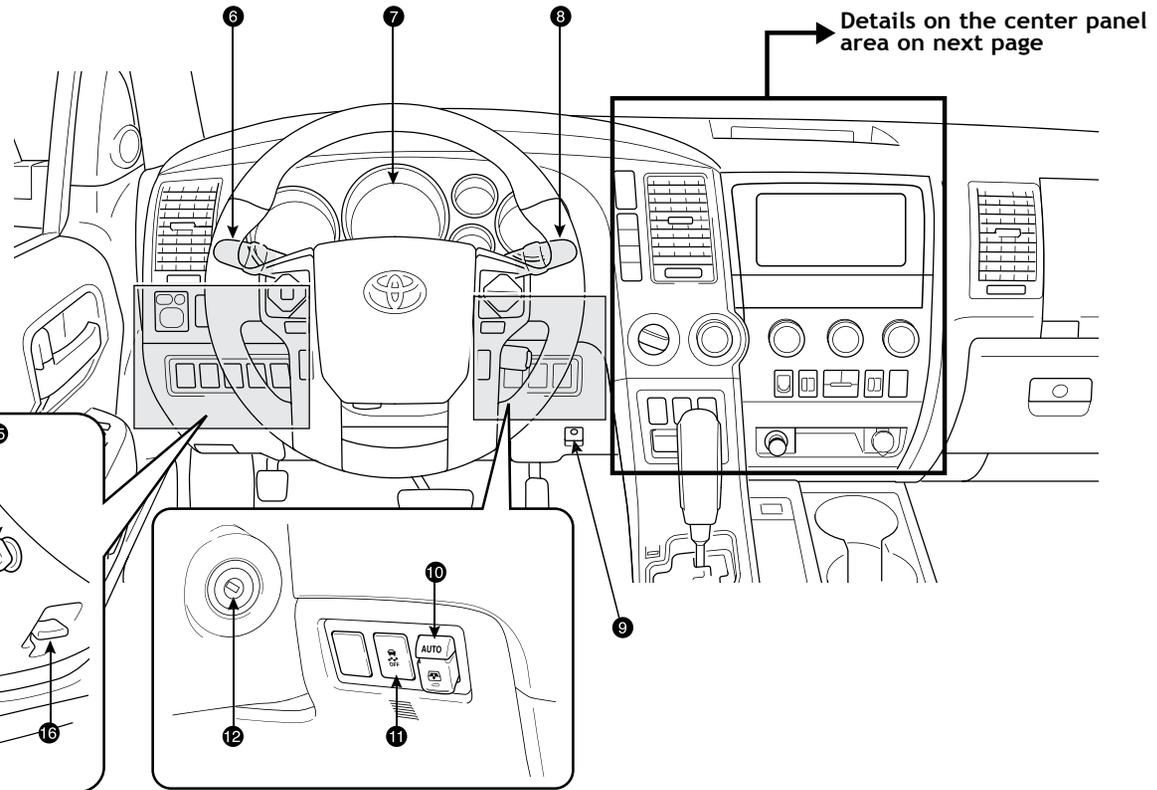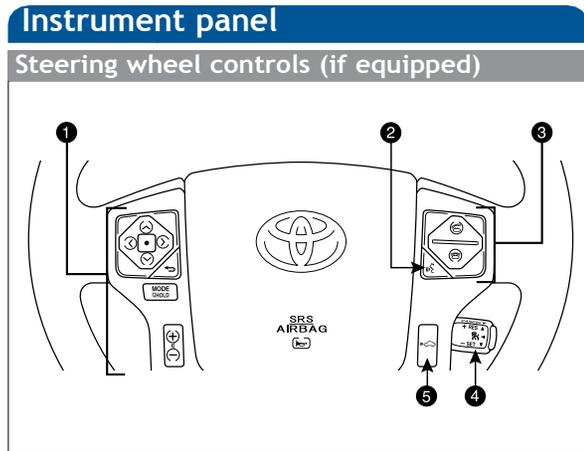


- 1 Steering wheel audio controls^{1,2}
- 2 Voice command button^{1,2}
- 3 Telephone controls^{1,2}
- 4 Cruise control
- 5 Dynamic Laser Cruise Control distance switch¹
- 6 Headlight, turn signal and front fog light controls¹
- 7 Gauges and meters
- 8 Wiper and washer controls
- 9 Tire Pressure Monitoring (warning) System reset
- 10 Power back window switch
- 11 VSC OFF switch
- 12 Ignition switch
- 13 Personal/Interior light main switch
- 14 Instrument panel light control
- 15 Tilt and telescopic steering control switch¹

- 16 Tilt and telescopic steering lock release lever¹
- 17 Roll Sensing of Curtain shield Airbag OFF switch¹
- 18 REVERSE TILT (side mirrors) switch¹
- 19 Headlight cleaner¹
- 20 Power back door button¹
- 21 BSM (Blind Spot Monitor) main switch¹
- 22 Power rearview mirror controls

¹ If equipped

² For details, refer to the “Navigation System Owner’s Manual.”

Center panel area

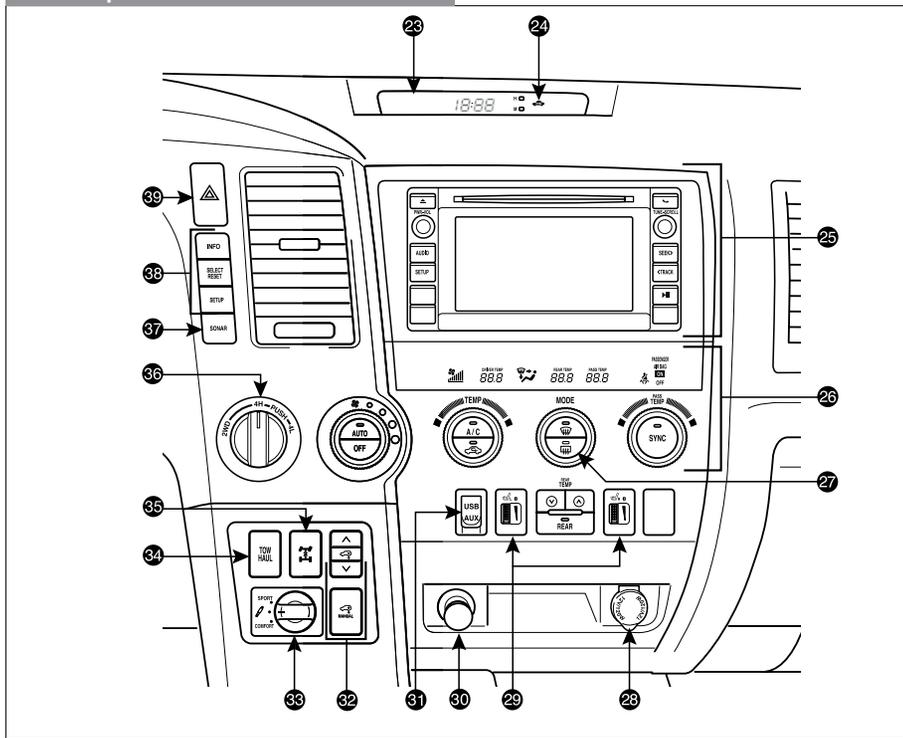


- 23 Accessory meter
- 24 Theft deterrent/Engine immobilizer system indicator
- 25 Multimedia system¹
- 26 Air Conditioning controls
- 27 Outside rearview mirror defogger²/Back window defogger/Windshield wiper de-icer button²
- 28 12V DC power outlet
- 29 Seat heater² and ventilator² controls
- 30 Cigarette lighter
- 31 AUX audio jack/USB port
- 32 Height control switch²
- 33 AVS switch²
- 34 TOW/HAUL button²
- 35 Center differential lock/unlock switch²
- 36 Front-wheel drive control switch²
- 37 Intuitive parking assist button²
- 38 Multi-Information Display control buttons² and/or accessory meter control buttons²
- 39 Emergency flasher button

¹ Vehicles with navigation system: for details, refer to the “Navigation System Owner’s Manual.”


² If equipped

Instrument cluster

With Multi-Information Display

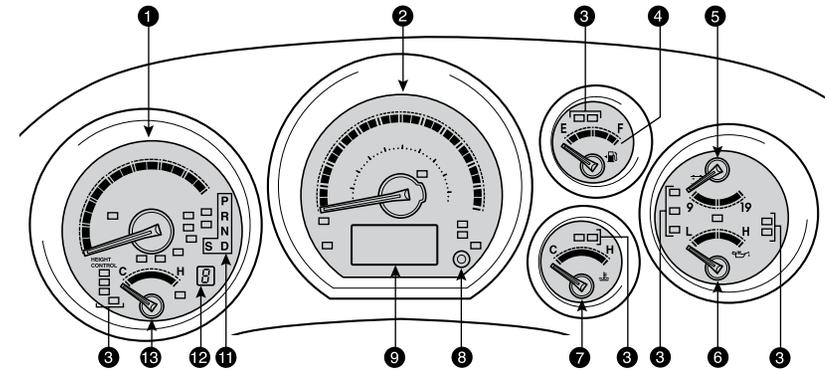

Without Multi-Information Display

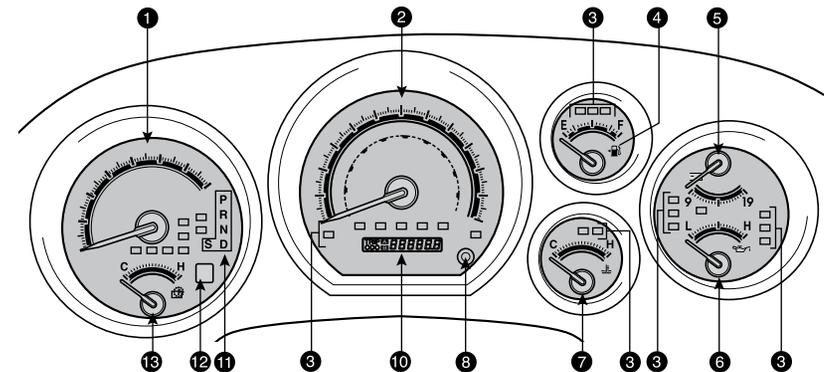

- 1 Tachometer
- 2 Speedometer
- 3 Service indicator and reminder
- 4 Fuel gauge
- 5 Voltmeter
- 6 Engine oil pressure gauge
- 7 Engine coolant temperature
- 8 Odometer/Trip meter and trip meter reset button
- 9 Multi-Information Display
- 10 Odometer and two trip meters
- 11 Automatic Transmission shift position indicator
- 12 Automatic Transmission shift range display
- 13 Automatic Transmission fluid temperature gauge*

* If equipped

Indicator symbols

For details, refer to “Indicators and warning lights,” Section 2-2, 2014 Owner’s Manual.

	Brake system warning*
	Driver seat belt reminder (alarm will sound if speed is over 12 mph)
	Front passenger seat belt reminder (alarm will sound if speed is over 12 mph)
	Charging system warning*
	AIR BAG ON indicator
	AIR BAG OFF indicator*
	Malfunction/Check Engine indicator*
	Maintenance/Service required indicator
	Low fuel level warning
	Open door warning
	Airbag SRS warning*
	Low windshield washer fluid level warning
	Master warning
	Low Tire Pressure Warning*
	Theft deterrent/Engine immobilizer system indicator
	Power steering warning*
	Roll Sensing of Curtain shield Airbag OFF indicator*
	Headlight low/high beam indicator
	Turn signal indicator
	Shift position and shift range indicators
	Vehicle Stability Control OFF indicator*
	TOW/HAUL mode indicator

	AUTO Limited Slip Differential indicator*		
	Slip indicator*		
		High/Low speed four-wheel drive indicator	
			Height control indicator*
	Height control/MANUAL indicator*		
	Center differential lock indicator		
	Cruise control indicator		
	Anti-lock Brake System warning*		
	Automatic Transmission fluid temperature warning*		
	Traction Control OFF indicator*		
	BSM (Blind Spot Monitor) outside rearview mirror indicators		

* If indicator does not turn off within a few seconds of starting engine, there may be a malfunction. Have vehicle inspected by your Toyota dealer.

Keyless entry

Locking operation

With power back door




Without power back door



Push

Unlocking operation

With power back door

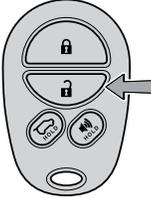


Without power back door



Push ONCE: Driver door
TWICE: All doors

NOTE: If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.

Power back door operation (if equipped)

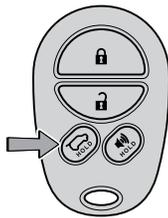


Push and hold

Panic button




Push and hold


Fuel tank door release and cap

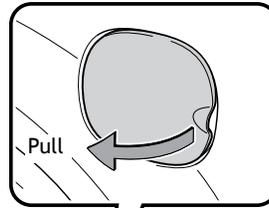


Pull

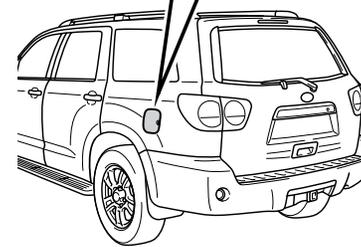

Turn to open

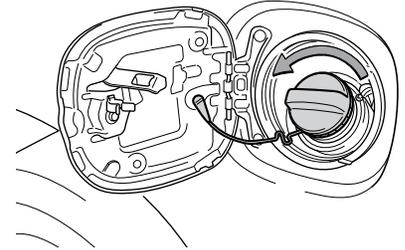


Store

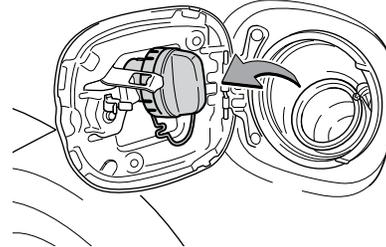


NOTE: Tighten until one click is heard. If the cap is not tightened enough, Check Engine "CHECK" indicator may illuminate.

Light control-Instrument panel


Brightness control

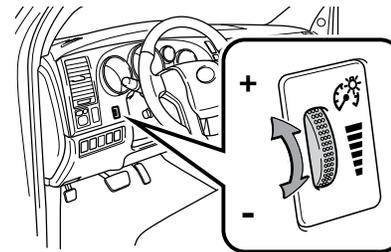

Hood release

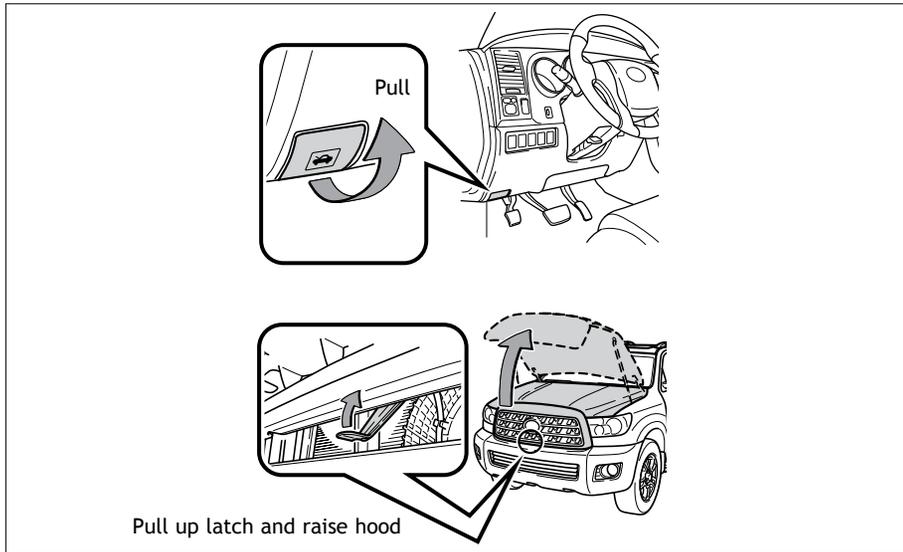


Engine maintenance

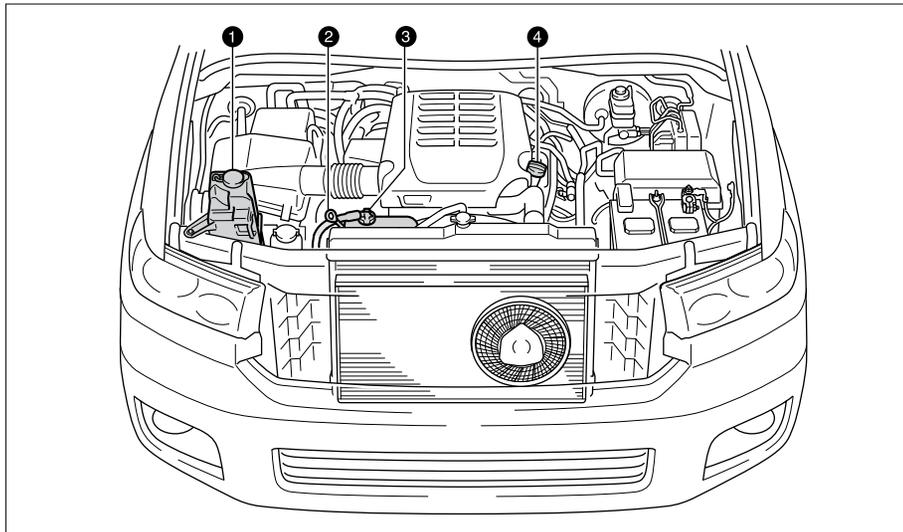

- ❶ Windshield washer fluid tank
- ❷ Engine oil level dipstick
- ❸ Engine coolant reservoir
- ❹ Engine oil filler cap

NOTE: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the "Warranty & Maintenance Guide."

Automatic Transmission

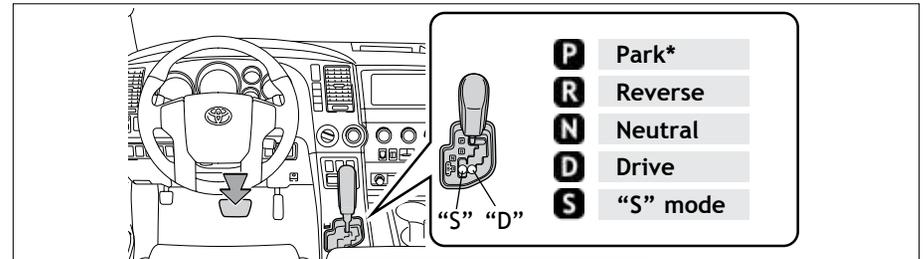

* The ignition switch must be "ON" and the brake pedal depressed to shift from Park.


"S" (Sequential) mode

Shift the shift lever to "S" position from "D" position.

- +: Upshift (push and release)
- : Downshift (pull and release)

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.

TOW/HAUL switch (if equipped)

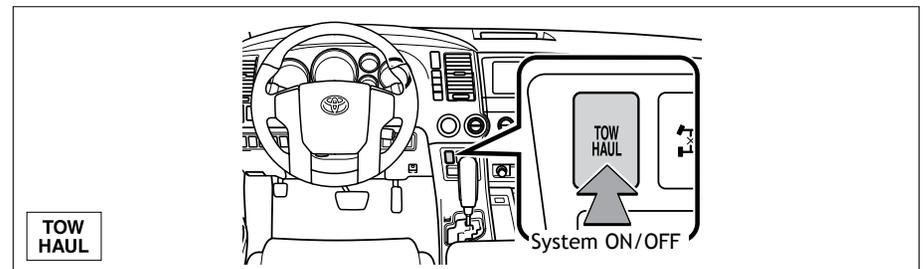

"TOW/HAUL" mode can be used when carrying heavy loads. As fuel economy is reduced while in "TOW/HAUL" mode, deactivating when driving without a load is recommended.

Refer to the *Owner's Manual* for more details on this system before attempting to use it.

Auto lock/unlock

Automatic door locks can be programmed to operate in four different modes, or turned OFF.

- Doors lock when shifting from Park.
- Doors lock when the vehicle speed is approximately 12 mph or higher.
- Doors unlock when shifting into Park.
- Doors unlock when the driver's door is opened within 10 seconds after turning the ignition switch to the "ACC" or "LOCK" position.

Refer to the *Owner's Manual* for more details.

Four-wheel drive (if equipped)

Four-wheel drive control switch

Turn

4HI 4H

Turn

4LO 4L

Push and turn

- 2WD** High speed (2WD)
Turn to “2WD” from “4H” with speed below 62 mph.
- 4H** High speed (4WD)
Turn to “4H” from “2WD” with speed below 62 mph.
Shift to “N” position when stopped, then turn to “4H” from “4L.”
- 4L** Low speed (4WD)
Shift to “N” position when stopped, then push and turn to “4L” from “4H.”

For best fuel economy and performance under normal driving conditions, keep in “2WD” position.

Center differential lock/unlock switch

Push

Lock the center differential if the vehicle’s wheels get stuck in a ditch or when driving on a slippery or bumpy surface.

Refer to the *Owner’s Manual* for more details on this system before attempting to use it.

Parking brake

BRAKE

Set: Depress
Release: Depress again

BSM (Blind Spot Monitor)(if equipped)

System ON/OFF

The Blind Spot Monitor is a system that assists the driver to confirm safety when changing lanes. The system uses radar sensors to detect vehicles that are traveling in an adjacent lane in the area that is not reflected in the outside rearview mirror (the blind spot), and advises the driver of the vehicles’ existence via the outside rearview mirror indicator.

Refer to the *Owner’s Manual* for more details on this system before attempting to use it.

Seats-Head restraints

Front

Second row

Third row (center)

Third row (outside)


Lock release button

Lock release button
Middle head restraint in 8-passenger models only.


Lock release button

Seat adjustments-Rear

Second row

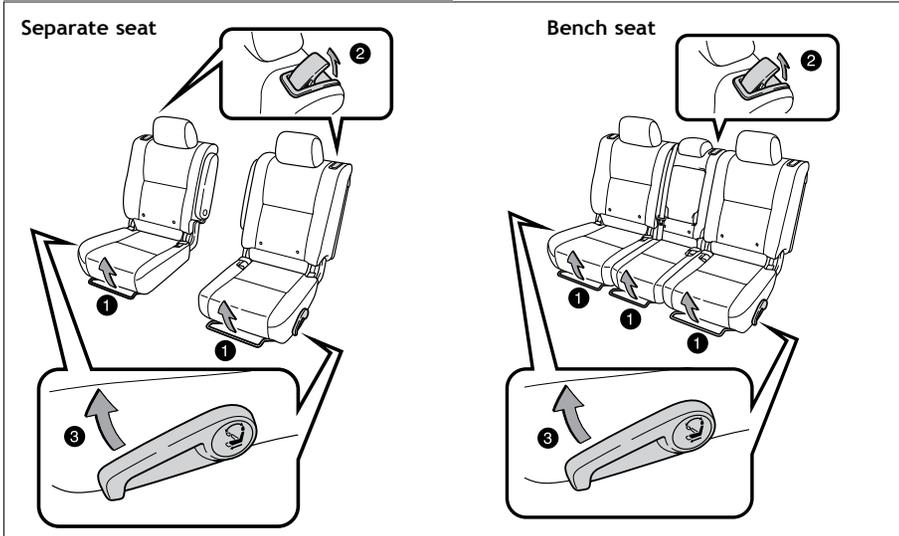


Third row

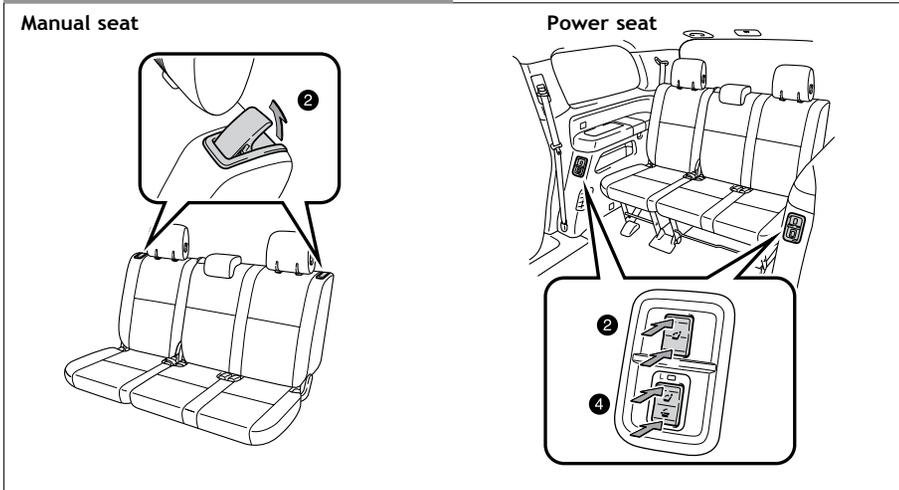

- ❶ Seat position (forward/backward)
- ❷ Seatback angle
- ❸ Seatback angle/lock release and slide
- ❹ Seatback folding/returning


Refer to the *Owner's Manual* for more details.

Seat adjustments-Front

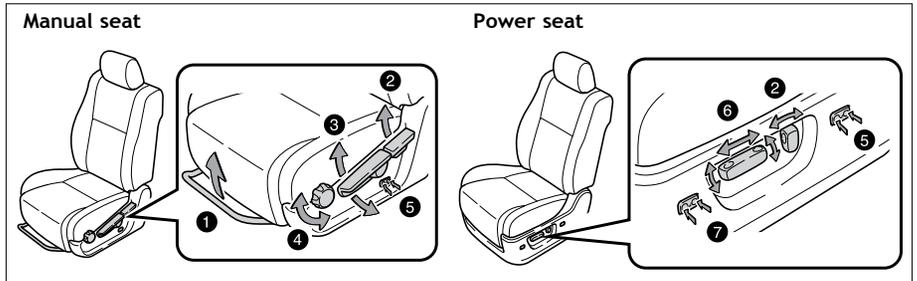


- ❶ Seat position (forward/backward)
- ❷ Seatback angle
- ❸ Seat height
- ❹ Seat cushion angle
- ❺ Lumbar support
- ❻ Position, cushion angle and height
- ❼ Leg support (if equipped)

Seats-Folding second row seats

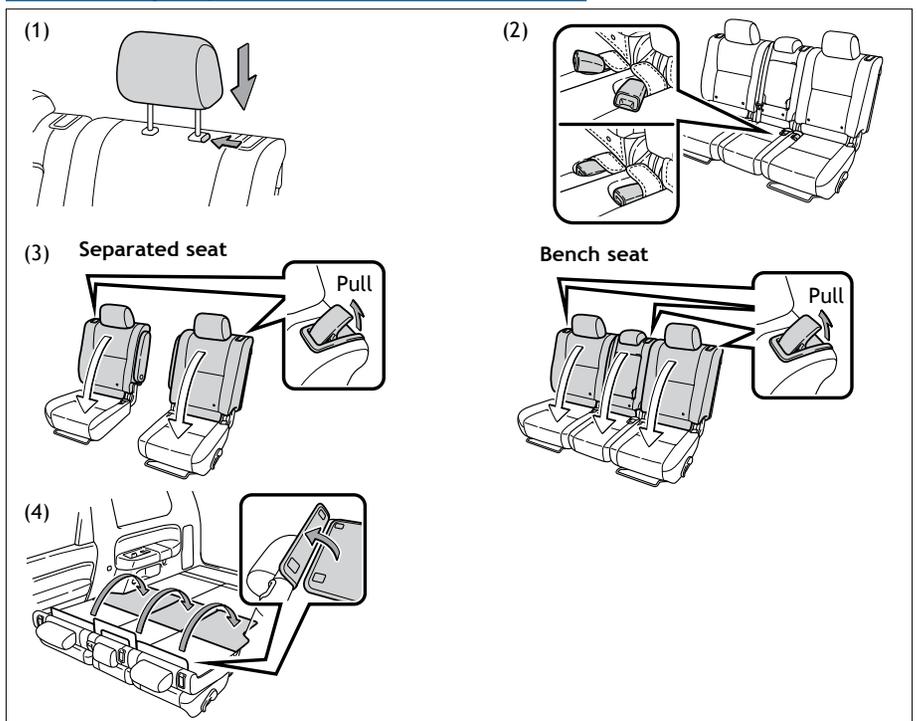



- (1) Lower the head restraints.
- (2) Stow the seat belt buckles.
- (3) Fold down the seatback.
- (4) Fold out the board (if equipped) from the seatback.

Seats-Folding third row seats

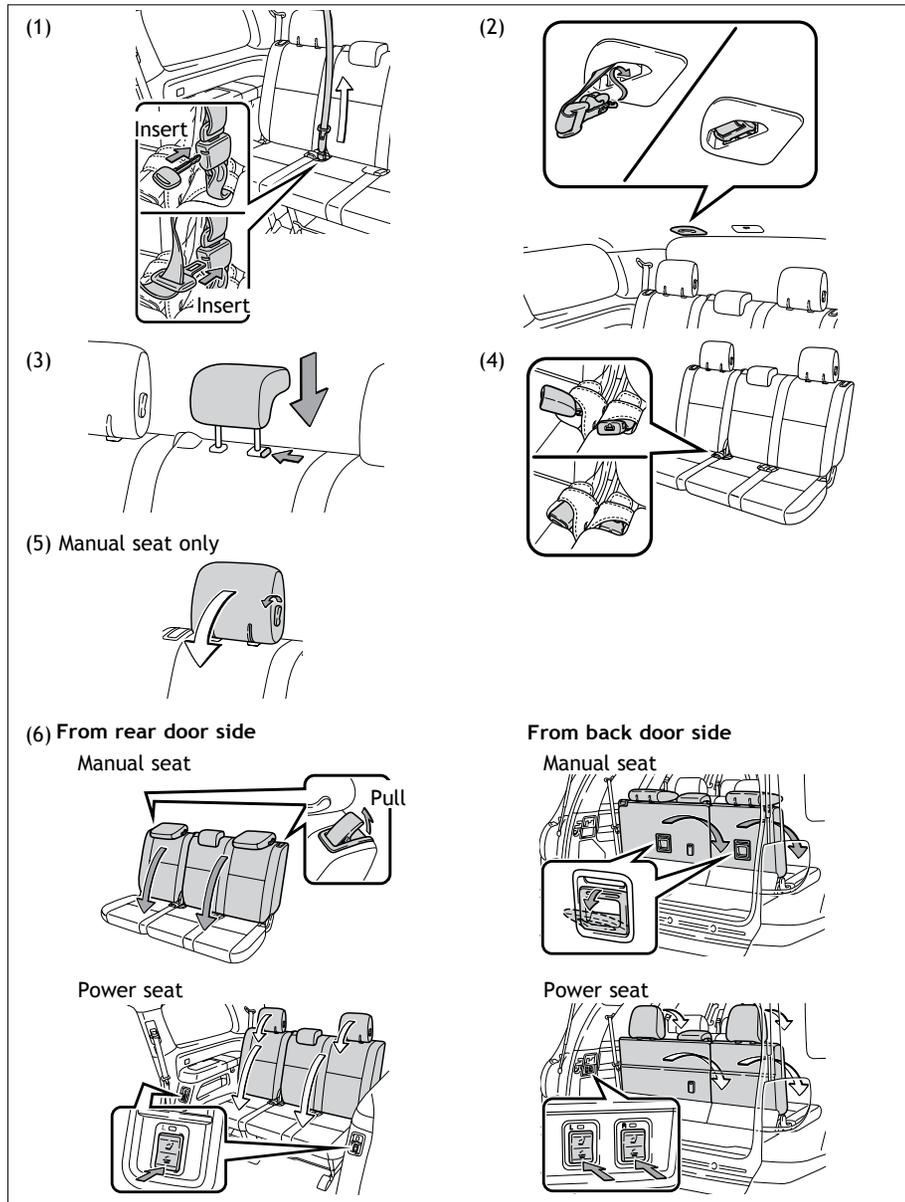


- (1) Release the center seat belt tab.
- (2) Stow the center seat belt tab.
- (3) Lower the head restraint.
- (4) Stow the seat belt buckles.
- (5) Fold the head restraint.
- (6) Fold the seats.

Lights & turn signals

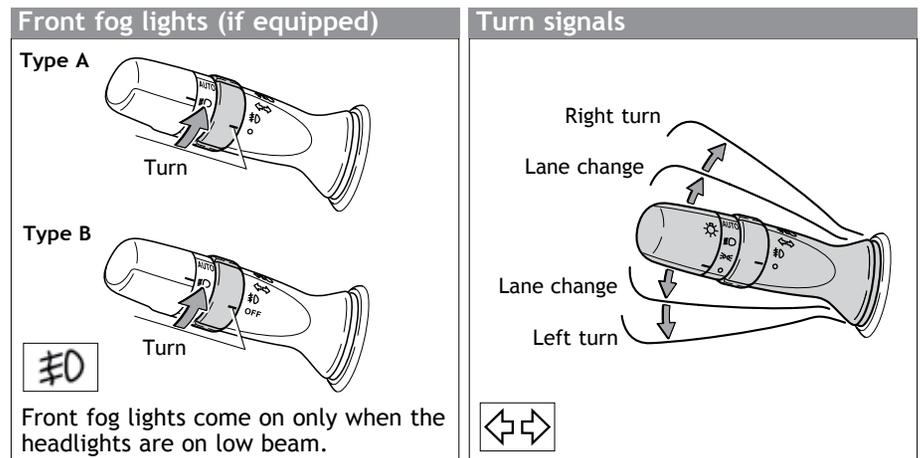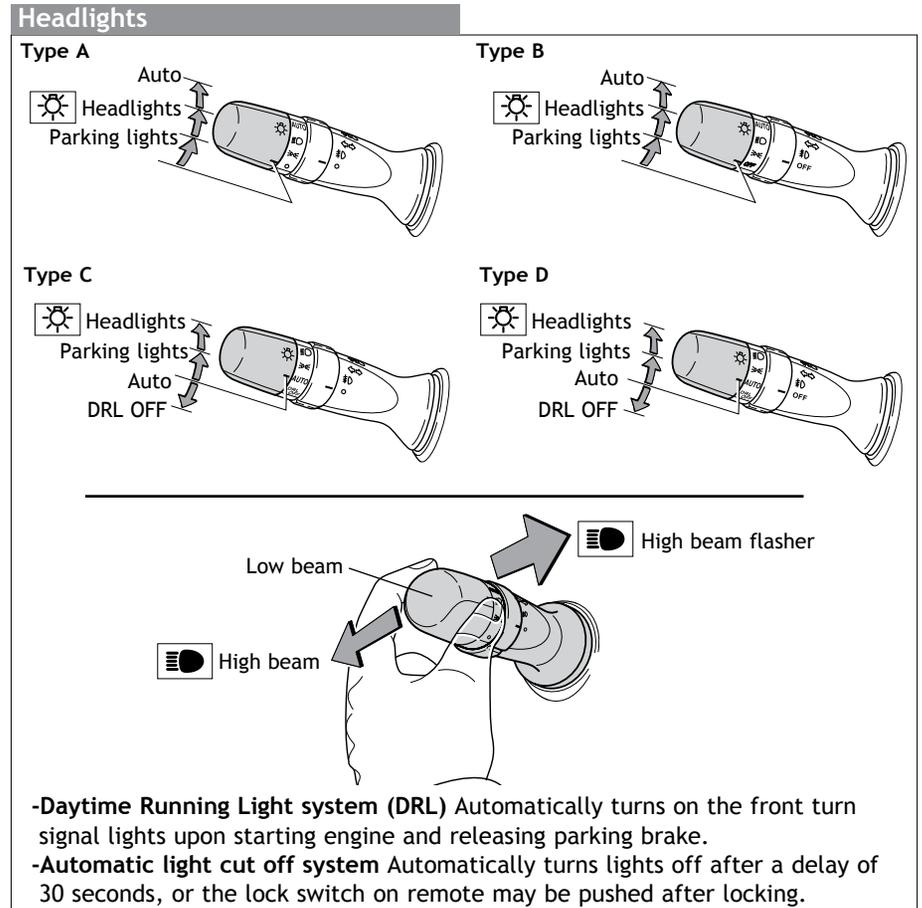


Windshield wipers & washers

Front

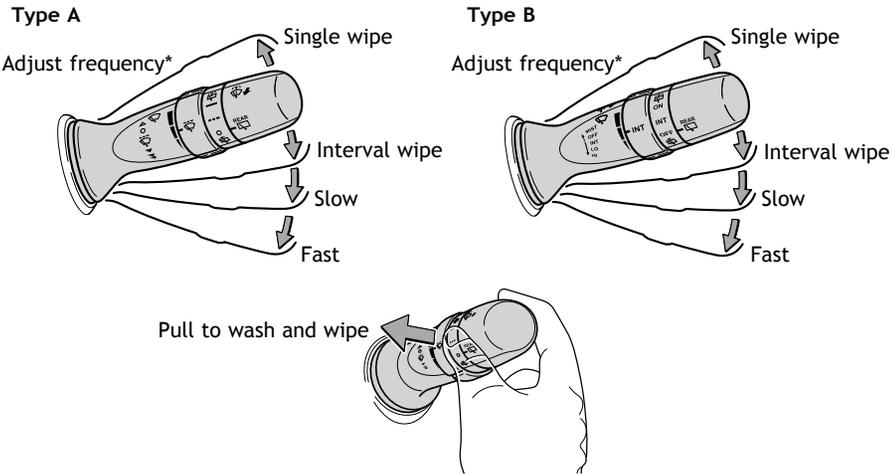


* Intermittent windshield wiper frequency adjustment
Rotate to increase/decrease wipe frequency.

Rear

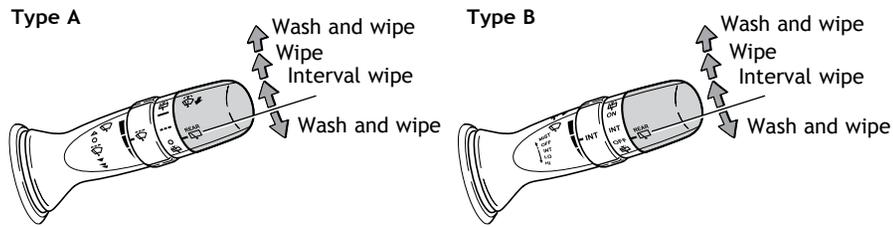

Windows

Driver side

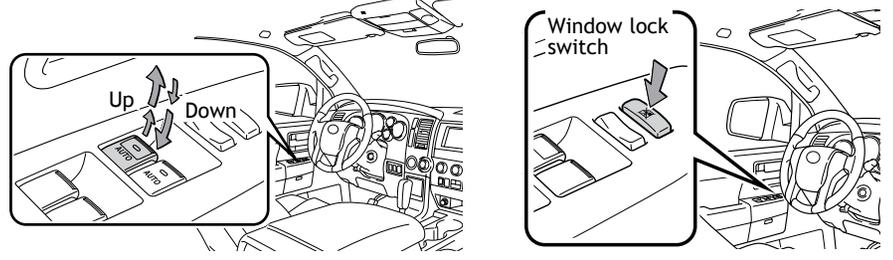


Automatic operation Push the switch completely down or pull it completely up and release to fully open or close. To stop window partway, lightly push the switch in the opposite direction.

Window lock switch Deactivates all passenger windows and back window. Driver's window remains operable.


Window-Back

Operating from inside

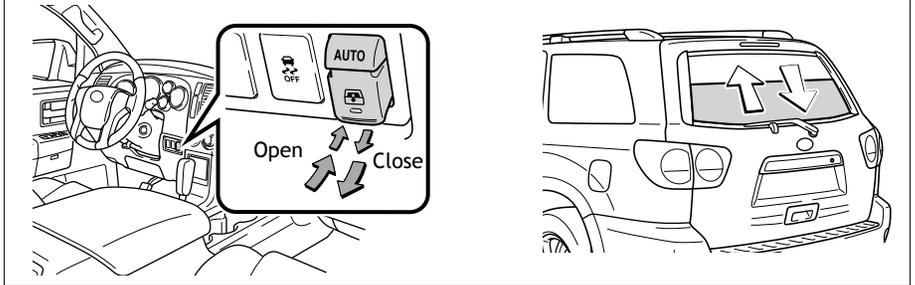


Automatic operation Push the switch completely in or pull it completely out and release to fully open or close. To stop window midway, lightly push the switch in the opposite direction.

Operating from outside

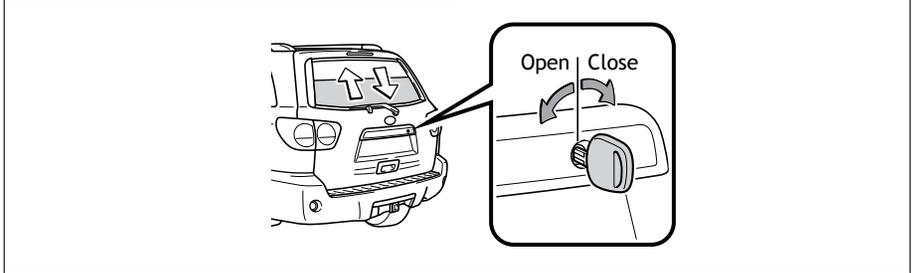


Door-Power back (if equipped)

Instrument panel

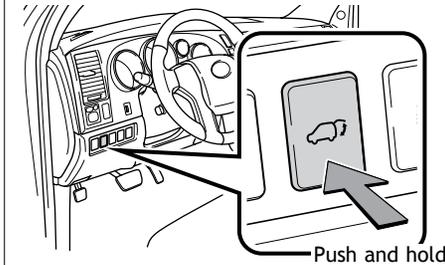

Open: Push and hold
Close: Push and hold again


Back door (close only)

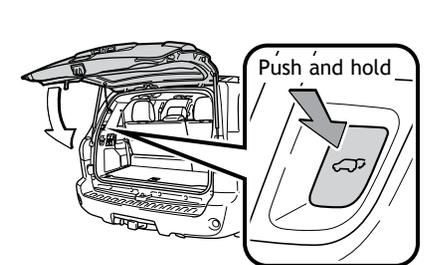

NOTE: Door will stop closing if obstructed, or to manually stop door closing, push button again.


NOTE: If battery is disconnected, the power back door needs to be reinitialized. Refer to the *Owner's Manual* for more details.

Moonroof (if equipped)

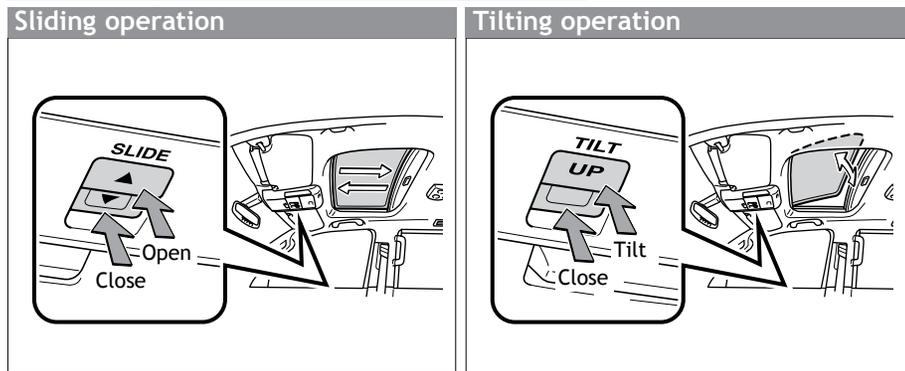

Push to open/close. To stop partway, press the switch lightly.


Accessory meter

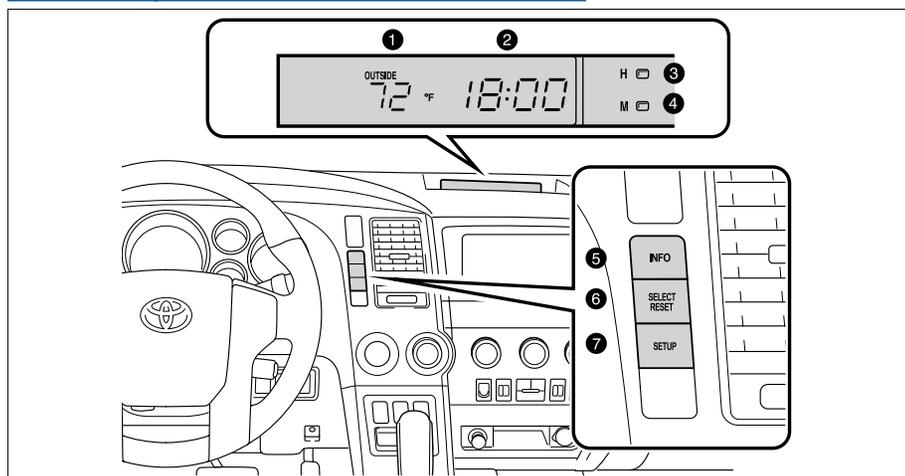


- ❶ Outside temperature/Cruise information display (if equipped)
- ❷ Clock
- ❸ Hour set
- ❹ Minute set
- ❺ Change information (if equipped)
- ❻ "SELECT RESET" button (if equipped)
- ❼ "SETUP" button to customize unit (if equipped)

Refer to your *Owner's Manual* for complete details on this system before attempting to use it.

Tilt and telescopic steering wheel

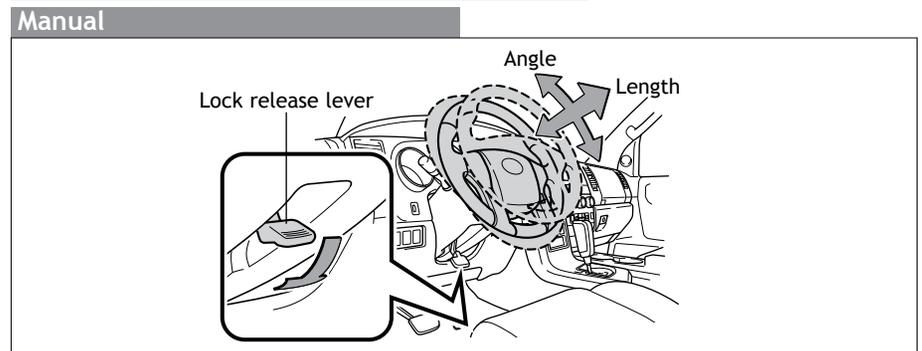


Hold wheel, push lever down, set angle and length and return lever.

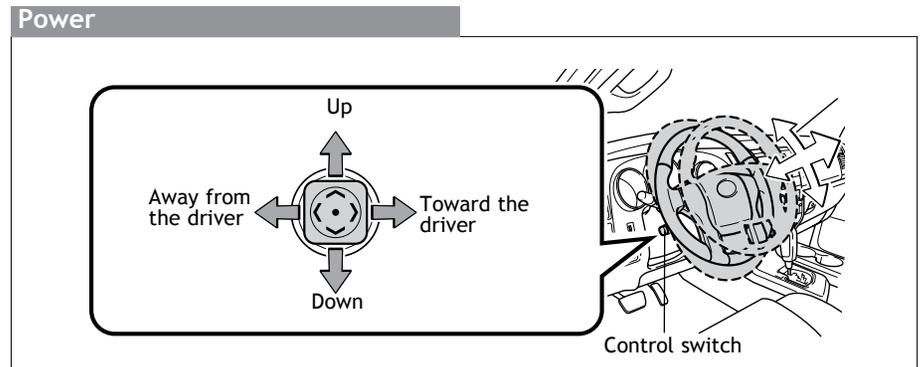

Toggle the control switch to set angle and length.

NOTE: Do not attempt to adjust while the vehicle is in motion.

VSC OFF switch

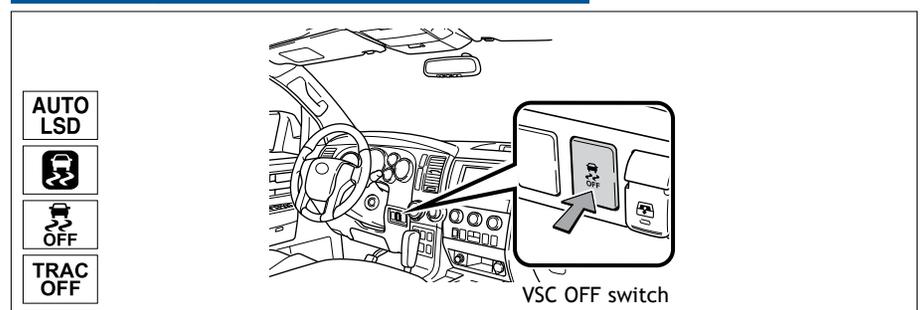


The VSC OFF switch is used to switch between modes related to the TRAC, VSC and Auto LSD functions.

Refer to Section 2-4 of the *Owner's Manual* for more information.

Air Conditioning/Heating

Front Air Conditioning

Control panel

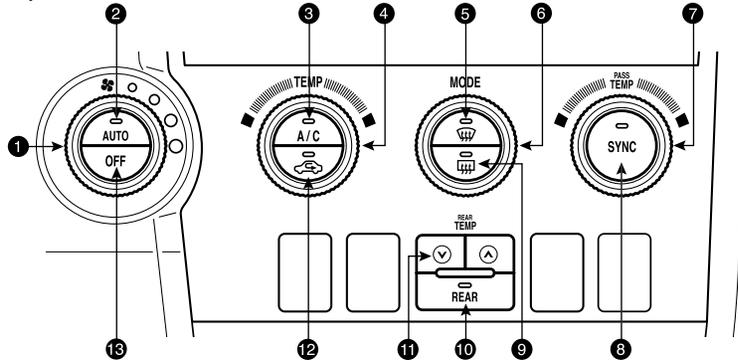


Display



- ❶ Fan speed
- ❷ Automatic climate control ON
Adjusting the temperature setting will cause the airflow vents, air intake and fan to adjust automatically.
- ❸ Air Conditioning ON/OFF
- ❹ Temperature selector (driver side)
- ❺ Windshield defogger (fresh air only)
- ❻ Airflow vent
In “” mode, use fresh air (“” indicator “OFF”) to reduce window fogging.
- ❼ Temperature selector (front passenger side)
- ❽ “SYNC” button
Indicator ON: Synchronized temperature settings for driver, front passenger and rear seats.
Indicator OFF: Separate temperature settings for driver, front passenger and rear seats.
- ❾ Outside rearview mirror/Back window defogger or windshield wiper de-icer (if equipped)
- ❿ Rear Air Conditioning ON/OFF
- ⓫ Temperature selector (rear passenger area*)
- ⓬ Recirculate cabin air (fresh air when OFF)
- ⓭ Climate control OFF

* To change the rear seat setting, press the “REAR” button.

Rear Air Conditioning

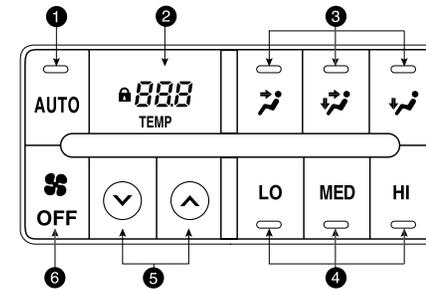


- ❶ Automatic climate control ON
- ❷ Display
- ❸ Airflow vent
- ❹ Fan speed
- ❺ Temperature selector
- ❻ Climate control OFF




Seat ventilators/heaters (if equipped)

Front seats


With ventilators

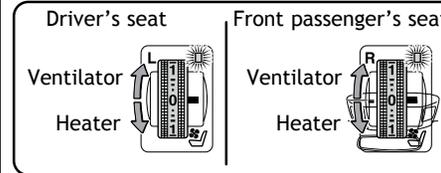

Heater only

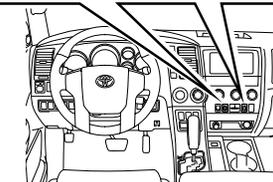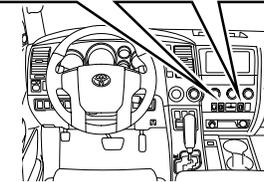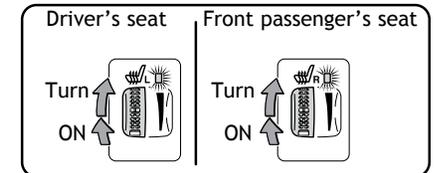

Second seats

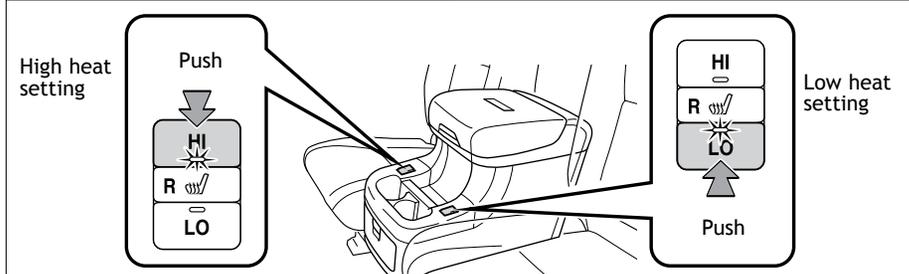

Push lightly in the opposite direction to turn off.

Audio

Entune Audio

Touch screen display

Eject CD

Push to turn ON/OFF

Push to display audio screen

Turn to tune radio stations manually or select tracks or files

Seek station/ CD track select

Entune Premium Audio*1/Entune Premium JBL Audio*1

*2

*2


H)Radio

00000

*1 Refer to the "Entune/Navigation System Owner's Manual" for instruction.


*2 Entune Premium Audio or Entune Premium JBL Audio

Steering wheel switches (if equipped)

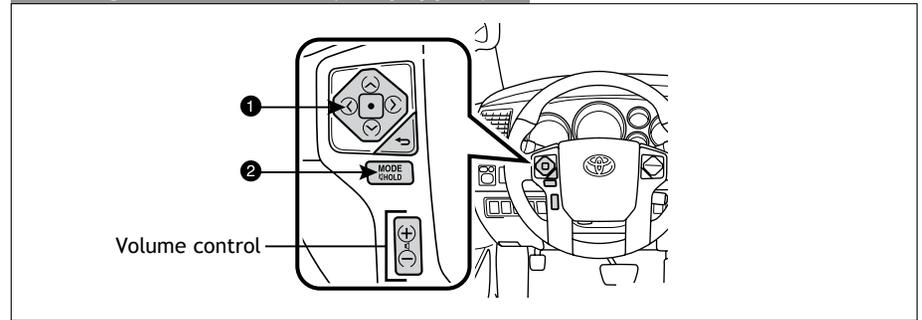

- ① "▲ ▼" "< >"
Use to search within the selected audio medium (radio, CD, iPod®, etc.).
- ② "MODE"
Push to turn audio ON and select an audio mode. Push and hold to mute or pause the current operation.

iPod®/USB/AUX port

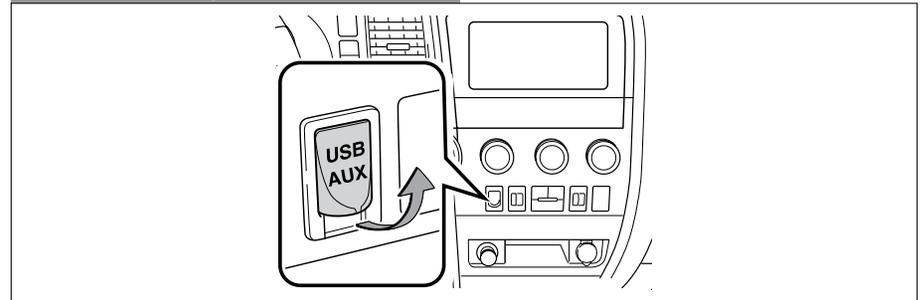

- iPod®/USB port**
By connecting a USB-compatible portable audio device or USB memory to the USB port, you can listen to music from the portable audio device or USB memory through the vehicle's speaker system.
- AUX port**
By inserting a mini plug into the AUX port, you can listen to music from a portable audio device through the vehicle's speaker system while in AUX mode.

Entune™ Audio Plus



- 1 **AUDIO Button**
Access to audio functions.
- 2 **HOME Button**
Access to Home screen.
- 3 **APPS Button**
Access to features such as fuel consumption, traffic, and weather.

HOME SCREEN - the home screen offers a two panel and a three panel layout. Information and layout will vary depending on selected set up.


NOTE: Console configuration and position of buttons may vary in some vehicles.

Traffic



The Traffic App displays a scrollable map showing local traffic in 3 colors. Traffic conditions are displayed in red, yellow and green for heavy, moderate or light traffic conditions. Use  or  arrows to scroll the map up or down.

Weather

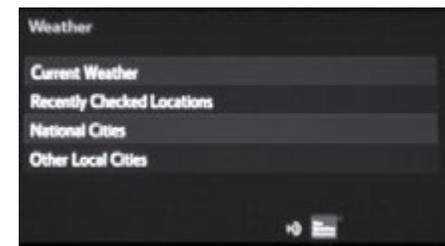


The Weather App options show current weather and recently checked locations weather. You can also search for a weather forecast by national or local cities.

NOTE: Entune™ Audio Plus is available on SR5 only. For Limited and Platinum, please refer to the Entune™ Premium Audio with Navigation and App Suite Quick Reference Guide or Toyota Owner's Manual.

Always drive safely, obey traffic laws & focus on the road while driving. Availability and accuracy of the information provided by HD services is dependent upon many factors. Services not available in every city or roadway. Use common sense when relying on information provided. HD Radio(tm) Technology manufactured under license from iBiquity Digital Corporation U.S. and Foreign Patents. HD Radio(tm) and the HD, HD Radio, and "Arc" logos are proprietary trademarks of iBiquity Digital Corp.

Garage door opener (HomeLink®)* (if equipped)

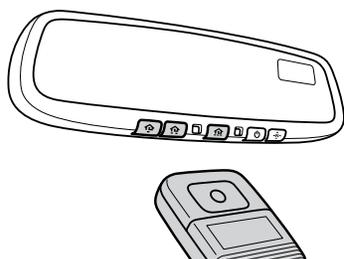

Garage door openers manufactured under license from HomeLink®* can be programmed to operate garage doors, estate gates, security lighting, etc.


Refer to “Garage door opener,” Section 3-5 in the *Owner’s Manual* for more details.

For programming assistance, contact HomeLink® at 1-800-355-3515, or visit <http://www.homelink.com>.


* HomeLink® is a registered trademark of Johnson Controls, Inc.

Cruise control

Turning system ON/OFF

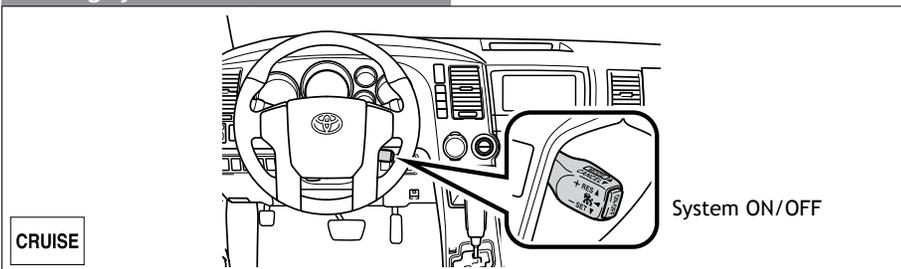

Functions

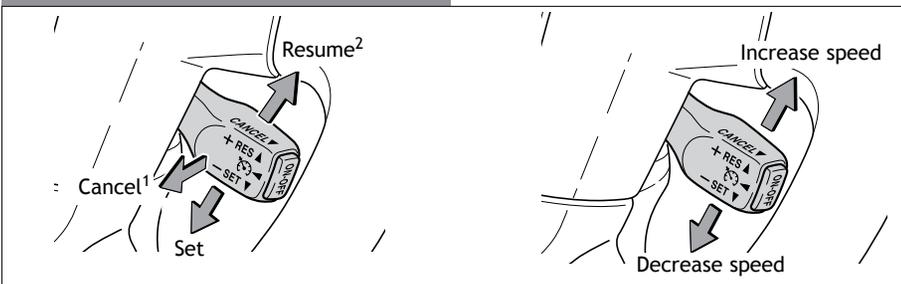


¹ The set speed may also be cancelled by depressing the brake pedal.

² The set speed may be resumed once vehicle speed exceeds 25 mph.

Dynamic Laser Cruise Control (if equipped)


Refer to the *Owner’s Manual* for more details and complete safety precautions before attempting to use “Dynamic Laser Cruise Control.”

Fixed speed mode

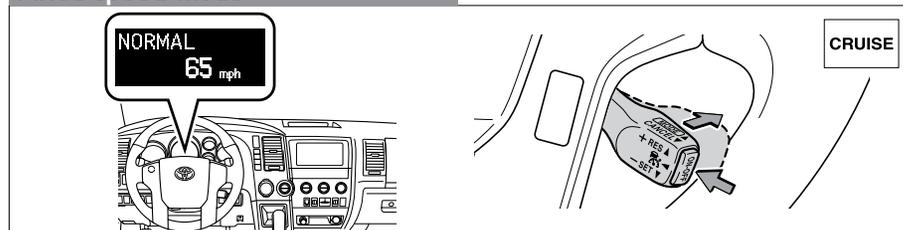

- (1) To select conventional/fixed speed control Push the ON-OFF button. Push the lever forward and hold.
- (2) To set, cancel and resume a speed Refer to instructions for *Cruise Control* in this guide.


Distance control mode

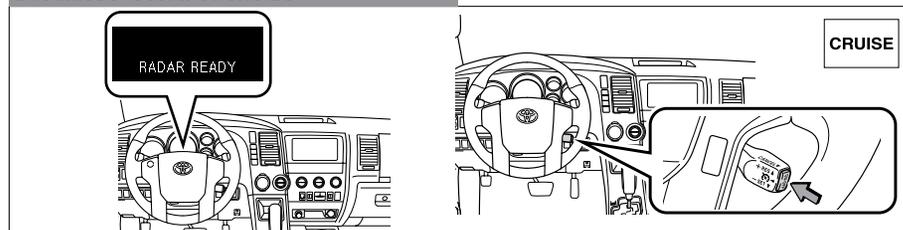

Distance control mode will cruise at a set speed, decelerate to maintain selected distance from a slower vehicle traveling in front of you, and accelerate back up to the selected speed if the vehicle traveling in front of you changes lanes or speeds up.


- (1) To select distance control mode Push the ON-OFF button. The “CRUISE” indicator will come on.
- (2) To set, cancel and resume a speed Refer to instructions for *Cruise Control* in this guide.

NOTE: Once vehicle speed is set, pushing lever up toward “+ RES” will increase speed to the nearest 5 mph, and then in 5 mph increments. Pushing lever down toward “- SET” will reduce speed in the same way.

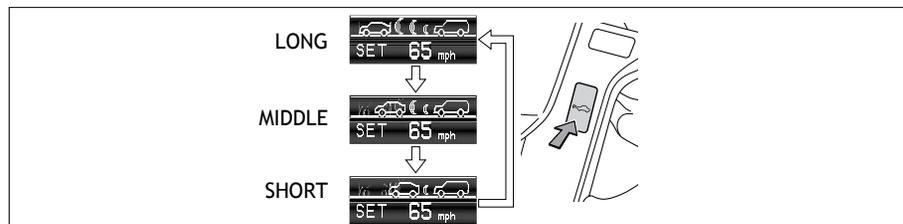

- (3) To change the vehicle-to-vehicle distance Push the distance button to cycle through the settings, which will change progressively from LONG to MIDDLE to SHORT.

Multi-Information Display (if equipped)

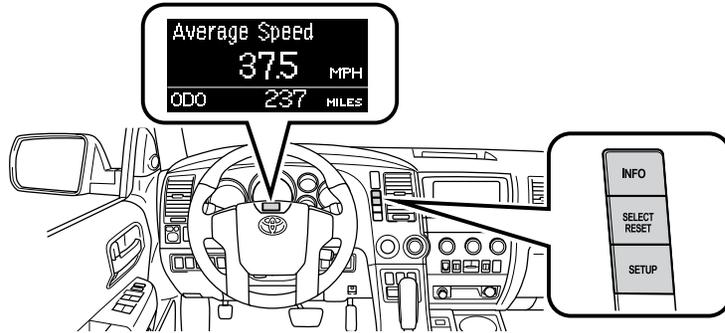


Push “INFO” to change information in the following:

- (1) Zoom display of odometer and trip meter
- (2) Average gas mileage
- (3) Current gas mileage
- (4) Miles left on remaining fuel
- (5) Running time from engine start
- (6) Average vehicle speed

Push “SETUP” to customize to the following settings:


- (1) UNIT
- (2) KEYLESS ENTRY FEEDBACK
- (3) KEYLESS ENTRY RELOCK TIMER
- (4) KEYLESS ENTRY ALL DOORS UNLOCK
- (5) DOOR AUTO LOCKING
- (6) DOOR AUTO UNLOCKING
- (7) HEADLAMPS AUTO OFF TIMER
- (8) COURTESY LAMPS OFF TIMER
- (9) LANGUAGE
- (10) DEFAULT SETTING

Door locks

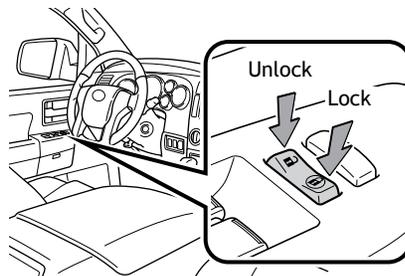


Telephone controls (Bluetooth®) (if equipped)


Audio unit

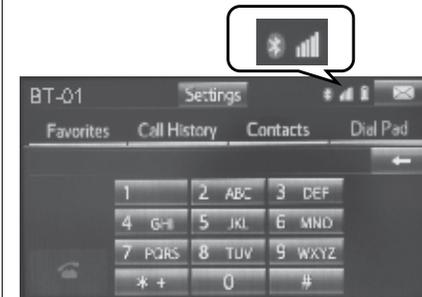

Microphone

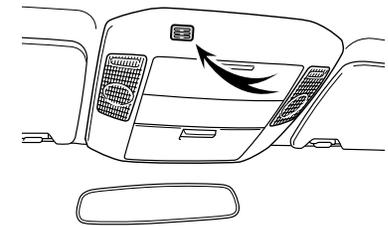


Steering wheel telephone switches

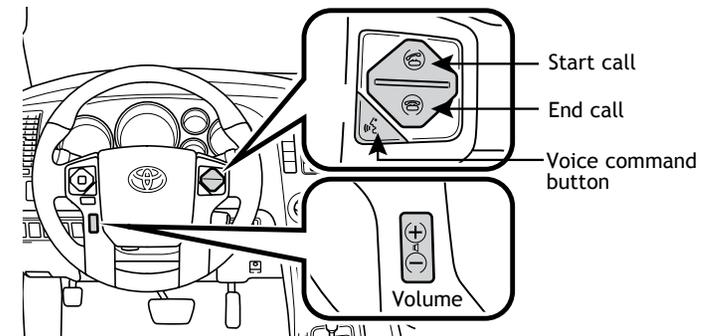

Bluetooth® technology allows dialing or receipt of calls without taking hands from the steering wheel or using a cable to connect the compatible telephone and the system.


Refer to “Using a Bluetooth® phone” Section 3-2 in the *Owner’s Manual*, for more details.

Power outlets-12V DC (if equipped)

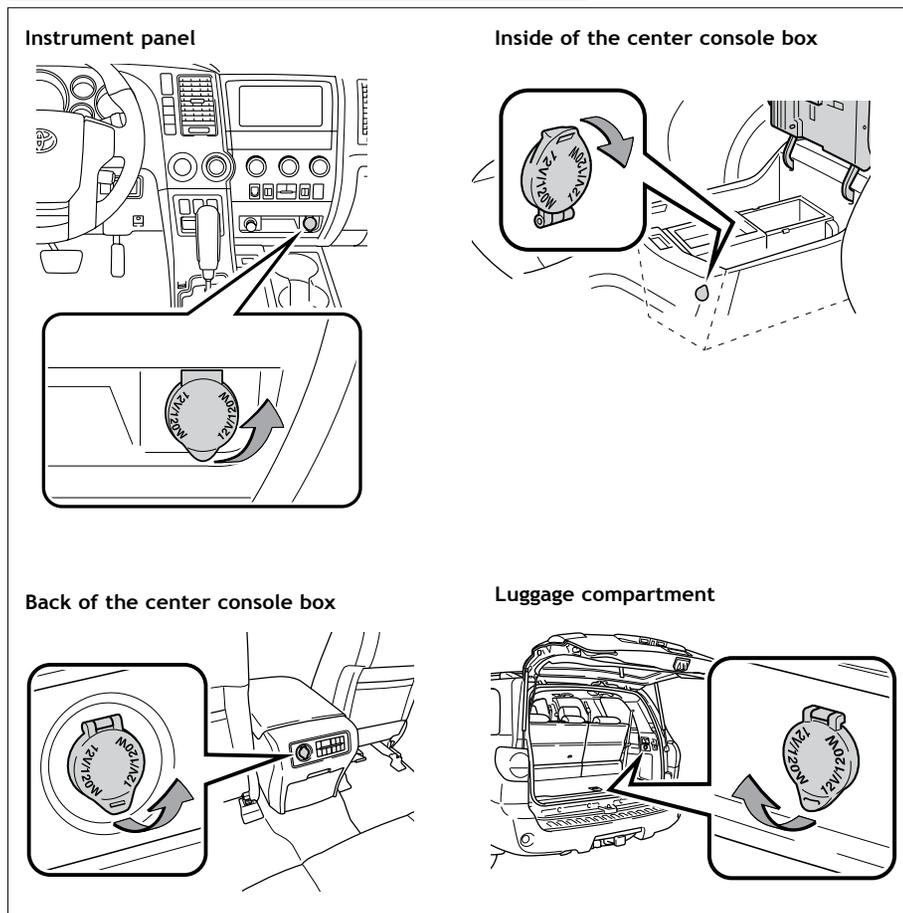


Key must be in the "ACC" or "ON" position to be used.

Power outlets-120V AC (if equipped)

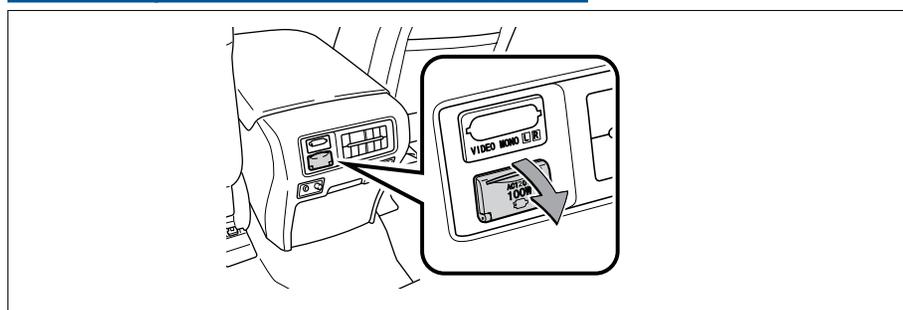

Key must be in the "ON" position to be used.


Rear seat entertainment system (if equipped)

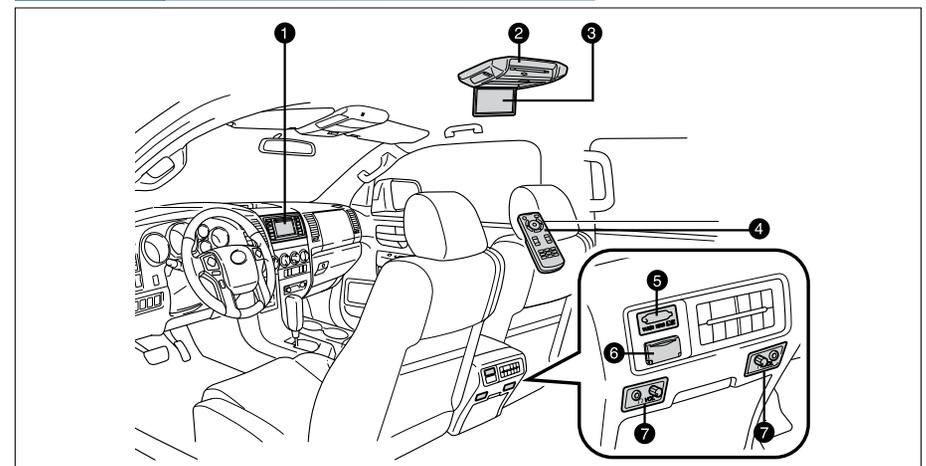

- 1 Front audio system
- 2 DVD player
- 3 DVD screen
- 4 Remote control
- 5 A/V input port
- 6 120V AC power outlet
- 7 Headphone volume controls and headphone jacks


For details, refer to the "Navigation System Owner's Manual."

Cup holders

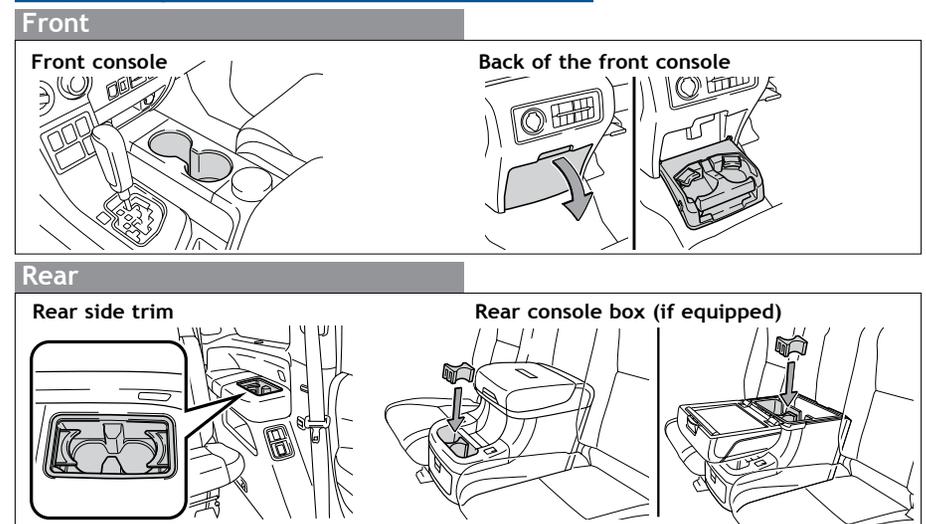

SAFETY AND EMERGENCY FEATURES

Tire Pressure Monitoring (warning) System

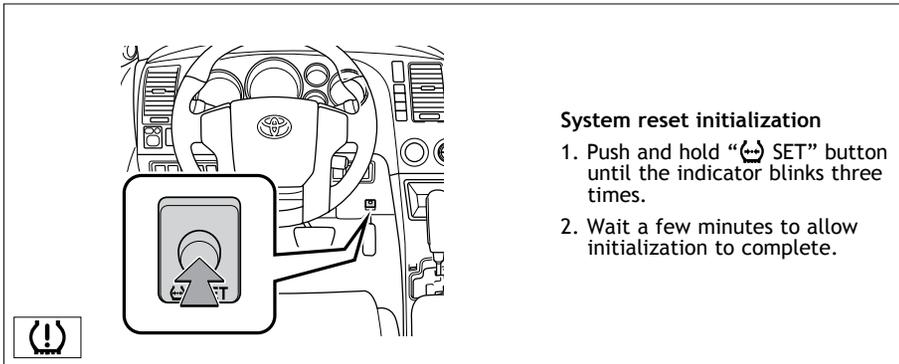


After adjusting tire pressures, or after tires have been rotated or replaced, turn the ignition switch to “ON” and press and hold the “SET” button until indicator blinks three times. Let the vehicle sit for a few minutes to allow initialization to complete.

Refer to the load label on the door jamb or the *Owner’s Manual* for tire inflation specifications.

If the tire pressure indicator flashes for more than 60 seconds and then remains on, take the vehicle to your local Toyota dealer.

NOTE: The warning light may come on due to temperature changes or changes in tire pressure from natural air leakage. If the system has not been initialized recently, setting the tire pressures to factory specifications should turn off the light.


Seat belts

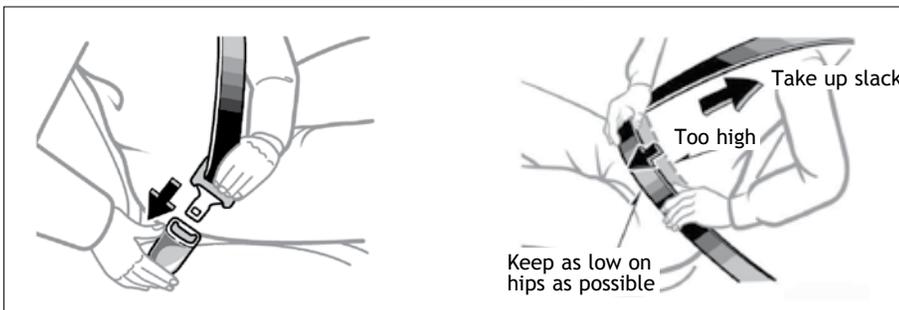


If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner’s Manual*.

Seat belts-Shoulder belt anchor

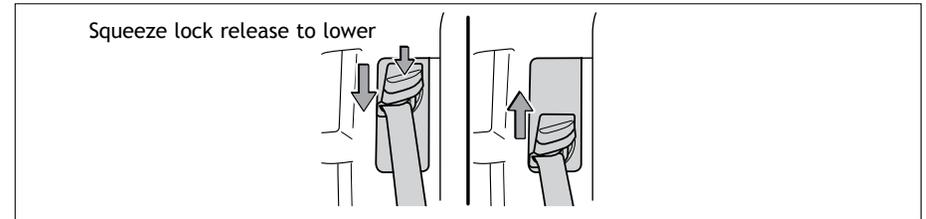


Doors-Child safety locks

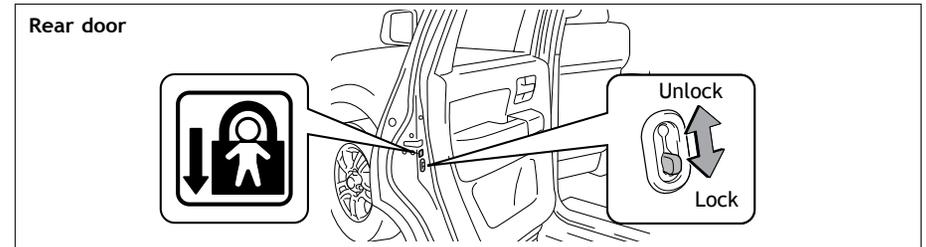


Moving the lever downward will allow the door to be opened only from the outside.

Spare tire & tools

Spare tire, jack and tool location

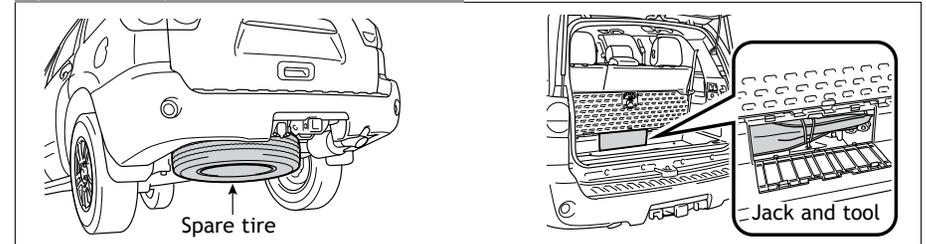

Removing the spare tire

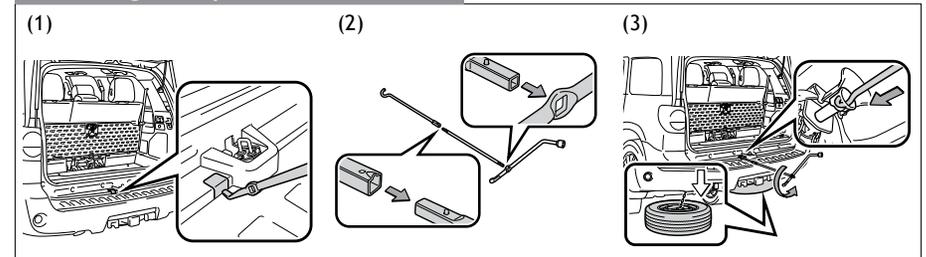

- (1) Remove the cover.
- (2) Assemble the jack handle.
- (3) Insert the jack handle extension into the lowering screw. Lower the spare tire completely to the ground.

Refer to the *Owner’s Manual* for tire changing and jack positioning procedures.

Star Safety System™

All new Toyota vehicles come standard with the Star Safety System™, which combines Vehicle Stability Control (VSC), Traction Control (TRAC), Anti-lock Braking System (ABS), Electronic Brake-force Distribution (EBD), Brake Assist (BA) and Smart Stop Technology (SST).

Vehicle Stability Control (VSC)

VSC helps prevent loss of traction during cornering by reducing engine power and applying brake force to selected wheels.

Toyota's VSC monitors steering angle and the direction your vehicle is traveling. When it senses that the front or rear wheels begin to lose traction, VSC reduces engine power and applies braking to selected wheels. This helps restore traction and vehicle control.

Traction Control (TRAC)

VSC helps prevent loss of traction during cornering by reducing engine power, and Traction Control helps maintain traction on loose gravel and wet, icy, or uneven surfaces by applying brake force to the spinning wheel(s).

Toyota's TRAC sensors are activated when one of the drive wheels starts to slip. TRAC limits engine output and applies the brakes to the spinning wheel. This transfers power to the wheels that still have traction to help keep you on track.

Anti-Lock Brake System (ABS)

ABS helps prevent brakes from locking up by “pulsing” brake pressure to each wheel. This limits brake lockup and helps provide directional control for the current road conditions.

Toyota's ABS sensors detect which wheels are locking up and limits wheel lockup by “pulsing” each wheel's brakes independently. Pulsing releases brake pressure repeatedly for fractions of a second. This helps the tires attain the traction that current road conditions will allow, helping you to stay in directional control.

Electronic Brake Force Distribution (EBD)

Toyota's ABS technology has Electronic Brake-force Distribution (EBD) to help maintain control and balance when braking. Abrupt stops can cause a vehicle to tilt forward, reducing the braking power of the rear wheels. EBD responds to sudden stops by redistributing brake force to enhance the braking effectiveness of all four wheels.

Brake Assist (BA)

Brake Assist is designed to detect sudden or “panic” braking, and then add braking pressure to help decrease the vehicle's stopping distance. When there's only a split second to react, Brake Assist can add additional brake pressure more quickly than just the driver alone can.

Smart Stop Technology (SST)

Smart Stop Technology automatically reduces engine power when the accelerator and brake pedals are pressed simultaneously under certain conditions.

SST engages when the accelerator is depressed first and the brakes are applied firmly for longer than one-half second at speeds greater than five miles per hour.


SST doesn't engage if the brake pedal is depressed before the accelerator pedal, allowing vehicles to start on a steep hill and safely accelerate without rolling backward.

Floor mat installation

There are two types of Toyota floor mats: carpeted and all-weather. Each vehicle has model-specific floor mats. Installation is easy.

To keep your floor mat properly positioned, follow these steps:

- Only use floor mats designed for your specific model.
- Use only one floor mat at a time, using the retaining hooks to keep the mat in place.
- Install floor mats right side up.

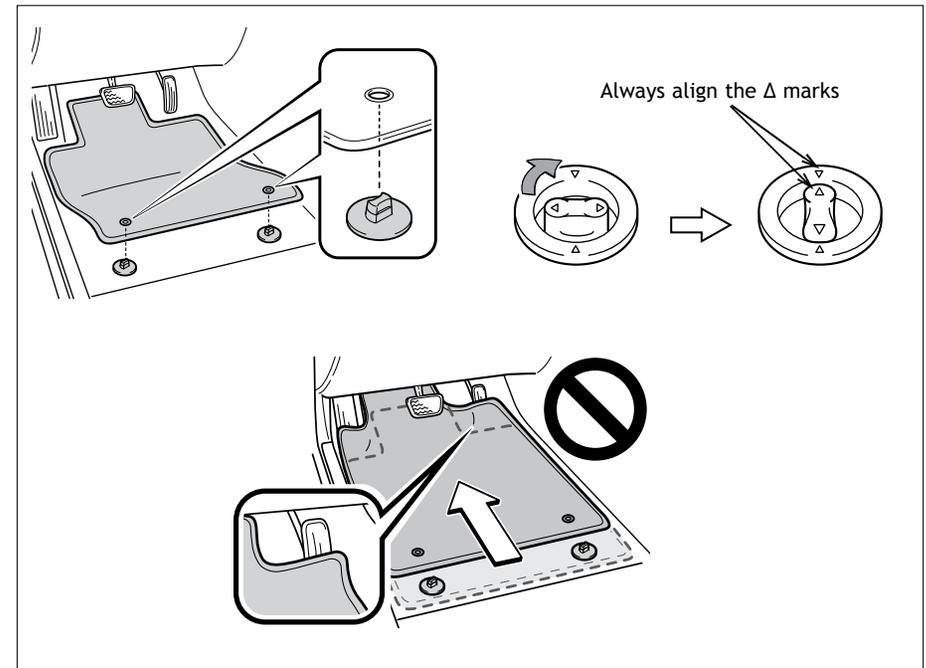


BLUETOOTH® DEVICE PAIRING SECTION

To begin the Bluetooth Pairing process, press the HOME button on the faceplate of your Toyota Vehicle Entune Multimedia Head Unit.¹


Bluetooth Pairing for Android phone and Entune touch screen system

Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all Android mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.²


Initiate Bluetooth on your Android

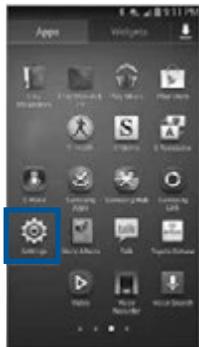

STEP 1
From your APPS SCREEN, select SETTINGS

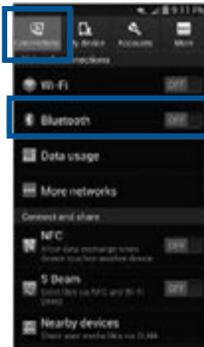

STEP 2
Select CONNECTIONS and select BLUETOOTH

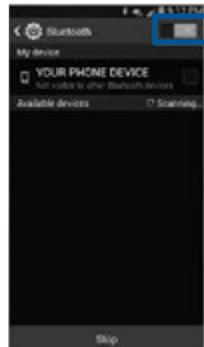

STEP 3
Ensure BLUETOOTH is ON



STEP 4
Select YOUR PHONE DEVICE to make it discoverable.


Phone will seek out Bluetooth devices while remaining discoverable.



STEP 5
While your Android device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

Initiate Bluetooth on your Entune Multimedia Head Unit


Once you have Bluetooth® enabled on your phone and ready to pair, you will need to initiate Bluetooth® on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.

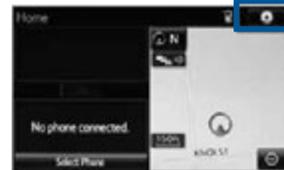


STEP 6
On your Toyota Vehicle Entune Multimedia Head Unit, Select SETUP BUTTON on the Home Screen.



STEP 7
Select BLUETOOTH

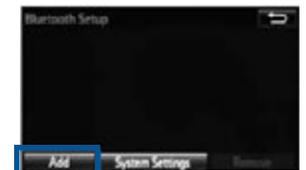

STEP 8
Select ADD, to add your phone device

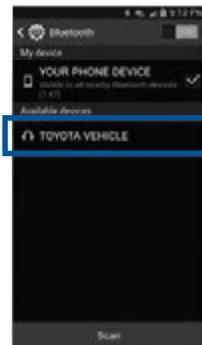


STEP 9
Back on your smartphone, you can now select your TOYOTA VEHICLE in Bluetooth Settings.

You may need to enter the provided Bluetooth PIN on your phone.



STEP 10
Your smartphone is now paired with Entune.

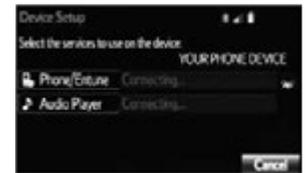


STEP 11
Once paired, Entune will attempt to connect audio and contacts on your phone.

¹ To determine which head unit is installed in your vehicle, refer to page 24.

² Some Android devices may have slightly different SETTINGS screen layout depending on manufacturer of device and Android OS version.

Initiate Bluetooth on your Entune Multimedia Head Unit (continued)

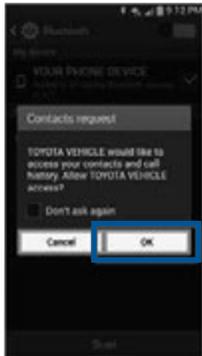

STEP 12

Using your smartphone, you will need to allow Entune access to your messaging and contacts

It is recommended to check the "Don't ask again" box, so as not to have to press OK every time the phone makes a Bluetooth connection with your Toyota



STEP 13

A confirmation will appear once your phone has been paired and connected.

Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:
www.toyota.com/connect

Your Toyota Owner's Manual
Located in the vehicle glovebox

Toyota Customer
Experience Center
(800) 331-4331


Disclosures

- This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.
1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
 2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
 3. Android is a trademark of Google, Inc. All rights reserved. Google is not a participant in or sponsor of this promotion.
 4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.
 5. Bluetooth Pairing Guide for select 2014 models.

Bluetooth Pairing for iPhone and Entune touch screen system


Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth®. This pairing process is quick and easy: all iPhone® mobile digital devices have Bluetooth® integrated; all you have to do is setup the phone and multimedia system to "talk" to each other and form a connection. Bluetooth Pairing Guide for select 2014 models.

Initiate Bluetooth on your iPhone

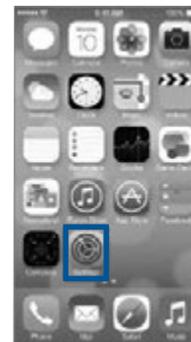

STEP 1

From the HOME SCREEN, select SETTINGS

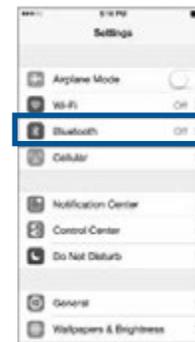

STEP 2

Select BLUETOOTH



STEP 3

Ensure BLUETOOTH is ON



STEP 4

Your iPhone will seek out Bluetooth devices while remaining discoverable



STEP 5

While your iPhone device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

CONTINUE ON THE NEXT PAGE...

BLUETOOTH DEVICE PAIRING

Initiate Bluetooth on your Entune Multimedia Head Unit

Once you have Bluetooth® enabled on your phone and ready to pair, you will need to initiate Bluetooth® on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.



STEP 6
Select **SETUP** BUTTON on the Home Screen.



STEP 7
Select **BLUETOOTH**



STEP 8
Select **ADD**, to add your phone device




STEP 9
Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.


You may need to enter the provided Bluetooth PIN on your phone.




STEP 10
Your smartphone is now paired with Entune.

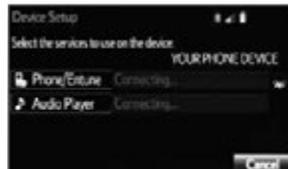

STEP 11
Once paired, Entune will attempt to connect audio and contacts on your phone.

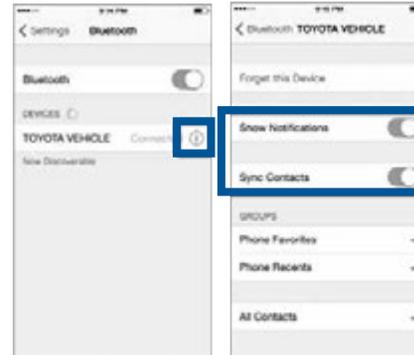

STEP 12
Using your smartphone, you may need to allow Entune access to your messaging and contacts

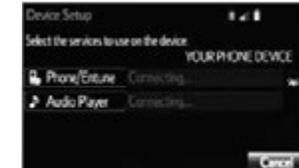

STEP 13
A confirmation will appear once your phone has been paired and connected.

Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:
www.toyota.com/connect

Your Toyota Owner's Manual
Located in the vehicle glovebox

Toyota Customer
Experience Center
(800) 331-4331

Disclosures

- This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.
1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
 2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
 3. Android is a trademark of Google, Inc. All rights reserved. Google is not a participant in or sponsor of this promotion.
 4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.
 5. Bluetooth Pairing Guide for select 2014 models.

Bluetooth Pairing for Windows phone and Entune touch screen system

Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth®. This pairing process is quick and easy: all Windows Phone® mobile digital devices have Bluetooth® integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection. Bluetooth Pairing Guide for select 2014 models.


Initiate Bluetooth on your Windows Phone



STEP 1
From your APP LIST, select **SETTINGS**



STEP 2
Select **BLUETOOTH**

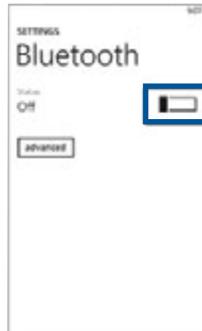

STEP 3
Ensure **BLUETOOTH** is **ON**



STEP 4
Phone will seek out Bluetooth devices while remaining discoverable



STEP 5
While your iPhone device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.
CONTINUE ON THE NEXT PAGE...

Initiate Bluetooth on your Entune Multimedia Head Unit


Once you have Bluetooth® enabled on your phone and ready to pair, you will need to initiate Bluetooth® on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.




STEP 6
On your Toyota Vehicle Entune Multimedia Head Unit, Select **SETUP BUTTON** on the Home Screen.



STEP 7
Select **BLUETOOTH**

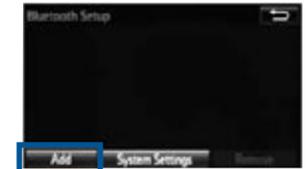

STEP 8
Select **ADD**, to add your phone device

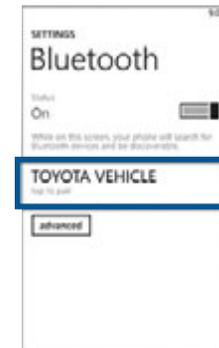


STEP 9
Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.

You may need to enter the provided Bluetooth PIN on your phone.



STEP 10
Your smartphone is now paired with Entune.

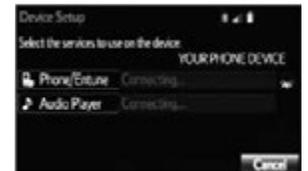


STEP 11
Once paired, Entune will attempt to connect audio and contacts on your phone.

Initiate Bluetooth on your Entune Multimedia Head Unit (continued)



STEP 12

Using your smartphone, you may need to allow Entune access to your contacts

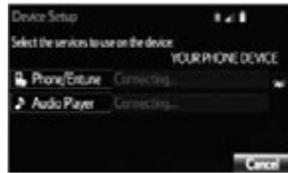

STEP 13

A confirmation will appear that your phone has been paired and connected.

Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:
www.toyota.com/connect

Your Toyota Owner's Manual
Located in the vehicle glovebox

Toyota Customer Experience Center
 (800) 331-4331

- Disclosures
- This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.
1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
 2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
 3. Android is a trademark of Google, Inc. All rights reserved. Google is not a participant in or sponsor of this promotion.
 4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.
 5. Bluetooth Pairing Guide for select 2014 models.

NOTES