

**2015**  
**Avalon Hybrid**  
**Quick Reference Guide**

# 2015 Avalon Hybrid

This *Quick Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Quick Reference Guide* is not intended as a substitute for the *Owner's Manual* located in your vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Avalon Hybrid.

## A word about safe vehicle operations

This *Quick Reference Guide* is not a full description of Avalon Hybrid operations. Every Avalon Hybrid owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Quick Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

## INDEX

### OVERVIEW

Engine maintenance	8
Fuel tank door release and cap	6
Hood release	8
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
<b>Keyless entry<sup>1,2</sup></b>	<b>6</b>
Light control-Instrument panel	8
<b>Smart Key system<sup>1,2</sup></b>	<b>7</b>

### FEATURES/OPERATIONS

Air Conditioning/Heating	18-19
Audio	20
<b>Auto lock/unlock<sup>2</sup></b>	<b>10</b>
BSM (Blind Spot Monitor)	21
<b>Bluetooth® Device Pairing Section</b>	<b>29-38</b>
Clock	20
Cruise control	16
Cup holders	22
Driving mode select	11
Dynamic radar cruise control	17
Garage door opener (HomeLink®) <sup>3</sup>	16
Hill-start Assist Control (HAC)	22
Hybrid Synergy Drive System	9
iPod®/USB/AUX port	21
<b>Lights<sup>1</sup> &amp; turn signals</b>	<b>15</b>
Moonroof	12
Multi-Information Display	13
Parking brake	10
Power outlets-12V DC	14
Seat adjustments-Front	13
Seat ventilators/Heaters	19
Seats-Head restraints	12
Steering lock release	11
Steering wheel switches	20
Tilt and telescopic steering wheel	11
Transmission	10
Windows-Power	12
Windshield wipers & washers	14
Wireless charger	22

### SAFETY AND EMERGENCY FEATURES

Door locks	23
Doors-Child safety locks	23
Floor mat installation	27
Seat belts	23
Seat belts-Shoulder belt anchor	24
Spare tire & tools	25
Star Safety System™	26-27
Tire Pressure Monitoring (warning) System	24
Trunk-Internal release	25

<sup>1</sup> Visit your Toyota dealer for information on customizing this feature.





<sup>2</sup> Programmable by customer. Refer to the *Owner's Manual* for instructions and more information.

<sup>3</sup> HomeLink® is a registered trademark of Johnson Controls, Inc.

# OVERVIEW

## Instrument panel

### Steering wheel controls

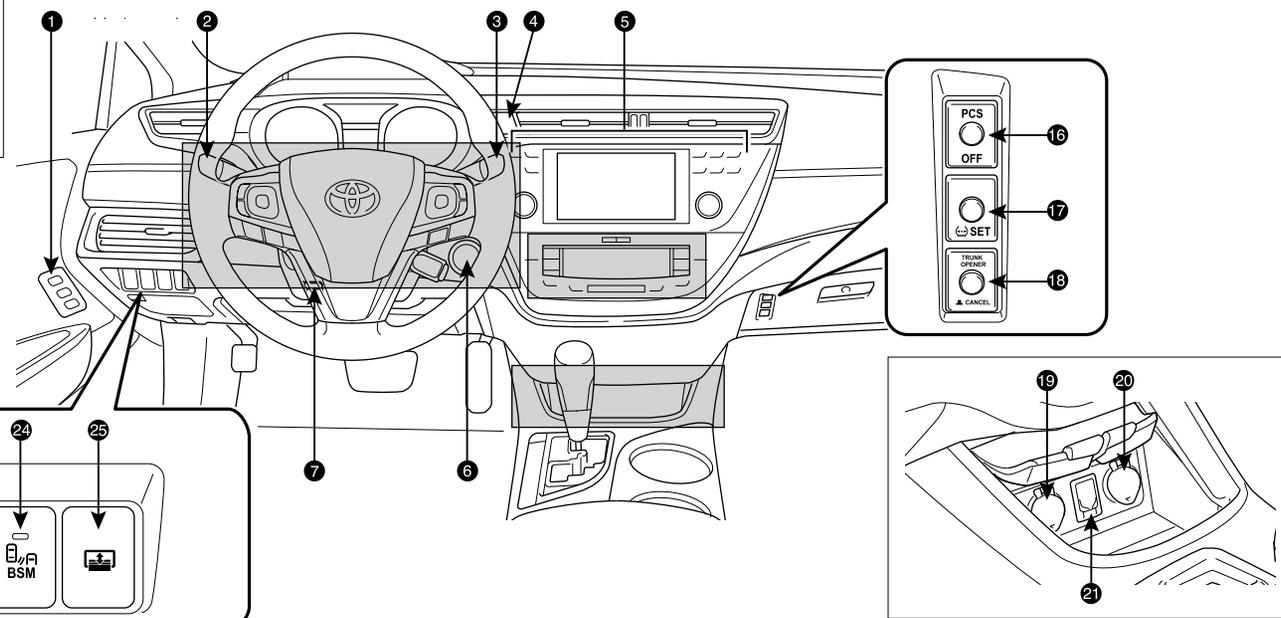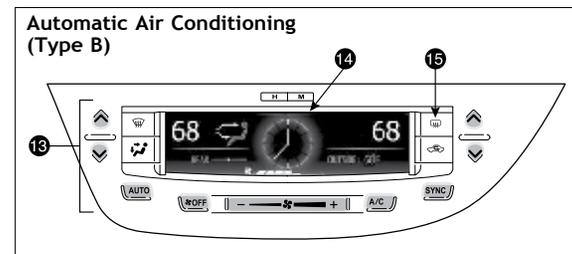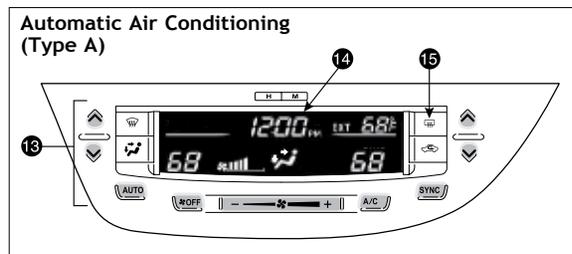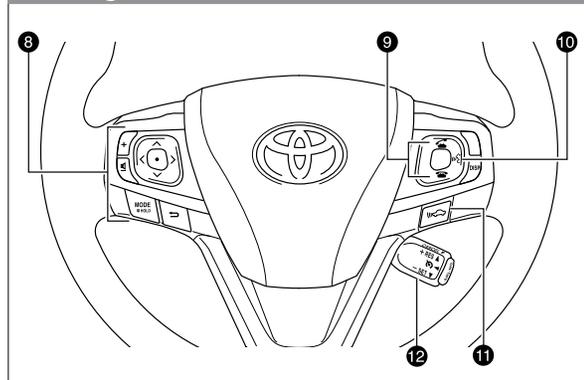

- 1 Driving position memory switches<sup>1</sup>
- 2 Headlight and turn signal controls/Headlight, turn signal and front fog light<sup>1</sup> controls
- 3 Wiper and washer controls
- 4 Emergency flasher button
- 5 Navigation system<sup>1,2</sup>/Display audio system<sup>1,3</sup>
- 6 "POWER" switch
- 7 Tilt and telescopic steering lock release
- 8 Steering wheel audio controls<sup>2,3</sup>
- 9 Telephone controls<sup>2,3</sup>
- 10 Voice command button<sup>2,3</sup>
- 11 Vehicle-to-vehicle distance button<sup>1</sup>
- 12 Cruise control/Dynamic radar cruise control<sup>1</sup>
- 13 Air Conditioning controls
- 14 Clock
- 15 Outside rearview mirror/Rear window defogger button
- 16 "PCS OFF" switch<sup>1</sup>

- 17 Tire Pressure Monitoring (warning) System reset
- 18 Trunk opener main switch
- 19 12V DC power outlet
- 20 12V DC power outlet/Wireless charger switch<sup>1</sup>
- 21 USB/AUX port
- 22 Trunk opener
- 23 TRAC/VSC OFF switch
- 24 BSM (Blind Spot Monitor) main switch<sup>1</sup>
- 25 Rear sunshade switch<sup>1</sup>


<sup>1</sup> If equipped

<sup>2</sup> For details, refer to the "Navigation System Owner's Manual."

<sup>3</sup> For details, refer to the "Display Audio System Owner's Manual."

**NOTE:** For additional information regarding the Entune™ Audio System, please consult the "Navigation System With Entune Quick Reference Guide" or [www.toyota.com/entune](http://www.toyota.com/entune).

Instrument cluster

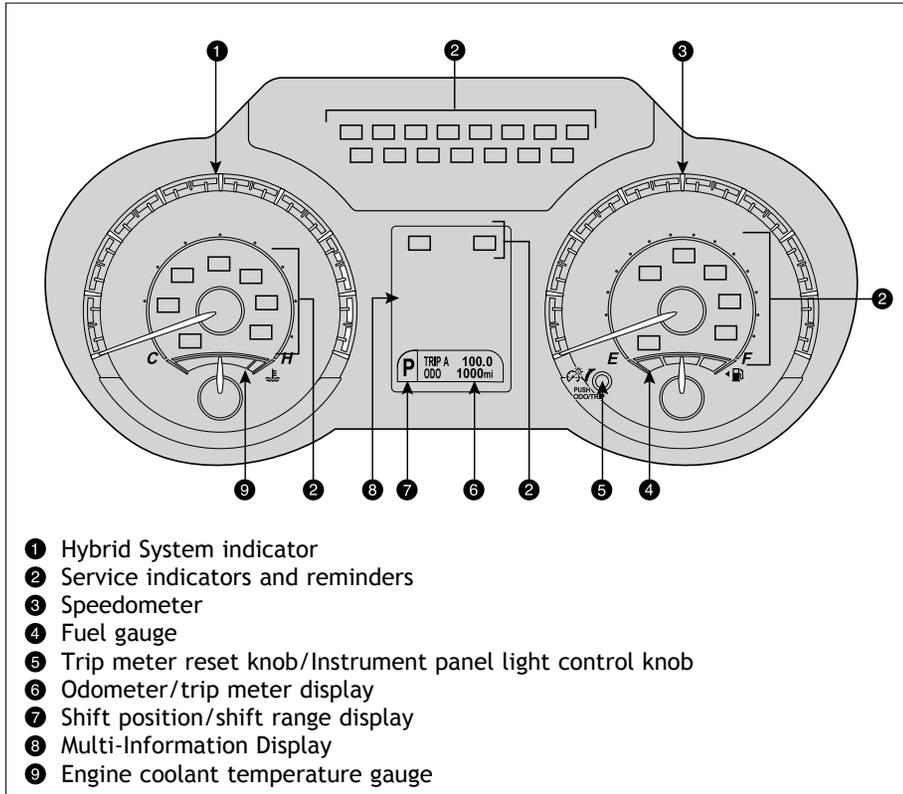

Indicator symbols

For details, refer to “Indicators and warning lights,” Section 2, 2015 Owner’s Manual.

- BRAKE Brake system warning<sup>1</sup>
- Brake system warning light<sup>1</sup>
- Driver/Front passenger seat belt reminder (alarm will sound if speed is over 12 mph)
- Electric power steering system warning<sup>1</sup>
- Charging system warning<sup>1</sup>
- SRS AIR BAG ON/OFF indicator

<sup>1</sup> If indicator does not turn off within a few seconds of starting engine, there may be a malfunction. Have vehicle inspected by your Toyota dealer.

<sup>2</sup> If this light flashes, refer to “Cruise control,” Section 4-5, 2015 Owner’s Manual.

- Master warning light<sup>1</sup>
- Low engine oil pressure warning<sup>1</sup>
- Malfunction/Check Engine indicator<sup>1</sup>
- Low fuel level warning
- Open door warning
- Airbag SRS warning<sup>1</sup>
- Low Tire Pressure Warning<sup>1</sup>
- Theft deterrent/Engine immobilizer system indicator
- Headlight low/high beam indicator
- Automatic high beam indicator<sup>4</sup>
- Turn signal indicator
- Front fog light indicator
- Slip indicator<sup>1</sup>
- Vehicle Stability Control OFF indicator<sup>1</sup>
- Traction Control OFF indicator<sup>1</sup>
- SET** Cruise control indicator<sup>2</sup>/Cruise control SET indicator<sup>2</sup>
- Radar cruise control indicator<sup>3,4</sup>
- PCS Pre-Collision System indicator<sup>1,5</sup>
- ABS Anti-lock Brake System warning<sup>1</sup>
- ECO drive mode indicator
- SPORT mode indicator
- “READY” indicator
- EV indicator
- EV drive mode indicator


<sup>3</sup> If this light flashes, refer to “Dynamic radar cruise control,” Section 4-5, 2015 Owner’s Manual.

<sup>4</sup> The indicator flashes to indicate a malfunction.

<sup>5</sup> The indicator flashes faster than usual to indicate that the system is operating.


### Fuel tank door release and cap

The fuel tank door locks/unlocks with the vehicle's doors.

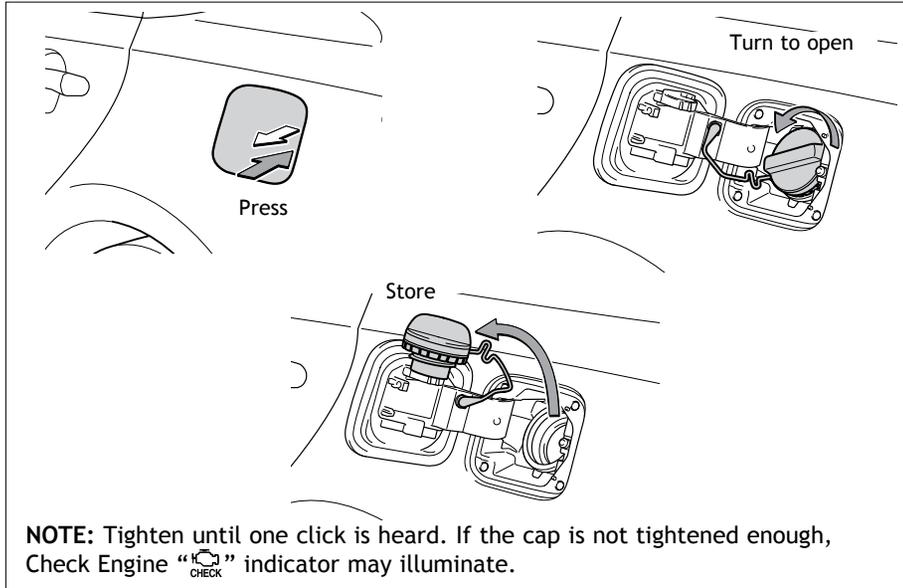


### Keyless entry


#### Locking operation

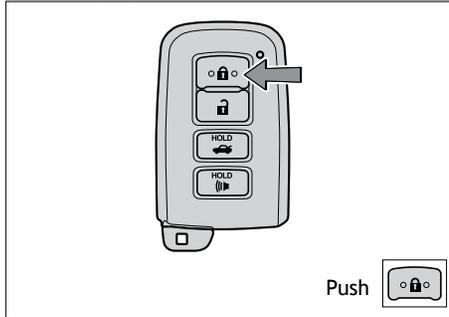

#### Unlocking operation

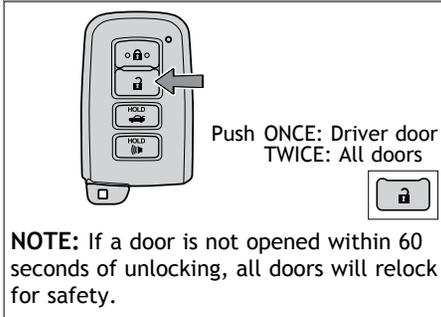

#### Trunk lid

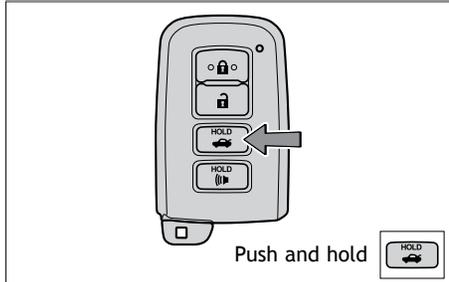


#### Panic button



### Smart Key system

#### Start function

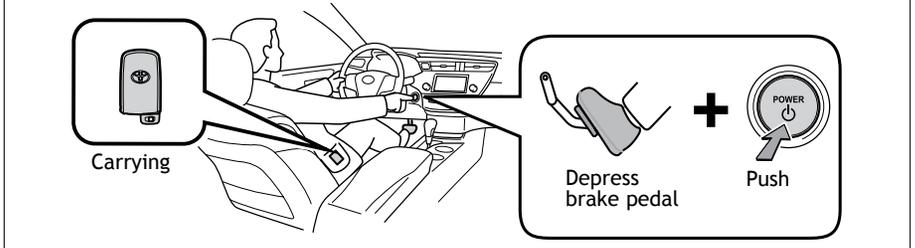

**NOTE:** Gear shift lever must be in Park and brake pedal depressed.

#### Power (without starting Hybrid System)

Without depressing the brake pedal, pressing the “POWER” switch will change the operation mode in succession from:

#### ACCESSORY

Accessories such as the radio will operate.

#### ON


Power ON; the Hybrid System not running.

#### OFF

All systems OFF.


#### Locking operation

##### Front door lock

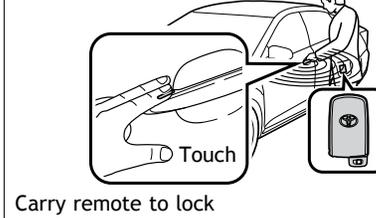


#### Unlocking operation

##### Front door unlock\*

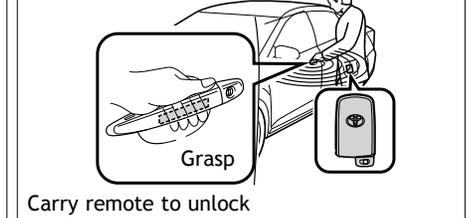


#### Trunk unlock

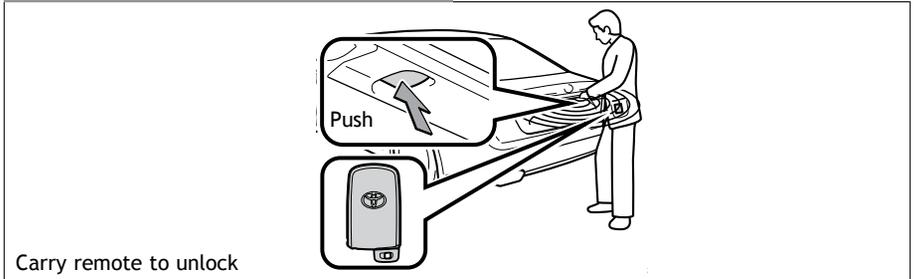


\* Driver door unlocking function can be programmed to unlock driver door only, or all doors. In some models, grasping front passenger door handle will unlock all doors. Please refer to the *Owner's Manual* for more details on how to program the doors.

**NOTE:** Doors may also be locked/unlocked using remote.


### Light control-Instrument panel

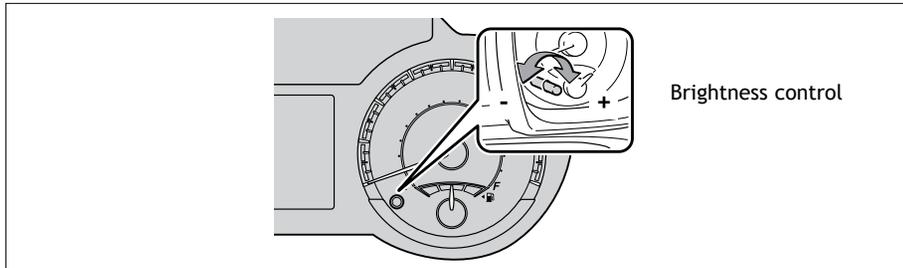

### Hood release

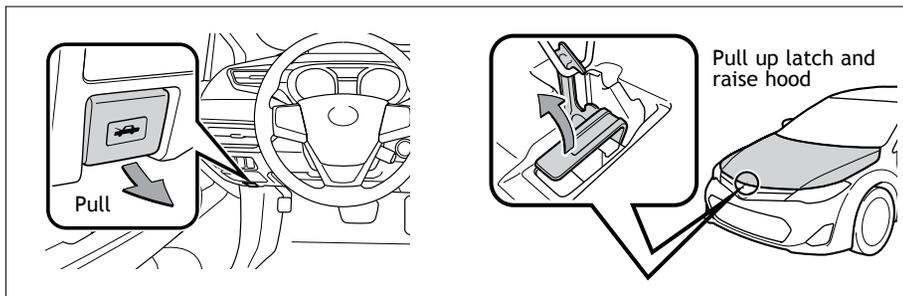

### Engine maintenance

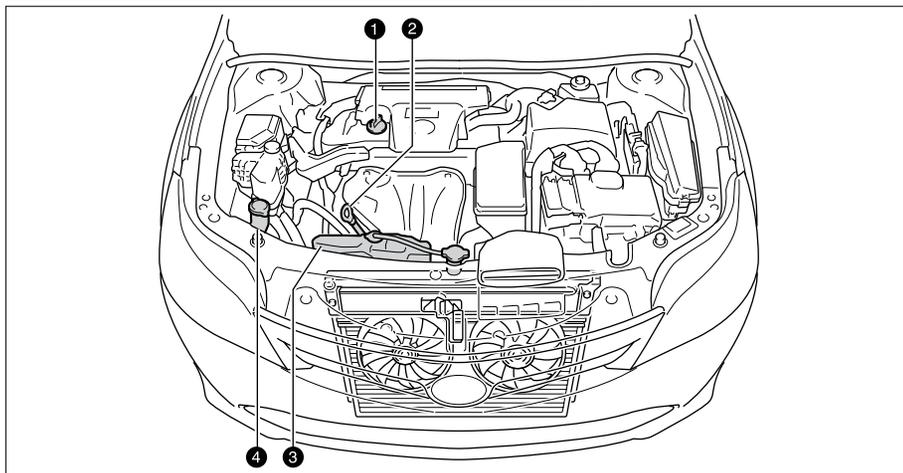

- ① Engine oil filler cap
- ② Engine oil level dipstick
- ③ Engine coolant reservoir
- ④ Windshield washer fluid tank

**NOTE:** Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the “Warranty & Maintenance Guide.”

### Hybrid Synergy Drive System


The Hybrid Synergy Drive System utilizes a computer-controlled gasoline engine and electric motor to provide the most efficient combination of power for the vehicle. To conserve energy, when the brakes are applied the braking force generates electricity which is then sent to the traction battery. In addition, the engine shuts off when the vehicle is stopped. The benefits are better fuel economy, reduced vehicle emissions and improved performance.

**NOTE:** Fuel consumption and energy information of the Hybrid System are shown on the multi-information display and/or display audio system/navigation system screen (if equipped).

### Tips for improved fuel economy

1. Ensure tire pressures are maintained at levels specified in the *Owner’s Manual*.
2. Link trips to reduce engine cold starts whenever possible.
3. Avoid driving at speeds that are higher than necessary, especially on the highway.
4. When possible, avoid sudden stops to maximize regenerative braking energy.
5. Minimize use of the Air Conditioning.

### Starting your vehicle

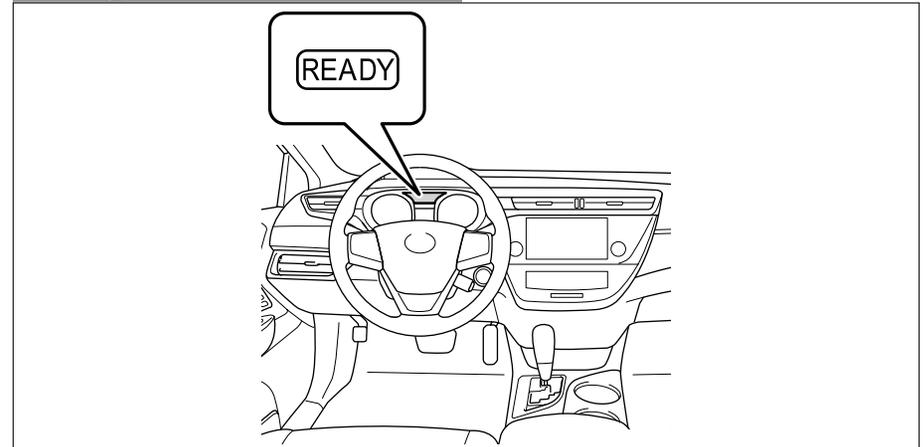

- (1) Put the selector lever in “P.”
- (2) Depress the brake pedal, and press the “POWER” switch briefly and firmly
- (3) The “READY” light will blink. After a few seconds, when the light remains steady and a beep sounds, you may begin driving.


### Auto lock/unlock

Automatic door locks can be programmed to operate in four different modes, or turned OFF.

- Doors lock when shifting from Park.
- Doors lock when the vehicle speed goes above approximately 12 mph.
- Doors unlock when shifting into Park.
- Doors unlock when the “POWER” switch is set to OFF and driver’s door is opened.

Refer to the *Owner’s Manual* for more details.

### Transmission

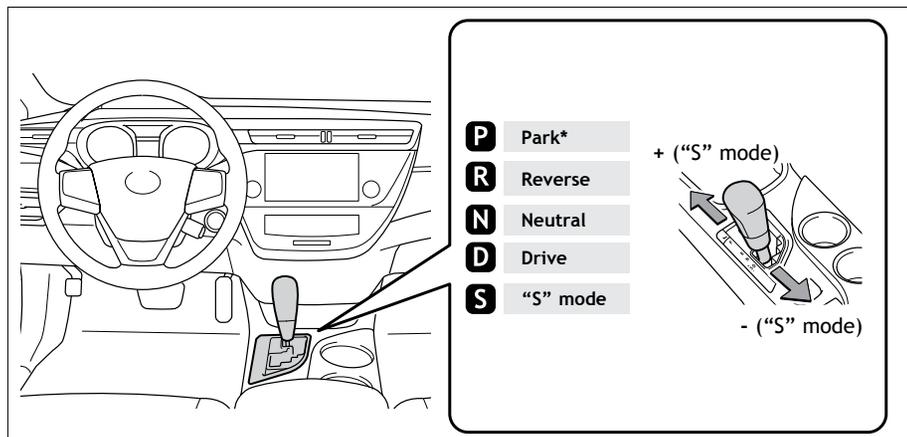

\* The “POWER” switch must be in ON mode and the brake pedal depressed to shift from Park.


### “S” (Sequential) mode

Shift the shift lever to “S” position from “D” position.


- +: Upshifting
- : Downshifting

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the “D” position.

### Parking brake

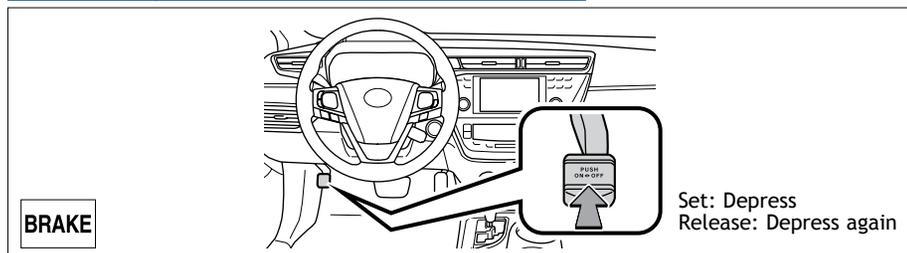


### Driving mode select

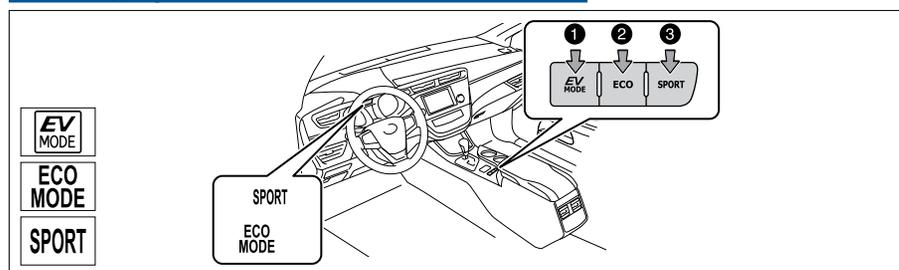


- 1 EV drive mode**  
EV drive mode allows the electric motor (traction motor), powered by the hybrid battery (traction battery), to be used to drive the vehicle under certain driving conditions.
- 2 ECO drive mode**  
Use ECO drive mode to help achieve low fuel consumption during trips that involve frequent accelerating.
- 3 SPORT mode**  
Use SPORT mode when increased acceleration response and precise handling is desired; for example, when driving on mountain roads.

### Steering lock release

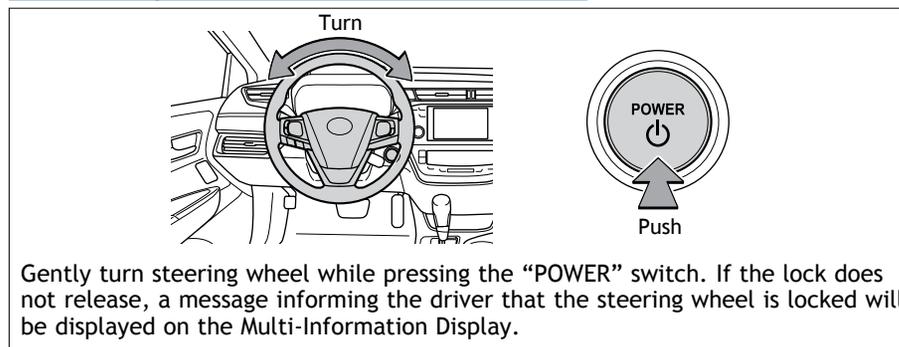

### Tilt and telescopic steering wheel

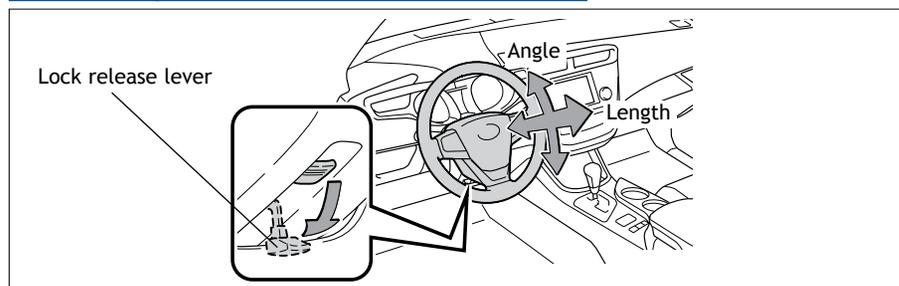


Hold wheel, push lever down, set angle and length, and return lever.


**NOTE:** Do not attempt to adjust while the vehicle is in motion.

## Windows-Power

Driver side

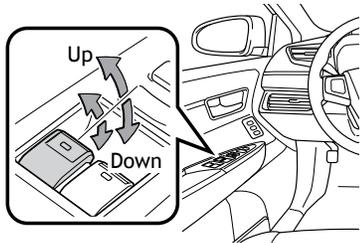

Window lock switch

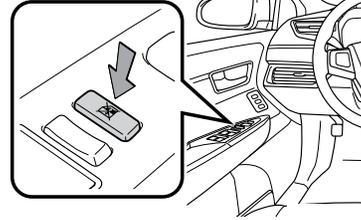


**Automatic operation** Push the switch completely down or pull it completely up and release to fully open or close. To stop the window partway, operate the switch in the opposite direction.

**Window lock switch** Deactivates all passenger windows. Driver remains able to operate all windows.

## Moonroof (if equipped)


Sliding operation

Push once to open partway; again to open completely.

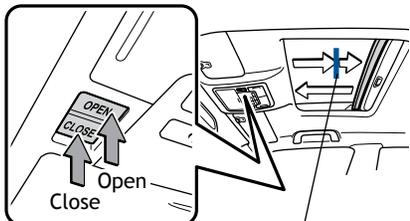


Recommended open position to minimize wind noise.

Tilting operation

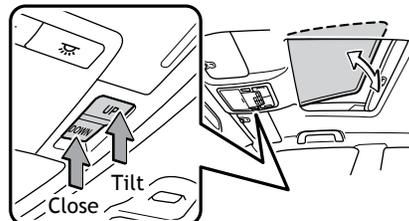


Push once to open; moonroof will automatically stop at the recommended position. Push again to open completely.

## Seats-Head restraints

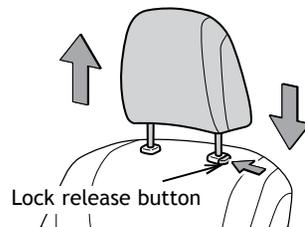


## Seat adjustments-Front

Driver's seat

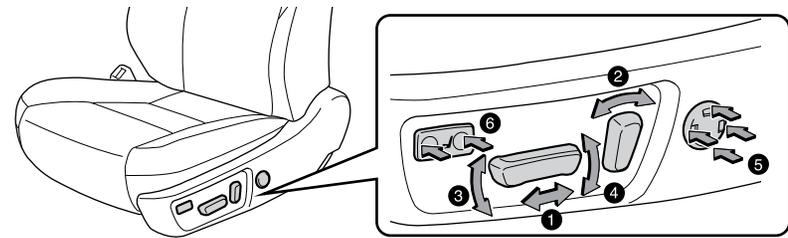


Passenger's seat

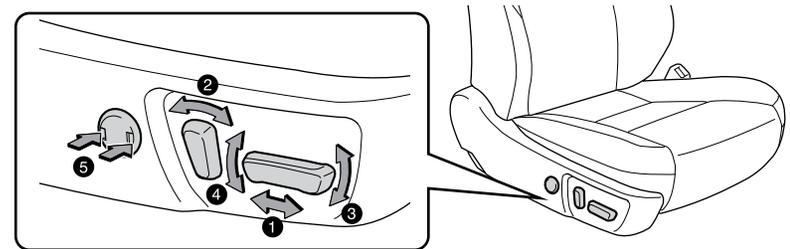

- 1 Seat position (forward/backward)
- 2 Seatback angle
- 3 Seat cushion angle (if equipped)
- 4 Seat height (if equipped)
- 5 Lumbar support (if equipped)
- 6 Seat cushion length (if equipped)

## Multi-Information Display

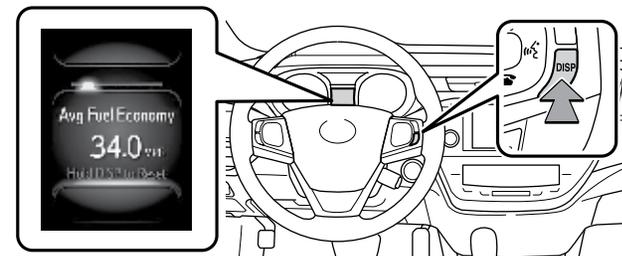


Push "DISP" to scroll through the following information screens:


- (1) Distance to empty
- (2) Average fuel economy
- (3) Current fuel economy
- (4) Energy flow
- (5) Digital speedometer
- (6) Settings

Windshield wipers & washers

With intermittent wiper

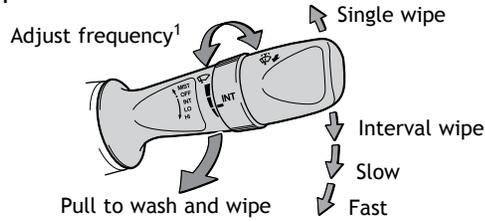

With AUTO rain-sensing wiper (if equipped)

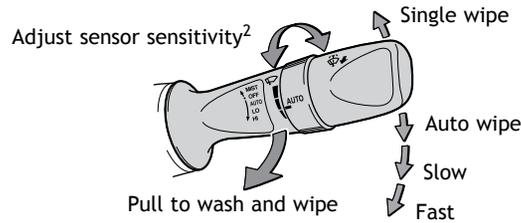


<sup>1</sup> Intermittent windshield wiper frequency adjustment  
Rotate to increase/decrease wipe frequency.


<sup>2</sup> Rain-sensing windshield wiper Rotate to increase/decrease sensor sensitivity.

Power outlets-12V DC

Front console

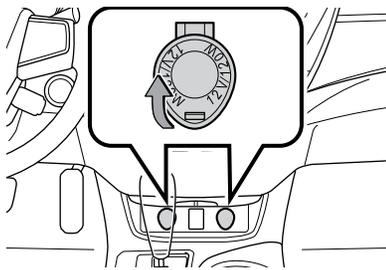


Center console

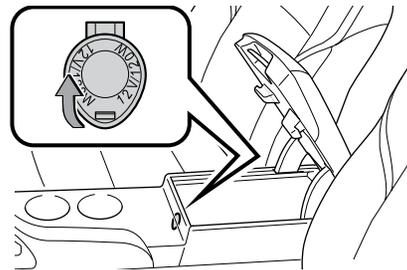

The “POWER” switch must be in the ACCESSORY or ON mode for use.

Lights & turn signals


Headlights

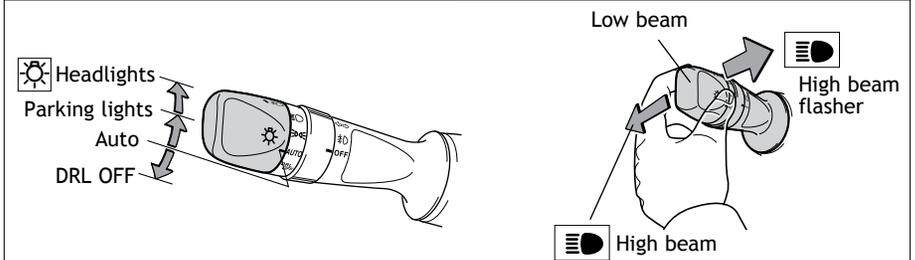


-Daytime Running Light system (DRL) Automatically turns on the headlights to make vehicle more visible to other drivers. Not for use at night.  
-Automatic light cut off system When the headlights are on: Automatically turns lights off after 30-second delay, or lock switch on remote may be pushed after locking.  
When the tail lights are on: Automatically turns lights off when driver’s door is opened.

Automatic high beam (if equipped)

Activate\*

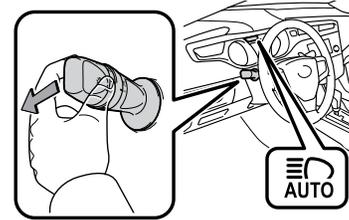


Deactivate

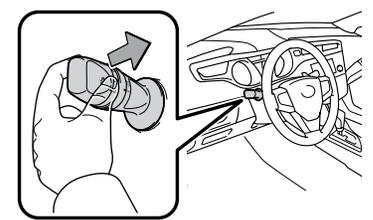


\* Refer to the Owner’s Manual for details on activating the automatic high beams.

Front fog lights (if equipped)

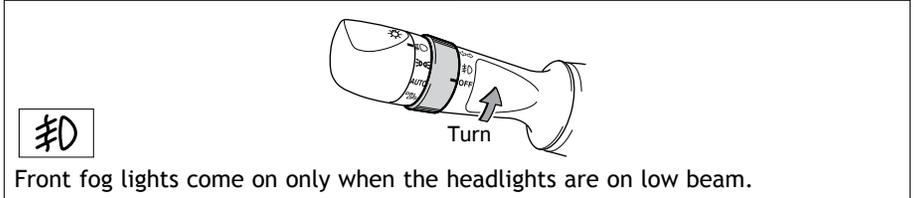

Front fog lights come on only when the headlights are on low beam.


Turn signals

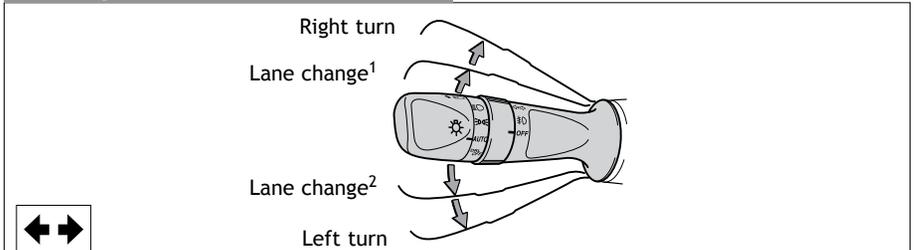

<sup>1</sup> The right hand signals will flash three times.

<sup>2</sup> The left hand signals will flash three times.

### Garage door opener (HomeLink®)\* (if equipped)

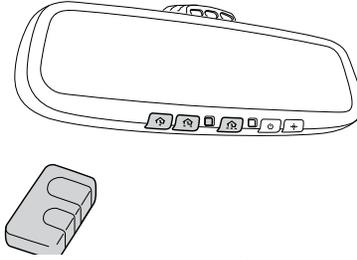

Garage door openers manufactured under license from HomeLink®\* can be programmed to operate garage doors, estate gates, security lighting, etc.


Refer to “Garage door opener,” Section 5-5 in the *Owner’s Manual* for more details.

For programming assistance, contact HomeLink® at 1-800-355-3515, or visit <http://www.homelink.com>.

\* HomeLink® is a registered trademark of Johnson Controls, Inc.


### Cruise control

#### Turning system ON/OFF

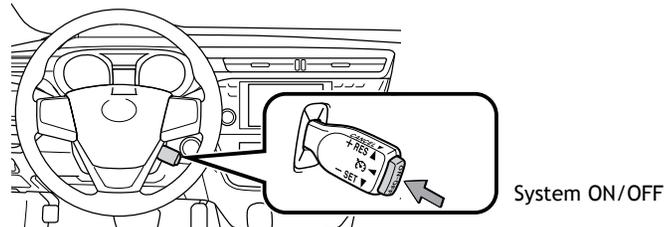

System ON/OFF

#### Functions

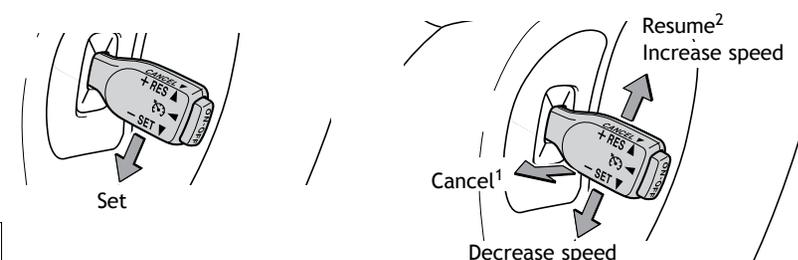

Set

Cancel<sup>1</sup>

Resume<sup>2</sup> Increase speed

Decrease speed


**SET**

<sup>1</sup> The set speed may also be cancelled by depressing the brake pedal.  
<sup>2</sup> The set speed may be resumed once vehicle speed exceeds 25 mph.

### Dynamic radar cruise control (if equipped)

Refer to the *Owner’s Manual* for more details and complete safety precautions before attempting to use “Dynamic radar cruise control.”

#### Fixed speed mode

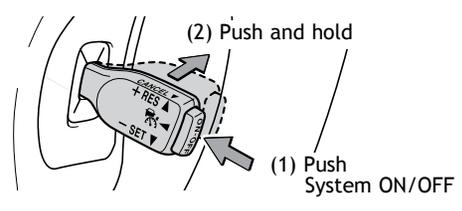


(2) Push and hold

(1) Push System ON/OFF

To set, cancel and resume a speed Refer to “Functions” in the *Cruise Control* section, and to the *Owner’s Manual* for more details.

#### Distance control mode

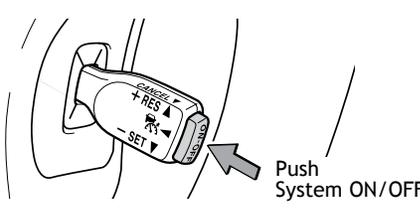


Push System ON/OFF

Radar Ready

The distance control mode will cruise at a set speed, decelerate to maintain a selected distance from a slower vehicle traveling in front of you, and accelerate back up to the selected speed if the vehicle in front changes lanes or speeds up.

To set, cancel and resume a speed Refer to “Functions” in the *Cruise Control* section, and your *Owner’s Manual* for more details.

**NOTE:** Once vehicle speed is set, pushing lever up toward “+ RES” will increase speed by 1 mph, or in 5 mph increments if held. Pushing lever down toward “- SET” will reduce speed in the same way.

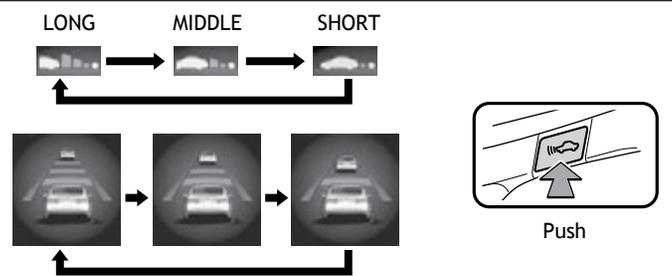

LONG MIDDLE SHORT

Push


#### To change the vehicle-to-vehicle distance

Push the distance button to cycle through the settings, which will change progressively from LONG to MIDDLE to SHORT.


## Air Conditioning/Heating

### Front control panel

Type A

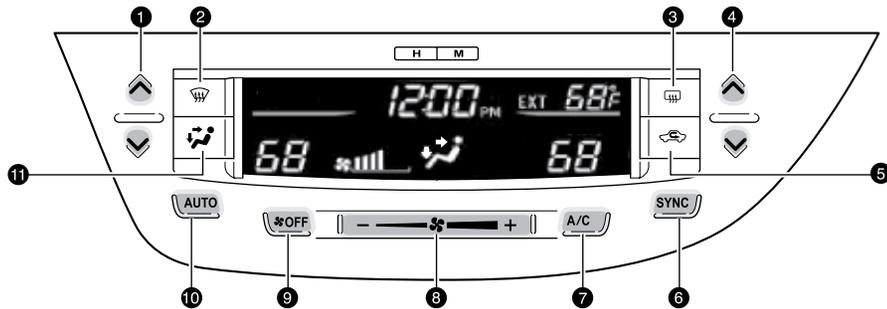

Type B

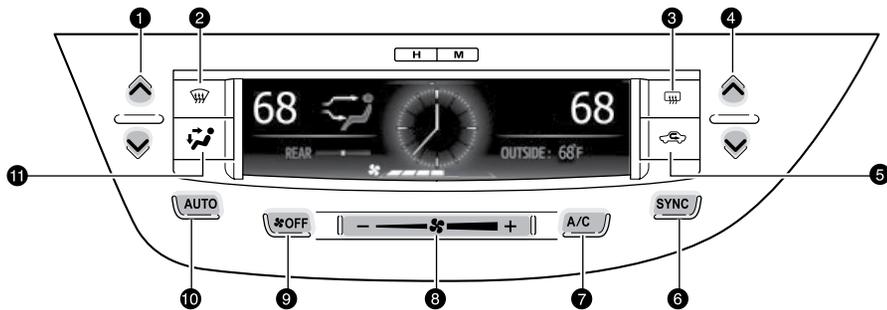


- 1 Temperature selector (driver side)
- 2 Windshield airflow/defogger
- 3 Outside rearview mirror/Rear defogger
- 4 Temperature selector (passenger side)
- 5 Recirculate cabin air (fresh air when OFF)
- 6 "SYNC" button

**Indicator ON:** Synchronized temperature settings for driver, passengers and rear seat (if equipped).

**Indicator OFF:** Separate temperature settings for driver and passengers.

- 7 Air Conditioning ON/OFF
- 8 Fan speed
- 9 Climate control OFF
- 10 Automatic climate control ON  
Adjusting the temperature setting will cause the airflow vents, air intake and fan to adjust automatically.
- 11 Airflow vent  
In "REAR" mode, use fresh air ("FRESH" indicator ON) to reduce window fogging.


### Rear control panel (if equipped)

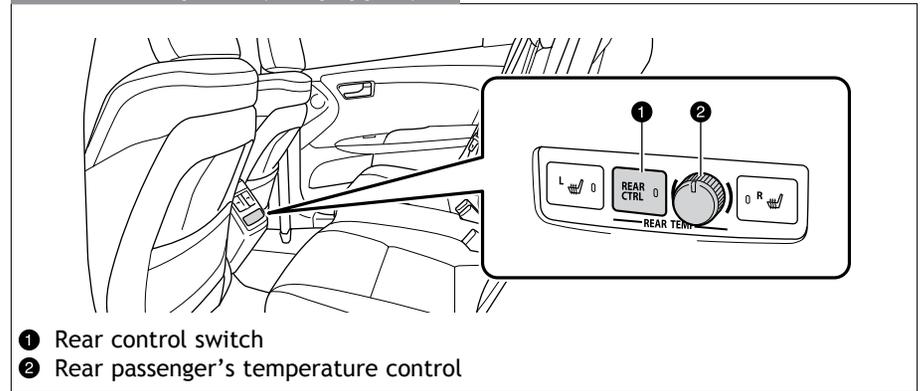


- 1 Rear control switch
- 2 Rear passenger's temperature control

### Seat ventilators/Heaters (if equipped)

With ventilator

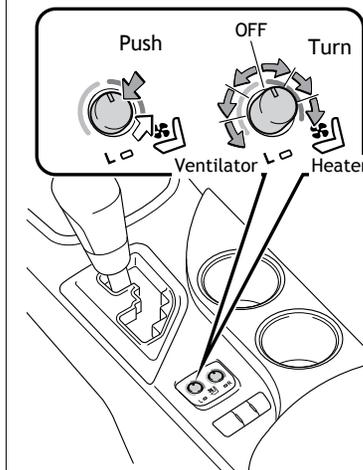

Heater only

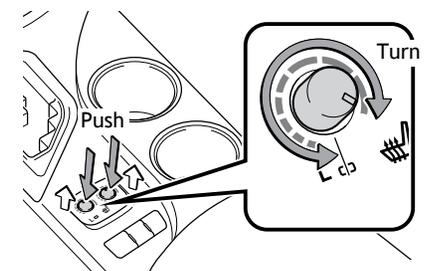

Push knob to pop the controller out.  
Turn clockwise for heater, counter-clockwise for ventilator.

Audio\*1

Push to display audio screen

Eject CD

Touch screen display

AUDIO

SEEK TRACK

PWR VOL

INFO

SETUP

TUNE SCROLL

Turn to tune radio stations manually or select tracks or files

\*1 Refer to the "Display Audio System Owner's Manual" for instructions and more information.  
 \*2 Display Audio system  
 \*3 Premium Display Audio system

Steering wheel switches

Volume control

1

2

3

- 1 "V A < >"  
Use to search within a selected audio medium (radio, CD, iPod, etc.), or to perform certain telephone operations.
- 2 "MODE"  
Push to turn audio ON and select an audio mode. Push and hold to turn the audio system OFF.
- 3 Back button  
Returns to the previous screen.


Clock

Type A

Type B

H-Hour set  
M-Minute set

iPod®/USB/AUX port

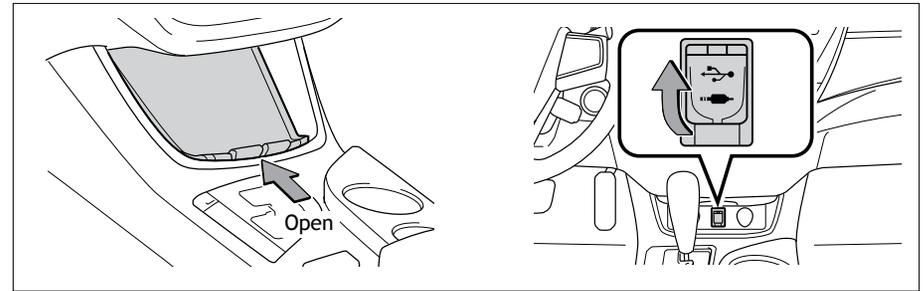


iPod®/USB port

By connecting a USB-compatible portable audio device or USB memory to the USB port, you can listen to music from the portable audio device or USB memory through the vehicle's speaker system.

AUX port

By inserting a mini plug into the AUX port, you can listen to music from a portable audio device through the vehicle's speaker system while in AUX mode.

BSM (Blind Spot Monitor)(if equipped)

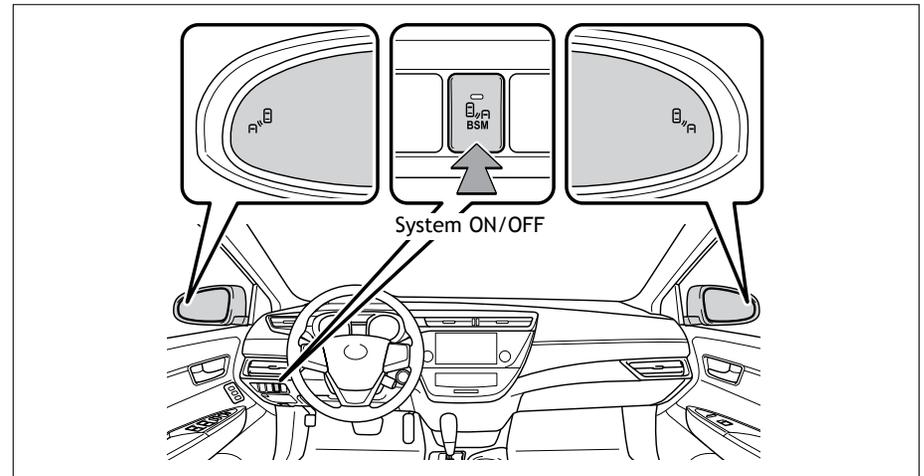


The Blind Spot Monitor is a system that has two functions:

- The Blind Spot Monitor function (assists the driver in decision making when changing lanes)
- The Rear Cross Traffic Alert function (assists the driver when backing up)

The system uses radar sensors to detect vehicles that are traveling in the area that is not reflected in the outside rearview mirror (the blind spot), and advises the driver of the vehicles' existence via the outside rearview mirror indicator.


Refer to the *Owner's Manual* for more details on this system before attempting to use it.

### Hill-start Assist Control (HAC)

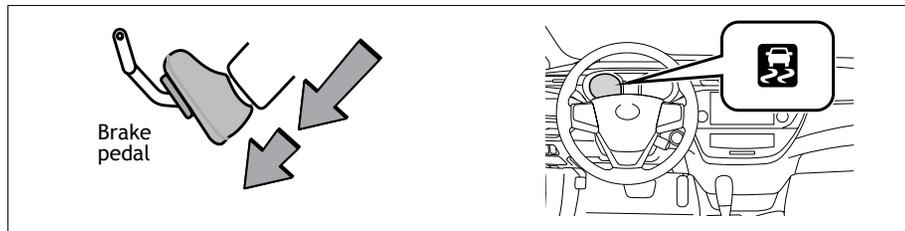



HAC helps prevent rolling backwards on an incline. To engage, push further down on brake pedal while at a complete stop until a beep sounds and slip indicator illuminates. HAC holds for approximately two seconds after releasing brake pedal. Refer to the *Owner's Manual* for more details.

### Wireless charger (if equipped)

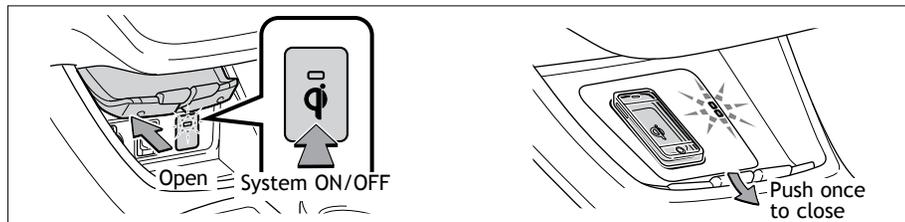


A mobile device with the "Ⓚ" logo can be charged wirelessly. Charging can only be performed with the "POWER" switch in ACCESSORY or ON mode. Place a mobile device on the tray. One LED indicator is illuminated while charging and two LED indicators are illuminated when the charging is complete.


### Cup holders

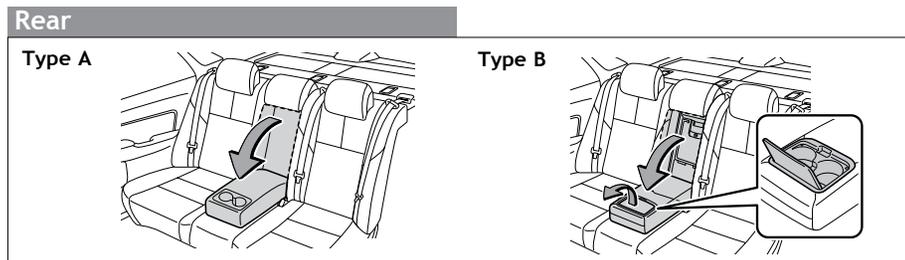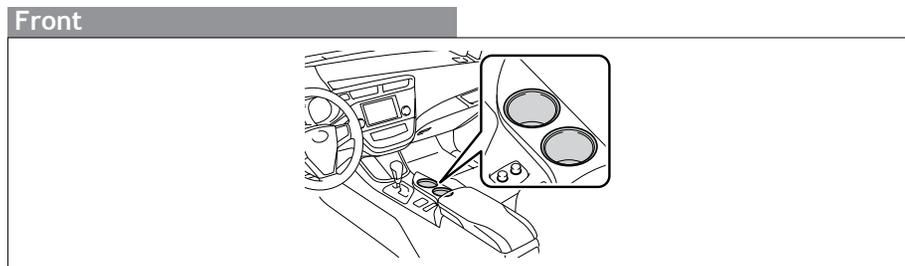

### Door locks

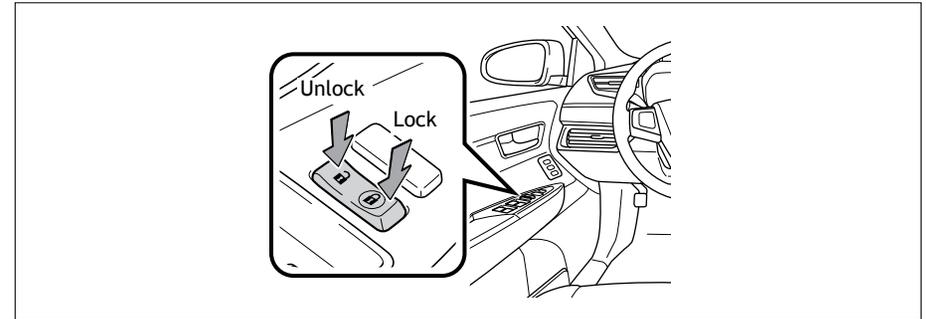


### Doors-Child safety locks

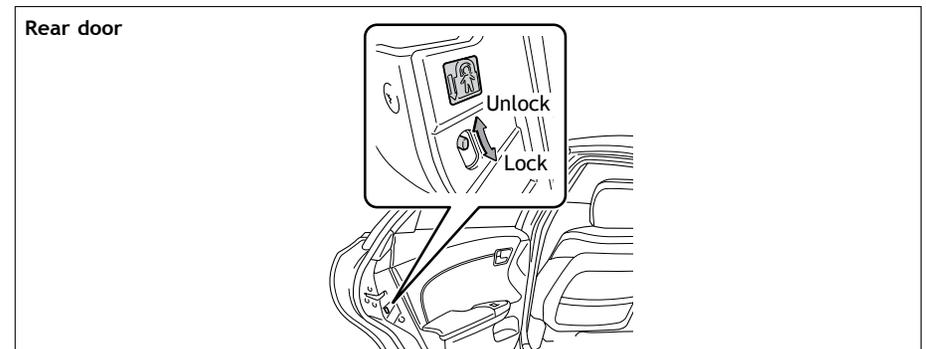

Moving the lever to the lock position will allow the door to be opened only from the outside.


### Seat belts

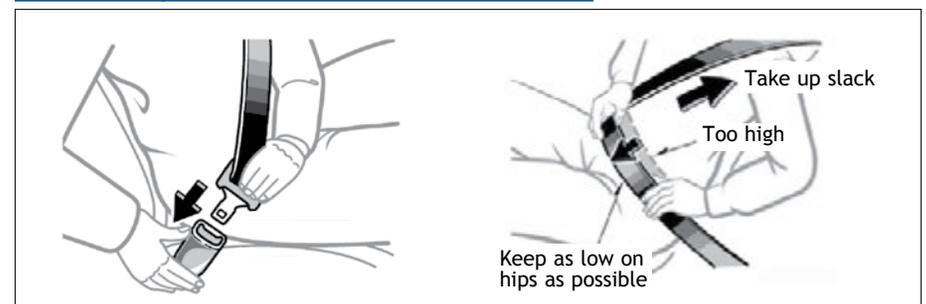


If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.

### Seat belts-Shoulder belt anchor

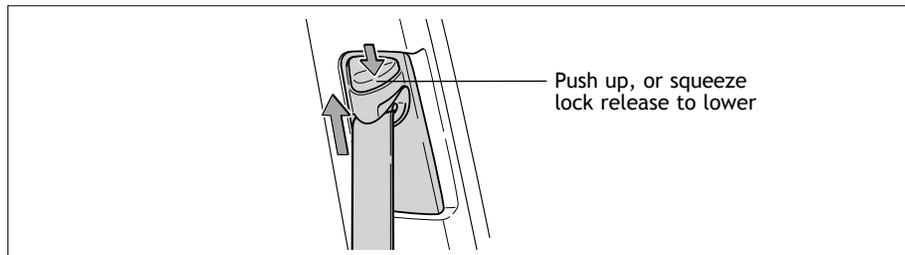

### Tire Pressure Monitoring (warning) System

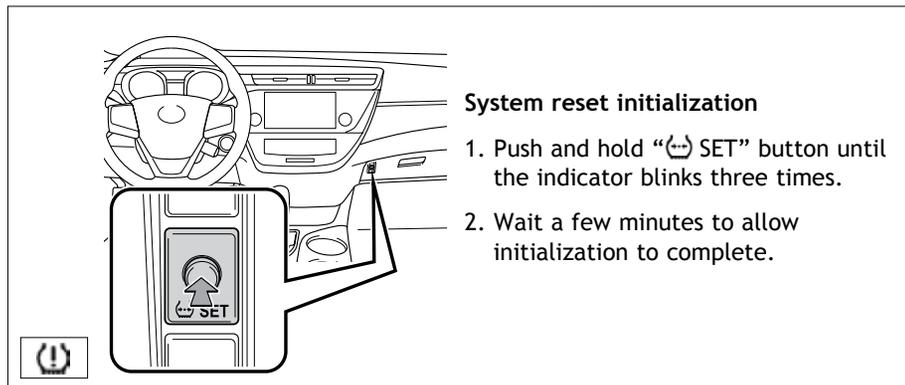

#### System reset initialization

1. Push and hold “SET” button until the indicator blinks three times.
2. Wait a few minutes to allow initialization to complete.

After adjusting tire pressures, or after tires have been rotated or replaced, turn the “POWER” switch to ON mode and press and hold the “SET” button until indicator blinks three times. Let the vehicle sit for a few minutes to allow initialization to complete.


Refer to the load label on the door jamb or the *Owner's Manual* for tire inflation specifications.

If the tire pressure indicator flashes for more than 60 seconds and then remains on, take the vehicle to your local Toyota dealer.

**NOTE:** The warning light may come on due to temperature changes or changes in tire pressure from natural air leakage. If the system has not been initialized recently, setting the tire pressures to factory specifications should turn off the light.


### Spare tire & tools

#### Tool location

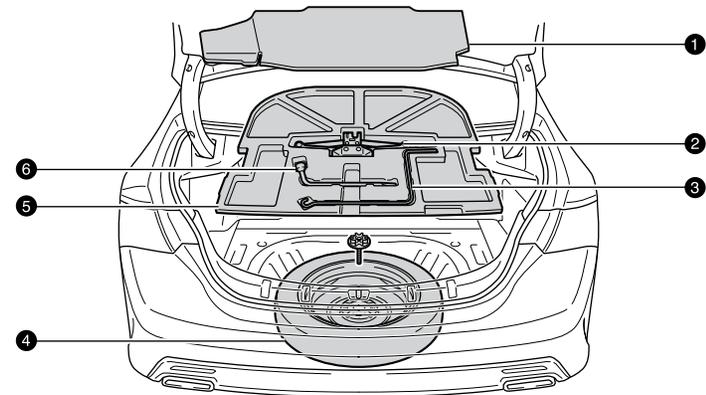


- 1 Luggage floor cover
- 2 Jack
- 3 Jack handle
- 4 Spare tire
- 5 Tool tray
- 6 Wheel nut wrench

#### Removing the spare tire

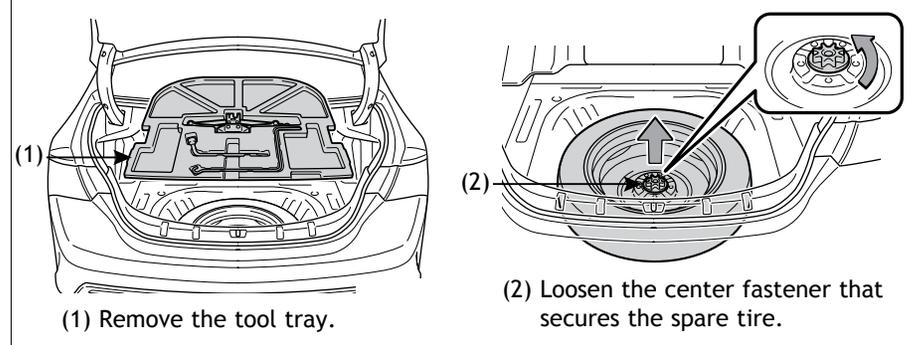

Refer to the *Owner's Manual* for tire changing and jack positioning procedures.

### Trunk-Internal release

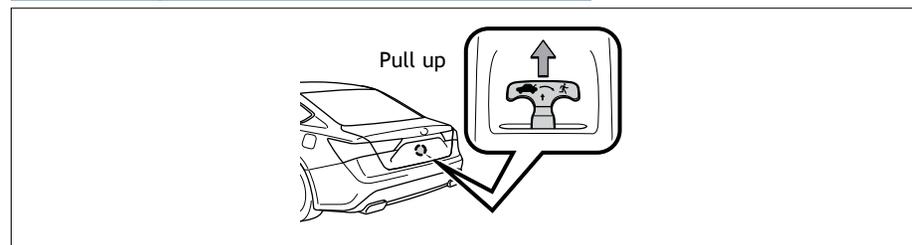

## Star Safety System™

All new Toyota vehicles come standard with the Star Safety System™, which combines Enhanced Vehicle Stability Control (VSC), Traction Control (TRAC), Anti-lock Braking System (ABS), Electronic Brake-force Distribution (EBD), Brake Assist (BA) and Smart Stop Technology (SST).

### Enhanced Vehicle Stability Control (VSC)

Enhanced Vehicle Stability Control provides cooperative control of the ABS, TRAC, VSC and EPS.

Enhanced VSC helps to maintain directional stability when loss of traction occurs during a turn.

### Traction Control (TRAC)

VSC helps prevent loss of traction during cornering by reducing Hybrid System output, and Traction Control helps maintain traction on loose gravel and wet, icy, or uneven surfaces by applying brake force to the spinning wheel(s).

Toyota's TRAC sensors are activated when one of the drive wheels starts to slip. TRAC limits Hybrid System output and applies the brakes to the spinning wheel. This transfers power to the wheels that still have traction to help keep you on track.

### Anti-Lock Brake System (ABS)

ABS helps prevent brakes from locking up by “pulsing” brake pressure to each wheel. This limits brake lockup and helps provide directional control for the current road conditions.

Toyota's ABS sensors detect which wheels are locking up and limits wheel lockup by “pulsing” each wheel's brakes independently. Pulsing releases brake pressure repeatedly for fractions of a second. This helps the tires attain the traction that current road conditions will allow, helping you to stay in directional control.

### Electronic Brake Force Distribution (EBD)

Toyota's ABS technology has Electronic Brake-force Distribution (EBD) to help maintain control and balance when braking. Abrupt stops can cause a vehicle to tilt forward, reducing the braking power of the rear wheels. EBD responds to sudden stops by redistributing brake force to enhance the braking effectiveness of all four wheels.

### Brake Assist (BA)

Brake Assist is designed to detect sudden or “panic” braking, and then add braking pressure to help decrease the vehicle's stopping distance. When there is only a split second to react, Brake Assist can add additional brake pressure more quickly than just the driver alone can.

### Smart Stop Technology (SST)


Smart Stop Technology automatically reduces driving torque when the accelerator and brake pedals are pressed simultaneously under certain conditions.

## Floor mat installation

There are two types of Toyota floor mats: carpeted and all-weather. Each vehicle has model-specific floor mats. Installation is easy.

To keep your floor mat properly positioned, follow these steps:

- Only use floor mats designed for your specific model.
- Use only one floor mat at a time, using the retaining hooks to keep the mat in place.
- Install floor mats right side up.

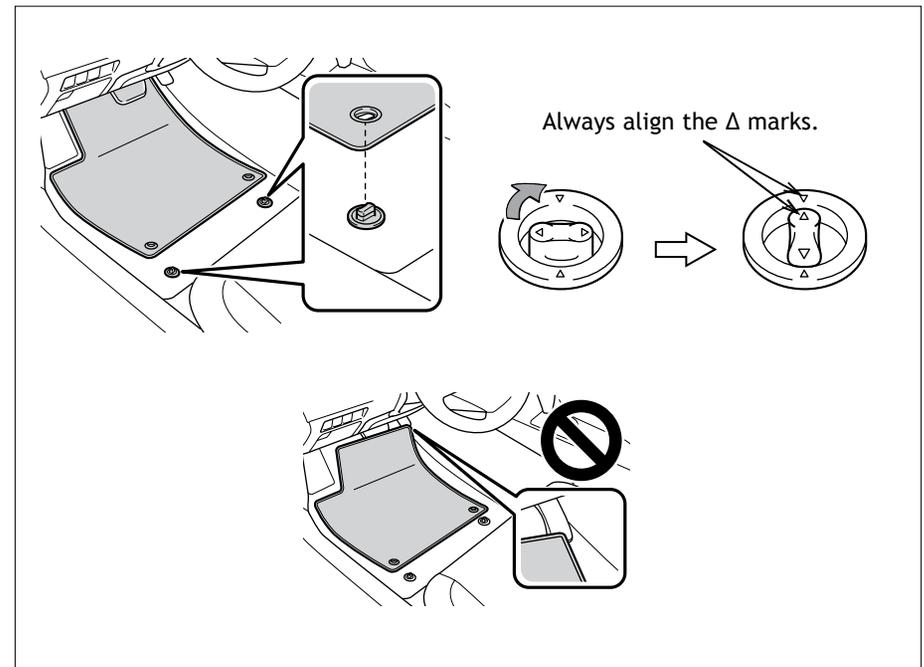


## **BLUETOOTH® DEVICE PAIRING SECTION**

To begin the Bluetooth® Pairing process, press the HOME button on the faceplate of your Toyota Vehicle Entune™ Multimedia Head Unit.

### Bluetooth® Pairing for Android® phone and Entune™ touch screen system

Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all Android mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.<sup>1</sup>

#### Initiate Bluetooth® on your Android®

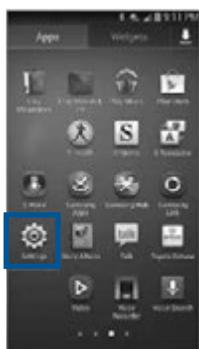


**STEP 1**  
From your APPS SCREEN, select SETTINGS



**STEP 2**  
Select CONNECTIONS and select BLUETOOTH



**STEP 3**  
Ensure BLUETOOTH is ON

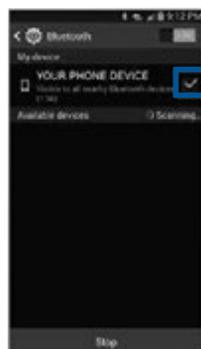

**STEP 4**  
Select YOUR PHONE DEVICE to make it discoverable.

*Phone will seek out Bluetooth devices while remaining discoverable.*



**STEP 5**  
While your Android device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

#### Initiate Bluetooth® on your Entune™ Multimedia Head Unit


Once you have Bluetooth enabled on your phone and ready to pair, you will need to initiate Bluetooth on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.




**STEP 6**  
On your Toyota Vehicle Entune Multimedia Head Unit, Select SETUP BUTTON on the Home Screen.



**STEP 7**  
Select BLUETOOTH

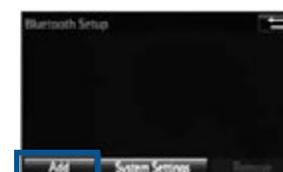

**STEP 8**  
Select ADD, to add your phone device

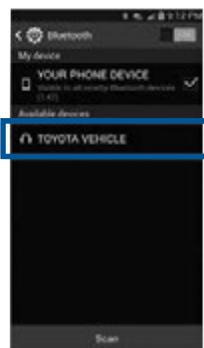


**STEP 9**  
Back on your smartphone, you can now select your TOYOTA VEHICLE in Bluetooth Settings.

*You may need to enter the provided Bluetooth PIN on your phone.*




**STEP 10**  
Your smartphone is now paired with Entune.

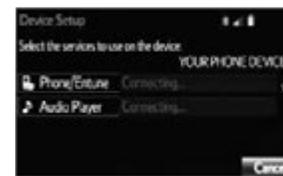

**STEP 11**  
Once paired, Entune will attempt to connect audio and contacts on your phone.

<sup>1</sup> Some Android devices may have slightly different SETTINGS screen layout depending on manufacturer of device and Android OS version.

Initiate Bluetooth® on your Entune™ Multimedia Head Unit (continued)

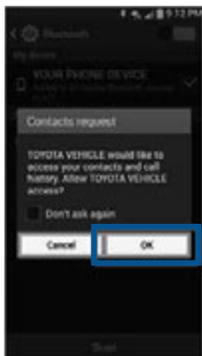

**STEP 12**

Using your smartphone, you will need to allow Entune access to your messaging and contacts

*It is recommended to check the "Don't ask again" box, so as not to have to press OK every time the phone makes a Bluetooth connection with your Toyota*



**STEP 13**

A confirmation will appear once your phone has been paired and connected.

**Additional Resources**

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:  
[www.toyota.com/connect](http://www.toyota.com/connect)

Your Toyota Owner's Manual  
Located in the vehicle glovebox


Toyota Customer Experience Center  
(800) 331-4331

- Disclosures
- This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.
1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
  2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
  3. Android is a trademark of Google, Inc. All rights reserved. Google is not a participant in or sponsor of this promotion.
  4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.
  5. Bluetooth Pairing Guide for select 2015 models.

Bluetooth® Pairing for iPhone® and Entune™ touch screen system


Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all iPhone mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to "talk" to each other and form a connection. Bluetooth Pairing Guide for select 2015 models.

Initiate Bluetooth® on your iPhone®

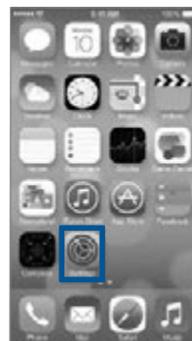

**STEP 1**

From the HOME SCREEN, select SETTINGS

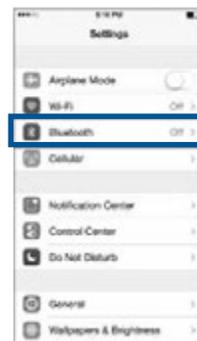

**STEP 2**

Select BLUETOOTH



**STEP 3**

Ensure BLUETOOTH is ON



**STEP 4**

Your iPhone will seek out Bluetooth devices while remaining discoverable



**STEP 5**

While your iPhone device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

CONTINUE ON THE NEXT PAGE...

## Initiate Bluetooth® on your Entune™ Multimedia Head Unit


Once you have Bluetooth enabled on your phone and ready to pair, you will need to initiate Bluetooth on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.



**STEP 6**  
Select **SETUP** BUTTON on the Home Screen.



**STEP 7**  
Select **BLUETOOTH**

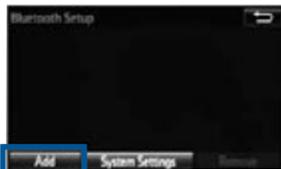

**STEP 8**  
Select **ADD**, to add your phone device




**STEP 9**  
Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.


*You may need to enter the provided Bluetooth PIN on your phone.*




**STEP 10**  
Your smartphone is now paired with Entune.

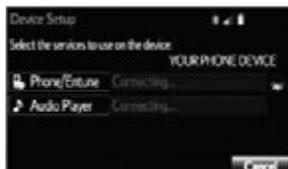

**STEP 11**  
Once paired, Entune will attempt to connect audio and contacts on your phone.

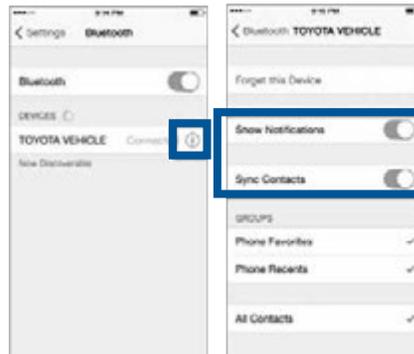

**STEP 12**  
Using your smartphone, you may need to allow Entune access to your messaging and contacts  
*Only current iPhone text messages can be viewed on the head unit. iPhone does not allow text message reply.*

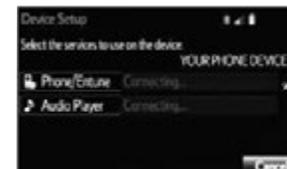

**STEP 13**  
A confirmation will appear once your phone has been paired and connected.

### Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:  
[www.toyota.com/connect](http://www.toyota.com/connect)

Your Toyota Owner's Manual  
*Located in the vehicle glovebox*

Toyota Customer Experience Center  
(800) 331-4331

### Disclosures


This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.

1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
3. Android is a trademark of Google, Inc. All rights reserved. Google is not a participant in or sponsor of this promotion.
4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.
5. Bluetooth Pairing Guide for select 2015 models.

## Bluetooth® Pairing for Windows Phone® and Entune™ touch screen system

Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all Windows Phone mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection. Bluetooth Pairing Guide for select 2015 models.

### Initiate Bluetooth® on your Windows Phone®

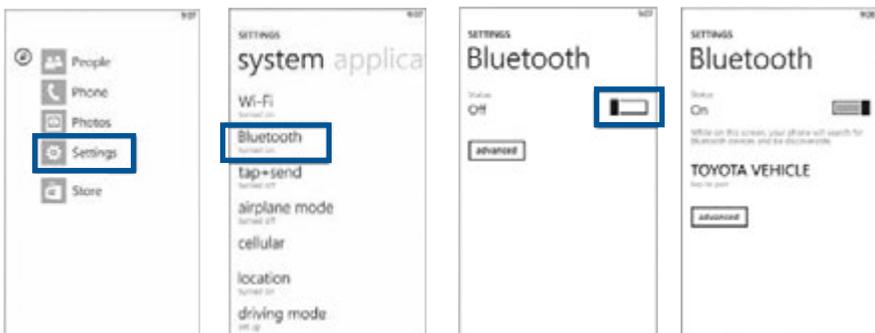


- STEP 1**  
From your APP LIST, select **SETTINGS**
- STEP 2**  
Select **BLUETOOTH**
- STEP 3**  
Ensure **BLUETOOTH** is **ON**
- STEP 4**  
Phone will seek out Bluetooth devices while remaining discoverable



- STEP 5**  
While your iPhone device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.  
*CONTINUE ON THE NEXT PAGE...*

### Initiate Bluetooth® on your Entune™ Multimedia Head Unit

Once you have Bluetooth® enabled on your phone and ready to pair, you will need to initiate Bluetooth® on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.

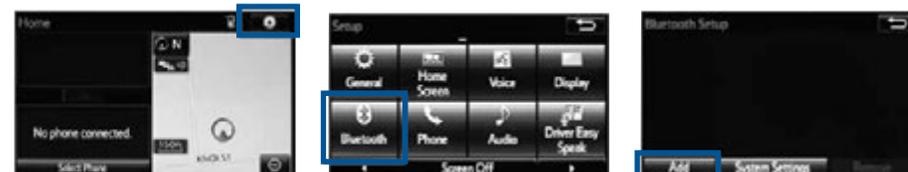

- STEP 6**  
On your Toyota Vehicle Entune Multimedia Head Unit, Select **SETUP BUTTON** on the Home Screen.
- STEP 7**  
Select **BLUETOOTH**
- STEP 8**  
Select **ADD**, to add your phone device




- STEP 9**  
Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.  
*You may need to enter the provided Bluetooth PIN on your phone.*
- STEP 10**  
Your smartphone is now paired with Entune.
- STEP 11**  
Once paired, Entune will attempt to connect audio and contacts on your phone.

Initiate Bluetooth® on your Entune™ Multimedia Head Unit (continued)



**STEP 12**

Using your smartphone, you may need to allow Entune access to your contacts

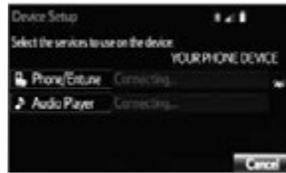

**STEP 13**

A confirmation will appear that your phone has been paired and connected.

**Additional Resources**

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:  
[www.toyota.com/connect](http://www.toyota.com/connect)

Your Toyota Owner's Manual  
*Located in the vehicle glovebox*

Toyota Customer Experience Center  
 (800) 331-4331

- Disclosures
- This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.
1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
  2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
  3. Android is a trademark of Google, Inc. All rights reserved. Google is not a participant in or sponsor of this promotion.
  4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.
  5. Bluetooth Pairing Guide for select 2015 models.



