

**2015
Highlander Hybrid
Quick Reference Guide**

2015 Highlander Hybrid

This *Quick Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Quick Reference Guide* is not intended as a substitute for the *Owner's Manual* located in your vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your Highlander Hybrid.

A word about safe vehicle operations

This *Quick Reference Guide* is not a full description of Highlander Hybrid operations. Every Highlander Hybrid owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Quick Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

INDEX

OVERVIEW

Engine maintenance	9
Fuel tank door release and cap	8
Hood release	8
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Keyless entry¹	6
Light control-Instrument panel	9
Smart Key system^{1,2}	7

FEATURES/OPERATIONS

Air Conditioning/Heating	24-25
Audio	23
Auto lock/unlock¹	13
Bluetooth® Device Pairing Section	35-44
Clock	26
Cruise control	26-27
Door locks	12
Door-Power back (rear liftgate)	15-16
Driver Easy Speak	24
EV Drive Mode	11
Garage door opener (HomeLink®) ³	27
Hybrid Synergy Drive System	10
Lights¹ & turn signals	18-19
Moonroof	14
Multi-Information Display²	20
Pairing a Bluetooth Device	22
Panoramic Moonroof	14
Parking Brake	13
Power outlets-12V DC	19
Power outlet-120V AC	19
Rear seat entertainment system	22
Seat adjustments-Front	16
Seat adjustments-Rear	17
Seats-Head restraints	17
Seat heaters / Seat ventilators	25-26
Seats-Returning third row seats	17
Seats-Stowing third row seats	17
Steering lock release	13
Steering wheel controls and Bluetooth®	21
Tilt and telescopic steering wheel	14
Transmission	12
Windows-Power	20
Windshield wipers & washers	18

SAFETY AND EMERGENCY FEATURES

Doors-Child safety locks	29
Floor mat installation	32
Seat belts	28
Seat belts-Shoulder belt anchor	29
Spare tire & tools	30
Star Safety System™	31-32
Third row center seat belt	29
Tire Pressure Monitoring (warning) System	28

¹ Visit your Toyota dealer for information on customizing this feature.






² Programmable by customer. Refer to the *Owner's Manual* for instructions and more information.

³ HomeLink® is a registered trademark of Gentex Corporation.

OVERVIEW

Instrument panel

Steering wheel controls

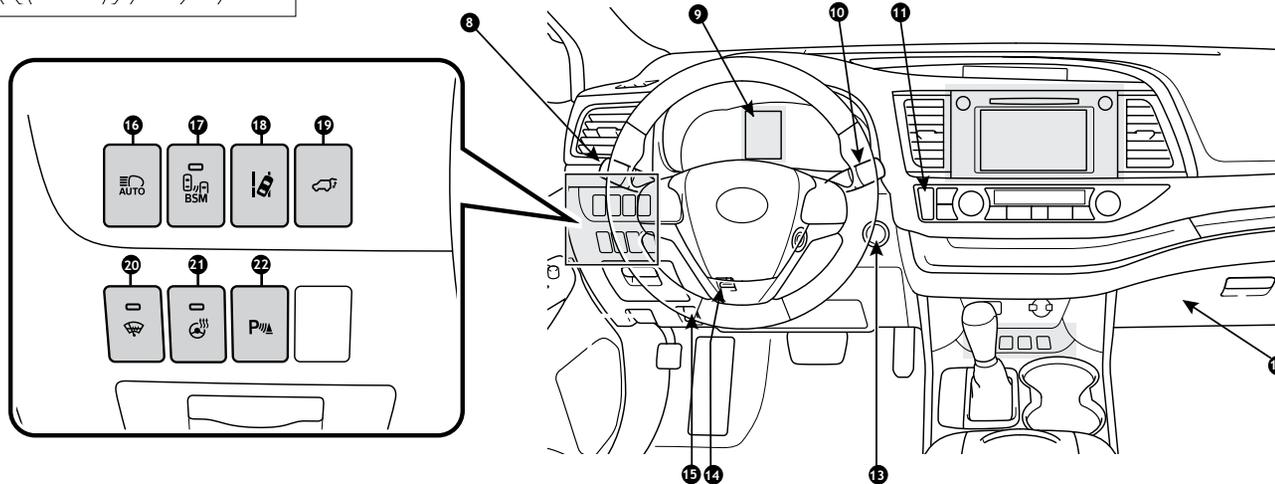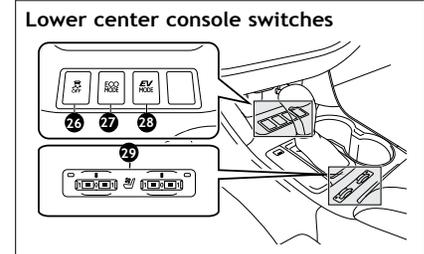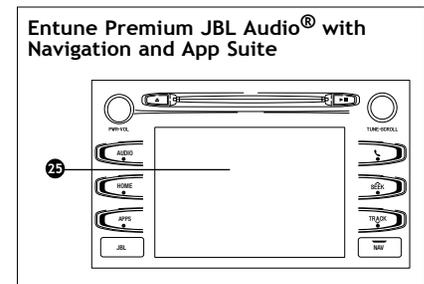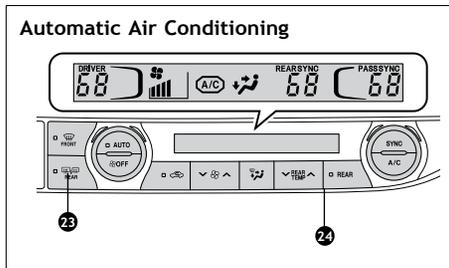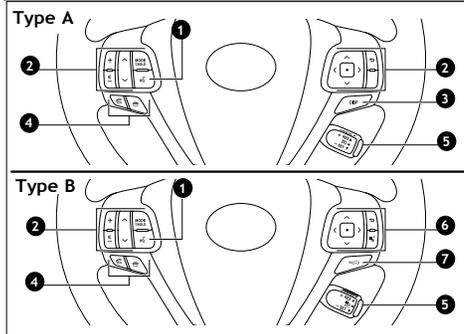


- 1 Voice command button¹
- 2 Audio remote control switches¹
- 3 Multi-Information Display button
- 4 Telephone controls¹
- 5 Cruise control switch
- 6 Meter control switches
- 7 Vehicle-to-vehicle distance button²
- 8 Headlight, turn signal and front fog light controls
- 9 Multi-Information Display
- 10 Wiper and washer controls
- 11 Emergency flasher button
- 12 Power back door main switch (this is inside the glove box)
- 13 "POWER" switch
- 14 Tilt and telescopic steering lock release
- 15 Fuel filler door opener
- 16 Automatic High Beam switch²
- 17 BSM (Blind Spot Monitor) switch

- 18 LDA (Lane Departure Alert) switch²
- 19 Power back door button
- 20 Windshield wiper de-icer switch
- 21 Heated steering wheel switch²
- 22 Intuitive parking assist switch (rear parking sonar)
- 23 Outside rearview mirror/Rear window defogger button
- 24 Air Conditioning controls
- 25 Audio System¹
- 26 VSC OFF switch
- 27 "ECO MODE" switch
- 28 EV drive mode switch
- 29 Seat heater/ventilator switches²

¹ Refer to the "NAVIGATION AND MULTIMEDIA SYSTEM OWNER'S MANUAL"

² If equipped

Instrument cluster

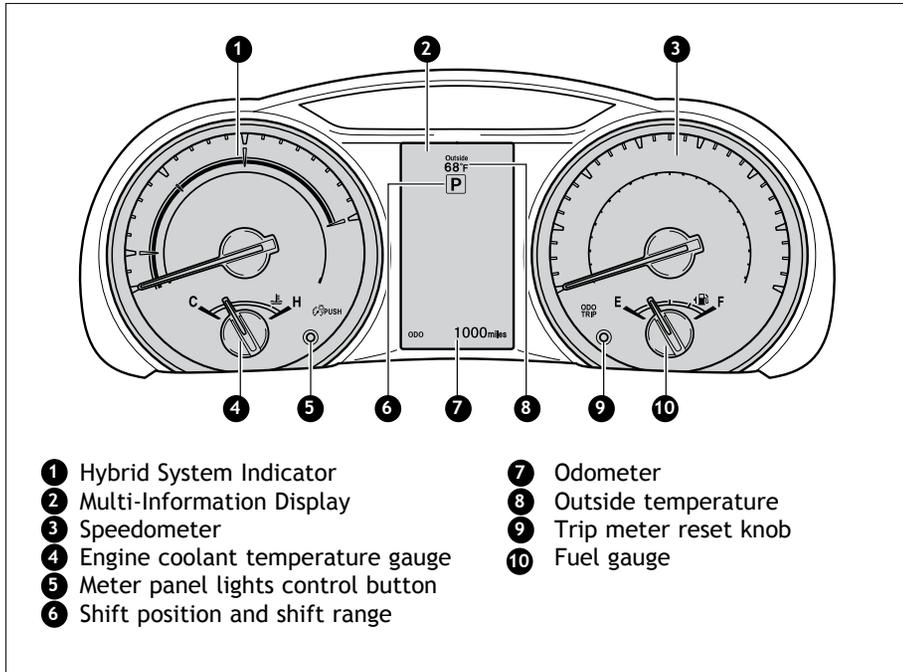

Indicator symbols

For details, refer to “Warning lights and indicators,” Section 2, 2014 Owner’s Manual.

- BRAKE Brake system warning (red light)¹
- Brake system warning (yellow light)¹
- Charging system warning¹
- Low engine oil pressure warning¹
- Malfunction/Check Engine indicator¹
- Airbag SRS warning¹
- Anti-lock Brake System warning¹
- Electric power steering system warning¹
- Pre-collision warning system indicator¹
- Slip indicator¹

- Open door warning
- Low fuel level warning
- Driver seat belt reminder (alarm will sound if speed is over 12 mph)
- Master warning¹
- Vehicle proximity notification system warning¹
- Tire Pressure Warning¹
- Turn signal indicator
- Headlight low/high beam indicator
- Automatic high beam indicator
- Front fog light indicator
- SET** Cruise control/Cruise control “SET” indicator²
- LDA (Lane Departure Alert) indicator
- Intuitive parking assist indicator
- “ECO MODE” indicator
- Vehicle Stability Control OFF indicator¹
- Pre-collision system warning¹
- BSM (Blind Spot Monitor) outside rear view indicator
- Security indicator
- READY indicator
- EV indicator
- EV drive mode indicator
- Air Bag ON/OFF indicator¹

¹ If indicator does not turn off within a few seconds of starting hybrid system, there may be a malfunction. Have vehicle inspected by your Toyota dealer.

² If this light flashes, refer to “Cruise control,” Section 4-5, 2015 Owner’s Manual.


Keyless entry

Locking operation



Push


Unlocking operation

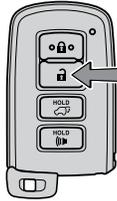

Push ONCE: Driver door
TWICE: All doors

NOTE: If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.

Power liftgate operation

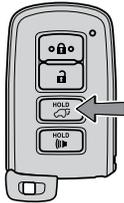

Push and hold

NOTE: Power back door will not open if glass hatch is open.


Panic button



Push and hold

Smart Key system

Start function

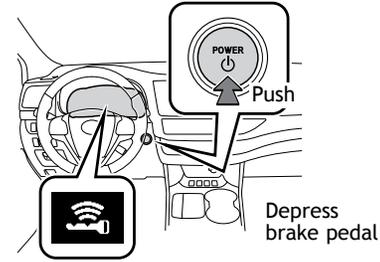

will be displayed on the multi-information display. If it is not displayed, the Hybrid System cannot be started.

NOTE: Check that the parking brake is set. Shift lever is set to P.

Power (without starting Hybrid System)

Without depressing the brake pedal, pressing the POWER switch will change the operation mode in succession from:

ACCESSORY Accessories such as the radio will operate.




ON Power ON; the hybrid system not running.




OFF All systems OFF.

Locking operation

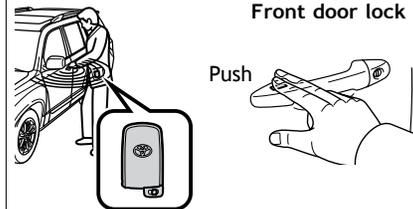


Carry remote to lock

Unlocking operation

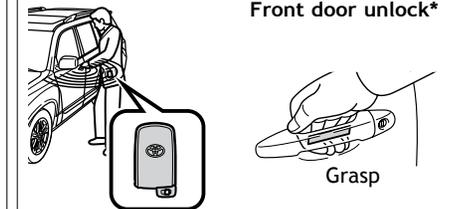


Carry remote to unlock

Glass hatch unlock

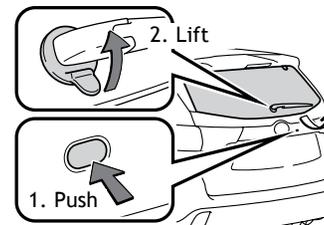

Carry remote to unlock

Back door lock/unlock


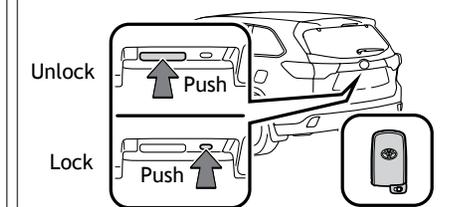


Carry remote to lock/unlock


* Driver door unlocking function can be programmed to unlock driver door only, or all doors. Grasping passenger door handle will unlock all doors.

NOTE: Doors may also be locked/unlocked using remote.

Fuel tank door release and cap

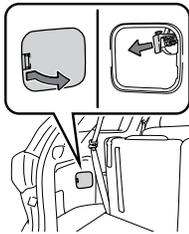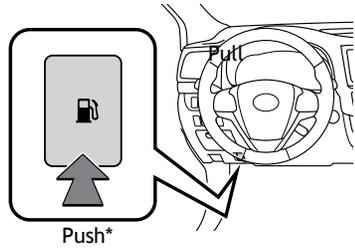



When the fuel door cannot be opened by pressing the inside switch. Remove the cover inside the luggage compartment and pull the lever.

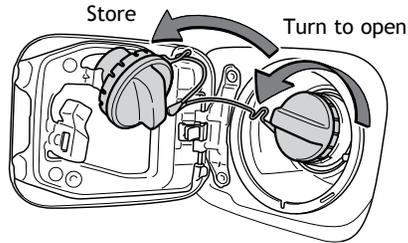

* It may take up to 10 seconds after pushing the button for the door to open if the internal tank pressure is high.


NOTE: Tighten until one click is heard. If the cap is not tightened enough, Check Engine “CHECK” indicator may illuminate.

Hood release

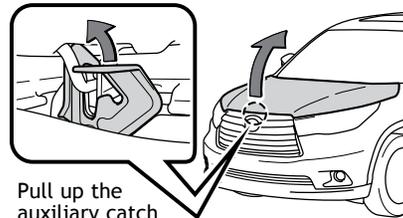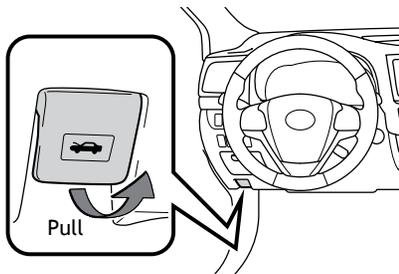


Pull up the auxiliary catch lever and raise hood

Engage support rod

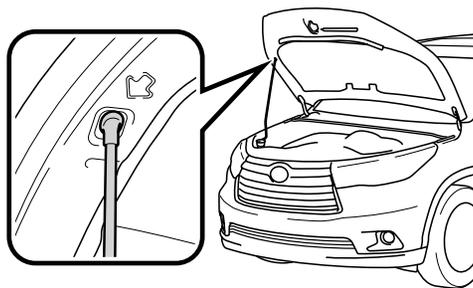

Engine maintenance

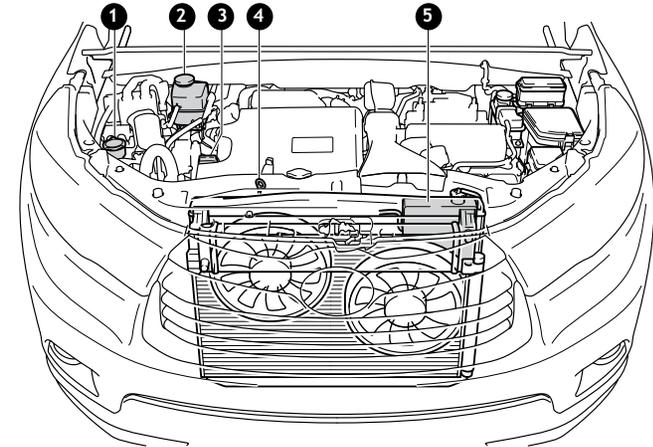


- 1 Windshield washer fluid tank
- 2 Brake fluid reservoir
- 3 Engine oil filler cap
- 4 Engine oil level dipstick
- 5 Engine coolant reservoir

NOTE: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the “Warranty & Maintenance Guide.”

Light control-Instrument panel

The brightness level of the meters when the surroundings are bright (day mode) and dark (night mode) can be adjusted individually. However, when in day mode, adjusting the brightness level will also change the brightness level of night mode.

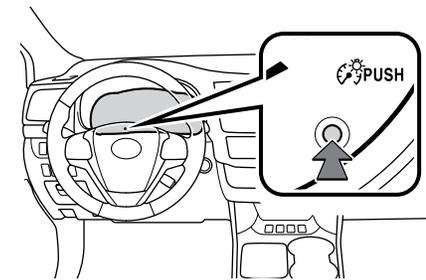

FEATURES/OPERATIONS

Hybrid Synergy Drive System


The Hybrid Synergy Drive System utilizes a computer-controlled gasoline engine and electric motor to provide the most efficient combination of power for the vehicle. To conserve energy, when the brakes are applied the braking force generates electricity which is then sent to the traction battery. In addition, the engine shuts off when the vehicle is stopped. The benefits are better fuel economy, reduced vehicle emissions and improved performance.

NOTE: Fuel consumption and energy information of the Hybrid System is shown on the Multi-Information Display and/or multimedia system/navigation system screen.

Tips for improved fuel economy


- Ensure tire pressures are maintained at levels specified in the *Owner's Manual*.
- When possible, link trips to reduce engine cold starts.
- Avoid driving at speeds that are higher than necessary, especially on the highway.
- When possible, avoid sudden stops to maximize regenerative braking energy.
- Minimize use of the Air Conditioning.

Starting your vehicle

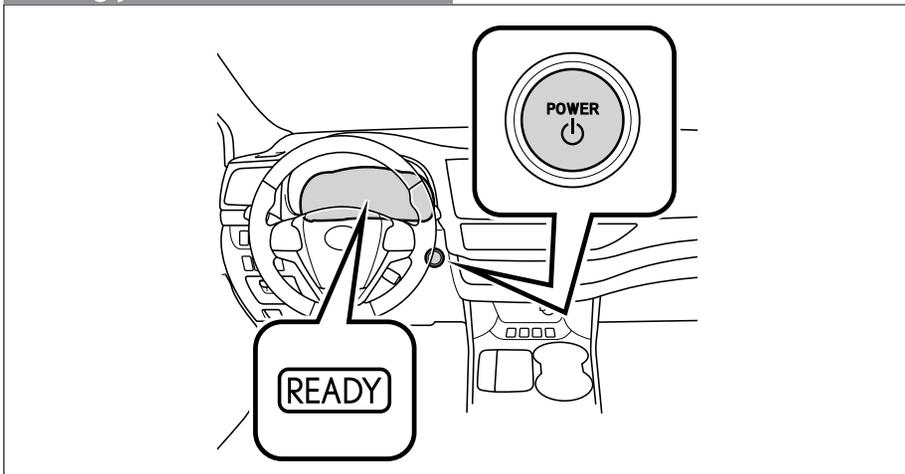

- (1) Put the selector lever in "P."
- (2) Depress the brake pedal, and "P" will be displayed on the Multi-Information Display (a message will also be displayed on color displays)
- (3) Press the "POWER" switch briefly and firmly.
- (4) The "READY" light will blink. After a few seconds, when the light remains steady and a beep sounds, you may begin driving.


Eco Drive Mode

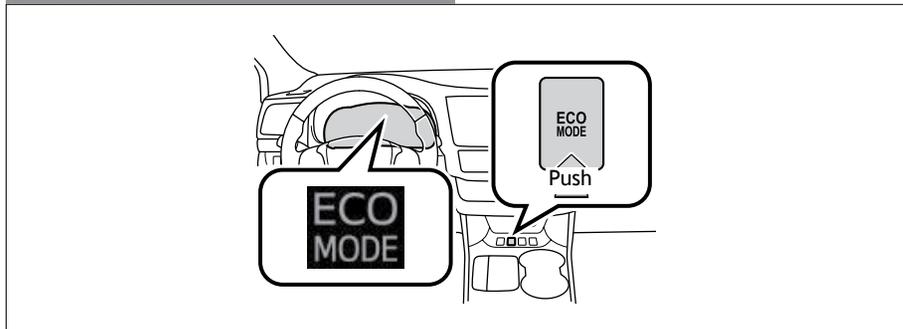

Eco Driving Mode helps achieve low fuel consumption during trips that involve frequent accelerating.

Refer to the *Owner's Manual* for more details.


EV Drive Mode

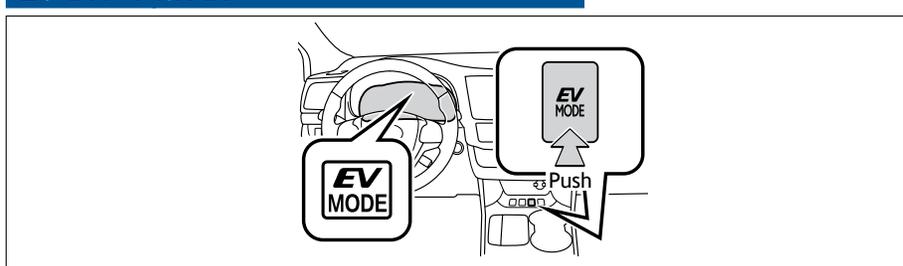

EV-Drive Mode allows the electric motor (traction motor), powered by the hybrid battery (traction battery), to be used to drive the vehicle.

Refer to the *Owner's Manual* for more details.

Transmission

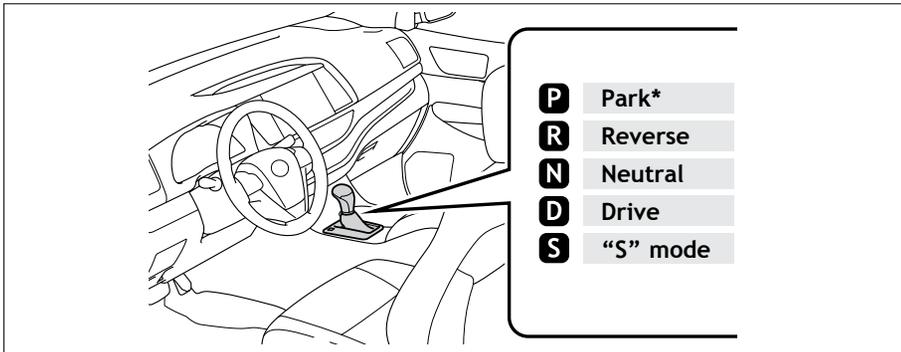

* The "POWER" switch must be in ON mode and the brake pedal depressed to shift from Park.


"S" (Sequential) mode

Shift the shift lever to "S" position from "D" position.

- + : Upshift (push and release)
- : Downshift (pull and release)

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.

Door locks

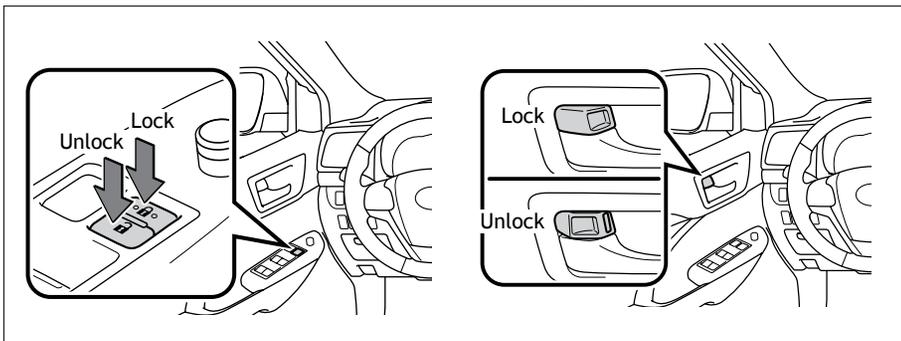


Auto lock/unlock

Automatic door locks can be programmed to operate in two different modes, or turned OFF.


- Doors lock when shifting from Park.
- Doors lock when the vehicle speed goes above approximately 12 mph.
- Doors unlock when shifting into Park.
- Doors unlock when the "POWER" switch is set to OFF and driver's door is opened.

Refer to the *Owner's Manual* for more details.


Steering lock release

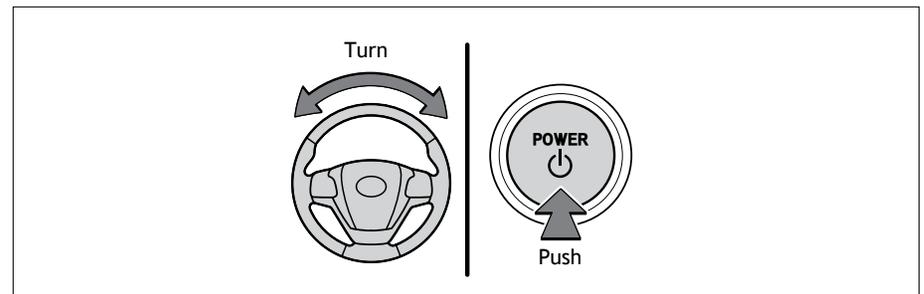

Parking brake

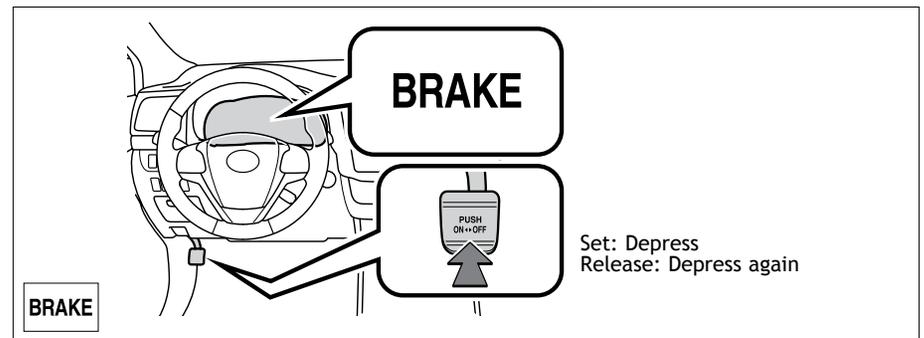

Tilt and telescopic steering wheel

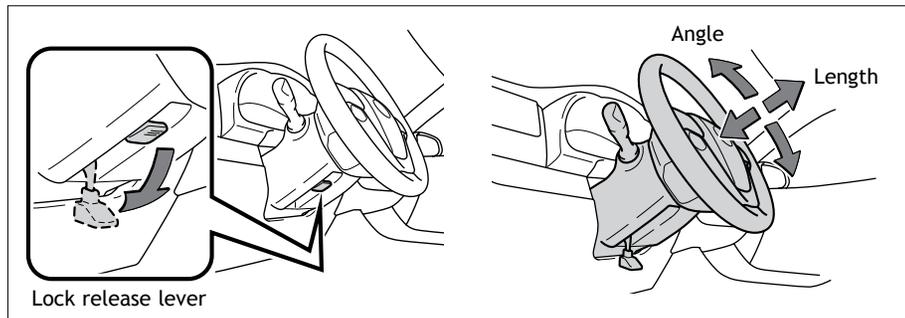


Hold wheel, push lever down, set angle and length, and return lever.

NOTE: Do not attempt to adjust while the vehicle is in motion.


Moonroof

Sliding operation

Push once to open partway; again to open completely.

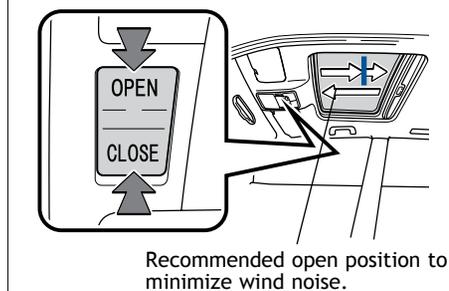


Tilting operation

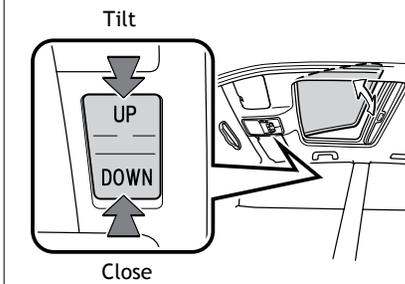


Panoramic Moonroof (if equipped)

Shade operation

To stop operation partway, quickly slide and release the switch again.

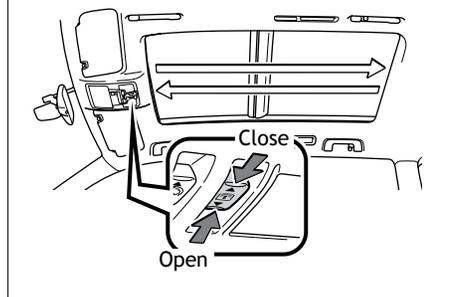


Tilting operation

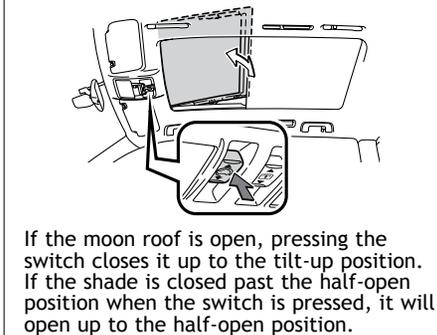


Sliding operation

The moon roof stops slightly before the fully open position to reduce wind noise and the shade opens fully. Slide the switch again to fully open or close the moon roof.

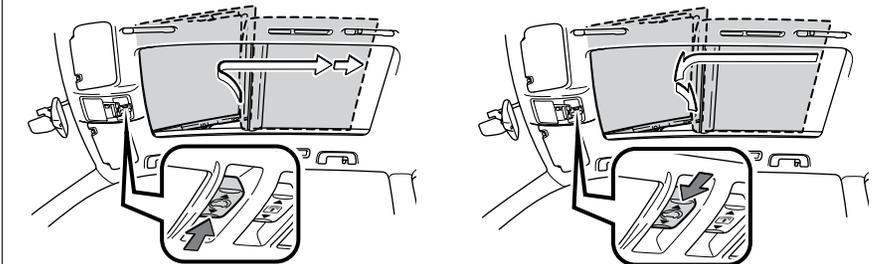


Door-Power back (liftgate)


Instrument panel

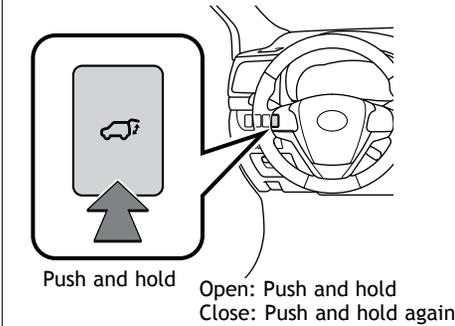

Back door (liftgate) (open and close)

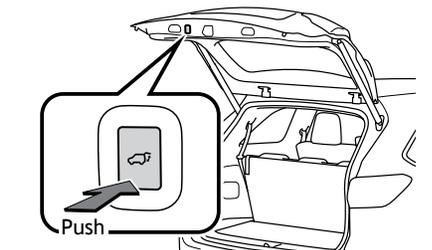

Back door (liftgate) (open only)

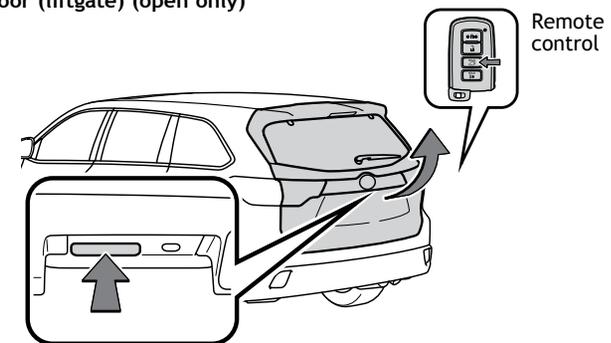

NOTE: If battery is disconnected, the power back door needs to be reinitialized. Refer to the *Owner's Manual* for more details.



Programmable power liftgate

1. When the liftgate reaches the desired height, push the rear liftgate close-button (on the door jam of the liftgate) once. Press and hold the button until it beeps 4 times.
2. To reset the height, with the liftgate open and not moving, press and hold the rear liftgate close-button until it beeps 4 times, and continue to hold until it beeps again -then let go. Push the same button to close the liftgate. When you next open the liftgate it will open to the maximum height.
3. The height can also be set through the "Setup" screen on the audio display. Setup > Vehicle Customization > Other Vehicle Settings > Power Back Door Opening Adjust. Through this screen, there are 5 height options to choose from.

NOTE: If the liftgate has stopped operating, check inside the glove box, on the left side, to ensure the PWR DOOR OFF button has not been pushed.

** For detailed instructions, see Owner's Manual.


Seat adjustments-Front

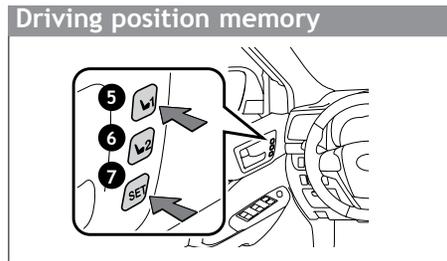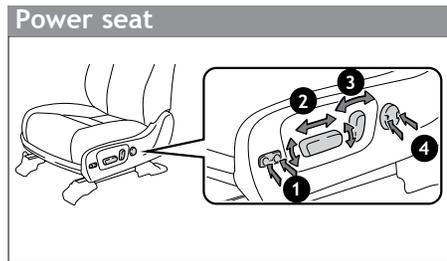

- 1 Seat cushion length adjustment*
- 2 Seat position adjustment switch
- 3 Seatback angle adjustment
- 4 Lumber support adjustment switch*
- 5 Memory position 1
- 6 Memory position 2
- 7 Set memory position switch

* These features are only available on the driver's seat.


Seat adjustments-Rear

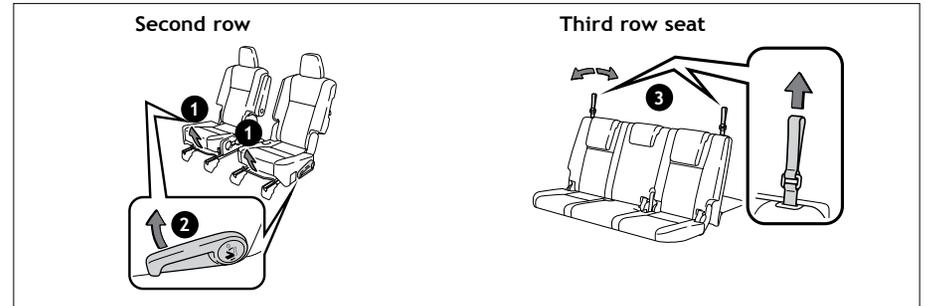


- 1 Seat position (forward/backward)
- 2 Seatback angle
- 3 Seatback angle adjustment straps

Refer to the *Owner's Manual* for more details.

Seats-Stowing third row seats

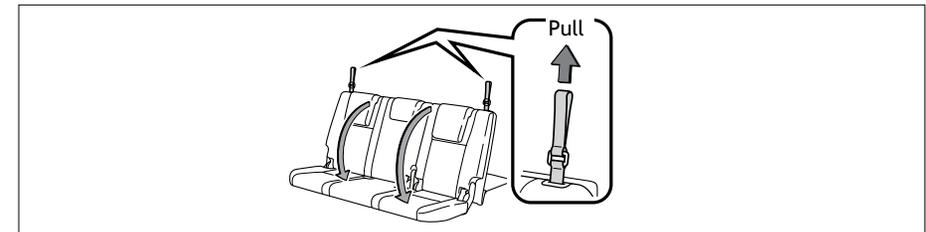


Seats-Returning third row seats

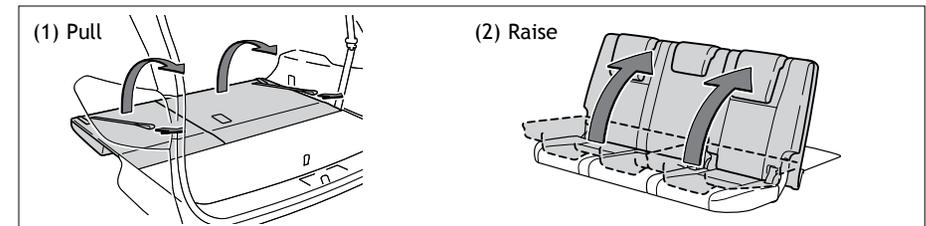

Refer to the *Owner's Manual* for more details.

Seats-Head restraints

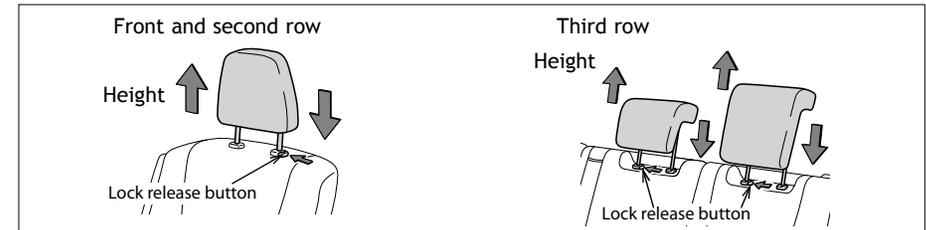

Windshield wipers & washers

Front	Rear
<p>Adjust frequency* Single wipe</p> <p>Interval wipe Slow Fast</p> <p>Pull to wash and wipe</p>	<p>Wipe Interval wipe</p> <p>Push to wash and wipe</p>

* Intermittent windshield wiper frequency adjustment
Rotate to increase/decrease wipe frequency.

Lights & turn signals

Front fog lights

Turn

Front fog lights come on only when the headlights are on low beam.

Headlights

With DRL OFF switch

Low beam High beam flasher
High beam

- Daytime Running Light system (DRL) (if equipped) Automatically turns on the headlights at a reduced intensity.
- Automatic light cut off system Lights automatically turn off after a delay of 30 seconds, or when lock switch on remote is pushed after all doors are locked.

Turn signals

Right turn
Lane change
Lane change
Left turn

Power outlets-12V DC

Instrument panel	Center console
<p>Rear of center console compartment</p>	


The "POWER" switch must be in the "ACCESSORY" or "ON" mode.

Power outlet-120V AC

Rear center console compartment

The "POWER" switch must be in the ON mode.

Multi-Information Display

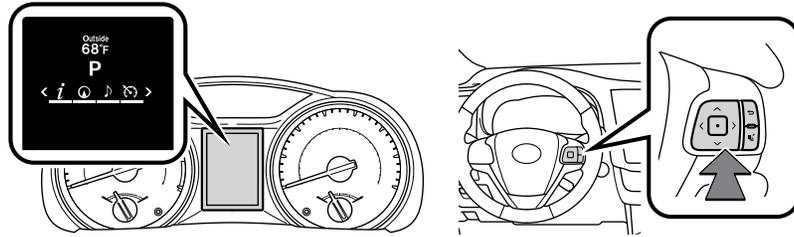


Push “meter control switches” to change information in the following:

- (1) Drive information
- (2) Navigation system linked display
- (3) Audio system linked display
- (4) Dynamic radar cruise control¹
- (5) LDA (Lane Departure Alert) status¹
- (6) Warning messages
- (7) Settings display


¹ If equipped

Windows-Power

Driver side

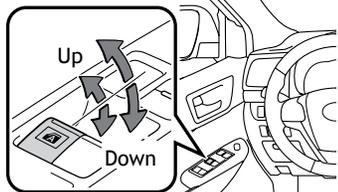

Window lock switch

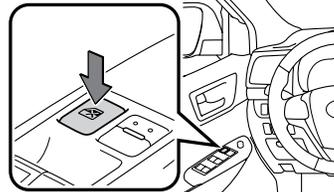


Automatic operation front row or all-position (if equipped) Push the switch completely down or pull it completely up and release to fully open or close. To stop the window partway, operate the switch in the opposite direction.

Window lock switch Deactivates all passenger windows. Driver’s window remains operable.

Steering wheel switches and Telephone controls (Bluetooth®)*

Steering wheel telephone controls

Microphone

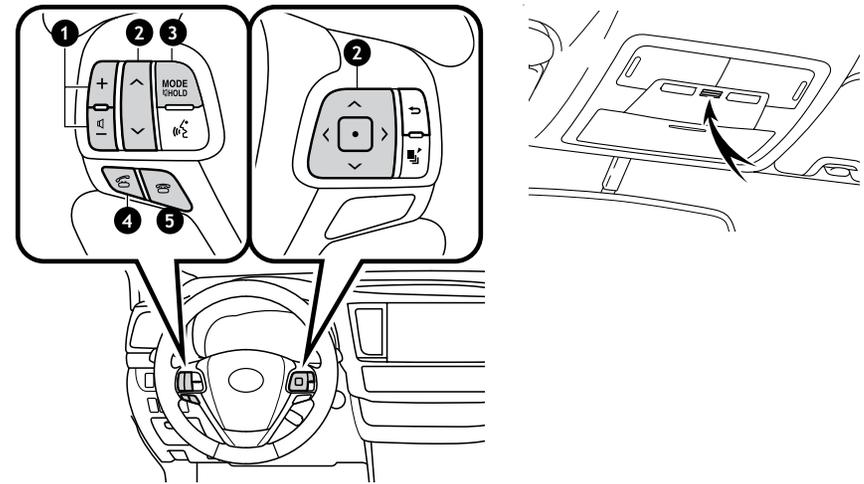

- 1 Volume control
- 2 “V Λ < >” switch
- 3 Use to search within the selected audio medium (radio, CD, iPod®, etc.).
- 4 Start call
- 5 End call

Bluetooth® technology allows dialing or receipt of calls without taking hands from the steering wheel or using a cable to connect the compatible telephone and the system. Refer to “Bluetooth® audio/phone,” in the *Owner’s Manual*, for more information about phone connections and compatibility.

* Position of buttons may vary on some vehicles, for more details please refer to the *Owner’s Manual*


Pairing a Bluetooth Device

1. Press the “APPS” button followed by the “Setup” button on the display screen.
2. Touch “Bluetooth” on the display screen
3. Touch “Add” on the display screen
4. Go to your phone and access Bluetooth settings
5. On your phone, touch the device to be paired.
6. Confirm the PIN. Touch “OK” or “Pair”

Once you have connected the Bluetooth device, it is automatically connected whenever the “POWER” switch is in the ACCESSORY or ON mode.

** For detailed pairing instructions, see your audio system owner’s manual.

Rear seat entertainment system (if equipped)

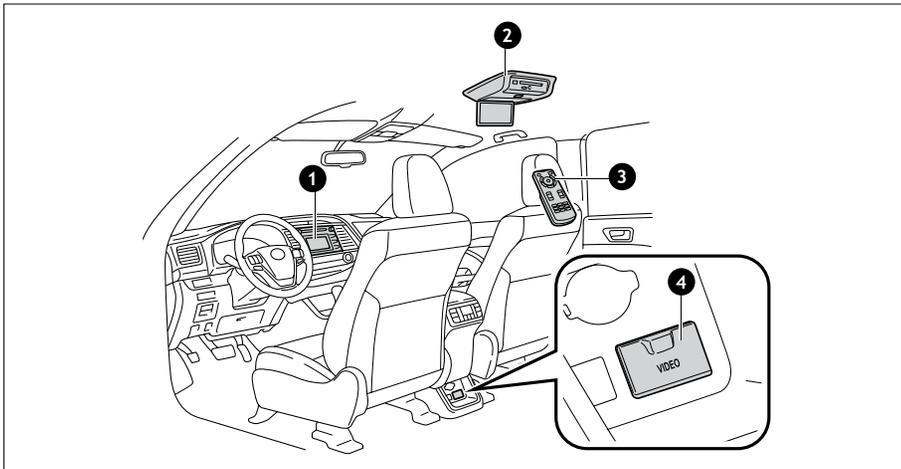


- 1 Audio System
- 2 Rear seat entertainment system (DVD player)
- 3 Remote control
- 4 AV input port

Refer to Section 3-7 of the *Navigation System Owner’s Manual* for more information.

Audio

Entune Premium JBL Audio* with Navigation and App Suite

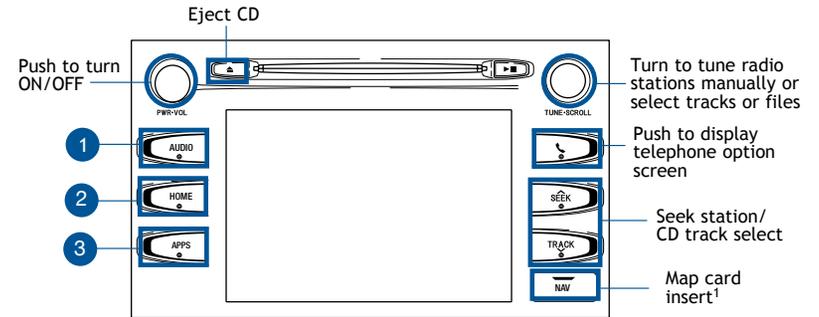


1 Refer to the “NAVIGATION AND MULTIMEDIA SYSTEM OWNER’S MANUAL”.

* The Entune App Suite may not be pre-installed in your vehicle. In order to activate the Entune App Suite, download and launch the Entune app on your smartphone, connect the phone to the vehicle via Bluetooth®, and open the Entune™ App on the phone and sign in. Press the “Apps” button on the audio unit and accept the prompt to update the Apps. The download process will take up to 15 minutes, and when it is complete, follow the on-screen prompts to complete installation. Once the update is complete, the available Apps will be listed on the Apps menu screen.

- 1 AUDIO Button
Access to audio functions.
- 2 HOME Button
Access to Home screen.
- 3 APPS Button
Access to traffic and weather

HOME SCREEN - the home screen offers a two panel and a three panel layout. Information and layout will vary depending on selected set up.

USB/AUX port

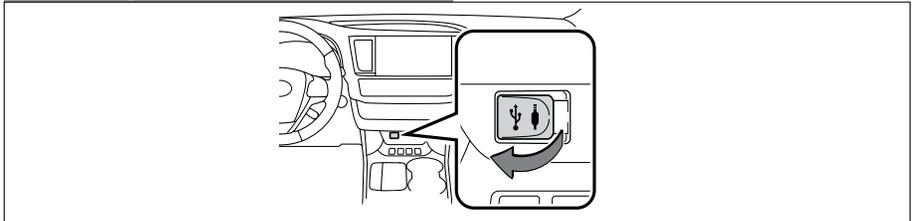


By inserting a mini plug into the USB/AUX port, you can listen to music from a portable audio device through the vehicle’s speaker system while in USB/AUX mode.

Driver Easy Speak

This feature utilizes the vehicle's built-in microphone to amplify the driver's voice through the rear speakers. To activate this feature, select "Driver Easy Speak" from the Apps screen on the audio unit. The feature must be turned on every time you enter the vehicle, and automatically turns off when any door (including the liftgate) is opened. There are 7 volume settings.


Air Conditioning/Heating

Front automatic Air Conditioning

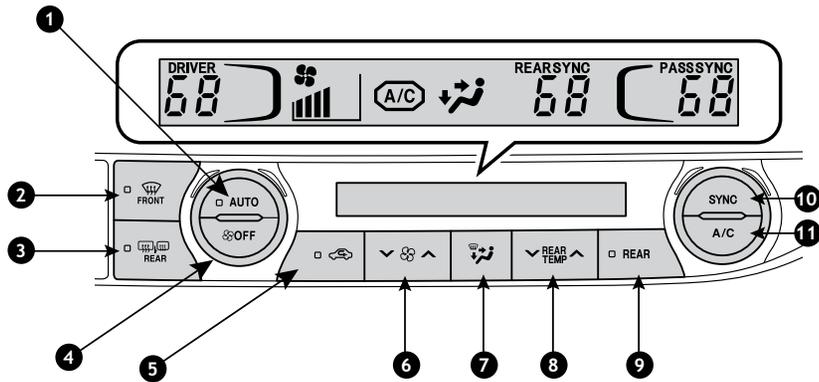


- 1 Automatic climate control ON
Adjusting the temperature setting will cause the airflow vents, air intake and fan to adjust automatically.
- 2 Front windshield airflow/defogger
- 3 Rear windshield airflow/defogger and side mirror defogger
- 4 Temperature selector dial
- 5 Recirculate cabin air (fresh air when OFF)
- 6 Fan speed
- 7 Airflow mode selector
- 8 Temperature selector (rear)
- 9 Rear Air Conditioning ON/OFF
- 10 "SYNC" button
Indicator ON: Synchronize temperature settings for driver and all passengers.
Indicator OFF: Separate temperature settings for driver, front passenger and rear passengers.
- 11 Air Conditioning ON/OFF

Rear Automatic Air Conditioning

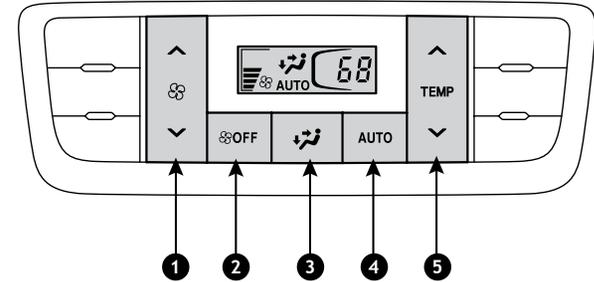


- 1 Fan speed
- 2 Fan OFF
- 3 Airflow mode selector
- 4 Automatic mode selector
- 5 Temperature selector

Seat heaters / Seat ventilators

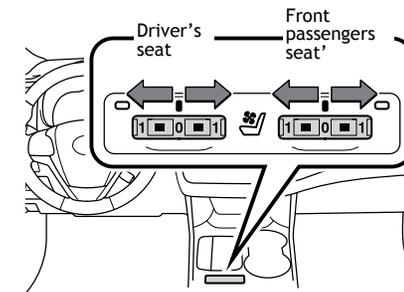


Turn the seat heater on and adjust the number, the higher the number, the warmer the seat becomes.

Second row seat heaters (if equipped)

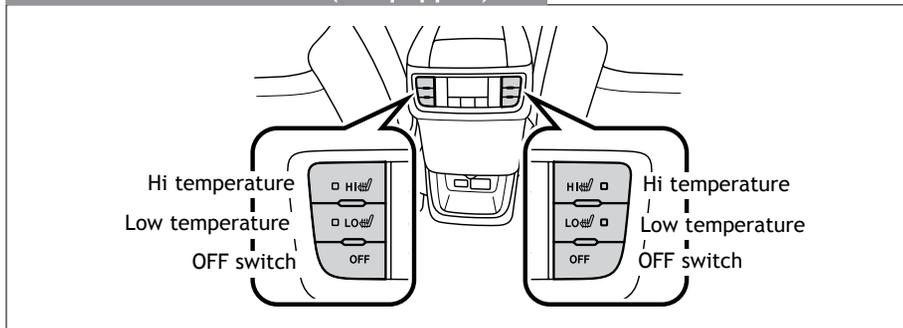


Clock

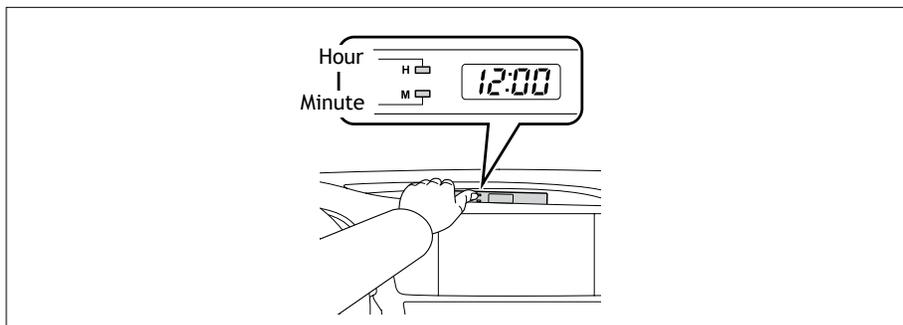


Press “H” for Hours and “M” for minutes to set or change the time.

Cruise control

Turning system ON/OFF

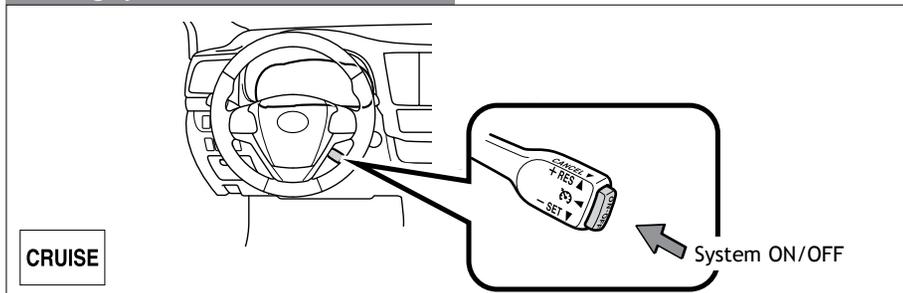


Functions

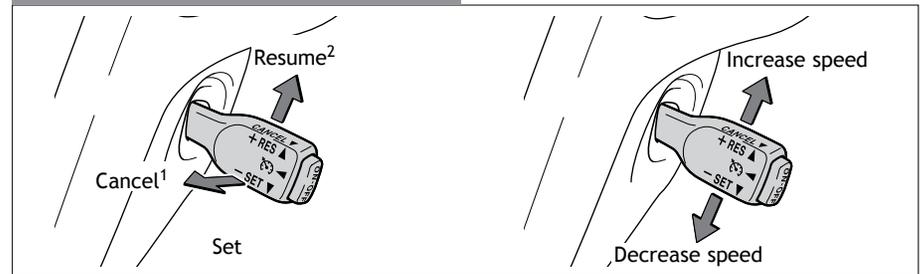

¹ The set speed may also be cancelled by depressing the brake pedal.


² The set speed may be resumed once vehicle speed exceeds 25 mph.

Garage door opener (HomeLink®)*
(if equipped)

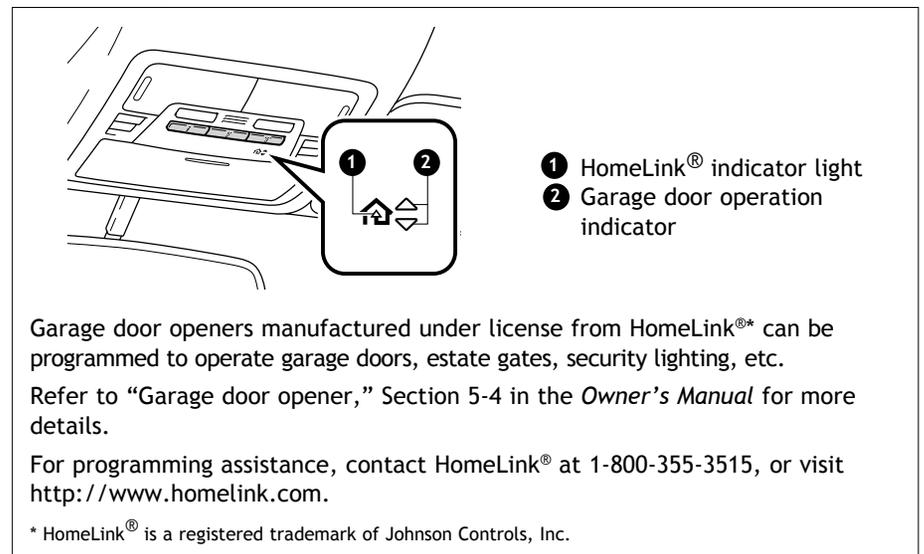

SAFETY AND EMERGENCY FEATURES


Seat belts

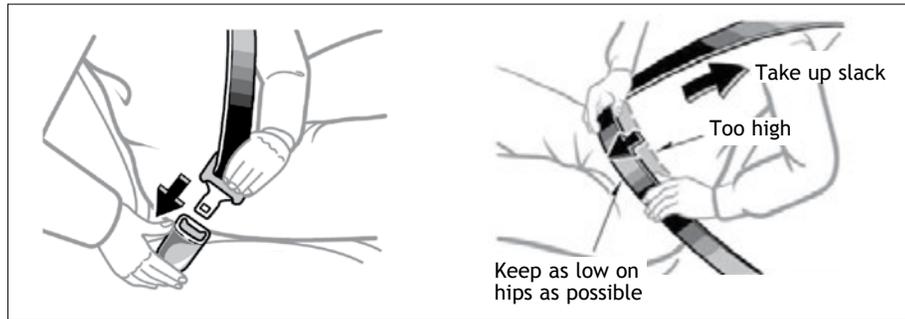

If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.

Tire Pressure Monitoring (warning) System

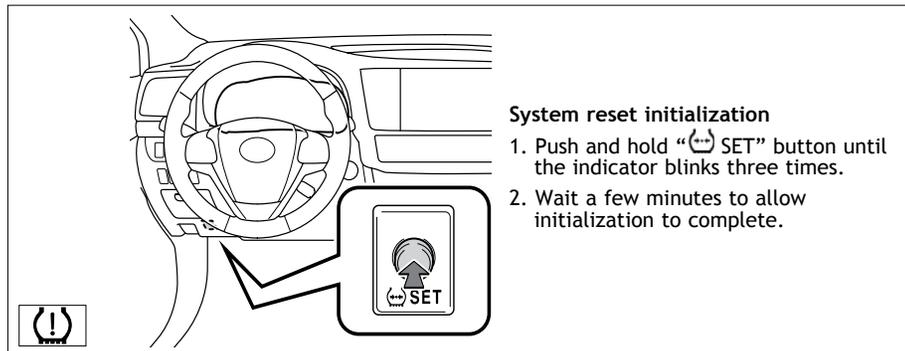

- System reset initialization**
1. Push and hold "SET" button until the indicator blinks three times.
 2. Wait a few minutes to allow initialization to complete.


After adjusting tire pressures, or after tires have been rotated or replaced, turn the ignition switch to "ON" and press and hold the "SET" button until indicator blinks three times. Let the vehicle sit for a few minutes to allow initialization to complete.

Refer to the load label on the door jamb or the *Owner's Manual* for tire inflation specifications.

If the tire pressure indicator flashes for more than 60 seconds and then remains on, take the vehicle to your local Toyota dealer.


NOTE: The warning light may come on due to temperature changes or changes in tire pressure from natural air leakage. If the system has not been initialized recently, setting the tire pressures to factory specifications should turn off the light.

Seat belts-Shoulder belt anchor

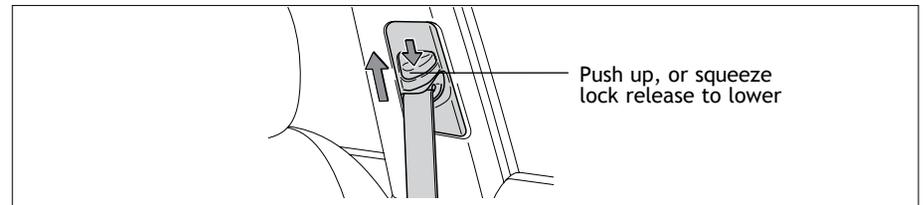


Doors-Child safety locks

Rear door

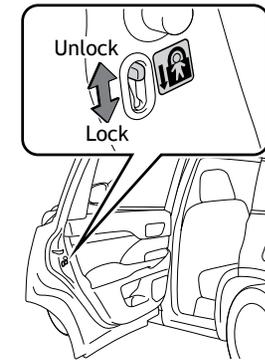

Moving the lever downward will allow the door to be opened only from the outside.

Third row center seat

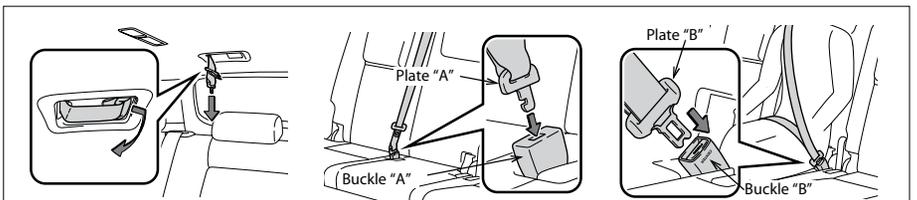


(1) Take the plate out of the holder, and then pull down the seat belt

(2) Push plate "A" into buckle "A" until a click sound is heard.

(3) Push plate "B" into buckle "B" until a click sound is heard.


Spare tire & tools

Tool location

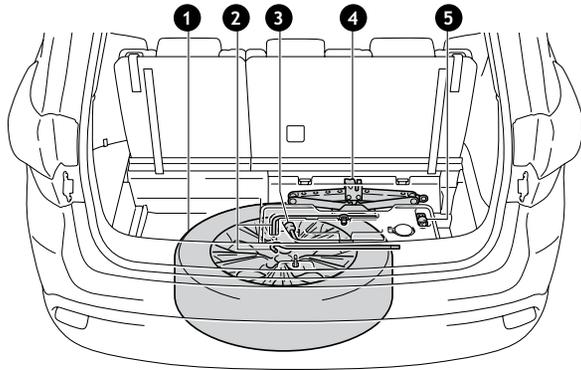

- 1 Spare tire
- 2 Jack handles
- 3 Wheel nut wrench
- 4 Jack
- 5 Adapter socket

Removing the spare tire

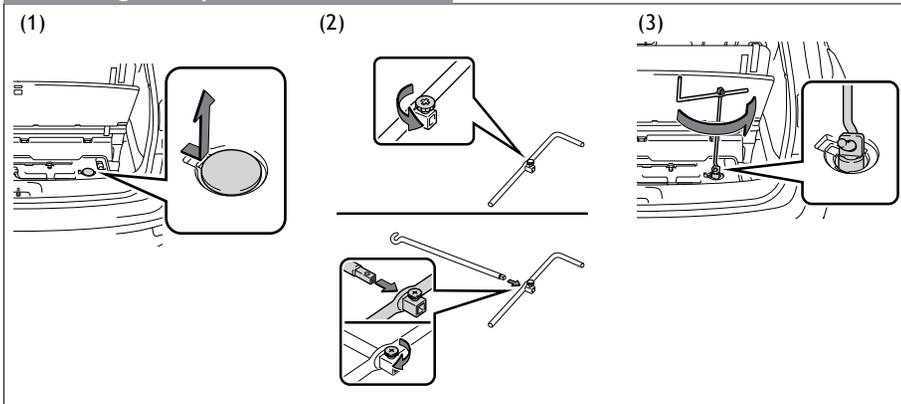

- (1) Remove the cover under the center deck board to find the spare tire clamp bolt.
- (2) Assemble the jack handle.
- (3) Put the socket adapter on the spare tire clamp bolt. Loosen the bolt by turning it counterclockwise with the jack handle.

Refer to the *Owner's Manual* for tire changing and jack positioning procedures.

Star Safety System™

All new Toyota vehicles come standard with the Star Safety System™, which combines Vehicle Stability Control (VSC), Traction Control (TRAC), Anti-lock Braking System (ABS), Electronic Brake-force Distribution (EBD), Brake Assist (BA) and Smart Stop Technology (SST).

Vehicle Dynamics Integrated Management (VDIM)

Provides integrated control of the ABS, brake assist, TRAC, VSC, hill-start assist control, and EPS systems. Helps to maintain vehicle stability when swerving on slippery road surfaces by controlling the brakes and hybrid system output.

Vehicle Stability Control (VSC)

VSC helps prevent loss of traction during cornering by reducing Hybrid System output and applying brake force to selected wheels.

Toyota's VSC monitors steering angle and the direction your vehicle is traveling. When it senses that the front or rear wheels begin to lose traction, VSC reduces Hybrid System output and applies braking to selected wheels. This helps restore traction and vehicle control.

Traction Control (TRAC)

VSC helps prevent loss of traction during cornering by reducing Hybrid System output, and Traction Control helps maintain traction on loose gravel and wet, icy, or uneven surfaces by applying brake force to the spinning wheel(s).

Toyota's TRAC sensors are activated when one of the drive wheels starts to slip. TRAC limits Hybrid System output and applies the brakes to the spinning wheel. This transfers power to the wheels that still have traction to help keep you on track.

Anti-Lock Brake System (ABS)

ABS helps prevent brakes from locking up by "pulsing" brake pressure to each wheel. This limits brake lockup and helps provide directional control for the current road conditions.

Toyota's ABS sensors detect which wheels are locking up and limits wheel lockup by "pulsing" each wheel's brakes independently. Pulsing releases brake pressure repeatedly for fractions of a second. This helps the tires attain the traction that current road conditions will allow, helping you to stay in directional control.

Electronic Brake Force Distribution (EBD)

Toyota's ABS technology has Electronic Brake-force Distribution (EBD) to help maintain control and balance when braking. Abrupt stops can cause a vehicle to tilt forward, reducing the braking power of the rear wheels. EBD responds to sudden stops by redistributing brake force to enhance the braking effectiveness of all four wheels.

SAFETY AND EMERGENCY FEATURES

Brake Assist (BA)

Brake Assist is designed to detect sudden or “panic” braking, and then add braking pressure to help decrease the vehicle’s stopping distance. When there’s only a split second to react, Brake Assist can add additional brake pressure more quickly than just the driver alone can.

Smart Stop Technology (SST)


Smart Stop Technology automatically reduces driving torque when the accelerator and brake pedals are pressed simultaneously under certain conditions.

Floor mat installation

There are two types of Toyota floor mats: carpeted and all-weather. Each vehicle has model-specific floor mats. Installation is easy.

To keep your floor mat properly positioned, follow these steps:

- Only use floor mats designed for your specific model.
- Use only one floor mat at a time, using the retaining hooks to keep the mat in place.
- Install floor mats right side up.

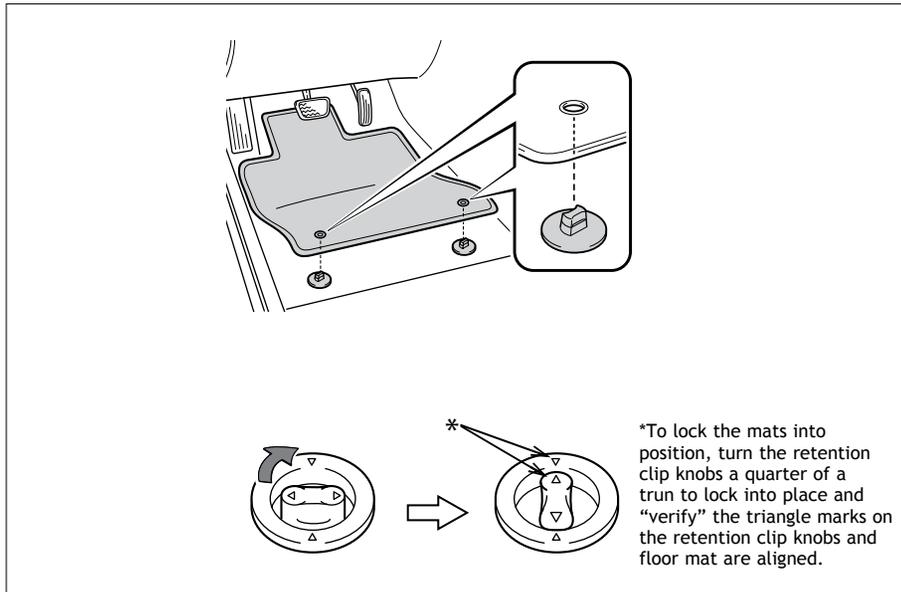


BLUETOOTH® DEVICE PAIRING SECTION

To begin the Bluetooth® Pairing process, press the HOME button on the faceplate of your Toyota Vehicle Entune™ Multimedia Head Unit.¹


Bluetooth® Pairing for Android® phone and Entune™ touch screen system

Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all Android mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.²


Initiate Bluetooth® on your Android®

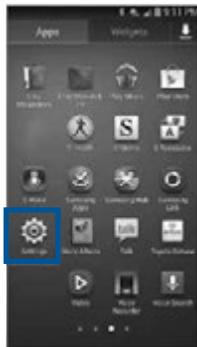

STEP 1
From your APPS SCREEN, select SETTINGS

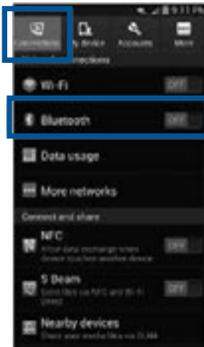

STEP 2
Select CONNECTIONS and select BLUETOOTH

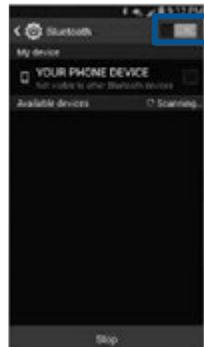

STEP 3
Ensure BLUETOOTH is ON



STEP 4
Select YOUR PHONE DEVICE to make it discoverable.


Phone will seek out Bluetooth devices while remaining discoverable.



STEP 5
While your Android device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

Initiate Bluetooth® on your Entune™ Multimedia Head Unit


Once you have Bluetooth enabled on your phone and ready to pair, you will need to initiate Bluetooth on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.

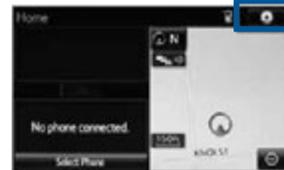


STEP 6
On your Toyota Vehicle Entune Multimedia Head Unit, Select SETUP BUTTON on the Home Screen.



STEP 7
Select BLUETOOTH

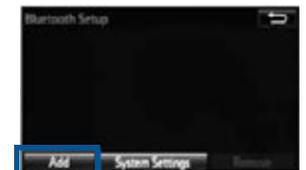

STEP 8
Select ADD, to add your phone device

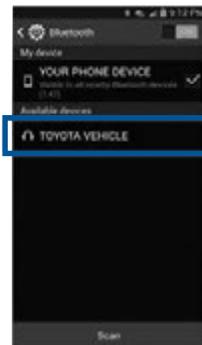

STEP 9
Back on your smartphone, you can now select your TOYOTA VEHICLE in Bluetooth Settings.

You may need to enter the provided Bluetooth PIN on your phone.



STEP 10
Your smartphone is now paired with Entune.




STEP 11
Once paired, Entune will attempt to connect audio and contacts on your phone.

¹ To determine which head unit is installed in your vehicle, refer to page 23.

² Some Android devices may have slightly different SETTINGS screen layout depending on manufacturer of device and Android OS version.


Initiate Bluetooth® on your Entune™ Multimedia Head Unit (continued)

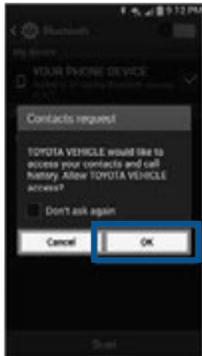

STEP 12

Using your smartphone, you will need to allow Entune access to your messaging and contacts

It is recommended to check the "Don't ask again" box, so as not to have to press OK every time the phone makes a Bluetooth connection with your Toyota

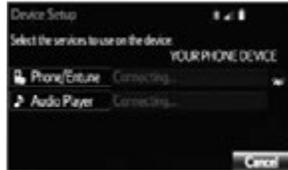

STEP 13

A confirmation will appear once your phone has been paired and connected.

Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:
www.toyota.com/connect

Your Toyota Owner's Manual
Located in the vehicle glovebox

Toyota Customer
Experience Center
(800) 331-4331

Disclosures

- This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.
1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
 2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
 3. Android is a trademark of Google, Inc. All rights reserved. Google is not a participant in or sponsor of this promotion.
 4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.
 5. Bluetooth Pairing Guide for select 2015 models.

Bluetooth® Pairing for iPhone® and Entune™ touch screen system


Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all iPhone mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to "talk" to each other and form a connection. Bluetooth Pairing Guide for select 2015 models.

Initiate Bluetooth® on your iPhone®



STEP 1

From the HOME SCREEN, select SETTINGS

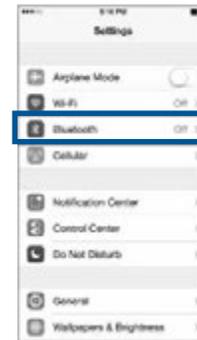

STEP 2

Select BLUETOOTH



STEP 3

Ensure BLUETOOTH is ON



STEP 4

Your iPhone will seek out Bluetooth devices while remaining discoverable



STEP 5

While your iPhone device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

CONTINUE ON THE NEXT PAGE...

Initiate Bluetooth® on your Entune™ Multimedia Head Unit


Once you have Bluetooth enabled on your phone and ready to pair, you will need to initiate Bluetooth on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.



STEP 6
Select **SETUP** BUTTON on the Home Screen.



STEP 7
Select **BLUETOOTH**

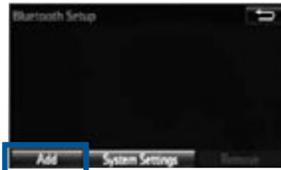

STEP 8
Select **ADD**, to add your phone device




STEP 9
Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.


You may need to enter the provided Bluetooth PIN on your phone.




STEP 10
Your smartphone is now paired with Entune.

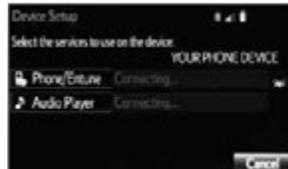

STEP 11
Once paired, Entune will attempt to connect audio and contacts on your phone.

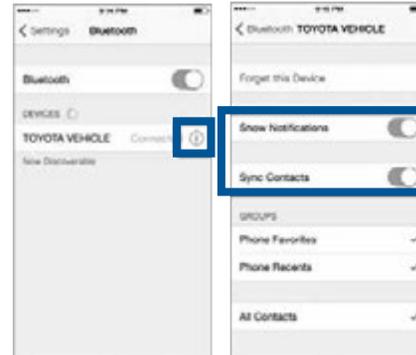

STEP 12
Using your smartphone, you may need to allow Entune access to your messaging and contacts
Only current iPhone text messages can be viewed on the head unit. iPhone does not allow text message reply.

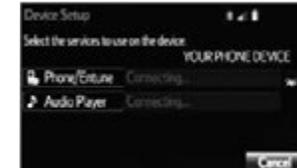

STEP 13
A confirmation will appear once your phone has been paired and connected.

Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:
www.toyota.com/connect

Your Toyota Owner's Manual
Located in the vehicle glovebox

Toyota Customer Experience Center
(800) 331-4331


Disclosures

- This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.
1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
 2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
 3. Android is a trademark of Google, Inc. All rights reserved. Google is not a participant in or sponsor of this promotion.
 4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.
 5. Bluetooth Pairing Guide for select 2015 models.

Bluetooth® Pairing for Windows Phone® and Entune™ touch screen system

Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all Windows Phone mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection. Bluetooth Pairing Guide for select 2015 models.

Initiate Bluetooth® on your Windows Phone®

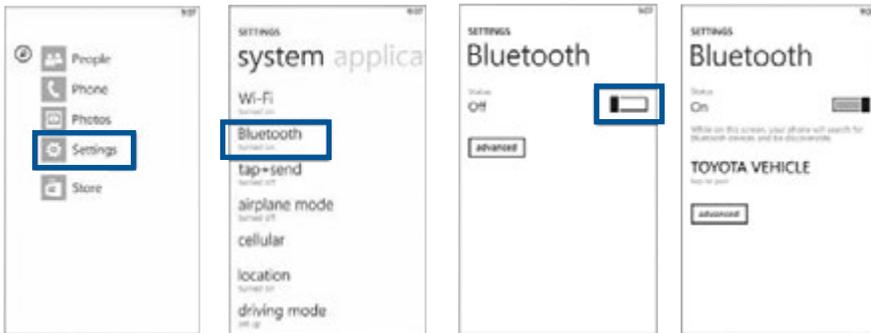

- STEP 1**
From your APP LIST, select **SETTINGS**
- STEP 2**
Select **BLUETOOTH**
- STEP 3**
Ensure **BLUETOOTH** is **ON**
- STEP 4**
Phone will seek out Bluetooth devices while remaining discoverable



- STEP 5**
While your iPhone device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.
CONTINUE ON THE NEXT PAGE...

Initiate Bluetooth® on your Entune™ Multimedia Head Unit

Once you have Bluetooth enabled on your phone and ready to pair, you will need to initiate Bluetooth on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.



- STEP 6**
On your Toyota Vehicle Entune Multimedia Head Unit, Select **SETUP BUTTON** on the Home Screen.
- STEP 7**
Select **BLUETOOTH**
- STEP 8**
Select **ADD**, to add your phone device




- STEP 9**
Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.
You may need to enter the provided Bluetooth PIN on your phone.
- STEP 10**
Your smartphone is now paired with Entune.
- STEP 11**
Once paired, Entune will attempt to connect audio and contacts on your phone.

Initiate Bluetooth® on your Entune™ Multimedia Head Unit (continued)



STEP 12

Using your smartphone, you may need to allow Entune access to your contacts

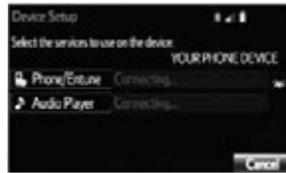

STEP 13

A confirmation will appear that your phone has been paired and connected.

Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:
www.toyota.com/connect

Your Toyota Owner's Manual
Located in the vehicle glovebox

Toyota Customer Experience Center
 (800) 331-4331

- Disclosures
- This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.
1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
 2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
 3. Android is a trademark of Google, Inc. All rights reserved. Google is not a participant in or sponsor of this promotion.
 4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.
 5. Bluetooth Pairing Guide for select 2015 models.

