

**2015
RAV4
Quick Reference Guide**

2015 RAV4

This *Quick Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Quick Reference Guide* is not intended as a substitute for the *Owner's Manual* located in the vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of the vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new RAV4.

A word about safe vehicle operations

This *Quick Reference Guide* is not a full description of RAV4 operations. Every RAV4 owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Quick Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

INDEX

OVERVIEW

Engine maintenance	9
Fuel tank door release and cap	8
Hood release	8
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Keyless entry¹	6
Smart Key system¹	7

FEATURES/OPERATIONS

All Wheel Drive Lock (AWD models)	11
Air conditioning/Heating	22-23
Audio	19
Auto lock/unlock¹	10
Automatic Transmission	10
Bottle holders	21
Blind Spot Monitor (BSM)	26
Bluetooth® Pairing Section	31-40
Clock	23
Cruise control	25
Cup holders	21
Door locks (without Smart Key)	17
Door-Power back (liftgate)	14
Door liftgate (non-power)	15
iPod®/USB/AUX Port	17
Lane Departure Alert	26
Light control-Instrument panel	23
Lights & turn signals	13
Moonroof	16
Multi-Information Display²	25
Parking brake	11
Power outlets-12V DC	24
Rear Cross Traffic Alert	26
Seat adjustments-Front	12
Seat adjustments-Rear	12
Seat heaters	22
Seats-Head restraints	11
Steering wheel switches	18
Telephone controls (Bluetooth)	18
Tilt and telescopic steering wheel	17
Traffic	20
VSC OFF button	24
Weather	20
Windows-Power	16
Windshield wipers & washers	15

SAFETY AND

EMERGENCY FEATURES

Doors-Child safety locks	28
Floor mat installation	30
Seat belts	27
Seat belts-Shoulder belt anchor	28
Spare tire & tools	28
Star Safety System™	29-30
Tire Pressure Monitoring (warning) System	27



¹ Visit your Toyota dealer for information on customizing this feature.

² Programmable by customer. Refer to the *Owner's Manual* for instructions and more information.

OVERVIEW

Instrument panel

Steering wheel controls

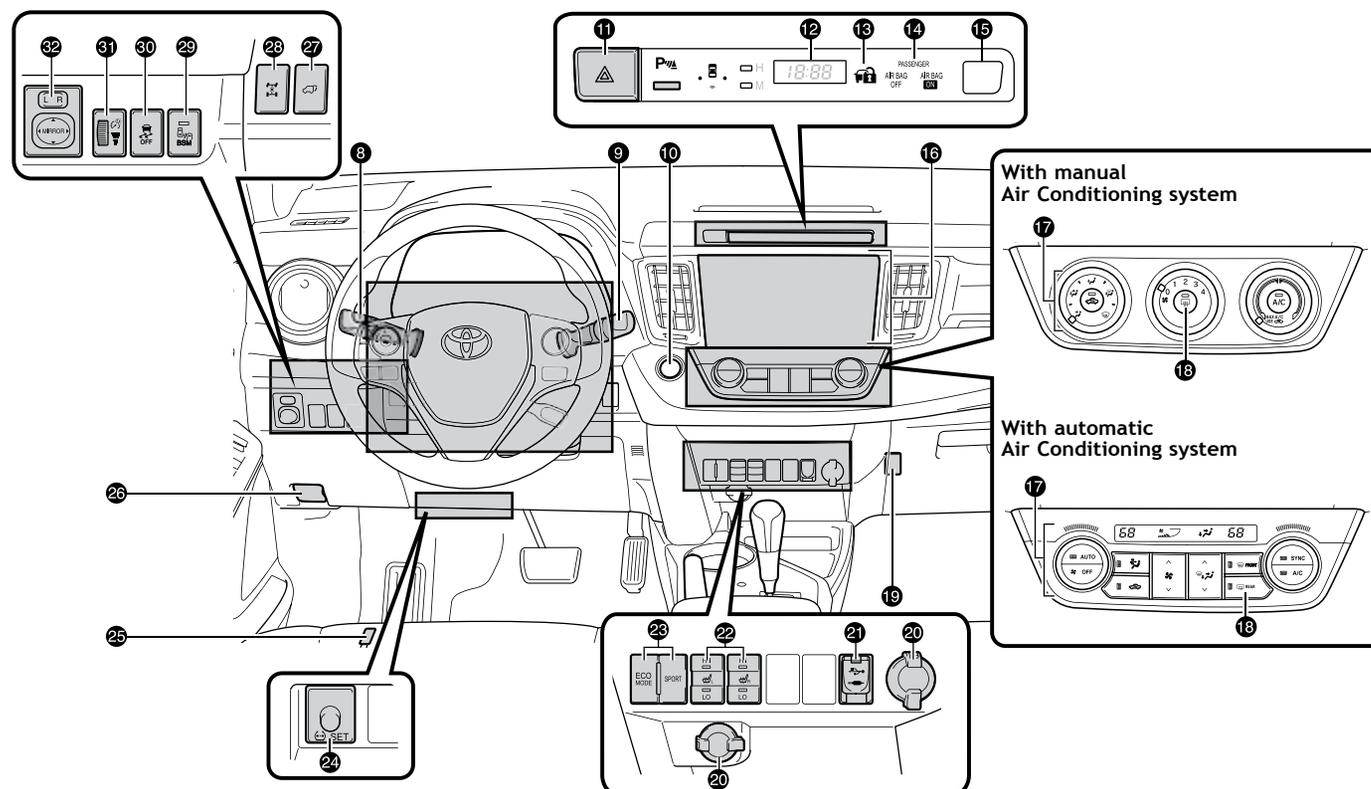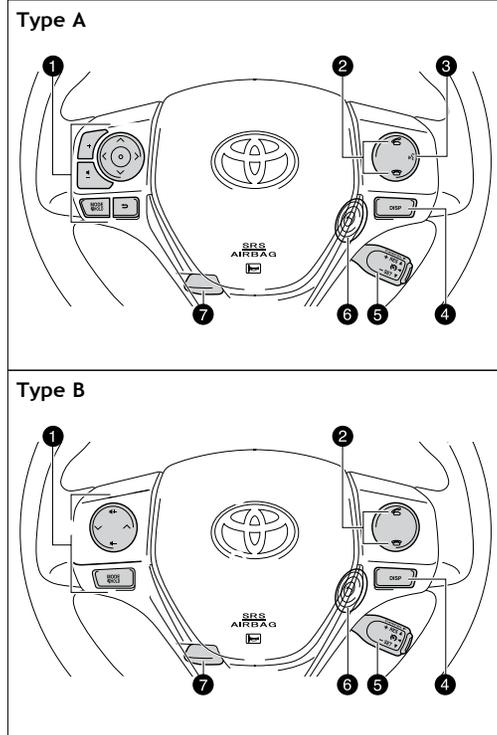


- 1 Steering wheel audio controls²
- 2 Telephone controls²
- 3 Voice command button^{1,2}
- 4 Multi-Information Display switch
- 5 Cruise control
- 6 Engine ignition switch (standard key)¹
- 7 Tilt and telescopic steering release
- 8 Headlight, turn signal, fog light and auto high beam¹ controls
- 9 Wiper and washer controls
- 10 Engine ignition switch (Smart Key)¹
- 11 Emergency flasher switch
- 12 Clock
- 13 Engine immobilizer indicator
- 14 Front passenger occupant classification indicator
- 15 Lane Departure Alert switch
- 16 Entune Audio¹/Entune Audio Plus¹/Entune Premium Audio with Navigation^{1,2}
- 17 Air Conditioning controls

- 18 Outside mirror¹/Rear window defogger switch
- 19 Power back door (liftgate) main switch¹
- 20 12V DC power outlet
- 21 USB/AUX port²
- 22 Seat heater switches¹
- 23 Driving mode select switches
- 24 Tire pressure warning reset switch
- 25 Fuel filler door opener
- 26 Hood lock release lever
- 27 Power back door (liftgate) switch¹
- 28 All-Wheel Drive lock switch (AWD models)¹
- 29 Blind Spot Monitor (BSM) with Rear Cross Traffic Alert (RCTA) main switch¹
- 30 Vehicle Stability Control (VSC) OFF switch
- 31 Instrument panel light control
- 32 Outside mirror controls

¹ If equipped

² For details, refer to the *Owner's Manual*

Instrument cluster

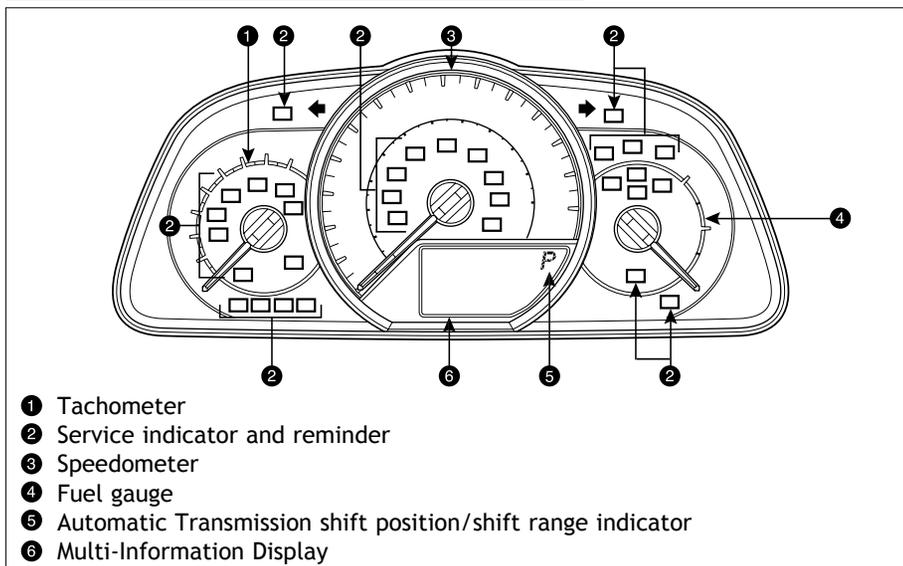

Indicator symbols

	Brake system warning ¹
	Driver/Front passenger seat belt reminder (alarm will sound if speed is over 12 mph)
	Charging system warning ¹
	Low engine oil pressure warning ¹
	Malfunction/Check Engine indicator ¹
	Low fuel level warning
	Engine oil replacement reminder ¹
	Open door warning
	Airbag warning ¹
	Automatic Transmission fluid temperature warning ¹
	Low Tire Pressure Warning ¹
	Dynamic Torque Control AWD system warning ¹

¹ If indicator does not turn off within a few seconds of starting engine, there may be a malfunction. Have vehicle inspected by your Toyota dealer.

² For details, refer to "All-wheel drive lock switch," Section 4-5, 2015 Owner's Manual.

³ The indicator flashes to indicate that the system is operating.


	Electric power steering system warning ¹
	Low windshield washer fluid level warning ¹
	Front passenger occupant classification indicator ¹
	Headlight high beam indicator
	Automatic headlight high beam indicator
	Turn signal indicator
	Fog light indicator
	All-Wheel Drive lock indicator ^{1,2}
	Vehicle Stability Control (VSC) OFF indicator ¹
	Slip indicator ^{1,3}
	AUTO Limited Slip Differential indicator ¹
	Cruise control indicator
	Cruise control SET indicator
	Anti-lock Brake System warning ¹
	Smart Key system indicator ⁴
	Traction Control OFF indicator ¹
	Blind Spot Monitor warning ¹
	Blind Spot Monitor outside mirror indicators
	Theft deterrent/Engine immobilizer system indicator
	Eco Driving Indicator ¹
	ECO mode indicator
	SPORT mode indicator
	High coolant temperature warning ¹
	Lane Departure Alert (LDA) warning

⁴ Light flashes in yellow to indicate a malfunction. Light flashes quickly in green to indicate that the steering lock has not been released.



Keyless entry

Beep sound can be switched ON or OFF. Refer to the *Owner's Manual* for more details.

Locking


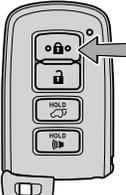
<p>Without Smart Key system</p> 	<p>With Smart Key system</p> 	<p>Push</p> 
--	---	---

Unlocking
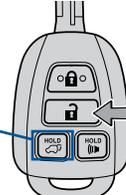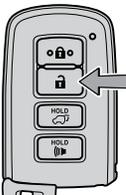
<p>Without Smart Key system</p> 	<p>With Smart Key system</p> 	<p>Push ONCE: Driver door TWICE: All doors</p> 
--	---	--

NOTE: If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.

Power back door (Liftgate) (if equipped)
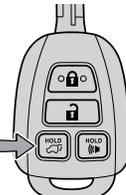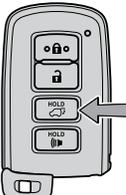
<p>Without Smart Key system</p> 	<p>With Smart Key system</p> 	<p>Push and hold</p> 
---	--	--

Panic button




Push and hold



Smart Key system (if equipped)

Start function

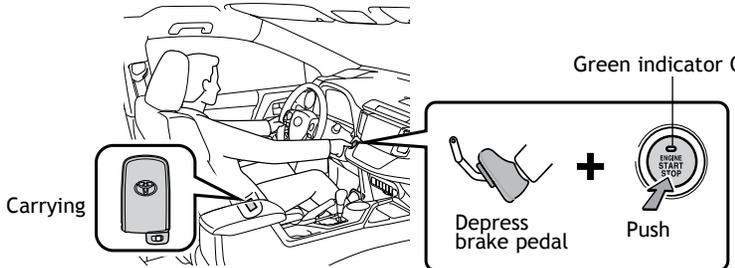

Green indicator ON

Carrying

Depress brake pedal + Push

NOTE: Gear shift lever must be in Park and brake pedal depressed.

Power (without starting engine)

Without depressing the brake pedal, pressing the engine switch will change the operation mode in succession from:

ACCESSORY Accessories such as the radio will operate.


ON Power ON; the engine not running.

OFF All systems OFF.

Locking operation

Front door lock

Touch

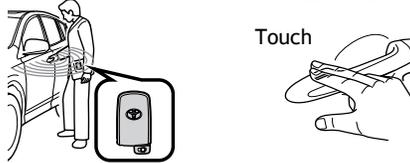


Carry remote to lock

Unlocking operation


Front door unlock*

Grasp

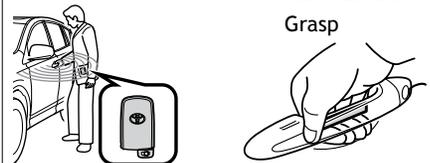

Carry remote to unlock

Back door (Liftgate) lock/unlock

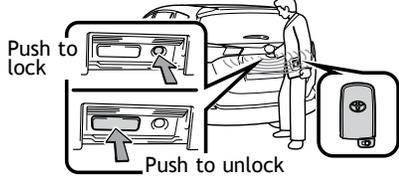

Push to lock


Carry remote to lock/unlock

Push to unlock


* Driver door unlocking function can be programmed to unlock driver door only, or all doors. Grasping passenger door handle will unlock all doors.

NOTE: Doors may also be locked/unlocked using remote.


Fuel tank door release and cap

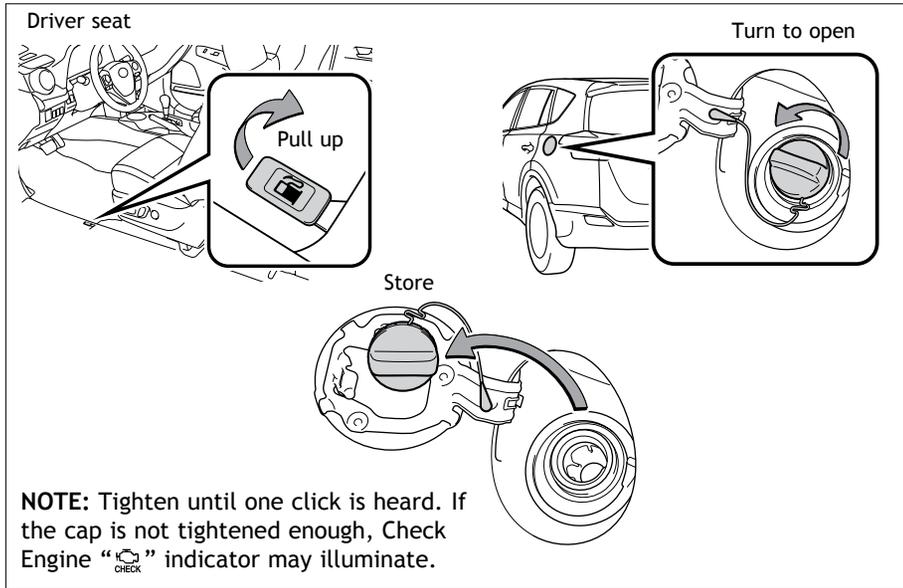

Hood release

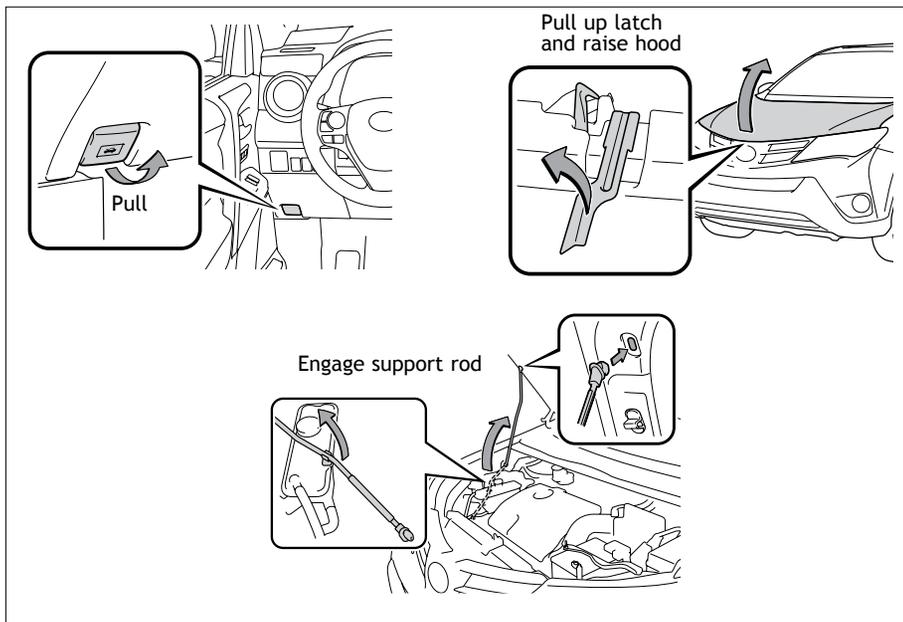

Engine maintenance

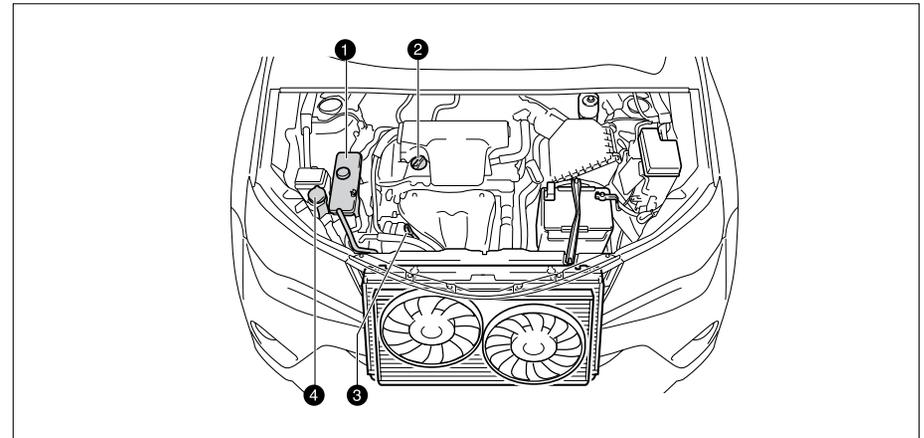

- ❶ Engine coolant reservoir
- ❷ Engine oil filler cap
- ❸ Engine oil level dipstick
- ❹ Windshield and rear window washer fluid tank

NOTE: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the “Warranty Maintenance Guide.”

FEATURES/OPERATIONS

Auto lock/unlock

Automatic door locks can be programmed to operate in four different modes, or turned OFF.

- Doors lock when shifting from Park.
- Doors unlock when shifting into Park.

Vehicles without Smart Key system


- Doors unlock when the engine switch is set from "ON" to "ACC" or "LOCK" and driver's door is opened.

Vehicles with Smart Key system

- Doors lock when the vehicle speed goes above approximately 12 mph.
- Doors unlock when the engine switch is set to OFF and driver's door is opened.

Refer to the *Owner's Manual* for more details.

Automatic Transmission

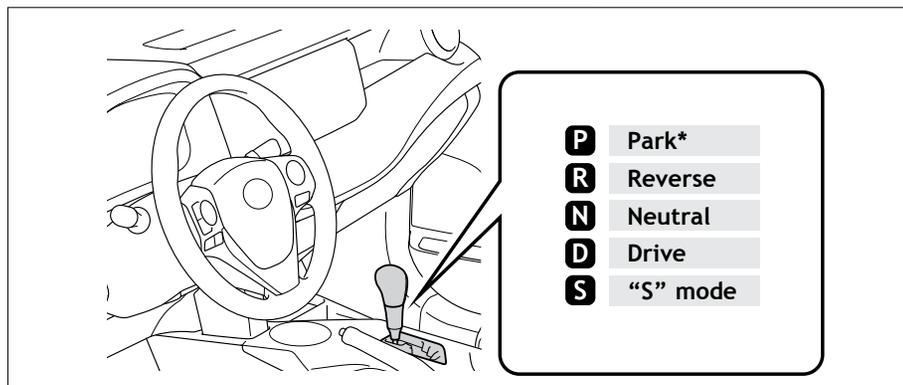

* The engine switch must be "ON" and the brake pedal depressed to shift from Park.


"S" (Sequential) mode

Shift the shift lever to "S" position from "D" position.


- + : Upshift (push and release)
- : Downshift (pull and release)

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.

Parking brake

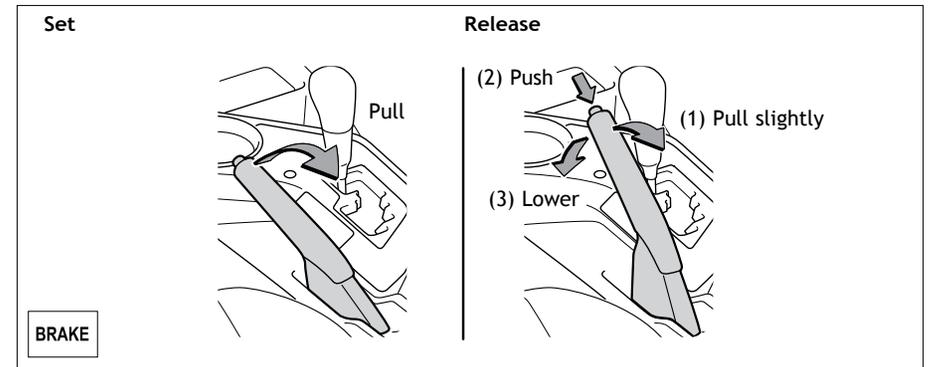

All Wheel Drive Lock (AWD models)

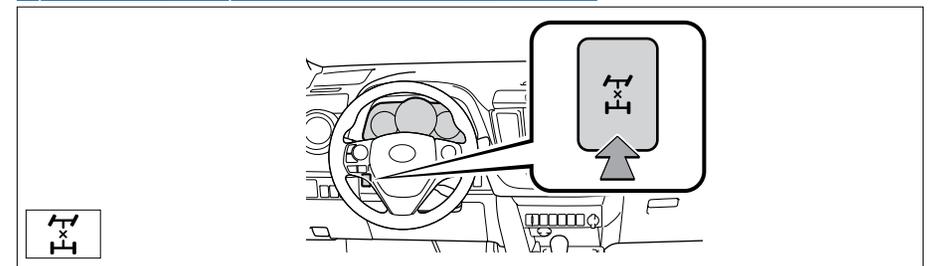


Push the switch to ensure that the engine torque is applied to the four wheels.

NOTE: Should ONLY be used when wheel spinning occurs on loose or unpaved surfaces.


Refer to the *Owner's Manual* for more details.

Seats-Head restraints

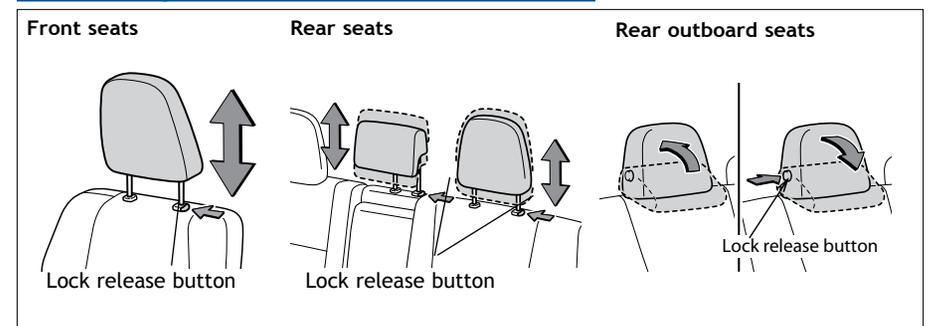


Seat adjustments-Front

Manual seat

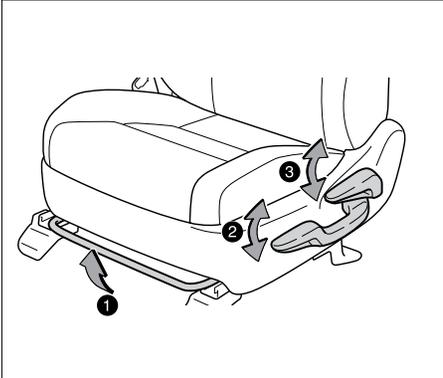


Power seat (driver side only)

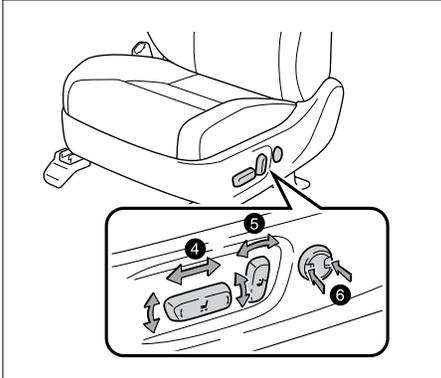

- ❶ Seat position (forward/backward)
- ❷ Height crank (driver side only)
- ❸ Seatback angle
- ❹ Seat position, cushion angle and height
- ❺ Seatback angle
- ❻ Lumbar support


Seat adjustments-Rear

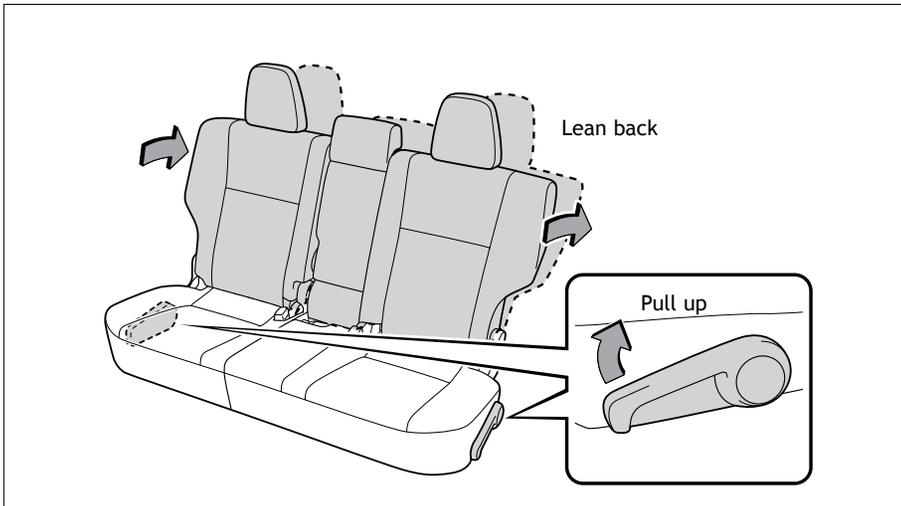


Lights & turn signals

Headlights


Type A

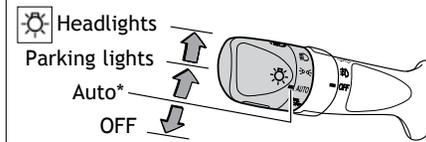

Type B

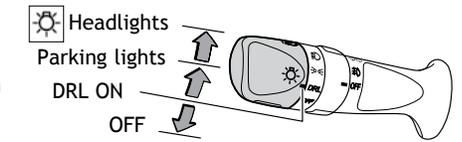

Low beam

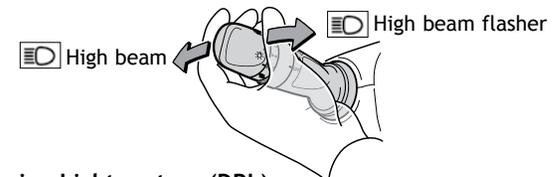

Daytime Running Light system (DRL)

Automatically turns on the headlights at a reduced intensity.

Automatic On/Off¹

The side marker, parking, tail, license plate, instrument panel and headlights turn on and off automatically

Automatic Off¹


Automatically turns lights off after a delay of 30 seconds, or when the lock switch on remote is pushed after all the doors are locked.

Automatic High Beam¹

High Beam automatically turn on or off high beams as necessary.

¹ If equipped.


Turn signals

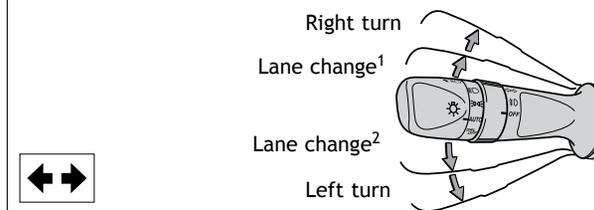

¹ The right hand signals will flash three times.

² The left hand signals will flash three times.


Fog lights (if equipped)

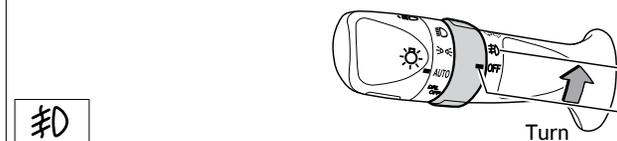


Front fog lights come on only when the headlights are on low beam.

Door-Power back (Liftgate) (if equipped)


Instrument panel

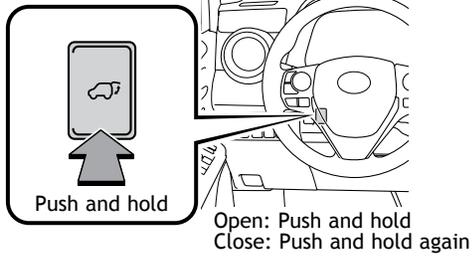

Back door (Liftgate) (close only)

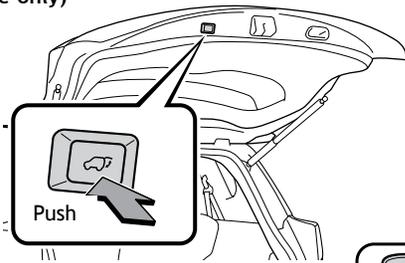

Back door (Liftgate) (open only)

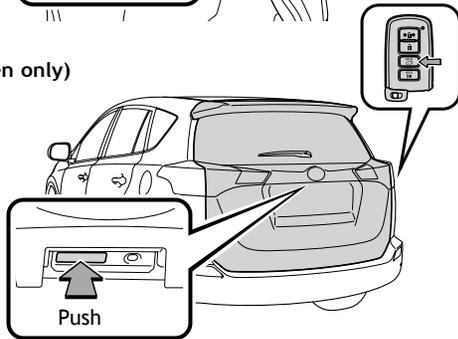

To set adjustable height, please refer to the *Owner's Manual* for complete details.

NOTE: If battery is disconnected, the power back door needs to be reinitialized. Refer to the *Owner's Manual* for more details.

Programmable power liftgate

1. When the liftgate reaches the desired height, push the rear liftgate close-button (on the door jam of the liftgate) once. Press and hold the button until it beeps 4 times.
2. To reset the height, with the liftgate open and not moving, press and hold the rear liftgate close-button until it beeps 4 times, and continue to hold until it beeps again -then let go. Push the same button to close the liftgate. When you next open the liftgate it will open to the maximum height.


Programmable power liftgate (continued)

3. The height can also be set through the "Setup" screen on the audio display. Setup > Vehicle Customization > Other Vehicle Settings > Power Back Door Opening Adjust. Through this screen, there are 5 height options to choose from.

NOTE: If the liftgate has stopped operating, check inside the glove box, on the left side, to ensure the PWR DOOR OFF button has not been pushed.

** For detailed instructions, see *Owner's Manual*.


Door non-power (Liftgate)

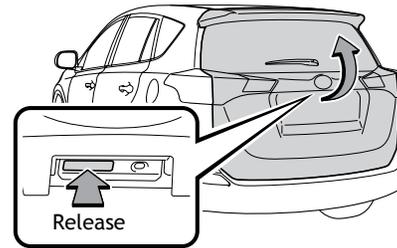

To open the liftgate, push up the release and pull the door to raise it.


Windshield wipers & washers

Front

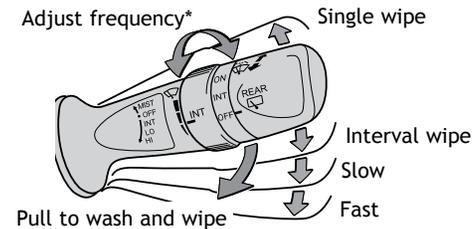


* **Intermittent windshield wiper frequency adjustment** Rotate to increase/ decrease wipe frequency.

Rear

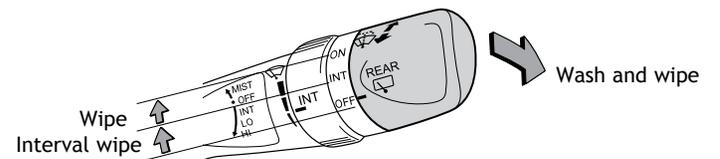

Windows-Power

Driver side

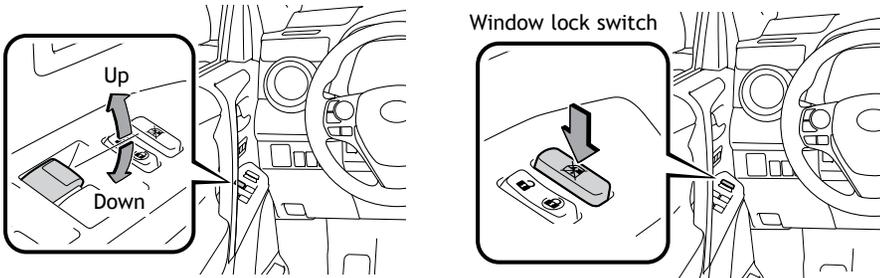

Automatic operation - automatic up/down¹ (driver side only) Push the switch completely down or pull it completely up and release to fully open or close. To stop the window partway, operate the switch in the opposite direction.


Window lock switch Deactivates all passenger windows. Driver's window remains operable.

¹ If equipped

Moonroof (if equipped)


Sliding operation

Push once to open partway; again to open completely.

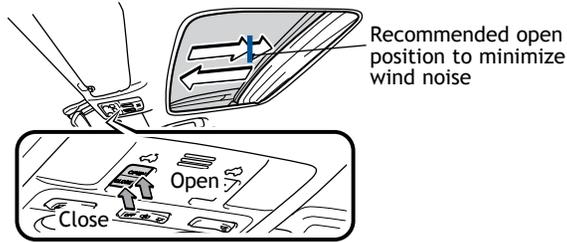


Recommended open position to minimize wind noise

Tilting operation

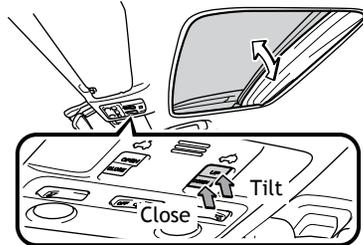


NOTE: If battery is disconnected, the moonroof needs to be reinitialized. Refer to the *Owner's Manual* for more details.

Door locks

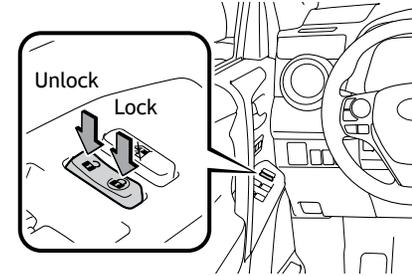

iPod®/USB/AUX port

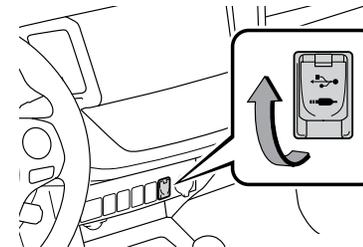


iPod®/USB port

By connecting a USB-compatible portable audio device or USB memory to the USB port, you can listen to music from the portable audio device or USB memory through the vehicle's speaker system.

AUX port

By inserting a mini plug into the AUX port, you can listen to music from a portable audio device through the vehicle's speaker system while in AUX mode.


Tilt and telescopic steering wheel

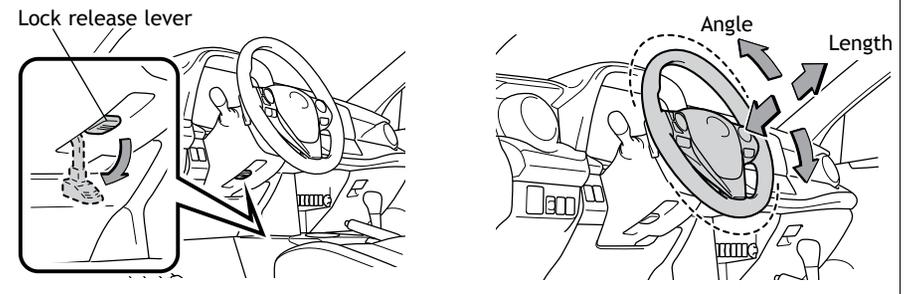

Hold wheel, push lever down, set angle and length, and return lever.

NOTE: Do not attempt to adjust while the vehicle is in motion.

Steering wheel switches and Telephone controls (Bluetooth®)

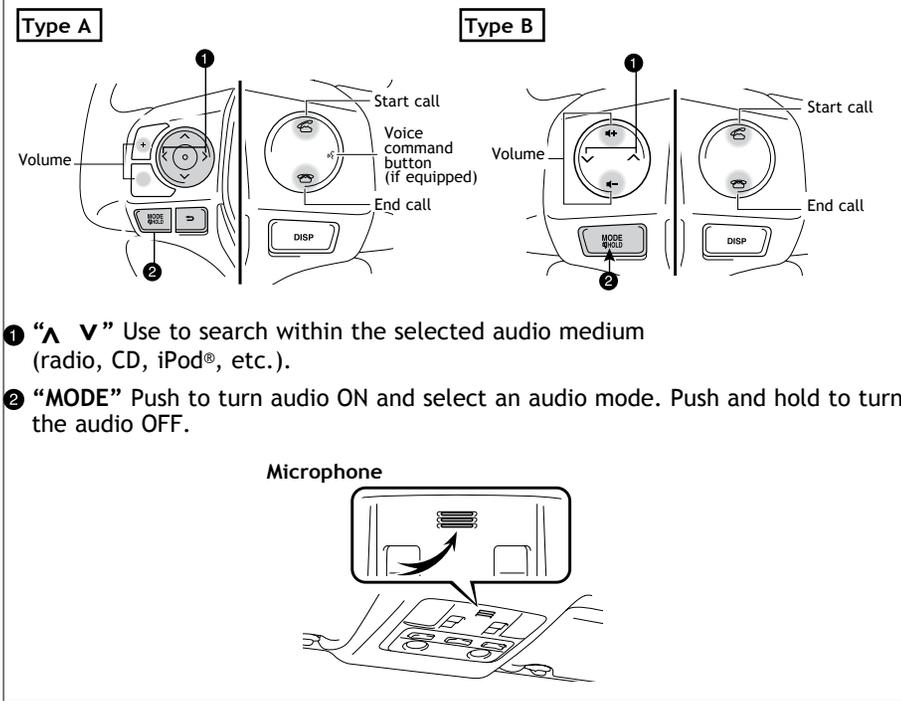


Bluetooth® technology allows dialing or receipt of calls without taking hands from the steering wheel or using a cable to connect the compatible telephone and the system.


Refer to page 18 for Bluetooth Pairing instructions or to "Bluetooth® audio/ phone," Section 5-2 in the *Owner's Manual*, for more information about phone connections and compatibility.

Audio

Type 1 - Entune Audio (LE)

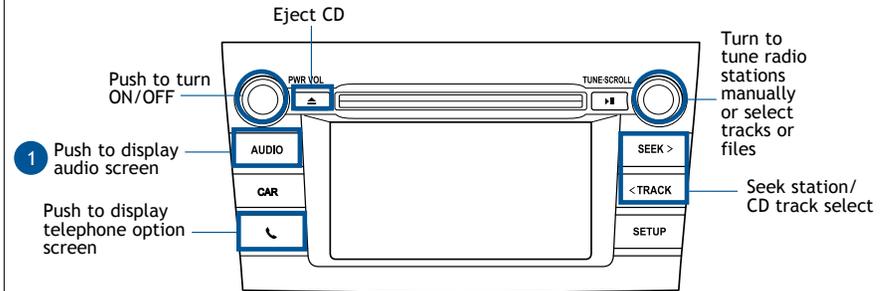


Type 2 - Entune Audio Plus (LE/XLE) (additional functions)

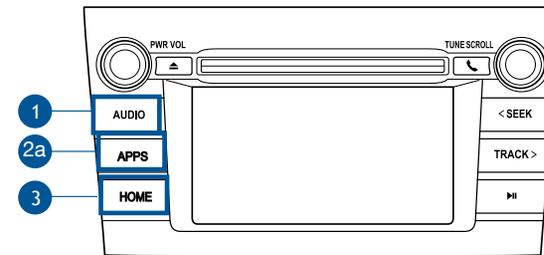

Type 3 - Entune Premium Audio with Navigation and App Suite (XLE/LTD) (additional functions)

Limited models may be equipped with the JBL upgrade in this unit.

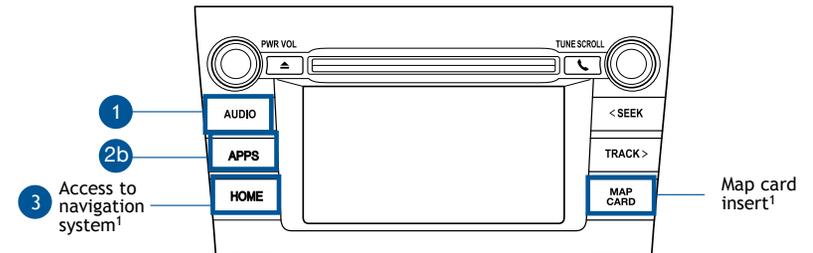

¹ Refer to the "NAVIGATION AND MULTIMEDIA SYSTEM OWNER'S MANUAL".

1 AUDIO Button
Access to audio functions.

2a APPS Button
Access to traffic and weather

2b APPS Button
Access to Entune® App Suite, sports, stocks, news, traffic and weather

3 HOME Button
Access to Home screen.

HOME SCREEN - the home screen offers a two panel and a three panel layout. Information and layout will vary depending on selected set up.

Quick Tip - The USB and AUX port location and design are different depending on the vehicle. For details, see Page 17.

Traffic



The Traffic App displays a scrollable map showing local traffic in 3 colors. Traffic conditions are displayed in red, yellow and green for heavy, moderate or light traffic conditions. Use or arrows to scroll the map up or down.

Weather




The Weather App options show current weather and recently checked locations weather. You can also search for a weather forecast by national or local cities.


Always drive safely, obey traffic laws & focus on the road while driving. Availability and accuracy of the information provided by HD services is dependent upon many factors. Services not available in every city or roadway. Use common sense when relying on information provided. HD Radio(tm) Technology manufactured under license from iBiquity Digital Corporation U.S. and Foreign Patents. HD Radio(tm) and the HD, HD Radio, and “Arc” logos are proprietary trademarks of iBiquity Digital Corp.

Cup holders

Front

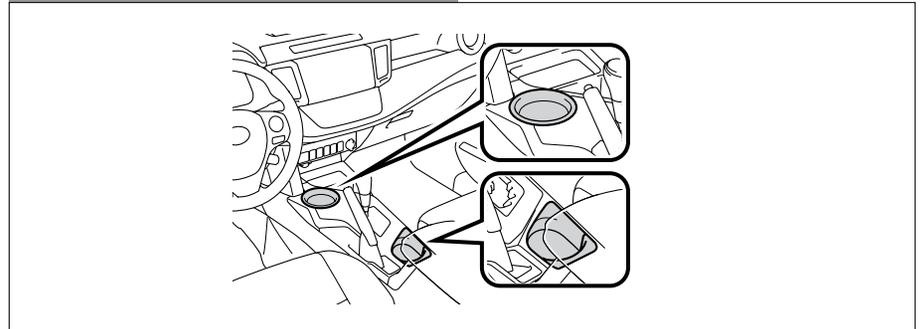


Rear

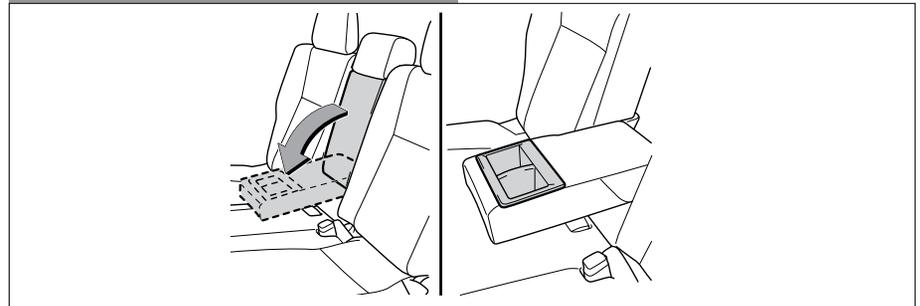


Bottle holders


Front door

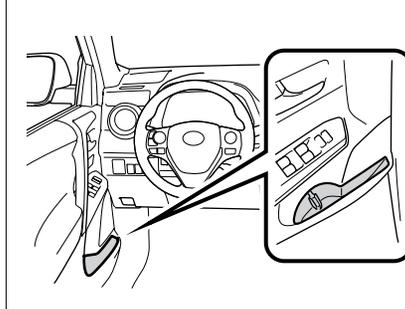

Rear door

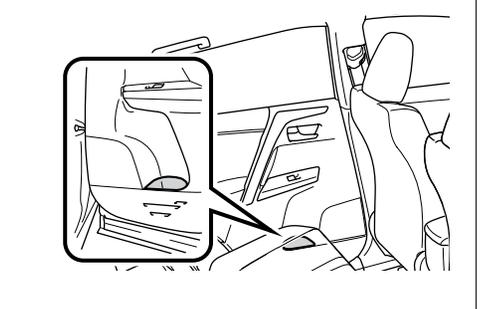


Seat heaters (if equipped)

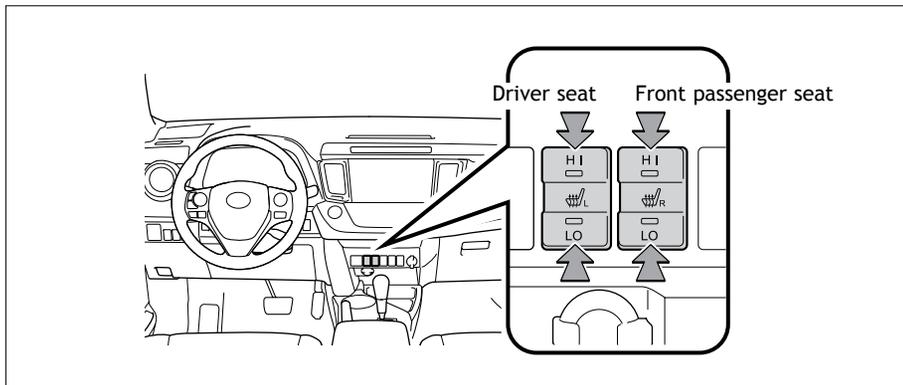

Air Conditioning/Heating


Dual Zone Automatic Climate Control

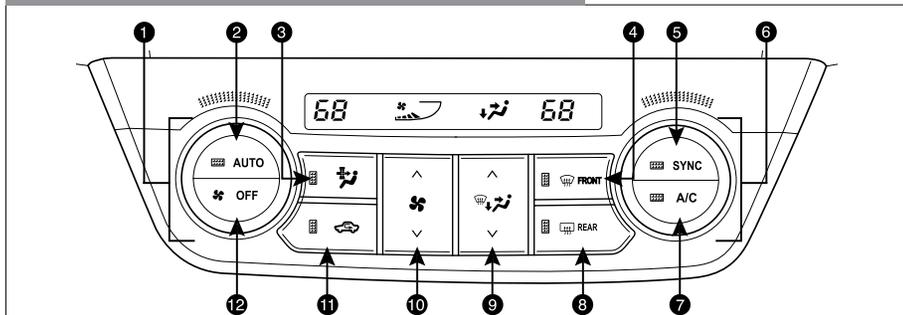

- 1 Temperature selector (driver side)
- 2 Automatic climate control ON
Adjust the temperature setting, and airflow vents and fan will adjust automatically.
- 3 Micro dust and pollen filter ON/OFF
- 4 Windshield defogger
- 5 Synchronizes driver, front passenger and rear temperature settings
- 6 Temperature selector (front passenger side)
- 7 Air Conditioning ON/OFF
- 8 Outside mirror¹/ Rear window defogger
- 9 Airflow vent
In “” or “” mode, use fresh air (“” indicator OFF) to reduce window fogging.
- 10 Fan speed
- 11 Recirculate cabin air (fresh air when OFF)
- 12 Climate control OFF

¹ If equipped


Manual Air Conditioning

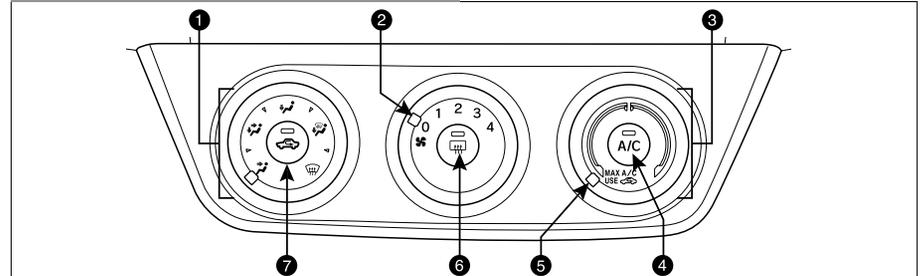

- 1 Airflow vent
In “” or “” mode, use fresh air (“” indicator OFF) to reduce window fogging.
- 2 Fan speed
- 3 Temperature selector
- 4 Air Conditioning ON/OFF
- 5 Select for maximum cooling.
- 6 Outside rearview mirror¹/Rear window defogger
- 7 Recirculate cabin air (fresh air when OFF)


¹ If equipped

Clock

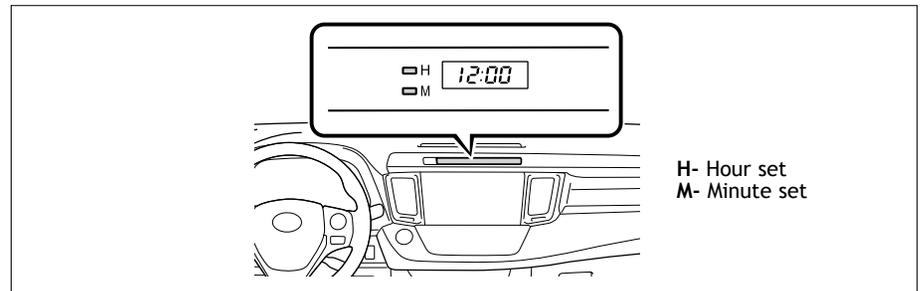


H- Hour set
M- Minute set

Light control-Instrument panel

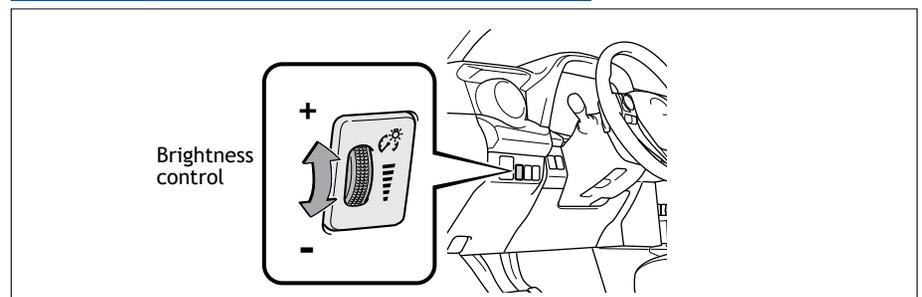


With the dial turned fully up, instrument panel lights will not dim when the headlights are turned ON.

Power outlets-12V DC

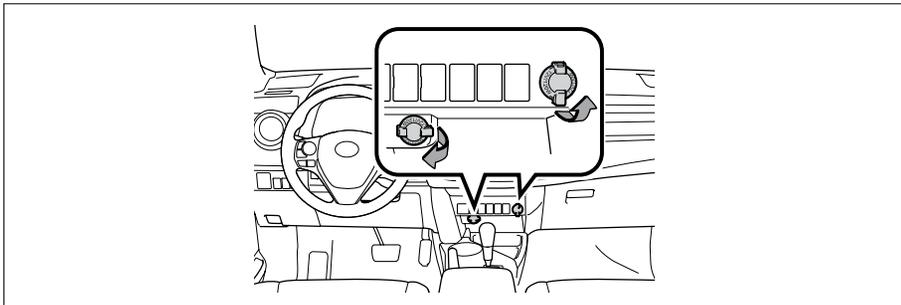

NOTE: Designed for car accessories. Engine switch must be in the “ACC” or “ON” position to be used.

Vehicle Stability Control (VSC) OFF button

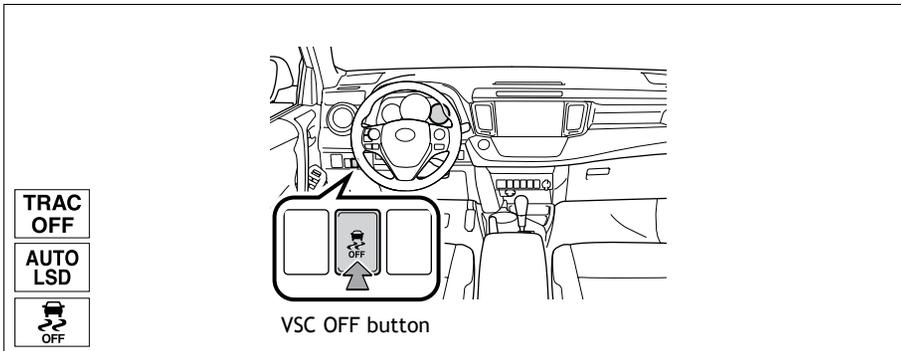


The VSC OFF button is used to switch between modes related to the TRAC, VSC and Auto LSD functions (2WD models.)


Refer to Section 4-5 of the *Owner’s Manual* for more information.

Cruise control

Turning system ON/OFF

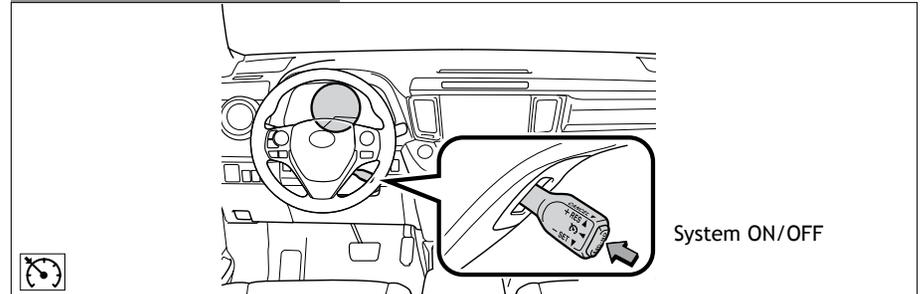

Functions

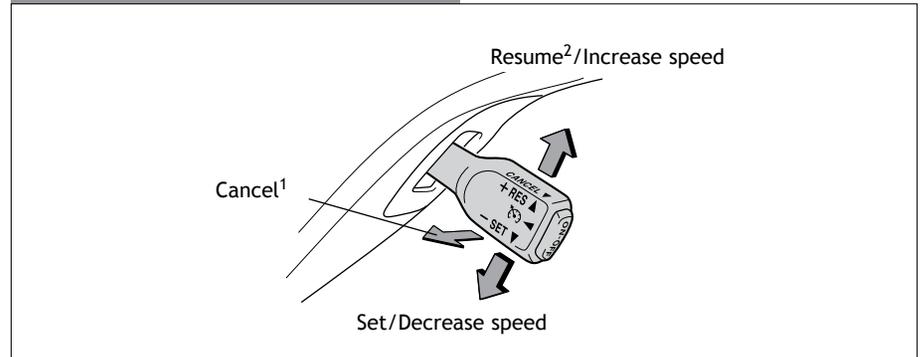


¹ The set speed may also be cancelled by depressing the brake pedal.

² The set speed may be resumed once vehicle speed exceeds 25 mph.

Refer to the *Owner’s Manual* for more details.


Multi-Information Display

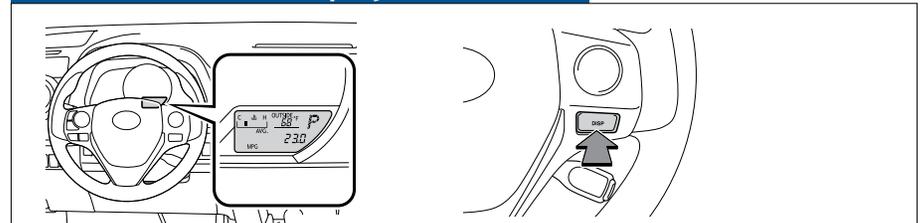

Push “DISP” to scroll through the following information screens:

- (1) Odometer
- (2) Trip meters “A” and “B”
- (3) Current fuel consumption
- (4) Average fuel consumption
- (5) Average vehicle speed
- (6) Driving range

Blind Spot Monitor (BSM) with Rear Cross Traffic Alert (RCTA) (if equipped)

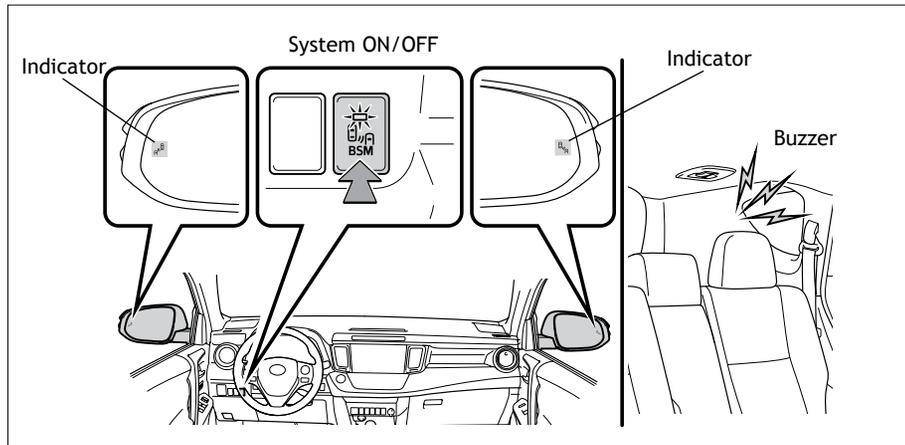


Blind Spot Monitor (BSM) uses an indicator light in the outside mirror to alert the driver to a vehicle in the blind spot.

When backing up the vehicle, Rear Cross Traffic Alert (RCTA) uses an indicator light in the outside mirror and an audible sound to alert the driver if another vehicle is approaching from the left or right.


Refer to the *Owner's Manual* for more details on this system before attempting to use it.

Lane Departure Alert (LDA)

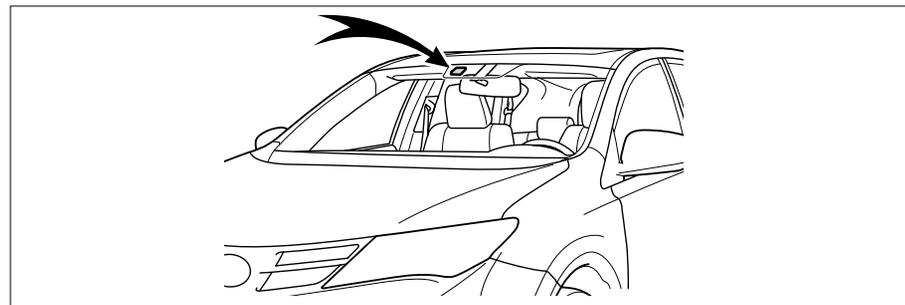

The Lane Departure Alert recognizes the visible lane markers using a camera as a sensor and alerts the driver with beeping and flashing indicators when the vehicle deviates from its lane.


Seat belts

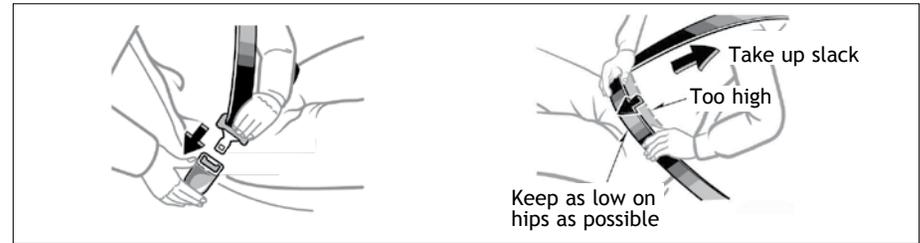

If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.

Tire Pressure Monitoring (warning) System

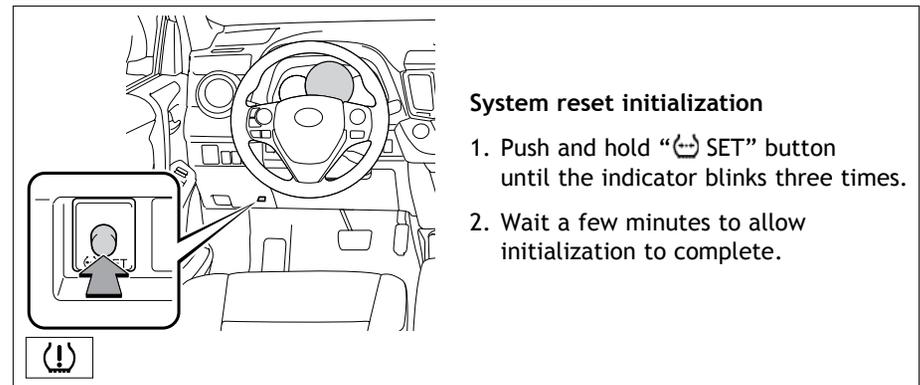

System reset initialization

1. Push and hold "SET" button until the indicator blinks three times.
2. Wait a few minutes to allow initialization to complete.


After adjusting tire pressures, or after tires have been rotated or replaced, turn the engine switch to "ON" and press and hold the "SET" button until indicator blinks three times. Let the vehicle sit for a few minutes to allow initialization to complete.

Refer to the load label on the door jamb or the *Owner's Manual* for tire inflation specifications.

If the tire pressure indicator flashes for more than 60 seconds and then remains on, take the vehicle to your local Toyota dealer.


NOTE: The warning light may come on due to temperature changes or changes in tire pressure from natural air leakage. If the system has not been initialized recently, setting the tire pressures to factory specifications should turn off the light.

Doors-Child safety locks

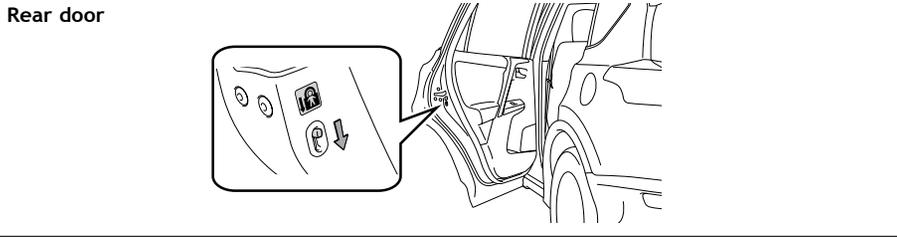


Moving the lever downward will allow the door to be opened only from the outside.


Seat belts-Shoulder belt anchor

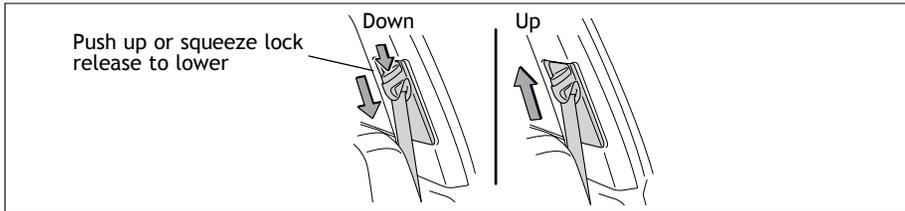

Spare tire & tools

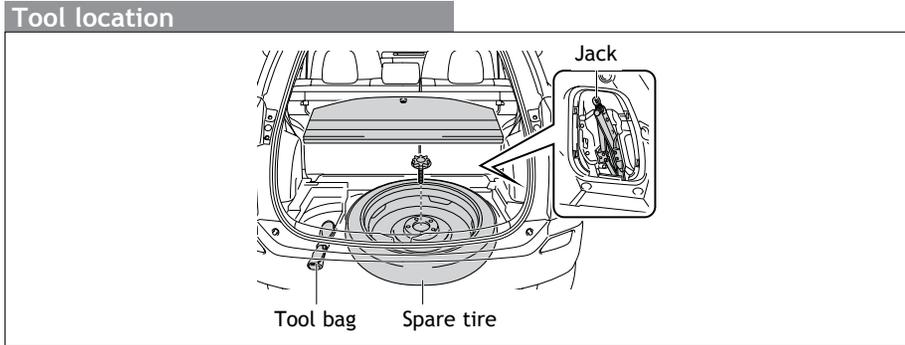

Removing the spare tire

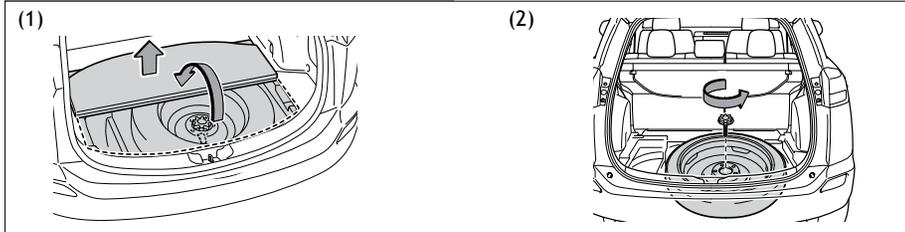

- (1) Remove the rear deck board.
- (2) Loosen the center fastener that secures the spare tire.

Refer to the *Owner's Manual* for tire changing and jack positioning procedures.

Star Safety System™

All new Toyota vehicles come standard with the Star Safety System™, which combines Vehicle Stability Control (VSC), Traction Control (TRAC), Anti-lock Braking System (ABS), Electronic Brake-force Distribution (EBD), Brake Assist (BA) and Smart Stop Technology (SST).

Vehicle Stability Control (VSC)

VSC helps prevent loss of traction during cornering by reducing engine power and applying brake force to selected wheels.

Toyota's VSC monitors steering angle and the direction your vehicle is traveling. When it senses that the front or rear wheels begin to lose traction, VSC reduces engine power and applies braking to selected wheels. This helps restore traction and vehicle control.

Traction Control (TRAC)

VSC helps prevent loss of traction during cornering by reducing engine power, and Traction Control helps maintain traction on loose gravel and wet, icy, or uneven surfaces by applying brake force to the spinning wheel(s).

Toyota's TRAC sensors are activated when one of the drive wheels starts to slip. TRAC limits engine output and applies the brakes to the spinning wheel. This transfers power to the wheels that still have traction to help keep you on track.

Anti-Lock Brake System (ABS)

ABS helps prevent brakes from locking up by "pulsing" brake pressure to each wheel. This limits brake lockup and helps provide directional control for the current road conditions.

Toyota's ABS sensors detect which wheels are locking up and limits wheel lockup by "pulsing" each wheel's brakes independently. Pulsing releases brake pressure repeatedly for fractions of a second. This helps the tires attain the traction that current road conditions will allow, helping you to stay in directional control.

Electronic Brake Force Distribution (EBD)

Toyota's ABS technology has Electronic Brake-force Distribution (EBD) to help maintain control and balance when braking. Abrupt stops can cause a vehicle to tilt forward, reducing the braking power of the rear wheels. EBD responds to sudden stops by redistributing brake force to enhance the braking effectiveness of all four wheels.

Brake Assist (BA)

Brake Assist is designed to detect sudden or "panic" braking, and then add braking pressure to help decrease the vehicle's stopping distance. When there's only a split second to react, Brake Assist can add additional brake pressure more quickly than just the driver alone can.

SAFETY AND EMERGENCY FEATURES

Smart Stop Technology (SST)

Smart Stop Technology automatically reduces driving torque when the accelerator and brake pedals are pressed simultaneously under certain conditions.

SST engages when the accelerator is depressed first and the brakes are applied firmly for longer than one-half second at speeds greater than five miles per hour.


SST doesn't engage if the brake pedal is depressed before the accelerator pedal, allowing vehicles to start on a steep hill and safely accelerate without rolling backward.

Floor mat installation

There are two types of Toyota floor mats: carpeted and all-weather. Each vehicle has model-specific floor mats. Installation is easy.

To keep your floor mat properly positioned, follow these steps:

- Only use floor mats designed for your specific model.
- Use only one floor mat at a time, using the retaining hooks to keep the mat in place.
- Install floor mats right side up.

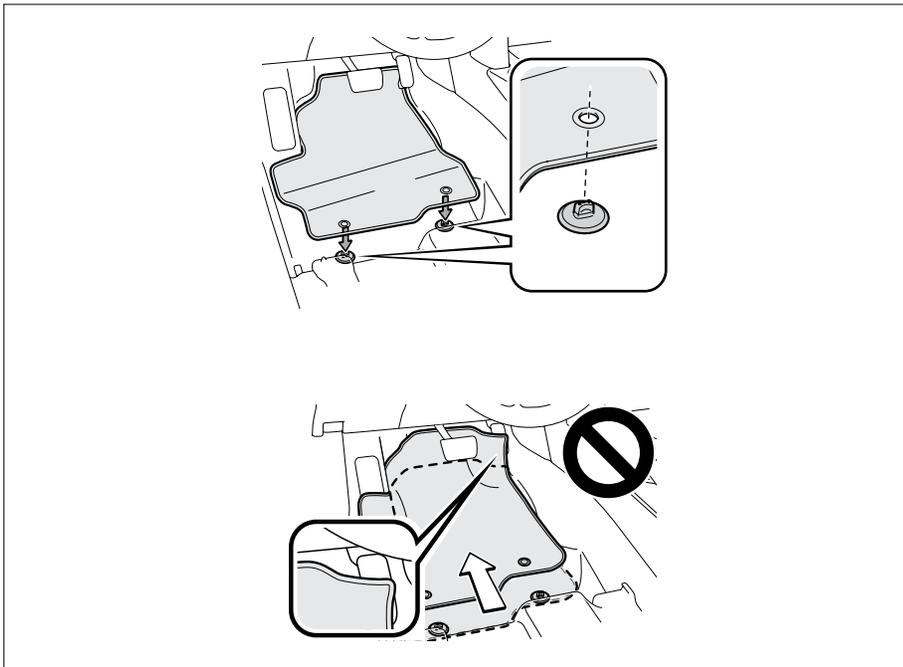


BLUETOOTH® DEVICE PAIRING SECTION

To begin the Bluetooth® Pairing process, press the HOME button on the faceplate of your Toyota Vehicle Entune™ Multimedia Head Unit.¹

Bluetooth® Pairing for Android® phone and Entune™ touch screen system

Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all Android mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.²

Initiate Bluetooth® on your Android®

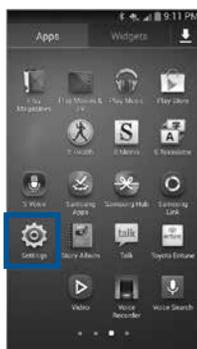


STEP 1
From your APPS SCREEN, select SETTINGS



STEP 2
Select CONNECTIONS and select BLUETOOTH



STEP 3
Ensure BLUETOOTH is ON

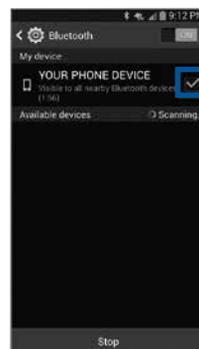

STEP 4
Select YOUR PHONE DEVICE to make it discoverable.

Phone will seek out Bluetooth devices while remaining discoverable.



STEP 5
While your Android device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

Initiate Bluetooth® on your Entune™ Multimedia Head Unit


Once you have Bluetooth enabled on your phone and ready to pair, you will need to initiate Bluetooth on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.




STEP 6
On your Toyota Vehicle Entune Multimedia Head Unit, Select SETUP BUTTON on the Home Screen.



STEP 7
Select BLUETOOTH

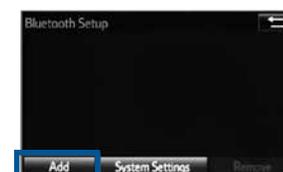

STEP 8
Select ADD, to add your phone device

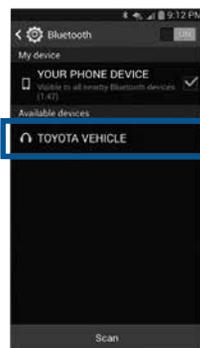

STEP 9
Back on your smartphone, you can now select your TOYOTA VEHICLE in Bluetooth Settings.

You may need to enter the provided Bluetooth PIN on your phone.



STEP 10
Your smartphone is now paired with Entune.




STEP 11
Once paired, Entune will attempt to connect audio and contacts on your phone.

¹ To determine which head unit is installed in your vehicle, refer to page 19.

² Some Android devices may have slightly different SETTINGS screen layout depending on manufacturer of device and Android OS version.


Initiate Bluetooth® on your Entune™ Multimedia Head Unit (continued)

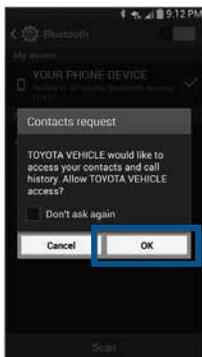

STEP 12

Using your smartphone, you will need to allow Entune access to your messaging and contacts

It is recommended to check the "Don't ask again" box, so as not to have to press OK every time the phone makes a Bluetooth connection with your Toyota

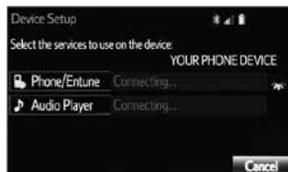

STEP 13

A confirmation will appear once your phone has been paired and connected.

Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:
www.toyota.com/connect

Your Toyota Owner's Manual
Located in the vehicle glovebox

Toyota Customer
Experience Center
(800) 331-4331


Disclosures

- This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.
1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
 2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
 3. Android is a trademark of Google, Inc. All rights reserved. Google is not a participant in or sponsor of this promotion.
 4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.
 5. Bluetooth Pairing Guide for select 2015 models.

Bluetooth® Pairing for iPhone® and Entune™ touch screen system


Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all iPhone mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to "talk" to each other and form a connection. Bluetooth Pairing Guide for select 2015 models.

Initiate Bluetooth® on your iPhone®

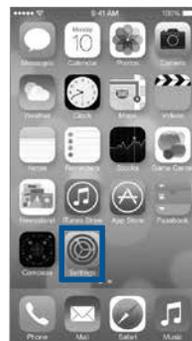

STEP 1

From the HOME SCREEN, select SETTINGS

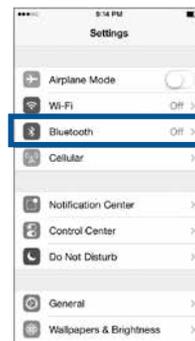


STEP 2

Select BLUETOOTH



STEP 3

Ensure BLUETOOTH is ON

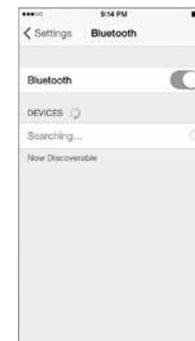

STEP 4

Your iPhone will seek out Bluetooth devices while remaining discoverable



STEP 5

While your iPhone device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

CONTINUE ON THE NEXT PAGE...

Initiate Bluetooth® on your Entune™ Multimedia Head Unit

Once you have Bluetooth enabled on your phone and ready to pair, you will need to initiate Bluetooth on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.



STEP 6
Select **SETUP** BUTTON on the Home Screen.



STEP 7
Select **BLUETOOTH**



STEP 8
Select **ADD**, to add your phone device



STEP 9
Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.


You may need to enter the provided Bluetooth PIN on your phone.



STEP 10
Your smartphone is now paired with Entune.



STEP 11
Once paired, Entune will attempt to connect audio and contacts on your phone.

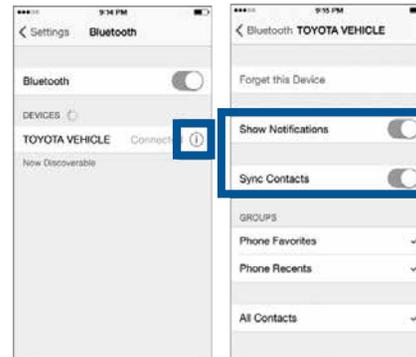

STEP 12
Using your smartphone, you may need to allow Entune access to your messaging and contacts
Only current iPhone text messages can be viewed on the head unit. iPhone does not allow text message reply.



STEP 13
A confirmation will appear once your phone has been paired and connected.

Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:
www.toyota.com/connect

Your Toyota Owner's Manual
Located in the vehicle glovebox

Toyota Customer Experience Center
(800) 331-4331


Disclosures

- This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.
1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
 2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
 3. Android is a trademark of Google, Inc. All rights reserved. Google is not a participant in or sponsor of this promotion.
 4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.
 5. Bluetooth Pairing Guide for select 2015 models.

Bluetooth® Pairing for Windows Phone® and Entune™ touch screen system

Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all Windows Phone mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection. Bluetooth Pairing Guide for select 2015 models.

Initiate Bluetooth® on your Windows Phone®

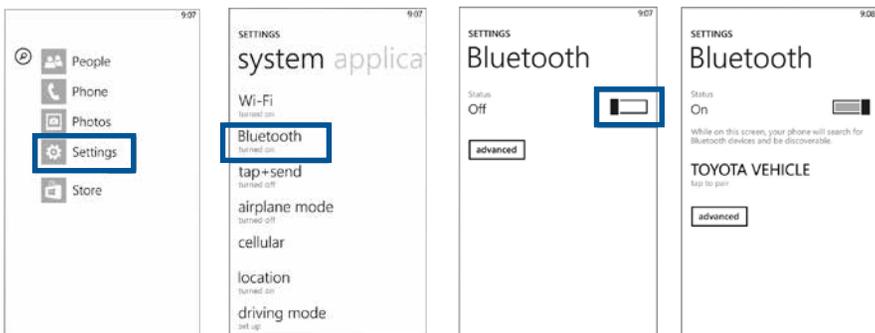

- STEP 1**
From your APP LIST, select **SETTINGS**
- STEP 2**
Select **BLUETOOTH**
- STEP 3**
Ensure **BLUETOOTH** is **ON**
- STEP 4**
Phone will seek out Bluetooth devices while remaining discoverable



- STEP 5**
While your iPhone device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.
CONTINUE ON THE NEXT PAGE...

Initiate Bluetooth® on your Entune™ Multimedia Head Unit

Once you have Bluetooth® enabled on your phone and ready to pair, you will need to initiate Bluetooth® on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.



- STEP 6**
On your Toyota Vehicle Entune Multimedia Head Unit, Select **SETUP BUTTON** on the Home Screen.
- STEP 7**
Select **BLUETOOTH**
- STEP 8**
Select **ADD**, to add your phone device




- STEP 9**
Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.
You may need to enter the provided Bluetooth PIN on your phone.
- STEP 10**
Your smartphone is now paired with Entune.
- STEP 11**
Once paired, Entune will attempt to connect audio and contacts on your phone.

Initiate Bluetooth® on your Entune™ Multimedia Head Unit (continued)



STEP 12

Using your smartphone, you may need to allow Entune access to your contacts

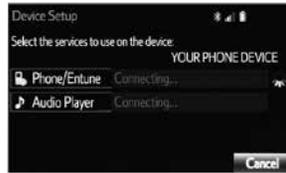

STEP 13

A confirmation will appear that your phone has been paired and connected.

Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:
www.toyota.com/connect

Your Toyota Owner's Manual
Located in the vehicle glovebox

Toyota Customer Experience Center
 (800) 331-4331

- Disclosures
- This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.
1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
 2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
 3. Android is a trademark of Google, Inc. All rights reserved. Google is not a participant in or sponsor of this promotion.
 4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.
 5. Bluetooth Pairing Guide for select 2015 models.

