

2015 Prius
Quick Reference Guide

2015 Prius

INDEX

This *Quick Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Quick Reference Guide* is not intended as a substitute for the *Owner's Manual* located in your vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Prius.

A word about safe vehicle operations

This *Quick Reference Guide* is not a full description of Prius operations. Every Prius owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Quick Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

OVERVIEW

| | |
|---------------------------------------|----------|
| Digital Instrumentation | 4 |
| Engine maintenance | 9 |
| Fuel tank door release and cap | 8 |
| Hood release | 8 |
| Indicator symbols | 4-5 |
| Instrument panel | 2-3 |
| Keyless entry^{1,2} | 6 |
| Light control-Instrument panel | 9 |
| Smart Key System^{1,2} | 7 |

FEATURES/OPERATIONS

| | |
|--|-----------|
| Air Conditioning/Heating | 16 |
| Audio | 18-19 |
| Auto lock/unlock^{1,2} | 10 |
| Bluetooth® Device Pairing | 22 |
| Clock | 22 |
| Cruise control | 20 |
| Dynamic Radar Cruise Control | 20-21 |
| EV Mode | 12 |
| Garage door opener (HomeLink®) ³ | 23 |
| Hill-start Assist Control (HAC) | 23 |
| Heated Seats | 16 |
| Hybrid Synergy Drive System | 10 |
| Lights¹ & turn signals | 15 |
| LKA (Lane Keep Assist) | 21 |
| Moonroof | 17 |
| Multi-Information Display² | 22 |
| Parking brake | 12 |
| Power outlets | 19 |
| Seat adjustments-Front | 13 |
| Seat-Folding down rear seat | 13 |
| Seats-Head restraints | 13 |
| Solar Powered Ventilation System | 17 |
| Steering wheel switches | 19 |
| Tilt and telescopic steering wheel | 12 |
| Transmission | 11 |
| Windows-Power | 14 |
| Windshield wipers & washers | 14 |

SAFETY AND EMERGENCY FEATURES

| | |
|---|-------|
| Doors-Child safety locks | 25 |
| Door locks | 25 |
| Floor mat installation | 27 |
| Seat belts | 24 |
| Seat belts-Shoulder belt anchor | 24 |
| Spare tire & tools | 25 |
| Star Safety System™ | 26-27 |
| Tire Pressure Monitoring (warning) System | 24 |

¹ Visit your Toyota dealer for information on customizing this feature.


² Programmable by customer. Refer to the *Owner's Manual* for instructions and more information.

³ HomeLink® is a registered trademark of Gentex Corporation.

OVERVIEW

Instrument panel

Steering wheel controls

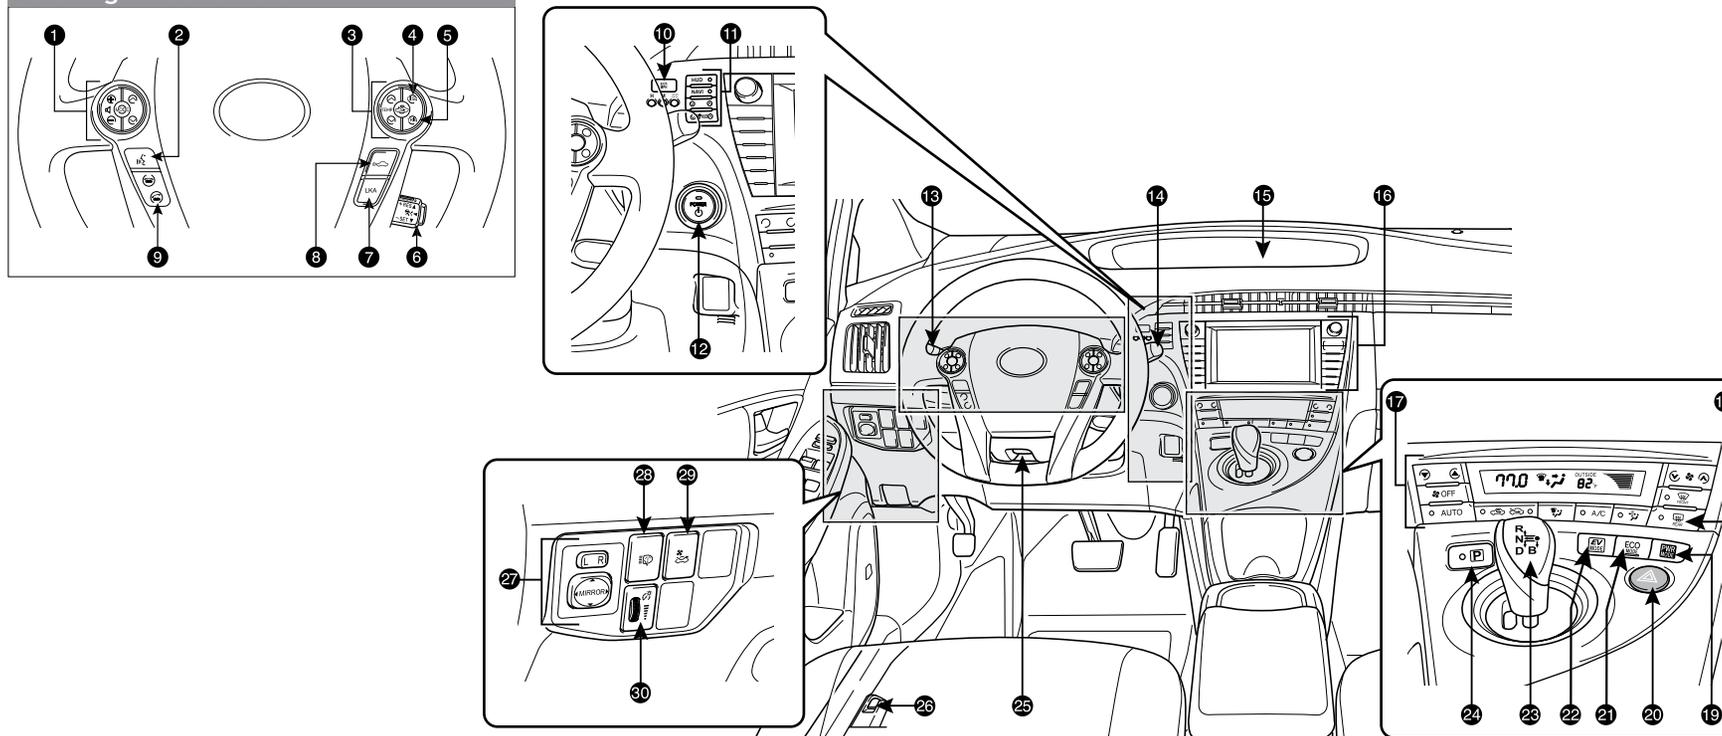

- ❶ Steering wheel audio controls^{2,3}
- ❷ Voice command button^{2,3}
- ❸ Steering wheel climate controls
- ❹ Multi-Information Display button
- ❺ “TRIP” button
- ❻ Cruise control/Dynamic Radar Cruise Control¹ switch
- ❼ “LKA” switch¹
- ❽ Dynamic Radar Cruise Control distance selection switch¹
- ❾ Telephone controls^{2,3}
- ❿ Mph or km/h button
- ⓫ Head-up display switches¹
- ⓬ Power button
- ⓭ Headlight and turn signal controls/Headlight, turn signal and front fog light controls¹
- ⓮ Wiper and washer controls
- ⓯ Multi-Information Display
- ⓰ Navigation system^{1,2}/Display Audio system^{1,3}
- ⓱ Air Conditioning controls


- ⓫ Rear window and outside rearview mirror defogger button
- ⓬ “PWR MODE” switch
- ⓭ Emergency flasher button
- ⓮ “ECO MODE” switch
- ⓯ “EV MODE” switch
- ⓰ Shift lever
- ⓱ “P” position switch
- ⓲ Tilt and telescopic steering lock release lever
- ⓳ Fuel filler door opener
- ⓴ Power rearview mirror controls
- ⓵ Headlight cleaner switch¹
- ⓶ Solar ventilation switch¹
- ⓷ Instrument panel light control

¹ If equipped

² For details, refer to the “Navigation System Owner’s Manual.”

³ For details, refer to the “Display Audio System Owner’s Manual.”

Digital Instrumentation

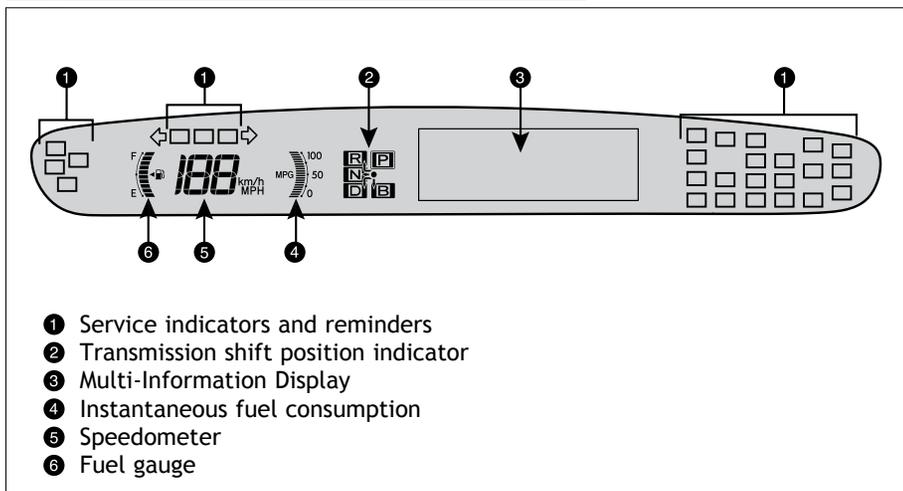

Indicator symbols

For details, refer to “Indicators and warning lights,” Section 2-2, 2014 Owner’s Manual.

- BRAKE Brake system warning¹
- Brake system warning light (yellow indicator)¹
- Driver seat belt reminder (alarm will sound if speed is over 12 mph)
- PASSENGER AIRBAG OFF AIRBAG ON Front passenger seat belt reminder (alarm will sound if speed is over 12 mph)
- Charging system warning¹
- PASSENGER AIRBAG OFF AIRBAG ON Front passenger occupant classification indicator
- CHECK Malfunction/Check Engine indicator¹
- Low fuel level warning
- Open door warning
- Airbag SRS warning¹
- Master warning¹
- Low Tire Pressure Warning¹


¹ If indicator does not turn off within a few seconds of starting hybrid system, there may be a malfunction. Have vehicle inspected by your Toyota dealer.

- Electric power steering system warning¹
- Immobilizer system indicator
- Headlight low/high beam indicator
- Turn signal indicator
- READY READY indicator
- ECO ECO Driving Indicator Light
- EV EV indicator
- EV MODE EV Drive Mode indicator
- ECO MODE ECO Mode indicator
- PWR MODE Power Mode indicator
- Front fog light indicator
- Slip indicator/Hill-start Assist Control indicator¹
- SET Cruise control indicator²
- LKA Lane Keep Assist indicator
- ABS Anti-lock Brake System warning¹
- Automatic headlight leveling system warning¹
- PCS Pre-Collision System warning light¹
- High coolant temperature warning light¹

² If this light flashes, refer to “Cruise control,” or “Dynamic radar cruise control,” Section 2-4, 2015 Owner’s Manual.


Keyless entry

Locking operation

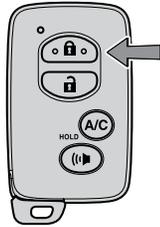

Push 


Unlocking operation

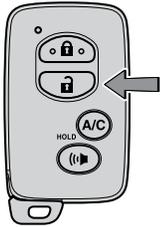

Push ONCE: Driver door
TWICE: All doors 

NOTE: If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.

Remote Air Conditioning system operation (if equipped)

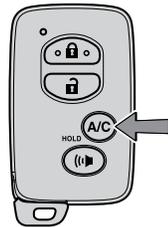

Will automatically shut off after three minutes, or if a door is opened.

Push and hold 


Panic button



Push and hold 

Smart Key System (if equipped)

Start function

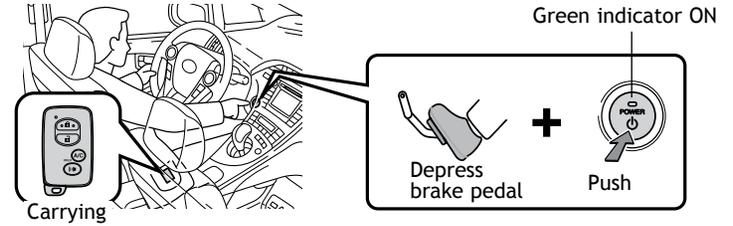

Power (without starting Hybrid System)


Without depressing the brake pedal, pressing the “POWER” switch will change the operation mode in succession from:

ACCESSORY Accessories such as the radio will operate.

ON Power ON; Hybrid System is not engaged.


OFF All systems OFF.

Locking

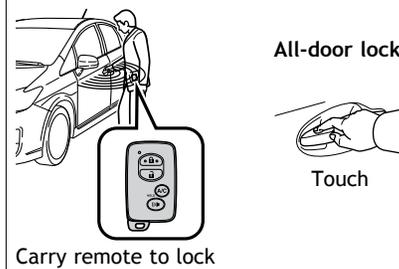


Carry remote to lock

Unlocking

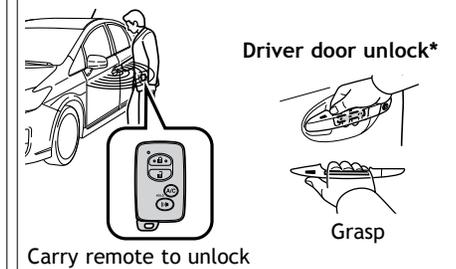

Carry remote to unlock

Back door lock/unlock (if equipped)

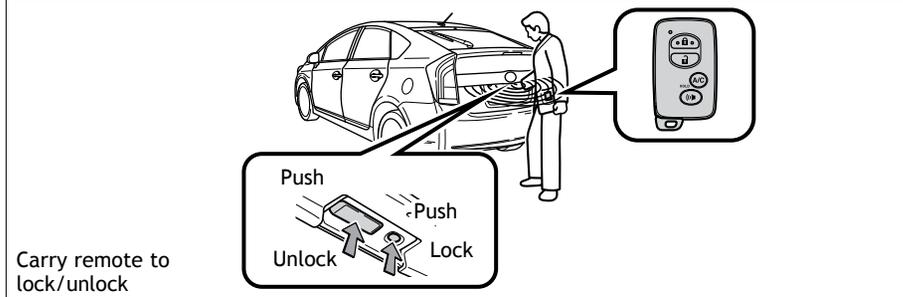


Carry remote to lock/unlock


* Driver door unlocking function can be programmed to unlock driver door only, or all doors. Grasping passenger door handle or pushing unlock button on rear hatch will unlock all doors. (If equipped)

NOTE: Doors may also be locked/unlocked using remote.


Fuel tank door release and cap

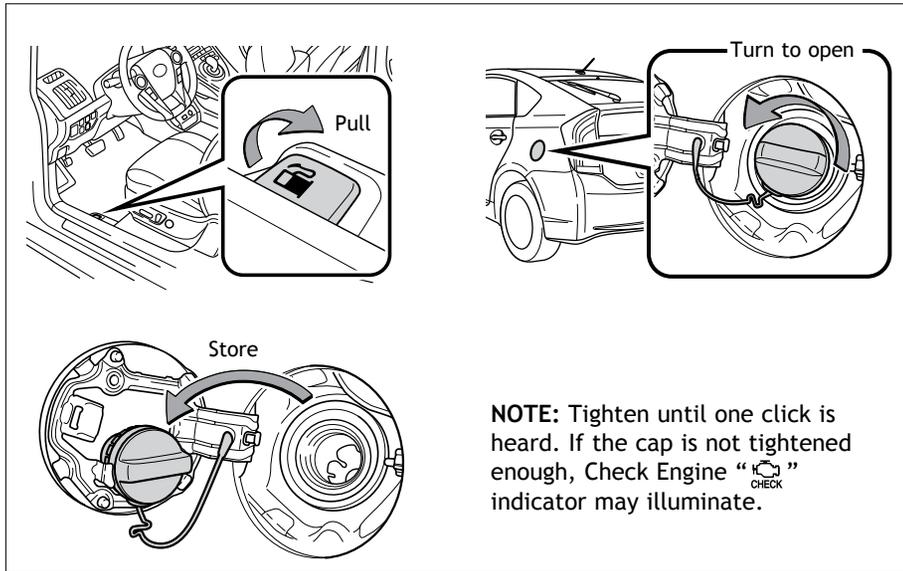


Hood release

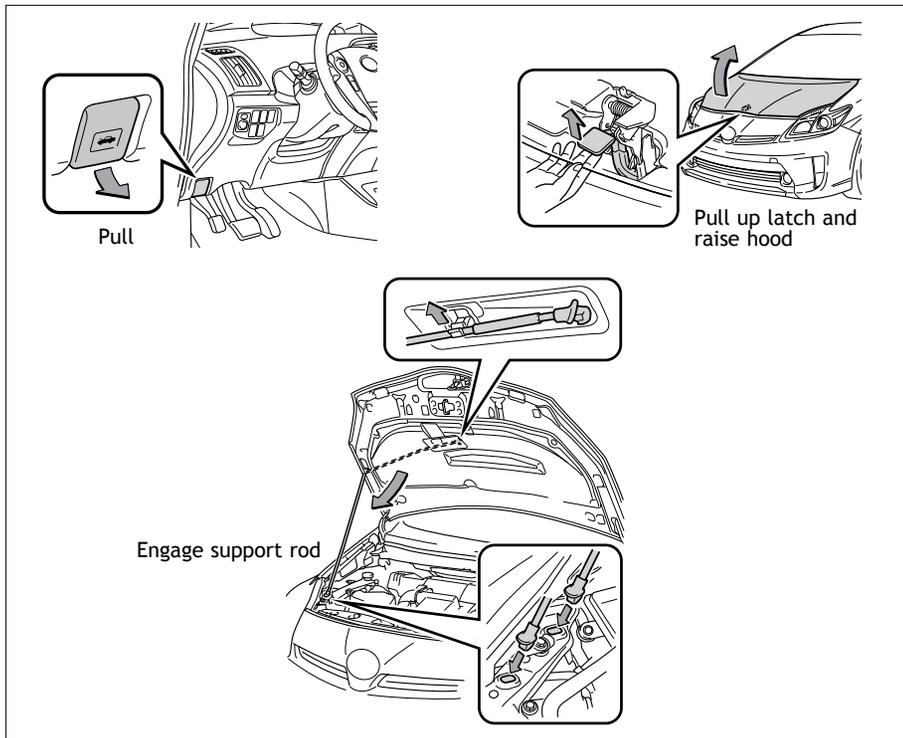

Light control-Instrument panel

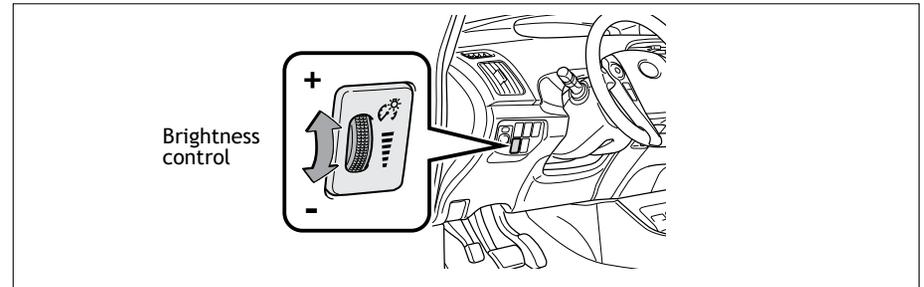

Engine maintenance

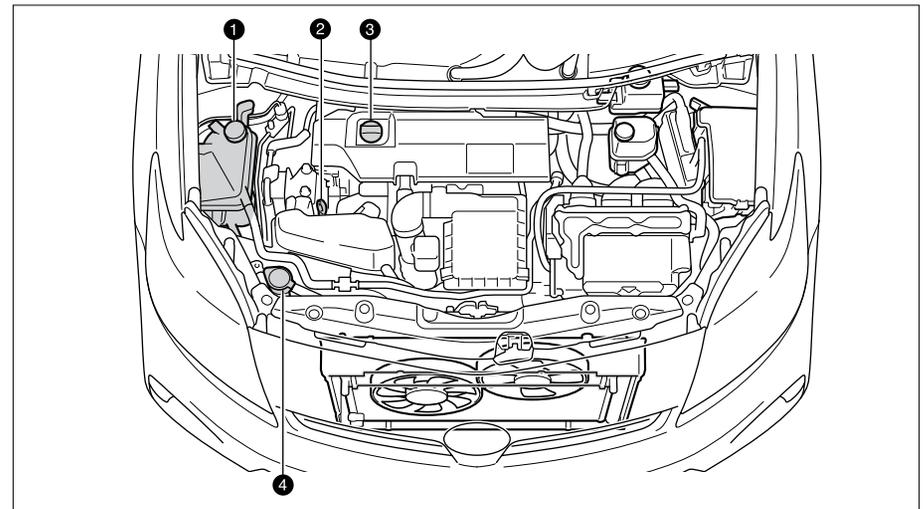

- ❶ Engine coolant reservoir
- ❷ Engine oil level dipstick
- ❸ Engine oil filler cap
- ❹ Windshield washer fluid tank

NOTE: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the “Warranty & Maintenance Guide.”

FEATURES/OPERATIONS

Hybrid Synergy Drive System

The Hybrid Synergy Drive System utilizes a computer-controlled gasoline engine and electric motor to provide the most efficient combination of power for the vehicle. To conserve energy, when the brakes are applied the braking force generates electricity which is then sent to the traction battery. In addition, the engine shuts off when the vehicle is stopped. The benefits are better fuel economy, reduced vehicle emissions and improved performance.

NOTE: Fuel consumption and energy information of the hybrid system are shown on the Multi-Information Display.

Tips for improved fuel economy

- Ensure tire pressures are maintained at levels specified in the *Owner's Manual*.
- When possible, link trips to reduce engine cold starts.
- Avoid driving at speeds that are higher than necessary, especially on the highway.
- When possible, avoid sudden stops to maximize regenerative braking energy.
- Minimize use of the Air Conditioning.

Starting your vehicle



(1) Depress the brake pedal, and press the "POWER" switch briefly and firmly.

(2) The "READY" light will blink. After a few seconds, when the light remains steady and a beep sounds, you may begin driving.


Auto lock/unlock

Automatic door locks can be programmed to operate in two different modes, or turned OFF.

- Doors lock when shifting from Park.
- Doors lock when the vehicle speed is approximately 12 mph or higher.
- Doors unlock when shifting into Park.
- Doors unlock when the driver's door is opened within 10 seconds after turning the "POWER" switch OFF.

Refer to the *Owner's Manual* for more details.


Transmission

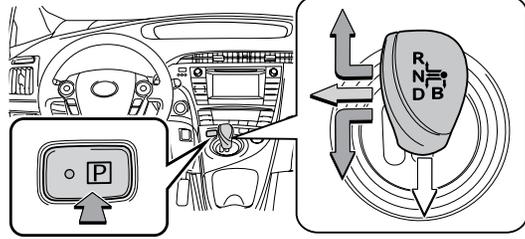

| | |
|----------|---------------|
| P | Park button |
| R | Reverse |
| N | Neutral |
| D | Drive |
| B | Engine brake* |

* The engine brake is the equivalent of downshifting. Shift to "B" when engine braking is desired (i.e. downhill driving, coasting to a stop, etc.).

ECO Mode

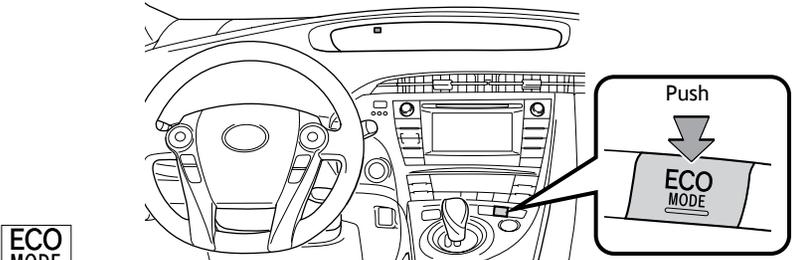


Push

ECO MODE

ECO Mode helps achieve lower fuel consumption during trips that involve frequent accelerating and braking.

Refer to the *Owner's Manual* for more details.

Power Mode

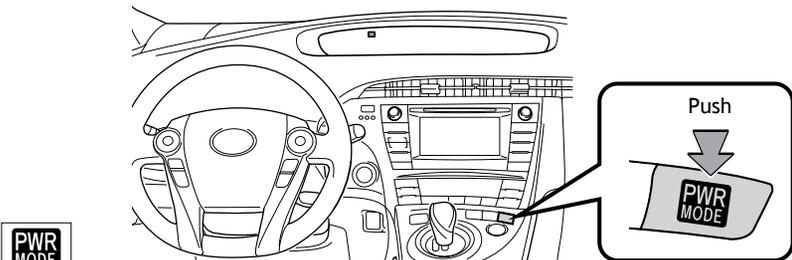


Push

PWR MODE

Use when a higher level of response is desired, such as when driving in mountainous regions.

Refer to the *Owner's Manual* for more details.


EV Mode

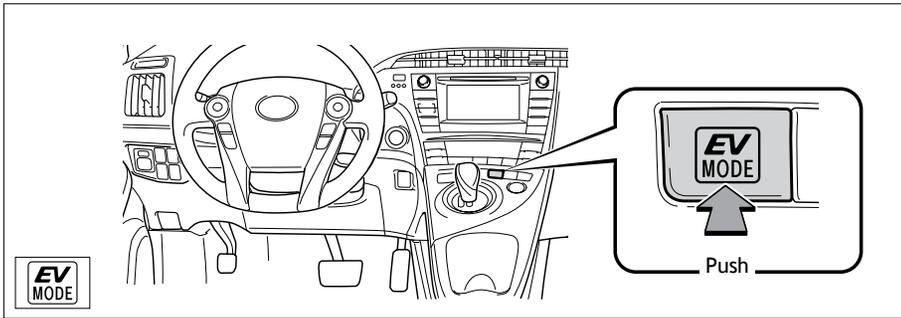

EV-Drive Mode allows the electric motor (traction motor), powered by the hybrid battery (traction battery), to be used to drive the vehicle under certain driving conditions.

Refer to the *Owner's Manual* for more details.


Tilt and telescopic steering wheel

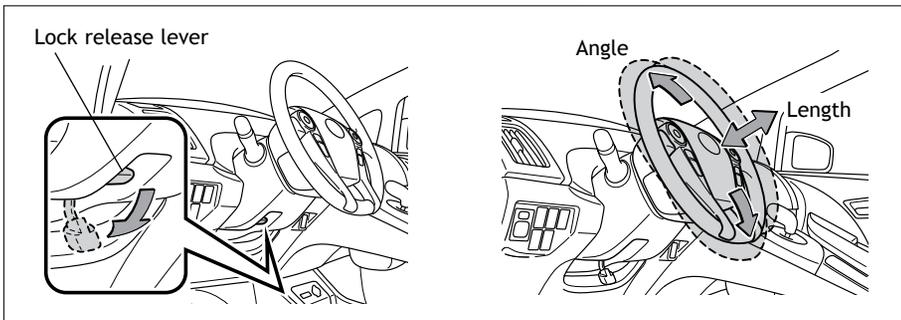


Hold wheel, push lever down, set angle and length, and return lever.

NOTE: Do not attempt to adjust while the vehicle is in motion.

Parking brake

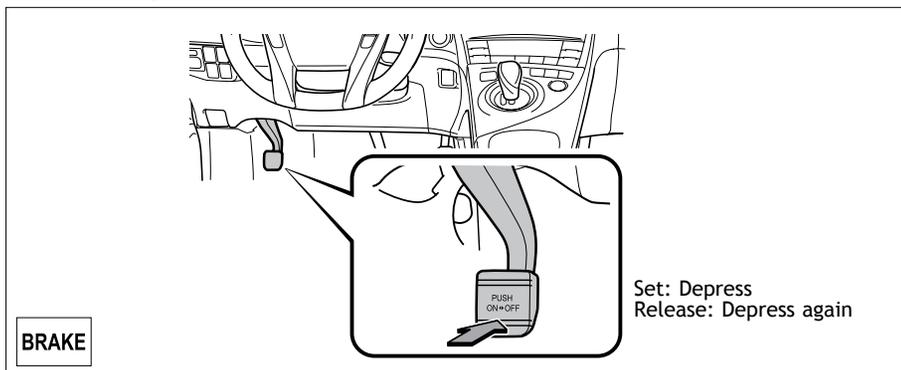


Seat adjustments-Front

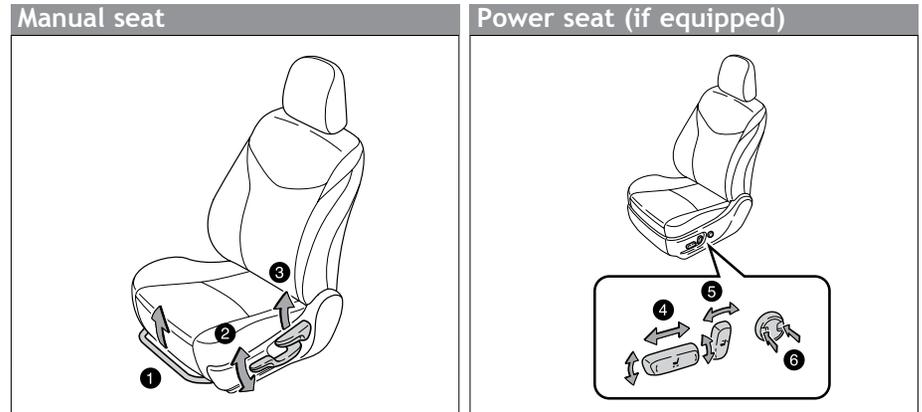


- ❶ Seat position (forward/backward)
- ❷ Height crank (driver side only)
- ❸ Seatback angle
- ❹ Seat position, cushion angle and height
- ❺ Seatback angle
- ❻ Lumbar support


Seats-Head restraints (if equipped)

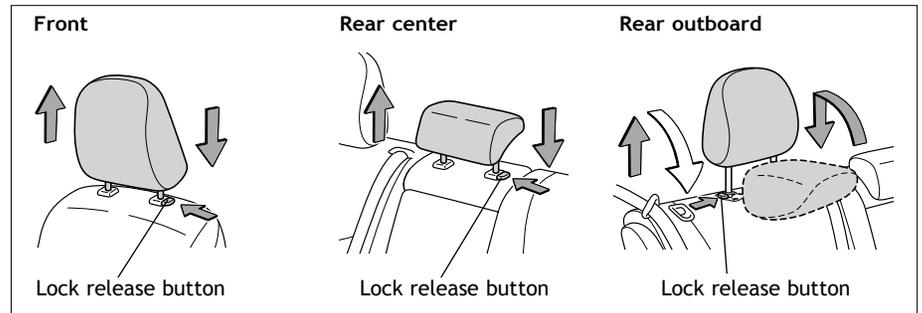

Seat-Folding down rear seat

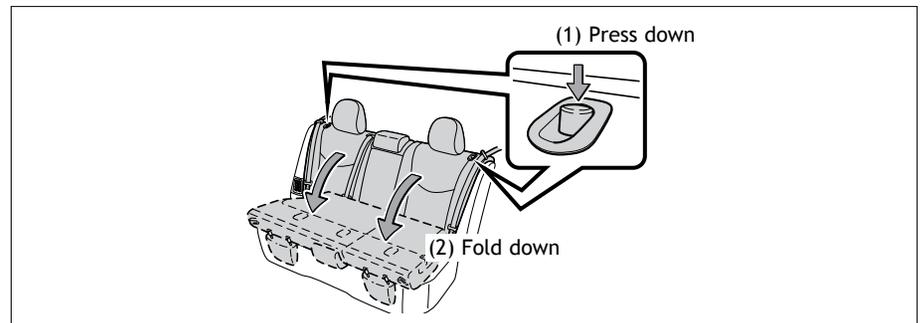

Windows-Power

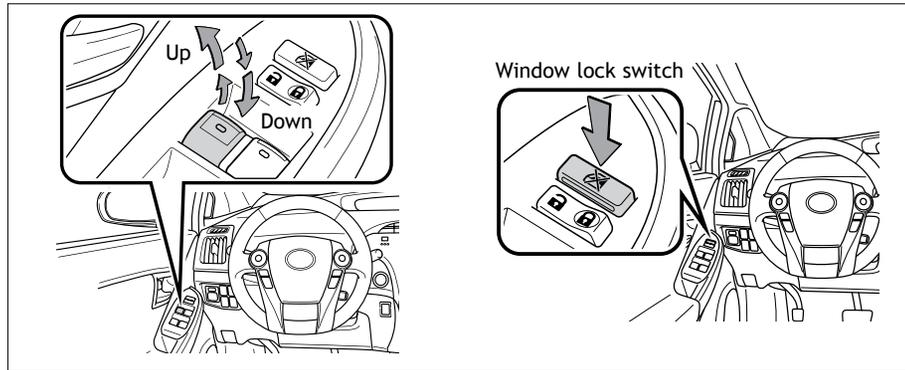


Automatic operation Push the switch completely down or pull it completely up and release to fully open or close. To stop the window partway, operate the switch in the opposite direction.


Window lock switch Deactivates all passenger windows. Driver's window remains operable.

Windshield wipers & washers

Front

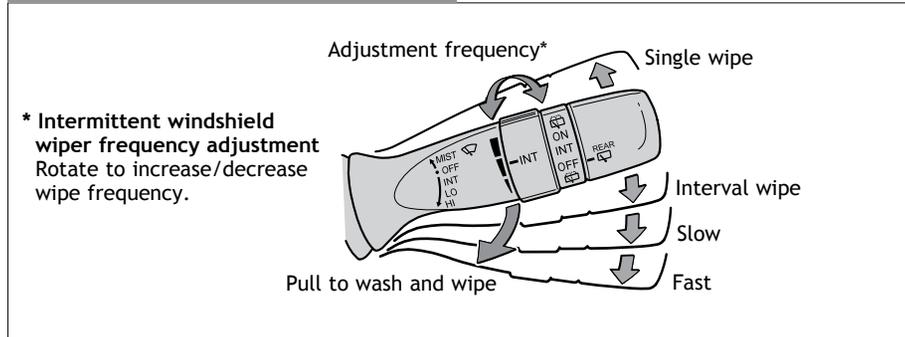


Rear

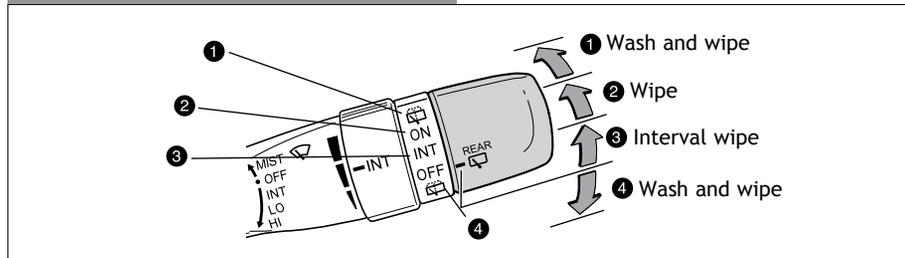



Lights & turn signals

Headlights

Type A

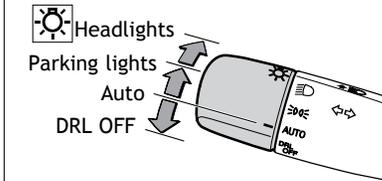


Type B

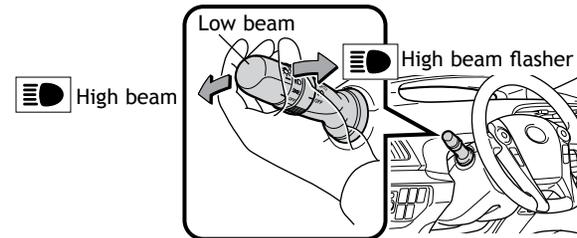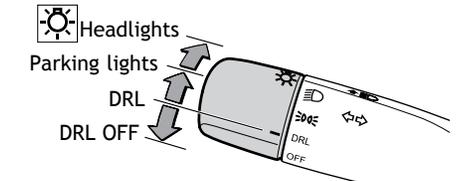


Automatic light cutoff system Automatically turns lights off after a delay of 30 seconds, or when lock switch on remote is pushed after all doors are locked.


Front fog lights (if equipped)

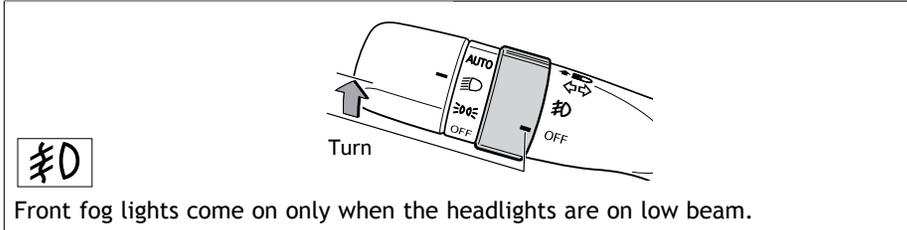

Turn signals

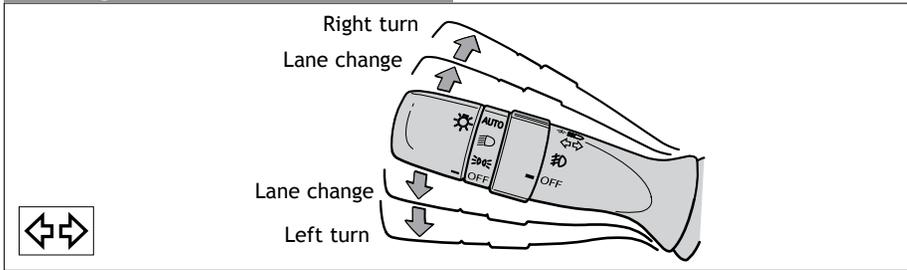

Heated Seats (if equipped)

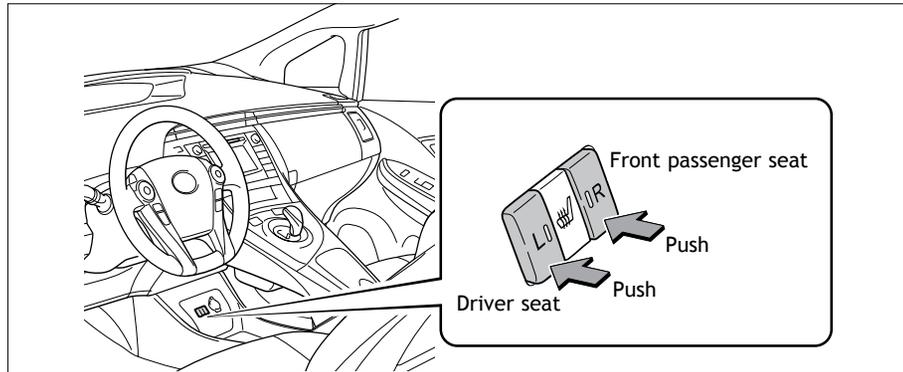

Air Conditioning/Heating

- 1 Temperature selector
- 2 Temperature setting display
- 3 Air outlet display
- 4 Fan speed display
- 5 Fan speed control
- 6 Windshield defogger
- 7 Micro dust and pollen filter mode (turns off automatically after 3 minutes)
- 8 Air Conditioning ON/OFF
- 9 Airflow vent
Use “” or “” mode to reduce window fogging.
- 10 Recirculate cabin air (fresh air when OFF)
- 11 Automatic climate control ON
Adjusting the temperature setting will cause the airflow vents, air intake and fan to adjust automatically.
- 12 Climate control OFF

Solar Powered Ventilation System (if equipped)

With the “POWER” switch in ON mode, turn on the solar ventilation switch.


The solar ventilation system allows ventilation of the vehicle interior when the vehicle is parked in direct sunlight.

Refer to the *Owner's Manual* for more details.

Moonroof (if equipped)


Tilting operation

Push and hold “OPEN” and then release to tilt up.
Push and hold “CLOSE” to close completely.

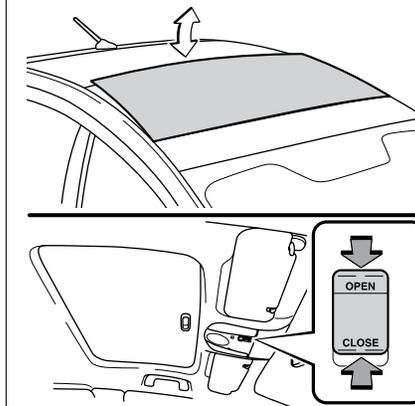

Sliding operation


Push and hold “OPEN” at the tilt up position and then release to open partway (recommended open position to minimize wind noise); push and hold “OPEN” again to open completely. Push and hold “CLOSE” to close partway, again to close completely.

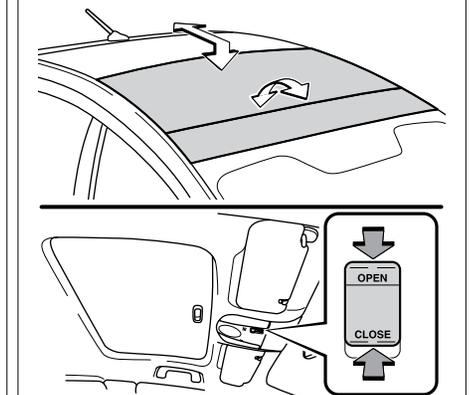


Audio

Refer to the “Display Audio System Owner’s Manual” for instructions and more information.


Type 1

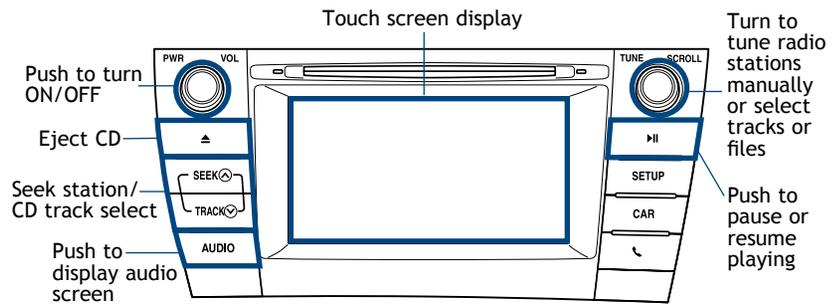

Type 2 (additional functions)

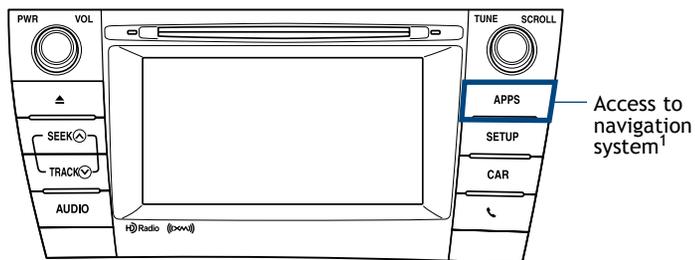


Type 3 (additional functions)²

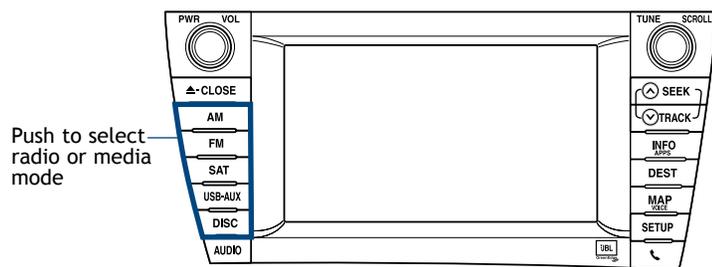

¹ Refer to the “Navigation System with Entune Quick Reference Guide.”
² Refer to the “Navigation System Owner’s Manual.”

USB/AUX port

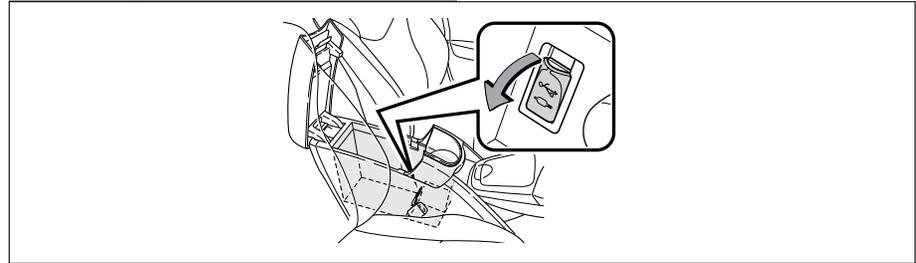


By inserting a USB or an auxiliary cable plug into the USB/AUX port, you can listen to music from a portable audio device through the vehicle’s speaker system while in USB/AUX mode.


Refer to the “Display Audio System Owner’s Manual” for instructions and more information.

Power outlets

Lower center console

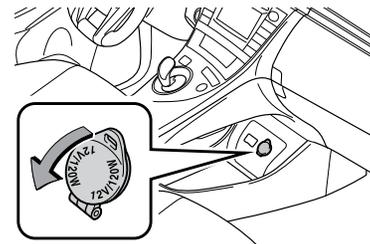


Center console box

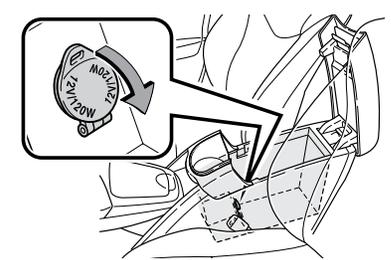


Power switch must be set at “ACCESSORY” or “ON” mode to be used.

Steering wheel switches

Audio control

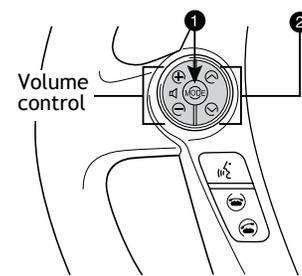


Climate control

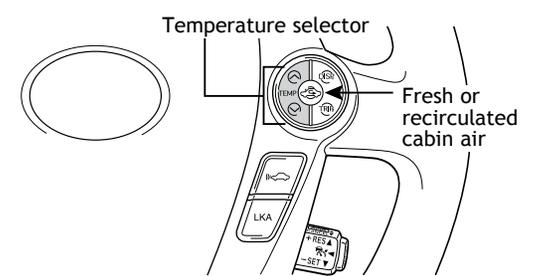


- 1 “MODE”**
 Push to turn audio ON and select an audio mode. Push and hold to mute/unmute or pause/resume the current operation.
- 2 “V A”**
 Use to search within the selected audio medium (radio, CD, iPod®, etc.).

Cruise control (if equipped)

Turning system ON/OFF

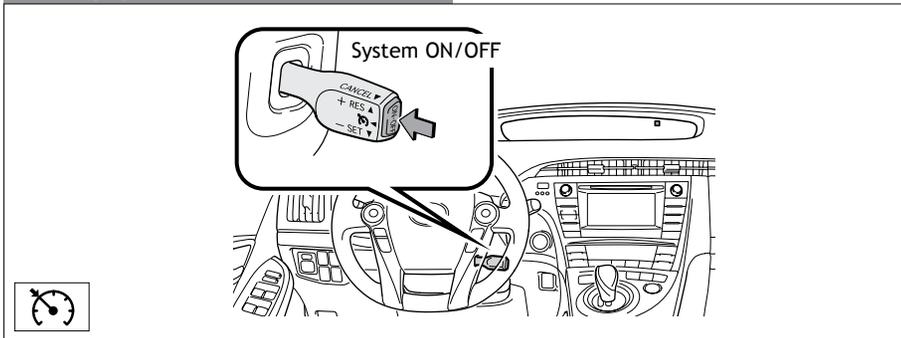

Functions

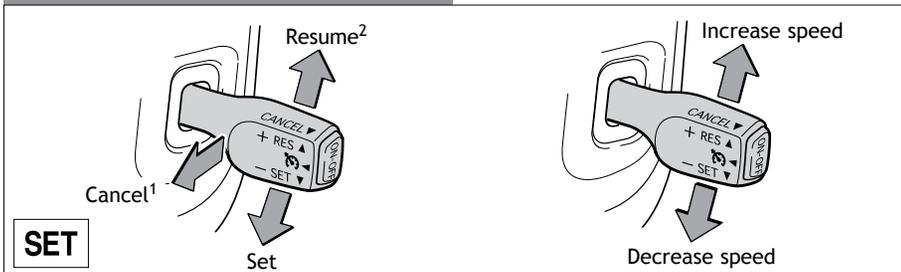


- ¹ The set speed may also be cancelled by depressing the brake pedal.
- ² The set speed may be resumed once vehicle speed exceeds 25 mph.

Dynamic Radar Cruise Control (if equipped)

Refer to the *Owner's Manual* for more details and complete safety precautions before attempting to use "Dynamic Radar Cruise Control."

Fixed speed mode

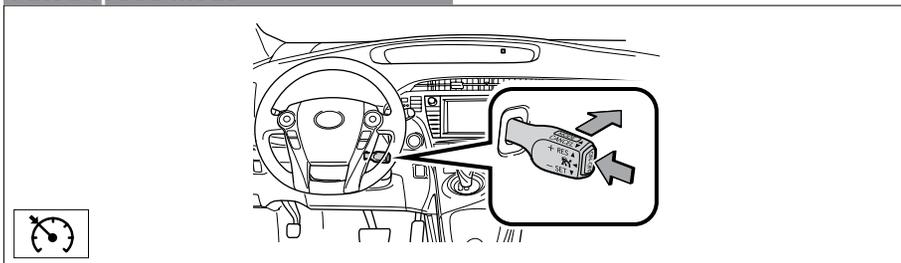


- (1) To select conventional/fixed speed control Push the ON-OFF button. Push the lever forward and hold until the "CC" indicator appears.
- (2) To set, cancel and resume a speed Refer to instructions in the *Cruise Control* section.

Distance control mode



Distance control mode will cruise at a set speed, decelerate to maintain selected distance from a slower vehicle traveling in front of you, and accelerate back up to the selected speed if the vehicle in front of you changes lanes or speeds up.

- (1) To select distance control mode Push the ON-OFF button. The "RADAR READY" or "CC" will come on.
- (2) To set, cancel or resume a speed Refer to instructions for Cruise Control section.

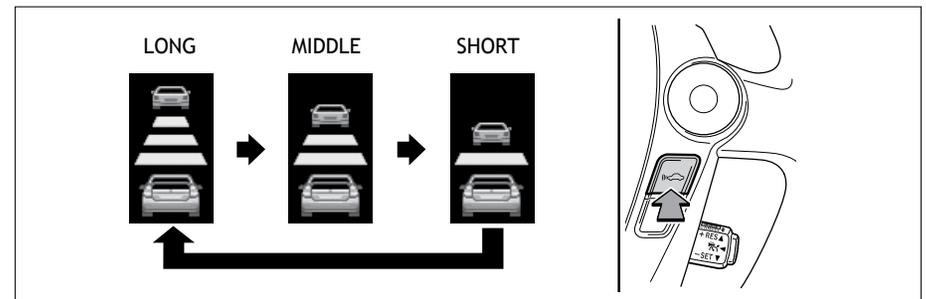

- (3) To change the vehicle-to-vehicle distance Push the distance button to cycle through the settings, which will change progressively from LONG to MIDDLE to SHORT.


LKA (Lane Keep Assist) (if equipped)



When activated, the LKA system camera detects clearly visible lane markings and alerts the driver when the vehicle strays from its lane. Driver may also experience a slight steering torque.

Refer to the *Owner's Manual* for more details.

Multi-Information Display

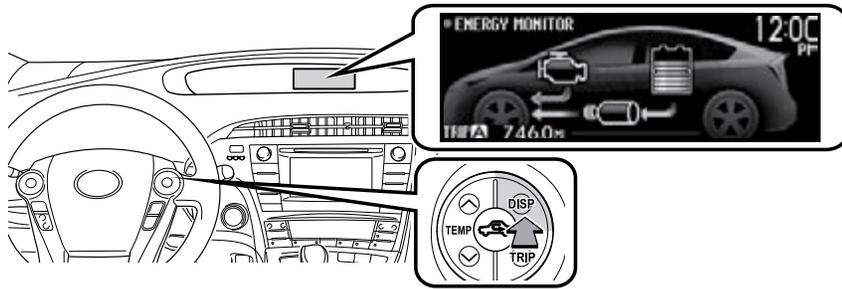


Push “DISP” to change between the following information screens:

- (1) Energy monitor
- (2) Hybrid System Indicator
- (3) 5-minute/1-minute interval fuel consumption display
- (4) Fuel consumption history display

Push and hold “DISP” to set up the displays.

Clock

H- Hour set
M- Minute set
:00- Round off
minutes

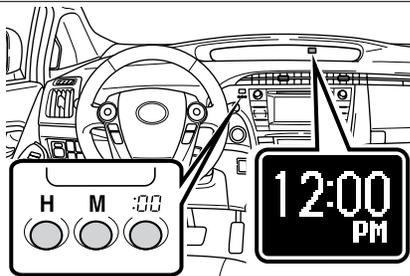

Refer to the *Owner’s Manual* for details on adjusting time.


Bluetooth® Device Pairing

1. Press the “SETUP” button
2. Turn the right dial and push to select “Bluetooth”.
3. Push to select “Bluetooth Pairing”.
4. Go to your phone and access Bluetooth settings
5. On your phone, touch the device to be paired.

Once you have connected the Bluetooth device, it is automatically connected whenever the engine switch is in the “ACC” or “ON” position.

** For detailed pairing instructions, see your audio system owner’s manual.


Hill-start Assist Control (HAC)

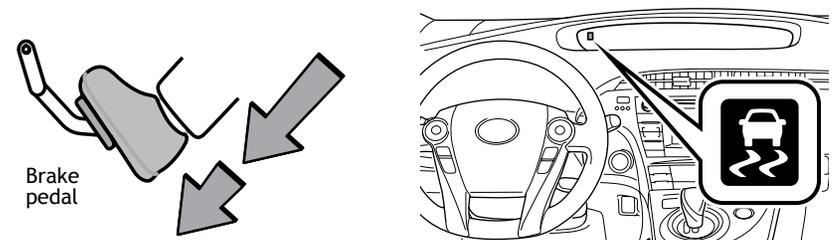

HAC helps prevent rolling backwards on an incline. To engage, push further down on brake pedal while at a complete stop until a beep sounds and slip indicator illuminates. HAC holds for approximately two seconds after releasing brake pedal.

Refer to the *Owner’s Manual* for more details.

Garage door opener (HomeLink®)* (if equipped)

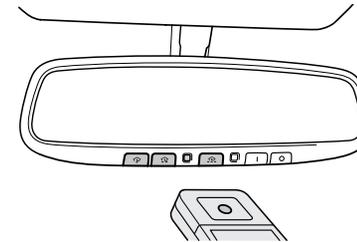

Garage door openers manufactured under license from HomeLink® can be programmed to operate garage doors, estate gates, security lighting, etc.


Refer to “Garage door opener,” Section 3-5 in the *Owner’s Manual* for more details.

For programming assistance, contact HomeLink® at 1-800-355-3515, or visit <http://www.homelink.com>.

* HomeLink® is a registered trademark of Johnson Controls, Inc.

SAFETY AND EMERGENCY FEATURES


Seat belts

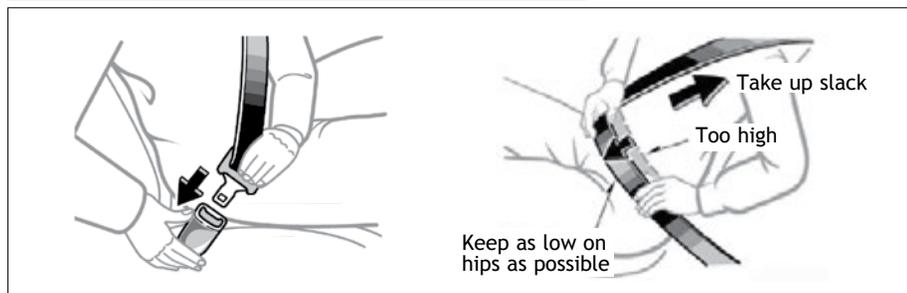

If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.

Seat belts-Shoulder belt anchor

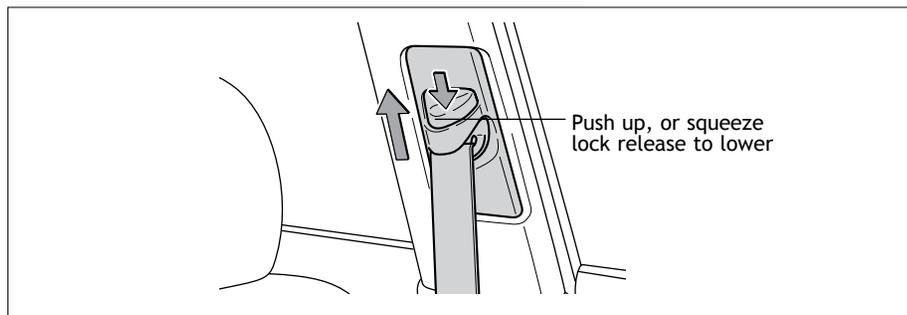

Tire Pressure Monitoring (warning) System


If the Tire Pressure Warning indicator “(↓)” illuminates without blinking, adjust tire pressures to factory-specified levels.* The light will turn off after a few minutes. The warning light may come on due to temperature changes or changes in tire pressure from natural air leakage.

If the tire pressure indicator flashes for more than 60 seconds and then remains on, take the vehicle to your local Toyota dealer.


Refer to the *Owner's Manual* for more details.

* Refer to load label on door jamb or the *Owner's Manual* for tire inflation specifications.

Door locks

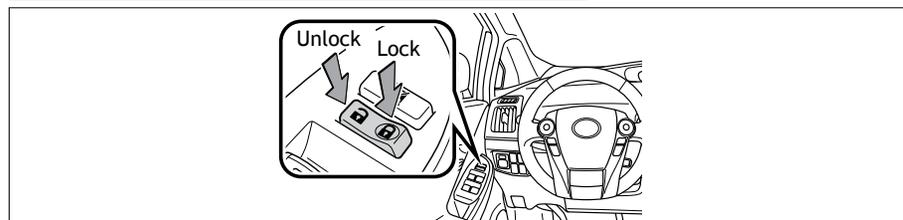


Doors-Child safety locks

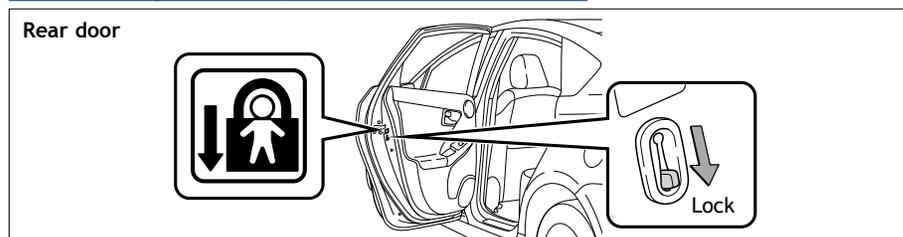


Moving the lever to lock position will allow the door to be opened only from the outside.

Spare tire & tools

Tool location

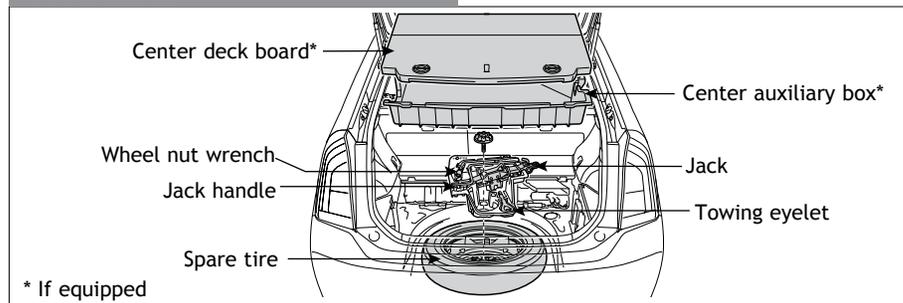

Removing the spare tire

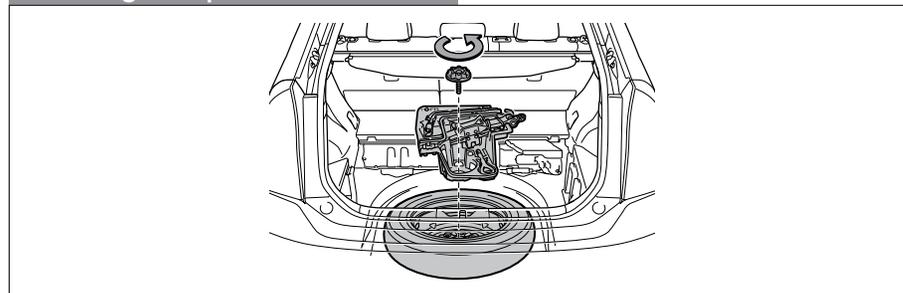

Refer to the *Owner's Manual* for tire changing and jack positioning procedures.

Star Safety System™

All new Toyota vehicles come standard with the Star Safety System™, which combines Vehicle Stability Control (VSC), Traction Control (TRAC), Anti-lock Braking System (ABS), Electronic Brake-force Distribution (EBD), Brake Assist (BA) and Smart Stop Technology (SST).

Enhanced Vehicle Stability Control (VSC)

Enhanced Vehicle Stability Control provides cooperative control of the ABS, TRAC, VSC and EPS.

Enhanced VSC helps to maintain directional stability when loss of traction occurs during a turn.

Traction Control (TRAC)

VSC helps prevent loss of traction during cornering by reducing Hybrid System output, and Traction Control helps maintain traction on loose gravel and wet, icy, or uneven surfaces by applying brake force to the spinning wheel(s).

Toyota's TRAC sensors are activated when one of the drive wheels starts to slip. TRAC limits Hybrid System output and applies the brakes to the spinning wheel. This transfers power to the wheels that still have traction to help keep you on track.

Anti-Lock Brake System (ABS)

ABS helps prevent brakes from locking up by “pulsing” brake pressure to each wheel. This limits brake lockup and helps provide directional control for the current road conditions.

Toyota's ABS sensors detect which wheels are locking up and limits wheel lockup by “pulsing” each wheel's brakes independently. Pulsing releases brake pressure repeatedly for fractions of a second. This helps the tires attain the traction that current road conditions will allow, helping you to stay in directional control.

Electronic Brake Force Distribution (EBD)

Toyota's ABS technology has Electronic Brake-force Distribution (EBD) to help maintain control and balance when braking. Abrupt stops can cause a vehicle to tilt forward, reducing the braking power of the rear wheels. EBD responds to sudden stops by redistributing brake force to enhance the braking effectiveness of all four wheels.

Brake Assist (BA)

Brake Assist is designed to detect sudden or “panic” braking, and then add braking pressure to help decrease the vehicle's stopping distance. When there's only a split second to react, Brake Assist can add additional brake pressure more quickly than just the driver alone can.

Smart Stop Technology (SST)

Smart Stop Technology automatically reduces driving torque when the accelerator and brake pedals are pressed simultaneously under certain conditions.

Floor mat installation

There are two types of Toyota floor mats: carpeted and all-weather. Each vehicle has model-specific floor mats. Installation is easy.

To keep your floor mat properly positioned, follow these steps:

- Only use floor mats designed for your specific model.
- Use only one floor mat at a time, using the retaining hooks to keep the mat in place.
- Install floor mats right side up.

