

PRIUS *v*
2 0 1 5

QUICK REFERENCE GUIDE

2015 Prius v

This *Quick Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Quick Reference Guide* is not intended as a substitute for the *Owner's Manual* located in your vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Prius v.

A word about safe vehicle operations

This *Quick Reference Guide* is not a full description of Prius v operations. Every Prius v owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Quick Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

INDEX

OVERVIEW

Engine maintenance	9
Fuel tank door release and cap	8
Hood release	8
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Keyless entry^{1,2}	6
Light control-Instrument panel	9
Smart Key system^{1,2}	7

FEATURES/OPERATIONS

Air Conditioning/Heating	17
Audio	18
Auto lock/unlock^{1,2}	10
Bluetooth® Device Pairing Section	29-38
Clock	23
Cruise control	20
Dynamic Radar Cruise Control	21
EV drive mode	12
Garage door opener (HomeLink®) ³	23
Hill-start Assist Control (HAC)	23
Hybrid Synergy Drive System	10
Lane Departure Alert (LDA)	14
Lights¹ & turn signals	15-16
Panoramic roof shades¹	19
Parking brake	12
Power outlets	20
Seat adjustments-Front	13
Seat heaters	16
Seat-Folding down rear seat	14
Seats-Flattening front seatbacks	13
Seats-Head restraints	13
Steering wheel switches	19
Telephone controls (Bluetooth®)	22
Tilt and telescopic steering wheel	12
Transmission	11
Trip information display	22
Windows-Power	16
Windshield wipers & washers	14

SAFETY AND

EMERGENCY FEATURES

Doors-Child safety locks	25
Door locks	25
Floor mat installation	27
Seat belts	24
Seat belts-Shoulder belt anchor	24
Spare tire & tools	25
Star Safety System™	26-27
Tire Pressure Monitoring (warning) System	24


¹ Visit your Toyota dealer for information on customizing this feature.

² Programmable by customer. Refer to the Owner's Manual for instructions and more information.


³ HomeLink® is a registered trademark of Gentex Corporation.

OVERVIEW

Instrument panel

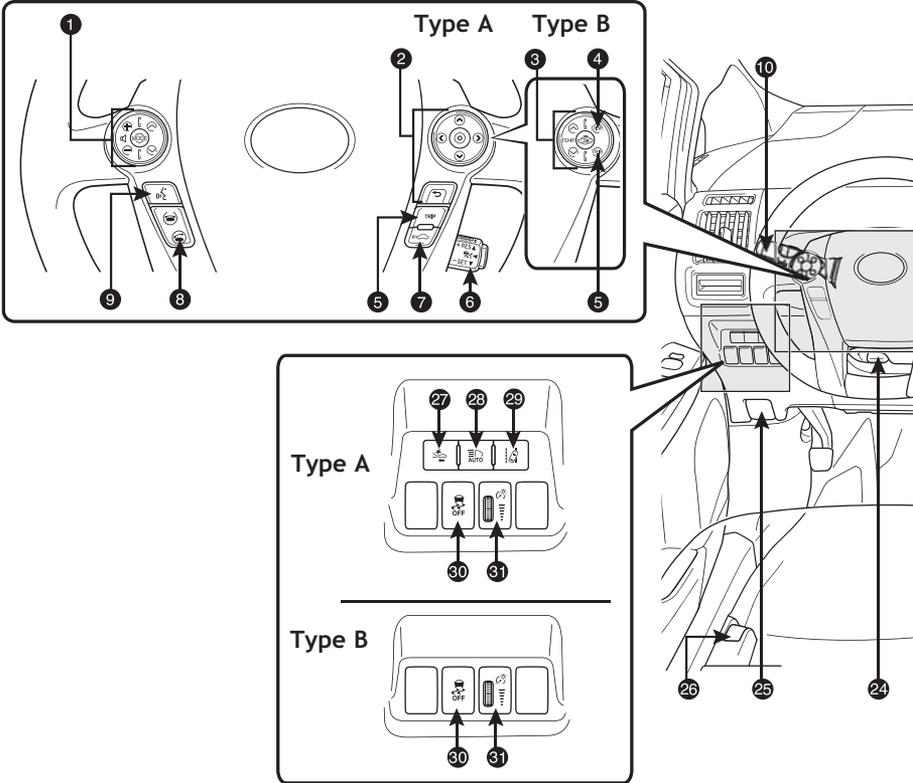

- 1 Steering wheel audio controls¹
- 2 Meter control switches
- 3 Steering wheel climate controls
- 4 Trip information display button
- 5 “TRIP” button
- 6 Cruise control
- 7 Dynamic Radar Cruise Control button²
- 8 Telephone controls¹
- 9 Voice command button¹
- 10 Headlight and turn signal controls/Headlight, turn signal and front fog light controls²
- 11 Wiper and washer controls
- 12 Multi-information display²
- 13 Audio system or navigation system-integrated audio system^{1,2}
- 14 Mph or km/h button
- 15 Emergency flasher button
- 16 Power button
- 17 “P” position switch

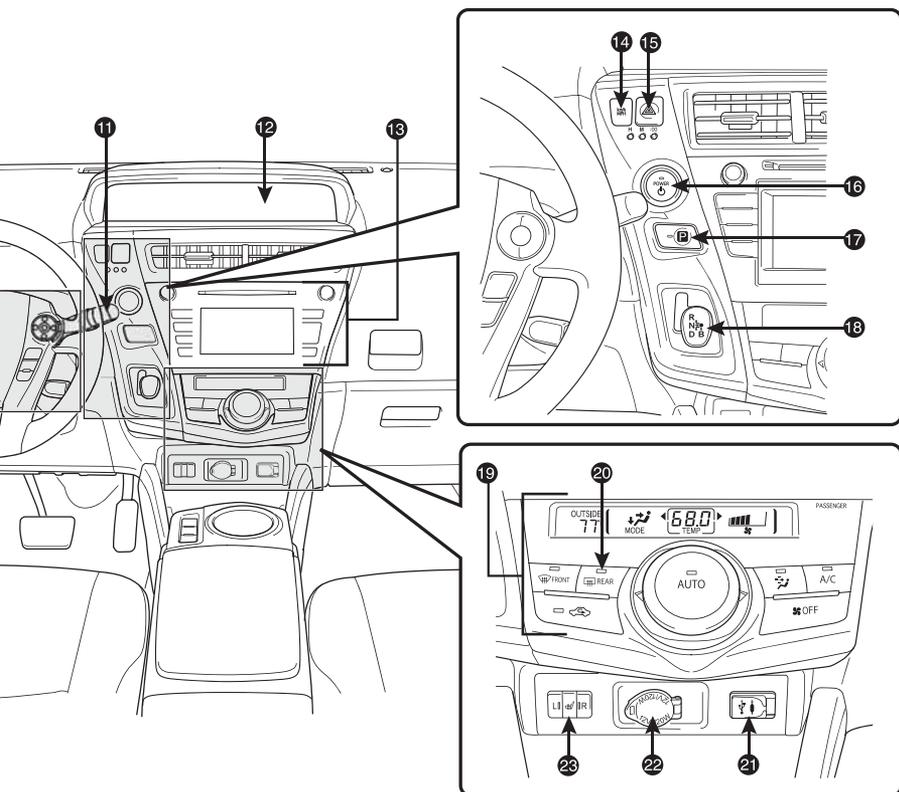


- 18 Shift lever
- 19 Air Conditioning controls
- 20 Outside rearview mirror/Rear window defogger button
- 21 AUX port/USB port
- 22 Power outlet
- 23 Seat heater switches²
- 24 Tilt and telescopic steering lock release lever
- 25 Hood lock release lever
- 26 Fuel filler door opener
- 27 PCS (Pre-Collision System) switch²
- 28 Automatic high beam switch²
- 29 LDA (Lane Departure Alert) switch²
- 30 VSC off switch
- 31 Instrument panel light control

¹ For details, refer to the “NAVIGATION SYSTEM OWNER’S MANUAL.”


² If equipped

Instrument cluster

Vehicles without Multi-information display

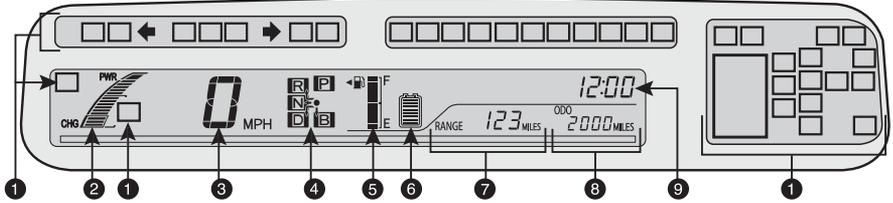

Vehicles with Multi-information display

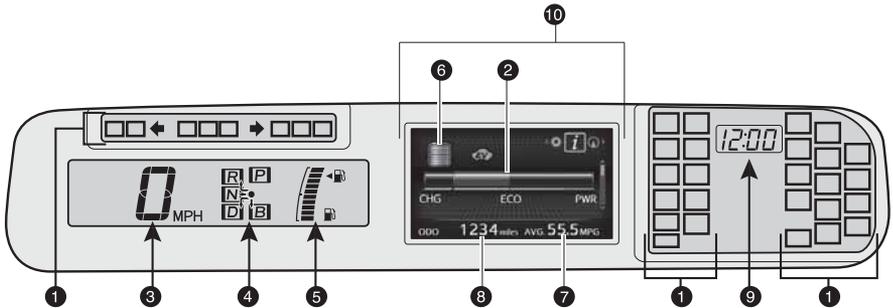

- 1 Service indicators and reminders
- 2 Hybrid System Indicator
- 3 Speedometer
- 4 Transmission shift position indicator
- 5 Fuel gauge
- 6 Hybrid battery (traction battery) status
- 7 Trip information display
- 8 Odometer and trip meter display
- 9 Clock
- 10 Multi-information display

Indicator symbols

For details, refer to “Indicators and warning lights,” Section 2-2, *2015 Owner’s Manual*.

BRAKE Brake system warning¹

 Brake system warning light (yellow indicator)¹

 Driver seat belt reminder and/or front passenger seat belt reminder (alarm will sound if speed is over 12 mph)

 Charging system warning¹

¹ If indicator does not turn off within a few seconds of starting hybrid system, there may be a malfunction. Have vehicle inspected by your Toyota dealer.

	Front passenger occupant classification or front passenger airbag ON/OFF indicator		Hybrid System warning ¹
	Malfunction/Check Engine indicator ¹		Parking lock system warning ¹
	Low fuel level warning		LED headlight warning ¹
	Open door warning		P position request indicator ¹
	Airbag SRS warning ¹		Hybrid System overheat warning ¹
	Low Tire Pressure Warning ¹		Low Hybrid battery (traction battery) warning
	Electric power steering system warning ¹		Smart Key system warning
	Immobilizer system indicator		Maintenance required reminder ¹
	Turn signal indicator		Parking lock system warning message
	READY indicator		
	ECO Driving Indicator Light ¹		
	EV indicator		
	Headlight low/high beam indicators		
	EV drive mode indicator		
	ECO MODE indicator		
	Power Mode indicator		
	Front fog light indicator		
	Slip indicator/Hill-start Assist Control indicator ¹		
	  Cruise control indicators ²		
	ABS Anti-lock Brake System warning ¹		
	Automatic headlight leveling system warning ¹		
	Pre-Collision System warning light ¹		
	High coolant temperature warning light ¹		
	Low engine oil pressure warning ¹		

² If this light flashes, refer to "Cruise control," or "Dynamic radar cruise control," Section 4-5, 2015 Owner's Manual.


Keyless entry

Locking operation



Push 

Unlocking operation

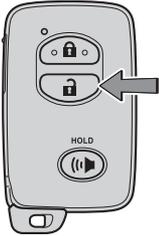

Push ONCE: Driver door
TWICE: All doors 

NOTE: If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.


Panic button



Push and hold 

Smart Key system

Start function

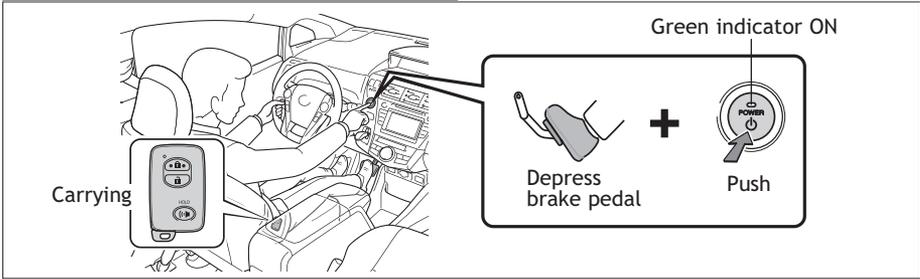

Power (without starting Hybrid System)


Without depressing the brake pedal, pressing the “POWER” button will change the operation mode in succession from:

ACCESSORY Accessories such as the radio will operate.


ON Power ON; Hybrid System is not engaged.

OFF All systems OFF.


Locking operation

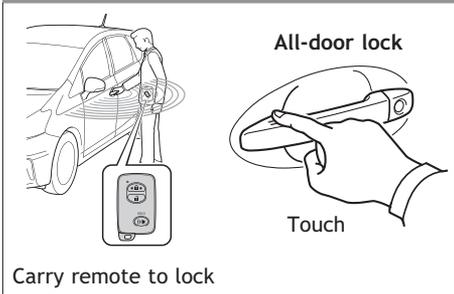

Unlocking operation

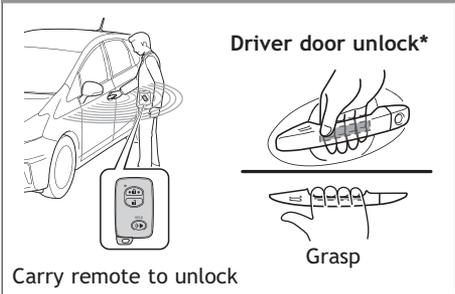


Back door lock/unlock (if equipped)

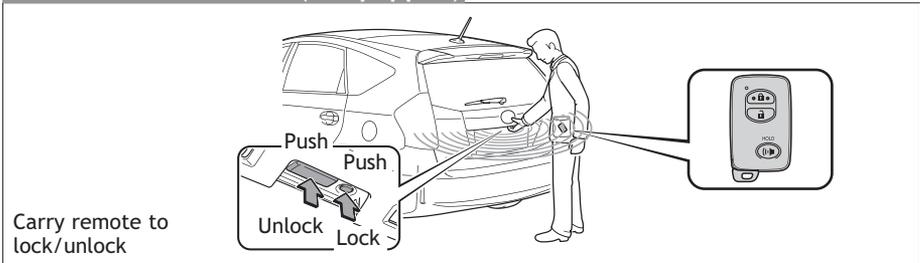

* Driver door unlocking function can be programmed to unlock driver door only, or all doors. Grasping passenger door handle or pushing unlock button on rear hatch will unlock all doors.

NOTE: Doors may also be locked/unlocked using remote.

Fuel tank door release and cap

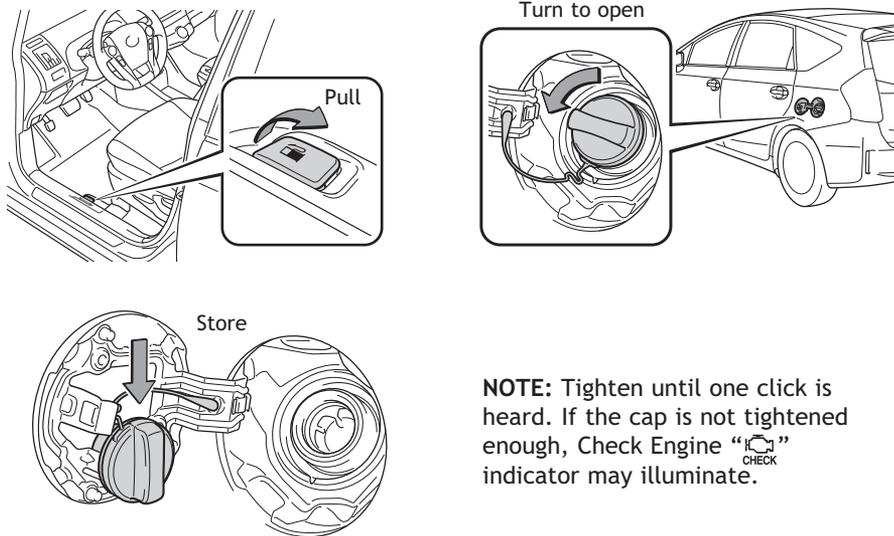

Turn to open


Pull

Store

NOTE: Tighten until one click is heard. If the cap is not tightened enough, Check Engine “CHECK” indicator may illuminate.

The diagram illustrates the process of opening and closing the fuel tank door. It starts with an interior view of the driver's footwell where a release button is located. An inset shows the button being pulled. This leads to an exterior view of the fuel tank door being turned to open. A second inset shows the door being turned back to its closed position. A final inset shows the fuel cap being lowered into a storage compartment. A note specifies that the cap must be tightened until one click is heard to prevent the Check Engine indicator from illuminating.

Hood release

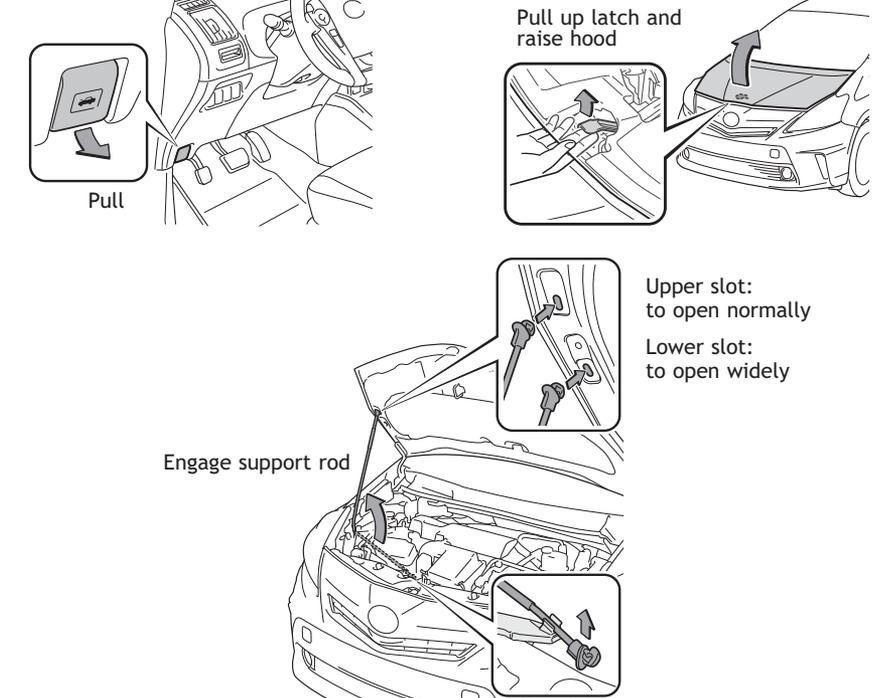

Pull


Pull up latch and raise hood

Engage support rod


Upper slot: to open normally
Lower slot: to open widely

The diagram details the steps to open the hood. It begins with an interior view of the driver's side footwell where the hood release button is pulled. This action is shown to pull up a latch on the front edge of the hood, which is then raised. A close-up shows the hood being propped open by engaging a support rod into the upper slot for normal opening or the lower slot for a wider opening. A final inset shows the support rod being fully engaged.

Light control-Instrument panel

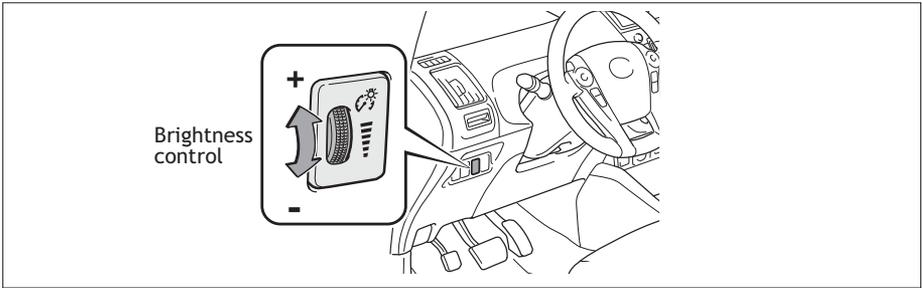

Engine maintenance

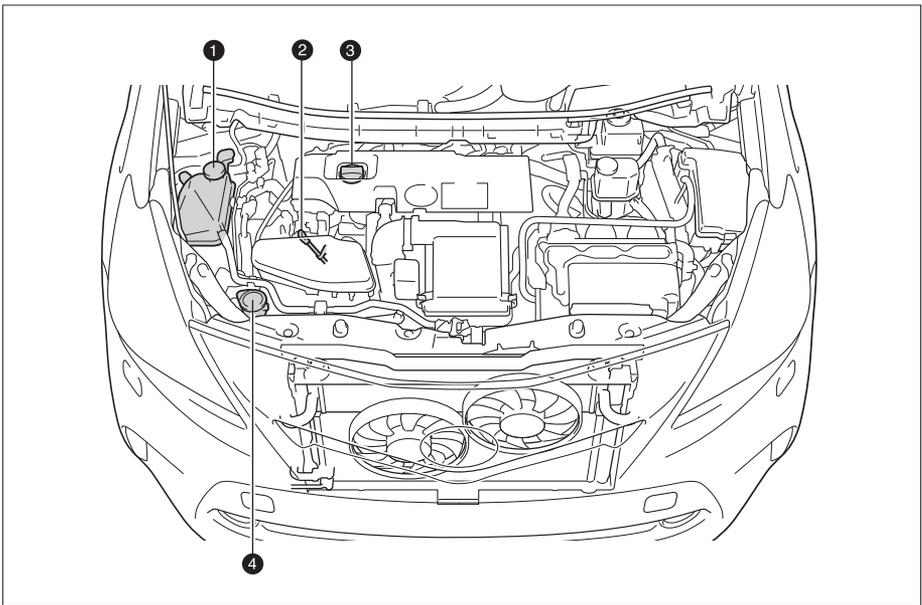

- 1 Engine coolant reservoir
- 2 Engine oil level dipstick
- 3 Engine oil filler cap
- 4 Windshield washer fluid tank

NOTE: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the “Warranty & Maintenance Guide.” Maintenance reset light instructions can be found in “Maintenance Requirements Chapter” in Owner’s Manual.

FEATURES/OPERATIONS

Hybrid Synergy Drive System

The Hybrid Synergy Drive System utilizes a computer-controlled gasoline engine and electric motor to provide the most efficient combination of power for the vehicle. To conserve energy, when the brakes are applied the braking force generates electricity which is then sent to the traction battery. In addition, the engine shuts off when the vehicle is stopped. The benefits are better fuel economy, reduced vehicle emissions and improved performance.

NOTE: Fuel consumption and energy information of the Hybrid System are shown on the Entune Audio system screen or the navigation system screen.

Tips for improved fuel economy

- Ensure tire pressures are maintained at levels specified in the *Owner's Manual*.
- When possible, link trips to reduce engine cold starts.
- Avoid driving at speeds that are higher than necessary, especially on the highway.
- When possible, avoid sudden stops to maximize regenerative braking energy.
- Minimize use of the Air Conditioning.

Starting your vehicle



A line drawing of a car's interior from the driver's perspective. A speech bubble points to the instrument cluster area, containing the word "READY".

- (1) Depress the brake pedal, and press the "POWER" switch briefly and firmly.
- (2) The "READY" light will blink. After a few seconds, when the light remains steady and a beep sounds, you may begin driving.


Auto lock/unlock

Automatic door locks can be programmed to operate in two different modes, or turned OFF.

- Doors lock when shifting from Park.
- Doors lock when the vehicle speed is approximately 12 mph or higher.
- Doors unlock when shifting into Park.
- Doors unlock when the driver's door is opened within 10 seconds after turning the "POWER" switch OFF.


Refer to the *Owner's Manual* for more details.

Transmission

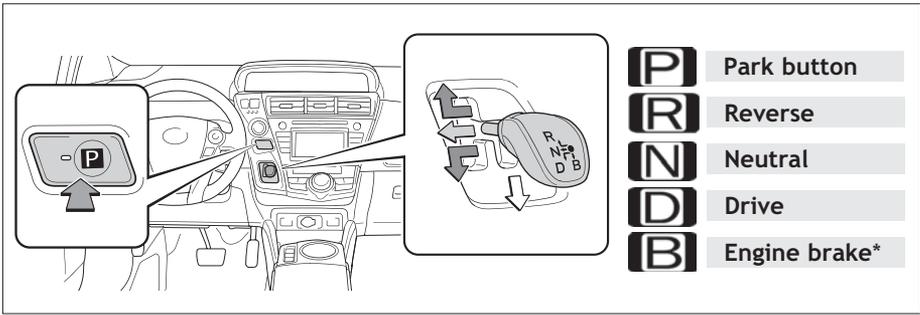

* The engine brake is the equivalent of downshifting. Shift to “B” when engine braking is desired (i.e. downhill driving, coasting to a stop, etc.).


Eco Mode

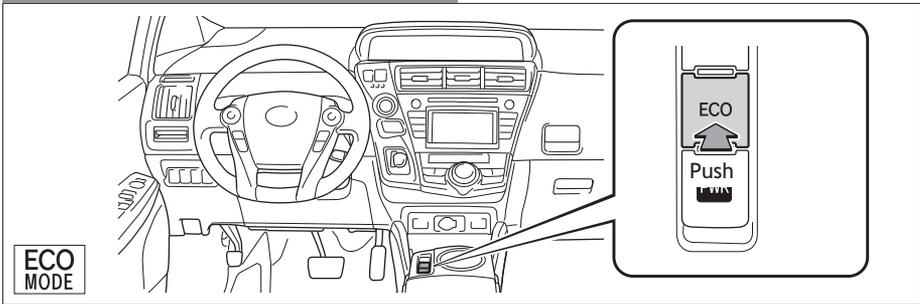

Eco Mode helps achieve low fuel consumption during trips that involve frequent accelerating and braking.

Refer to the *Owner's Manual* for more details.


Power Mode

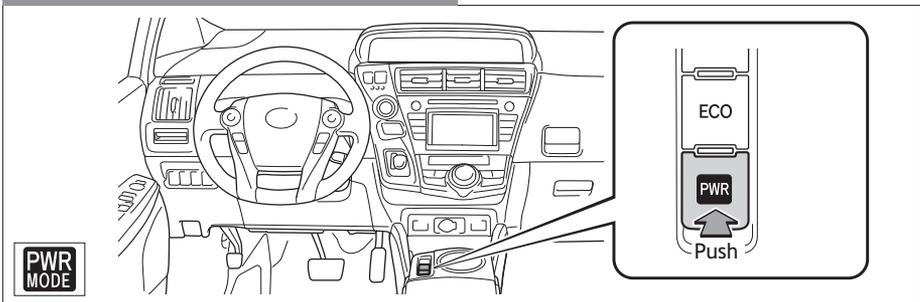

Use when a higher level of response is desired, such as when driving in mountainous regions.

Refer to the *Owner's Manual* for more details.


EV drive mode

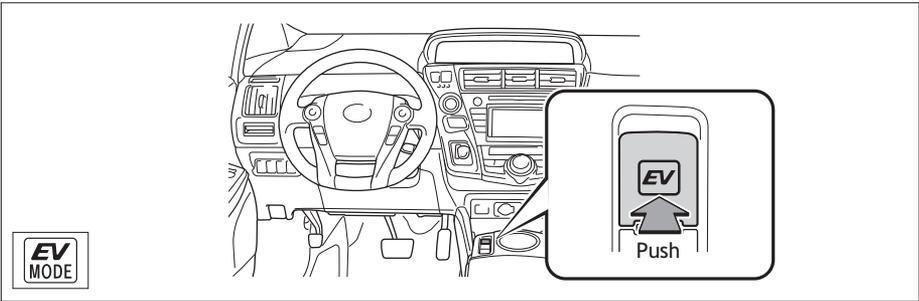

EV drive mode allows the electric motor (traction motor), powered by the hybrid battery (traction battery), to be used to drive the vehicle under certain driving conditions.

Refer to the *Owner's Manual* for more details.


Tilt and telescopic steering wheel

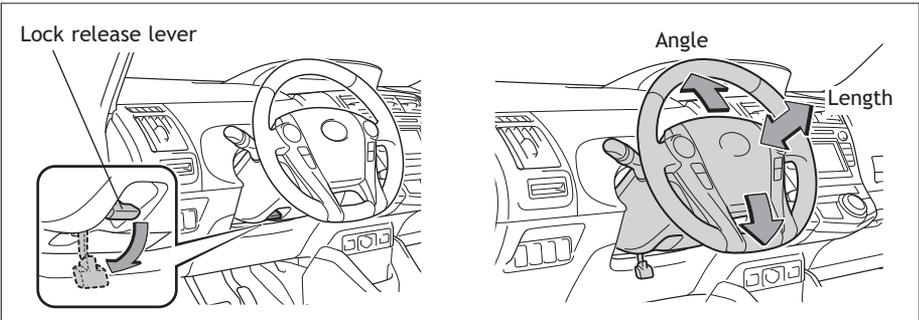


Hold wheel, push lever down, set angle and length, and return lever.

NOTE: Do not attempt to adjust while the vehicle is in motion.

Parking brake

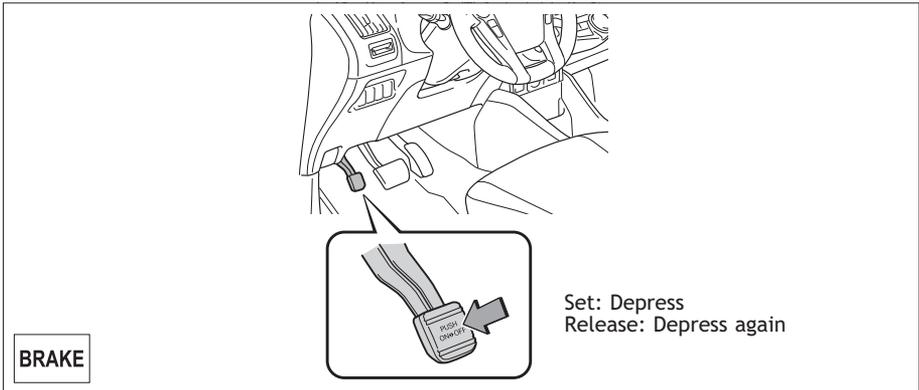


Seat adjustments-Front

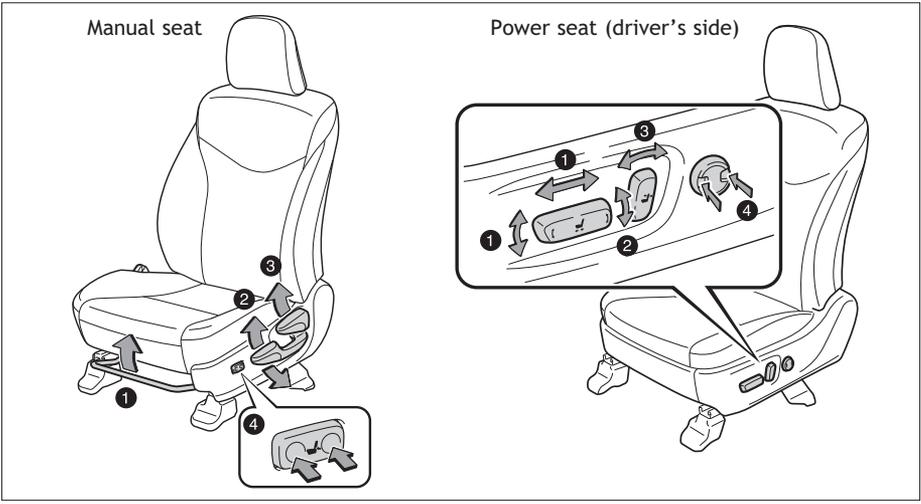


- ① Seat position (forward/backward)
- ② Height crank (driver side; if equipped)
- ③ Seatback angle
- ④ Lumbar support (driver side; if equipped)


Seats-Head restraints

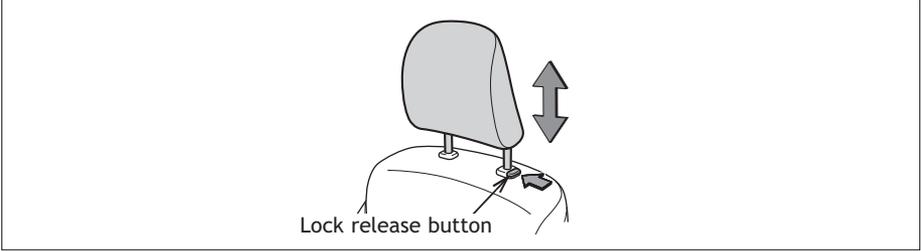

Seats-Flattening front seatbacks

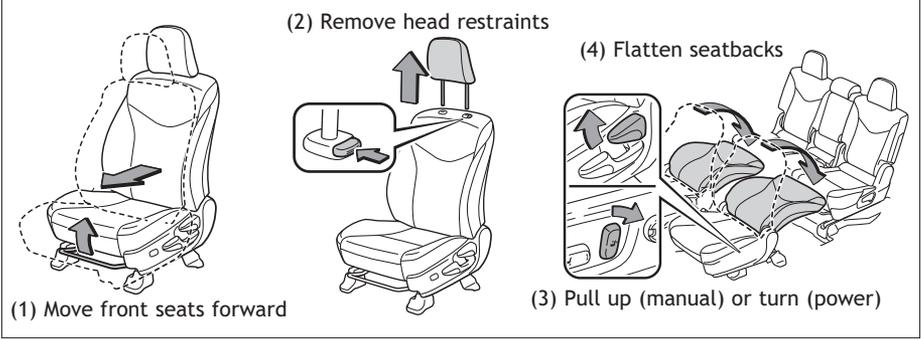


Seat-Folding down rear seat

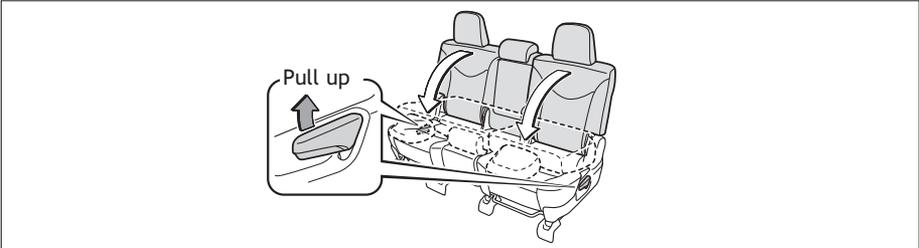


Windshield wipers & washers

Front

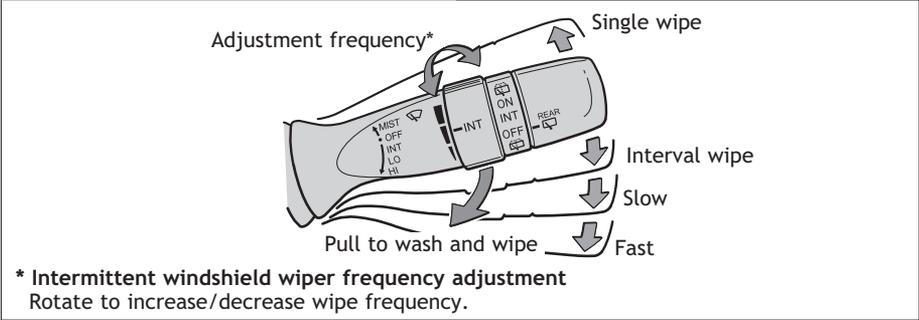

Rear

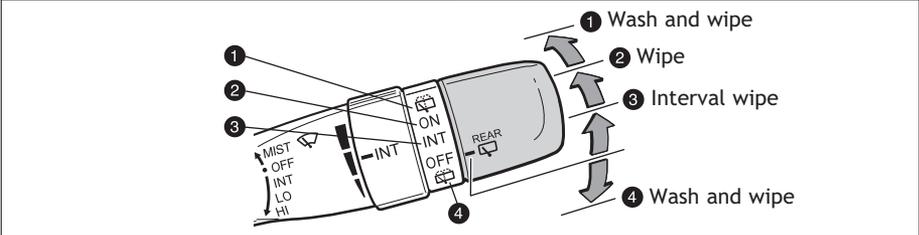

Lane Departure Alert (LDA) (if equipped)


The Lane Departure Alert recognizes the visible lane markers using a camera as a sensor and alerts the driver with beeping and flashing indicators when the vehicle deviates from its lane. Press the LDA switch to activate the system.

Refer to the *Owner's Manual* for more details on this system before attempting to use it.



Lights & turn signals

Headlights

Type A

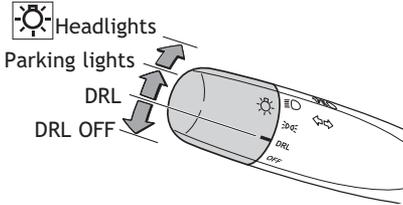


Type B

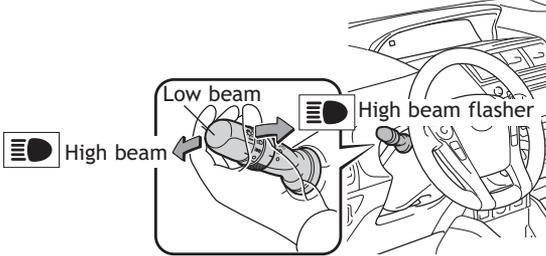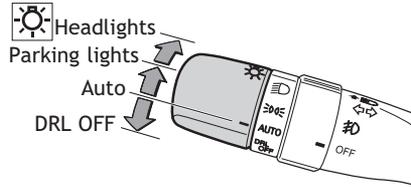

Automatic light cutoff system Automatically turns lights off after a delay of 30 seconds, or when lock switch on remote is pushed after all doors are locked.


Front fog lights (if equipped)

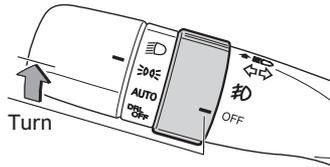


Front fog lights come on only when the headlights are on low beam.

FEATURES/OPERATIONS

Turn signals

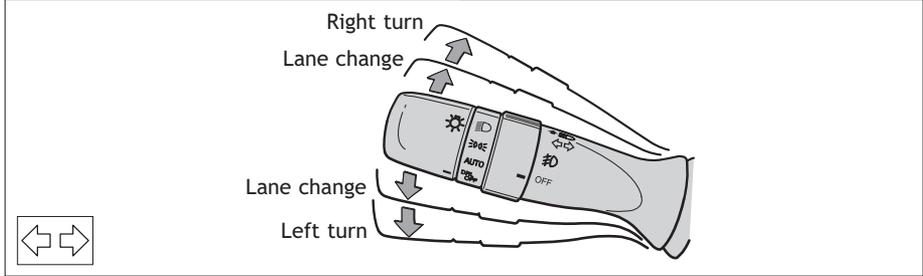


Windows-Power

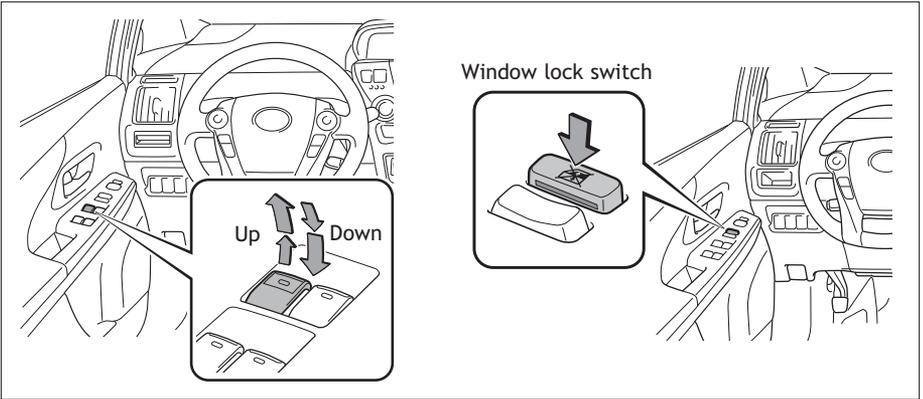


Automatic operation Push the switch completely down or pull it completely up and release to fully open or close. To stop the window partway, operate the switch in the opposite direction.

Window lock switch Deactivates all passenger windows. Driver's window remains operable.

Seat heaters (if equipped)

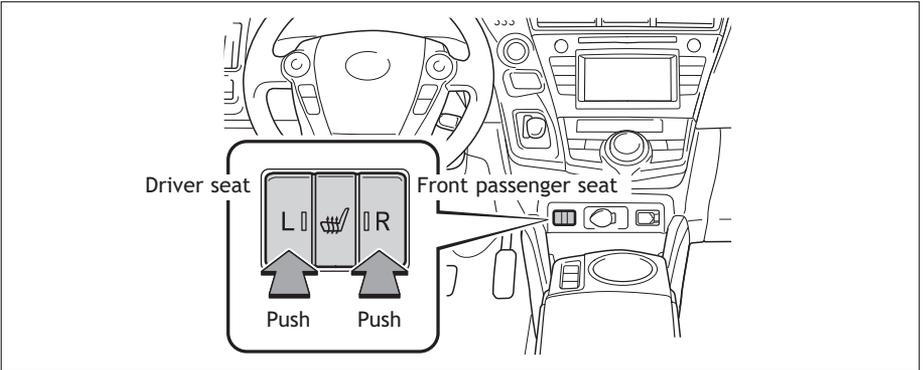


Air Conditioning/Heating

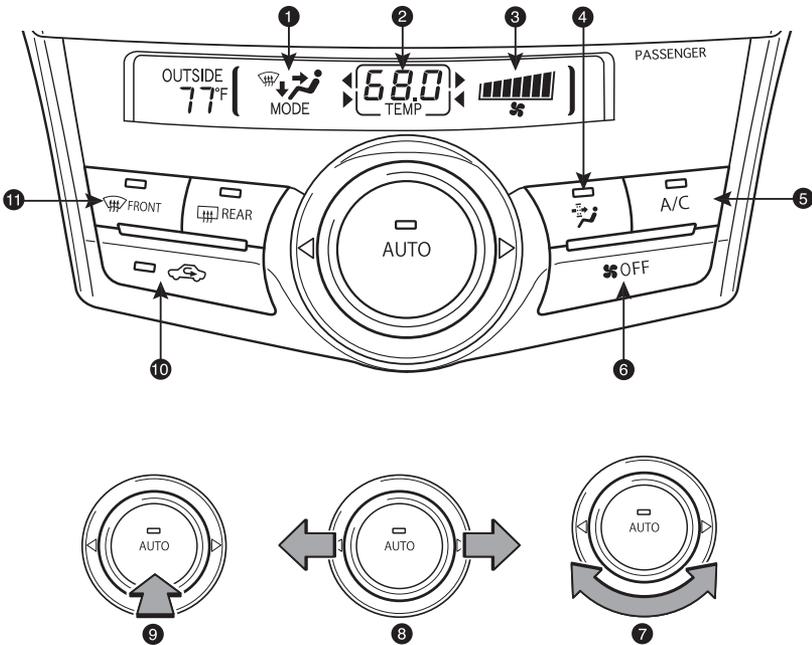


- ❶ Air outlet display
- ❷ Temperature setting display
- ❸ Fan speed display
- ❹ Micro dust and pollen filter mode (turns off automatically after 3 minutes)
- ❺ Air Conditioning ON/OFF
- ❻ Climate control OFF
- ❼ Adjust/select
- ❽ Function select
- Slide the dial left and right to select:
 - Fan speed control
 - Temperature selector
 - Airflow vent
 Use “” or “” mode to reduce window fogging (system automatically switches to outside air mode).
- ❾ Automatic climate control ON
Adjusting the temperature setting will cause the airflow vents, air intake and fan to adjust automatically.
- ❿ Recirculate cabin air (outside air when OFF)
- ⓫ Windshield defogger


Audio (if equipped)

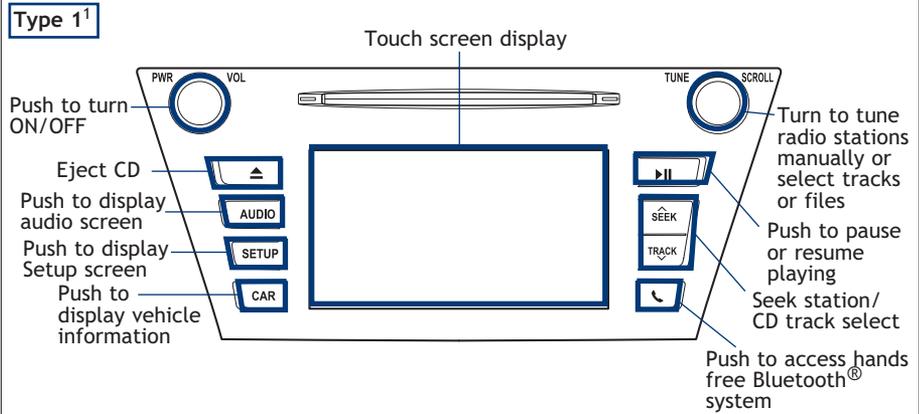

Type 2 (additional function)^{2,3}

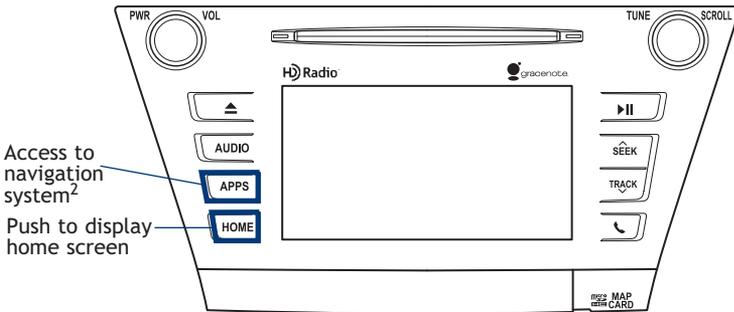

Type 3 (additional functions)^{2,3}

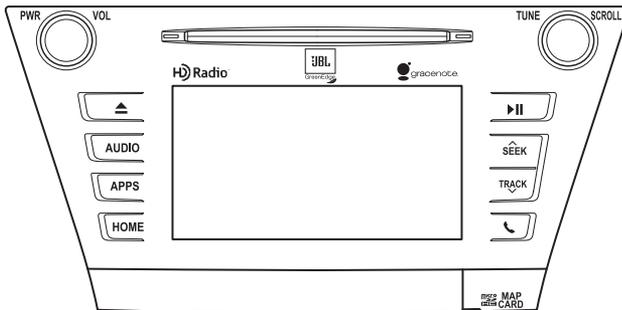


¹ Refer to the “OWNER’S MANUAL”

² Refer to the “Entune Premium Audio with Navigation System Quick Reference Guide.”

³ Refer to the “NAVIGATION SYSTEM OWNER’S MANUAL.”

Steering wheel switches

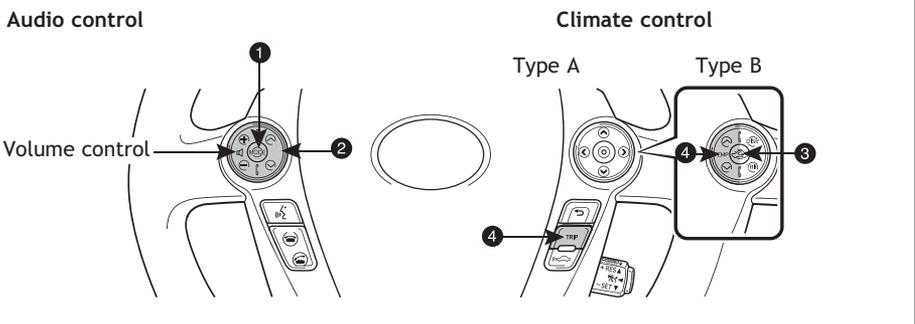


- 1 "MODE"
Push to turn audio ON and select an audio mode. Push and hold to mute/unmute or pause/resume audio.
- 2 "V Λ"
Use to search within the selected audio medium (radio, CD, iPod®, etc.).
- 3 Outside or recirculated cabin air
- 4 Temperature selector

Panoramic roof shades (if equipped)


Opening operation

Push once to open. To stop partway, press the switch lightly.

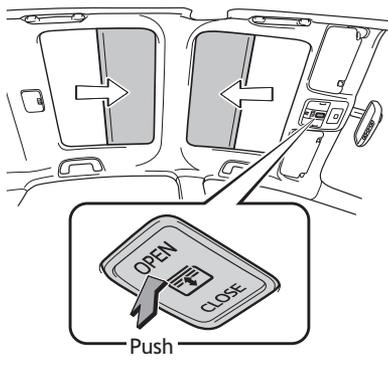


Closing operation

Push once to close. To stop partway, press the switch lightly.

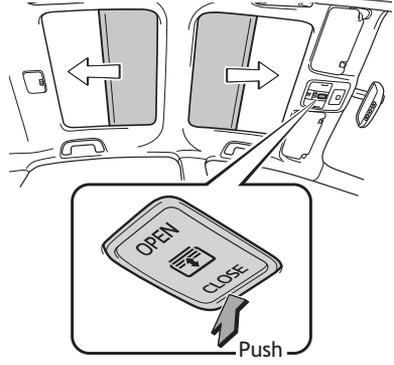


Power outlets

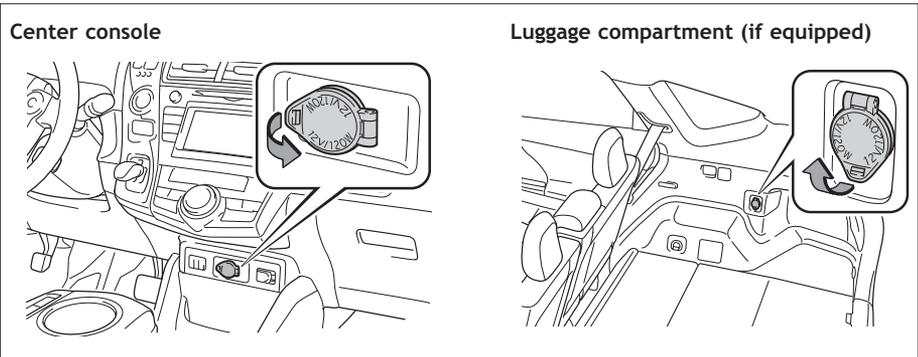


Power switch must be set at “ACCESSORY” or “ON” mode to be used.

Cruise control (if equipped)

Turning system ON/OFF

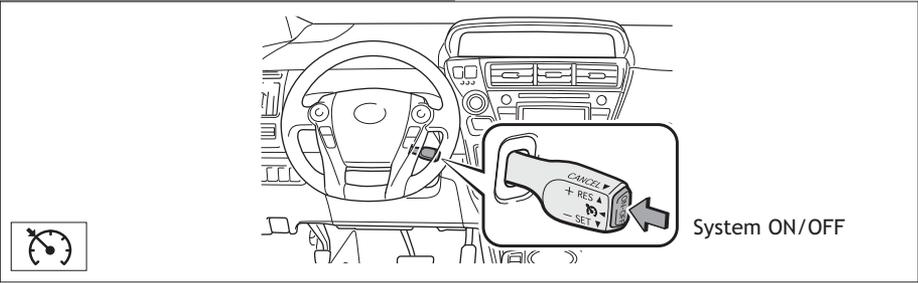

Functions

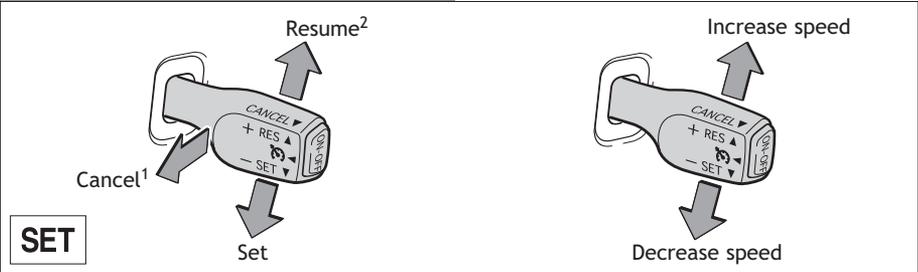


¹ The set speed may also be cancelled by depressing the brake pedal.

² The set speed may be resumed once vehicle speed exceeds 25 mph.

Dynamic Radar Cruise Control (if equipped)


Refer to the *Owner's Manual* for more details and complete safety precautions before attempting to use "Dynamic Radar Cruise Control."

Fixed speed mode

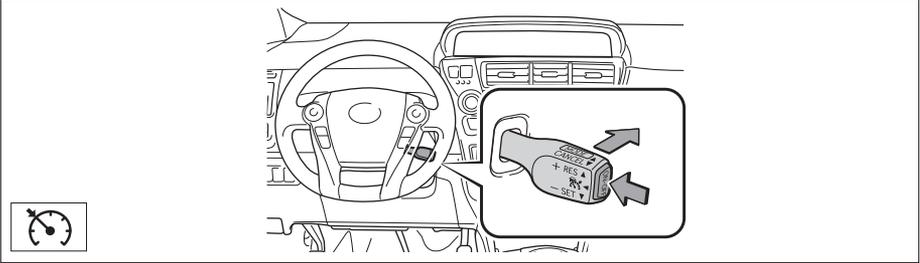


- (1) To select conventional/fixed speed control Push the ON-OFF button. Push the lever forward and hold until the "Ⓜ" indicator appears.
- (2) To set, cancel and resume a speed Refer to instructions in the *Cruise Control* section.

Distance control mode

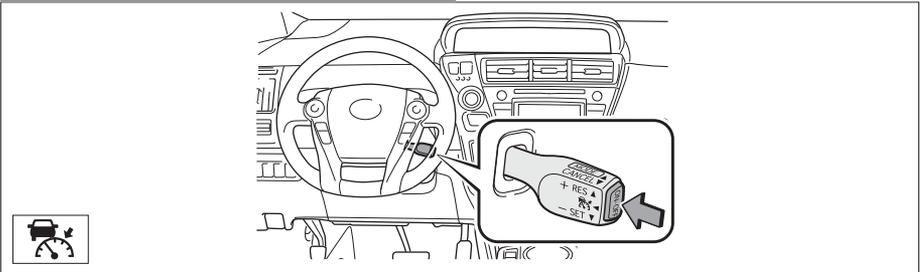


Distance control mode will cruise at a set speed, decelerate to maintain selected distance from a slower vehicle traveling in front of you, and accelerate back up to the selected speed if the vehicle in front of you changes lanes or speeds up.

- (1) To select distance control mode Push the ON-OFF button. The "Ⓜ" will come on.
- (2) To set, cancel or resume a speed Refer to instructions for *Cruise Control* section.

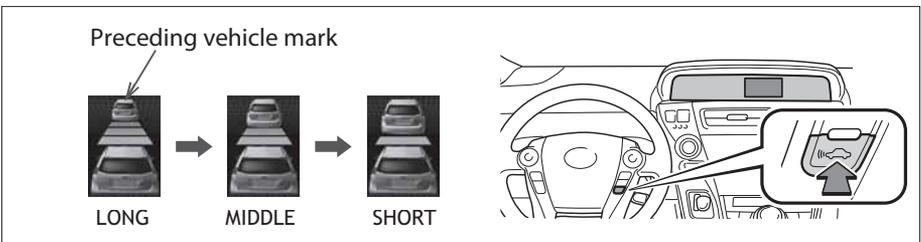

- (3) To change the vehicle-to-vehicle distance Push the distance button to cycle through the settings, which will change progressively from LONG to MIDDLE to SHORT.

Trip information display (if equipped)

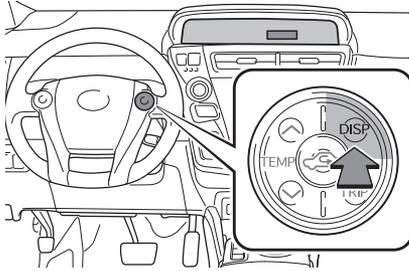


Push “DISP” to change between the following information screens:


- (1) Current fuel consumption
- (2) Average fuel consumption
- (3) Cruising range
- (4) Hybrid System Indicator set up

Telephone controls (Bluetooth®)


Microphone (type A)

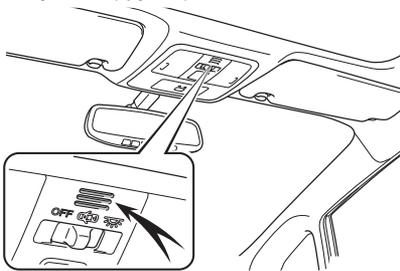


Microphone (type B)

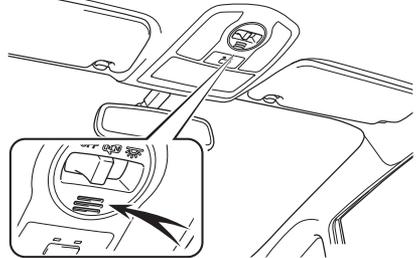

Audio unit

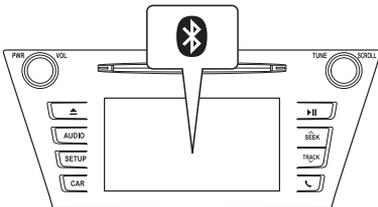

Steering wheel telephone switches

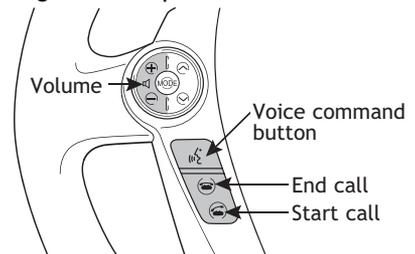


Bluetooth® technology allows dialing or receipt of calls without taking hands from the steering wheel or using a cable to connect the telephone and the system.

Refer to the “DISPLAY AUDIO SYSTEM OWNER’S MANUAL” or the “NAVIGATION SYSTEM OWNER’S MANUAL” for more information about phone connections and compatibility.


Clock

H- Hour set
M- Minute set
:00- Round off
minutes

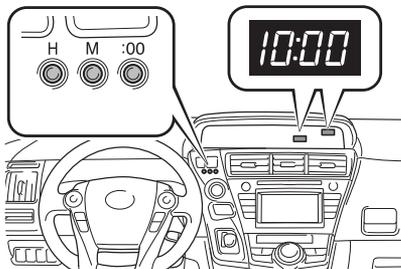

Refer to the *Owner's Manual* for details on adjusting time.

Hill-start Assist Control (HAC)

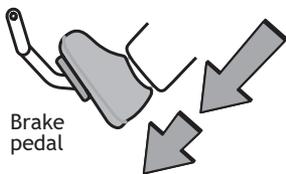


Brake
pedal



HAC helps prevent rolling backwards on an incline. To engage, push further down on brake pedal while at a complete stop until a beep sounds and slip indicator illuminates. HAC holds for approximately two seconds after releasing brake pedal.

Refer to the *Owner's Manual* for more details.

Garage door opener (HomeLink®)* (if equipped)

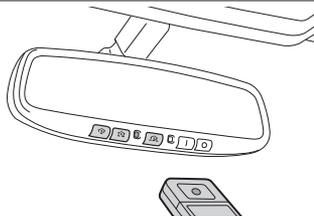

Garage door openers manufactured under license from HomeLink®* can be programmed to operate garage doors, estate gates, security lighting, etc.


Refer to "Garage door opener," Section 3-5 in the *Owner's Manual* for more details.

For programming assistance, contact HomeLink® at 1-800-355-3515, or visit <http://www.homelink.com>.

* HomeLink® is a registered trademark of Gentex Corporation.

SAFETY AND EMERGENCY FEATURES


Seat belts

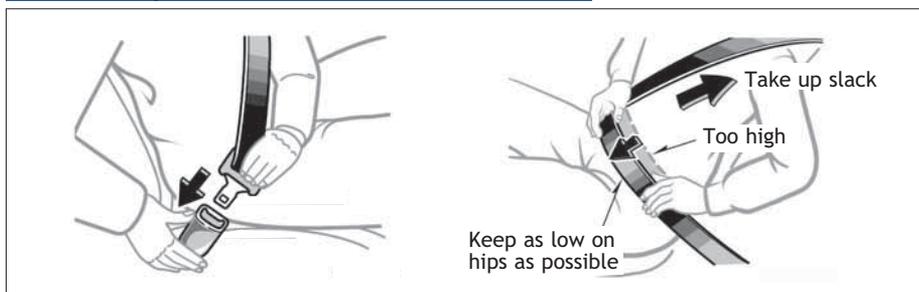

If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.

Seat belts-Shoulder belt anchor

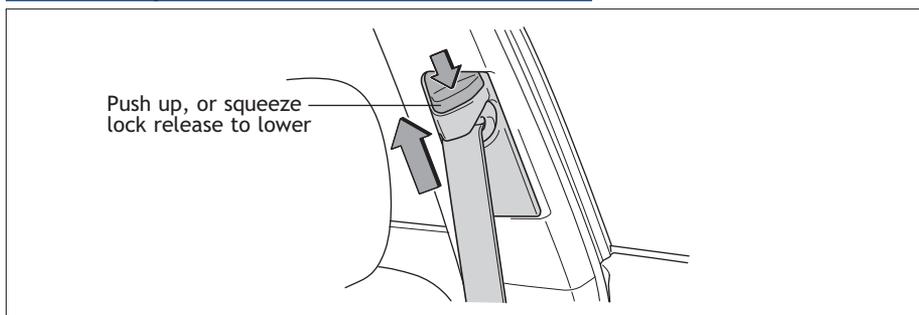

Tire Pressure Monitoring (warning) System


If the Tire Pressure Warning indicator “” illuminates without blinking, adjust tire pressures to factory-specified levels.* The light will turn off after a few minutes. The warning light may come on due to temperature changes or changes in tire pressure from natural air leakage.

If the tire pressure indicator flashes for more than 60 seconds and then remains on, take the vehicle to your local Toyota dealer.

Refer to the *Owner's Manual* for more details.


* Refer to load label on door jamb or the *Owner's Manual* for tire inflation specifications.

Door locks

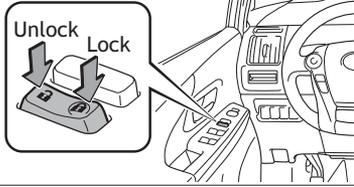

Doors-Child safety locks


Rear door

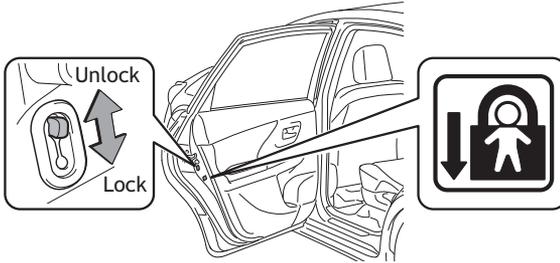


Moving the lever downward will allow the door to be opened only from the outside.

Spare tire & tools

Tool location

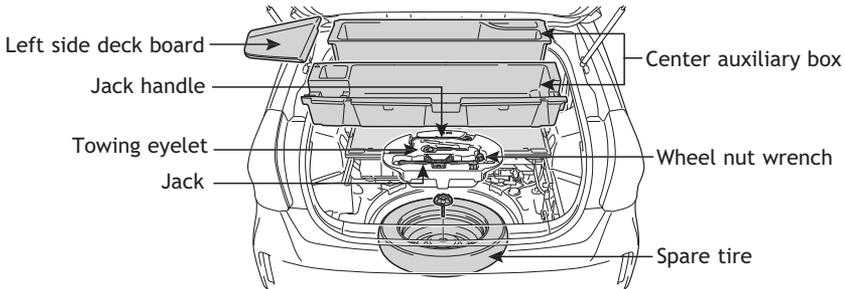

Removing the spare tire

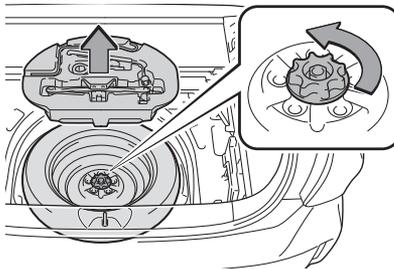

Refer to the *Owner's Manual* for tire changing and jack positioning procedures.

SAFETY AND EMERGENCY FEATURES

Star Safety System™

All new Toyota vehicles come standard with the Star Safety System™, which combines Vehicle Stability Control (VSC), Traction Control (TRAC), Anti-lock Braking System (ABS), Electronic Brake-force Distribution (EBD), Brake Assist (BA) and Smart Stop Technology (SST).

Enhanced Vehicle Stability Control (VSC)

Enhanced Vehicle Stability Control provides cooperative control of the ABS, TRAC, VSC and EPS.

Enhanced VSC helps to maintain directional stability when loss of traction occurs during a turn.

Traction Control (TRAC)

VSC helps prevent loss of traction during cornering by reducing Hybrid System output, and Traction Control helps maintain traction on loose gravel and wet, icy, or uneven surfaces by applying brake force to the spinning wheel(s).

Toyota's TRAC sensors are activated when one of the drive wheels starts to slip. TRAC limits Hybrid System output and applies the brakes to the spinning wheel. This transfers power to the wheels that still have traction to help keep you on track.

Anti-Lock Brake System (ABS)

ABS helps prevent brakes from locking up by “pulsing” brake pressure to each wheel. This limits brake lockup and helps provide directional control for the current road conditions.

Toyota's ABS sensors detect which wheels are locking up and limits wheel lockup by “pulsing” each wheel's brakes independently. Pulsing releases brake pressure repeatedly for fractions of a second. This helps the tires attain the traction that current road conditions will allow, helping you to stay in directional control.

Electronic Brake Force Distribution (EBD)

Toyota's ABS technology has Electronic Brake-force Distribution (EBD) to help maintain control and balance when braking. Abrupt stops can cause a vehicle to tilt forward, reducing the braking power of the rear wheels. EBD responds to sudden stops by redistributing brake force to enhance the braking effectiveness of all four wheels.

Brake Assist (BA)

Brake Assist is designed to detect sudden or “panic” braking, and then add braking pressure to help decrease the vehicle's stopping distance. When there's only a split second to react, Brake Assist can add additional brake pressure more quickly than just the driver alone can.

Smart Stop Technology (SST)


Smart Stop Technology automatically reduces driving torque when the accelerator and brake pedals are pressed simultaneously under certain conditions.

Floor mat installation

There are two types of Toyota floor mats: carpeted and all-weather. Each vehicle has model-specific floor mats. Installation is easy.

To keep your floor mat properly positioned, follow these steps:

- Only use floor mats designed for your specific model.
- Use only one floor mat at a time, using the retaining hooks to keep the mat in place.
- Install floor mats right side up.

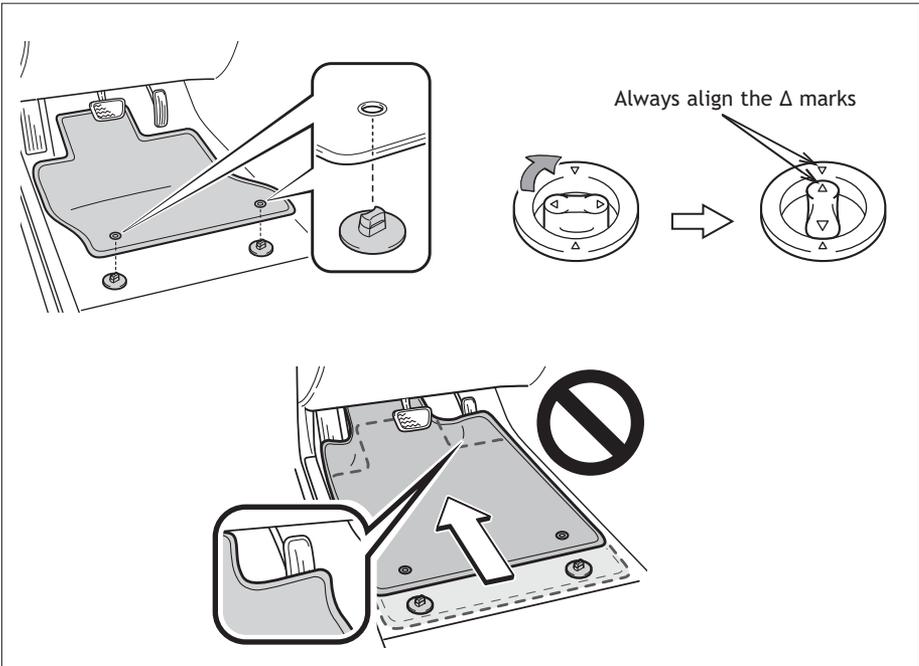

BLUETOOTH® DEVICE PAIRING SECTION


BLUETOOTH® DEVICE PAIRING

To begin the Bluetooth® Pairing process, press the HOME button on the faceplate of your Toyota Vehicle Entune™ Multimedia Head Unit.

Bluetooth® Pairing for Android® phone and Entune™ touch screen system


Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all Android mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.¹

Initiate Bluetooth® on your Android®

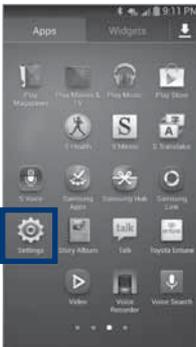

STEP 1

From your APPS SCREEN, select **SETTINGS**

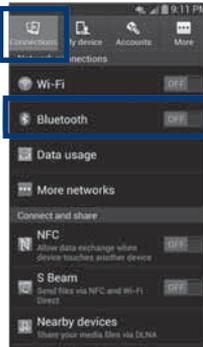

STEP 2

Select **CONNECTIONS** and select **BLUETOOTH**



STEP 3

Ensure **BLUETOOTH** is ON



STEP 4

Select **YOUR PHONE DEVICE** to make it discoverable.

Phone will seek out Bluetooth devices while remaining discoverable.



STEP 5

While your Android device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

¹ Some Android devices may have slightly different SETTINGS screen layout depending on manufacturer of device and Android OS version.

Initiate Bluetooth® on your Entune™ Multimedia Head Unit

Once you have Bluetooth enabled on your phone and ready to pair, you will need to initiate Bluetooth on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.




STEP 6

On your Toyota Vehicle Entune Multimedia Head Unit, Select **SETUP** on the Home Screen.




STEP 7

Select **BLUETOOTH**

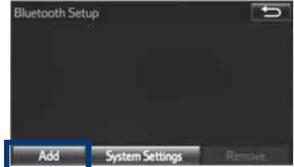

STEP 8

Select **ADD**, to add your phone device

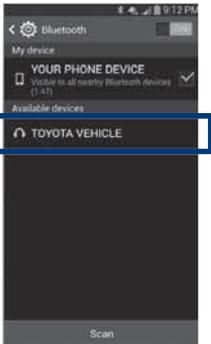

STEP 9

Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.

You may need to enter the provided Bluetooth PIN on your phone.



STEP 10

Your smartphone is now paired with Entune.



STEP 11

Once paired, Entune will attempt to connect audio and contacts on your phone.

BLUETOOTH® DEVICE PAIRING

Initiate Bluetooth® on your Entune™ Multimedia Head Unit (continued)



STEP 12

Using your smartphone, you will need to allow Entune access to your messaging and contacts

It is recommended to check the "Don't ask again" box, so as not to have to press OK every time the phone makes a Bluetooth connection with your Toyota



STEP 13

A confirmation will appear once your phone has been paired and connected.

Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:
www.toyota.com/connect

Your Toyota Owner's Manual
Located in the vehicle glovebox

Toyota Customer
Experience Center
(800) 331-4331

Disclosures

This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.

1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
3. Android is a trademark of Google, Inc. All rights reserved. Google is not a participant in or sponsor of this promotion.
4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.
5. Bluetooth Pairing Guide for select 2015 models.

Bluetooth® Pairing for iPhone® and Entune™ touch screen system


Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all iPhone mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection. Bluetooth Pairing Guide for select 2015 models.

Initiate Bluetooth® on your iPhone®



STEP 1

From the **HOME SCREEN**, select **SETTINGS**

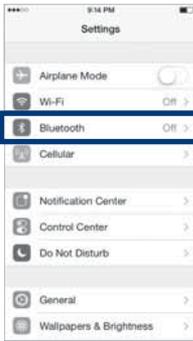

STEP 2

Select **BLUETOOTH**



STEP 3

Ensure **BLUETOOTH** is **ON**



STEP 4

Your iPhone will seek out Bluetooth devices while remaining discoverable



STEP 5

While your iPhone device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

CONTINUE ON THE NEXT PAGE...

BLUETOOTH® DEVICE PAIRING

Initiate Bluetooth® on your Entune™ Multimedia Head Unit

Once you have Bluetooth enabled on your phone and ready to pair, you will need to initiate Bluetooth on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.



STEP 6

Select **SETUP** BUTTON on the Home Screen.




STEP 7

Select **BLUETOOTH**



STEP 8

Select **ADD**, to add your phone device

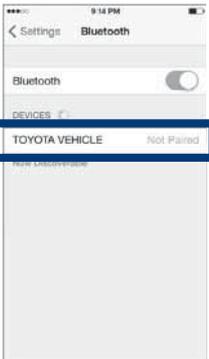

STEP 9

Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.

You may need to enter the provided Bluetooth PIN on your phone.




STEP 10

Your smartphone is now paired with Entune.



STEP 11

Once paired, Entune will attempt to connect audio and contacts on your phone.

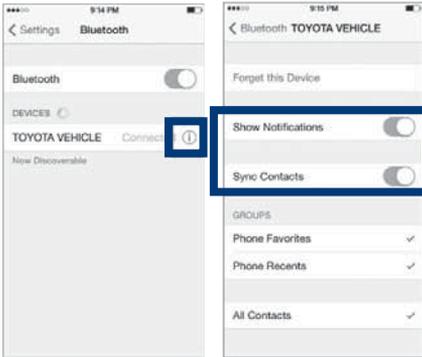

STEP 12

Using your smartphone, you may need to allow Entune access to your messaging and contacts

Only current iPhone text messages can be viewed on the head unit. iPhone does not allow text message reply.

STEP 13

A confirmation will appear once your phone has been paired and connected.

Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:
www.toyota.com/connect

Your Toyota Owner's Manual
Located in the vehicle glovebox

Toyota Customer
 Experience Center
 (800) 331-4331

Disclosures


This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.

1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
3. Android is a trademark of Google, Inc. All rights reserved. Google is not a participant in or sponsor of this promotion.
4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.
5. Bluetooth Pairing Guide for select 2015 models.

Bluetooth® Pairing for Windows Phone® and Entune™ touch screen system

Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all Windows Phone mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection. Bluetooth Pairing Guide for select 2015 models.

Initiate Bluetooth® on your Windows Phone®

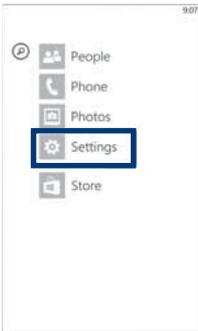

STEP 1

From your APP LIST, select **SETTINGS**



STEP 2

Select **BLUETOOTH**



STEP 3

Ensure **BLUETOOTH** is ON



STEP 4

Phone will seek out Bluetooth devices while remaining discoverable



STEP 5

While your iPhone device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

CONTINUE ON THE NEXT PAGE...

Initiate Bluetooth® on your Entune™ Multimedia Head Unit

Once you have Bluetooth® enabled on your phone and ready to pair, you will need to initiate Bluetooth® on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.




STEP 6

On your Toyota Vehicle Entune Multimedia Head Unit, Select **SETUP BUTTON** on the Home Screen.



STEP 7

Select **BLUETOOTH**

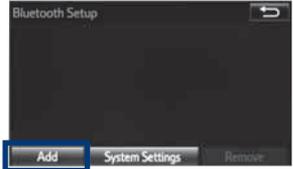

STEP 8

Select **ADD**, to add your phone device



STEP 9

Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.

You may need to enter the provided Bluetooth PIN on your phone.



STEP 10

Your smartphone is now paired with Entune.



STEP 11

Once paired, Entune will attempt to connect audio and contacts on your phone.

BLUETOOTH® DEVICE PAIRING

Initiate Bluetooth® on your Entune™ Multimedia Head Unit (continued)



STEP 12

Using your smartphone, you may need to allow Entune access to your contacts



STEP 13

A confirmation will appear that your phone has been paired and connected.

Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:
www.toyota.com/connect

Your Toyota Owner's Manual
Located in the vehicle glovebox

Toyota Customer
Experience Center
(800) 331-4331

Disclosures

- This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.
1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
 2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
 3. Android is a trademark of Google, Inc. All rights reserved. Google is not a participant in or sponsor of this promotion.
 4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.
 5. Bluetooth Pairing Guide for select 2015 models.

NOTES

NOTES

NOTES



CUSTOMER EXPERIENCE CENTER

1-800-331-4331

