



YARIS
LIFTBACK
2 0 1 6



QUICK REFERENCE GUIDE

2016 Yaris Liftback

This *Quick Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Quick Reference Guide* is not intended as a substitute for the *Owner's Manual* located in your vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Yaris.

A word about safe vehicle operations

This *Quick Reference Guide* is not a full description of Yaris operations. Every Yaris owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Quick Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

INDEX

OVERVIEW

Engine maintenance	7
Fuel tank door release and cap	6
Hood release	7
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Keyless entry*	6

FEATURES/OPERATIONS




Air conditioning/heating	13
Audio	16
Automatic transmission	8
Clock	14
Cruise control	10
Door-Back	16
Light control-Instrument cluster	15
Lights & turn signals	9
Multi-Information Display (MID)	14
Pairing a Bluetooth® Device	16
Parking brake	8
Power outlet	14
Seat adjustments-Front	10
Seat-Folding rear seat	11
Seats-Head restraints	10
Steering wheel switches	15
Tilt steering wheel	8
USB/AUX port	15
Windows-Power	12
Windshield wipers & washers	12

SAFETY AND EMERGENCY FEATURES


Door locks-Power	17
Doors-Child safety locks	17
Floor mat installation	20
Seat belts	17
Spare tire & tools	18
Star Safety System™	19-20
Tire Pressure Monitoring (warning) System	18

* Visit your Toyota dealer for information on customizing this feature.

OVERVIEW

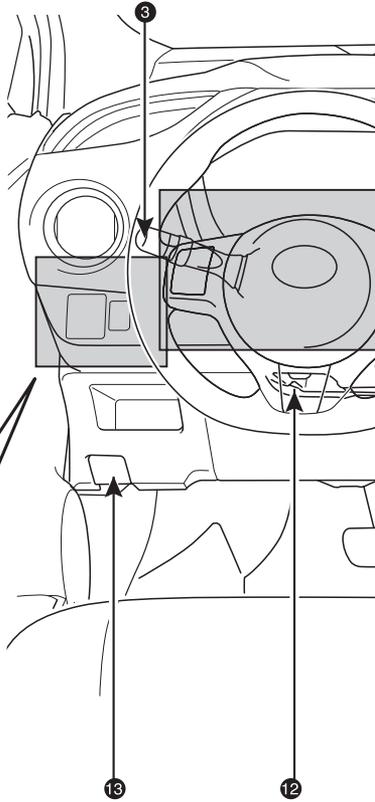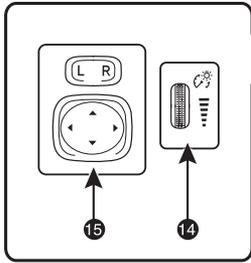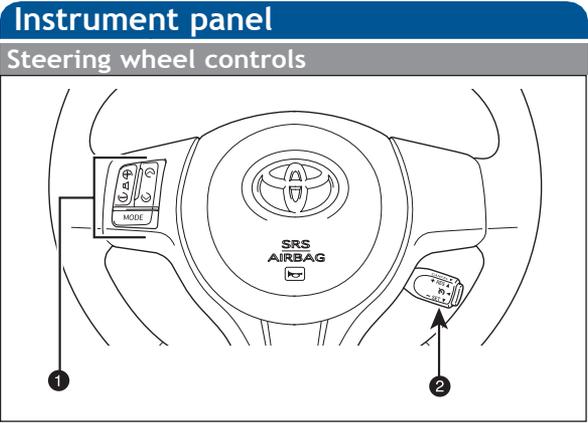

- 1 Steering wheel audio controls¹
- 2 Cruise control¹
- 3 Headlight, turn signal and front fog light¹ controls
- 4 Wiper and washer controls
- 5 Emergency flasher switch
- 6 "AIR BAG ON" and "AIR BAG OFF" indicator
- 7 Rear window defogger switch
- 8 Air Conditioning controls

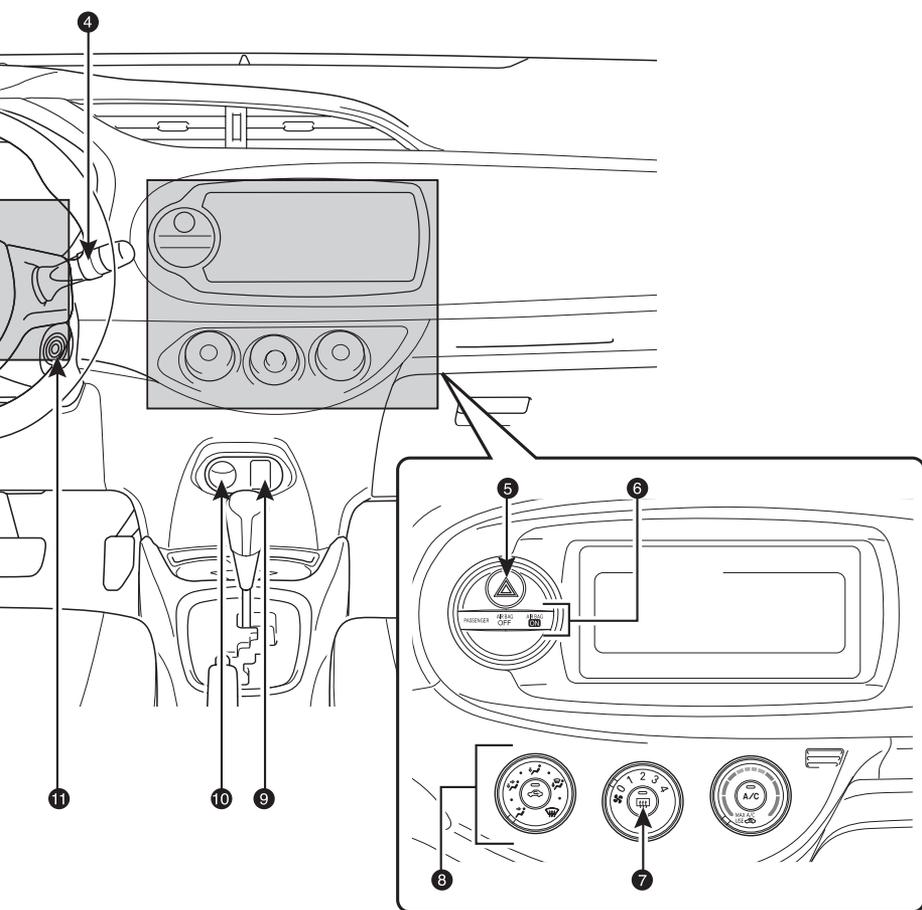


- ⑨ USB port/AUX port¹
- ⑩ 12V DC power outlet
- ⑪ Ignition switch
- ⑫ Tilt steering lock release lever
- ⑬ Hood release
- ⑭ Instrument panel light control
- ⑮ Power outside rearview mirror control switches¹


¹ If equipped

Instrument cluster

With tachometer

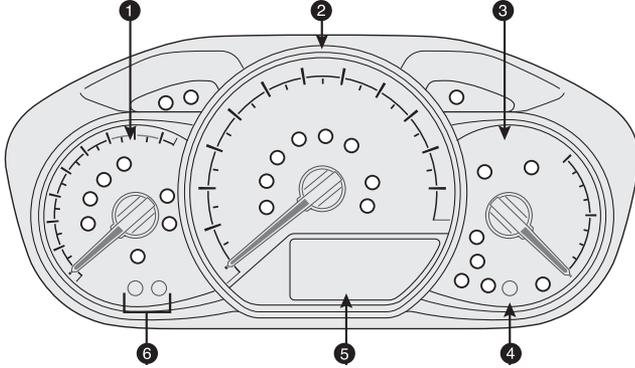

Without tachometer

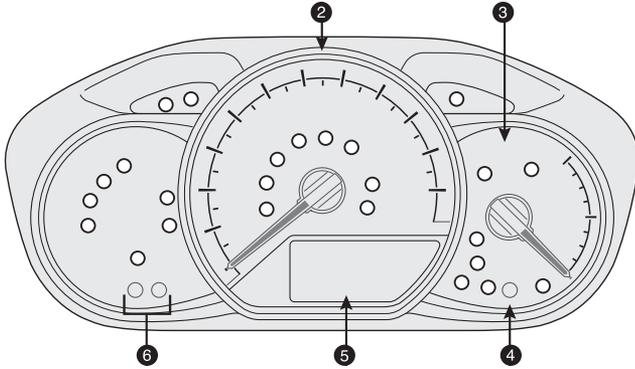

- ① Tachometer (if equipped)
- ② Speedometer
- ③ Fuel gauge (if equipped)
- ④ Display change button
- ⑤ Multi-Information Display
- ⑥ Clock adjusting buttons
- Service indicator and reminder

Indicator symbols

For details, refer to “Indicators and warning lights,” Section 2-2, 2016 Owner’s Manual.

BRAKE Brake system warning¹

 Driver seat belt reminder (alarm will sound if speed is over 12 mph)



¹ If indicator does not turn off within a few seconds of starting engine, there may be a malfunction. Have vehicle inspected by your Toyota dealer.

	Eco Driving indicator light ¹
	Charging system warning ¹
	Malfunction/Check Engine indicator ¹
	Low engine oil pressure warning ¹
	Open door warning
	Airbag SRS warning ¹
	Low windshield washer fluid warning
	Electric power steering system warning ¹
	Low fuel level warning
	Engine oil replacement reminder ¹
	AIR BAG ON indicator
	AIR BAG OFF indicator ¹
	VSC OFF indicator ¹
	TRAC OFF indicator ¹
	Front fog light indicator
	Headlight high beam indicator
	Turn signal indicator
	Engine coolant temperature warning ¹
	Slip indicator ¹
	SET Cruise control indicator ² /Cruise control SET indicator
	Anti-lock Brake System warning ¹
	Low Tire Pressure Warning ¹
	Arrow direction indicates fuel tank door position

² For details, refer to “Cruise control” Section 4-5, 2016 Owner’s Manual.



Keyless entry (if equipped)

Locking operation

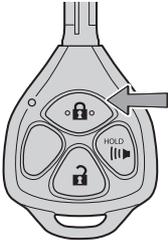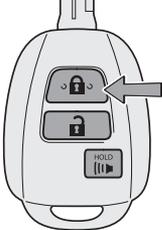Type A  Type B 

Push 

Unlocking operation

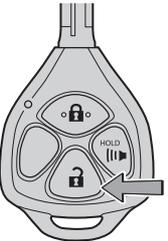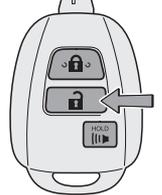Type A  Type B 

Push ONCE: Driver door
TWICE: All doors 


NOTE: If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.

Panic button




Push and hold 

Fuel tank door release and cap

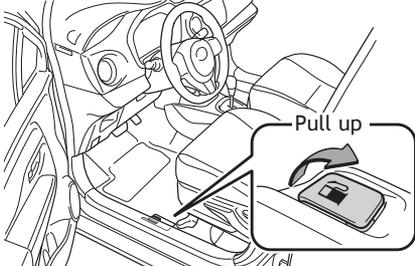


Pull up

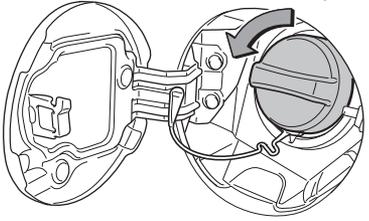


Turn to open

NOTE: Tighten until one click is heard. If the cap is not tightened enough, Check Engine “” indicator may illuminate.

Hood release

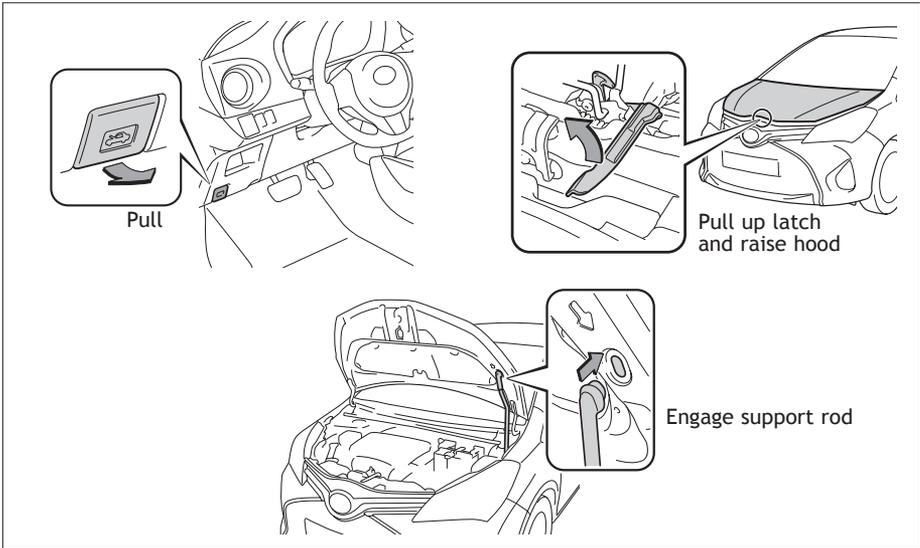

Engine maintenance

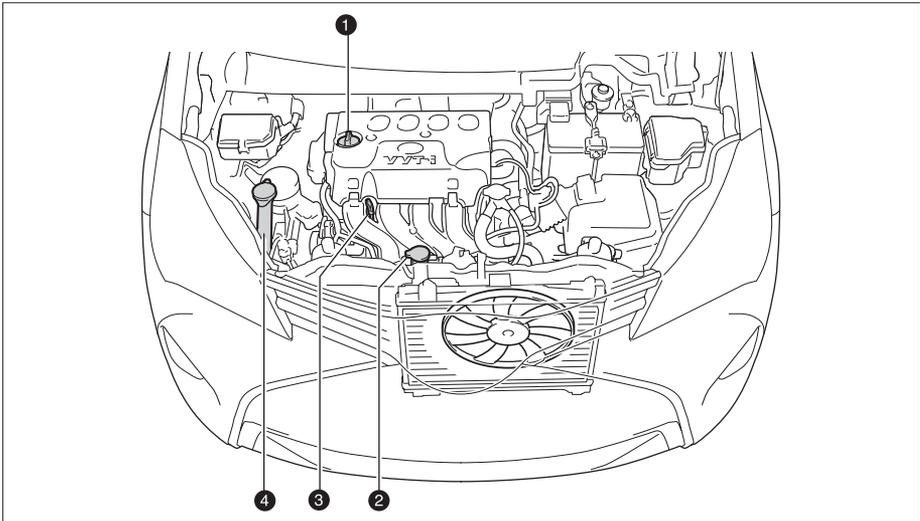


- ① Engine oil filler cap
- ② Engine coolant reservoir
- ③ Engine oil level dipstick
- ④ Windshield washer and rear window washer fluid tank

NOTE: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the "Warranty & Maintenance Guide."

FEATURES/OPERATIONS


Automatic transmission (if equipped)

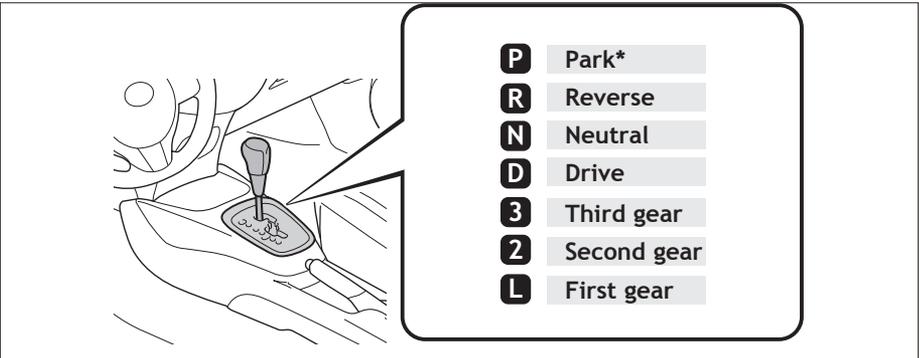

* The ignition switch must be “ON” and the brake pedal depressed to shift from Park.

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the “D” position.


Tilt steering wheel

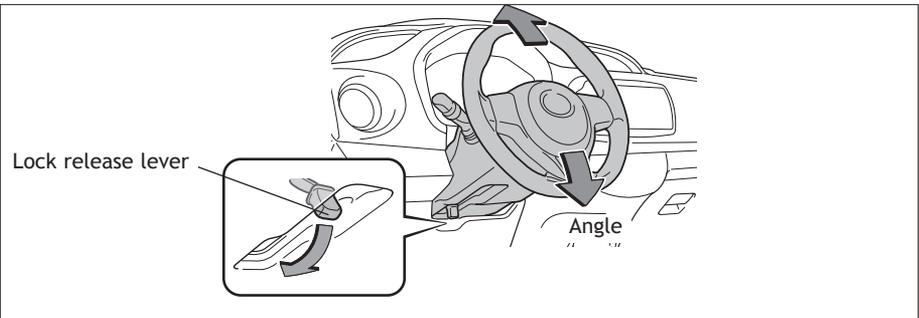

Hold wheel, push lever down, set angle and return lever.

NOTE: Do not attempt to adjust while the vehicle is in motion.


Parking brake

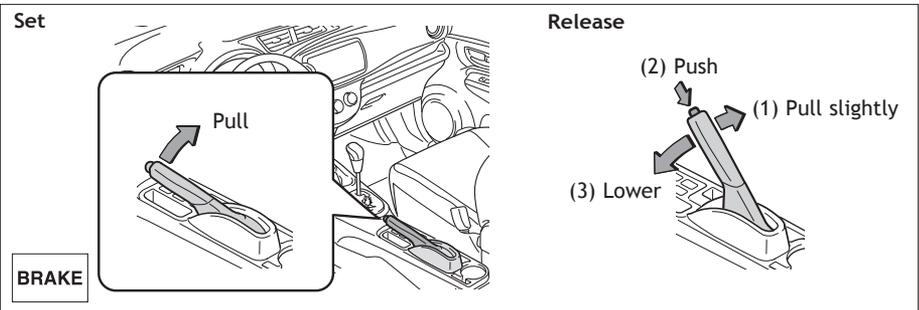


Lights & turn signals

Headlights



Type A

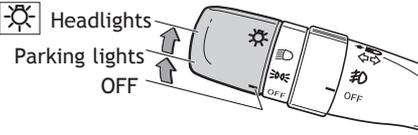


Type B

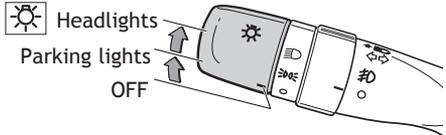

Type C

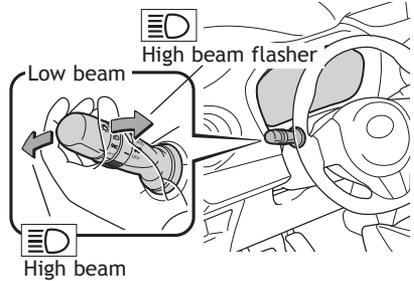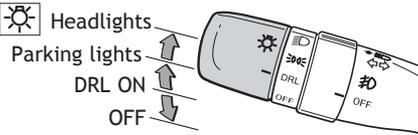


Turn signals

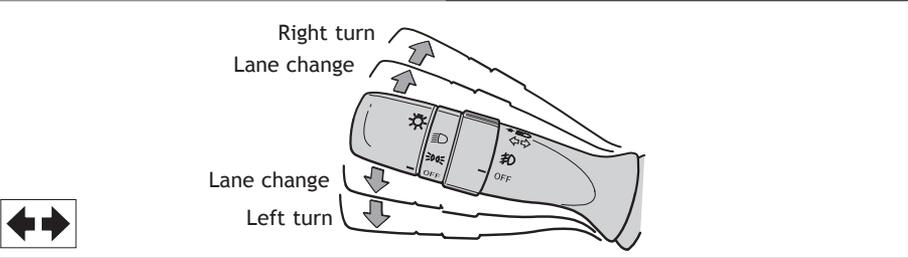


Front fog lights (if equipped)

Type A


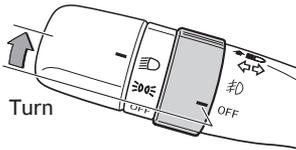


Type B

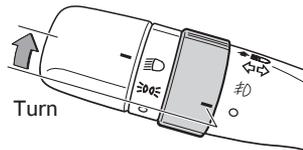

Front fog lights turn on only when the headlights are on low beam.



Cruise control (if equipped)

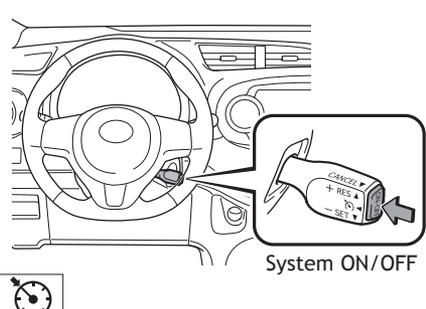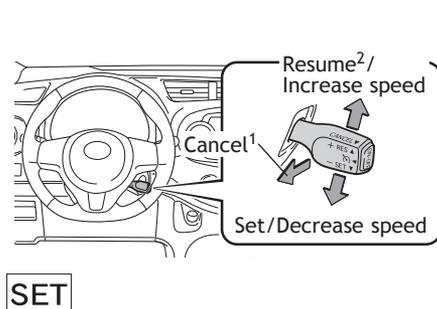Turning system ON/OFF	Functions
 <p>System ON/OFF</p>	 <p>Resume²/ Increase speed</p> <p>Cancel¹</p> <p>Set/Decrease speed</p> <p>SET</p>


- ¹ The set speed may also be cancelled by depressing the brake pedal or the clutch pedal (Manual Transmission).
- ² Unless vehicle speed drops below 10 mph, the set speed may be resumed once vehicle exceeds 25 mph.

Refer to the *Owner's Manual* for more details.

Seat adjustments-Front

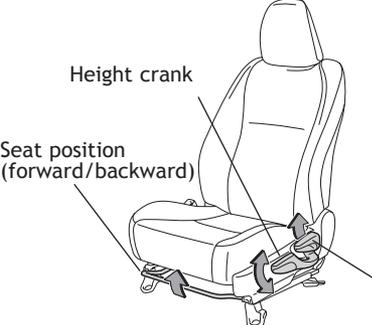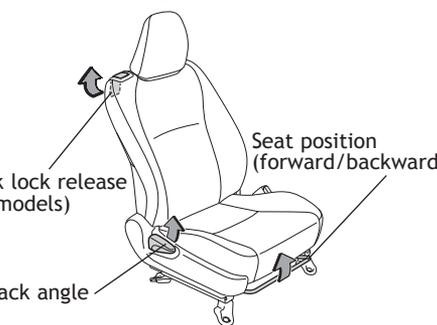Driver seat	Passenger seat
 <p>Height crank</p> <p>Seat position (forward/backward)</p> <p>Seatback angle</p>	 <p>Seatback lock release (3-door models)</p> <p>Seat position (forward/backward)</p> <p>Seatback angle</p>


Seats-Head restraints

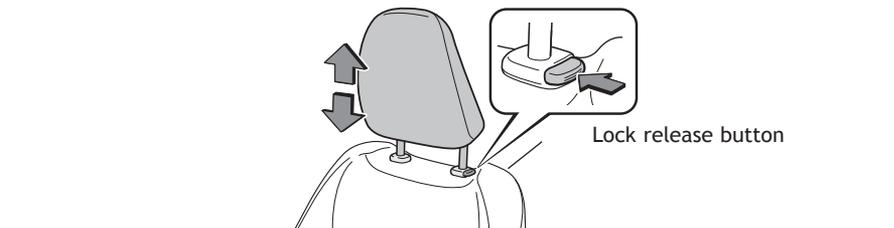


Lock release button

Seat-Folding rear seat

Before folding

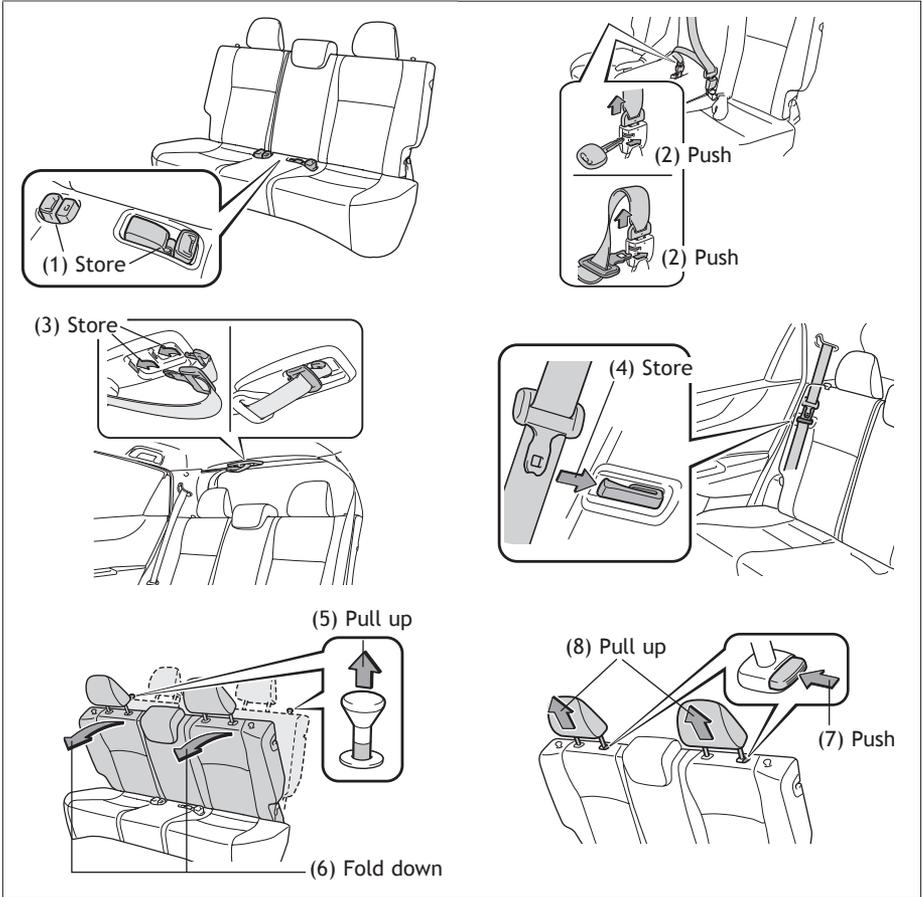


Fold (split seat)

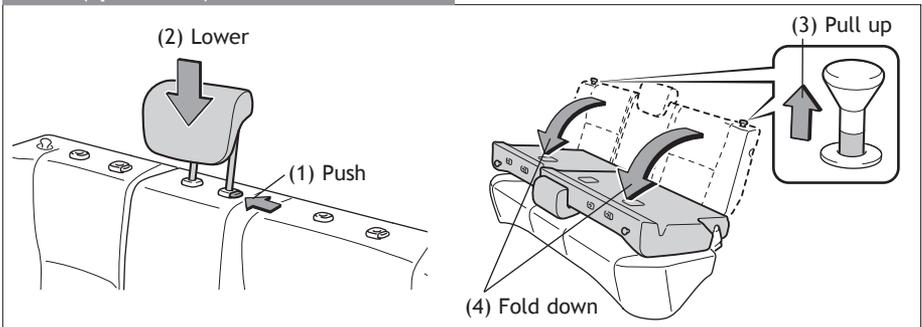


Windshield wipers & washers

Front

Type A

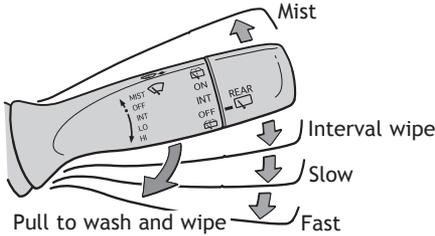


Type B

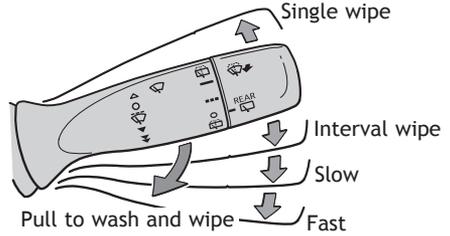


Rear

Type A

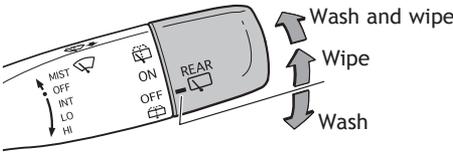


Type B

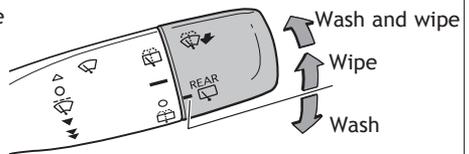


Windows-Power

Driver side

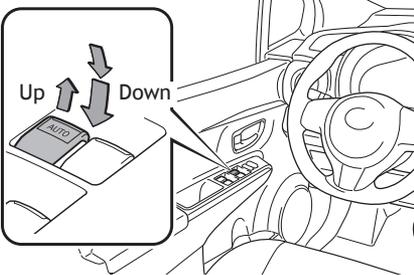

Window lock switch

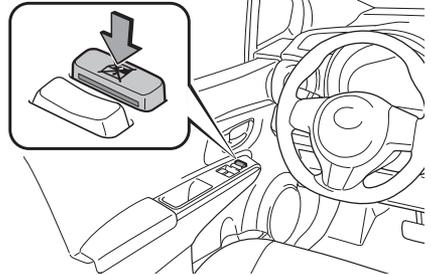


Automatic operation (driver's window only) Push the switch completely down and release to fully open. To stop window partway, lightly push the switch in the opposite direction.


Window lock switch Deactivates all passenger windows. Driver's window remains operable.

Air conditioning/heating

With air conditioning ON/OFF button

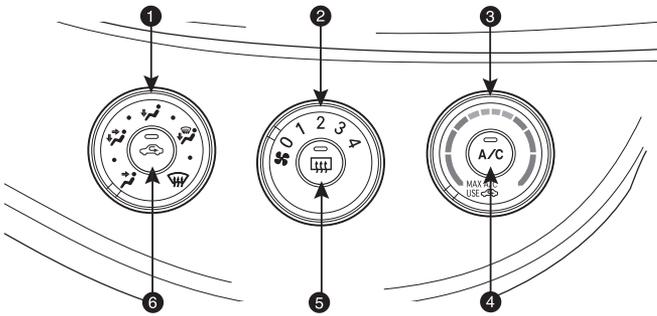


Without air conditioning ON/OFF button

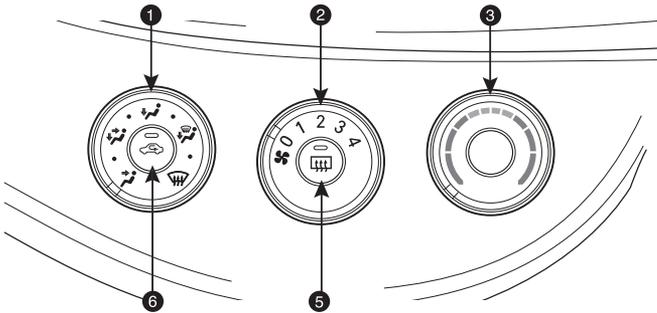

- ❶ Airflow vent
“” mode uses outside air to reduce window fogging
- ❷ Fan speed
- ❸ Temperature selector
- ❹ Air conditioning ON/OFF
- ❺ Rear window defogger ON/OFF
- ❻ Recirculate cabin air (outside air when OFF)


Multi-Information Display (MID)

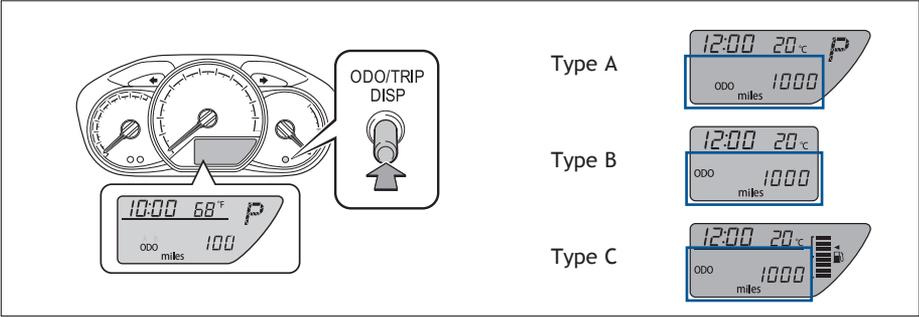


Push button to change information in the following succession (shown in box indicated above):

- (1) Odometer
- (2) Trip meters
- (3) Miles left on remaining fuel (RANGE/MI)
- (4) Average gas mileage (AVG/MPG)
- (5) Current gas mileage (MPG)
- (6) Average vehicle speed from engine start (AVG/MPH)

Clock

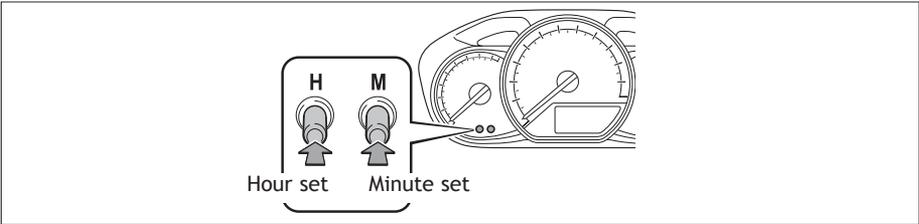


Power outlet

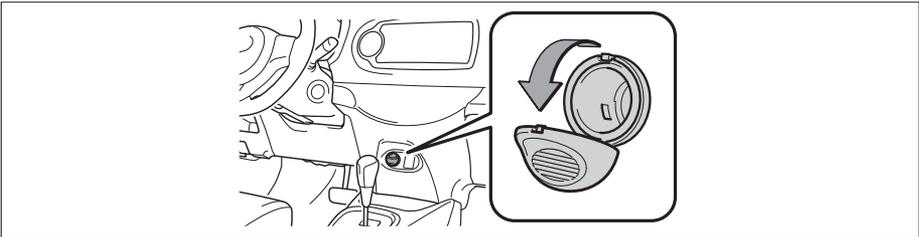


Designed for 12V car accessories. Key must be in the "ACC" or "ON" position to be used.

Light control-Instrument cluster

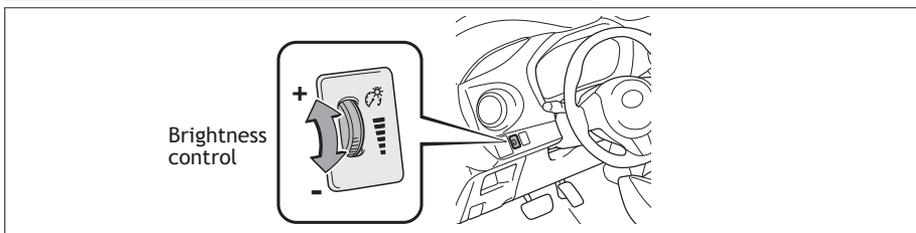

USB/AUX port (if equipped)

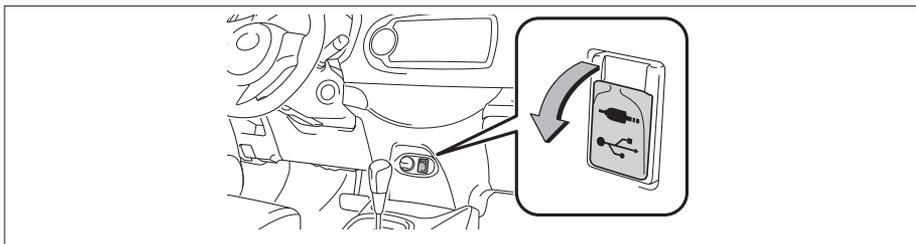


USB port

By connecting a USB-compatible portable audio device or USB memory to the USB port, you can listen to music from the portable audio device or USB memory through the vehicle's speaker system.

AUX port

By inserting a mini plug into the AUX port, you can listen to music from a portable audio device through the vehicle's speaker system while in AUX mode.

Steering wheel switches (if equipped)

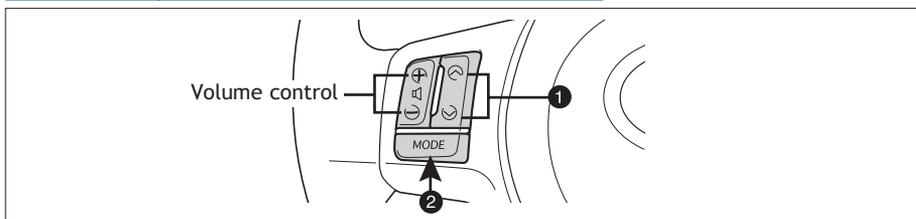

1 "V A"

-In radio mode Push to select a preset station; push and hold to seek the next strong station.


-In CD mode Push to skip up or down to a next/previous track.

2 "MODE"

Push to turn audio ON and select an audio mode. Push and hold to turn the audio system OFF.

Audio

Yaris Entune™ Audio

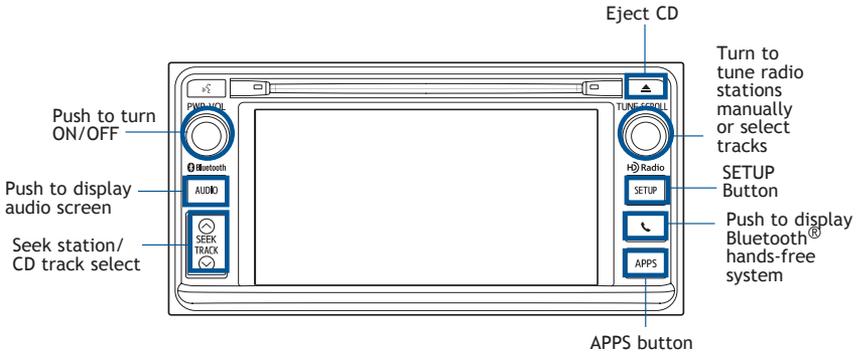

Pairing a Bluetooth® Device


1. Press the “SETUP” button
2. Touch “Bluetooth” on the “Setup” screen
3. Touch “Registered Devices”
4. Touch “Add New”
5. Go to your Bluetooth Device and access Bluetooth settings
6. On your Bluetooth Device, touch the device to be paired.
7. Input the passcode displayed on the screen into your Bluetooth device
8. When the connection is completed the screen will display “Phone connection successful”.

Once you have connected the Bluetooth device, it is automatically connected whenever the engine switch is in the “ACC” or “ON” position.

For detailed pairing instructions, see your audio system owner’s manual.


Door-Back

Open/Close

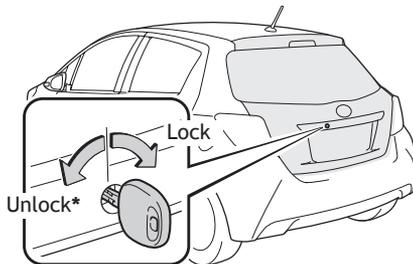


SAFETY AND EMERGENCY FEATURES

Door locks-Power

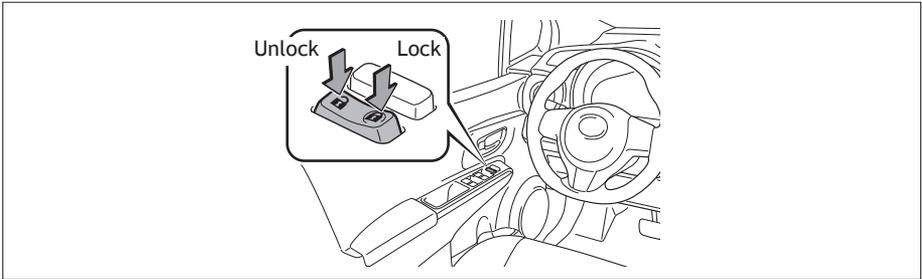


Doors-Child safety locks

Rear door
(5-door models only)

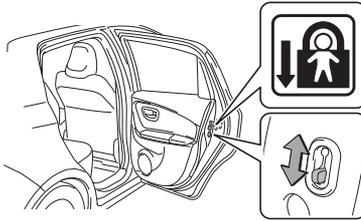

Moving the lever downward will allow the door to be opened only from the outside.


Seat belts

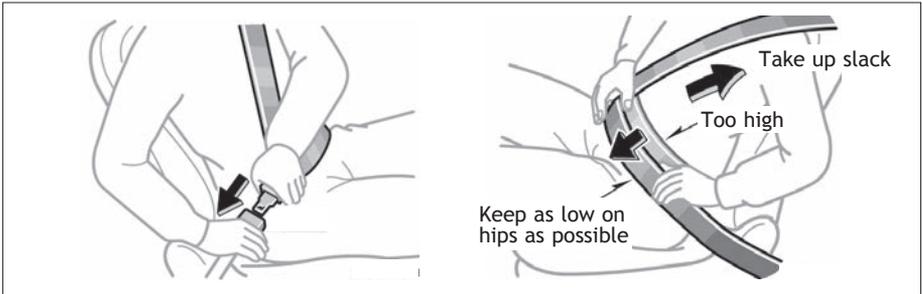

NOTE: If a passenger's seat belt is fully extended, then retracted even slightly, the Automatic locking retractor (ALR) will prevent it from being re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.

Tire Pressure Monitoring (warning) System

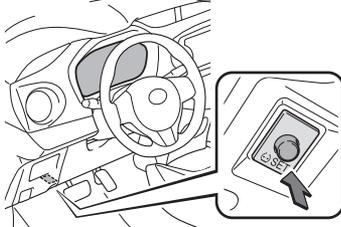



System reset initialization


1. Push and hold “ SET” button until the indicator blinks three times.
2. Wait a few minutes to allow initialization to complete.

If tire pressure becomes critically low on any of the tires (excluding the spare), “” indicator will illuminate. Correctly adjusting tire inflation will turn off the light after a few minutes. If the light does not turn off, have the system checked by your Toyota dealer.

Refer to the *Owner’s Manual* for more details.

Spare tire & tools

Tool location

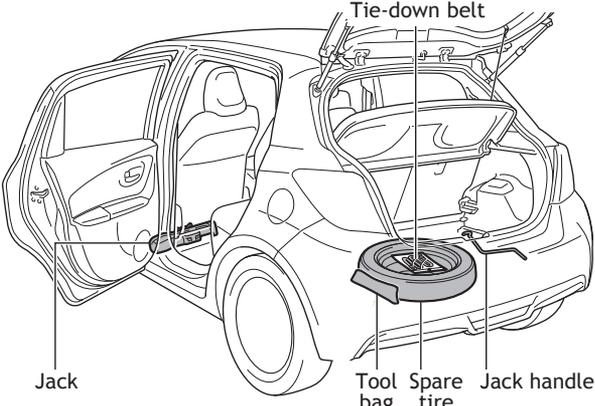

Tie-down belt


Jack

Tool bag

Spare tire

Jack handle

Removing the spare tire

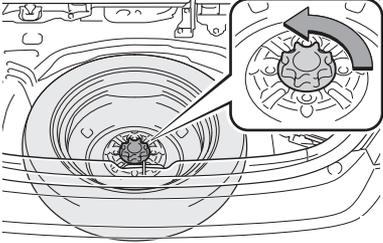

Loosen and remove the bolt.

Refer to the *Owner’s Manual* for tire changing and jack positioning procedures.

Star Safety System™

All new Toyota vehicles come standard with the Star Safety System™, which combines Vehicle Stability Control (VSC), Traction Control (TRAC), Anti-lock Braking System (ABS), Electronic Brake-force Distribution (EBD), Brake Assist (BA) and Smart Stop Technology (SST).

Vehicle Stability Control (VSC)

VSC helps prevent loss of traction during cornering by reducing engine power and applying brake force to selected wheels.

Toyota's VSC monitors steering angle and the direction your vehicle is traveling. When it senses that the front or rear wheels begin to lose traction, VSC reduces engine power and applies braking to selected wheels. This helps restore traction and vehicle control.

Traction Control (TRAC)

VSC helps prevent loss of traction during cornering by reducing engine power, and Traction Control helps maintain traction on loose gravel and wet, icy, or uneven surfaces by applying brake force to the spinning wheel(s).

Toyota's TRAC sensors are activated when one of the drive wheels starts to slip. TRAC limits engine output and applies the brakes to the spinning wheel. This transfers power to the wheels that still have traction to help keep you on track.

Anti-Lock Brake System (ABS)

ABS helps prevent brakes from locking up by "pulsing" brake pressure to each wheel. This limits brake lockup and helps provide directional control for the current road conditions.

Toyota's ABS sensors detect which wheels are locking up and limits wheel lockup by "pulsing" each wheel's brakes independently. Pulsing releases brake pressure repeatedly for fractions of a second. This helps the tires attain the traction that current road conditions will allow, helping you to stay in directional control.

Electronic Brake Force Distribution (EBD)

Toyota's ABS technology has Electronic Brake-force Distribution (EBD) to help maintain control and balance when braking. Abrupt stops can cause a vehicle to tilt forward, reducing the braking power of the rear wheels. EBD responds to sudden stops by redistributing brake force to enhance the braking effectiveness of all four wheels.

Brake Assist (BA)

Brake Assist is designed to detect sudden or "panic" braking, and then add braking pressure to help decrease the vehicle's stopping distance. When there's only a split second to react, Brake Assist can add additional brake pressure more quickly than just the driver alone can.

SAFETY AND EMERGENCY FEATURES

Smart Stop Technology (SST)

Smart Stop Technology automatically reduces engine power when the accelerator and brake pedals are pressed simultaneously under certain conditions.

SST engages when the accelerator is depressed first and the brakes are applied firmly for longer than one-half second at speeds greater than five miles per hour.


SST doesn't engage if the brake pedal is depressed before the accelerator pedal, allowing vehicles to start on a steep hill and safely accelerate without rolling backward.

Floor mat installation

There are two types of Toyota floor mats: carpeted and all-weather. Each vehicle has model-specific floor mats. Installation is easy.

To keep your floor mat properly positioned, follow these steps:

- Only use floor mats designed for your specific model.
- Use only one floor mat at a time, using the retaining hooks to keep the mat in place.
- Install floor mats right side up.

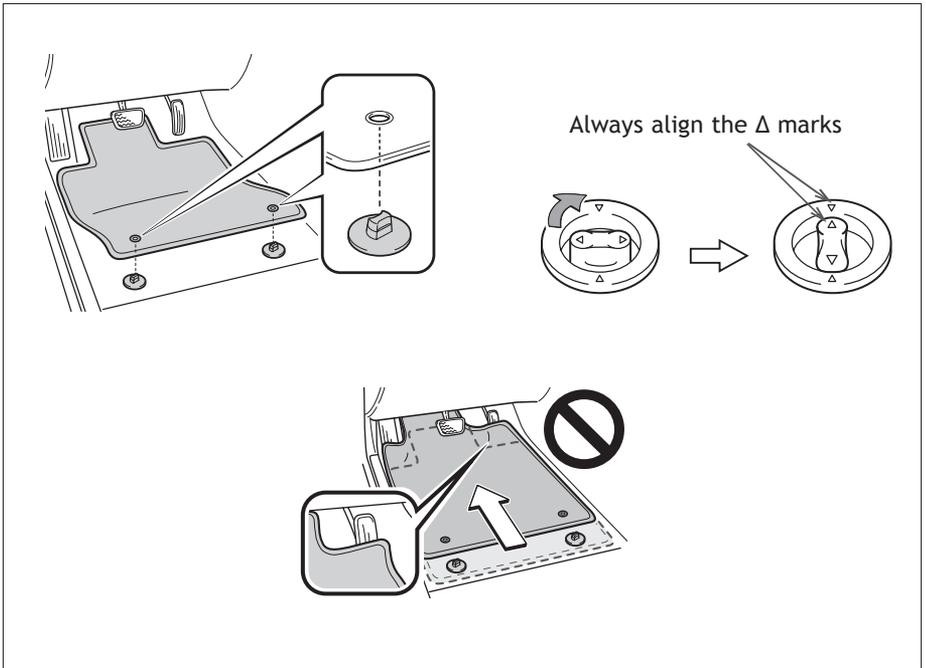



CUSTOMER EXPERIENCE CENTER

1-800-331-4331

