

# TACOMA

2 0 1 6



QUICK REFERENCE GUIDE

# 2016 Tacoma

This *Quick Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Quick Reference Guide* is not intended as a substitute for the *Owner's Manual* located in your vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Tacoma.

## A word about safe vehicle operations

This *Quick Reference Guide* is not a full description of Tacoma operations. Every Tacoma owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Quick Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

# INDEX

## OVERVIEW

Engine maintenance	9
Fuel tank door release and cap	6
Hood release	6
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
<b>Keyless entry<sup>1,2</sup></b>	<b>7</b>
Light control-Instrument panel	6
<b>Smart Key system<sup>1,2</sup></b>	<b>8</b>

## FEATURES/OPERATIONS

Active traction control	24
Air conditioning/heating	21-22
Audio	18-19
Automatic transmission	10
Blind Spot Monitor (BSM)	25
<b>Bluetooth® Device Pairing Section</b>	<b>33-42</b>
Clock	22
Clutch start cancel	13
Crawl control	12
Cruise control	17
Four-wheel drive	11
Garage door opener (HomeLink®) <sup>3</sup>	25
<b>Lights<sup>1</sup> &amp; turn signals</b>	<b>16</b>
Manual transmission	11
Moon roof	20
Multi-Information display	20
Multi-terrain select	12
Odometer and trip meter	13
Parking assist	26
Parking brake	14
Power outlets	23
Rear differential lock	24
Rear view monitor system	26
Seat adjustments-Front	14
Seat heaters	22
Seats-Folding rear	15

Seats-Head restraints	14
Tilt and telescopic steering wheel	13
TRAC/VSC OFF switch	24
Trailer lights	23
Windows-Power	16
Windshield wipers & washers	17

## SAFETY AND EMERGENCY FEATURES


Door locks-Power	27
Doors-Child safety locks	28
Floor mat installation	31
Seat belts	27
Seat belts-Shoulder belt anchor	27
Spare tire & tools	29
Star Safety System™	30-31
Tire Pressure Monitoring (warning) System	28

<sup>1</sup> Visit your Toyota dealer for information on customizing this feature.


<sup>2</sup> Programmable by customer. Refer to the Owner's Manual for instructions and more information.

<sup>3</sup> HomeLink® is a registered trademark of Gentex Corporation.

# OVERVIEW

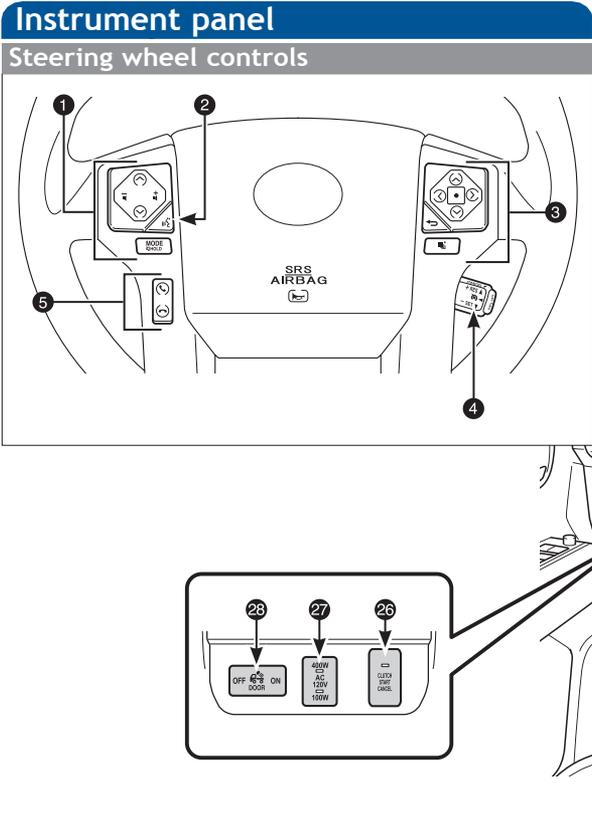

- ① Audio controls switches<sup>4</sup>
- ② Voice command button<sup>4</sup>
- ③ Multi-Information control switches<sup>1</sup>
- ④ Cruise control switch<sup>1</sup>
- ⑤ Telephone controls<sup>4</sup>
- ⑥ Headlight, turn signal and front fog light controls
- ⑦ Multi-Information Display<sup>1</sup>
- ⑧ Windshield wiper and washer controls
- ⑨ Audio/Navigation<sup>1</sup> system<sup>4</sup>
- ⑩ GoPro® Camera mounting bracket
- ⑪ Four-wheel drive control switch<sup>1</sup>
- ⑫ Emergency flasher switch
- ⑬ Air conditioning controls
- ⑭ Power mode switch<sup>3</sup>
- ⑮ Wireless charger switch<sup>1</sup>
- ⑯ AUX/USB port
- ⑰ Intuitive parking assist switch<sup>1</sup>

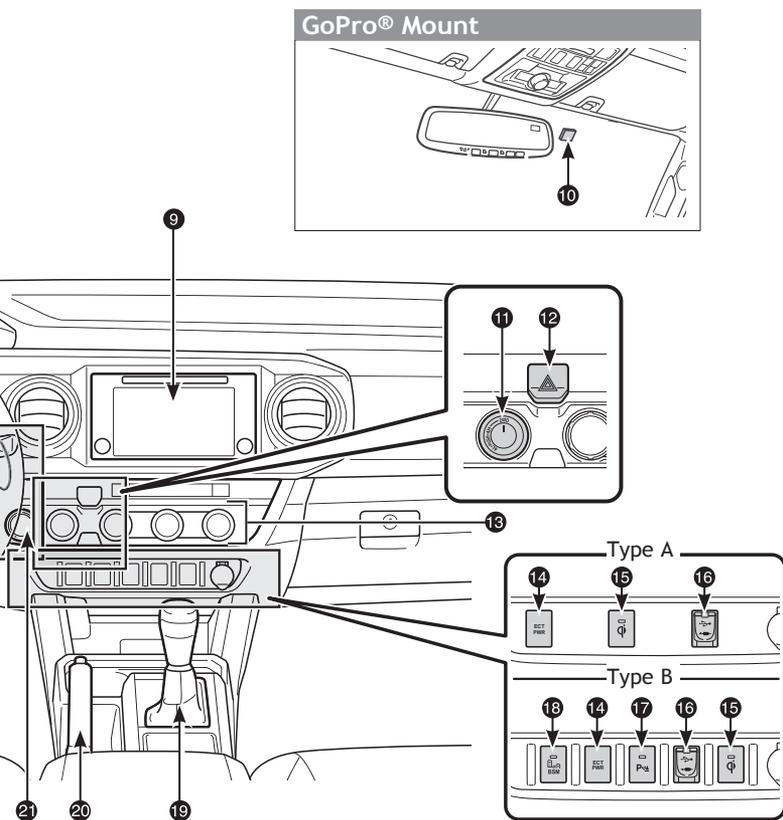

- 18 Blind Spot Monitor (BSM) switch<sup>1</sup>
- 19 Shift lever
- 20 Parking brake
- 21 "ENGINE START STOP" button (Smart Key)<sup>1</sup>
- 22 Ignition switch<sup>1</sup>
- 23 Tilt and telescopic steering lock release lever
- 24 Tire Pressure Monitoring (warning) System reset switch<sup>1</sup>
- 25 Hood lock release lever
- 26 Clutch start cancel switch<sup>2</sup>
- 27 Power outlet main switch<sup>1</sup>
- 28 Cargo lamp main switch<sup>1</sup>

<sup>1</sup> If equipped


<sup>2</sup> Manual Transmission only

<sup>3</sup> Automatic Transmission only


<sup>4</sup> For details, refer to the "Navigation System Owner's Manual" and "2016 Entune™ Audio Quick Reference Guide."

## Instrument cluster

Vehicles without a multi-information display

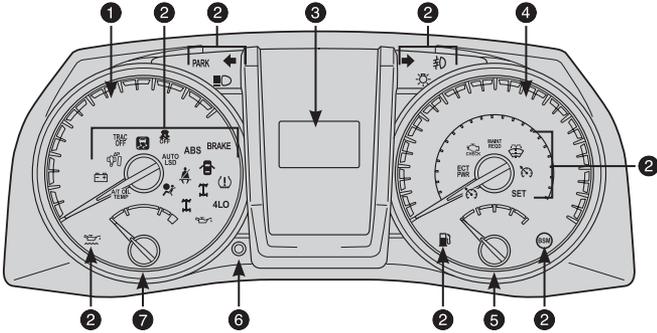

Vehicles with a multi-information display

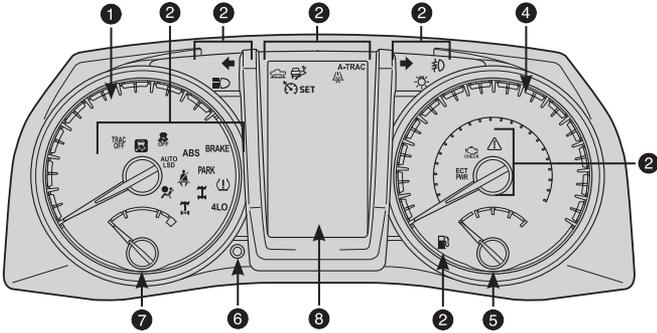

- ① Tachometer
- ② Service indicator and reminder
- ③ Odometer/trip meter
- ④ Speedometer
- ⑤ Fuel gauge
- ⑥ ODO/TRIP display switch and instrument panel light control button
- ⑦ Engine coolant temperature gauge
- ⑧ Multi-information display (If equipped)

## Indicator symbols

For details, refer to “Indicators and warning lights,” Section 2-2, 2016 Owner’s Manual.



Low engine oil pressure warning<sup>1,2</sup>



Low engine oil level warning light<sup>2</sup>



Malfunction/Check Engine indicator<sup>1</sup>



Blind Spot Monitor (BSM)<sup>5</sup> and outside rear view mirror indicator

	Engine oil replacement reminder <sup>1,2</sup>		Brake system warning <sup>1</sup>
	Open door warning <sup>2</sup>		Parking brake indicator
	Airbag SRS warning <sup>1</sup>		Driver/Front passenger seat belt reminder
	Automatic Transmission fluid temperature warning <sup>1,2</sup>		Low fuel level warning
	Low Tire Pressure Warning <sup>1,5</sup>		Slip indicator <sup>1</sup>
	Security indicator <sup>5</sup>		Fuel tank position indicator
	Headlight low beam indicator		Multi-terrain select indicator <sup>5</sup>
	Headlight high beam indicator		Crawl control indicator <sup>5</sup>
	Turn signal indicator		Brake Override System warning light <sup>1,2</sup>
	Fog light indicator <sup>5</sup>		Low outside temperature indicator
	Four-wheel drive indicator		Power mode indicator
	Low speed four-wheel drive indicator		Master warning <sup>1</sup>
	Rear differential lock indicator <sup>1,3,5</sup>		Charging system warning <sup>1,2</sup>
	Vehicle Stability Control (VSC) OFF indicator <sup>1</sup>		
	Active traction control system indicator <sup>5</sup>		
	Traction control (TRAC) OFF indicator <sup>1</sup>		
	AUTO Limited Slip Differential (AUTO LSD) indicator <sup>1</sup>		
	Anti-lock Brake System warning <sup>1</sup>		
	Cruise control indicator <sup>4</sup> / Cruise control SET indicator <sup>1,4,5</sup>		
	Front passenger occupant classification indicator / Front passenger airbag ON/OFF indicator <sup>1</sup>		

<sup>1</sup> If indicator does not turn off within a few seconds of starting engine, there may be a malfunction. Have vehicle inspected by your Toyota dealer.



<sup>2</sup> Without multi-information display.

<sup>3</sup> If this light flashes, refer to "Rear differential lock system," Section 4-5, 2016 Owner's Manual.

<sup>4</sup> If this light flashes, refer to "Cruise control," Section 4-5, 2016 Owner's Manual.




<sup>5</sup> If equipped.

### Fuel tank door and cap

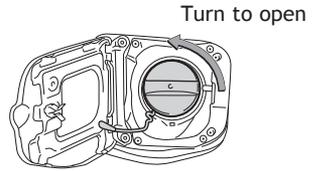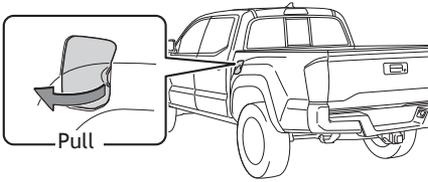


**NOTE:** Tighten until one click is heard. If the cap is not tightened enough, Check Engine “” indicator may illuminate.

### Hood release

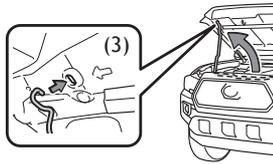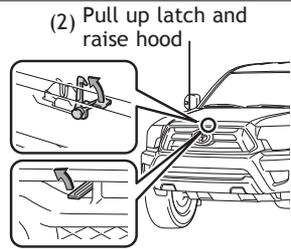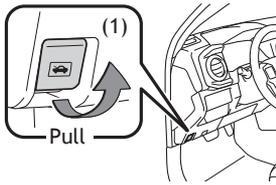

### Light control-Instrument panel

Brightness control

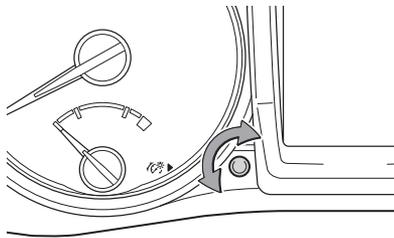

## Keyless entry (if equipped)

### Locking operation

Type A



Type B



Push




### Unlocking operation

Type A



Type B

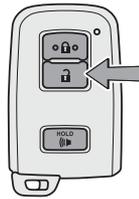

Push ONCE: Driver door  
TWICE: All doors



**NOTE:** If a door is not opened within 30 seconds of unlocking, all doors will relock for safety.

### Panic button




Push and hold



## Smart Key system (if equipped)

### Start function

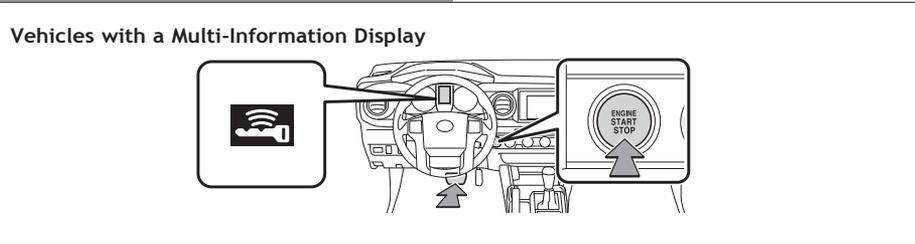


**NOTE:** Carry the electronic key to enable start function. Gear shift lever must be in Park and brake pedal depressed.

### Power (without starting engine)

Without depressing the brake pedal, pressing the engine switch will change the operation mode in succession from:

- ACC** Accessories such as the radio will operate.
- ON** Power ON; the engine not running.
- OFF** All systems OFF.

### Locking operation

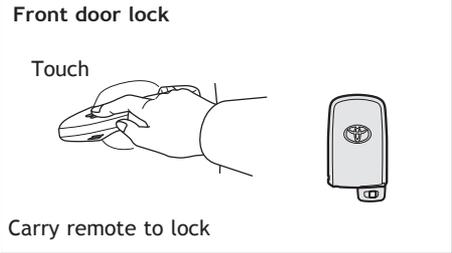

### Unlocking operation




\* Driver door unlocking function can be programmed to unlock driver door only, or all doors. Grasping front passenger door handle will unlock all doors.


**NOTE:** Doors may also be locked/unlocked using remote.

## Engine maintenance

### 4 cylinder (2TR-FE) engine

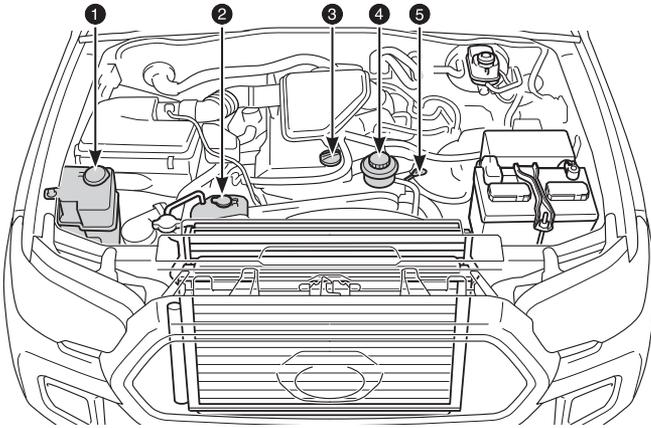

### 6 cylinder (2GR-FKS) engine

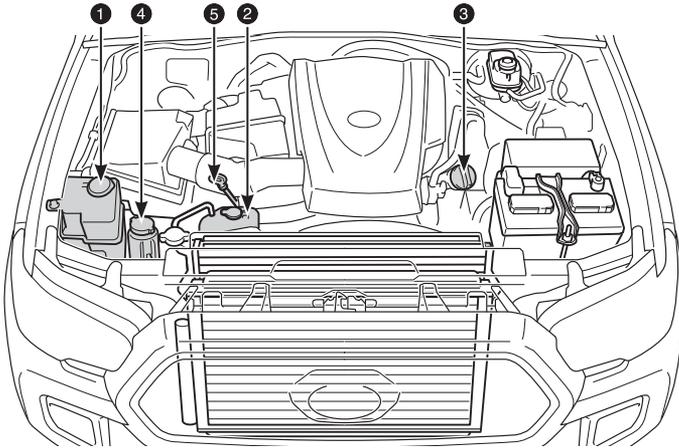


- ① Windshield washer fluid tank
- ② Engine coolant reservoir
- ③ Engine oil filler cap
- ④ Power steering fluid reservoir
- ⑤ Engine oil level dipstick

**NOTE:** Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the “Warranty & Maintenance Guide.”

# FEATURES/OPERATIONS

## Automatic transmission (if equipped)

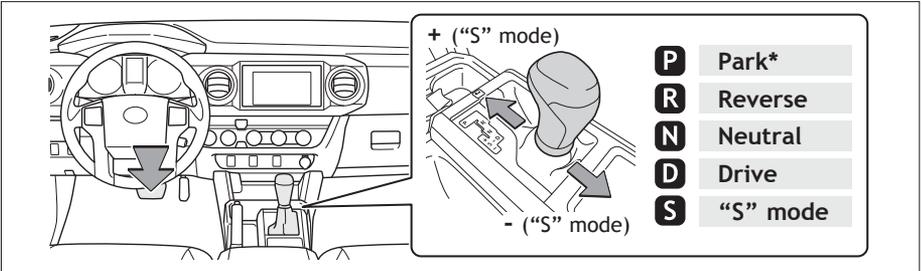


\* The ignition switch must be "ON" and the brake pedal depressed to shift from Park.

The initial shift range in "S" mode is set automatically to 5 or 4 according to vehicle speed.

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.


## Power mode

### Type A

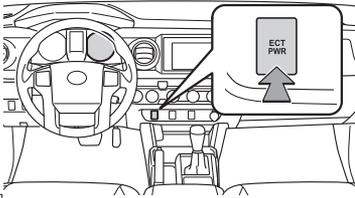


ECT  
PWR

### Type B

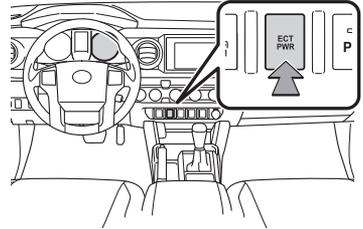

Use when high levels of response and feeling are desirable, such as when driving in mountainous regions or when pulling a trailer.


## "S" mode

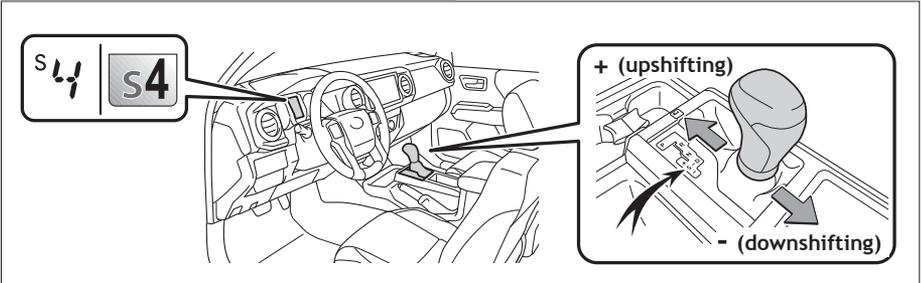


Selecting shift ranges using "S" mode restricts the upper limit of the possible gear ranges, controls engine braking forces and prevents unnecessary upshifting.

## Manual transmission (if equipped)


### 5-speed

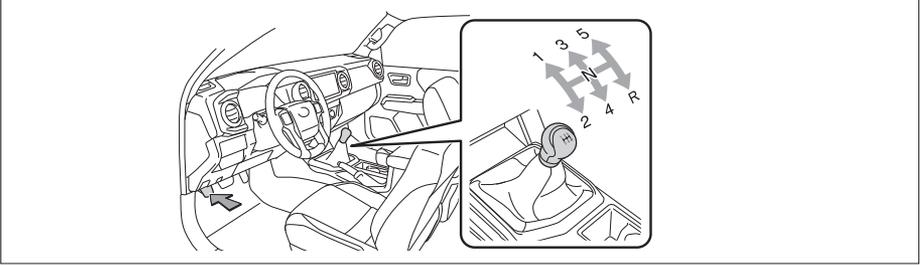

### 6-speed

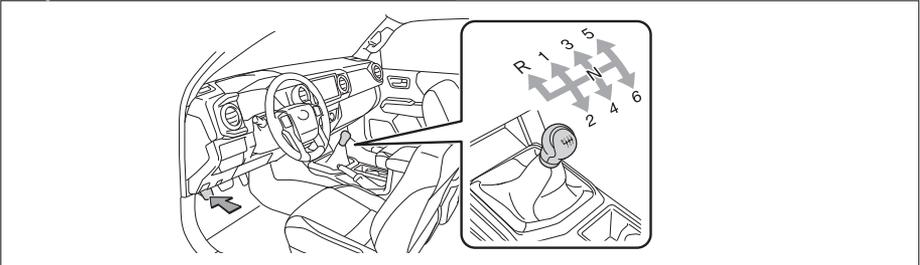

## Four-wheel drive (if equipped)

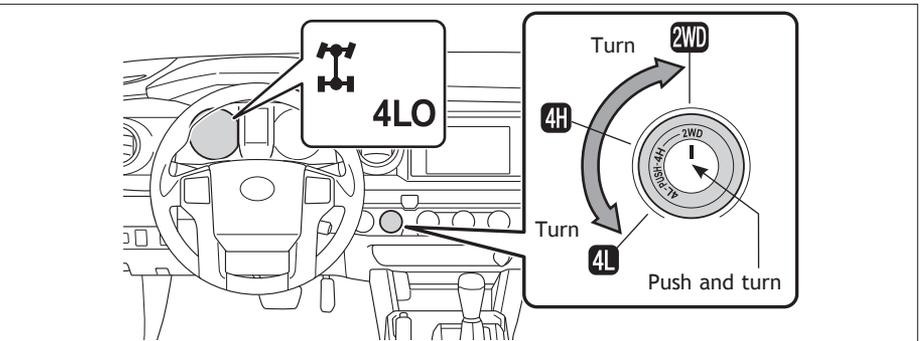**2WD**

High speed (2WD)

**4H**

High speed (4WD)

Shift when speed is below 62 mph.

**4L**


Low speed (4WD)

Shift into neutral while stopped, or depress clutch pedal at speeds below 2 mph.

For best fuel economy and performance under normal driving conditions, keep in "2WD" position.

# FEATURES/OPERATIONS

## Multi-terrain select (if equipped)

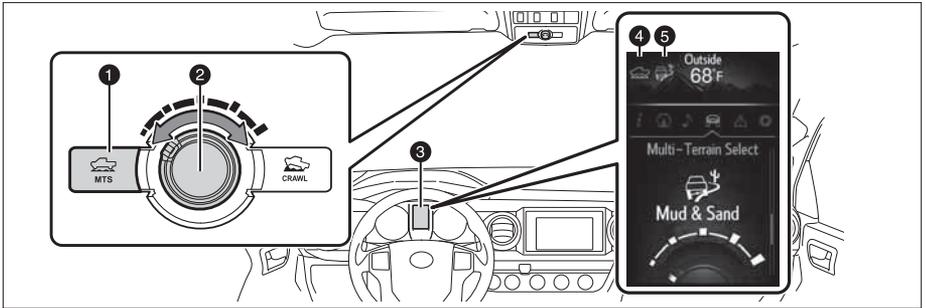

Improves driveability in offroad situations. Select one of five modes that most closely matches the terrain on which you are driving. Brake control can be optimized in accordance with the selected mode.

- ① Multi-terrain select on/off switch
- ② Mode selector dial
- ③ Multi-Information display
- ④ Multi-terrain select indicator
- ⑤ Mode indicator

5 modes



Mud & Sand

Loose Rock

Mogul




Rock & Dirt

Rock

Refer to Section 4-5 of the *Owner's Manual* for more information.

## Crawl control (if equipped)

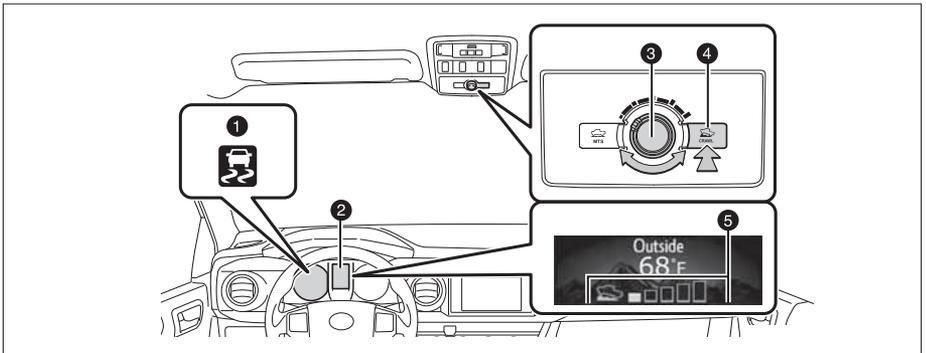


Allows travel on extremely rough off-road surfaces at a fixed low speed without pressing the accelerator or brake pedal.

- ① Slip indicator
- ② Multi-Information display
- ③ Speed selector dial
- ④ Crawl control on/off switch
- ⑤ Crawl control indicator

Refer to Section 4-5 of the *Owner's Manual* for more information.

## Clutch start cancel (if equipped)

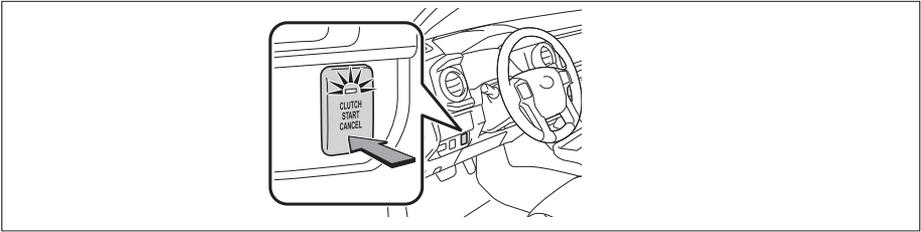


The engine switch must be in the "ON" position.

The clutch start cancel switch allows you to start the engine and drive out of difficult situations when you can't take your foot off the brake to depress the clutch.

Refer to Section 4-5 of the *Owner's Manual* for more information.


## Tilt and telescopic steering wheel

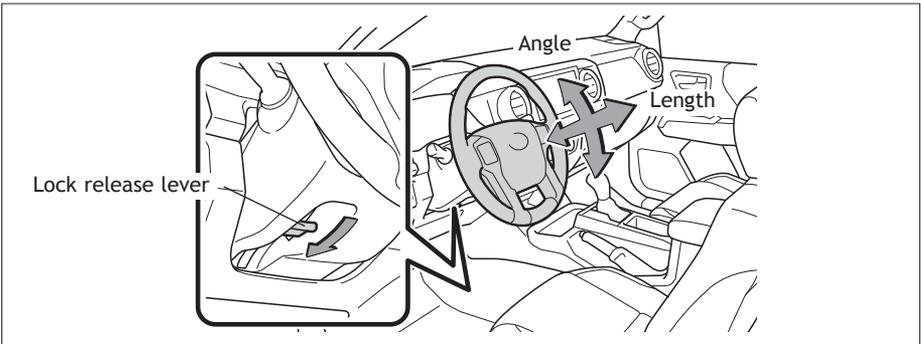

Hold wheel, push lever down, set angle and length, and return lever.

**NOTE:** Do not attempt to adjust while the vehicle is in motion.


## Odometer and trip meter

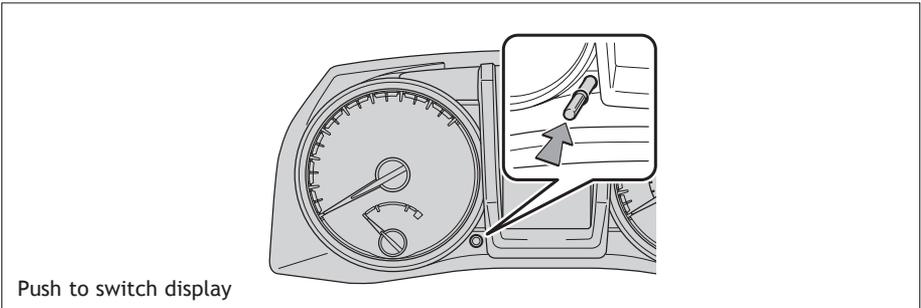


Push to switch display

**Parking brake**

**Set**

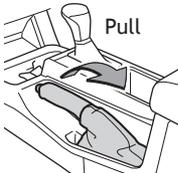

**Release**

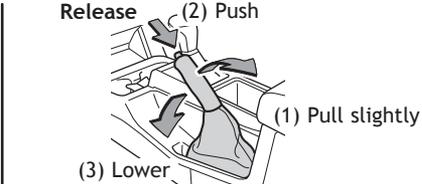


(1) Pull slightly  
(2) Push  
(3) Lower

**BRAKE**

**Seats-Head restraints**


**Access cab**

**Separate seats-Front Vertical adjustment**

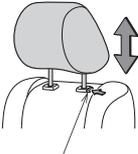

Lock release button


**Separate-Rear Folding**

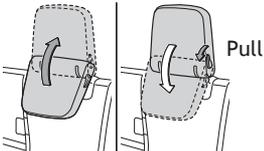

Lock release lever  
Pull


**Double cab**

**Separate seats-Front Vertical adjustment**

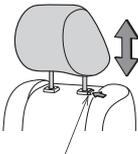


Lock release button

**Rear Vertical adjustment**

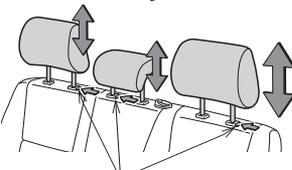

Lock release button


**Outer-Rear Folding**

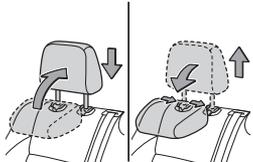

Lock release button

**Seat adjustments-Front**


**Separate seat**

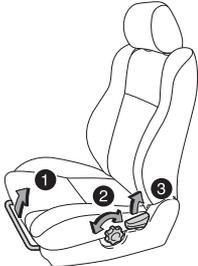


- ① Seat position (forward/backward)
- ② Driver's seat lumbar support (if equipped)
- ③ Seatback angle

## Seats-Folding rear

### Access cab

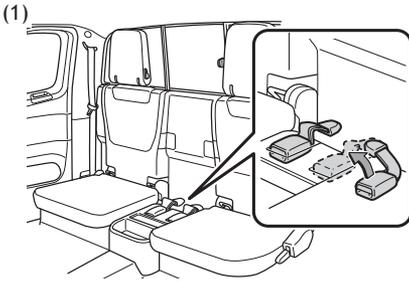


Stow the seat belt buckles.

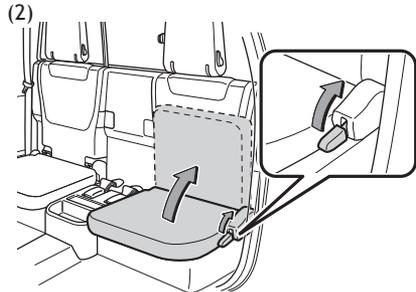


Raise the bottom cushion up while pulling the lever until it locks.


### Double cab

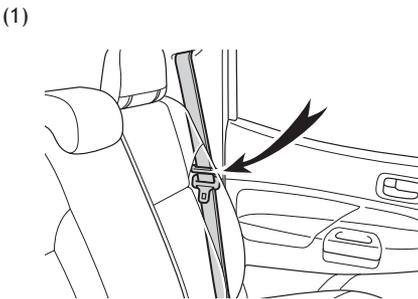


Pass the seat belt through the seat belt hangers.

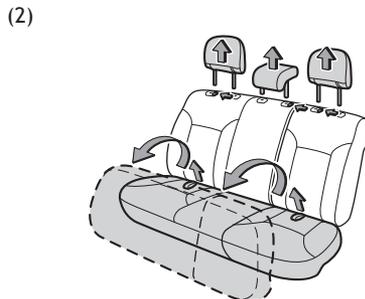

Remove head restraints and swing the bottom cushion.

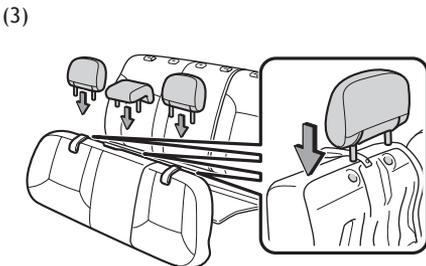

Attach the head restraints.

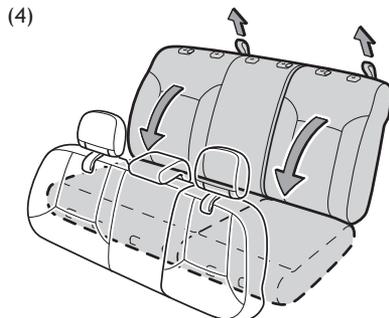

Pull lock release strap and fold down the seatback.

**Lights & turn signals**

**Headlights**

**Type A**

Headlights  
Parking lights  
AUTO  
OFF

**Type B**

Headlights  
Parking lights  
DRL  
OFF

**Type C**

Headlights  
Parking lights  
Automatic DRL

Low beam  
High beam  
High beam flasher

- Daytime Running Light system** Automatically turns on the front turn signal lights upon starting engine and releasing parking brake.
- Automatic light cutoff system** Automatically turns lights off when driver's door is opened with the ignition switch in the "ACC" or "LOCK" position.

**Front fog lights (if equipped)**

On  
Off

⚠

Front fog lights come on only when the headlights are on low beam.

**Turn signals**

Right turn  
Lane change  
Lane change  
Left turn

**Windows-Power (if equipped)**

**Driver side**


Down = Up

**Window lock switch**

**Automatic down operation (driver side only)**  
 Push the switch completely down and release to fully open. To stop the window partway, operate the switch in the opposite direction.  
**Window lock switch** Deactivates all passenger windows. Driver's window remains operable.


## Windshield wipers & washers

### With intermittent wiper

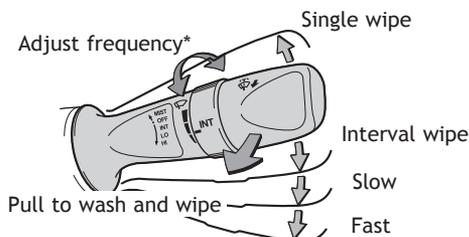


\* Intermittent windshield wiper frequency adjustment  
Rotate to increase/decrease wipe frequency.

### Without intermittent wiper

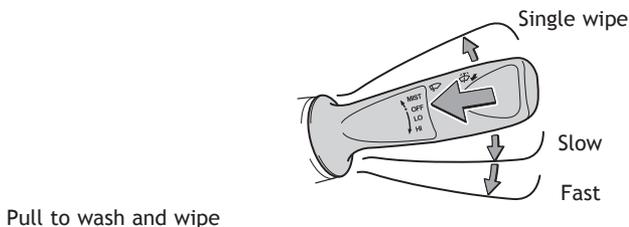


## Cruise control (if equipped)

### Turning system ON/OFF

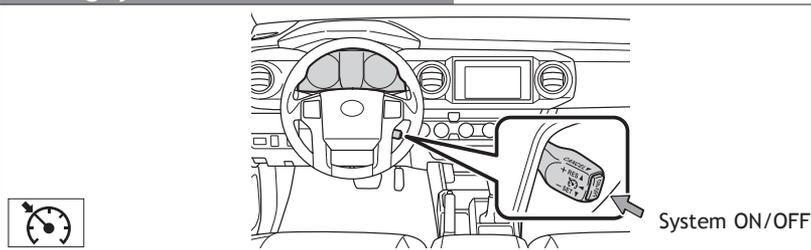




### Functions

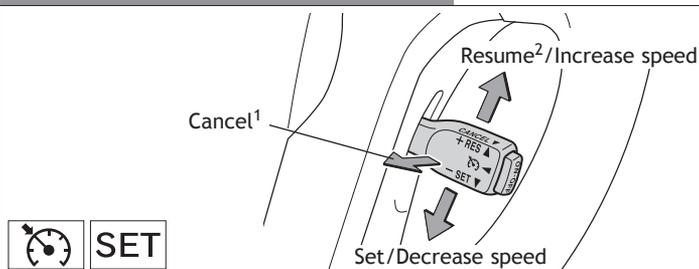

<sup>1</sup> The set speed may also be cancelled by depressing the brake pedal.

<sup>2</sup> The set speed may be resumed once vehicle speed exceeds 25 mph.

**Audio**

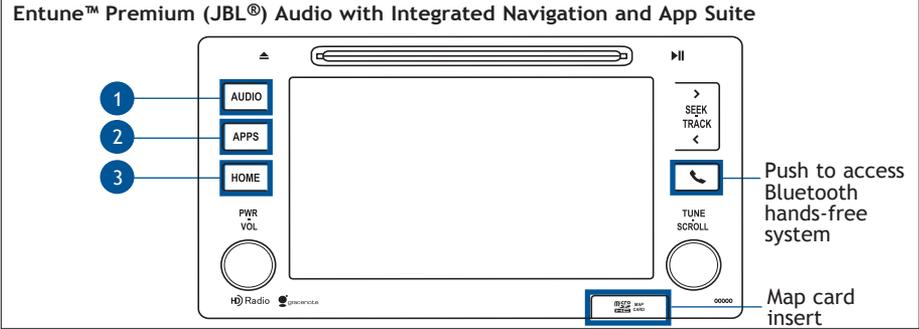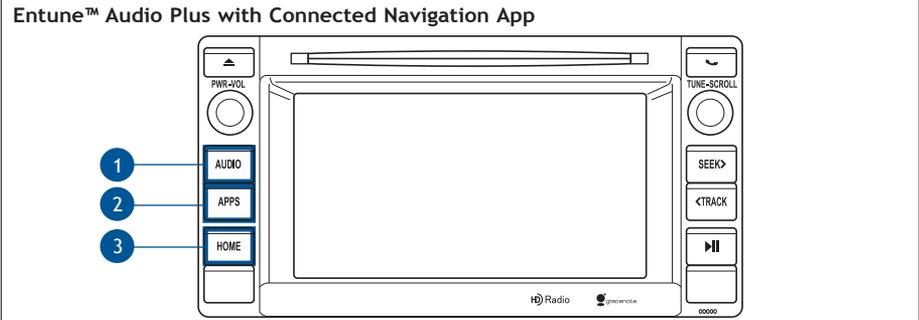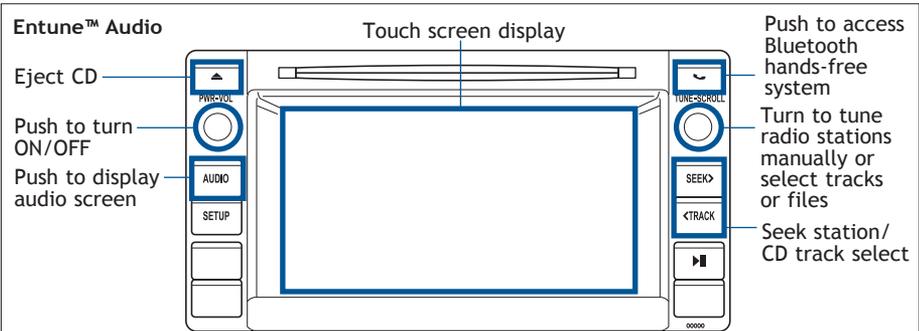


- 1 **AUDIO Button**  
Access to audio functions.
- 2 **APPS Button**  
Access to features such as fuel consumption, traffic, and weather.
- 3 **HOME Button**  
Access to Home screen.

**HOME SCREEN** - the home screen offers a two panel and a three panel layout. Information and layout will vary depending on selected set up.

Refer to the “Navigation System Owner’s Manual” or “2016 Entune™ Audio Quick Reference Guide” for instructions.


## Steering wheel switches

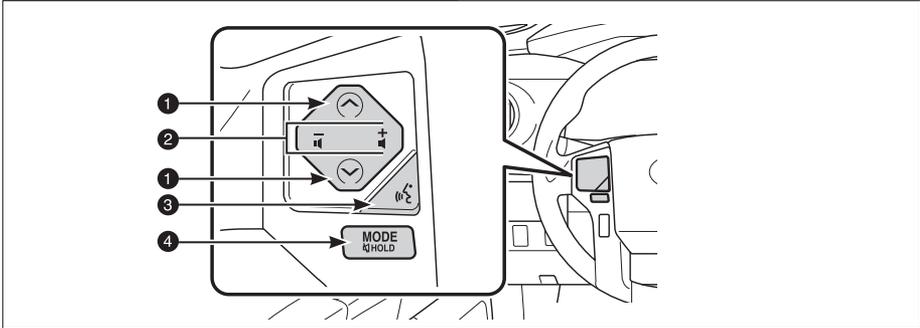


- 1 “ ^ v ”  
Use to search within the selected audio medium (radio, CD, etc.).
- 2 “ + - ”  
Push to increase or decrease volume.
- 3 “  ”  
Push to access voice command features.
- 4 “  ”  
Push to change audio source or push and hold to mute or pause current operation.

## USB/AUX port

### Type A

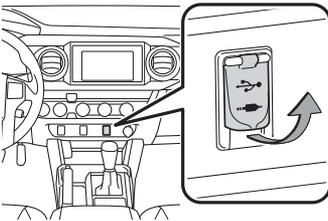

### Type B

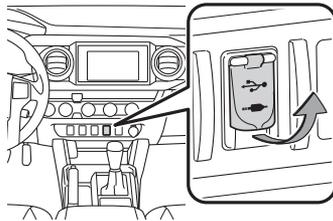

### USB port


By connecting a USB-compatible portable audio device or USB memory to the USB port, you can listen to music from the portable audio device or USB memory through the vehicle's speaker system.

### AUX port

By inserting a mini plug into the AUX port, you can listen to music from a portable audio device through the vehicle's speaker system while in AUX mode.

Refer to the “*Navigation System Owner's Manual*” for instructions and more information.

## Multi-Information Display (if equipped)

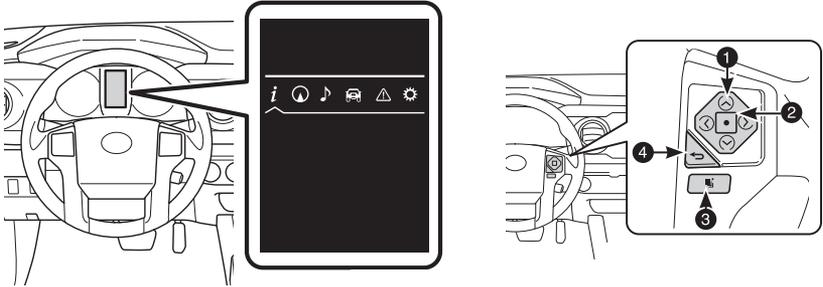

- ① Select: To select an item/change pages
- ② Enter/Set: Press to enter/set, press and hold to resets
- ③ Menu/Display: Switch the top screen
- ④ Return: To previous


Push Multi-Information control switches to change information in the following:

- Drive information
- Navigation system linked display (if equipped)
- Audio system linked display
- Vehicle information (if equipped)
- Warning messages
- Settings display

## Moon roof (if equipped)


### Sliding operation

Push once to open partway; again to open completely.

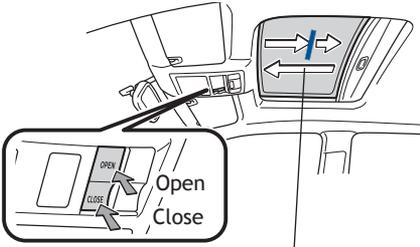

Recommended driving position to minimize wind noise.


### Tilting operation

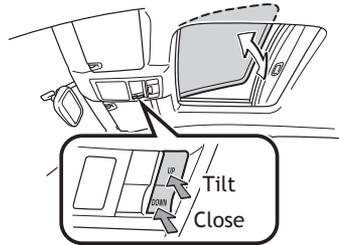


Push once to open; moon roof will automatically stop at the recommended position. Push again to open completely.

## Air Conditioning/Heating

### Automatic Air Conditioning

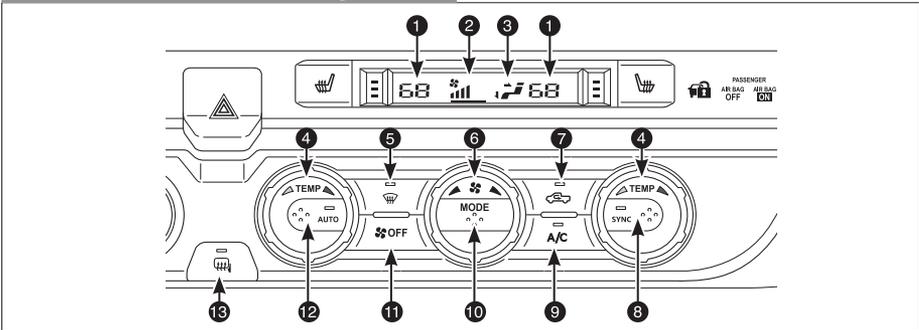

### Manual Air Conditioning

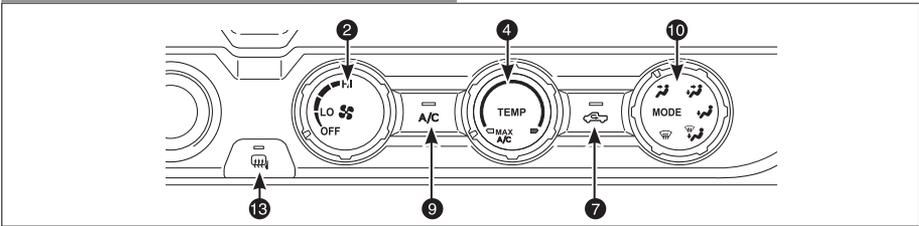

#### Display

- ❶ Temperature (Driver and passenger\*)
- ❷ Fan speed
- ❸ Air flow vent

#### Selectors and switches

- ❹ Temperature setting (Driver and passenger\*)
- ❺ Windshield defogger (outside air only)
- ❻ Airflow vent adjuster

In “/ ” or “” mode, use outside air (“” indicator OFF) to reduce window fogging.

- ❼ Recirculate cabin air (outside air when OFF)
- ❽ “SYNC” button

**Indicator ON:** Synchronized temperature settings for driver, front passenger.

**Indicator OFF:** Separate temperature settings for driver, front passenger.

- ❾ Air Conditioning ON/OFF

Use outside air to quickly cool interior, then change to recirculate for cooler air.

- ❿ Airflow vent mode select



- ⓫ Fan OFF



- ⓬ Automatic climate control ON

Adjusting the temperature setting will cause the airflow vents, air intake and fan to adjust automatically.

- ⓭ Outside rear view mirror defogger.


\*If equipped

## Seat heaters

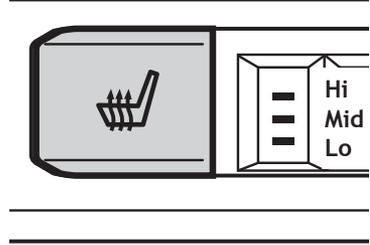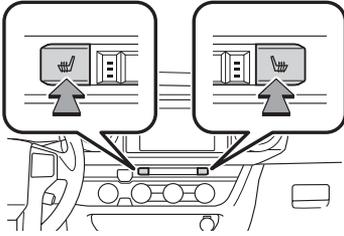

Press to ON>Hi>Mid>Lo>OFF

## Clock

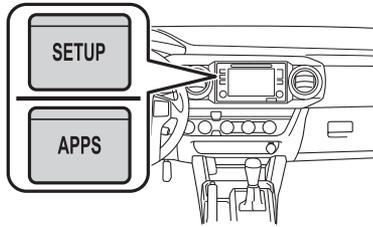

To find your system, refer to the Audio section of this guide,

### For Entune™Audio


Push **"SETUP"** button next to the screen then select **"General"** in the touch screen to access clock setting.

### For Entune™ Audio Plus with Connected Navigation App and Entune™ Premium (JBL®) Audio with Integrated Navigation and App Suite


Push **"APPS"** button next to the screen, then select **"General"** in the touch screen to access clock setting.

## Power outlets

### 12V DC

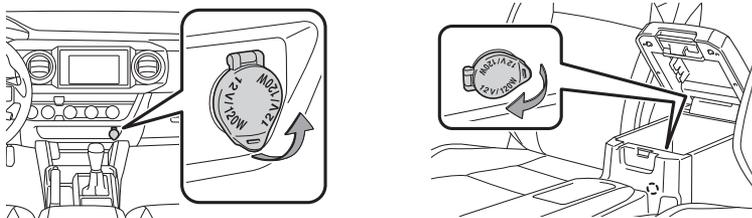


Key must be in the “ACC” or “ON” position to be used.

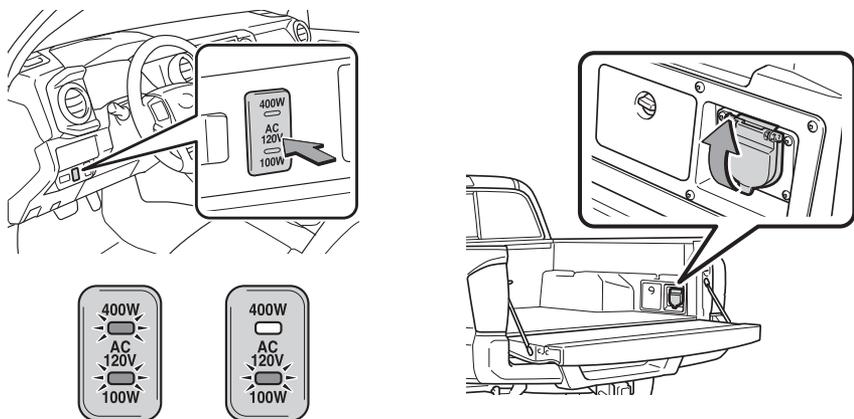


120 V AC/400 W    120 V AC/100 W

The power outlet can be used when the engine is running.  
Refer to the *Owner's Manual* for more details.

## Trailer lights (if equipped)

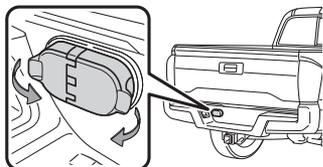


Use wire harness to connect trailer lights.

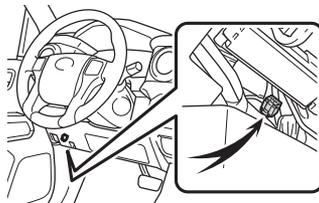

Use service connector for the trailer brake controller.

Refer to the *Owner's Manual* for more details.


### Active traction control (if equipped)

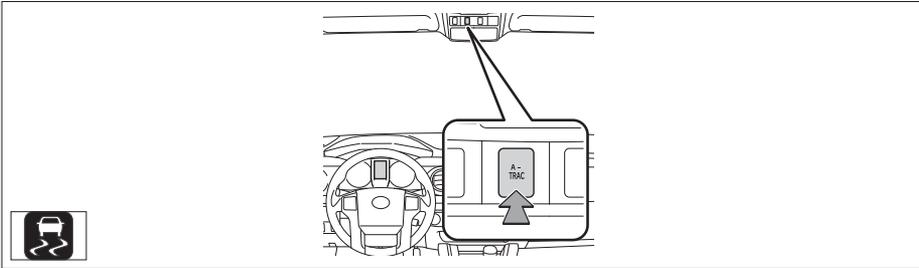

The active traction control system automatically helps prevent the spinning of 4 wheels when the vehicle is started or accelerated on slippery road surfaces.

Refer to the *Owner's Manual* for more information.


### TRAC/VSC OFF switch

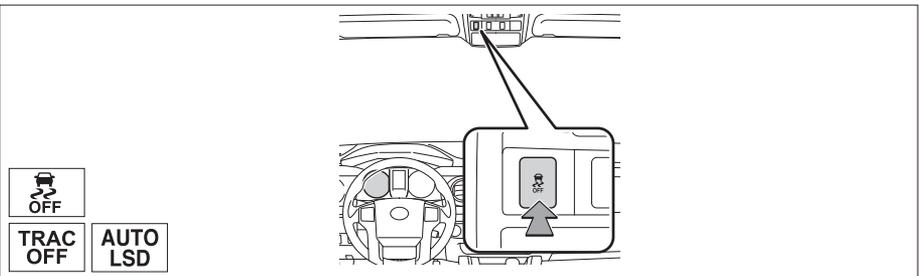

The TRAC OFF switch is used to switch between modes related to the TRAC, VSC and Auto LSD functions.

Refer to the *Owner's Manual* for more information.


### Rear differential lock (if equipped)

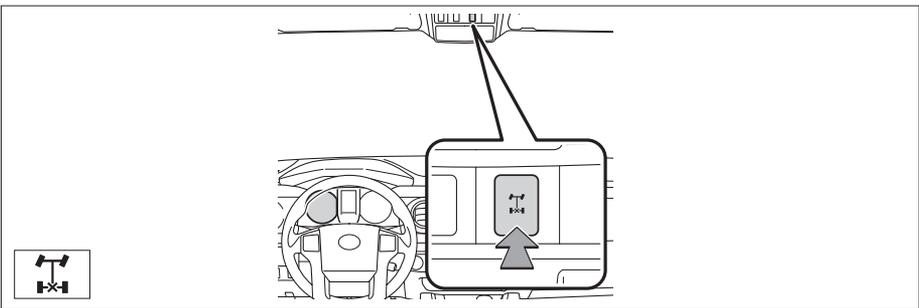

Use **ONLY** when wheel spinning occurs in a ditch, or on slippery or unpaved surfaces. **DO NOT USE THE REAR DIFFERENTIAL LOCK IN CONDITIONS OTHER THAN THOSE SPECIFIED IN THE OWNER'S MANUAL. UNLOCK THE DIFFERENTIAL ONCE THE VEHICLE MOVES OUT OF THE TROUBLE SPOT.**

Refer to your *Owner's Manual* for complete details on this system before attempting to use it.

## Garage door opener (HomeLink®)\* (if equipped)

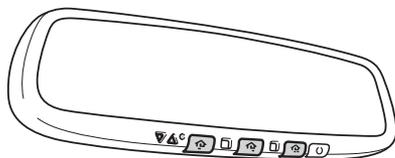


Garage door openers manufactured under license from HomeLink®\* can be programmed to operate garage doors, estate gates, security lighting, etc.

Refer to “Garage door opener,” Section 6-4 in the *Owner’s Manual* for more details.

For programming assistance, contact HomeLink® at 1-800-355-3515, or visit <http://www.homelink.com>.

\* HomeLink® is a registered trademark of Johnson Controls, Inc.

## Blind Spot Monitor (BSM) with Rear Cross Traffic Alert (RCTA) (if equipped)

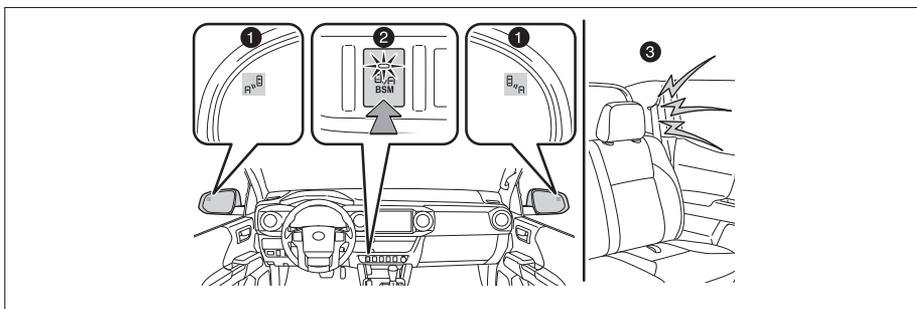

- ❶ BSM main switch
- ❷ Outside rear view mirror indicators
- ❸ Rear Cross Traffic Alert buzzer\*

Drivers can change lanes and back up with enhanced confidence and safety by using the available Blind Spot Monitor (BSM) with Rear Cross Traffic Alert (RCTA).


Blind Spot Monitor brings an additional visual layer of confidence when changing lanes with illuminated side mirror indicators.

Rear Cross Traffic Alert works best for detecting oncoming cross traffic, helping the driver avoid unexpected collisions when backing up.

\*Rear Cross Traffic Alert function only.

Refer to the *Owner’s Manual* for more information.


### Park assist (if equipped)

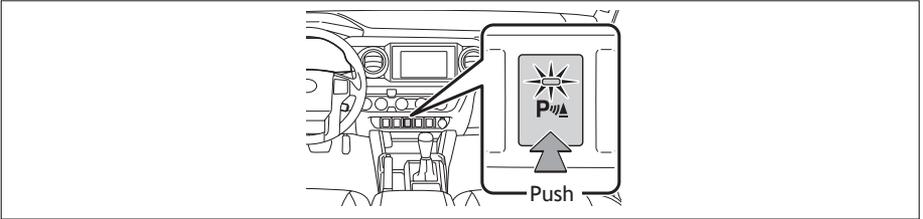

The distance from your vehicle to nearby obstacles when parallel parking or maneuvering into a garage is measured by the sensors and communicated via the Multi-Information display and buzzer. Always check the surrounding area when using this system.

Refer to the *Owner's Manual* for more information.

### Rear view monitor system

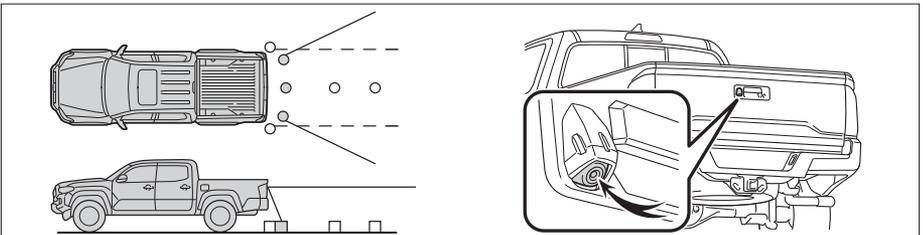


The rear view monitor system displays an image of the view from the bumper of the rear area of the vehicle. The camera for the rear view monitor system is integrated in the tailgate handle.

To adjust the image on the rear view monitor screen, press the “SETUP” button and select “Display” on the “Setup” screen. Select “Camera” to adjust the screen contrast and brightness.

Refer to the *Owner's Manual* for more details on this system.

# SAFETY AND EMERGENCY FEATURES

## Seat belts

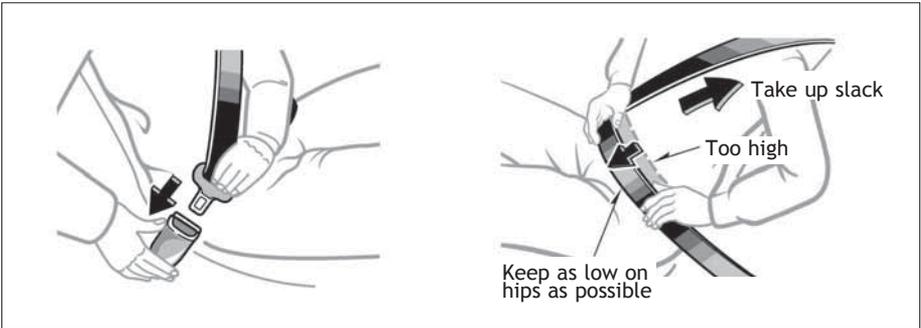


NOTE: If a passenger's seat belt is fully extended, then retracted even slightly, the Automatic locking retractor (ALR) will prevent it from being re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.


## Seat belts-Shoulder belt anchor



## Door locks-Power (if equipped)

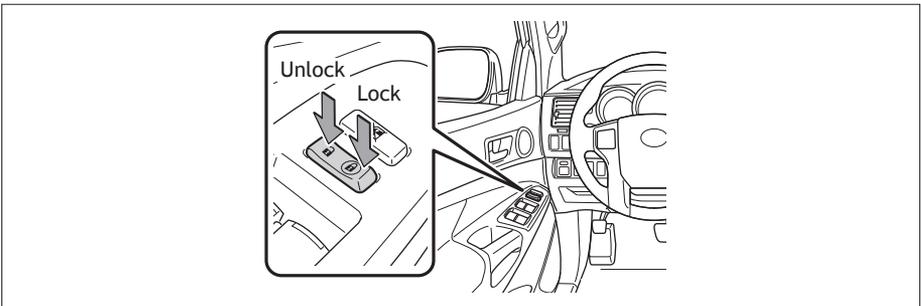

## Tire Pressure Monitoring (warning) System

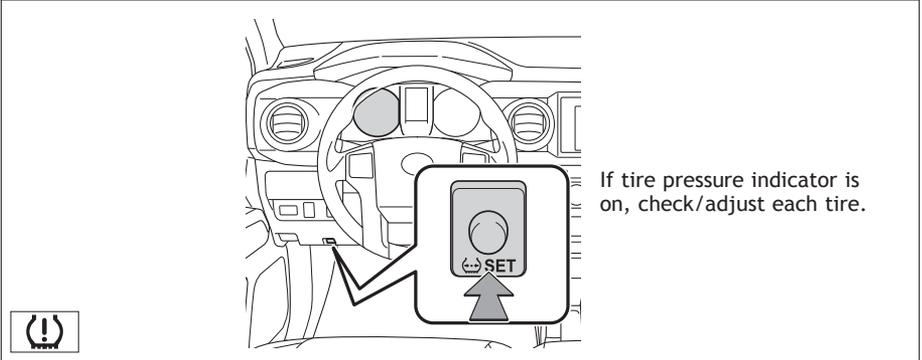


After adjusting tire pressures, or after tires have been rotated or replaced, turn the ignition switch to "ON" and press and hold the "SET" button until indicator blinks three times. Let the vehicle sit for a few minutes to allow initialization to complete.

Refer to the load label on the door jamb or the *Owner's Manual* for tire inflation specifications.

If the tire pressure indicator flashes for more than 60 seconds and then remains on, take the vehicle to your local Toyota dealer.

## Doors-Child safety locks (double cab only)

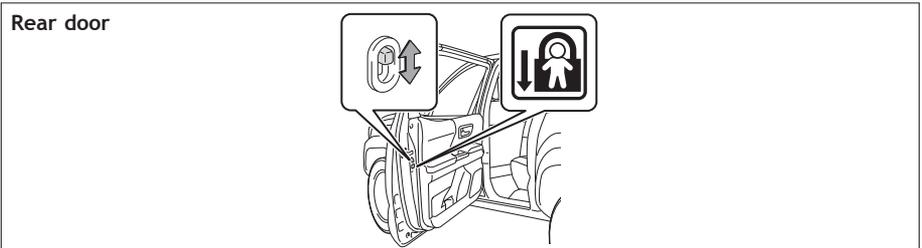


Moving the lever to "LOCK" will allow the door to be opened only from the outside.


## Spare tire & tools

### Tool location



Double cab models  
-under the rear seat

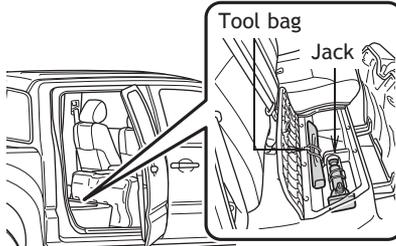

Access cab models  
-under the rear seat

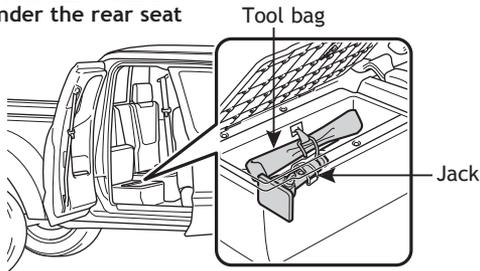

### Removing the spare tire

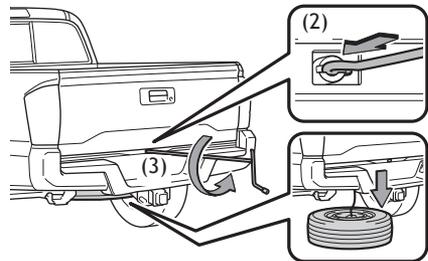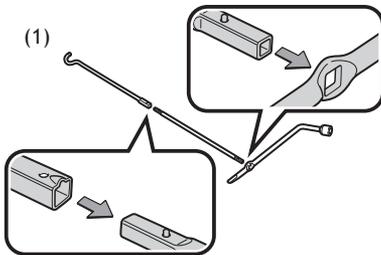

- (1) Assemble the jack handle.
- (2) Insert the jack handle end into the lowering screw.
- (3) Turn the jack handle counterclockwise.

Refer to the *Owner's Manual* for tire changing and jack positioning procedures.

## SAFETY AND EMERGENCY FEATURES

### Star Safety System™

All new Toyota vehicles come standard with the Star Safety System™, which combines Vehicle Stability Control (VSC), Traction Control (TRAC), Anti-lock Braking System (ABS), Electronic Brake-force Distribution (EBD), Brake Assist (BA) and Smart Stop Technology (SST).

#### Vehicle Stability Control (VSC)

VSC helps prevent loss of traction during cornering by reducing engine power and applying brake force to selected wheels.

Toyota's VSC monitors steering angle and the direction your vehicle is traveling. When it senses that the front or rear wheels begin to lose traction, VSC reduces engine power and applies braking to selected wheels. This helps restore traction and vehicle control.

#### Traction Control (TRAC)

VSC helps prevent loss of traction during cornering by reducing engine power, and Traction Control helps maintain traction on loose gravel and wet, icy, or uneven surfaces by applying brake force to the spinning wheel(s).

Toyota's TRAC sensors are activated when one of the drive wheels starts to slip. TRAC limits engine output and applies the brakes to the spinning wheel. This transfers power to the wheels that still have traction to help keep you on track.

#### Anti-Lock Brake System (ABS)

ABS helps prevent brakes from locking up by "pulsing" brake pressure to each wheel. This limits brake lockup and helps provide directional control for the current road conditions.

Toyota's ABS sensors detect which wheels are locking up and limits wheel lockup by "pulsing" each wheel's brakes independently. Pulsing releases brake pressure repeatedly for fractions of a second. This helps the tires attain the traction that current road conditions will allow, helping you to stay in directional control.

#### Electronic Brake Force Distribution (EBD)

Toyota's ABS technology has Electronic Brake-force Distribution (EBD) to help maintain control and balance when braking. Abrupt stops can cause a vehicle to tilt forward, reducing the braking power of the rear wheels. EBD responds to sudden stops by redistributing brake force to enhance the braking effectiveness of all four wheels.

#### Brake Assist (BA)

Brake Assist is designed to detect sudden or "panic" braking, and then add braking pressure to help decrease the vehicle's stopping distance. When there's only a split second to react, Brake Assist can add additional brake pressure more quickly than just the driver alone can.

## Smart Stop Technology (SST)

Smart Stop Technology automatically reduces engine power when the accelerator and brake pedals are pressed simultaneously under certain conditions.

SST engages when the accelerator is depressed first and the brakes are applied firmly for longer than one-half second at speeds greater than five miles per hour.


SST doesn't engage if the brake pedal is depressed before the accelerator pedal, allowing vehicles to start on a steep hill and safely accelerate without rolling backward.

## Floor mat installation

There are two types of Toyota floor mats: carpeted and all-weather. Each vehicle has model-specific floor mats. Installation is easy.

**To keep your floor mat properly positioned, follow these steps:**

- Only use floor mats designed for your specific model.
- Use only one floor mat at a time, using the retaining hooks to keep the mat in place.
- Install floor mats right side up.

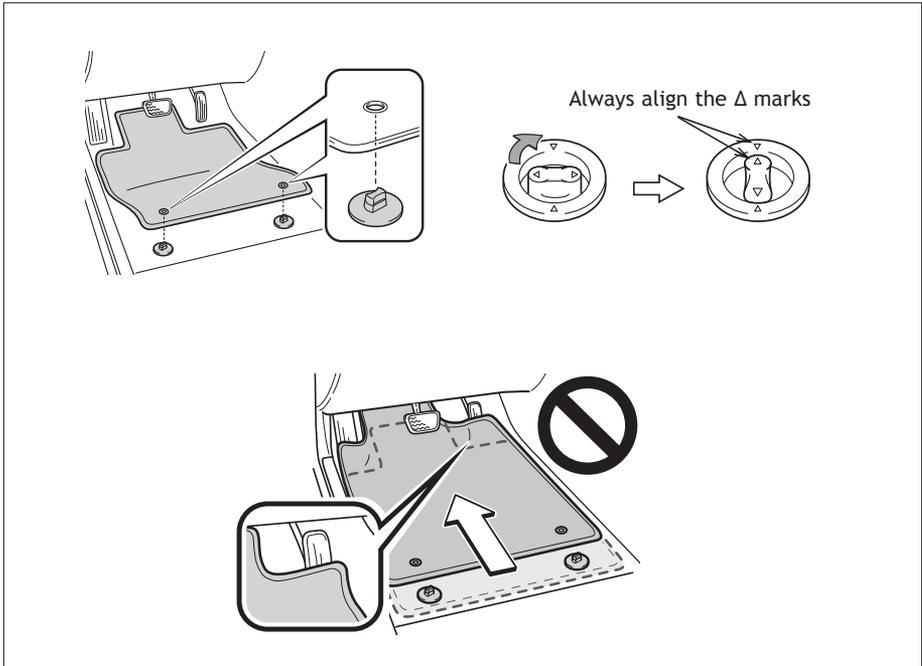

# NOTES

# **BLUETOOTH® DEVICE PAIRING SECTION**


# BLUETOOTH® DEVICE PAIRING

To begin the Bluetooth® Pairing process, press the HOME button on the faceplate of your Toyota Vehicle Entune™ Multimedia Head Unit.<sup>1</sup>


## Bluetooth® Pairing for Android® phone and Entune™ touch screen system

Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all Android mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.<sup>2</sup>

### Initiate Bluetooth® on your Android®

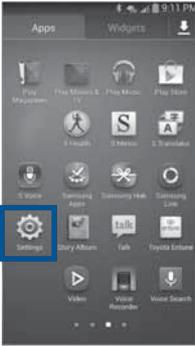


**STEP 1**  
From your APPS SCREEN, select SETTINGS

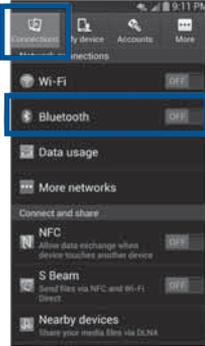

**STEP 2**  
Select CONNECTIONS and select BLUETOOTH



**STEP 3**  
Ensure BLUETOOTH is ON

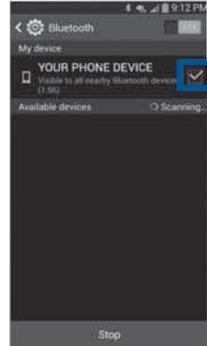

**STEP 4**  
Select YOUR PHONE DEVICE to make it discoverable.

*Phone will seek out Bluetooth devices while remaining discoverable.*



**STEP 5**  
While your Android device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

1 To determine which head unit is installed in your vehicle, refer to the Audio section in this guide.

2 Some Android devices may have slightly different SETTINGS screen layout depending on manufacturer of device and Android OS version.

## Initiate Bluetooth® on your Entune™ Multimedia Head Unit

Once you have Bluetooth enabled on your phone and ready to pair, you will need to initiate Bluetooth on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.




### STEP 6

On your Toyota Vehicle Entune Multimedia Head Unit, Select **SETUP** BUTTON on the Home Screen.




### STEP 7

Select **BLUETOOTH**

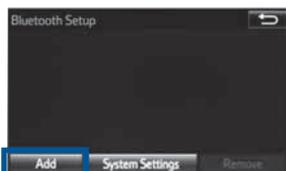

### STEP 8

Select **ADD**, to add your phone device

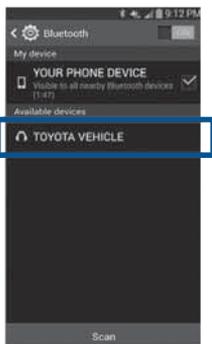

### STEP 9

Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.

*You may need to enter the provided Bluetooth PIN on your phone.*



### STEP 10

Your smartphone is now paired with Entune.




### STEP 11

Once paired, Entune will attempt to connect audio and contacts on your phone.

# BLUETOOTH® DEVICE PAIRING

## Initiate Bluetooth® on your Entune™ Multimedia Head Unit

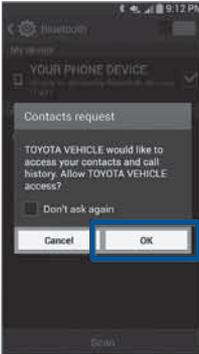

### STEP 12

Using your smartphone, you will need to allow Entune access to your messaging and contacts

*It is recommended to check the "Don't ask again" box, so as not to have to press OK every time the phone makes a Bluetooth connection with your Toyota*



### STEP 13

A confirmation will appear once your phone has been paired and connected.

### Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:  
[www.toyota.com/connect](http://www.toyota.com/connect)

Your Toyota Owner's Manual  
*Located in the vehicle glovebox*

Toyota Customer  
Experience Center  
(800) 331-4331

### Disclosures

This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.

1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
3. Android is a trademark of Google Inc.
4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See [Toyota.com/entune](http://Toyota.com/entune) for details.

## Bluetooth® Pairing for iPhone® and Entune™ touch screen system

Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all iPhone mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.

### Initiate Bluetooth® on your iPhone®



#### STEP 1

From the HOME SCREEN, select SETTINGS




#### STEP 2

Select BLUETOOTH



#### STEP 3

Ensure BLUETOOTH is ON

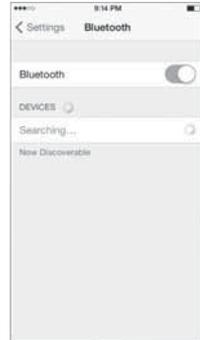

#### STEP 4

Your iPhone will seek out Bluetooth devices while remaining discoverable



#### STEP 5

While your iPhone device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

# BLUETOOTH® DEVICE PAIRING

## Initiate Bluetooth® on your Entune™ Multimedia Head Unit

Once you have Bluetooth enabled on your phone and ready to pair, you will need to initiate Bluetooth on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.



### STEP 6

Select **SETUP** BUTTON on the Home Screen.



### STEP 7

Select **BLUETOOTH**



### STEP 8

Select **ADD**, to add your phone device



### STEP 9

Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.

*You may need to enter the provided Bluetooth PIN on your phone.*




### STEP 10

Your smartphone is now paired with Entune.



### STEP 11

Once paired, Entune will attempt to connect audio and contacts on your phone.

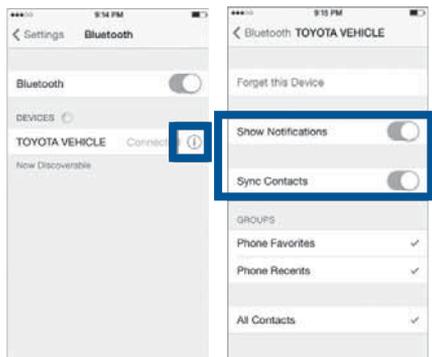

### STEP 12

Using your smartphone, you may need to allow Entune access to your messaging and contacts

*Only current iPhone text messages can be viewed on the head unit. iPhone does not allow text message reply.*

### STEP 13

A confirmation will appear once your phone has been paired and connected.

## Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:  
[www.toyota.com/connect](http://www.toyota.com/connect)

Your Toyota Owner's Manual  
*Located in the vehicle glovebox*

Toyota Customer  
 Experience Center  
 (800) 331-4331

### Disclosures


This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.

1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
3. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.

## Bluetooth® Pairing for Windows Phone® and Entune™ touch screen system

Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all Windows Phone mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.

### Initiate Bluetooth® on your Windows Phone®

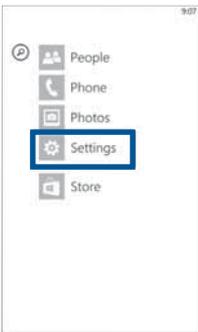


#### STEP 1

From your APP LIST, select **SETTINGS**



#### STEP 2

Select **BLUETOOTH**

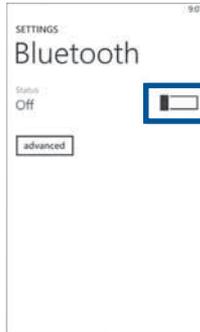

#### STEP 3

Ensure **BLUETOOTH** is ON



#### STEP 4

Phone will seek out Bluetooth devices while remaining discoverable



#### STEP 5

While your iPhone device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

## Initiate Bluetooth® on your Entune™ Multimedia Head Unit

Once you have Bluetooth® enabled on your phone and ready to pair, you will need to initiate Bluetooth® on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.




### STEP 6

On your Toyota Vehicle Entune Multimedia Head Unit, Select **SETUP** on the Home Screen.




### STEP 7

Select **BLUETOOTH**

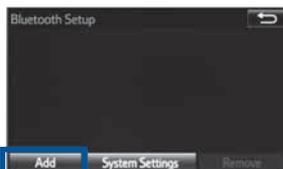

### STEP 8

Select **ADD**, to add your phone device

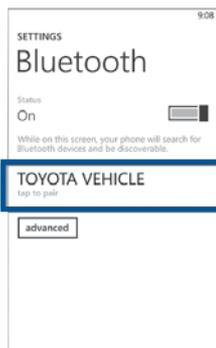

### STEP 9

Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.

*You may need to enter the provided Bluetooth PIN on your phone.*



### STEP 10

Your smartphone is now paired with Entune.



### STEP 11

Once paired, Entune will attempt to connect audio and contacts on your phone.

# BLUETOOTH® DEVICE PAIRING

## Initiate Bluetooth® on your Entune™ Multimedia Head Unit



### STEP 12

Using your smartphone, you may need to allow Entune access to your contacts



### STEP 13

A confirmation will appear that your phone has been paired and connected.

### Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:  
[www.toyota.com/connect](http://www.toyota.com/connect)

Your Toyota Owner's Manual  
*Located in the vehicle glovebox*

Toyota Customer  
Experience Center  
(800) 331-4331

### Disclosures

This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.

1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
3. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See [Toyota.com/entune](http://Toyota.com/entune) for details.

## NOTES

# NOTES

## NOTES



CUSTOMER EXPERIENCE CENTER

1-800-331-4331

