



YARIS iA
2 0 1 7



QUICK REFERENCE GUIDE

2017

Yaris iA

This Quick Reference Guide is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The Quick Reference Guide is not intended as a substitute for the Owner's Manual located in your vehicle's glove box. We strongly encourage you to review the Owner's Manual and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Yaris iA.

A word about safe vehicle operations

This Quick Reference Guide is not a full description of Yaris iA operations. Every Yaris iA owner should review the Owner's Manual that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the Owner's Manual. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this Quick Reference Guide is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

INDEX

OVERVIEW

Engine maintenance	7
Fuel tank door release and cap	8
Hood release	8
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Keyless entry*	6
Trip information/meter light control	6
Smart Key system	7

FEATURES & OPERATIONS

Air conditioning/heating	12
Audio/navigation	15
Automatic Transaxle	9
AUX port/USB port	14
Bottle holders/cup holders	9
Cruise control	13
Lights & turn signals	11
Manual Transaxle	9
Parking brake	13
Power outlet	13
Rear view monitor system	16
Seat-Folding down rear seat	10
Seat adjustments-Front	10
Seats-Head restraints	10
Smart City Brake Support (SCBS)	16
Steering wheel switches	14
Tilt & telescopic steering wheel	14
Windows	12
Windshield wipers & washers	11

SAFETY & EMERGENCY FEATURES

Door locks	17
Doors-Child safety locks	17
Floor mat installation	21
Seat belts	18
Seat belts-Shoulder belt anchor	17
Spare tire & tools	19
Safety System	20-21
Tire Pressure Monitoring (warning) System (TPMS)	18

PAIRING BLUETOOTH® PHONE FOR THE FIRST TIME

22-23

* Visit your Toyota dealer for information on customizing this feature.

Instrument panel


Audio and multimedia controls

Cruise control




Steering wheel controls

¹ If equipped.

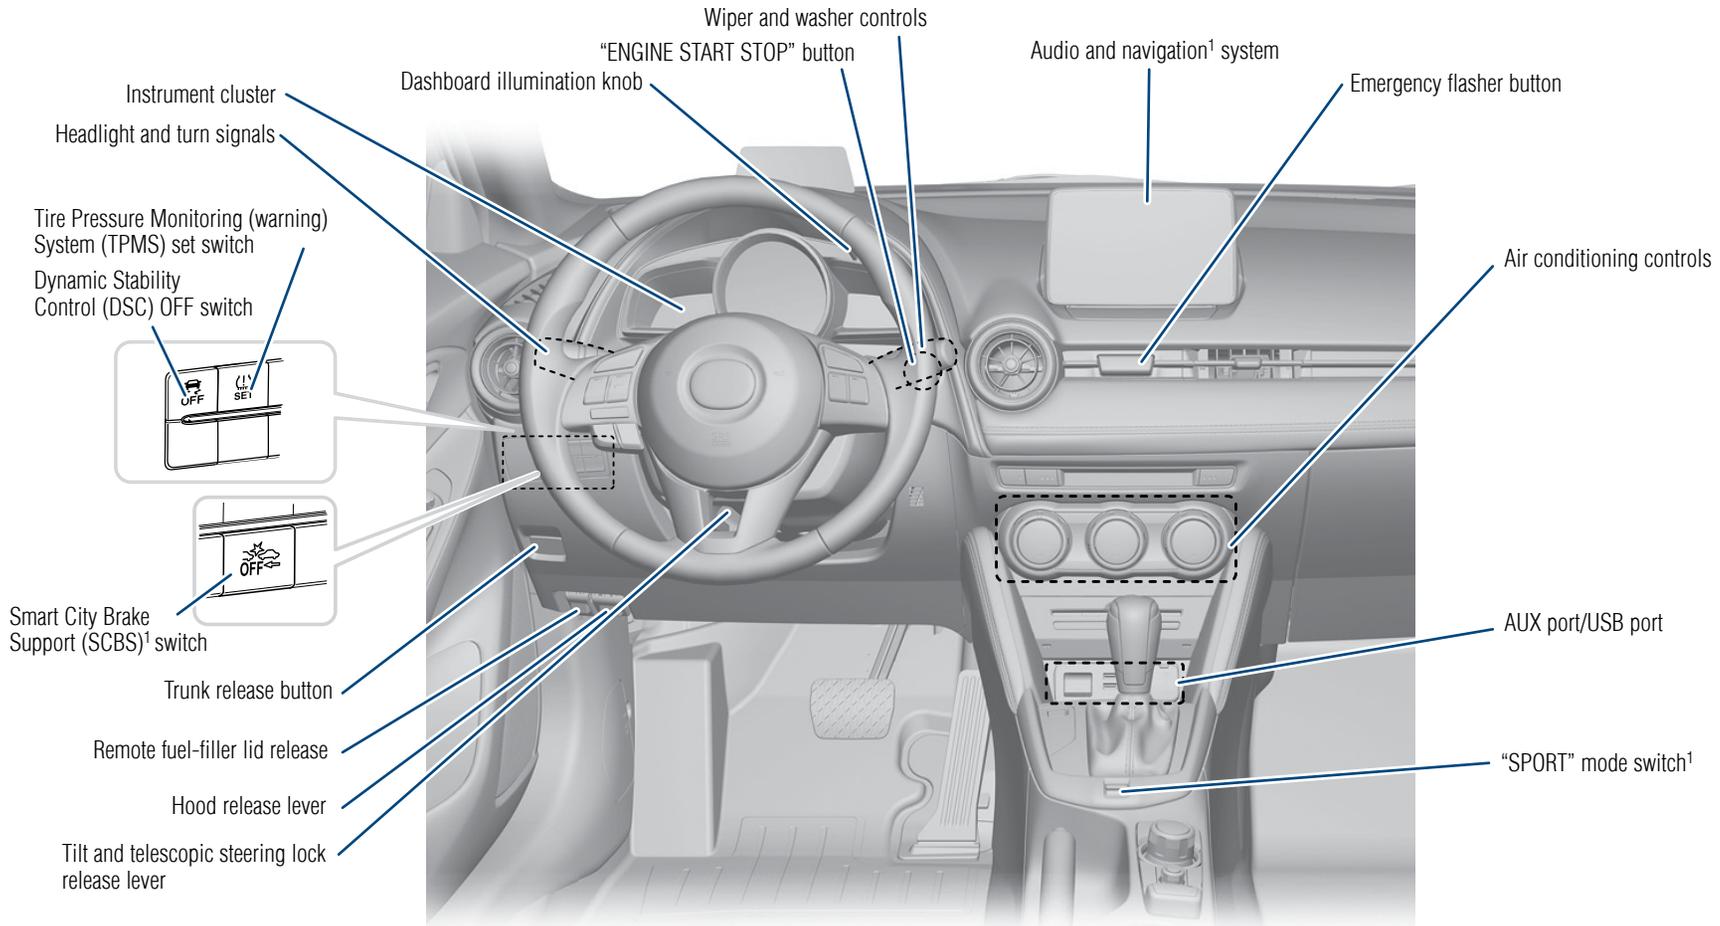

Instrument cluster

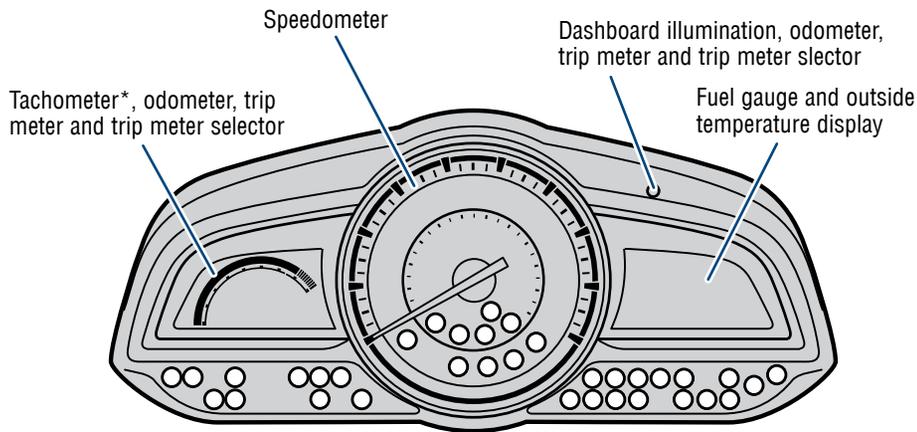

* If equipped
 ○ Service indicators and reminders

Instrument symbols

For details, refer to "Indicators and warning lights," Section 3-2, 2017 Owner's Manual.

-  Master Warning¹
-  Charging system warning¹
-  Malfunction/Check Engine indicator¹
-  Low engine oil pressure warning¹
-  High Engine Coolant Temperature Warning [Red]¹
-  Low Engine Coolant Temperature Indicator [Blue]
-  AT Automatic Transaxle Warning^{1,3}
-  Power Steering Malfunction Indicator¹
-  BRAKE Brake System Warning^{1,2}
-  (ABS) ABS Warning¹

-  Air Bag/Front Seat Belt Pretensioner System Warning¹
-  Front Passenger Air Bag Deactivation Indicator¹
-  Seat Belt Warning (Front seat)
-  Door-Ajar Warning
-  Tire Pressure Monitoring System Warning¹
-  KEY Warning [Red]¹
-  Smart City Brake Support (SCBS) Warning [Amber]
-  Security Indicator¹

-  TSC/DSC Indicator¹
-  DSC OFF Indicator¹
-  Cruise control indicator
-  SPORT Select Mode Indicator³

-  Shift Position Indication³
-  Headlight High-Beam Indicator
-  Turn Signal/Hazard Warning Indicator
-  Lights-On Indicator

-  Low Fuel Warning
-  Check Fuel Cap Warning¹
-  Low Washer Fluid Level Warning
-  Wrench Indicator¹

¹ If indicator does not come on or turn off within a few seconds of starting engine, there may be a malfunction. Have vehicle inspected by your Toyota dealer.

² The light turns on continuously when the parking brake is applied.

³ If equipped

Keyless entry

LOCKING OPERATION




Push



Push
ONCE: Driver door
TWICE: All doors

TRUNK BUTTON

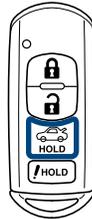

HOLD
Push and hold

PANIC BUTTON




! HOLD
Push and hold

NOTE: If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.


Trip information/meter light control

Push to cycle through and change trip information;
Turn to control dim & brightness

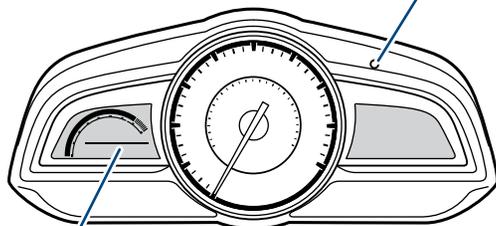

Display


Odometer

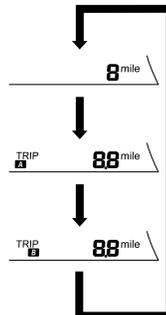

Trip meter A

Trip meter B

Smart Key system

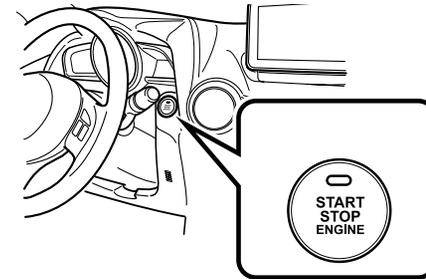


NOTE: Carry the electronic key to enable start function. Gear shift lever must be in Park and brake pedal depressed.

POWER (WITHOUT STARTING ENGINE)

Without depressing the brake pedal, pressing the engine switch will change the operation mode in succession from:


ACCESSORY	All systems OFF.
ON	Accessories such as the radio will operate.
OFF	Power ON; the engine is not running.

Engine maintenance

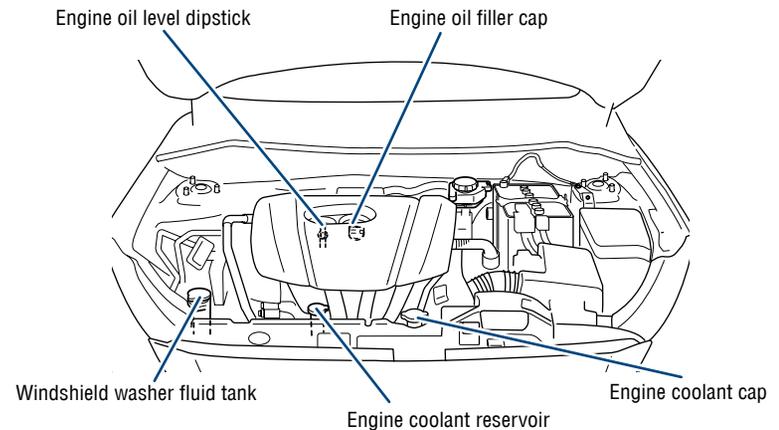


NOTE: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. *Please refer to the "Warranty Maintenance Guide."*

Fuel tank door release and cap


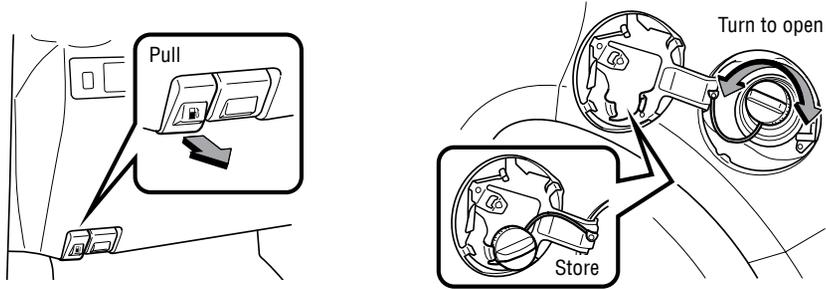


Hood release

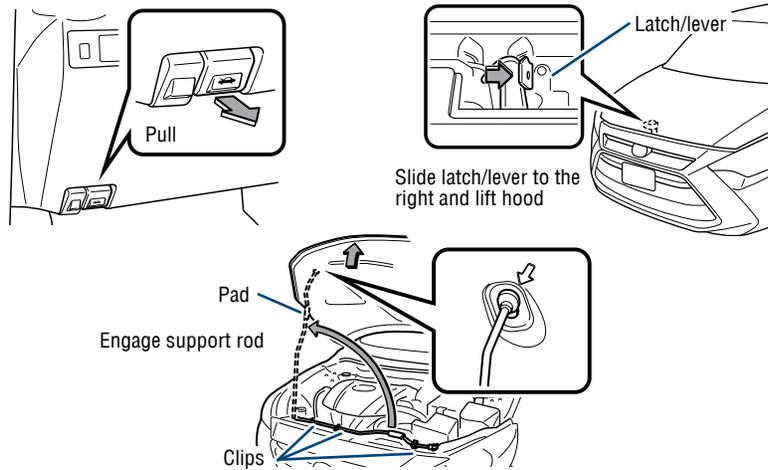

Automatic Transaxle (if equipped)

Lock-release button

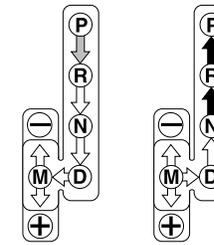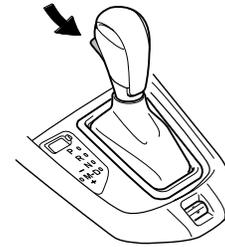

- Depress brake pedal and hold-in lock-release button to shift
- Shift
- Hold in lock-release button to shift

The ignition switch must be "ON."


"M" 6-SPEED SPORT SEQUENTIAL SHIFTMATIC MODE

Push shift lever to the left from "D" position, to "M" position.

- +: Upshift (pull and release)
- : Downshift (push and release)

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.


Manual Transaxle (if equipped)

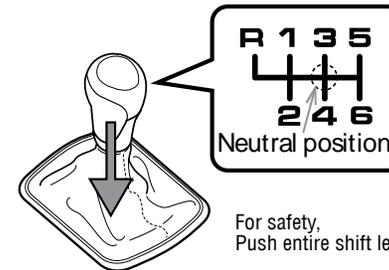


For safety, Push entire shift lever down to shift into R

Bottle holders/cup holders


Bottle holders

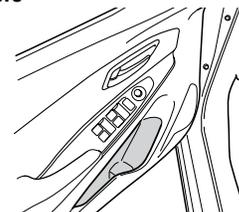


Cup holders

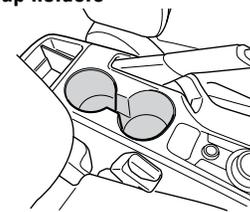

Seat adjustments-Front

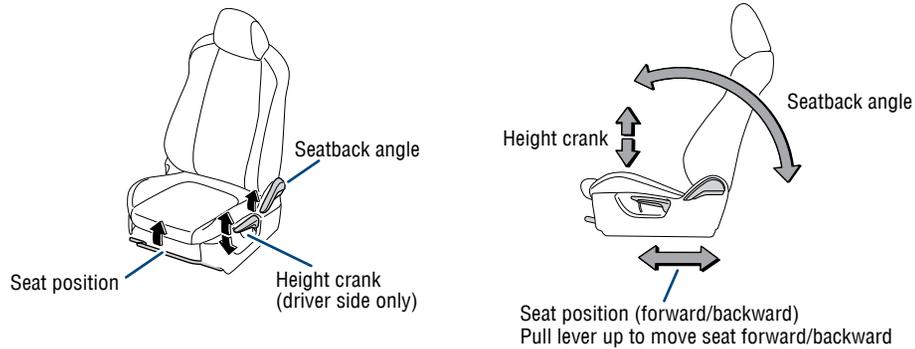




Seats-Head restraints

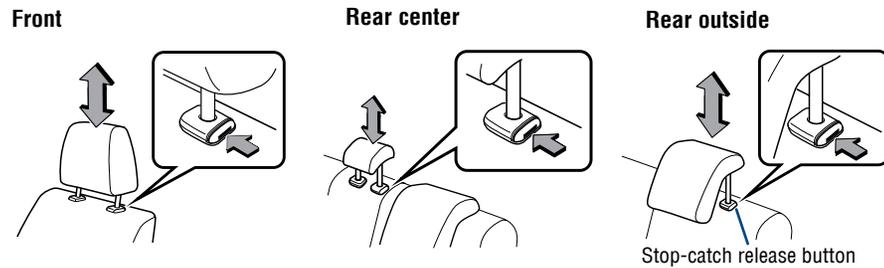

Seat-Folding down rear seat


Tip. To fold rear seats, the release button is located in the trunk

(1) Push to open the trunk door

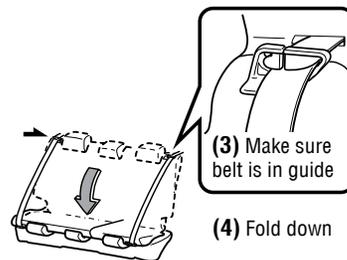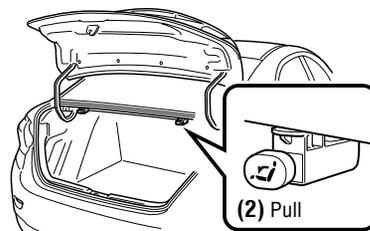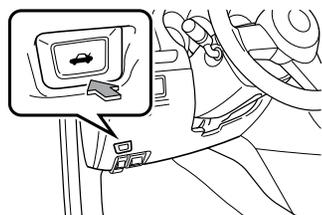

Lights & turn signals


HEADLIGHTS

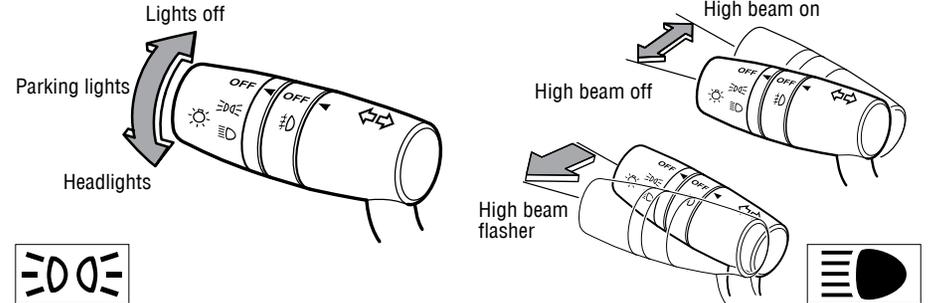


When the headlights are turned off, the high beams will only operate in the flasher mode.

FOG LIGHTS (IF EQUIPPED)

TURN SIGNALS

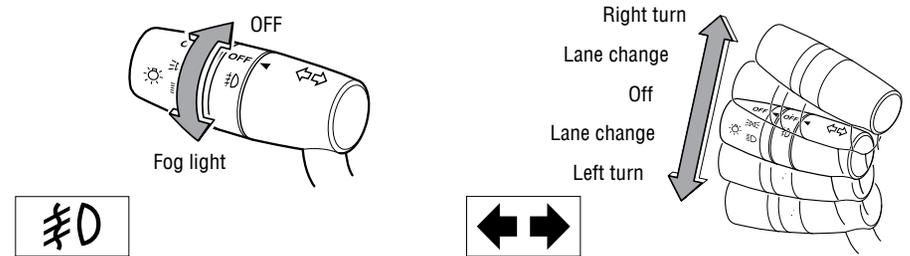

Windshield wipers & washers

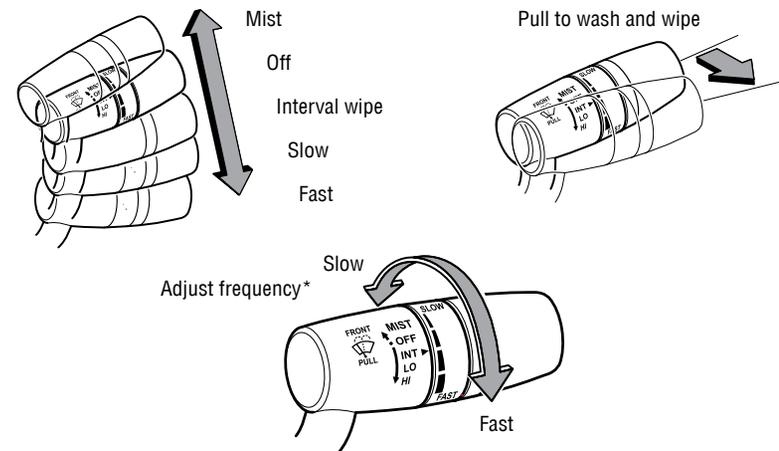


* Intermittent windshield wiper frequency adjustment
Rotate to increase/decrease wipe frequency.

With the wiper lever in the OFF or INT position, the wipers will operate continuously until the lever is released.

Windows

Driver side

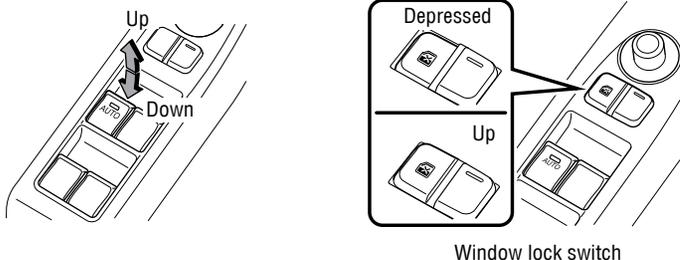


Window lock switch


Automatic operation (driver's window only) Push the switch completely down and release to fully open. To stop the window partway, operate the switch in the opposite direction.

Window lock switch Deactivates all passenger windows. Driver's window remains operable.

Air conditioning/heating

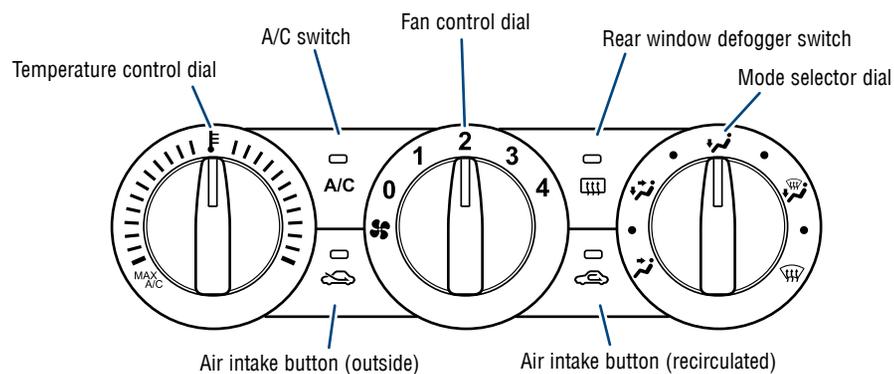

Cruise control

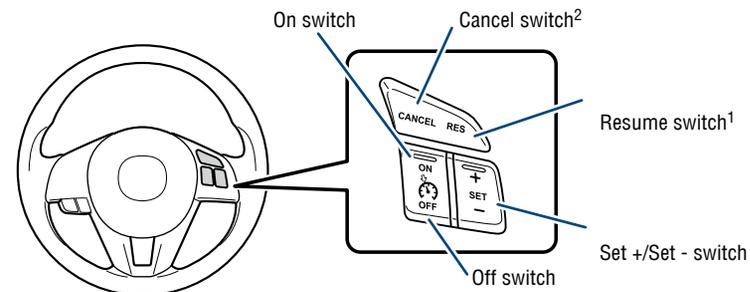


Amber indicator - system is activated
Green indicator - cruising speed is set

- ¹ The set speed may be resumed once vehicle speed reaches approximately 16 mph.
- ² The set speed may also be cancelled by depressing the brake pedal or the clutch pedal (manual transmission only).


Parking brake

Set

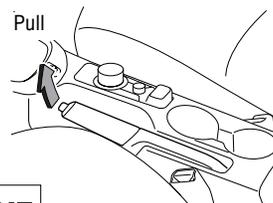


BRAKE

Release

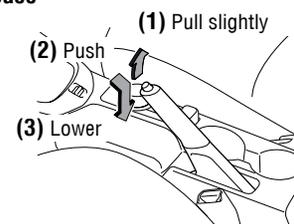


Power outlet

With CD player

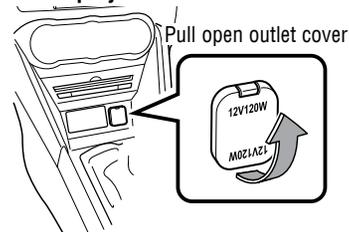


Without CD player

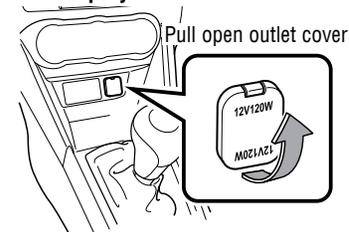

Designed for car accessories. Ignition switch must be in the "ACC" or "ON" position to use.

Tilt & telescopic steering wheel

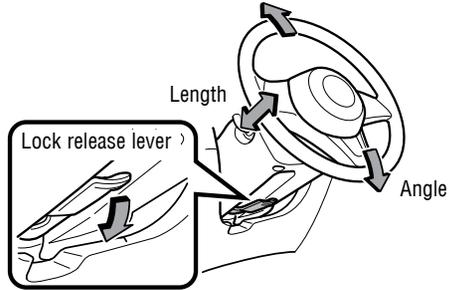


Hold wheel, push lever down, set angle and return lever.


NOTE: Do not attempt to adjust while the vehicle is in motion.

Steering wheel switches (if equipped)

Multimedia controls

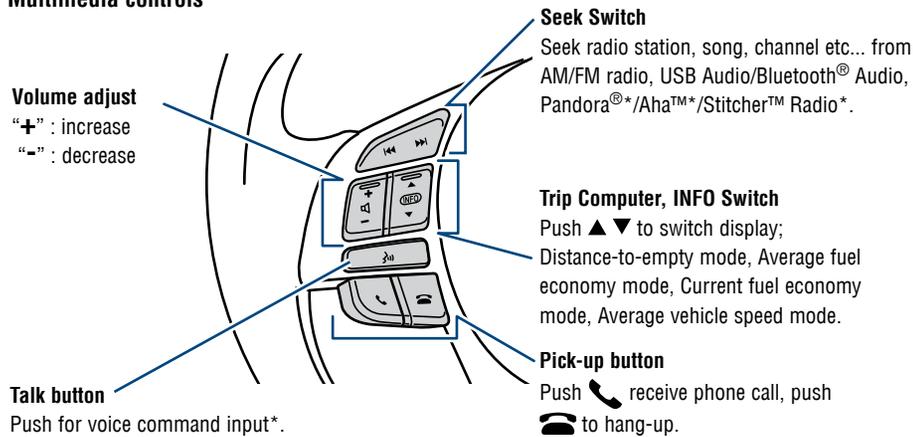


AUX port/USB port

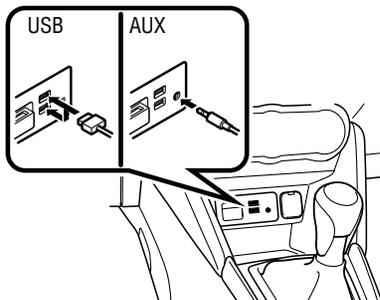

Ignition switch must be in the "ACC" or "ON" position to use. Use these ports to connect a portable audio device and listen to it through the vehicle's speakers.


Audio/navigation (if equipped)

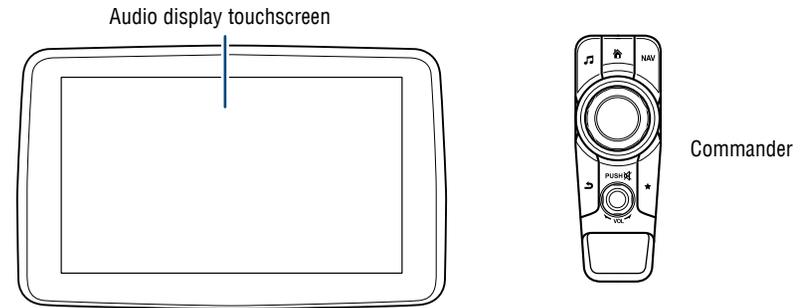

Audio Set has three different human interfaces.


- Commander switch
- Touch panel
- Steering wheel switches

COMMANDER SWITCH

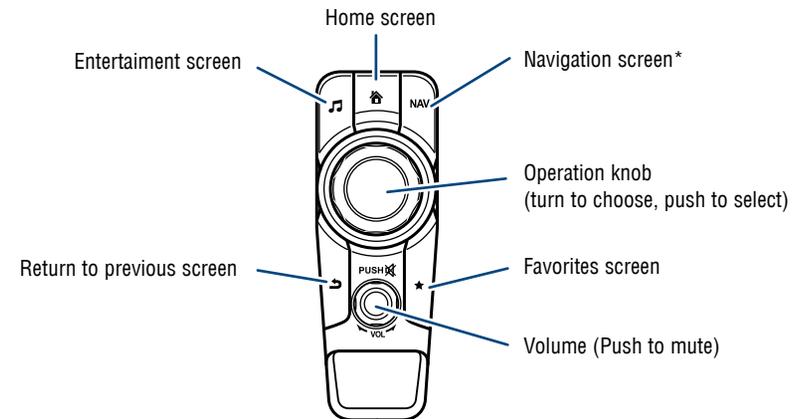

*If equipped

Rear view monitor system (if equipped)

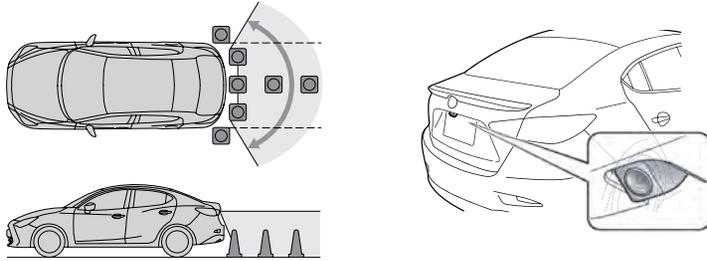


The rear view monitor system displays an image of the view from the bumper of the rear area of the vehicle. The camera for the rear view monitor system is located above the license plate.

Picture quality adjustment can be done while the shift lever is in reverse (R). There are four settings which can be adjusted including, brightness, contrast, tint, and color. When adjusting, pay sufficient attention to the vehicle surroundings.

Do not over rely on the system when backing up. Pay attention to the vehicle surroundings.

Refer to the Owner's Manual for limitations and more details on this system.

Smart City Brake Support (SCBS)

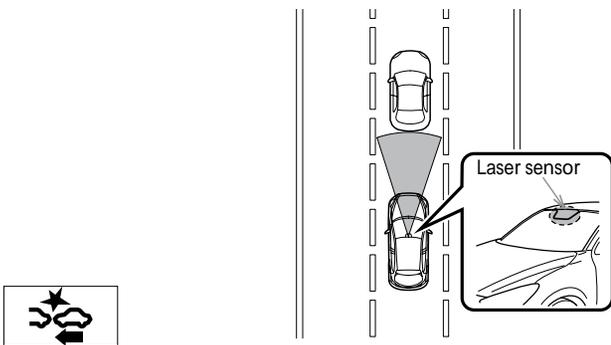


Smart City Brake Support (SCBS) is designed to reduce damage in the event of a collision by operating the brake control (SCBS brake) when the system's laser sensor detects a vehicle ahead and determines that a collision with a vehicle ahead is unavoidable.


Refer to the Owner's Manual for limitations and more details on this system.

Door locks

Driver side

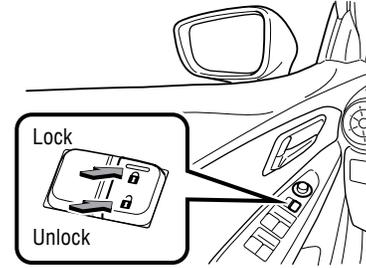


Passenger side

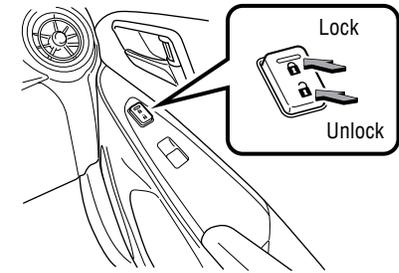


Doors-Child safety locks

Rear door

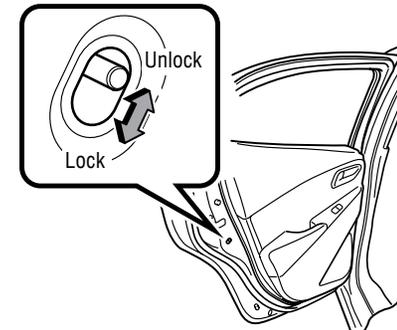


Moving the lever downward will allow the door to be opened only from the outside.

Seat belts-Shoulder belt anchor

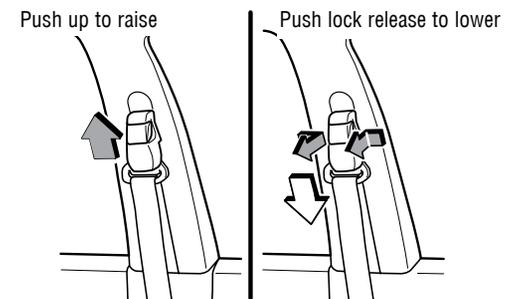


Seat belts

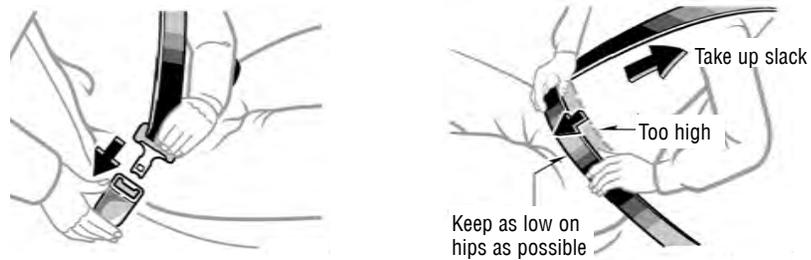

NOTE: If a passenger's seat belt is fully extended, then retracted even slightly, the Automatic locking retractor (ALR) will prevent it from being re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the Owner's Manual.

Tire Pressure Monitoring (warning) System (TPMS)

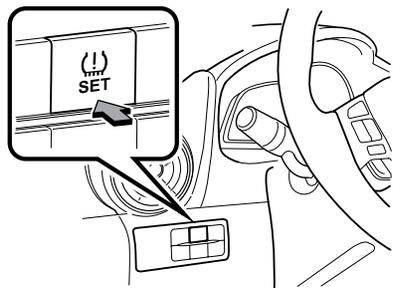

If tire pressure indicator is on, check/adjust each tire.

After adjusting tire pressures, or after tires have been rotated or replaced, turn the ignition switch to "ON" and press and hold the "SET" button until indicator blinks twice and a beep sound once. Let the vehicle sit for a few minutes to allow initialization to complete.


Refer to the load label on the door jamb or the Owner's Manual for tire inflation specifications.

If the tire pressure indicator flashes for more than 60 seconds and then remains on, take the vehicle to your local Toyota dealer.

NOTE: The warning light may come on due to temperature changes or changes in tire pressure from natural air leakage. If the system has not been initialized recently, setting the tire pressures to factory specifications should turn off the light.


Spare tire & tools

TOOL AND SPARE TIRE LOCATION

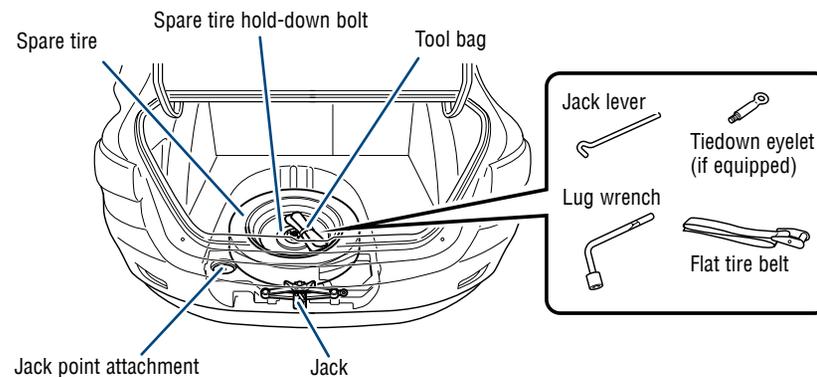


REMOVING THE JACK AND SPARE TIRE

(1)

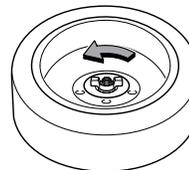

(2)

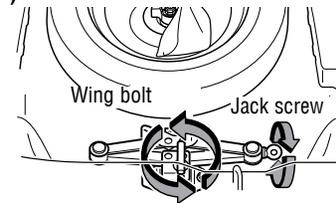

(1) Loosen the spare tire hold-down bolt.

(2) Turn the wing bolt and jack screw counterclockwise.

Refer to the Owner's Manual for jack positioning and tire changing procedures.

SAFETY & EMERGENCY FEATURES

Safety System

Your new Toyota vehicle comes standard with an active Safety System, which combines Traction Control System (TCS), Electronic Brake-force Distribution (EBD), Dynamic Stability Control (DSC), Brake Assist (BA), Anti-lock Brake System (ABS), and Brake Over-Ride System (BOS). Thus, your vehicle is equipped with safety systems similar to each of those that together comprise Toyota's Star Safety System.

Refer to the Owner's Manual for more details and important information on limitations to these systems.

DYNAMIC STABILITY CONTROL (DSC)

DSC automatically controls braking and engine torque in conjunction with systems such as ABS and TCS to help control side slip when driving on slippery surfaces, or during sudden or evasive maneuvering, enhancing vehicle safety.

TRACTION CONTROL SYSTEM (TCS)

TCS enhances traction and safety by controlling engine torque and braking. When the TCS detects driving wheel slippage, it lowers engine torque and operates the brakes to prevent loss of traction.

This means that on a slick surface, the engine adjusts automatically to provide optimum power to the drive wheels, limiting wheel spin and loss of traction.

BRAKE ASSIST (BA)

During emergency braking situations when it is necessary to depress the brake pedal with greater force, the brake assist system provides braking assistance, thus enhancing braking performance.

When the brake pedal is depressed hard or depressed more quickly than for non-emergency stops, the system applies the brakes more firmly.

ELECTRONIC BRAKE-FORCE DISTRIBUTION (EBD)

EBD makes it easier to maintain vehicle control and shortens the stopping distance when there is a large load on the rear wheels, such as when the car is carrying a full load of passengers. EBD optimally distributes the braking power between the front and rear wheels depending on the load in order to increase the effectiveness of the rear-wheel braking and minimize the difference in stopping distance between when the car is fully loaded and when it is not.

ANTI-LOCK BRAKE SYSTEM (ABS)

ABS control unit continuously monitors the speed of each wheel. If one wheel is about to lock up, the ABS responds by automatically releasing and reapplying that wheel's brake.

BRAKE OVER-RIDE SYSTEM (BOS)

Brake Over-ride System automatically reduces driving torque when the accelerator and brake pedals are pressed simultaneously under certain conditions.


BOS doesn't engage if the brake pedal is depressed before the accelerator pedal, allowing vehicles to start on a steep hill and safely accelerate without rolling backward.

Floor mat installation

There are two types of Toyota floor mats: carpeted and all-weather. Each vehicle has model-specific floor mats. Installation is easy.

To keep your floor mat properly positioned, follow these steps:

- Only use Toyota floor mats designed for your specific model.
- Use only one floor mat at a time, using the retaining hooks to keep the mat in place.
- Install floor mats right side up.

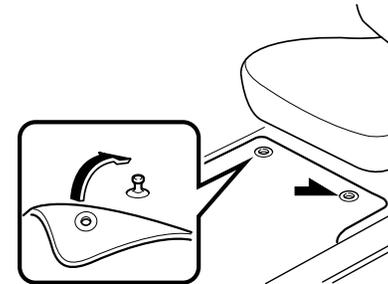

PAIRING BLUETOOTH® PHONE FOR THE FIRST TIME

Yaris iA Display Audio and Display Audio with Navigation¹

To use the hands-free³ features of the Yaris iA Display Audio system, it is necessary to first pair a compatible Bluetooth^{®2} mobile device to the vehicle. This operation cannot be performed while driving. You can pair up to 7 devices.

1. Activate the Bluetooth^{®2} connection setting of your mobile device. [See Figures 1 & 2]

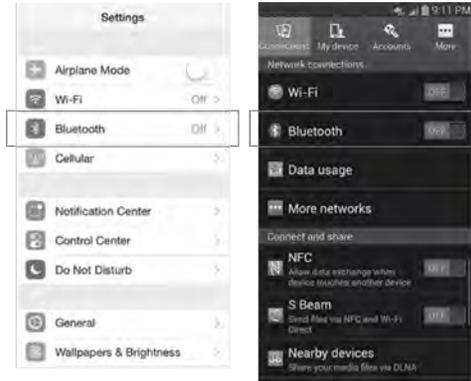


Figure 1: iOS

Figure 2: Android

2. Using the remote commander knob or touch-screen, select

"Settings"  from the home screen of the vehicle display (far right circle)



Figure 3

3. Within "Settings", you will see tabs on the top. Hit the >> arrow until the "Devices" tab is available. Select "Devices". [See Figure 3]

4. Within the "Devices" tab, select "Bluetooth". [See Figure 3]

5. Within the "Bluetooth" menu, select "Add New Device". [See Figure 4]



Figure 4

6. On your mobile device, find and select "My Toyota" or your vehicle within the Bluetooth[®] device list.

7. Verify the PIN. Select "Pair" on your device and select "Yes" on the head unit. [See Figure 5]



Figure 5

8. To enable text message notification on your mobile device, follow the appropriate directions below:

iPhone: Select the  icon next to the paired vehicle on your phone, and switch the "Show Notifications" toggle to on. [See Figure 6]

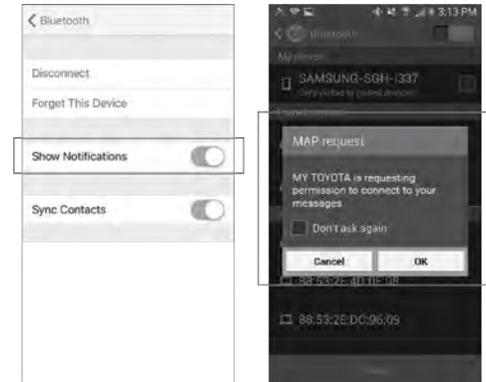


Figure 6: iOS

Figure 7: Android

Android: Your device might pop up two messages asking to allow the vehicle head unit to access your contacts and messages. You may choose to select "Yes" to both. [See Figure 7]

1. Availability & accuracy of the information provided by the navigation system is dependent upon many factors. Use common sense when relying on information provided. Services & programming subject to change. Services not available in every city or roadway. Updates may be available from your dealer at an additional cost. See Owner's Manual for details. 2. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth® enabled phone must first be paired. Phone performance depends on software, coverage & carrier. 3. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you. 4. iPhone® is not included. iPhone® is registered trademarks of Apple, Inc.

NOTES

NOTES



www.toyota.com/owners

CUSTOMER EXPERIENCE CENTER
1-800-331-4331



Printed in U.S.A. 10/16
16-MKG-09646



00505QRG17YARIA