



86
2 0 1 7



QUICK REFERENCE GUIDE

2017

Toyota 86

This Quick Reference Guide is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The Quick Reference Guide is not intended as a substitute for the Owner's Manual located in your vehicle's glove box. We strongly encourage you to review the Owner's Manual and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new 86.

A word about safe vehicle operations

This Quick Reference Guide is not a full description of 86 operations. Every 86 owner should review the Owner's Manual that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the Owner's Manual. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this Quick Reference Guide is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

INDEX

OVERVIEW

Engine maintenance	8
Fuel tank door release & cap	7
Hood release	8
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Keyless entry	6
Light control-Instrument cluster	7

FEATURES & OPERATIONS

Air conditioning/heating	14
Automatic transmission	9
AUX/USB port	16
Clock	15
Cruise control	10
Cup/bottle holders	16
Door locks	15
Driving modes	10-11
Hill-start Assist Control (HAC)	11
Lights & turn signals	12
Manual transmission	9
Multi-Information Display (MID)	12
Parking brake	9
Power outlets	16
Rear view monitor system	17
Seat adjustments-Front	13
Seats-Fold down rear seats	13
Seats-Head restraints	13
Tilt steering wheel	14
Trunk release	15
Windows	14
Windshield wipers & washers	13



SAFETY & EMERGENCY FEATURES


Floor mat installation	21
Seat belts	18
Spare tire & tools	19
Star Safety System™	20-21
Tire Pressure Monitoring (warning) System (TPMS)	18

PAIRING BLUETOOTH® PHONE FOR THE FIRST TIME

22-23


Instrument panel

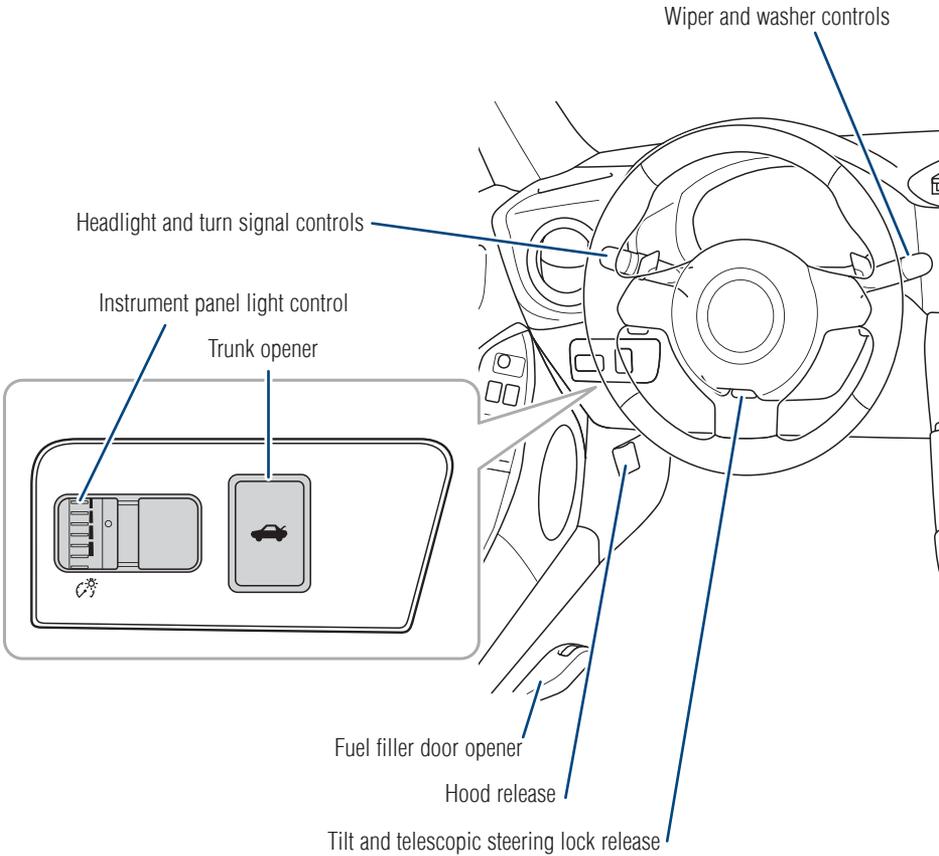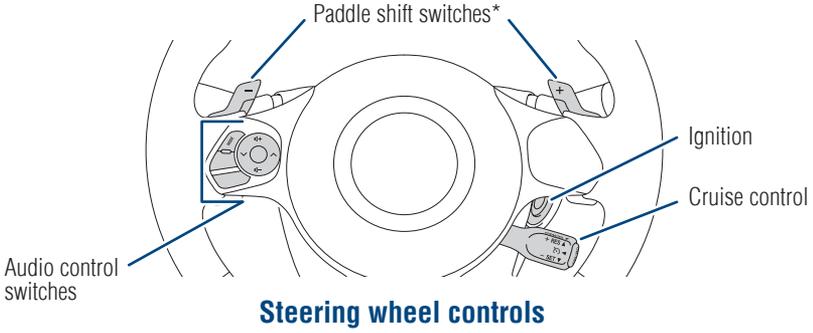

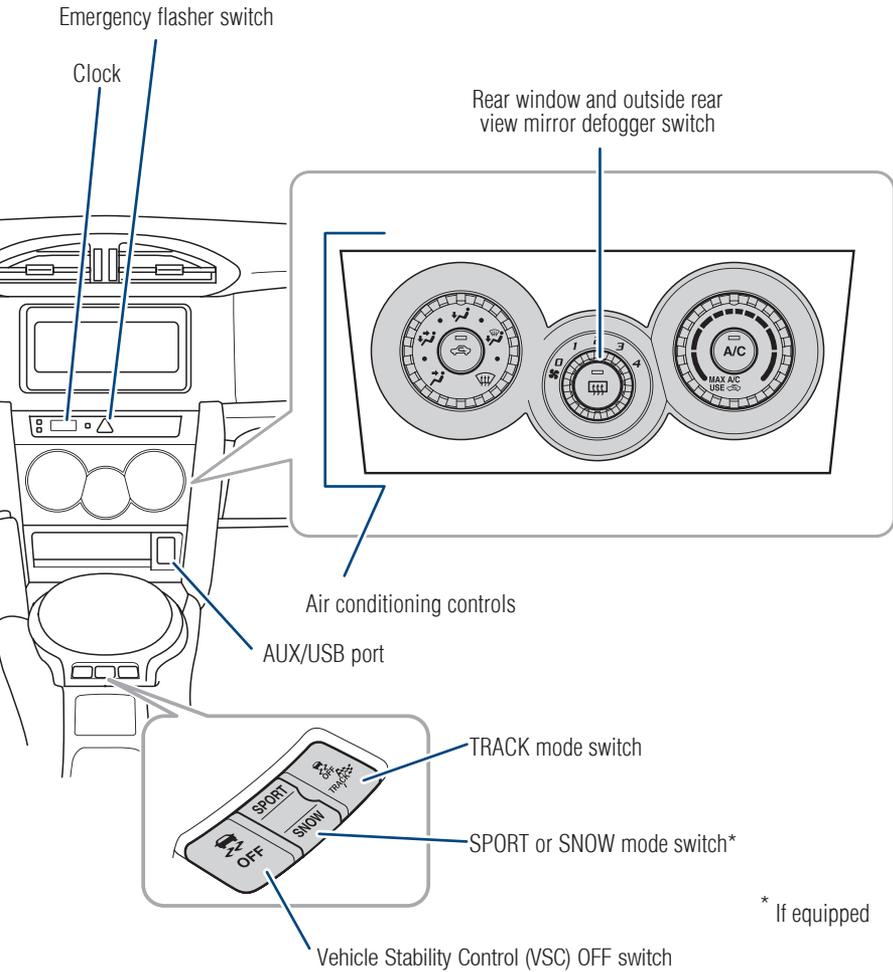

OVERVIEW

Instrument cluster

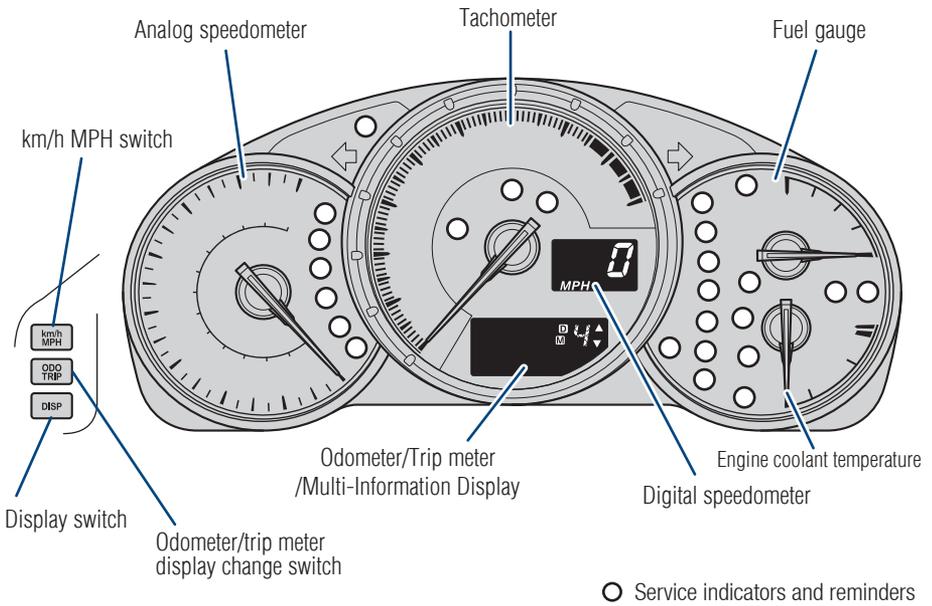

Indicator symbols

For details, refer to "Indicators and warning lights," Section 2-2, 2017 Owner's Manual.

	AIR BAG ON and AIR BAG OFF indicator		Electric power steering system warning ¹
	Airbag SRS warning ¹		Fuel tank door position
	Anti-lock Brake System warning ¹		Headlight low/high beam indicators
	Automatic Transmission fluid temperature warning ¹		Headlight low/high beam indicators
	Brake system warning ¹		Hill-start assist control ON indicator
	Charging system warning ¹		
	SET Cruise control indicators ²		

¹ If indicator does not turn off within a few seconds of starting engine, there may be a malfunction. Have vehicle inspected by your Toyota dealer.

	Low engine oil pressure warning ¹
	Low fuel level warning ¹
	Low Tire Pressure Warning ¹
	Malfunction/ Check Engine indicator ¹
	Open door warning
	REV (engine RPM) indicator
	Seat belt reminder (alarm will sound if speed is over 12 mph)
	
	Security indicator
	Shift position and shift range indicator
	Shift position indicator
	Shift-up indicator
	Slip indicator ¹
	SNOW indicator ³
	SPORT indicator ³
	TRACK mode indicator
	Traction Control OFF indicator ¹
	Turn signal indicator
	Upshift/downshift indicator
	Vehicle Stability Control OFF indicator ¹

² If these lights come on in yellow, refer to "Cruise control" Section 2-4, 2017 Owner's Manual.

³ If equipped.

OVERVIEW

Keyless entry

LOCKING OPERATION



Push

UNLOCKING OPERATION



Push

ONCE: Driver door
TWICE: All doors

NOTE: If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.

PANIC BUTTON



Push and hold




TRUNK UNLOCKING OPERATION





Push and hold

Light control-Instrument cluster

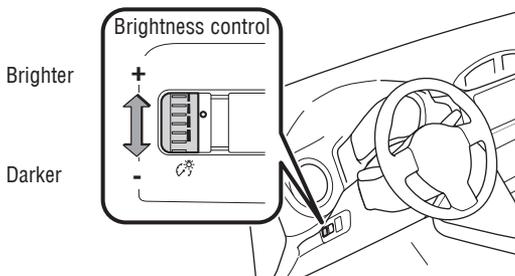


Fuel tank door release & cap

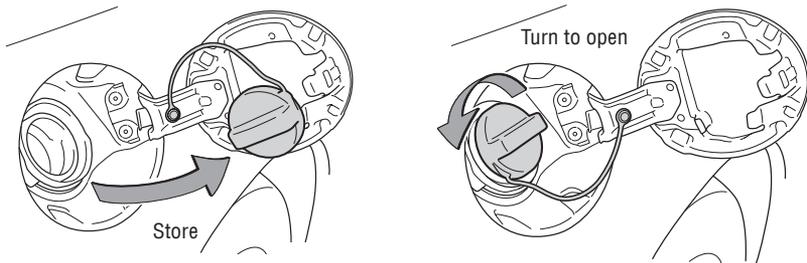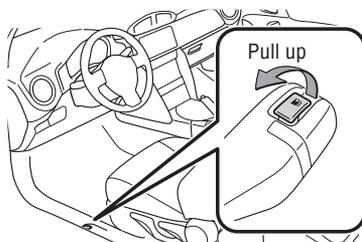


NOTE: Tighten until one click is heard. If the cap is not tightened enough, Check Engine “” indicator may illuminate.

OVERVIEW

Hood release

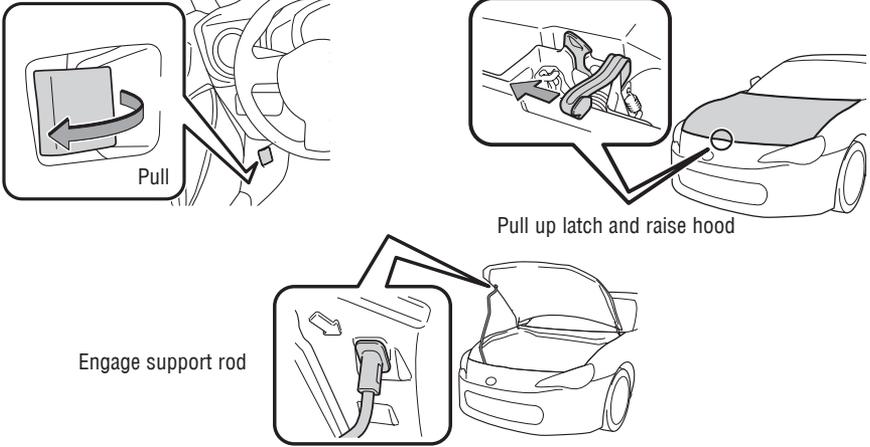


Engine maintenance


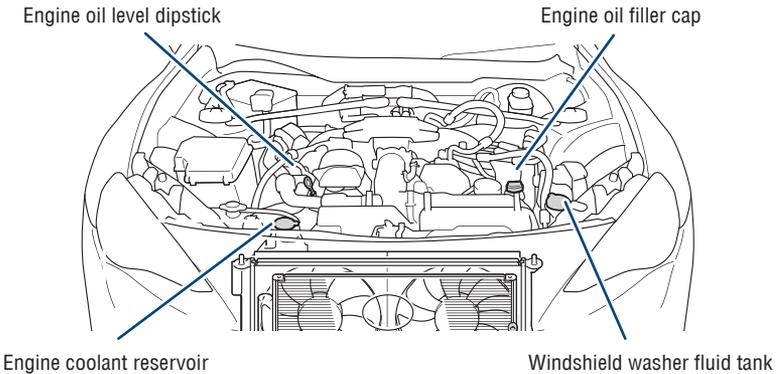


NOTE: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the “Warranty Maintenance Guide.”

Automatic transmission (if equipped)

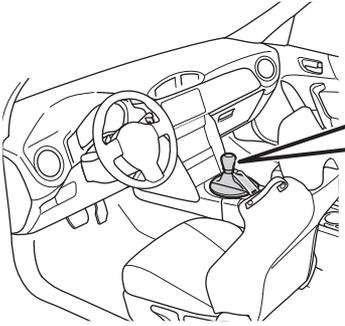

 - P** Park*
- R** Reverse
- N** Neutral
- D** Drive
- M** "M" mode

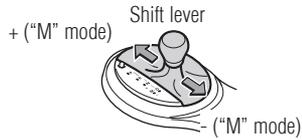

* The ignition switch must be "ON" and the brake pedal depressed to shift from Park.


"M" (MANUAL) MODE

Shift the shift lever to "M" position from "D" position.


- +**: Upshifting
- : Downshifting

Refer to the Owner's Manual for more details.

Manual transmission (if equipped)

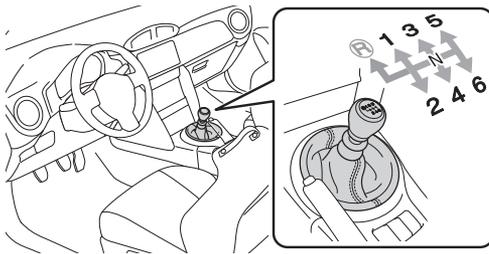


Lift up ring to shift into reverse

 

Parking brake

BRAKE

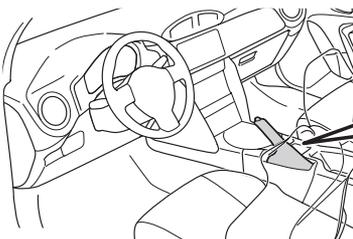

Set **Release**

Pull

(2) Push


(1) Pull slightly

(3) Lower


FEATURES & OPERATIONS

Cruise control

TURNING SYSTEM ON/OFF

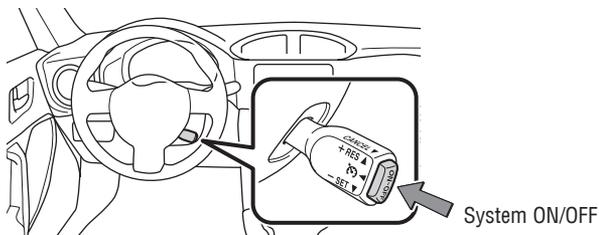

FUNCTIONS

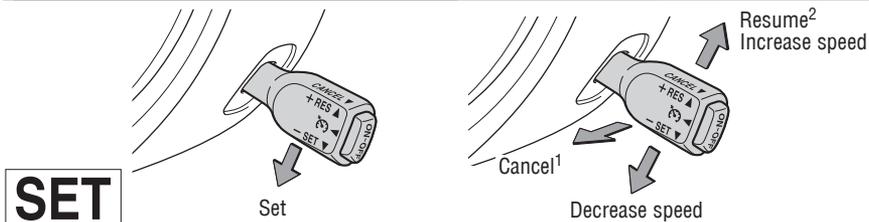


¹ The set speed may also be cancelled by depressing the brake pedal.

² The set speed may be resumed once vehicle speed exceeds 20 mph.

Driving modes

AUTOMATIC TRANSMISSION (IF EQUIPPED)

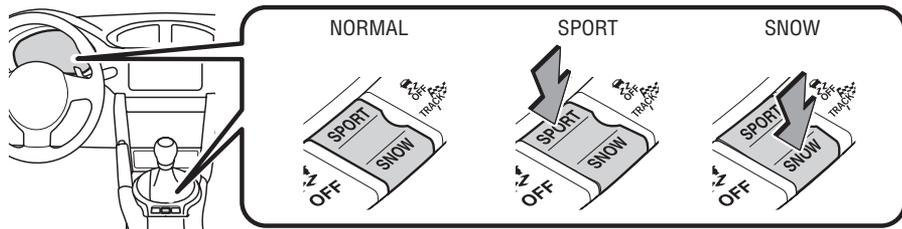

Normal mode

Sport mode


Use for sporty driving or when driving in mountainous regions with lots of curves. Press this switch and the “SPORT” indicator illuminates.

Snow mode

Use for accelerating and driving on slippery road surfaces such as snow. Press this switch and the “SNOW” indicator illuminates.

To cancel SPORT mode or SNOW mode, press the same side of the switch again and it returns to normal driving mode.

Refer to the Owner's Manual for more details.

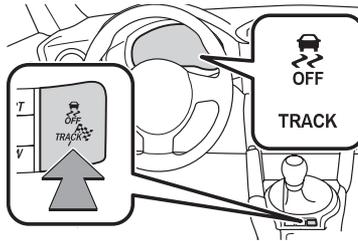

There are two types of control modes to accommodate various driving preferences.

Normal mode

Use for secure and smooth normal driving.

“TRACK” mode

Use for the feeling of added control and maneuverability. Press this switch and the “TRACK” and “VSC OFF” indicators illuminate. To cancel and go back to normal mode while in “TRACK” mode, press “TRACK” or “VSC OFF” switch again.

Refer to the Owner’s Manual for more details.

Hill-start Assist Control (HAC)



HAC helps to maintain braking force to assist starting off forward while facing uphill or starting off backward while facing downhill. As HAC is initially disabled, enable the system to make it operable. The enabled/disabled setting will be maintained the next time the engine is started.

The hill-start assist control ON indicator will be illuminated when system is enabled and flash while the system is operating.

To enable system, refer to the Owner’s Manual for limitations and more information.

FEATURES & OPERATIONS

Lights & turn signals

HEADLIGHTS





Headlights

Parking lights


AUTO

OFF

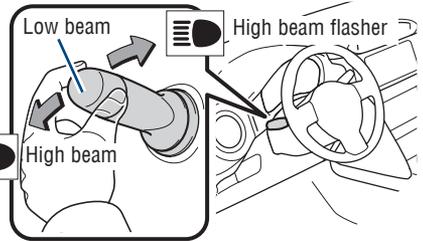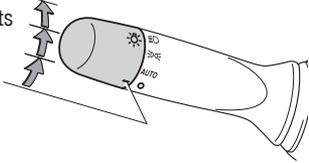


Automatic light cut off system Automatically turns lights off after 30-second delay, or lock switch on remote may be pushed afterlocking.

TURN SIGNALS

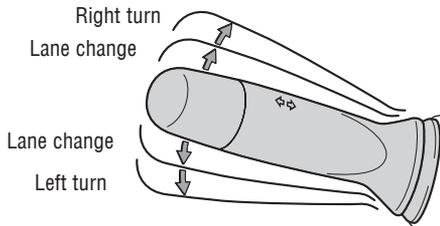

Multi-Information Display (MID)

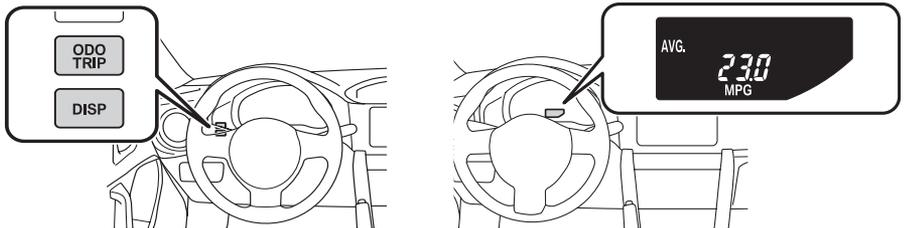

Push “DISP” to change information in the following:

- (1) Outside temperature
- (2) Current fuel consumption
- (3) Average fuel consumption
- (4) Setting screen for the REV (engine RPM) indicator*



Push “ODO TRIP” to change information in the following:

- (1) Odometer
- (2) Trip meter
- (3) Setting
- (4) Setting screen for the REV (engine RPM) indicator*

* Only displayed when the vehicle is stopped.

For more details, refer to the Owner's Manual.


Windshield wipers & washers

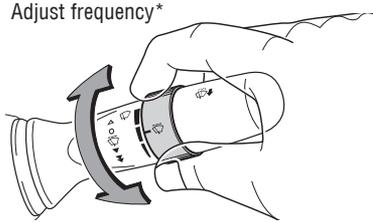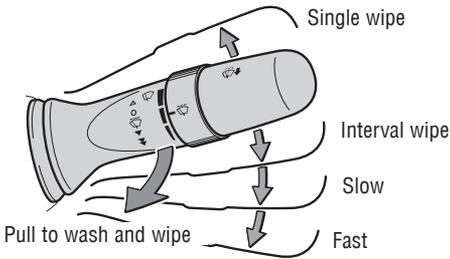


* Intermittent windshield wiper frequency adjustment. Rotate to increase/decrease wipe frequency.

For more details, refer to the Owner's Manual.


Seat adjustments-Front

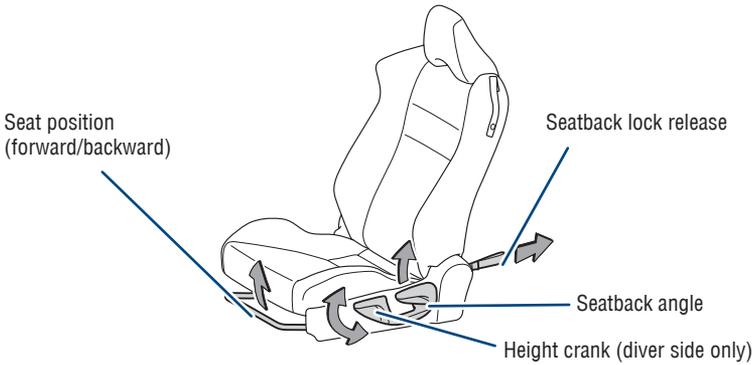

Seats-Fold down rear seats

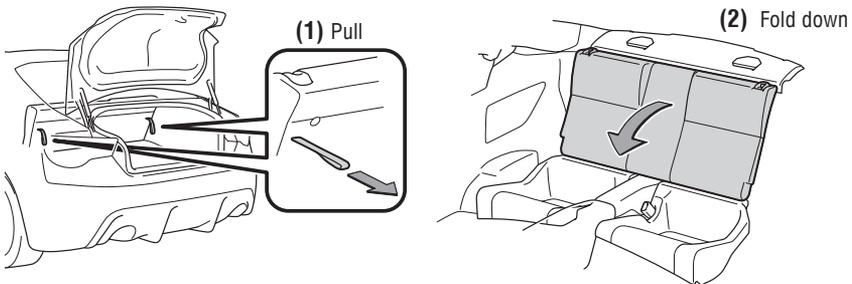


Seats-Head restraints

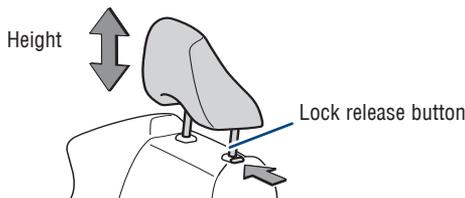

FEATURES & OPERATIONS


Tilt steering wheel

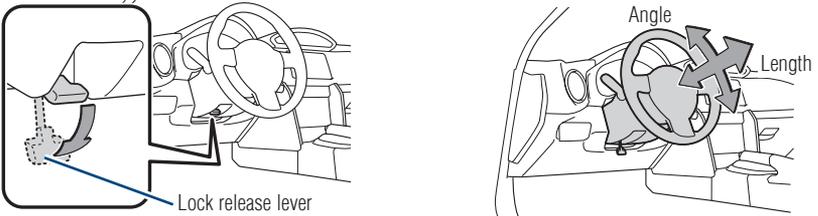

Hold wheel, push lever down, set angle and length, and **return lever**.

NOTE: Do not attempt to adjust while the vehicle is in motion.


Air conditioning/heating

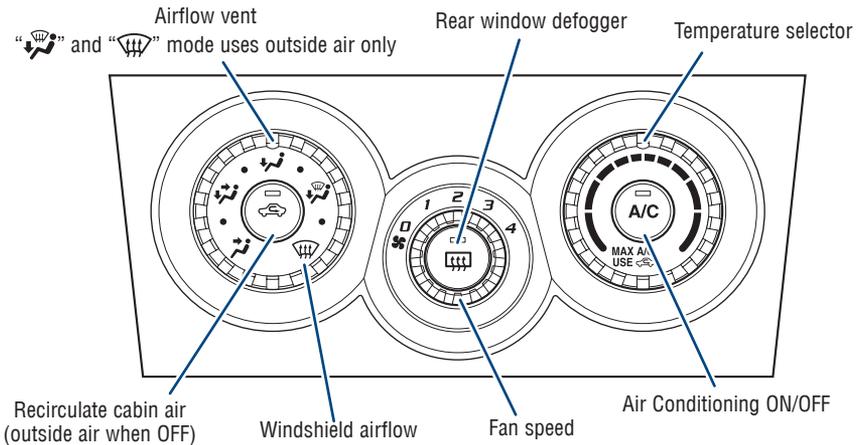

For more details, refer to the Owner's Manual.

Windows


Driver door window controls

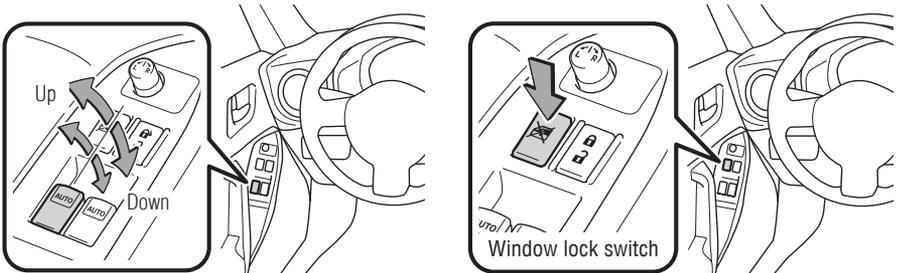

Automatic operation Push the switch completely down or pull it completely up and release to fully open. To stop window midway, lightly push the switch in the opposite direction.


Window lock switch Deactivates all passenger windows. Driver's window remains operable.

Clock

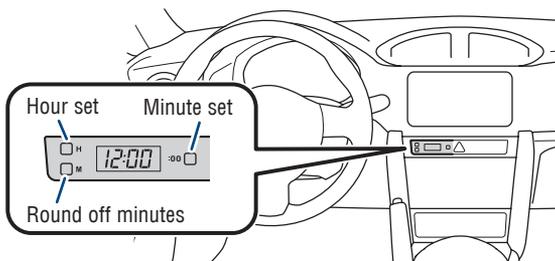


* The ignition switch must be "ON."

Door locks

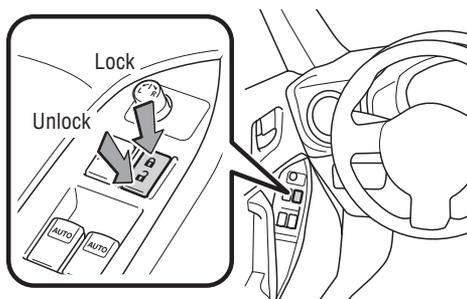


Trunk release

Trunk opener

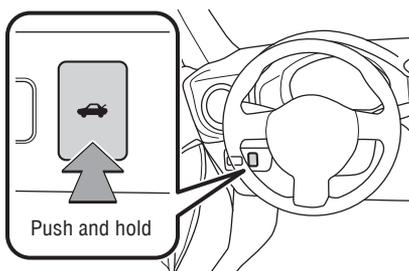

FEATURES & OPERATIONS

AUX/USB port

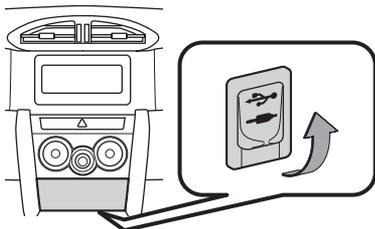

AUX port

By inserting a mini plug (not included) into the AUX port, you can listen to music from a portable audio device through the vehicle's speaker system while in AUX mode.


USB port

By connecting a USB memory or USB-compatible portable audio device to the USB port, you can listen to music from the portable audio device or USB memory through the vehicle's speaker system.


Refer to the *Toyota Audio Manual* or *Toyota.com* for more details.

Power outlets

Console tray


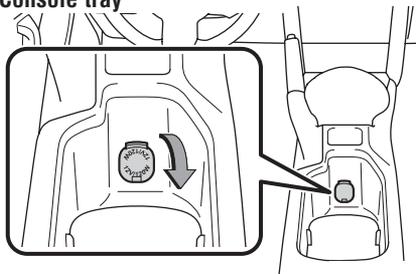


Glove box

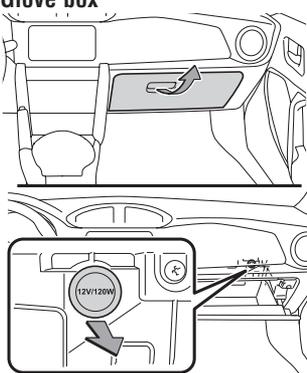

Designed for car accessories. Ignition switch must be in the "ACC" or "ON" position to be used.

Cup/bottle holders

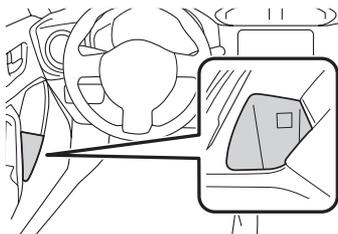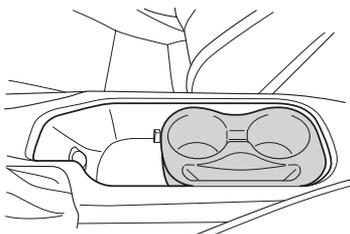

Rear view monitor system

The rear view monitor system assists the driver by displaying an image of the camera's view behind the vehicle when in reverse.



To see the camera's image of the view behind the vehicle on the monitor screen, the vehicle ignition switch must be in the ON position and the gear selector must be in the REVERSE position.

If you shift the vehicle out of the "R" position, the screen returns to the previous image.

The backup camera does not provide a comprehensive view of the rear area of the vehicle. You should also look around outside your vehicle and use your mirrors to confirm rearward clearance. Environmental conditions may limit effectiveness and view may become obscured.

For more details, refer to the Owner's Manual details.

Seat belts

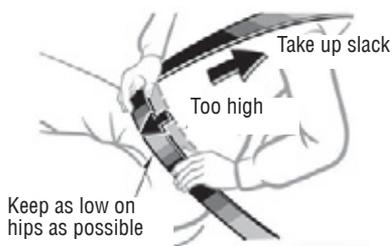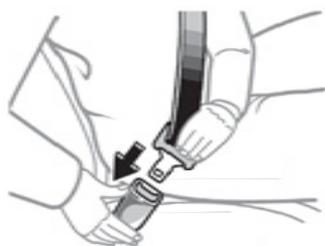

NOTE: If a passenger's seat belt is fully extended, then retracted even slightly, the Automatic Locking Retractor (ALR) will prevent it from being re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the Owner's Manual.


Tire Pressure Monitoring (warning) System (TPMS)

If tire pressure becomes critically low on any of the tires (excluding the spare), "!" indicator will illuminate. Correctly adjusting tire inflation will turn off the light after a few minutes. If the light does not turn off, have the system checked by your Toyota dealer.


Refer to the Owner's Manual for more details.

Spare tire & tools

TOOL LOCATION

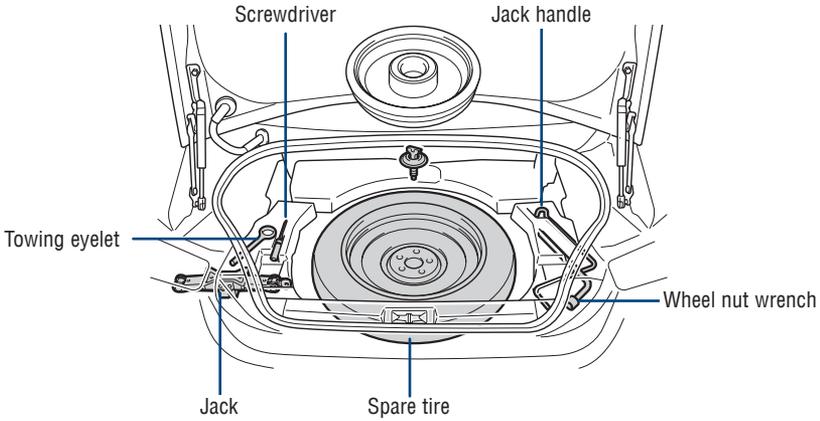

REMOVING THE SPARE TIRE

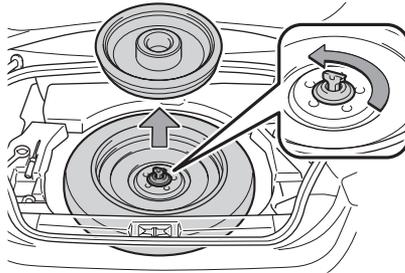

- (1) Remove the spare tire cover.
- (2) Loosen and remove the bolt.

Refer to the Owner's Manual for jack positioning and tire changing procedures.

SAFETY & EMERGENCY FEATURES

Star Safety System™

Your new Scion vehicle comes standard with the Star Safety System™, which combines Traction Control (TRAC), Electronic Brake-force Distribution (EBD), Vehicle Stability Control (VSC), Brake Assist (BA) and an Anti-lock Braking System (ABS).

Refer to the Owner's Manual for more details and important information on limitations to these systems.

VEHICLE STABILITY CONTROL (VSC)

VSC helps prevent loss of traction during cornering by reducing engine power and applying brake force to selected wheels.

Toyota's VSC monitors steering angle and the direction your vehicle is traveling. When it senses that the front or rear wheels begin to lose traction, VSC reduces engine power and applies braking to selected wheels. This helps restore traction and vehicle control.

TRACTION CONTROL (TRAC)

VSC helps prevent loss of traction during cornering by reducing engine power, and Traction Control helps maintain traction on loose gravel and wet, icy, or uneven surfaces by applying brake force to the spinning wheel(s).

Toyota's TRAC sensors are activated when one of the drive wheels starts to slip. TRAC limits engine output and applies the brakes to the spinning wheel. This transfers power to the wheels that still have traction to help keep you on track.

BRAKE ASSIST (BA)

Brake Assist is designed to detect sudden or "panic" braking, and then add braking pressure to help decrease the vehicle's stopping distance. When there's only a split second to react, Brake Assist can add additional brake pressure more quickly than just the driver alone can.

ELECTRONIC BRAKE FORCE DISTRIBUTION (EBD)

Toyota's ABS technology has Electronic Brake-force Distribution (EBD) to help maintain control and balance when braking. Abrupt stops can cause a vehicle to tilt forward, reducing the braking power of the rear wheels. EBD responds to sudden stops by redistributing brake force to enhance the braking effectiveness of all four wheels.

ANTI-LOCK BRAKE SYSTEM (ABS)

Toyota's ABS sensors detect which wheels are locking up and limits wheel lockup by "pulsing" each wheel's brakes independently. Pulsing releases brake pressure repeatedly for fractions of a second. This helps the tires attain the traction that current road conditions will allow, helping you to stay in directional control.

SMART STOP TECHNOLOGY (SST)

Smart Stop Technology automatically reduces engine power when the accelerator and brake pedals are pressed simultaneously under certain conditions.

SST engages when the accelerator is depressed first and the brakes are applied firmly for longer than one-half second at speeds greater than five miles per hour.



SST doesn't engage if the brake pedal is depressed before the accelerator pedal, allowing vehicles to start on a steep hill and safely accelerate without rolling backward.

Floor mat installation


There are two types of Toyota floor mats: carpeted and all-weather. Each vehicle has model-specific floor mats. Installation is easy.

To keep your floor mat properly positioned, follow these steps:

- Only use Toyota floor mats designed for your specific model.
- Use only one floor mat at a time, using the retaining hooks to keep the mat in place.
- Install floor mats right side up.

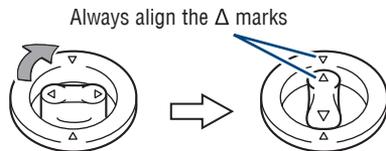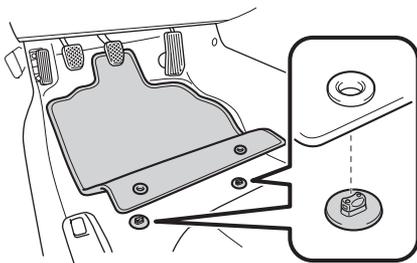

The shape of the retaining hooks (clips) may differ from that shown in the illustration.

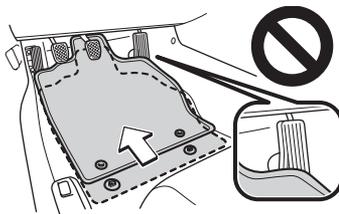

PAIRING BLUETOOTH® PHONE FOR THE FIRST TIME

Touch Screen Display Audio and Display Audio with Navigation¹

To use the hands-free system³, it is necessary to pair a *Bluetooth*®² phone with the system. Once the phone has been paired, it is possible to use the hands-free system³. This operation cannot be performed while driving. (NOTE: The *Bluetooth*®² pairing process for Non-Navigation and Navigation¹ units differ, as noted below)
You can pair up to 4 devices.

1. Turn the *Bluetooth*®² connection setting of your cellular phone ON.
[See Figures 1 & 2]
 - a. Pairing is not available when *Bluetooth*®² setting of your phone is set to OFF.



Figure 1: iOS



Figure 2: Android

2. Press the “Phone” button to display the “Phone” screen. Touch “Yes” to register a phone. (Non-Navigation units – skip to step 4)
[See Figure 3]



Figure 3

3. Touch the “Make system discoverable”^{**} button. [See Figure 4]
^{*} On Android™ devices, you will need to make your phone visible to searching devices.

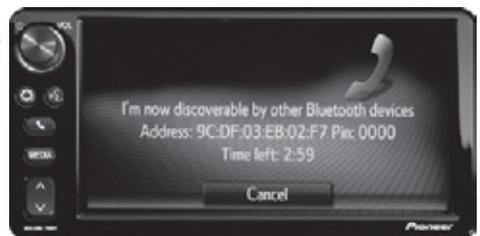


Figure 4: With Navigation¹

4. Next, search for **“My Toyota”** from your phone’s *Bluetooth*^{®2} screen and select **“My Toyota”** [See Figure 5]

- To cancel the registration, touch **“Cancel”**.
- **Navigation units** - skip to step 7



Figure 5: Without Navigation

5. A message will display on the head unit requesting messaging access.

iPhone^{®4}: Using your smartphone, you may need to allow head unit access to your messaging and contacts. [See Figure 6] Only current iPhone^{®4} text messages can be viewed on the head unit. iPhone^{®4} does not allow text message reply.

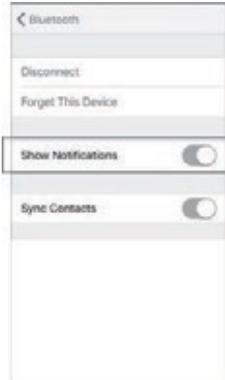


Figure 6: iOS



Figure 7: Android

Android[™]: Using your smartphone, you may need to allow head unit access to your messaging and contacts. [See Figure 7] It is recommended to check the **“Don't ask again”** box, so as not to have to press **OK** every time the phone makes a *Bluetooth*^{®2} connection with your Toyota.

6. Touch **“OK”** when the connection status changes from **“Connection waiting...”** to **“Connected”**.

7. **For Navigation¹ Units Only**: Confirm that the passkey number displayed on screen matches the passkey displayed on your *Bluetooth*^{®2} device and press **“Yes”**.

NOTE: A message will display on the head unit requesting messaging access. Please refer to step 5

1. Availability & accuracy of the information provided by the navigation system is dependent upon many factors. Use common sense when relying on information provided. Services & programming subject to change. Services not available in every city or roadway. Updates may be available from your dealer at an additional cost. See Owner's Manual for details. 2. The Bluetooth[®] word mark and logos are registered trademarks owned by Bluetooth[®] SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth[®] enabled phone must first be paired. Phone performance depends on software, coverage & carrier. 3. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you. 4. iPhone[®] is not included. iPhone[®] is registered trademarks of Apple, Inc.

NOTES



CUSTOMER EXPERIENCE CENTER

1-800-331-4331



Printed in U.S.A. 9/16
16-MKG-09518



0061617TOY86QRG