



# SEQUOIA

2 0 1 7



QUICK REFERENCE GUIDE

# 2017

## SEQUOIA

This Quick Reference Guide is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The Quick Reference Guide is not intended as a substitute for the Owner's Manual located in your vehicle's glove box. We strongly encourage you to review the Owner's Manual and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Sequoia.

### *A word about safe vehicle operations*

This Quick Reference Guide is not a full description of Sequoia operations. Every Sequoia owner should review the Owner's Manual that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the Owner's Manual. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this Quick Reference Guide is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

## OVERVIEW

Engine maintenance	10
Fuel tank door release & cap	9
Hood release	9
Indicator symbols	6-7
Instrument cluster	5
Instrument panel	2-4
<i>Keyless entry</i> <sup>1</sup>	8-9
Light control-Instrument cluster	10

## FEATURES & OPERATIONS

Accessory meter	30
Air conditioning/heating	23-24
Audio	25-26
<i>Auto lock/unlock</i> <sup>1</sup>	12
Automatic transmission	11
Blind Spot Monitor (BSM)	14
Cruise control	27
Cup holders	32
Door locks	29
Door-Power back	20
Driving position memory	21
Dynamic Laser Cruise Control	28
Four-wheel drive	13
<i>Garage door opener (HomeLink®)</i> <sup>3</sup>	27
<i>Lights</i> <sup>1</sup> & <i>turn signals</i>	18
Moon roof	21
<i>Multi-Information Display</i> <sup>2</sup>	29
Parking brake	12
Power outlets-12V DC	31
Power outlets-120V AC	31
Rear seat entertainment system	32
Rear view monitor system	26
Seat adjustments-Front	14
Seat adjustments-Rear	15
Seat ventilators/heaters	24
Seats-Folding 2nd row seats	16
Seats-Folding 3rd row seats	17

## FEATURES & OPERATIONS (continued)

Seats-Head restraints	16
Telephone controls (Bluetooth®)	30
Tilt & telescopic steering wheel	22
TOW/HAUL switch	11
VSC OFF switch	22
Window-Back	20
Windows	19
Windshield wipers & washers	19

## SAFETY & EMERGENCY FEATURES

Doors-Child safety locks	34
Floor mat installation	36
Seat belts	33
Seat belts-Shoulder belt anchor	34
Spare tire & tools	34
Star Safety System™	35-36
Tire Pressure Monitoring (warning) System (TPMS)	33

## BLUETOOTH® DEVICE PAIRING SECTION 38-47

<sup>1</sup> Visit your Toyota dealer for information on customizing this feature.

<sup>2</sup> Programmable by customer. Refer to the Owner's Manual for instructions and more information.

<sup>3</sup> HomeLink® is a registered trademark of Gentex Corporation.

# Instrument panel

Steering wheel audio controls<sup>1,2</sup>

Voice command switch<sup>1,2</sup>

Telephone controls<sup>1,2</sup>

Dynamic Laser Cruise Control (DLCC)<sup>1,2</sup> or cruise control switch<sup>1</sup>

Dynamic Laser Cruise Control (DLCC) vehicle-to-vehicle distance switch<sup>1</sup>

## Steering wheel controls

Headlights, turn signals/  
fog light controls<sup>1</sup>

Gauges and meters/  
Multi-information display<sup>1</sup>

Front and rear windshield wiper and washer switch


Outside rear view mirror controls

Personal/interior light main switch

Instrument cluster light control dial<sup>1</sup>

Tilt and telescopic steering control switch<sup>1</sup>

Tire pressure monitor (warning) system (TPMS) reset switch

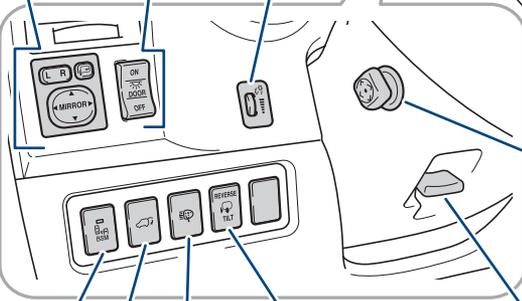

"REVERSE TILT" (side mirrors) switch<sup>1</sup>

Headlight cleaner switch<sup>1</sup>

Power back door button<sup>1</sup>


Blind Spot Monitor (BSM) switch<sup>1</sup>

Tilt and telescopic steering lock release lever<sup>1</sup>

<sup>1</sup> If equipped


<sup>2</sup> For details, refer to the “Navigation System Owner’s Manual” or the “2017 Entune™ Audio Quick Reference Guide.”

See next page for details on the center panel area.

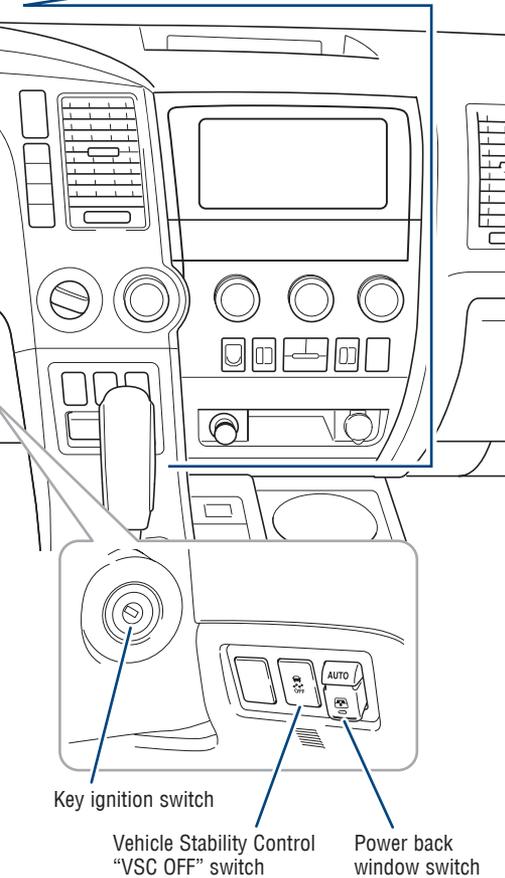

# OVERVIEW

## CENTER PANEL AREA

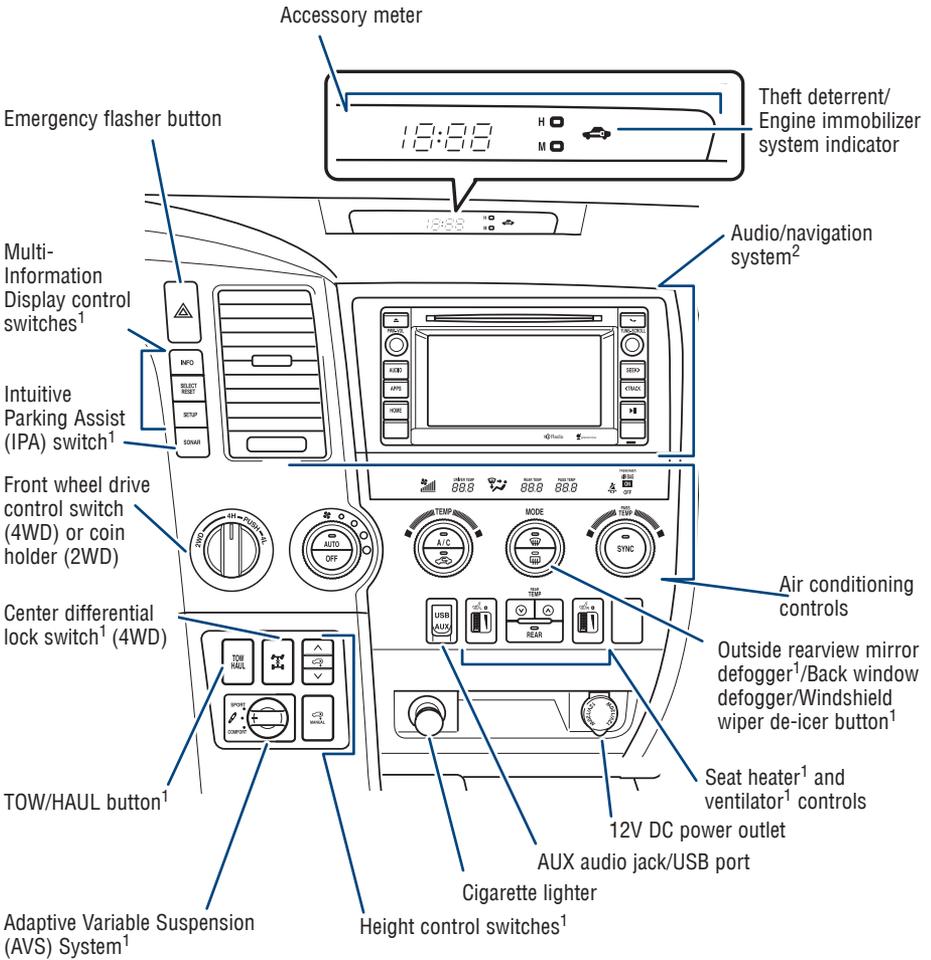


<sup>1</sup> If equipped


<sup>2</sup> For details, refer to the "Navigation System Owner's Manual" and "2017 Entune™ Audio Quick Reference Guide."

# Instrument cluster

## With Multi-Information Display

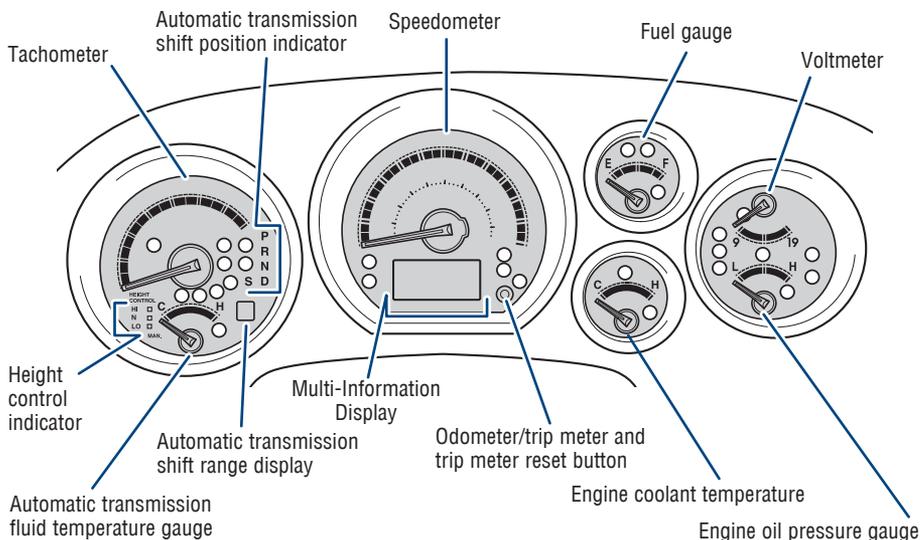

## Without Multi-Information Display

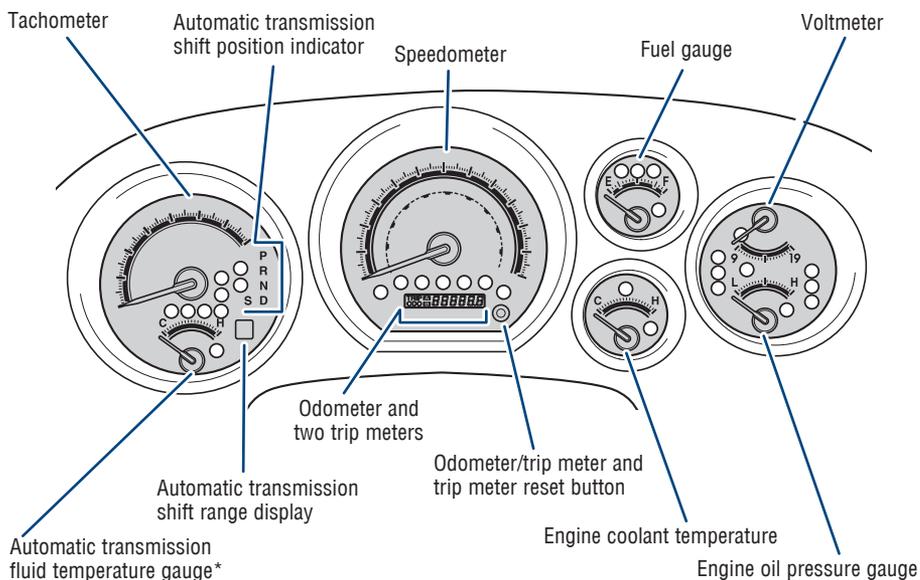

\* If equipped

○ Service indicators and reminders

# OVERVIEW

## Indicator symbols

For details, refer to "Indicators and warning lights," Section 2-2, 2017 Owner's Manual.

- |  |   |   |   |
|--|---|---|---|
|    | AIR BAG OFF indicator <sup>1</sup>  |   |   |
|    | AIR BAG ON indicator <sup>1</sup>   |   |   |
|    | Air bag SRS warning <sup>1</sup>  |   |   |
|    | Anti-lock Brake System (ABS) warning <sup>1</sup>                                   |   |   |
|    | AUTO Limited Slip Differential indicator <sup>1</sup>                               |   |   |
|    | Automatic Transmission fluid temperature warning <sup>1</sup>                       |   |   |
|    | Blind Spot Monitor (BSM) outside rearview mirror indicators <sup>2</sup>            |   |   |
|    | Brake system warning <sup>1</sup>   |   |   |
|    | Center differential lock indicator <sup>2</sup>                                     |   |   |
|    | Charging system warning <sup>1</sup>  |   |   |
|    | Cruise control indicator  |   |   |
|   | Driver seat belt reminder<br>(alarm will sound if speed is over 12 mph)             |   |   |
|  | Front passenger seat belt reminder<br>(alarm will sound if speed is over 12 mph)    |   |   |
|  | Fuel tank door position   |   |   |
|  | Headlight low/high beam indicator   |   |   |
|  |  |  | Height control indicator <sup>1,2</sup> |
|  | Height control/MANUAL indicator <sup>1,2</sup>                                      |   |   |
|  |  | High/Low speed four-wheel drive indicator <sup>2</sup>                              |   |



Low fuel level warning



Low Tire Pressure Warning<sup>1</sup>



Low windshield washer fluid level warning<sup>2</sup>



Maintenance/Service required indicator<sup>2</sup>



Malfunction/Check Engine indicator<sup>1</sup>



Master warning<sup>2</sup>



Open door warning



Power steering warning<sup>1</sup>



Shift position and shift range indicators



Slip indicator<sup>1</sup>



Theft deterrent/Engine immobilizer system indicator



TOW/HAUL mode indicator<sup>2</sup>



Traction Control OFF indicator<sup>1</sup>



Turn signal indicator



Vehicle Stability Control (VSC) OFF indicator<sup>2</sup>

<sup>1</sup> If indicator does not turn off within a few seconds of starting engine, there may be a malfunction. Have vehicle inspected by your Toyota dealer.

<sup>2</sup> If equipped.

# OVERVIEW

## Keyless entry

### UNLOCKING OPERATION

With power back door



Without power back door



Push

Push ONCE: Driver door  
TWICE: All doors

**NOTE:** If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.

### LOCKING OPERATION

With power back door



Without power back door



Push


### POWER BACK DOOR OPERATION (IF EQUIPPED)

With power back door



Push and hold

### BACK DOOR LOCK/UNLOCK FROM OUTSIDE

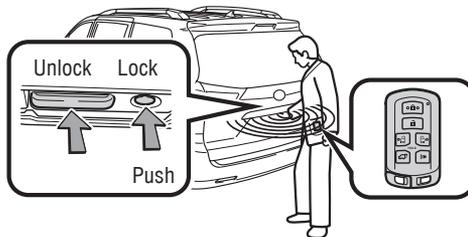

## PANIC BUTTON



With power back door



Without power back door





## Fuel tank door release & cap

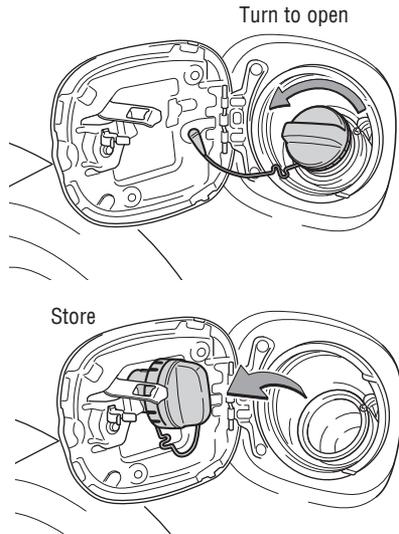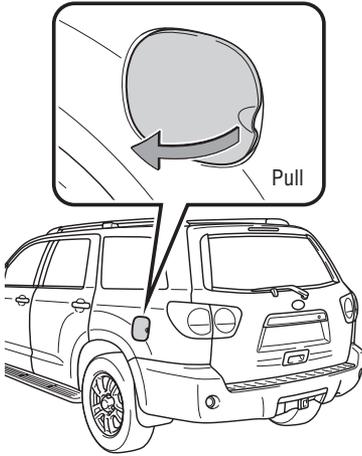


**NOTE:** To close, tighten until one click is heard. If the cap is not locked or tightened, Check Engine "CHECK" indicator may illuminate.


## Hood release

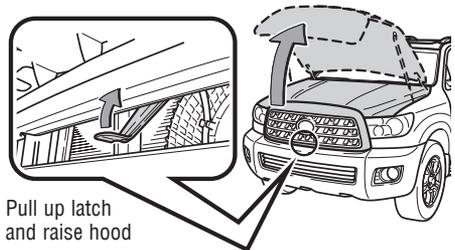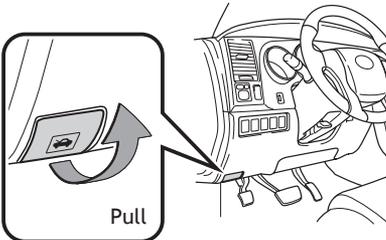

## Light control-Instrument cluster

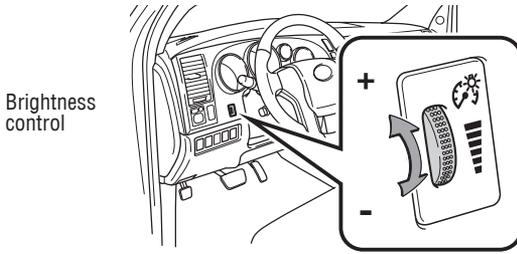


## Engine maintenance

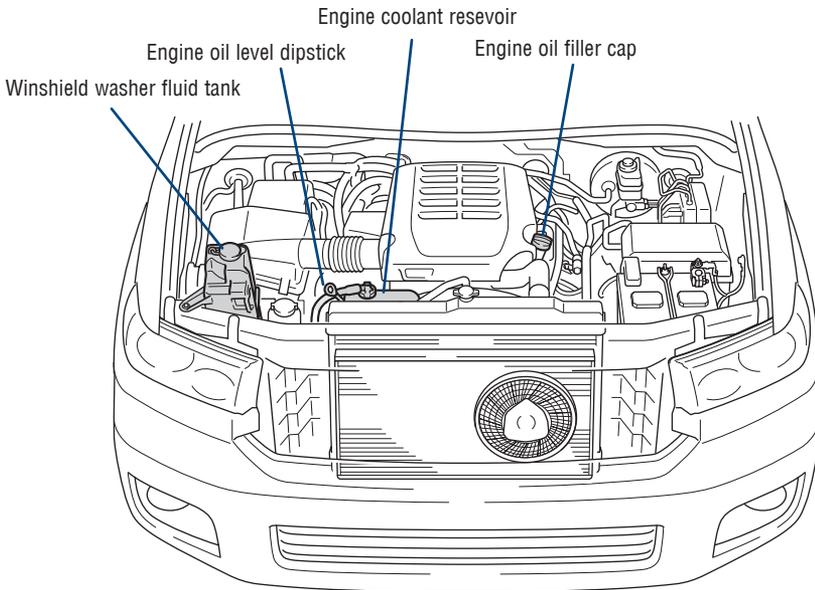

**NOTE: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the “Warranty & Maintenance Guide.”**

## Automatic transmission

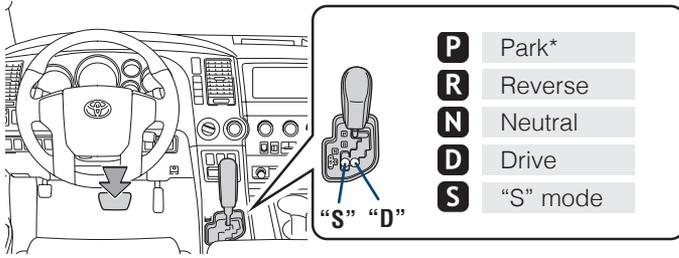

\* The ignition switch must be "ON" and the brake pedal depressed to shift from Park.


### "S" (SEQUENTIAL) MODE

Shift the shift lever to "S" position from "D" position.

- + : Upshift (push and release)
- : Downshift (pull and release)

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.

## TOW/HAUL switch (if equipped)

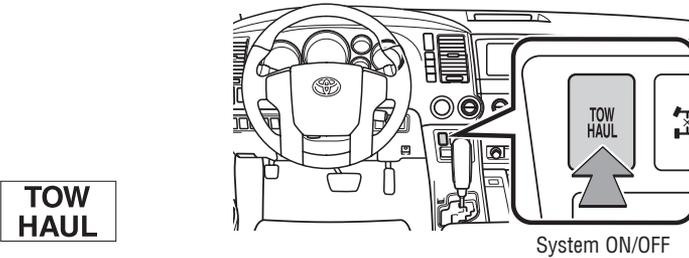

**TOW  
HAUL**

"TOW/HAUL" mode can be used when carrying heavy loads. As fuel economy is reduced while in "TOW/HAUL" mode, deactivating when driving without a load is recommended.

Refer to the Owner's Manual for more details on this system before attempting to use it.

# FEATURES & OPERATIONS

## **Auto lock/unlock**

Automatic door locks can be programmed to operate in different modes, or turned OFF.

### **Shift position linked door locking/unlocking function**

- Doors lock when shifting from Park.
- Doors unlock when shifting into Park.

### **Speed linked door locking function**


- Doors lock when the vehicle speed goes above approximately 12 mph.

### **Driver's door linked door unlocking function**

- Doors unlock when the engine switch is set from "ON" to "ACC" or "LOCK" and driver's door is opened.

*Refer to the Owner's Manual for more details.*

## **Parking brake**

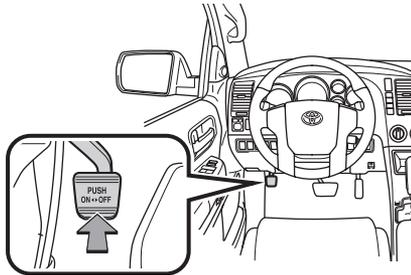


Set: Depress  
Release: Depress again

**BRAKE**

## Four-wheel drive (if equipped)

### FOUR-WHEEL DRIVE CONTROL SWITCH

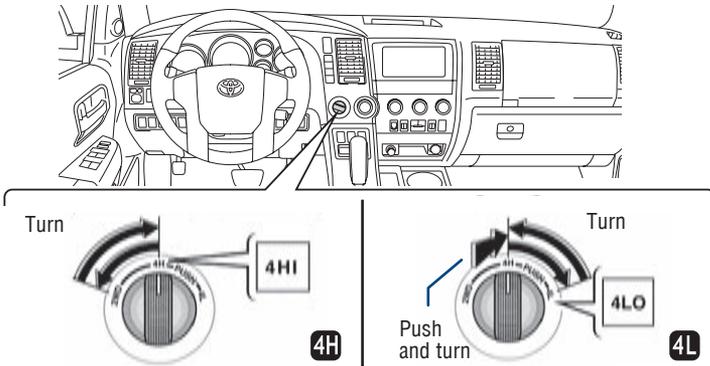

**2WD**

High speed (2WD)

Turn to "2WD" from "4H" with speed below 62 mph.

**4H**

High speed (4WD)

Turn to "4H" from "2WD" with speed below 62 mph.

Shift to "N" position when stopped, then turn to "4H" from "4L."

**4L**


Low speed (4WD)

Shift to "N" position when stopped, then push and turn to "4L" from "4H."

For best fuel economy and performance under normal driving conditions, keep in "2WD" position.

Refer to the Owner's Manual for more details.


### CENTER DIFFERENTIAL LOCK/UNLOCK SWITCH

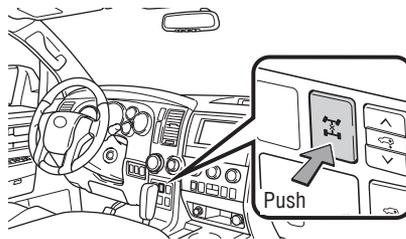

Lock the center differential if the vehicle's wheels get stuck in a ditch or when driving on a slippery or bumpy surface.

Refer to the Owner's Manual for more details on this system before attempting to use it.

## Blind Spot Monitor (BSM) (if equipped)

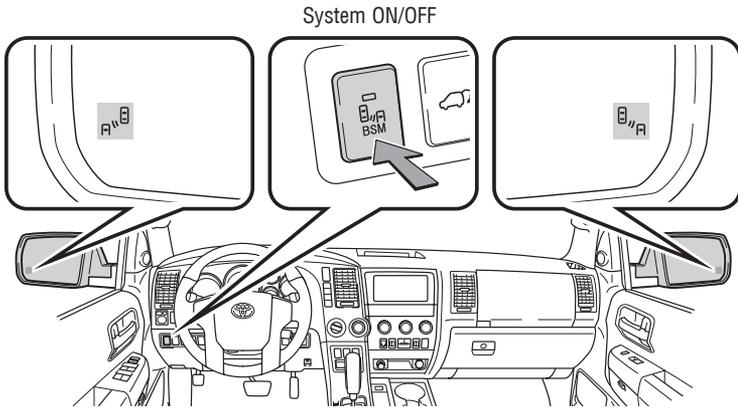


The Blind Spot Monitor function (assists the driver in making the decision when changing lanes)

The system is designed to use radar sensors to detect vehicles traveling in the Sequoia's blind spot and advises the driver of the vehicles' presence via the outside rear view mirror indicators.


*Refer to the Owner's Manual for limitations and more details on this system before attempting to use it.*

## Seat adjustments-Front

### Manual seat

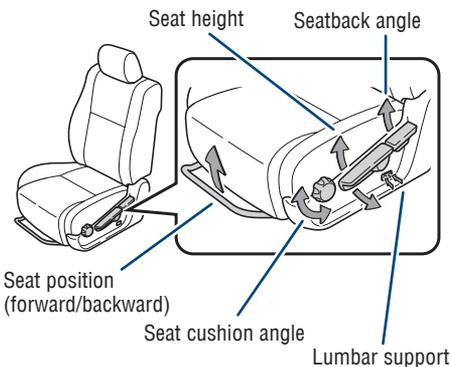


### Power seat

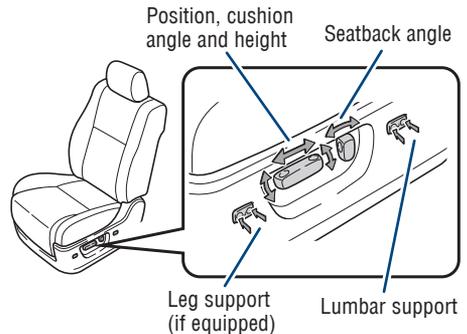


# Seat adjustments-Rear

## SECOND ROW

### Separate seat

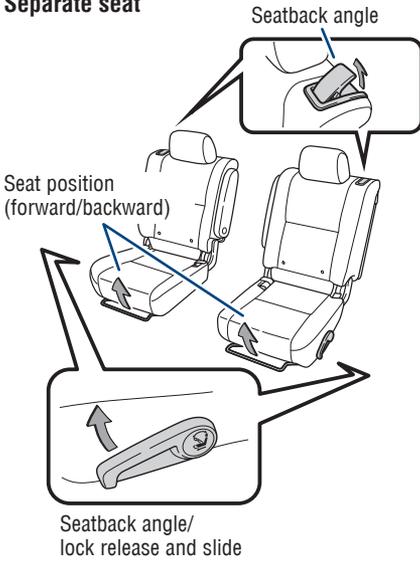


### Bench seat

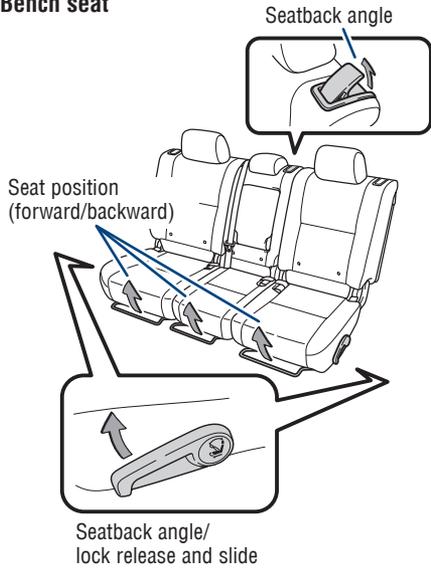


## THIRD ROW

### Manual seat

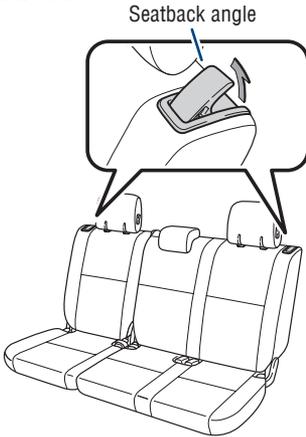

### Power seat

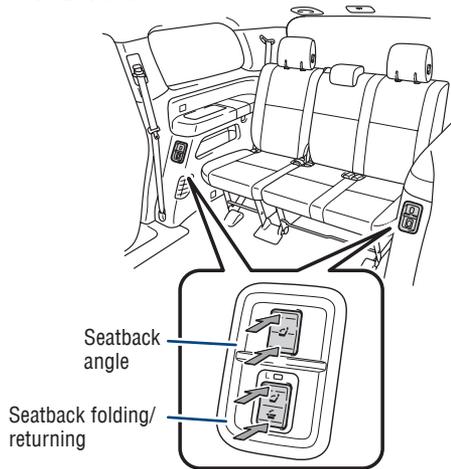


Refer to the Owner's Manual for more details.


# FEATURES & OPERATIONS

## Seats-Head restraints

Front

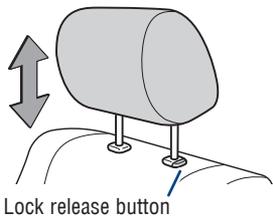


Second row

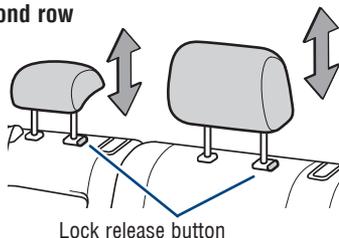


Middle head restraint in 8-passenger models only.

Third row (center)

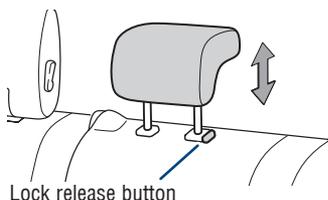


Third row (outside)

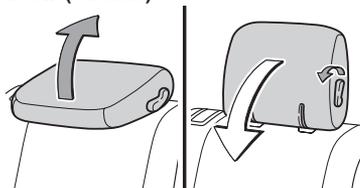


## Seats-Folding 2nd row seats

(1)

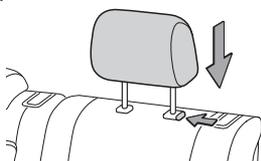

Lower the head restraints.


(2)

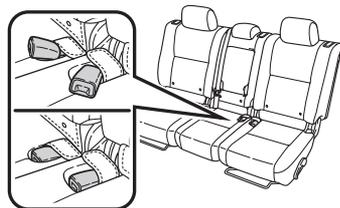

Stow the seat belt buckles.


Separated seat

(3)

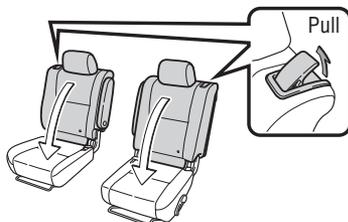


Fold down the seatback.

Bench seat

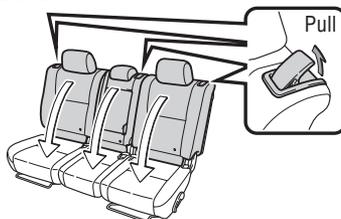


Fold down the seatback.

(4)

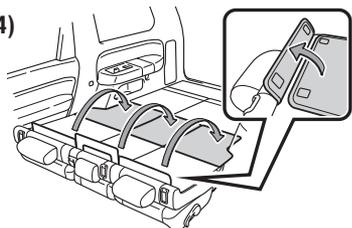


Fold out the board (if equipped) from the seatback.


# Seats-Folding 3rd row seats

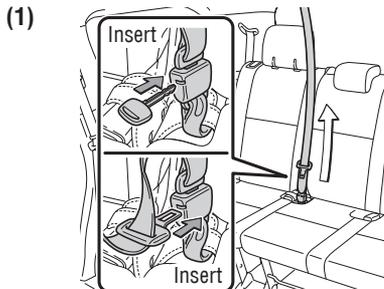


Release the center seat belt tab.

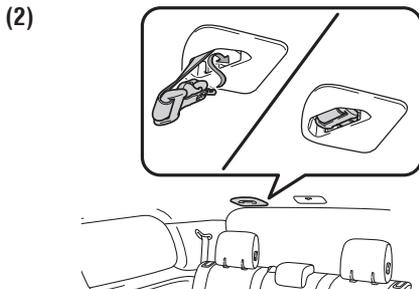

Stow the center seat belt tab.

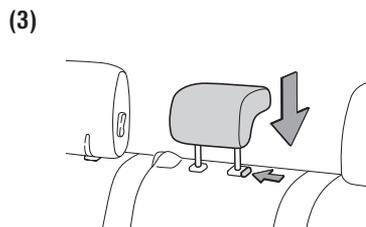

Lower the head restraint.

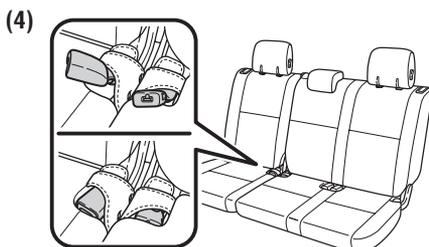


Stow the seat belt buckles.




Fold the head restraint.

## (6) From rear door side

Manual seat

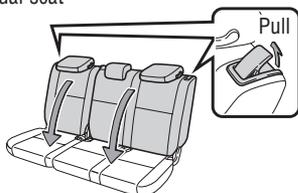


Power seat

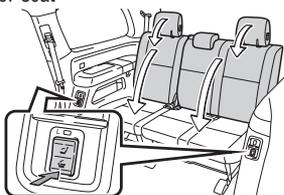


Fold the seats.

## From back door side

Manual seat

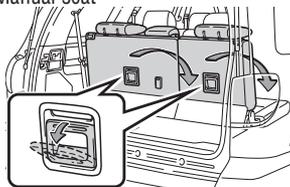

Power seat

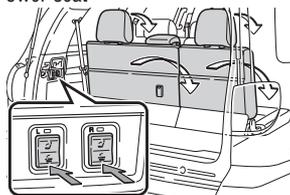


# FEATURES & OPERATIONS


## Lights & turn signals

### HEADLIGHTS


#### Type A

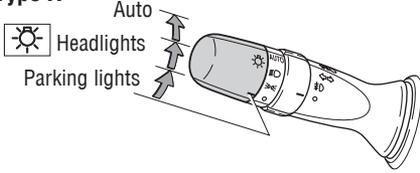



#### Type B

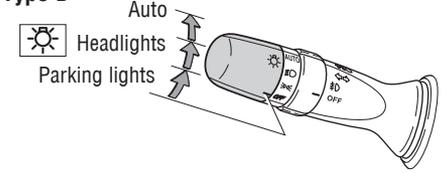

#### Type C

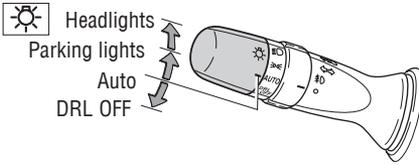

#### Type D

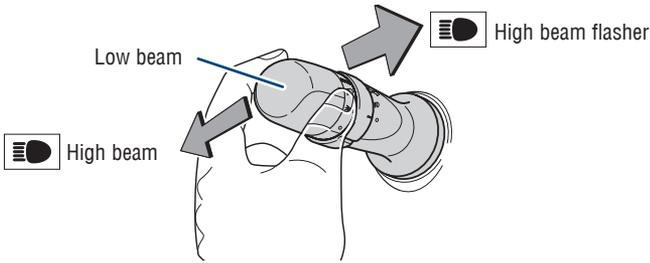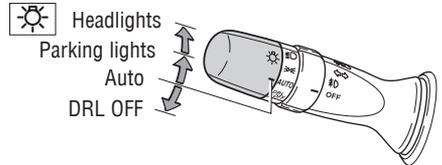


**Daytime Running Light system (DRL)** Automatically turns on the front turn signal lights upon starting engine and releasing parking brake.


**Automatic light cut off system** Automatically turns lights off after a delay of 30 seconds, or the lock switch on remote may be pushed after locking.

### FRONT FOG LIGHTS (IF EQUIPPED)


#### Type A

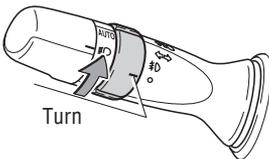

#### Type B

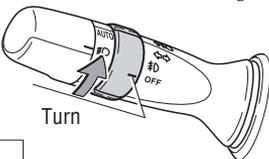

### TURN SIGNALS

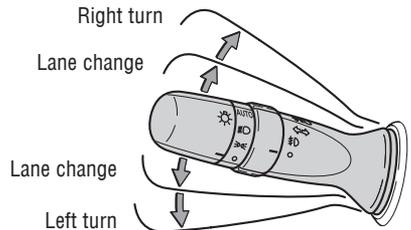


Front fog lights come on only when the headlights are on low beam.


# Windshield wipers & washers

## FRONT


### Type A

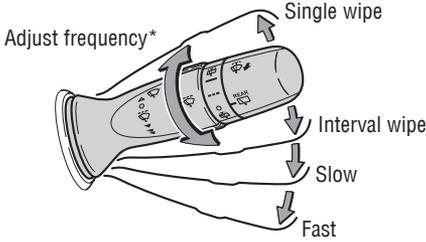

### Type B

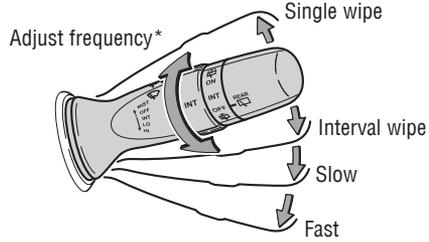


Pull to wash and wipe

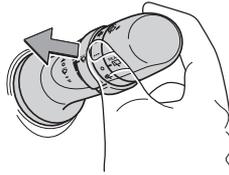


\* **Intermittent windshield wiper frequency adjustment** Rotate to increase/decrease wipe frequency.

## REAR

### Type A


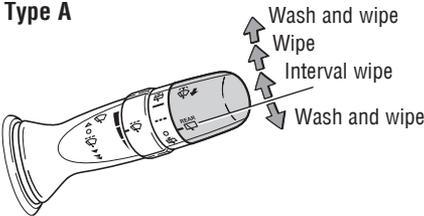


### Type B

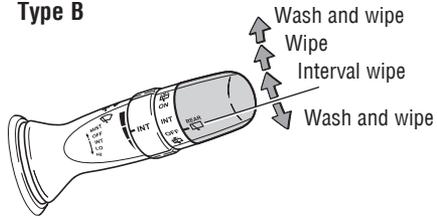

# Windows

## Driver side

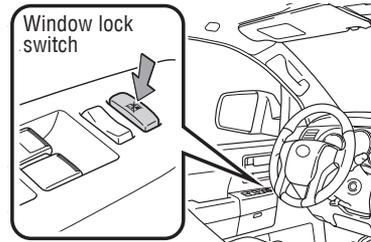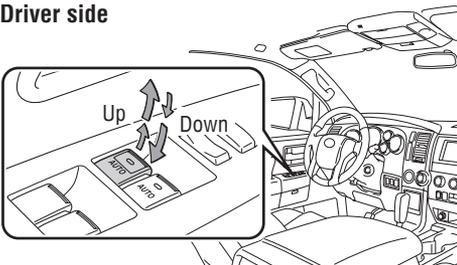


**Automatic operation** Push the switch completely down or pull it completely up and release to fully open or close. To stop window partway, lightly push the switch in the opposite direction.

**Window lock switch** Deactivates all passenger windows and back window. Driver's window remains operable.

# FEATURES & OPERATIONS


## Window-Back

### OPERATING FROM INSIDE

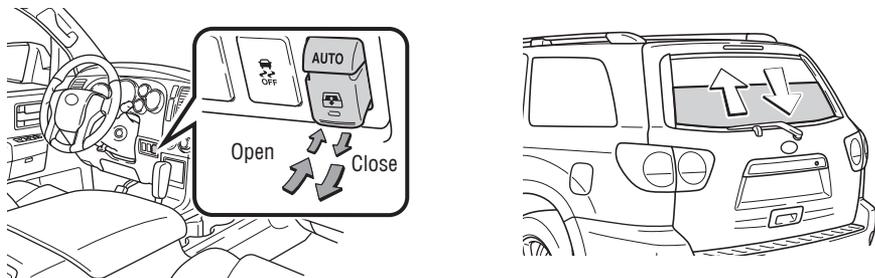


**Automatic operation** Push the switch completely in or pull it completely out and release to fully open or close. To stop window midway, lightly push the switch in the opposite direction.

### OPERATING FROM OUTSIDE

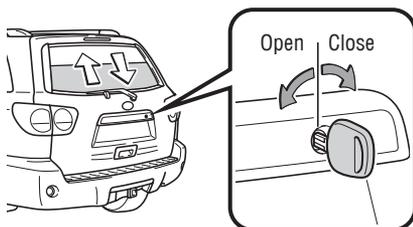


## Door-Power back (if equipped)

### Instrument panel

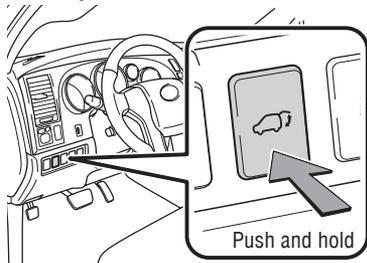

Open: Push and hold  
Close: Push and hold again

### Back door (close only)

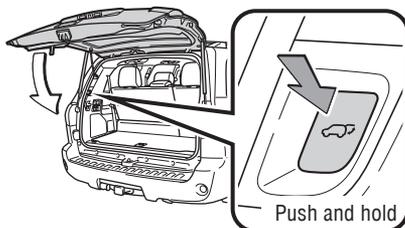


**NOTE:** Door will stop closing if obstructed, or to manually stop door closing, push button again.


**NOTE:** If battery is disconnected, the power back door needs to be reinitialized. Refer to the Owner's Manual for more details.

## Moon roof (if equipped)

### SLIDING OPERATION

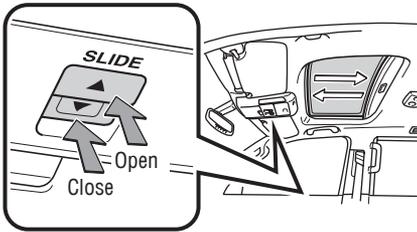

### TILTING OPERATION

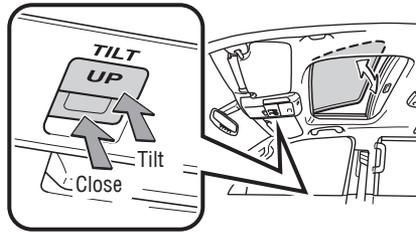


Push to open/close. To stop partway, press the switch lightly.

## Driving position memory (if equipped)


### DRIVER'S SEAT

#### To save

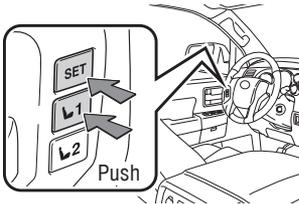

- (1) Adjust driver's seat, steering wheel, and outside rear view mirrors.
- (2) Push "SET" and "1" or "2" buttons to save.

#### To recall

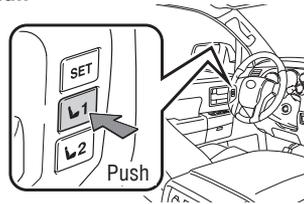


- (1) Press "1" or "2" to recall.

You can save up to two driving positions to memory and recall it with the touch of a button. Make sure shift lever is in "P" position and ignition switch is in the "ON" position.

*Refer to the Owner's Manual for more details on this system.*


## Tilt & telescopic steering wheel

### MANUAL

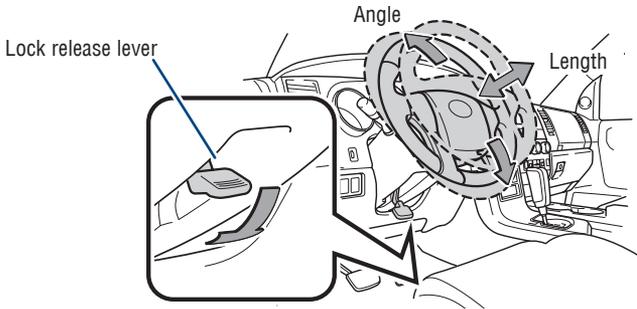

Hold wheel, push lever down, set angle and length and return lever.


### POWER

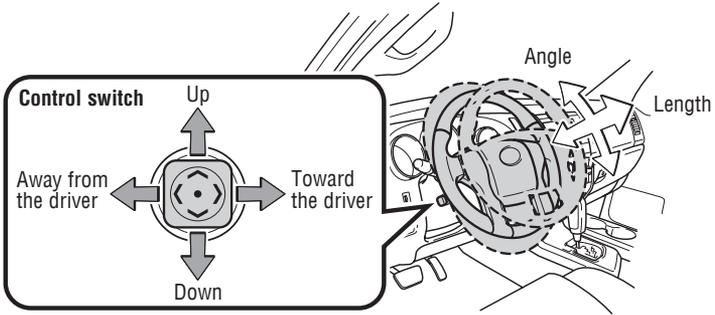

Toggle the control switch to set angle and length.

**NOTE: Do not attempt to adjust while the vehicle is in motion.**

## VSC OFF switch

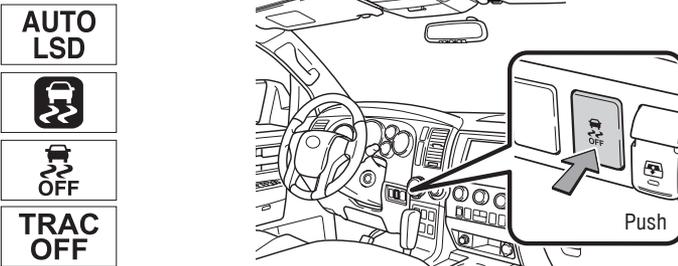


The VSC OFF switch is used to switch between modes related to the TRAC, VSC and Auto LSD functions.

*Refer to the Owner's Manual for more information.*

# Air conditioning/heating

FRONT


## Display

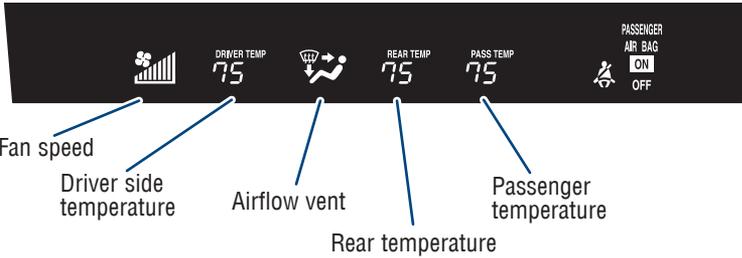

## Control panel

### Automatic climate control ON

Adjusting the temperature setting will cause the airflow vents, air intake and fan to adjust automatically.

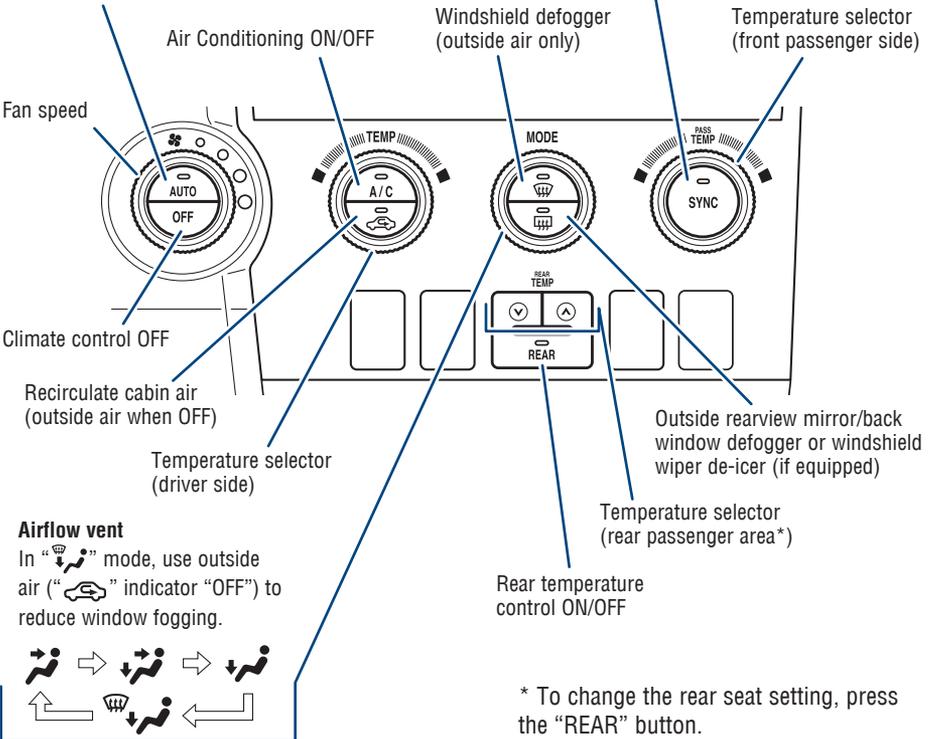

### Airflow vent

In “” mode, use outside air (“” indicator “OFF”) to reduce window fogging.




### “SYNC” button

*Indicator ON:* Synchronized temperature settings for driver, front passenger and rear seats. *Indicator OFF:* Separate temperature settings for driver, front passenger and rear seats.

\* To change the rear seat setting, press the “REAR” button.

# FEATURES & OPERATIONS



## REAR

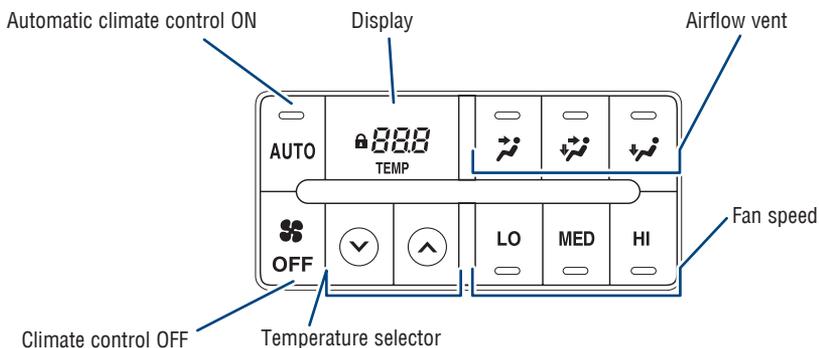



## Seat ventilators/heaters (if equipped)

### FRONT SEATS


#### Heaters and ventilators (if equipped)

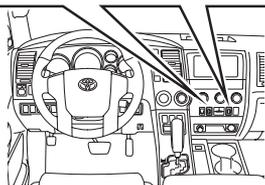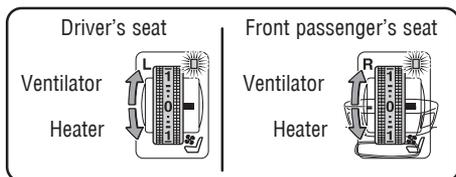

#### Heaters only (if equipped)

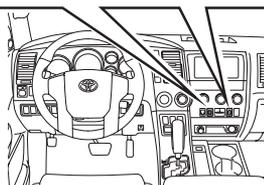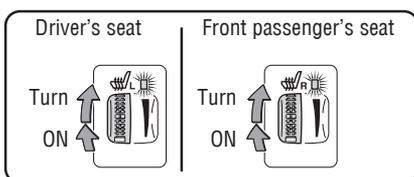


### SECOND SEATS (WITH CONSOLE BOX)

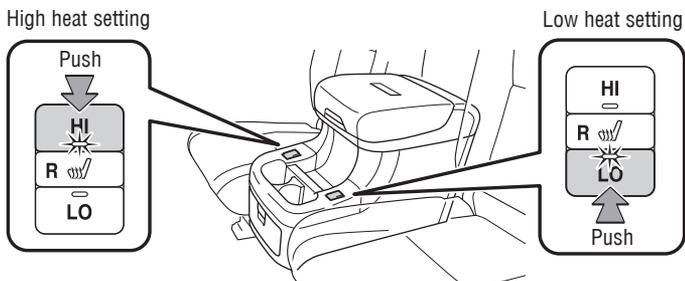


Push lightly in the opposite direction to turn off.

# Audio

## ENTUNE™ AUDIO PLUS WITH CONNECTED NAVIGATION APP<sup>1</sup>

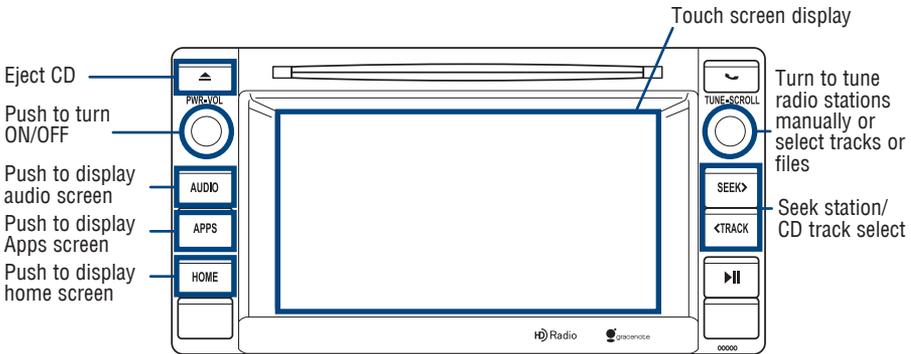


## ENTUNE™ PREMIUM (JBL®) AUDIO WITH INTEGRATED NAVIGATION AND APP SUITE<sup>1</sup>

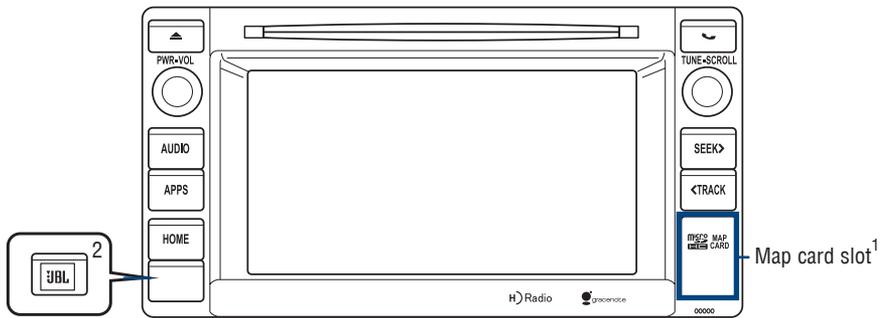

<sup>1</sup> Refer to the “Navigation System Owner’s Manual” and “2016 Entune™ Audio Quick Reference Guide.”

<sup>2</sup> Entune™ Premium JBL® Audio

## USB/AUX PORT

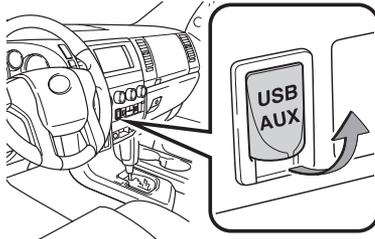

### USB port

By connecting a USB-compatible portable audio device or USB memory to the USB port, you can listen to music from the portable audio device or USB memory through the vehicle’s speaker system.

### AUX port

By inserting a mini plug into the AUX port, you can listen to music from a portable audio device through the vehicle’s speaker system while in AUX mode.

# FEATURES & OPERATIONS

## STEERING WHEEL SWITCHES (IF EQUIPPED)


“ ^ v ” “ < > ”

Use to search within the selected audio medium (radio, CD, etc.).


“MODE”

Push to turn audio ON and select an audio mode. Push and hold to mute or pause the current operation.

Volume control

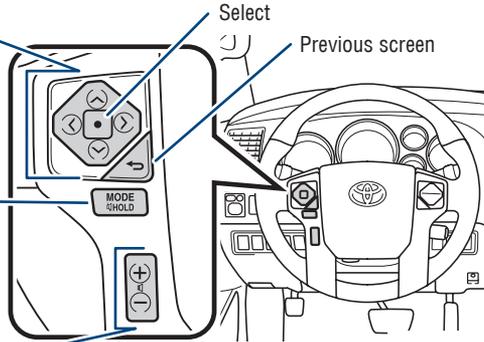

## Rear view monitor system

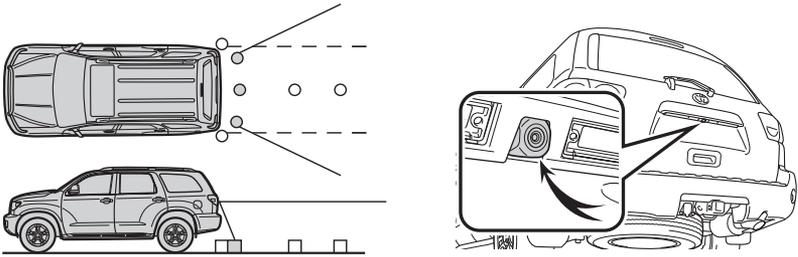


The rear view monitor system displays an image of the view from the bumper of the rear area of the vehicle. The camera for the rear view monitor system is located above the license plate.

To adjust the image on the rear view monitor screen, press the “SETUP” button and select “Display” on the “Setup” screen. Select “Camera” to adjust the screen contrast and brightness.

*Refer to the Owner's Manual for limitations and more details on this system.*

## Garage door opener (HomeLink®)\* (if equipped)

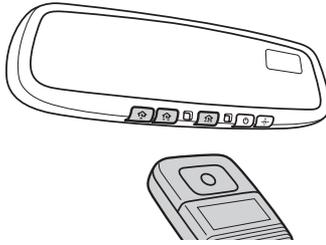

Garage door openers manufactured under license from HomeLink®\* can be programmed to operate garage doors, estate gates, security lighting, etc.

Refer to "Garage door opener," Section 3-5 in the Owner's Manual for more details.


For programming assistance, contact HomeLink® at 1-800-355-3515, or visit <http://www.homelink.com>.

\* HomeLink® is a registered trademark of Johnson Controls, Inc.

## Cruise control



### TURNING SYSTEM ON/OFF

**CRUISE**

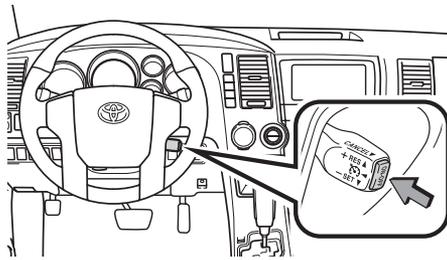

System ON/OFF

### FUNCTIONS

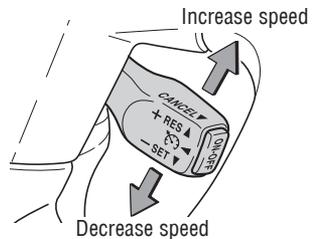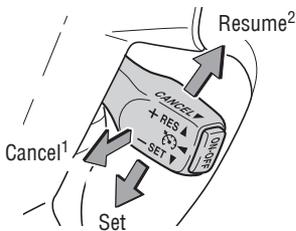


<sup>1</sup> The set speed may also be cancelled by depressing the brake pedal.

<sup>2</sup> The set speed may be resumed once vehicle speed exceeds 25 mph.


# FEATURES & OPERATIONS

## Dynamic Laser Cruise Control (if equipped)

Refer to the Owner's Manual for more details and complete safety precautions before attempting to use "Dynamic Laser Cruise Control."

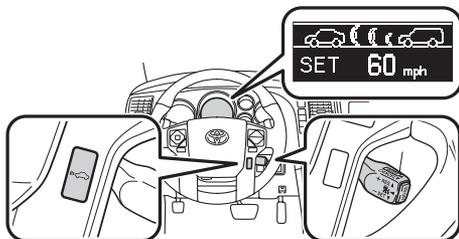


### FIXED SPEED MODE

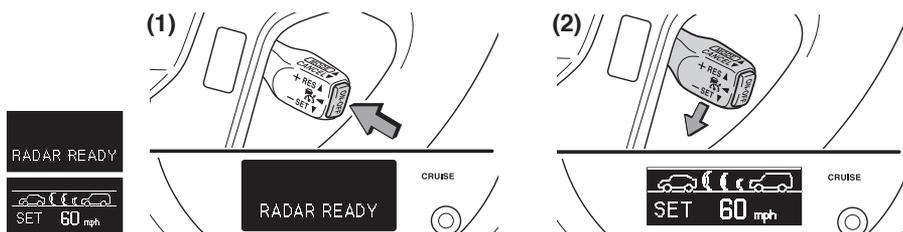

- (1) **To select conventional/fixed speed control** Push the ON-OFF button once to display the "CRUISE" indicator and a second time to display "RADAR READY".
- (2) **To set, cancel and resume a speed** Refer to instructions for Cruise Control in this guide.

### DISTANCE CONTROL MODE

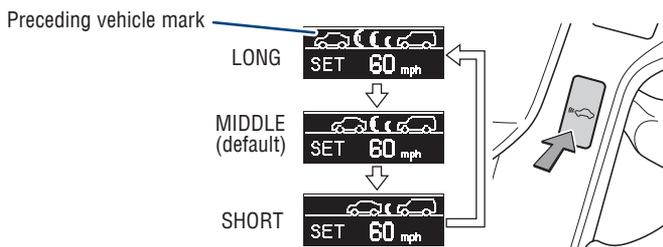

Distance control mode will cruise at a set speed, decelerate to maintain selected distance from a slower vehicle traveling in front of you, and accelerate back up to the selected speed if the vehicle traveling in front of you changes lanes or speeds up.


- (1) Once fixed speed control is set, you can set vehicle-to-vehicle distance.
- (2) **To change the vehicle-to-vehicle distance** Push the Vehicle-to-vehicle distance button to cycle through the settings, which will change progressively from LONG to MIDDLE to SHORT.

**NOTE:** Once vehicle speed is set, pushing lever up toward "+ RES" will increase speed to the nearest 5 mph, and then in 5 mph increments. Pushing lever down toward "- SET" will reduce speed in the same way.

<sup>1</sup> The set speed may also be cancelled by depressing the brake pedal.

<sup>2</sup> The set speed may be resumed once vehicle speed exceeds 25 mph.

## Multi-Information Display (if equipped)

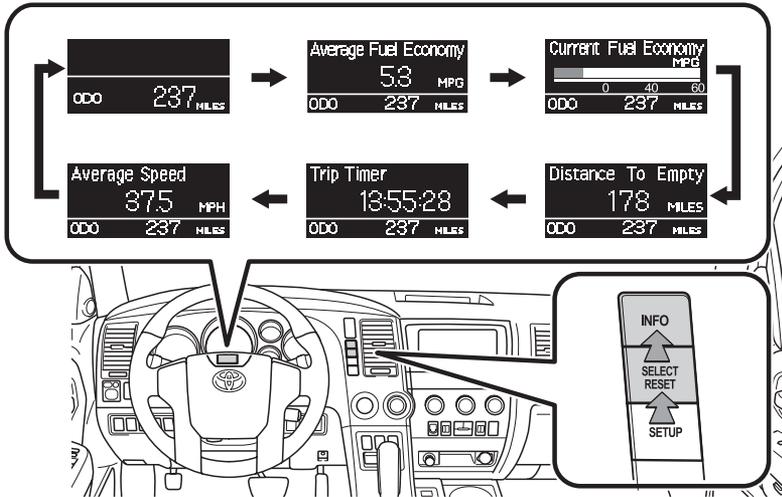


### Push “INFO” to change information in the following:

- (1) Zoom display of odometer and trip meter
- (2) Average gas mileage
- (3) Current gas mileage
- (4) Miles left on remaining fuel
- (5) Running time from engine start
- (6) Average vehicle speed

### Push “SETUP” to customize the following settings:

- (1) Unit
- (2) Keyless entry feedback
- (3) Keyless entry relock timer
- (4) Keyless entry all doors unlock
- (5) Door auto locking
- (6) Door auto unlocking
- (7) Headlamps auto off timer
- (8) Courtesy lamps off timer
- (9) Language
- (10) Default setting

## Door locks

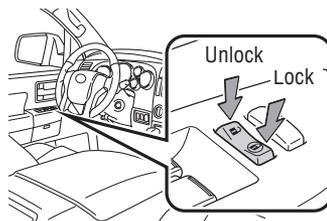

# FEATURES & OPERATIONS


## Accessory meter

Outside temperature/  
Cruise information display (if equipped)

Clock

Hour set

Minute set

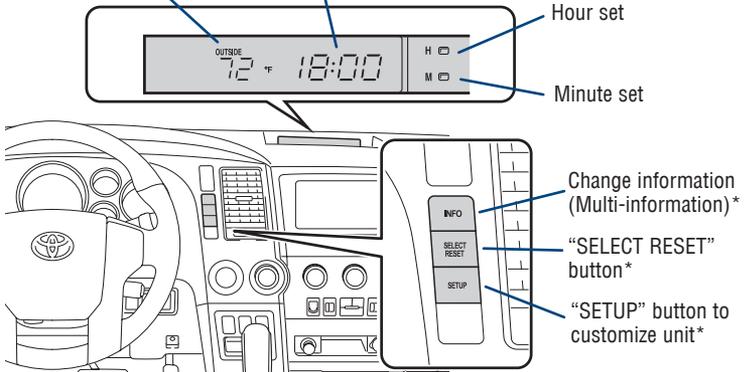

\* if equipped


Refer to your Owner's Manual for complete details on this system before attempting to use it.

## Telephone controls (Bluetooth®) (if equipped)


Audio unit



Microphone

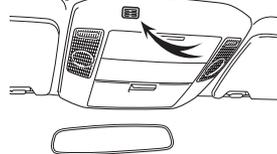

Steering wheel telephone switches

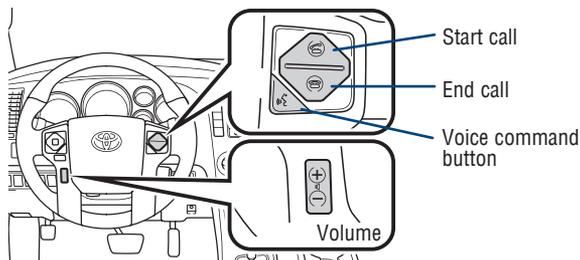


Bluetooth® technology allows dialing or receipt of calls without taking hands from the steering wheel or using a cable to connect the compatible telephone and the system.


Refer to "Using a Bluetooth® phone" Section 3-2 in the Owner's Manual, for more details.

## Power outlets-12V DC (if equipped)


Instrument panel

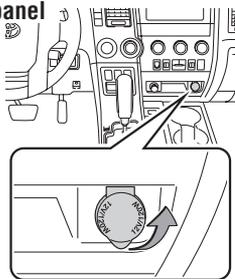


Inside of the center console box

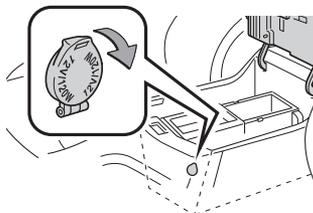

Back of the center console box

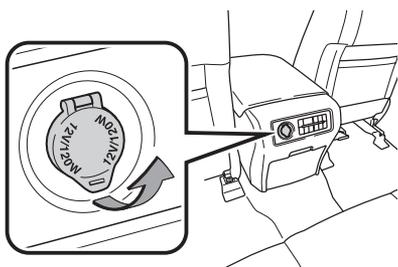


Luggage compartment

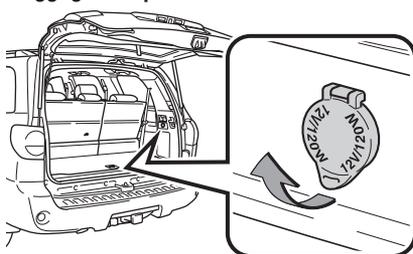

Key must be in the “ACC” or “ON” position to be used.


## Power outlets-120V AC (if equipped)

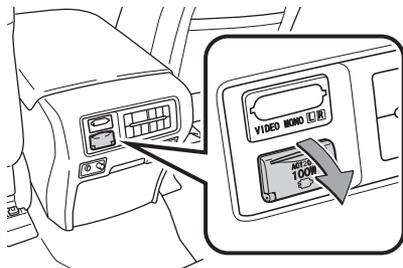

Key must be in the “ON” position to be used.

# FEATURES & OPERATIONS

## Rear seat entertainment system (if equipped)

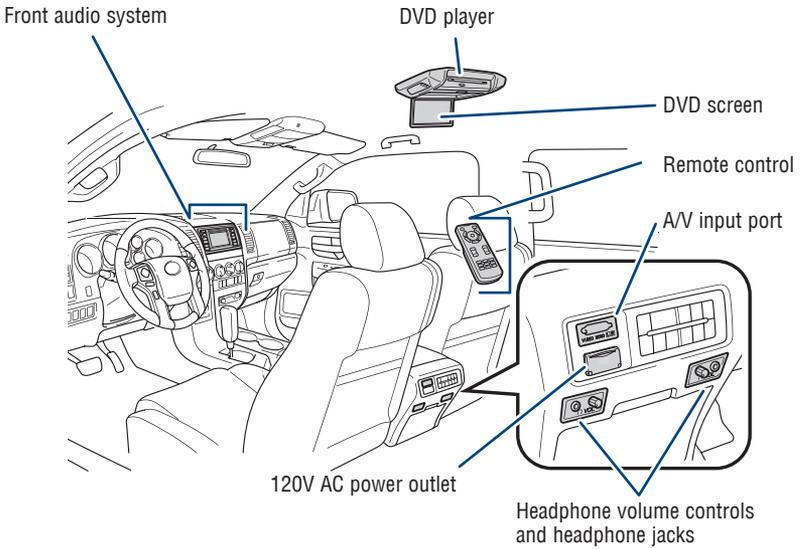


For details, refer to the "Navigation System Owner's Manual."


## Cup holders

### FRONT

#### Front console

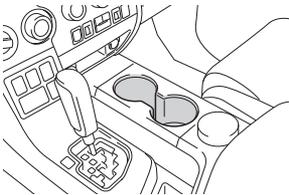


#### Back of the front console

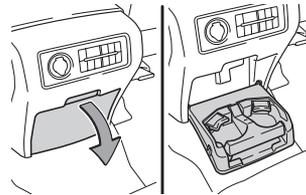


### REAR


#### Rear side trim

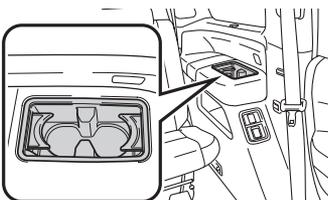

#### Rear console box (if equipped)

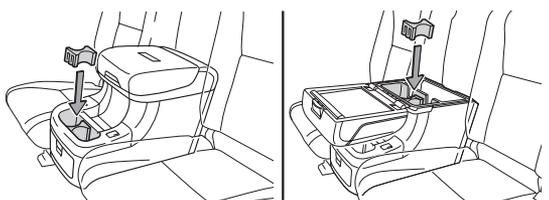

## Tire Pressure Monitoring (warning) System (TPMS)

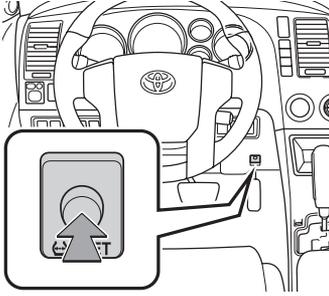

System reset initialization

1. Push and hold “” SET” button until the indicator blinks three times.
2. Wait a few minutes to allow initialization to complete.


After adjusting tire pressures, or after tires have been rotated or replaced, turn the ignition switch to “ON” and press and hold the “” SET” button until indicator blinks three times. Let the vehicle sit for a few minutes to allow initialization to complete.

Refer to the load label on the door jamb or the Owner’s Manual for tire inflation specifications.

If the tire pressure indicator flashes for more than 60 seconds and then remains on, take the vehicle to your local Toyota dealer.

**NOTE: The warning light may come on due to temperature changes or changes in tire pressure from natural air leakage. If the system has not been initialized recently, setting the tire pressures to factory specifications should turn off the light.**

## Seat belts

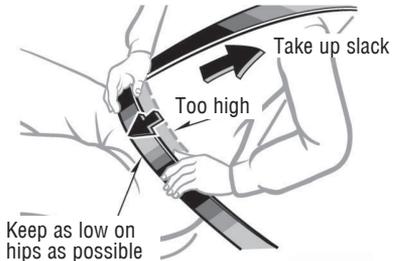


**NOTE: If a passenger’s seat belt is fully extended, then retracted even slightly, the Automatic locking retractor (ALR) will prevent it from being re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.**

To find more information about seat belts, and how to install a child restraint system, refer to the Owner’s Manual.

## SAFETY & EMERGENCY FEATURES


### Seat belts-Shoulder belt anchor

Squeeze lock  
release to lower

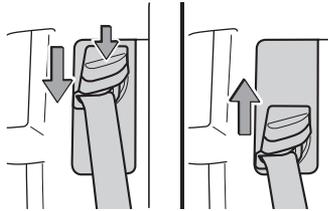

### Doors-Child safety locks



Rear door

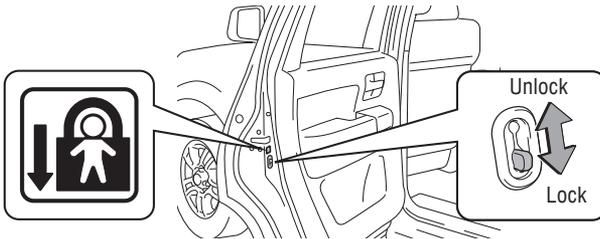

Moving the lever downward will allow the door to be opened only from the outside.


### Spare tire & tools

#### SPARE TIRE, JACK AND TOOL LOCATION

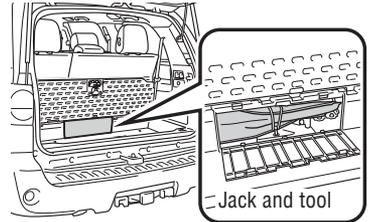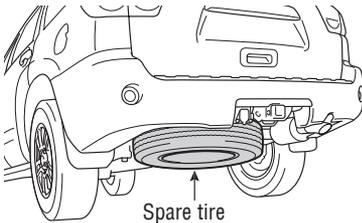


#### REMOVING THE SPARE TIRE

(1)

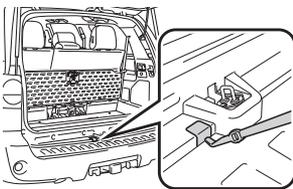


Remove the cover.

(2)

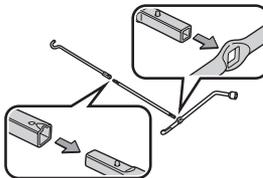

Assemble the jack handle.

(3)

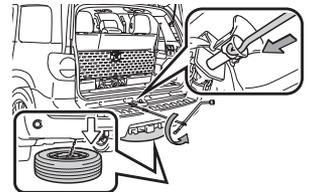

Insert the jack handle extension into the lowering screw. Lower the spare tire completely to the ground.

Refer to the Owner's Manual for tire changing and jack positioning procedures.

## Star Safety System™

All new Toyota vehicles come standard with the Star Safety System™, which combines Vehicle Stability Control (VSC), Traction Control (TRAC), Anti-lock Braking System (ABS), Electronic Brake-force Distribution (EBD), Brake Assist (BA) and Smart Stop Technology (SST).

*Refer to the Owner's Manual for more details and important information on limitations to these systems.*

### VEHICLE STABILITY CONTROL (VSC)

VSC helps prevent loss of traction during cornering by reducing engine power and applying brake force to selected wheels.

Toyota's VSC monitors steering angle and the direction your vehicle is traveling. When it senses that the front or rear wheels begin to lose traction, VSC reduces engine power and applies braking to selected wheels. This helps restore traction and vehicle control.

### TRACTION CONTROL (TRAC)

VSC helps prevent loss of traction during cornering by reducing engine power, and Traction Control helps maintain traction on loose gravel and wet, icy, or uneven surfaces by applying brake force to the spinning wheel(s).

Toyota's TRAC sensors are activated when one of the drive wheels starts to slip. TRAC limits engine output and applies the brakes to the spinning wheel. This transfers power to the wheels that still have traction to help keep you on track.

### ANTI-LOCK BRAKE SYSTEM (ABS)

Toyota's ABS sensors detect which wheels are locking up and limits wheel lockup by "pulsing" each wheel's brakes independently. Pulsing releases brake pressure repeatedly for fractions of a second. This helps the tires attain the traction that current road conditions will allow, helping you to stay in directional control.

### ELECTRONIC BRAKE FORCE DISTRIBUTION (EBD)

Toyota's ABS technology has Electronic Brake-force Distribution (EBD) to help maintain control and balance when braking. Abrupt stops can cause a vehicle to tilt forward, reducing the braking power of the rear wheels. EBD responds to sudden stops by redistributing brake force to enhance the braking effectiveness of all four wheels.

### BRAKE ASSIST (BA)

Brake Assist is designed to detect sudden or "panic" braking, and then add braking pressure to help decrease the vehicle's stopping distance. When there's only a split second to react, Brake Assist can add additional brake pressure more quickly than just the driver alone can.

# SAFETY & EMERGENCY FEATURES

## SMART STOP TECHNOLOGY® (SST)

Smart Stop Technology® automatically reduces engine power when the accelerator and brake pedals are pressed simultaneously under certain conditions.

SST engages when the accelerator is depressed first and the brakes are applied firmly for longer than one-half second at speeds greater than five miles per hour.


SST doesn't engage if the brake pedal is depressed before the accelerator pedal, allowing vehicles to start on a steep hill and safely accelerate without rolling backward.

## Floor mat installation

There are two types of Toyota floor mats: carpeted and all-weather. Each vehicle has model-specific floor mats. Installation is easy.

To keep your floor mat properly positioned, follow these steps:

- Only use Toyota floor mats designed for your specific model.
- Use only one floor mat at a time, using the retaining hooks to keep the mat in place.
- Install floor mats right side up.

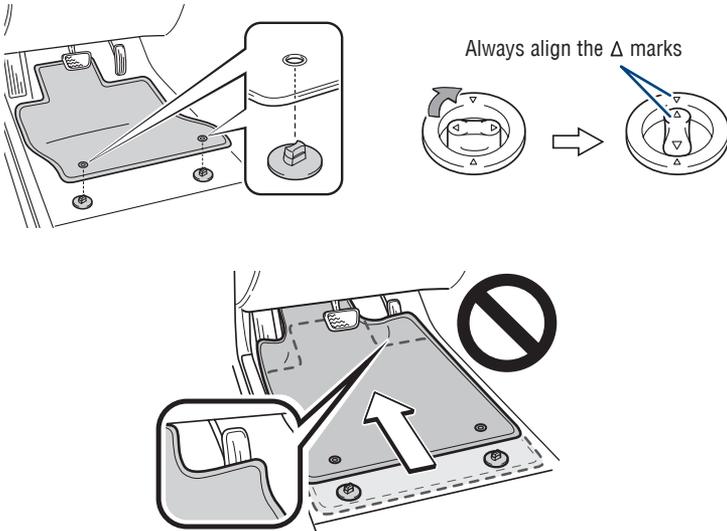



# **BLUETOOTH® DEVICE PAIRING SECTION**


Do not attempt the Bluetooth® Pairing process while driving.

To begin the Bluetooth® Pairing process, press the HOME button on the faceplate of your Toyota Vehicle Entune™ Multimedia Head Unit.<sup>1</sup>


## Bluetooth® Pairing for Android phone and Entune™ touch screen system

Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all Android mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.<sup>2</sup>


### Initiate Bluetooth® on your Android®

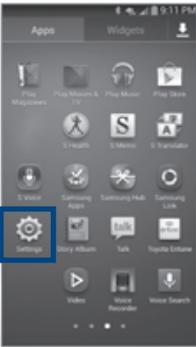


**STEP 1**  
From your **APPS SCREEN**, select **SETTINGS**.

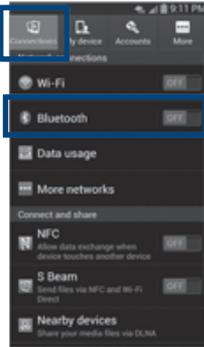

**STEP 2**  
Select **CONNECTIONS** and select **BLUETOOTH**.

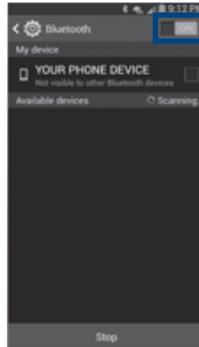

**STEP 3**  
Ensure **BLUETOOTH** is **ON**.

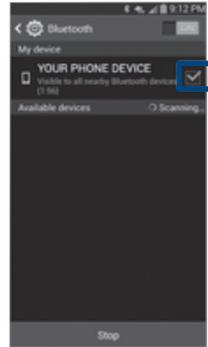

**STEP 4**  
Select **YOUR PHONE DEVICE** to make it discoverable.

*Phone will seek out Bluetooth devices while remaining discoverable.*



**STEP 5**  
While your Android device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

<sup>1</sup> To determine which head unit is installed in your vehicle, refer to the Audio section in this guide. Entune™ Premium Audio screens are shown in this section. Screens and features may vary by Entune™ system.

<sup>2</sup> Some Android devices may have slightly different SETTINGS screen layout depending on manufacturer of device and Android OS version.

# BLUETOOTH® DEVICE PAIRING

## Initiate Bluetooth® on your Entune™ Multimedia Head Unit

Once you have Bluetooth enabled on your phone and ready to pair, you will need to initiate Bluetooth on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.




### STEP 6

On your Toyota Vehicle Entune Multimedia Head Unit, Select **SETUP BUTTON** on the Home Screen.



### STEP 7


Select **BLUETOOTH**.  
*Image shown is a sample image, features may vary.*

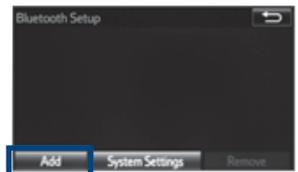

### STEP 8

Select **ADD**, to add your phone device.

For Entune™ Audio System, press the **SETUP BUTTON** on the faceplate to access the Setup Screen.

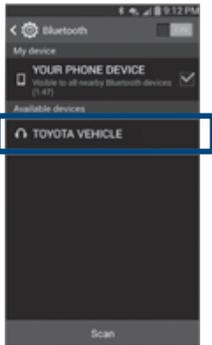

### STEP 9

Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.

*You may need to enter the provided Bluetooth PIN on your phone.*



### STEP 10



Your smartphone is now paired with Entune.



### STEP 11

Once paired, Entune will attempt to connect audio and contacts on your phone.

## Initiate Bluetooth® on your Entune™ Multimedia Head Unit

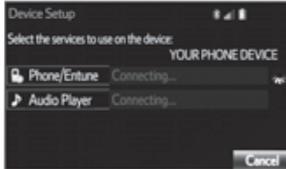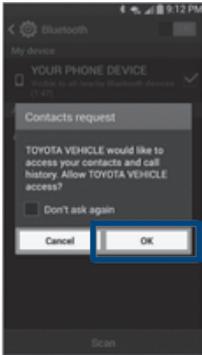

### STEP 12

Using your smartphone, you will need to allow Entune access to your messaging and contacts.

*It is recommended to check the "Don't ask again" box, so as not to have to press OK every time the phone makes a Bluetooth connection with your Toyota.*

### STEP 13

A confirmation will appear once your phone has been paired and connected.

#### Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:  
[www.toyota.com/connect](http://www.toyota.com/connect)

Your Toyota Owner's Manual  
Located in the vehicle glovebox

Toyota Customer  
Experience Center  
(800) 331-4331

#### Disclosures

This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.

1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
3. Android is a trademark of Google Inc.
4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See [Toyota.com/entune](http://Toyota.com/entune) for details.

## Bluetooth® Pairing for iPhone and Entune™ touch screen system

**\*\*Do not attempt the Bluetooth® Pairing process while driving.\*\***


Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all iPhone mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.

### Initiate Bluetooth® on your iPhone®



#### STEP 1

From the **HOME SCREEN**, select **SETTINGS**.

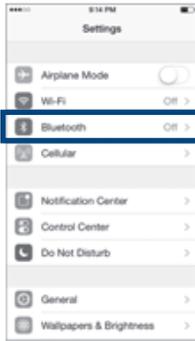


#### STEP 2

Select **BLUETOOTH**.



#### STEP 3

Ensure **BLUETOOTH** is **ON**.

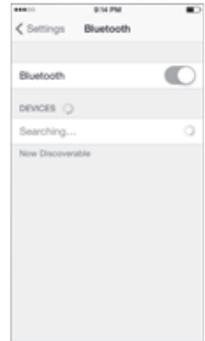

#### STEP 4

Your iPhone will seek out Bluetooth devices while remaining discoverable.



#### STEP 5

While your iPhone device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

## Initiate Bluetooth® on your Entune™ Multimedia Head Unit

Once you have Bluetooth enabled on your phone and ready to pair, you will need to initiate Bluetooth on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.



### STEP 6

On your Toyota Vehicle Entune Multimedia Head Unit, Select **SETUP BUTTON** on the Home Screen.


For Entune™ Audio System, press the **SETUP BUTTON** on the faceplate to access the Setup Screen.



### STEP 7

Select **BLUETOOTH**.

*Image shown is a sample image, features may vary.*

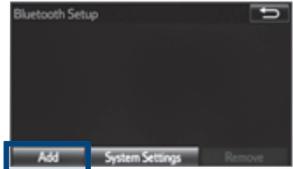

### STEP 8

Select **ADD**, to add your phone device.



### STEP 9


Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.

*You may need to enter the provided Bluetooth PIN on your phone.*



### STEP 10


Your smartphone is now paired with Entune.

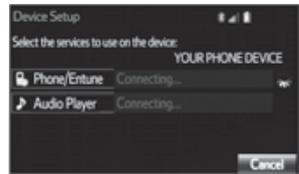

### STEP 11

Once paired, Entune will attempt to connect audio and contacts on your phone.

# BLUETOOTH® DEVICE PAIRING

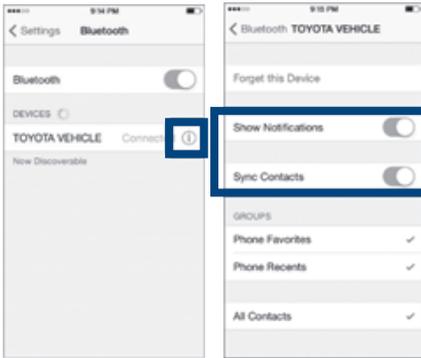

## STEP 12

Using your smartphone, you may need to allow Entune access to your messaging and contacts.

*Only current iPhone text messages can be viewed on the head unit. iPhone does not allow text message reply.*



## STEP 13

A confirmation will appear once your phone has been paired and connected.

### Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:  
[www.toyota.com/connect](http://www.toyota.com/connect)

Your Toyota Owner's Manual  
Located in the vehicle glovebox

Toyota Customer  
Experience Center  
(800) 331-4331

### Disclosures

This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.


1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
3. Android is a trademark of Google Inc.
4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.

## Bluetooth® Pairing for Windows Phone and Entune™ touch screen system

**\*\*Do not attempt the Bluetooth® Pairing process while driving.\*\***


Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all Windows Phone mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.

### Initiate Bluetooth® on your Windows Phone®

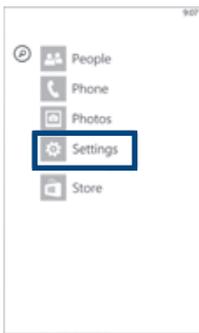

#### STEP 1

From your APP LIST, select **SETTINGS**.

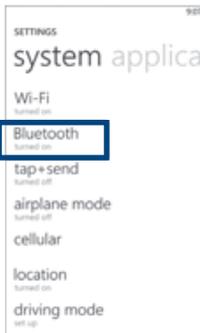

#### STEP 2

Select **BLUETOOTH**.



#### STEP 3

Ensure **BLUETOOTH** is **ON**.



#### STEP 4

Phone will seek out Bluetooth devices while remaining discoverable.



#### STEP 5

While your iPhone device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

# BLUETOOTH® DEVICE PAIRING

## Initiate Bluetooth® on your Entune™ Multimedia Head Unit

Once you have Bluetooth® enabled on your phone and ready to pair, you will need to initiate Bluetooth® on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.



### STEP 6

On your Toyota Vehicle Entune Multimedia Head Unit, Select **SETUP BUTTON** on the Home Screen.


For Entune™ Audio System, press the **SETUP BUTTON** on the faceplate to access the Setup Screen.



### STEP 7

Select **BLUETOOTH**.

*Image shown is a sample image, features may vary.*

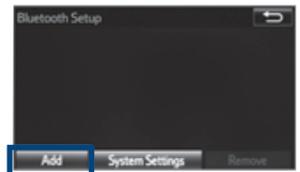

### STEP 8

Select **ADD**, to add your phone device.



### STEP 9


Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.

*You may need to enter the provided Bluetooth PIN on your phone.*



### STEP 10


Your smartphone is now paired with Entune.

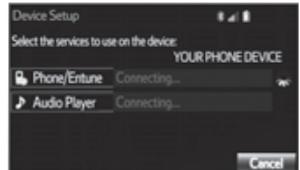

### STEP 11

Once paired, Entune will attempt to connect audio and contacts on your phone.

## Initiate Bluetooth® on your Entune™ Multimedia Head Unit

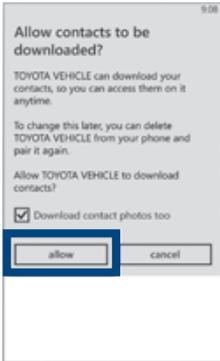

### STEP 12

Using your smartphone, you may need to allow Entune access to your contacts.



### STEP 13

A confirmation will appear that your phone has been paired and connected.

#### Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:  
[www.toyota.com/connect](http://www.toyota.com/connect)

Your Toyota Owner's Manual  
Located in the vehicle glovebox

Toyota Customer  
Experience Center  
(800) 331-4331

#### Disclosures

This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.

1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
3. Android is a trademark of Google Inc.
4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See [Toyota.com/entune](http://Toyota.com/entune) for details.

# NOTES





[www.toyota.com/owners](http://www.toyota.com/owners)

CUSTOMER EXPERIENCE CENTER

1-800-331-4331



Printed in U.S.A. 10/16  
16-MKG-09537



00505QRG17SEQ