



SIENNA

2 0 1 7



QUICK REFERENCE GUIDE

2017

SIENNA

This Quick Reference Guide is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The Quick Reference Guide is not intended as a substitute for the Owner's Manual located in your vehicle's glove box. We strongly encourage you to review the Owner's Manual and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Sienna.

A word about safe vehicle operations

This Quick Reference Guide is not a full description of Sienna operations. Every Sienna owner should review the Owner's Manual that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the Owner's Manual. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this Quick Reference Guide is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

INDEX

OVERVIEW

Engine maintenance	9
Fuel tank door release and cap	8
Hood release	8
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
<i>Keyless entry</i> ¹	6-7
Light control-Instrument panel	9
<i>Smart Key system</i> ^{1,2}	7

FEATURES & OPERATIONS

Air conditioning/heating	24
Audio	22
<i>Auto lock/unlock</i> ²	10
Automatic transmission	10
Blind Spot Monitor (BSM)	20
Bottle holders	28
Cruise control	20
Cup holders	30
Door-Power back	18
Door locks	10
Doors-Power sliding	17
Driver Easy Speak	20
Dynamic Radar	
Cruise Control (DRCC)	21
Enhanced VSC OFF button	26
<i>Garage door opener (HomeLink®)</i> ^{2,3}	27
Hill-start Assist Control (HAC)	27
<i>Lights</i> ¹ & <i>turn signals</i>	11-12
Moon roof	19
Parking brake	10
Power outlets-12V DC	29
Power outlets-120V AC	29
Pre-Collision System (PCS)	28
Rear seat entertainment system	26
Rear view monitor system	25
Seat adjustments-Front	14

FEATURES & OPERATIONS (continued)

Seat adjustments-Rear	14
Seat heaters	25
Seats-Head restraints	13
Seats-Removing	
2nd row center seat	15
Seats-Removing	
2nd row outside seats	15
Seats-Stowing 3rd row seats	16
Steering wheel switches	
& telephone controls	23
Sunshade-Side	19
Tilt & telescopic steering wheel	11
Windows	18
Windows-Quarter	18
Windshield wipers & washers	13

SAFETY & EMERGENCY FEATURES

Child restraint anchors	31
Doors-Child safety locks	31
Floor mat installation	35
Seat belts	32
Seat belts-Shoulder belt anchor	31
Spare tire & tools	33
Star Safety System™	34-35
Tire Pressure Monitoring (warning) System (TPMS)	32

BLUETOOTH® DEVICE PAIRING SECTION

36-45



¹ Visit your Toyota dealer for information on customizing this feature.

² Programmable by customer. Refer to the Owner's Manual for instructions and more information.

³ HomeLink® is a registered trademark of Gentex Corporation.


OVERVIEW

Instrument panel

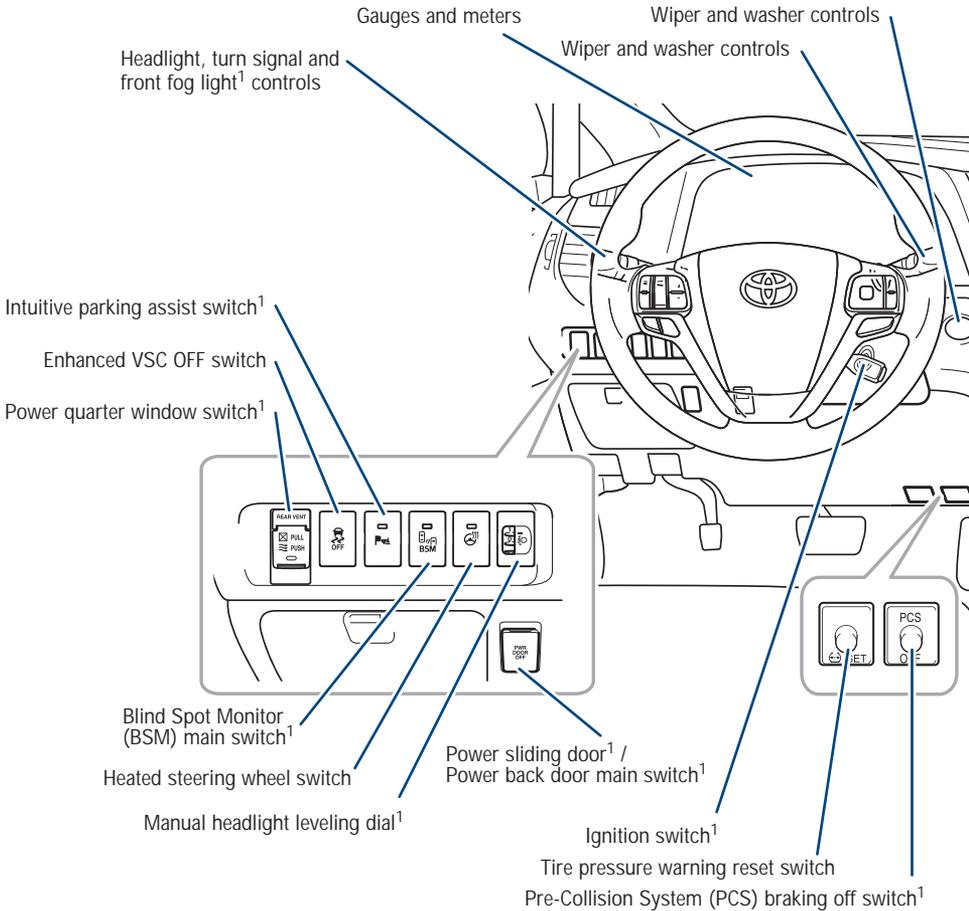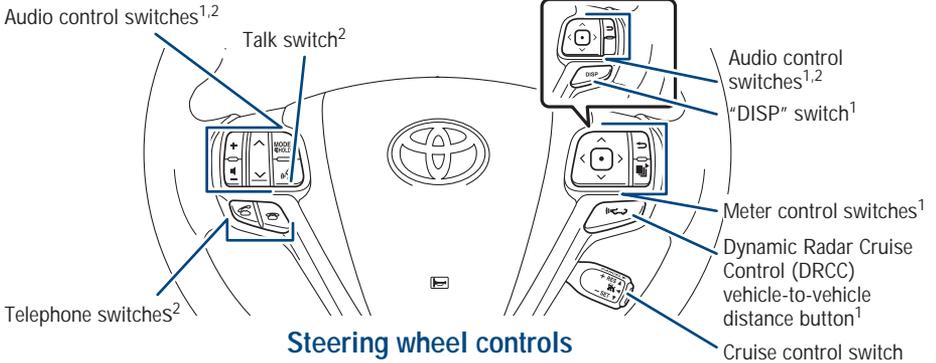

¹ If equipped


² For details, refer to the "Navigation System Owner's Manual" and "2017 Entune™ Audio Quick Reference Guide."

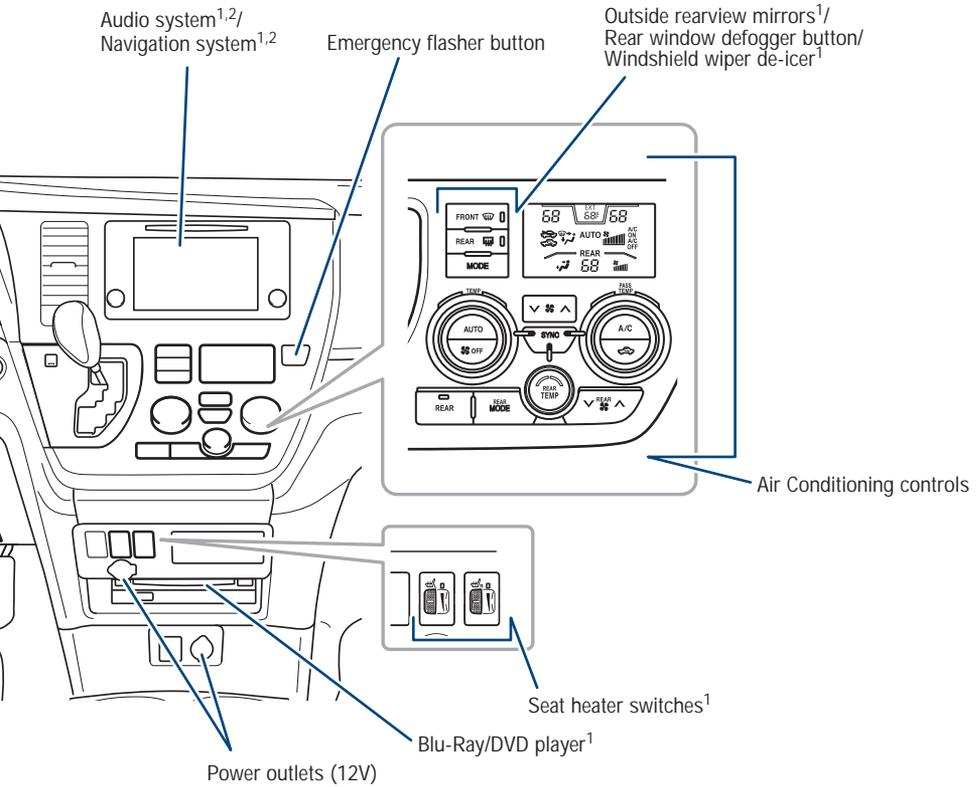


OVERVIEW

Instrument cluster

Vehicles with a monochrome display

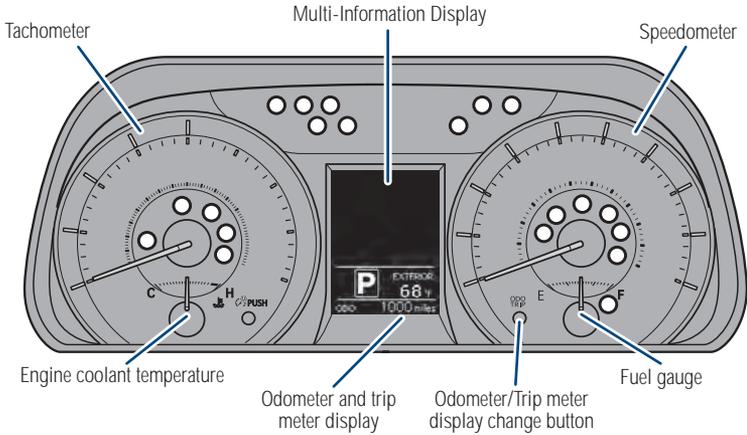

Vehicles with a color display

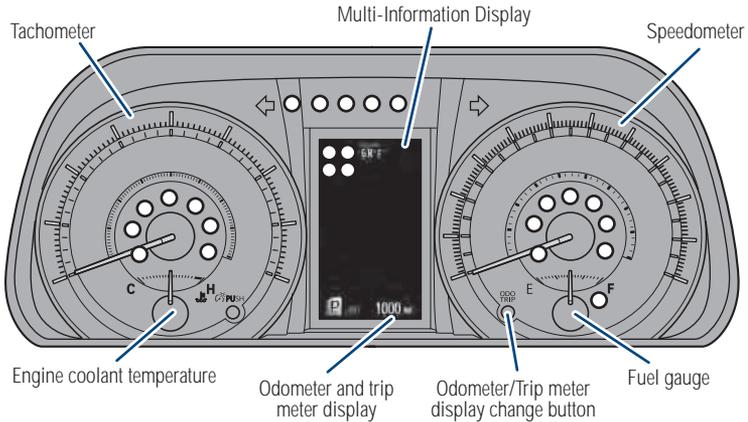

○ Service indicators and reminders

Indicator symbols

For details, refer to "Indicators and warning lights," Section 2-2, 2017 Owner's Manual.



Master warning light¹



Malfunction/Check Engine indicator¹



Low fuel level warning light

	Low engine oil pressure warning ^{1,7}		Cruise control indicator ^{2,4}
	Charging system warning ^{1,7}	SET	Cruise control SET indicator
	Low Tire Pressure Warning ¹		Dynamic Radar Cruise Control indicator ^{3,4}
	Open door warning ⁷		ECO Driving Indicator Light ¹
	Driver seat belt reminder (alarm will sound if speed is over 12 mph)		Security indicator
	Airbag SRS warning ¹		ICE warning indicator
	SRS AIR BAG ON-OFF indicator		Arrow direction indicates fuel tank door position
BRAKE	Brake system warning ¹		
ABS	Anti-lock Brake System warning ¹		
3RD SEAT	Third seat fold incomplete warning ⁷		
	Electric power steering system warning light ¹		
PCS	Pre-Collision System indicator ^{1,6}		
	Vehicle Stability Control OFF indicator ^{1,5,7}		
	Slip indicator/Hill-start Assist Control indicator ^{1,5}		
	Blind Spot Monitor warning/Blind Spot Monitor outside rearview mirror indicators ⁷		
	 Headlight low/high beam indicator		
	Automatic High Beam indicator ⁴		
	Fog light indicator		
	Turn signal indicator		

¹ If indicator does not turn off within a few seconds of starting engine, there may be a malfunction. Have vehicle inspected by your Toyota dealer.

² If this light flashes, refer to "Cruise control," Section 4-5, 2017 Owner's Manual.

³ If this light flashes, refer to "Dynamic Radar Cruise Control," Section 4-5, 2017 Owner's Manual.

⁴ The indicator flashes to indicate a malfunction.

⁵ The indicator flashes to indicate that the system is operating.

⁶ The indicator flashes faster than usual to indicate that the system is operating.

⁷ If equipped.

OVERVIEW

Keyless entry

UNLOCKING OPERATION

Type A



Type B



Type C



Push
ONCE: Driver door
TWICE: All doors

Carry remote Type C
Smart key feature

Front door unlock*

Grasp



LOCKING OPERATION

Type A



Type B



Type C




Push

Carry remote Type C
Smart key feature

Front door lock

Touch

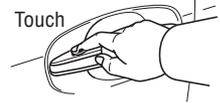

NOTE: If a door is not opened within 30 seconds of unlocking, all doors will relock for safety.

POWER SLIDING DOOR OPERATION (IF EQUIPPED)

Type B




Left side Right side



Push and hold

Type C

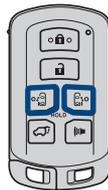


Left side Right side




Push and hold

Carry remote Type C
Smart key feature

Pull

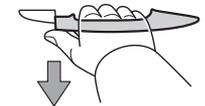

BACK DOOR LOCK/UNLOCK

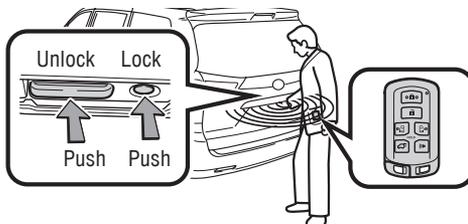

Carry remote Type C
Smart key feature

* Driver door unlocking function can be programmed to unlock driver side doors only, or all doors. Grasping any passenger door handle will unlock all doors.

POWER BACK DOOR OPERATION (IF EQUIPPED)

Type B



Push and hold

Type C




Push and hold

PANIC BUTTON (IF EQUIPPED)



Smart Key system (if equipped)

START FUNCTION

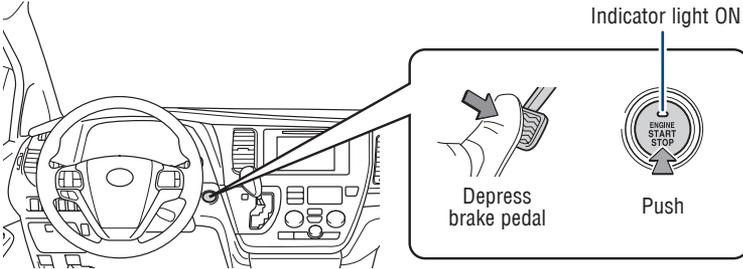

NOTE: Gear shift lever must be in Park and brake pedal depressed.




POWER (WITHOUT STARTING ENGINE)

Without depressing the brake pedal, pressing the “ENGINE START STOP” switch will change the operation mode in succession from:

- ACCESSORY** Accessories such as the radio will operate.
- ON** Power ON; the engine is not running.
- OFF** All systems OFF.



OVERVIEW

Fuel tank door release and cap

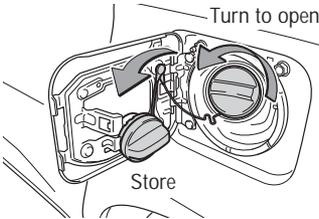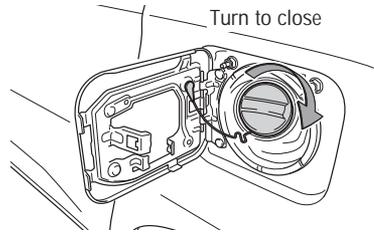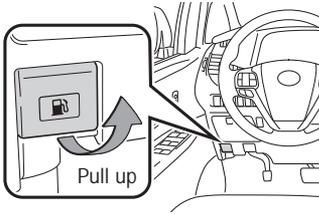


NOTE: Tighten until one click is heard. If the cap is not tightened enough, Check Engine “” indicator may illuminate.


Hood release

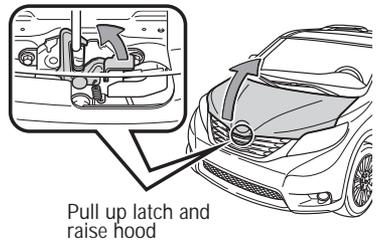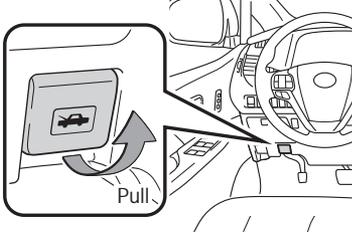

Insert rod to hold hood open

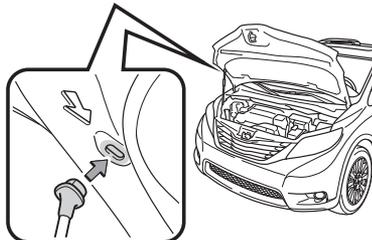


Light control-Instrument panel

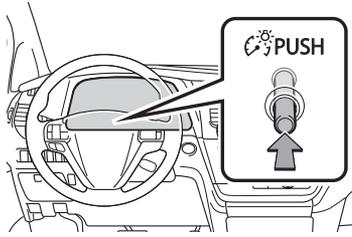

Pressing the button will adjust the brightness of the meter panel lights. The brightness level of the meters when the surroundings are bright (day mode) and dark (night mode) can be adjusted individually.

Engine maintenance

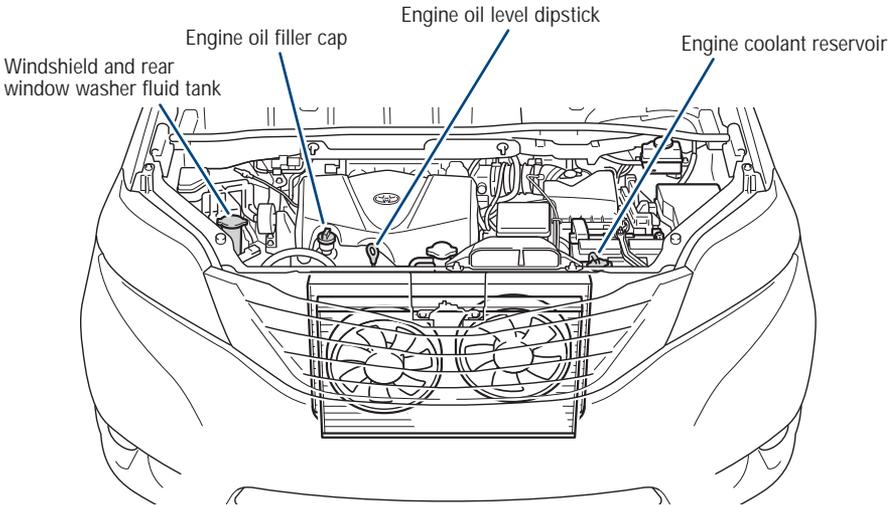

NOTE: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the “Warranty & Maintenance Guide.”

FEATURES & OPERATIONS


Auto lock/unlock

Automatic door locks can be programmed to operate in four different modes, or turned OFF.


- Doors lock when shifting from Park.
- Doors lock when the vehicle speed is approximately 12 mph or higher.
- Doors unlock when shifting into Park.
- Doors unlock when the driver's door is opened within 45 seconds after turning the "ENGINE START STOP" switch OFF. (Vehicles with a Smart Key system)
- Doors unlock when the driver's door is opened within 45 seconds after turning the ignition switch to the "ACC" or "LOCK" position. (Vehicles without a Smart Key system)

Refer to the Owner's Manual for more details.

Door locks

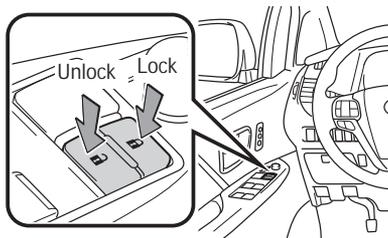

Automatic transmission

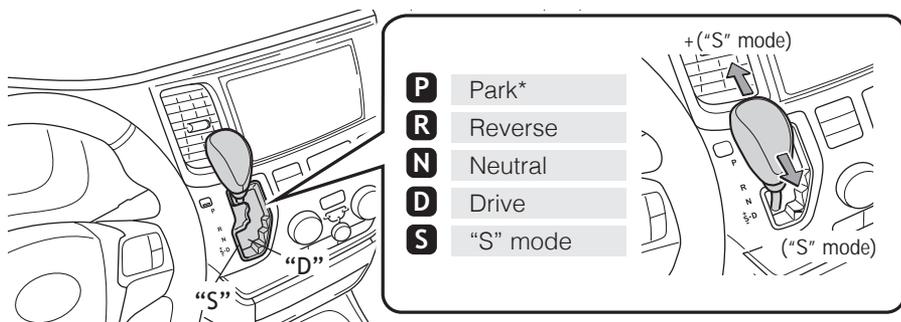

* The "ENGINE START STOP" switch/ignition switch must be "ON" and the brake pedal depressed to shift from Park.

"S" (SEQUENTIAL) MODE


Shift the shift lever to "S" position from "D" position.

- + : Upshift (push and release)
- : Downshift (pull and release)

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.

Parking brake


BRAKE

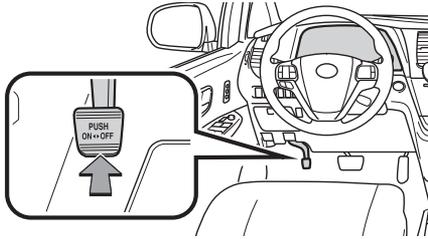

Set: Depress
Release: Depress again


Tilt and telescopic steering wheel

Lock release lever

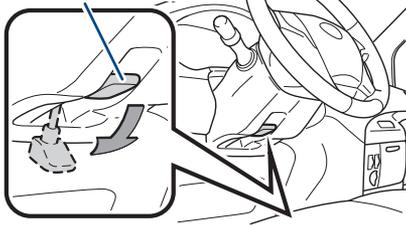

Angle

Length

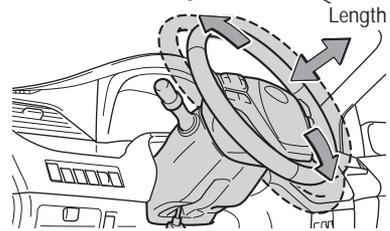


Hold wheel, push lever down, set angle and length, and return lever.


NOTE: Do not attempt to adjust while the vehicle is in motion.

Lights & turn signals

HEADLIGHTS

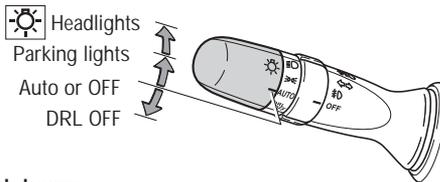

Without automatic high beam

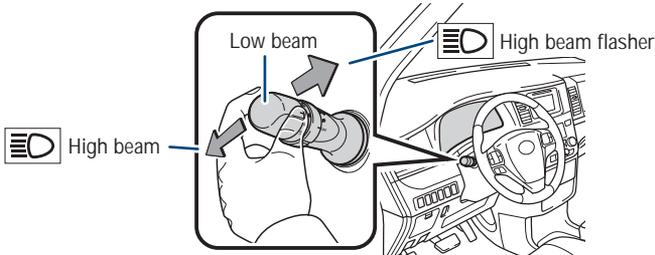


Daytime Running Light system (DRL) Automatically turns on the headlights at a reduced intensity on some models.

Automatic light cut off system Automatically turns lights off after a delay of 30 seconds, or the lock switch on remote may be pushed after locking.


FEATURES & OPERATIONS

AUTOMATIC HIGH BEAMS (AHB) (IF EQUIPPED)

Activate*

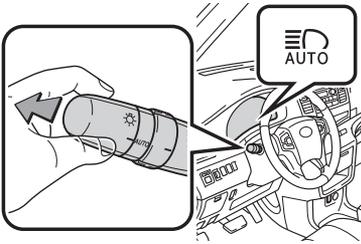


Deactivate

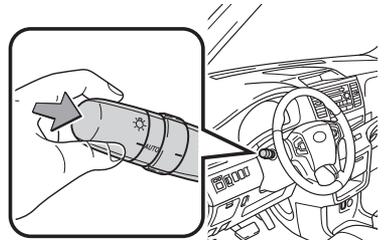



* Refer to the Owner's Manual for details on activating the automatic high beams.

FRONT FOG LIGHTS (IF EQUIPPED)


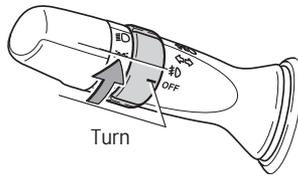


Front fog lights come on only when the headlights are on low beam.

TURN SIGNALS

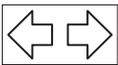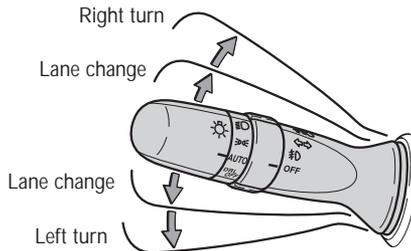

HEADLIGHT BEAM LEVEL CONTROL (IF EQUIPPED)

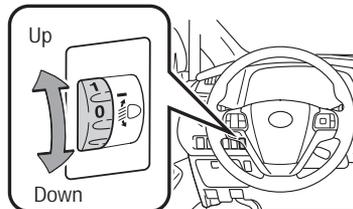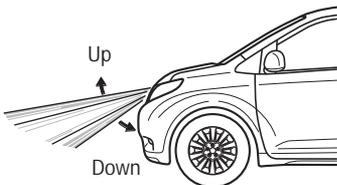


Rotating the dial downward will lower the angle of the beam.

Windshield wipers & washers


FRONT

Intermittent

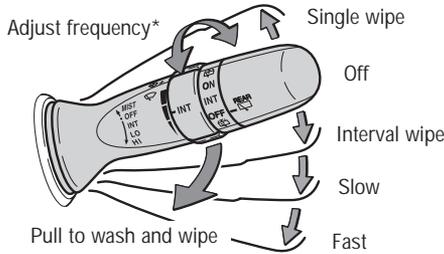


***Intermittent windshield wiper frequency adjustment** Rotate to increase/decrease wipe frequency.

Rain-sensing

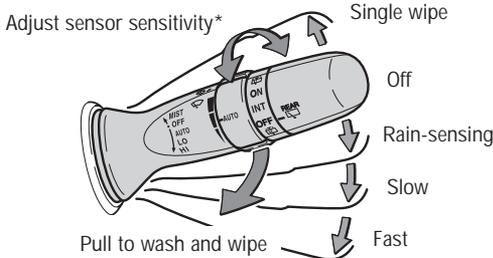


* **Rain-sensing windshield wiper** Rotate to increase/decrease sensor sensitivity.

REAR

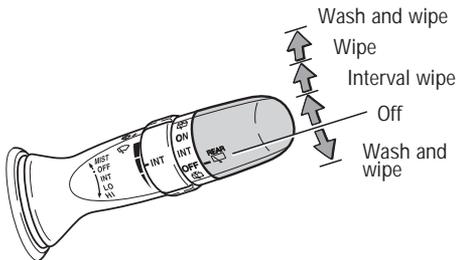


Seats-Head restraints


Front and second row outside seats

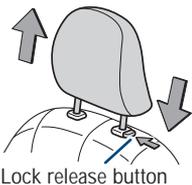

Second row center (8-passenger models) and third row center seats

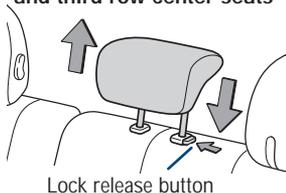


Third row outside seats

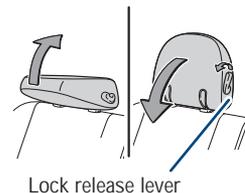


FEATURES & OPERATIONS

Seat adjustments-Front

MANUAL SEAT

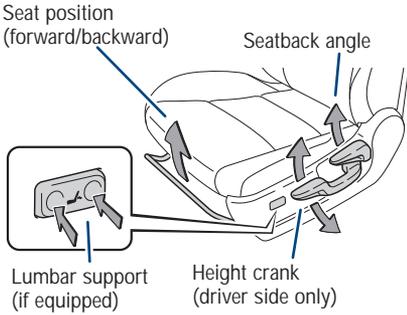


POWER SEAT

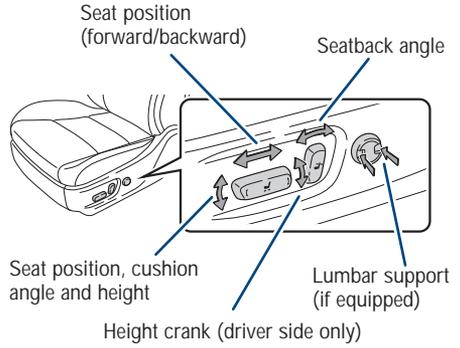


Seat adjustments-Rear

SECOND ROW SEAT


Tip-up seat (7-passenger models)

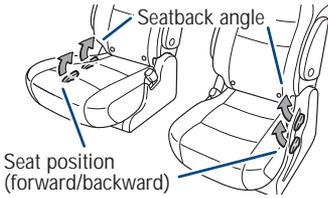

Tip-up seat (8-passenger models)

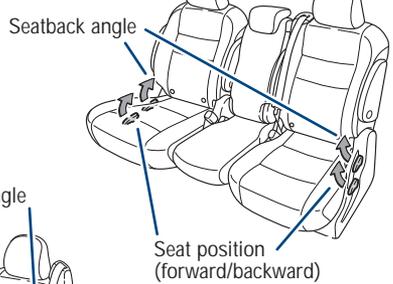


Ottoman seat

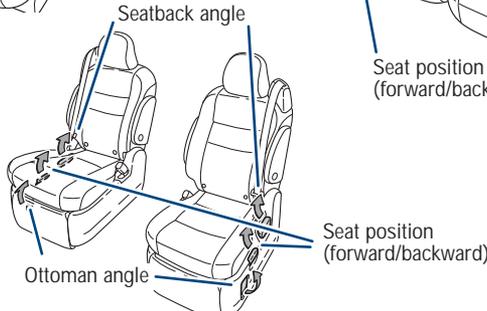


THIRD ROW SEAT

Manual

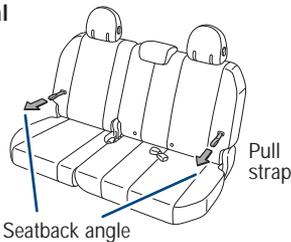


Power

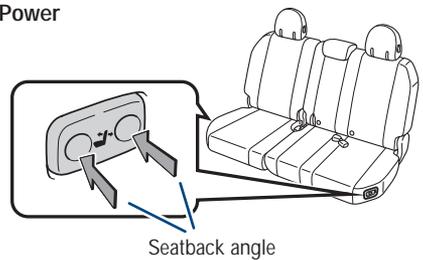


Refer to the Owner's Manual for more details.

Seats-Removing 2nd row outside seats


Tip-up seats

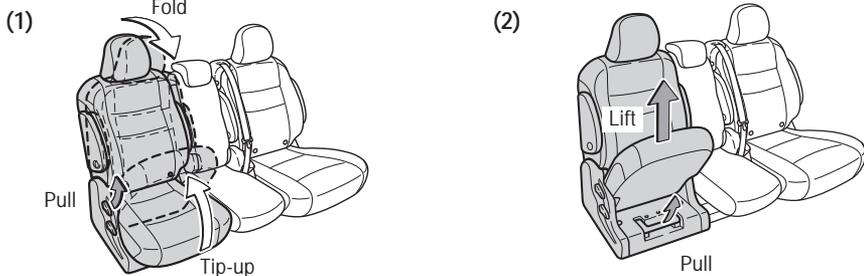

Ottoman seats

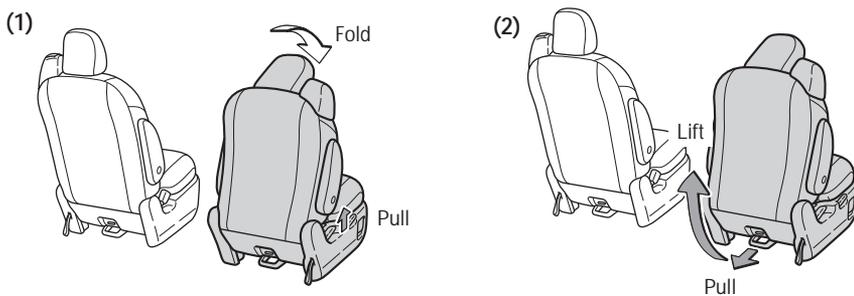




Seats-Removing 2nd row center seat (if equipped)

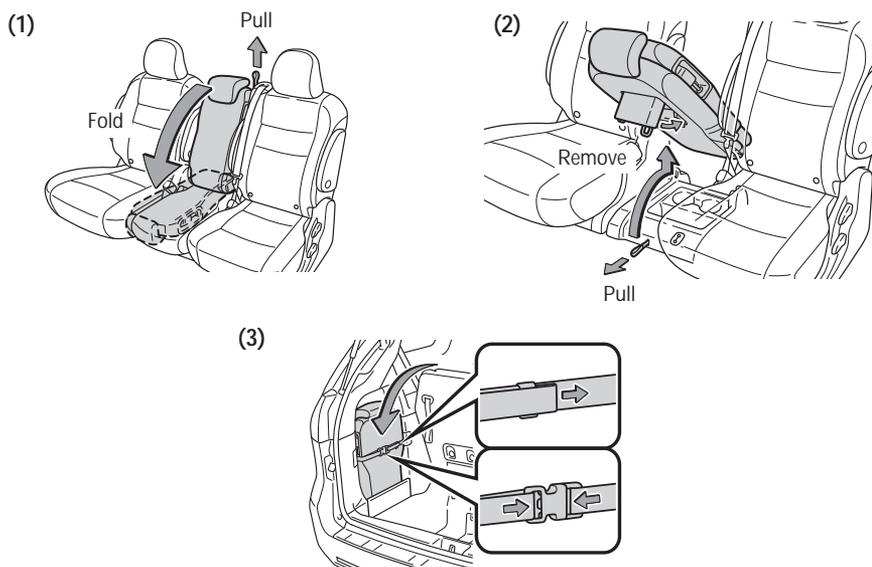




FEATURES & OPERATIONS

Seats-Stowing 3rd row seats

MANUAL

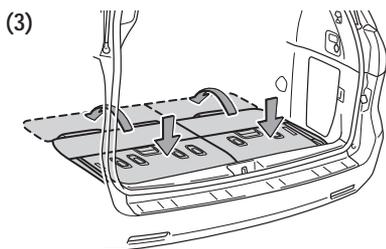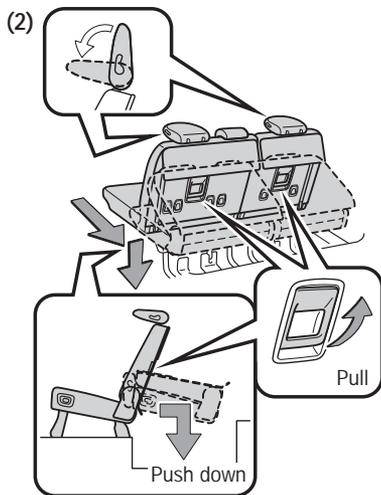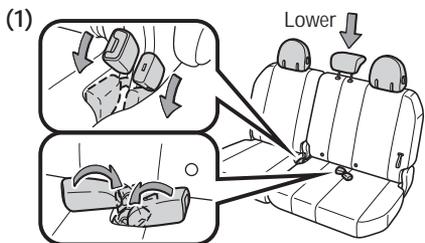

POWER

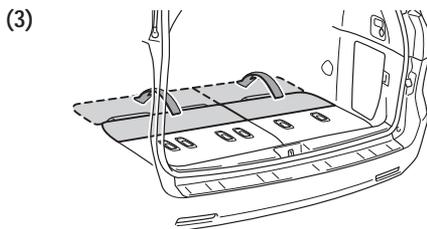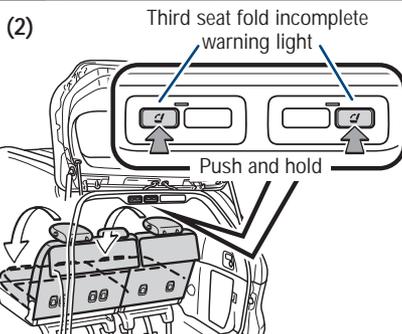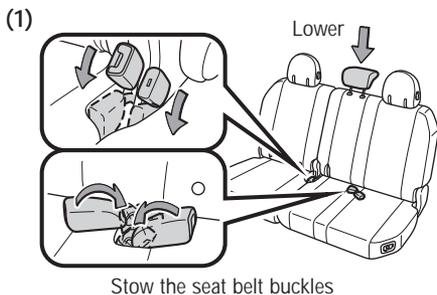

3RD SEAT


An alarm will sound for 10 seconds and the **3RD SEAT** indicator will light up on the instrument panel if the seat is not fully open or stowed when vehicle is shifted out of Park.

Refer to the Owner's Manual for more details.

Doors-Power sliding (if equipped)


ON/OFF SWITCH

Instrument panel

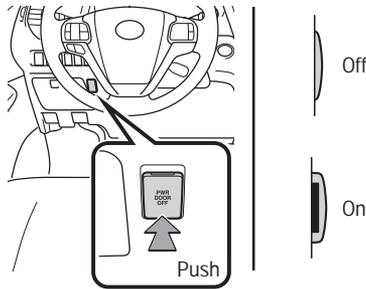


OPENING/CLOSING

Front overhead console

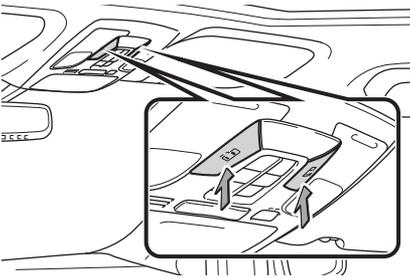

Open: Push
Close: Push again

Center pillar

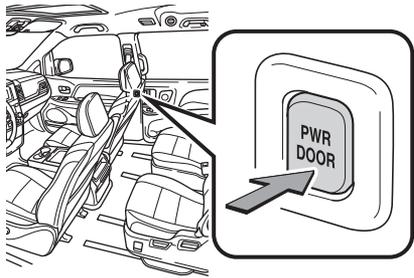

Open: Push
Close: Push again

Power

- Sliding doors will not fully open if the sliding door window is open.
- Power sliding doors will open only when gear selector is in the "P" (Park) position, and doors are unlocked. *Refer to the Owner's Manual for more details.*
- An alarm will sound if a sliding door is open and the vehicle is shifted out of Park.
- Left sliding door will not open if gas door is open.
- If battery is disconnected, the power sliding doors need to be reinitialized.

Refer to the Owner's Manual for more details.

Manual


- Sliding doors will not lock into the open position if the sliding door window is open.

FEATURES & OPERATIONS

Door-Power back (if equipped)


ON/OFF SWITCH

Instrument panel

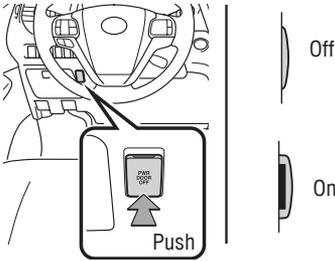


OPENING/CLOSING

Front overhead console

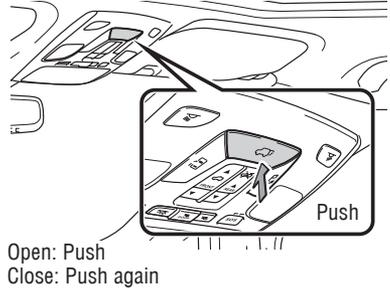


NOTE: If battery is disconnected, the power back door needs to be reinitialized.
Refer to the Owner's Manual for more details.

Windows

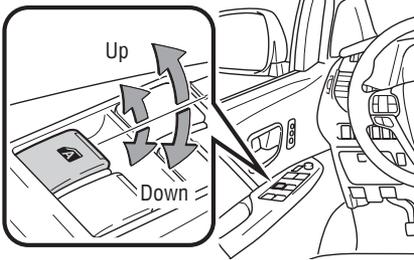

Window lock switch

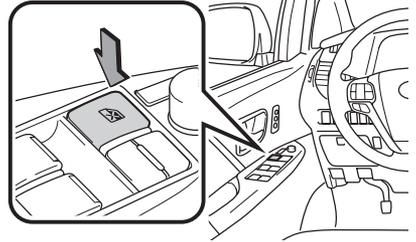


Automatic operation Push the switch completely down or pull it completely up and release to fully open or close. To stop window partway, lightly push the switch in the opposite direction.


Window lock switch Deactivates all passenger windows. Driver's window remains operable.

Windows-Quarter

Manual

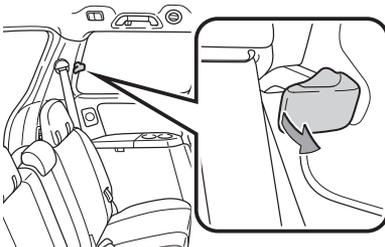


Power

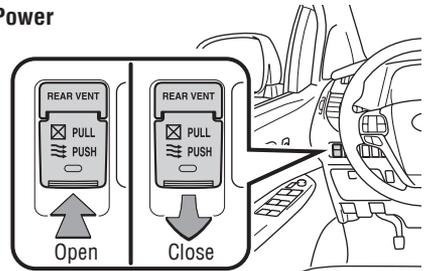


Moon roof (if equipped)

FRONT MOON ROOF

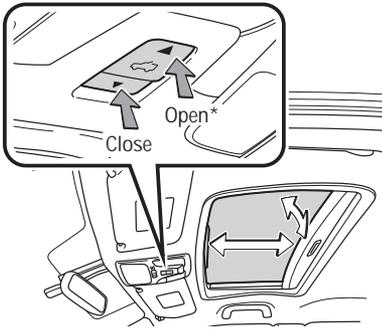

* Tilt: Push
Open: Push again


REAR MOON ROOF (IF EQUIPPED)

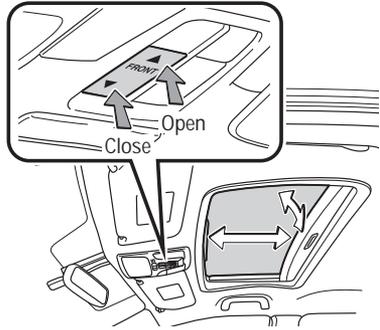


Push once to open partway;
again to open completely.

Sunshade-Side (if equipped)

Rear side window

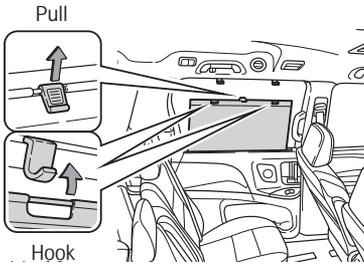

Rear quarter window

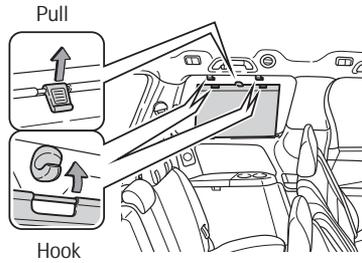


FEATURES & OPERATIONS

Driver Easy Speak

This feature utilizes the vehicle's built-in microphone to amplify the driver's voice through the rear speakers. To activate this feature, select "Driver Easy Speak" from the Apps screen on the audio unit. The feature must be turned on every time you enter the vehicle, and automatically turns off when any door (including the liftgate) is opened. There are 7 volume settings.

Blind Spot Monitor (BSM)(if equipped)

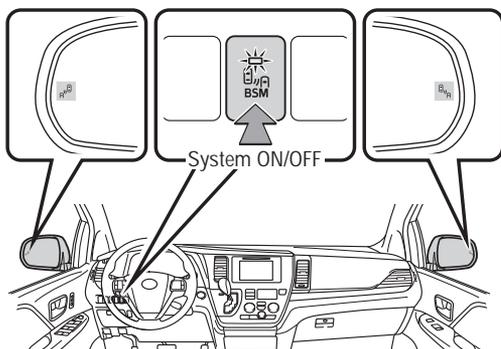


The Blind Spot Monitor is a system that assists the driver in safely changing lanes. The system uses radar sensors and is designed to detect vehicles that are traveling in an area that is not reflected in the outside rearview mirror (the blind spot). The system advises the driver of the vehicles' presence via the outside rear view mirror indicator.


Refer to the Owner's Manual for limitations and more details on this system before attempting to use it.

Cruise control (if equipped)

TURNING SYSTEM ON/OFF

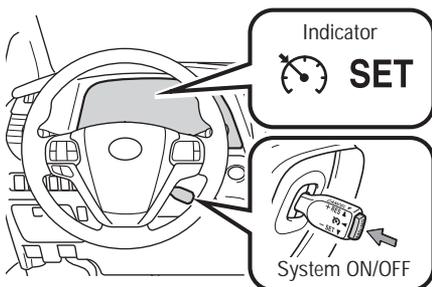

FUNCTIONS

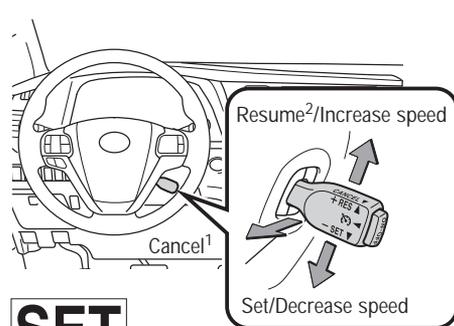


¹ The set speed may also be cancelled by depressing the brake pedal.

² The set speed may be resumed once vehicle speed reaches 25 mph.

Dynamic Radar Cruise Control (DRCC)(if equipped)

Refer to the Owner's Manual for more details and complete safety precautions before attempting to use "Dynamic Radar Cruise Control."

FIXED SPEED MODE

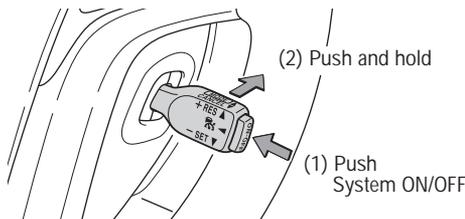


To set, cancel and resume a speed Refer to "Functions" in the Cruise Control section, and to the Owner's Manual for more details.

DISTANCE CONTROL MODE




Radar Ready

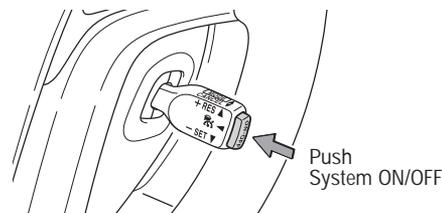

Vehicle will cruise at a set speed, decelerate to maintain a selected distance from a slower vehicle traveling in front of you, and accelerate back up to the selected speed if the vehicle in front changes lanes or speeds up.

To set, cancel and resume a speed Refer to "Functions" in the Cruise Control section, and your Owner's Manual for more details.

NOTE: Once vehicle speed is set, pushing lever up toward "+ RES" will increase speed to the nearest 5 mph, and then in 5 mph increments. Pushing lever down toward "- SET" will reduce speed in the same way.

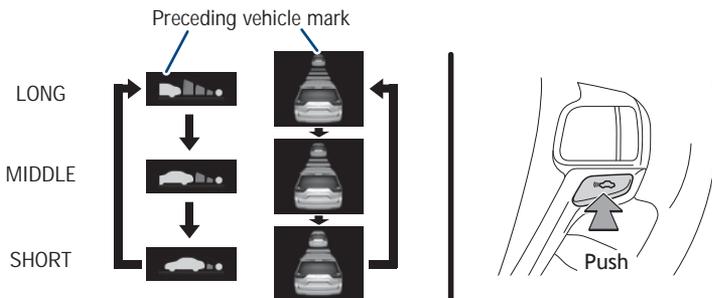


To change the vehicle-to-vehicle distance

Push the distance button to cycle through the settings, which will change progressively from LONG to MIDDLE to SHORT.


FEATURES & OPERATIONS

Audio

TYPE 1

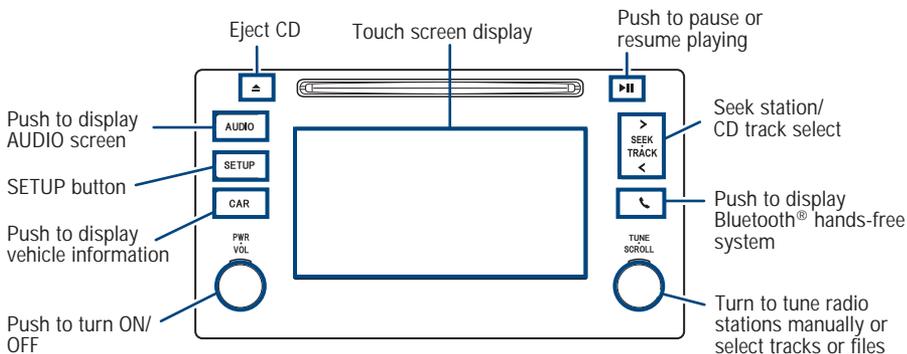


TYPE 2 (ADDITIONAL FUNCTIONS)

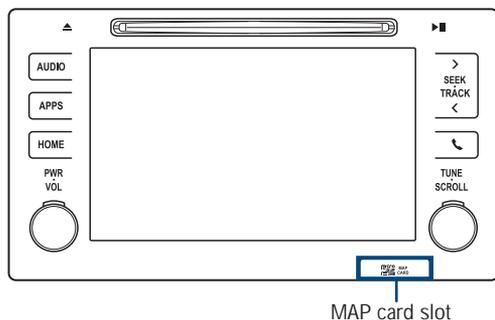

Refer to the "Navigation System Owner's Manual" and "2017 Entune™ Audio Quick Reference Guide."

NOTE: Concentrating on the road should always be your first priority while driving. Do not use the Entune system if it will distract you.

USB/AUX PORT

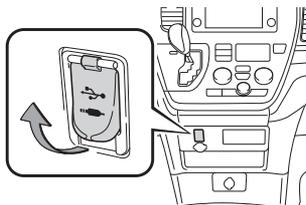


USB port (if equipped) By connecting a USB-compatible portable audio device or USB memory to the USB port, you can listen to music from the portable audio device or USB memory through the vehicle's speaker system.


AUX port By inserting a mini plug into the AUX port, you can listen to music from a portable audio device through the vehicle's speaker system while in AUX mode.

Steering wheel switches & telephone controls (Bluetooth®)

Steering wheel telephone switches

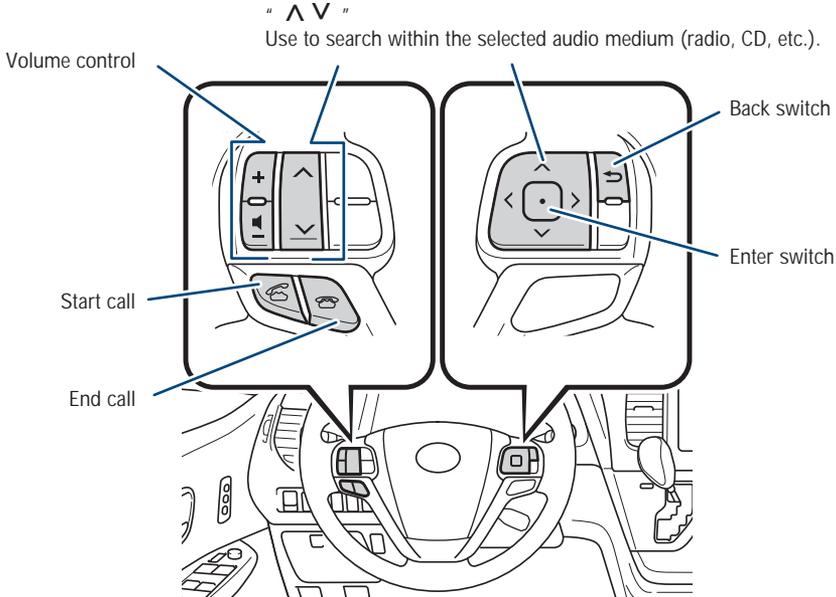

Microphone

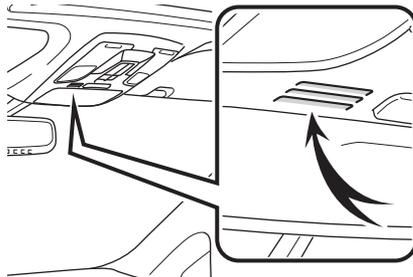

Bluetooth® technology allows dialing or receipt of calls without removing your hands from the steering wheel or using a cable to connect the compatible telephone and the system.

Refer to the "Bluetooth® Device Pairing Section" in this guide for more information about phone connections and compatibility.

NOTE: Concentrating on the road should always be your first priority while driving. Do not use the Entune system if it will distract you.

FEATURES & OPERATIONS

Air conditioning/heating

FRONT AIR CONDITIONING

Control panel

Airflow vent

In " " mode, use outside air (" indicator "OFF") to reduce window fogging. " " mode uses outside air only.

Temperature selector (driver side)

Automatic climate control ON

Adjusting the temperature setting will cause the airflow vents, air intake and fan to adjust automatically.

Front fan ON/OFF

Rear button indicator display

Outside rearview mirror/Rear window defogger and windshield wiper de-icer (if equipped)

Windshield defogger

Front fan speed

Display

EMP

PASS TEMP

Temperature selector (front passenger side)

Air Conditioning ON/OFF

Recirculated cabin air (outside air when OFF)

REAR

REAR MODE

REAR TEMP

REAR

REAR

Rear airflow vent

Temperature selector (rear)


Rear fan speed

Synchronizes driver, front passenger and rear temperature settings

REAR AUTOMATIC AIR CONDITIONING

Fan speed

Temperature selector

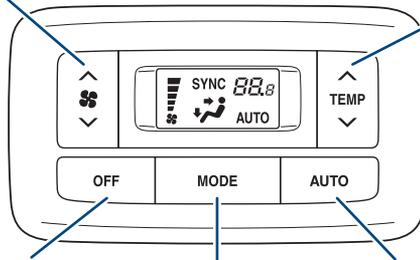


Climate control OFF

Airflow vent


Automatic climate control ON

Seat heaters (if equipped)


Driver's seat

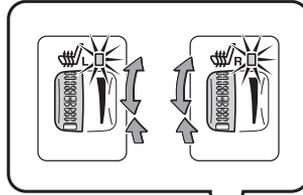

Front passenger's seat

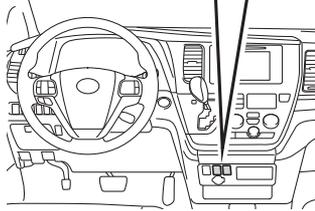

Rear view monitor system

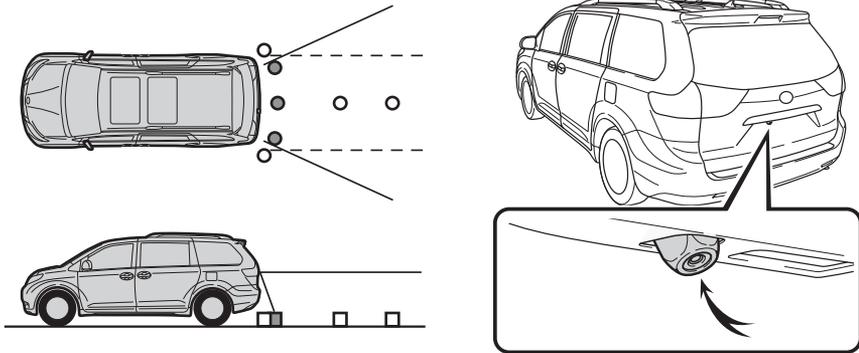


The rear view monitor system displays an image of the view from the bumper of the rear area of the vehicle. The camera for the rear view monitor system is integrated in the tailgate handle.

To adjust the image on the rear view monitor screen, press the "SETUP" button and select "Display" on the "Setup" screen. Select "Camera" to adjust the screen contrast and brightness.

Refer to the Owner's Manual and Navigation System Owner's Manual for limitations and more details on this system.


FEATURES & OPERATIONS

Rear seat entertainment system (if equipped)

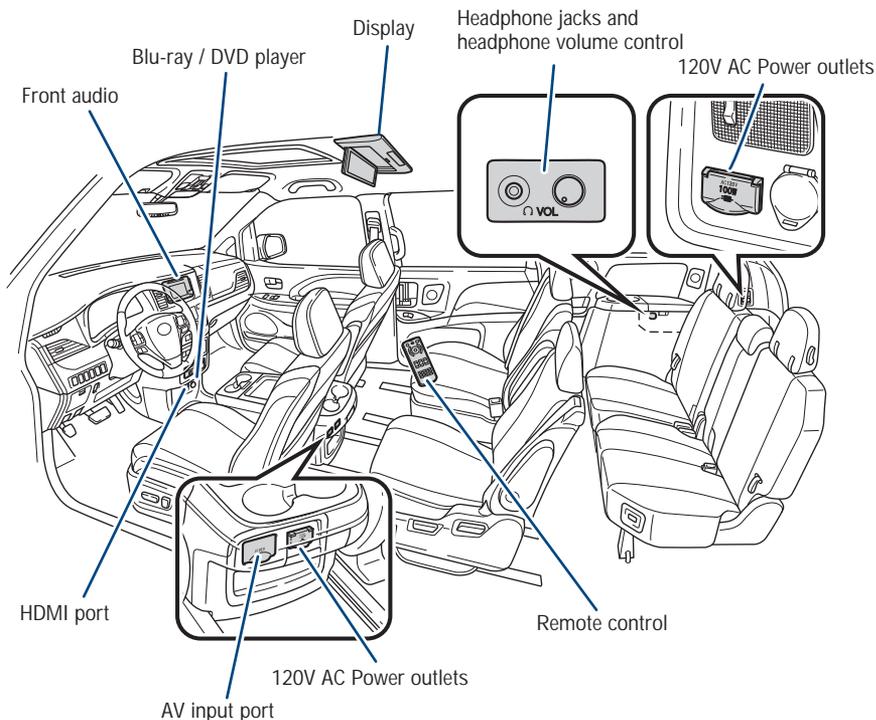

Refer to Section 7 of the Owner's Navigation Manual for more information.

Enhanced VSC OFF switch


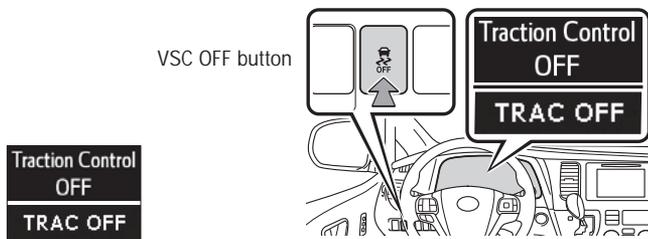


The Enhanced VSC OFF switch can be used to help free a stuck vehicle in surroundings like mud, dirt or snow. While car is stopped, press switch to disable the TRAC system.

To disable both VSC and TRAC systems, press the switch for at least 3 seconds.

Refer to Section 4-5 of the Owner's Manual for more information.


Hill-start Assist Control (HAC)(if equipped)

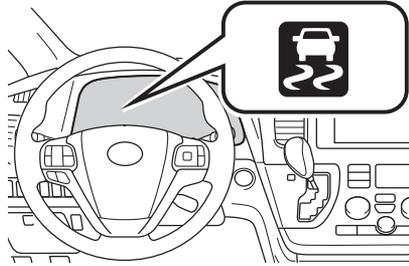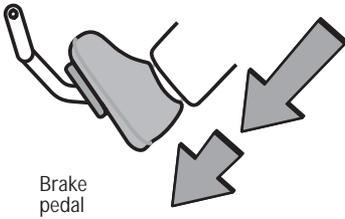

HAC helps prevent rolling backwards on an incline. To engage, push further down on brake pedal while at a complete stop until a beep sounds and slip indicator illuminates. HAC holds for approximately 2 seconds after releasing brake pedal.

Refer to the Owner's Manual for more details.

Garage door opener (HomeLink®)* (if equipped)

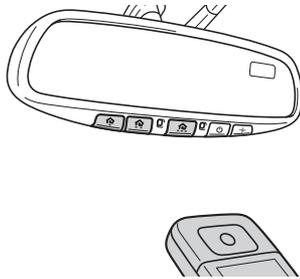

Garage door openers manufactured under license from HomeLink®* can be programmed to operate garage doors, estate gates, security lighting, etc.


Refer to "Garage door opener," Section 3-8 in the Owner's Manual, for more details.

For programming assistance, contact HomeLink® at 1-800-355-3515, or visit <http://www.homelink.com>.

* HomeLink® is a registered trademark of Gentex Corporation.

FEATURES & OPERATIONS

Pre-Collision System (PCS)(if equipped)

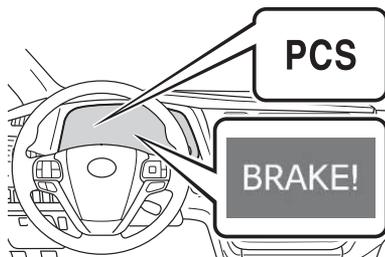


When a high possibility of a frontal collision is detected by the radar sensor, a buzzer sounds and a message urging the driver to take evasive action appears on the Multi-Information Display (MID). If the driver then applies brakes, the system applies greater brake force in relation to how strongly the brake pedal is depressed. If the system determines that a collision is unavoidable, the brakes are automatically applied to reduce the collision speed.


Refer to the Owner's Manual for limitations and more details on this system before attempting to use it.

Bottle holders

FRONT DOORS

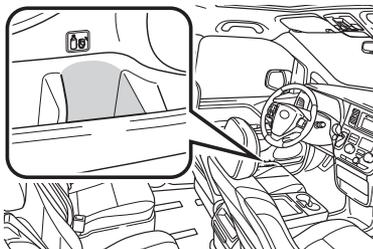

SLIDING DOORS

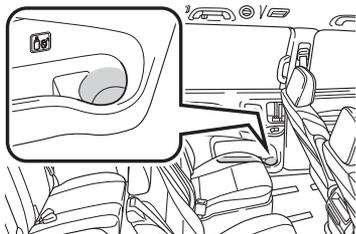


NOTE: Do not place open containers in the bottle holders.


Power outlets-12V DC

Instrument panel


Type A

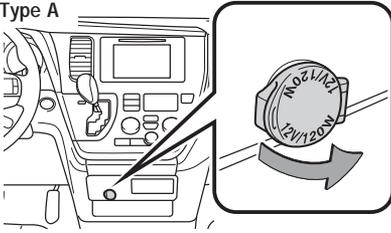

Type B

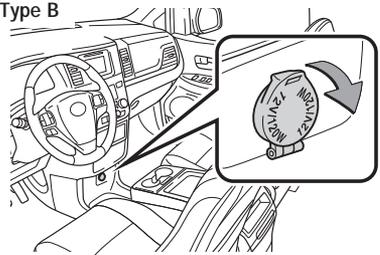

Luggage compartment

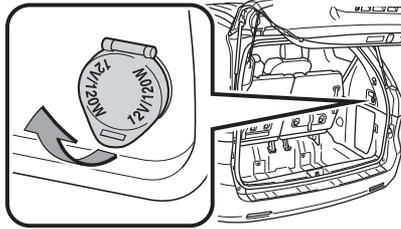


Ignition/"ENGINE START STOP" switch must be in "ACC" or "ON" position for use.


Power outlets-120V AC (if equipped)

Console box


Type A

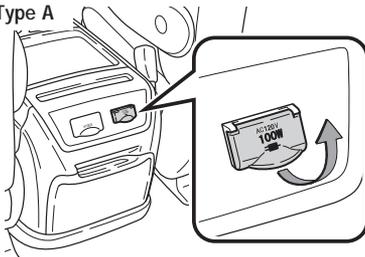

Type B

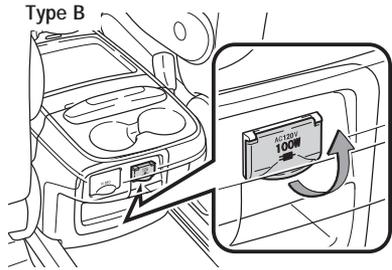

Luggage compartment

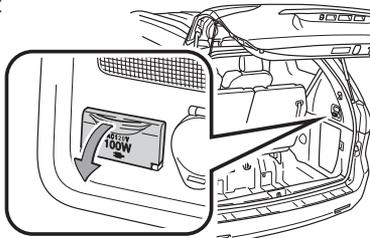


Ignition/"ENGINE START STOP" switch must be in the "ON" position for use.

FEATURES & OPERATIONS


Cup holders

INSTRUMENT PANEL

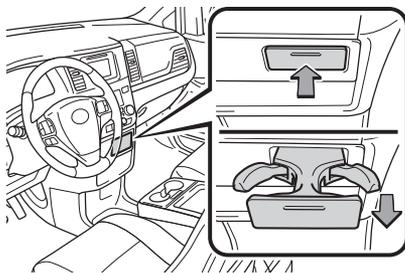


CONSOLE BOX (IF EQUIPPED)


Front

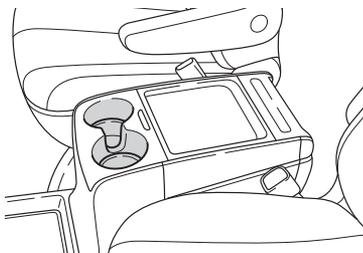

Rear

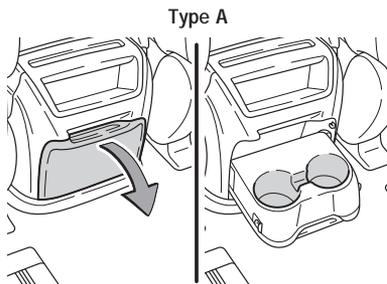


Type A

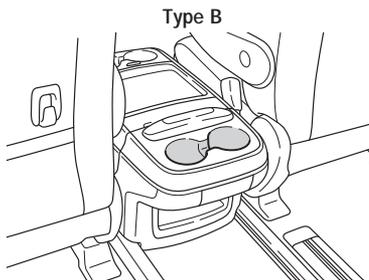


Type B

2ND CENTER SEAT (IF EQUIPPED)

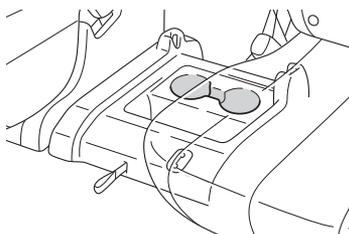


3RD ROW AREA

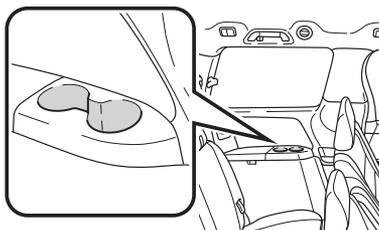

SAFETY & EMERGENCY FEATURES


Doors-Child safety locks

Rear door

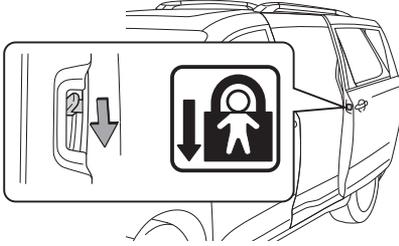

Moving the lever downward will allow the door to be opened only from the outside.


Seat belts-Shoulder belt anchor

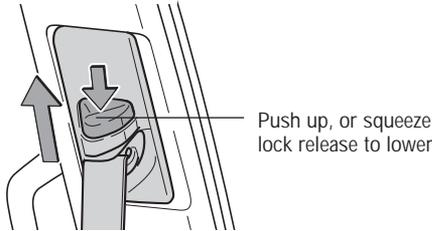

Push up, or squeeze lock release to lower

Child restraint anchors


2nd seat
8 passenger models

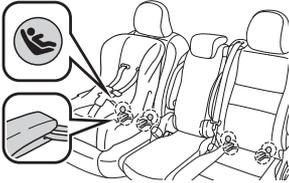

2nd seat
7 passenger models




3rd seat

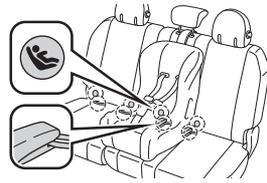

SAFETY & EMERGENCY FEATURES


Seat belts

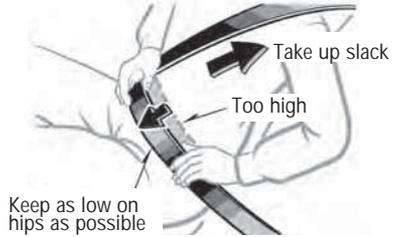

NOTE: If a passenger's seat belt is fully extended, then retracted even slightly, the Automatic locking retractor (ALR) will prevent it from being re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the Owner's Manual.

Tire Pressure Monitoring (warning) System (TPMS)

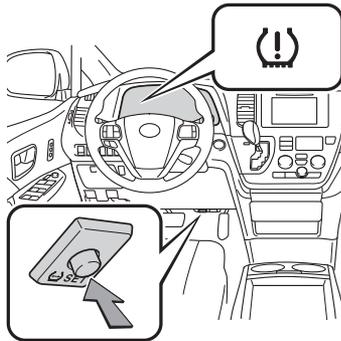

System reset initialization

1. Push and hold "SET" button until the indicator blinks three times.
2. Wait a few minutes to allow initialization to complete.

After adjusting tire pressures, or after tires have been rotated or replaced, turn the ignition switch to "ON" and press and hold the "SET" button until indicator blinks three times. Let the vehicle sit for a few minutes to allow initialization to complete.

Refer to the load label on the door jamb or the Owner's Manual for tire inflation specifications.


If the tire pressure indicator flashes for more than 60 seconds and then remains on, take the vehicle to your local Toyota dealer.

NOTE: The warning light may come on due to temperature changes or changes in tire pressure from natural air leakage. If the system has not been initialized recently, setting the tire pressures to factory specifications should turn off the light.

Spare tire & tools



All-Wheel Drive models are equipped with run-flat tires. *Refer to the Owner's Manual for more details.*

TOOL & SPARE TIRE LOCATION

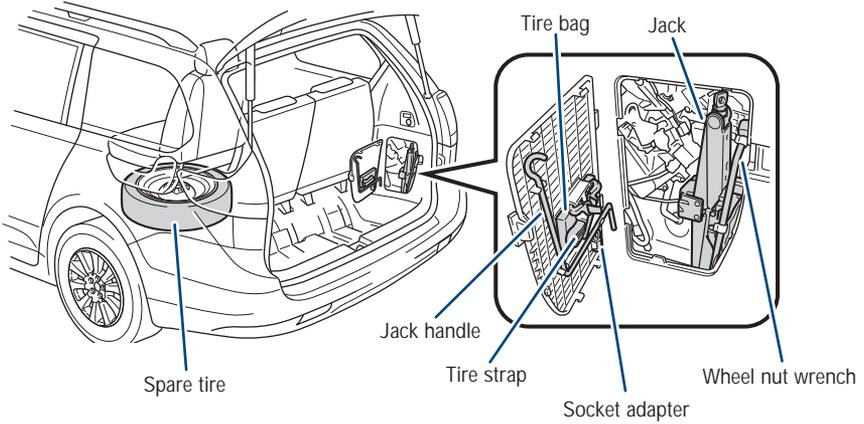

REMOVING THE SPARE TIRE

Two-wheel drive models

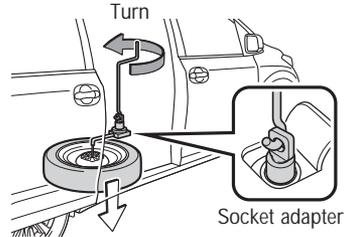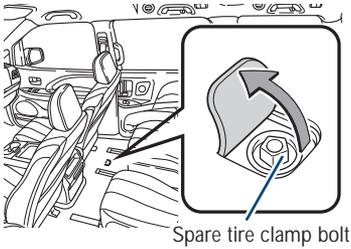

Refer to the Owner's Manual for jack positioning and tire changing procedures.

SAFETY & EMERGENCY FEATURES

Star Safety System™

All new Toyota vehicles come standard with the Star Safety System™, which combines Vehicle Stability Control (VSC), Traction Control (TRAC), Anti-lock Braking System (ABS), Electronic Brake-force Distribution (EBD), Brake Assist (BA) and Smart Stop Technology (SST).

Refer to the Owner's Manual for more details and important information on limitations to these systems.

VEHICLE STABILITY CONTROL (VSC)

VSC helps prevent loss of traction during cornering by reducing engine power and applying brake force to selected wheels.

Toyota's VSC monitors steering angle and the direction your vehicle is traveling. When it senses that the front or rear wheels begin to lose traction, VSC reduces engine power and applies braking to selected wheels. This helps restore traction and vehicle control.

TRACTION CONTROL (TRAC)

VSC helps prevent loss of traction during cornering by reducing engine power, and Traction Control helps maintain traction on loose gravel and wet, icy, or uneven surfaces by applying brake force to the spinning wheel(s).

Toyota's TRAC sensors are activated when one of the drive wheels starts to slip. TRAC limits engine output and applies the brakes to the spinning wheel. This transfers power to the wheels that still have traction to help keep you on track.

ANTI-LOCK BRAKE SYSTEM (ABS)

Toyota's ABS sensors detect which wheels are locking up and limits wheel lockup by "pulsing" each wheel's brakes independently. Pulsing releases brake pressure repeatedly for fractions of a second. This helps the tires attain the traction that current road conditions will allow, helping you to stay in directional control.

ELECTRONIC BRAKE FORCE DISTRIBUTION (EBD)

Toyota's ABS technology has Electronic Brake-force Distribution (EBD) to help maintain control and balance when braking. Abrupt stops can cause a vehicle to tilt forward, reducing the braking power of the rear wheels. EBD responds to sudden stops by redistributing brake force to enhance the braking effectiveness of all four wheels.

BRAKE ASSIST (BA)

Brake Assist is designed to detect sudden or "panic" braking, and then add braking pressure to help decrease the vehicle's stopping distance. When there's only a split second to react, Brake Assist can add additional brake pressure more quickly than just the driver alone can.

SMART STOP TECHNOLOGY (SST)

Smart Stop Technology automatically reduces engine power when the accelerator and brake pedals are pressed simultaneously under certain conditions.

SST engages when the accelerator is depressed first and the brakes are applied firmly for longer than one-half second at speeds greater than five miles per hour.




SST doesn't engage if the brake pedal is depressed before the accelerator pedal, allowing vehicles to start on a steep hill and safely accelerate without rolling backward.

Floor mat installation

There are two types of Toyota floor mats: carpeted and all-weather. Each vehicle has model-specific floor mats. Installation is easy.

To keep your floor mat properly positioned, follow these steps:

- Only use Toyota floor mats designed for your specific model.
- Use only one floor mat at a time, using the retaining hooks to keep the mat in place.
- Install floor mats right side up.

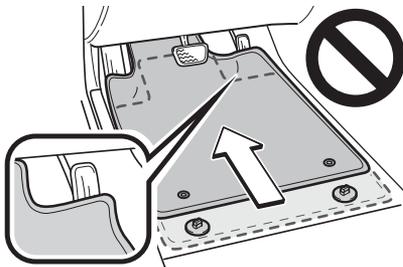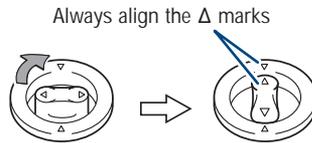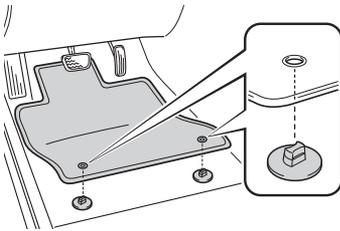

BLUETOOTH® DEVICE PAIRING SECTION


Do not attempt the Bluetooth® Pairing process while driving.

To begin the Bluetooth® Pairing process, press the HOME button on the faceplate of your Toyota Vehicle Entune™ Multimedia Head Unit.¹


Bluetooth® Pairing for Android phone and Entune™ touch screen system

Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all Android mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.²

Initiate Bluetooth® on your Android®

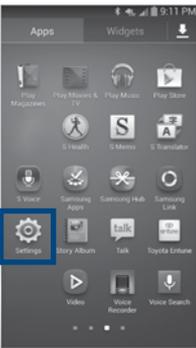


STEP 1
From your **APPS SCREEN**, select **SETTINGS**.

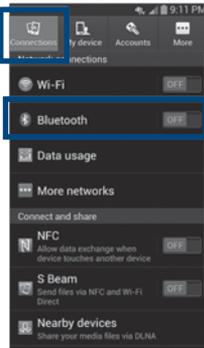

STEP 2
Select **CONNECTIONS** and select **BLUETOOTH**.



STEP 3
Ensure **BLUETOOTH** is **ON**.

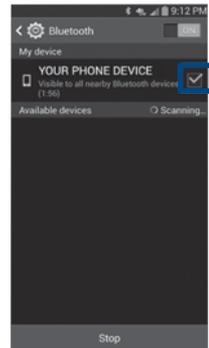

STEP 4
Select **YOUR PHONE DEVICE** to make it discoverable.

Phone will seek out Bluetooth devices while remaining discoverable.



STEP 5
While your Android device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

¹ To determine which head unit is installed in your vehicle, refer to the Audio section in this guide. Entune™ Premium Audio screens are shown in this section. Screens and features may vary by Entune™ system.

² Some Android devices may have slightly different SETTINGS screen layout depending on manufacturer of device and Android OS version.

BLUETOOTH® DEVICE PAIRING

Initiate Bluetooth® on your Entune™ Multimedia Head Unit

Once you have Bluetooth enabled on your phone and ready to pair, you will need to initiate Bluetooth on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.



STEP 6

On your Toyota Vehicle Entune Multimedia Head Unit, Select **SETUP BUTTON** on the Home Screen.



STEP 7


Select **BLUETOOTH**.
Image shown is a sample image, features may vary.



STEP 8

Select **ADD**, to add your phone device.

For Entune™ Audio System, press the **SETUP BUTTON** on the faceplate to access the Setup Screen.

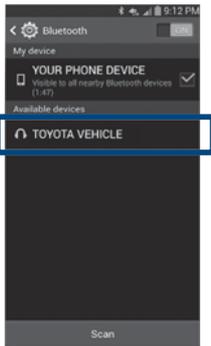

STEP 9


Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.

You may need to enter the provided Bluetooth PIN on your phone.



STEP 10


Your smartphone is now paired with Entune.

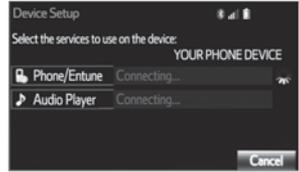

STEP 11

Once paired, Entune will attempt to connect audio and contacts on your phone.

Initiate Bluetooth® on your Entune™ Multimedia Head Unit

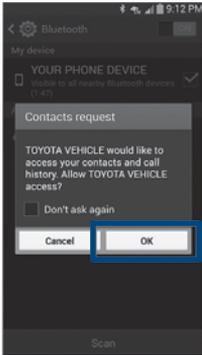

STEP 12

Using your smartphone, you will need to allow Entune access to your messaging and contacts.

It is recommended to check the "Don't ask again" box, so as not to have to press OK every time the phone makes a Bluetooth connection with your Toyota.

STEP 13

A confirmation will appear once your phone has been paired and connected.

Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:
www.toyota.com/connect

Your Toyota Owner's Manual
Located in the vehicle glovebox

Toyota Customer
Experience Center
(800) 331-4331

Disclosures

This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.

1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
3. Android is a trademark of Google Inc.
4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.

Bluetooth® Pairing for iPhone and Entune™ touch screen system


****Do not attempt the Bluetooth® Pairing process while driving.****

Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all iPhone mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.

Initiate Bluetooth® on your iPhone®




STEP 1
From the **HOME SCREEN**, select **SETTINGS**.

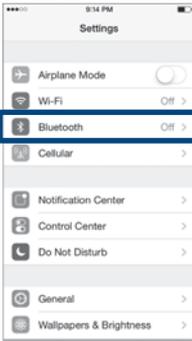

STEP 2
Select **BLUETOOTH**.



STEP 3
Ensure **BLUETOOTH** is **ON**.

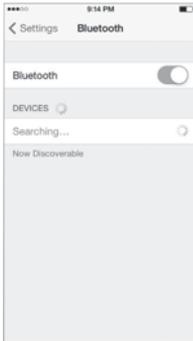


STEP 4
Your iPhone will seek out Bluetooth devices while remaining discoverable.



STEP 5
While your iPhone device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

Initiate Bluetooth® on your Entune™ Multimedia Head Unit

Once you have Bluetooth enabled on your phone and ready to pair, you will need to initiate Bluetooth on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.

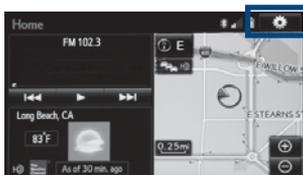

STEP 6

On your Toyota Vehicle Entune Multimedia Head Unit, Select **SETUP BUTTON** on the Home Screen.


For Entune™ Audio System, press the **SETUP BUTTON** on the faceplate to access the Setup Screen.



STEP 7

Select **BLUETOOTH**.

Image shown is a sample image, features may vary.

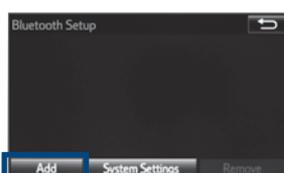

STEP 8

Select **ADD**, to add your phone device.



STEP 9


Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.

You may need to enter the provided Bluetooth PIN on your phone.



STEP 10


Your smartphone is now paired with Entune.

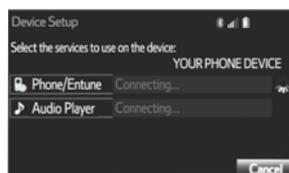

STEP 11

Once paired, Entune will attempt to connect audio and contacts on your phone.

BLUETOOTH® DEVICE PAIRING

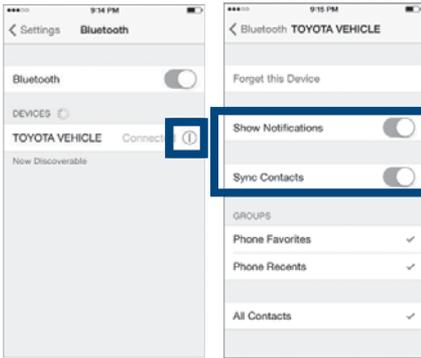

STEP 12

Using your smartphone, you may need to allow Entune access to your messaging and contacts.

Only current iPhone text messages can be viewed on the head unit. iPhone does not allow text message reply.



STEP 13

A confirmation will appear once your phone has been paired and connected.

Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:
www.toyota.com/connect

Your Toyota Owner's Manual
Located in the vehicle glovebox

Toyota Customer
Experience Center
(800) 331-4331

Disclosures

This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.


1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
3. Android is a trademark of Google Inc.
4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.

Bluetooth® Pairing for Windows Phone and Entune™ touch screen system

****Do not attempt the Bluetooth® Pairing process while driving.****


Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all Windows Phone mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.

Initiate Bluetooth® on your Windows Phone®

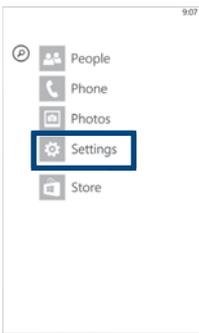


STEP 1

From your APP LIST, select **SETTINGS**.

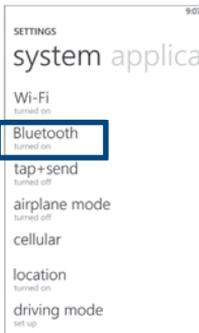

STEP 2

Select **BLUETOOTH**.

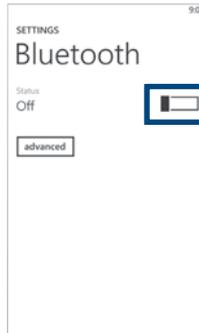


STEP 3

Ensure **BLUETOOTH** is **ON**.



STEP 4

Phone will seek out Bluetooth devices while remaining discoverable.

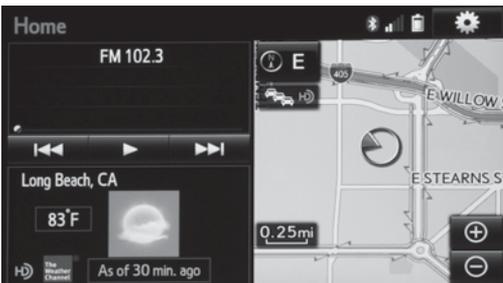

STEP 5

While your iPhone device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

BLUETOOTH® DEVICE PAIRING

Initiate Bluetooth® on your Entune™ Multimedia Head Unit

Once you have Bluetooth® enabled on your phone and ready to pair, you will need to initiate Bluetooth® on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.



STEP 6

On your Toyota Vehicle Entune Multimedia Head Unit, Select **SETUP BUTTON** on the Home Screen.


For Entune™ Audio System, press the **SETUP BUTTON** on the faceplate to access the Setup Screen.



STEP 7


Select **BLUETOOTH**.

Image shown is a sample image, features may vary.

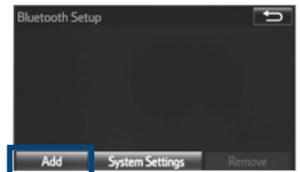

STEP 8


Select **ADD**, to add your phone device.

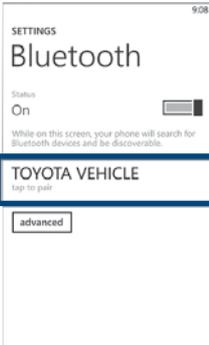

STEP 9


Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.

You may need to enter the provided Bluetooth PIN on your phone.

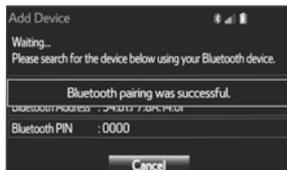

STEP 10


Your smartphone is now paired with Entune.

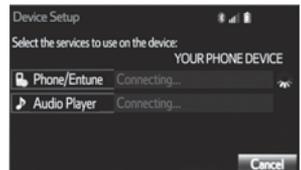

STEP 11

Once paired, Entune will attempt to connect audio and contacts on your phone.

Initiate Bluetooth® on your Entune™ Multimedia Head Unit

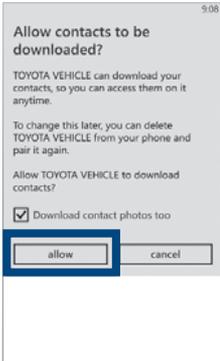

STEP 12

Using your smartphone, you may need to allow Entune access to your contacts.



STEP 13

A confirmation will appear that your phone has been paired and connected.

Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:
www.toyota.com/connect

Your Toyota Owner's Manual
Located in the vehicle glovebox

Toyota Customer
Experience Center
(800) 331-4331

Disclosures

This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.

1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
3. Android is a trademark of Google Inc.
4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.



CUSTOMER EXPERIENCE CENTER
1-800-331-4331



Printed in U.S.A. 7/16
16-MKG-09516



00505QRG17S1E