



PRIUS *v*
2 0 1 7



QUICK REFERENCE GUIDE

2017

PRIUS *v*

This Quick Reference Guide is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The Quick Reference Guide is not intended as a substitute for the Owner's Manual located in your vehicle's glove box. We strongly encourage you to review the Owner's Manual and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Prius *v*.

A word about safe vehicle operations

This Quick Reference Guide is not a full description of Prius *v* operations. Every Prius *v* owner should review the Owner's Manual that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the Owner's Manual. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this Quick Reference Guide is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

INDEX

OVERVIEW

Engine maintenance	9
Fuel tank door release and cap	7
Hood release	8
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Keyless entry ^{1,2}	6
Light control-Instrument panel	8
Smart Key system ^{1,2}	7

FEATURES & OPERATIONS

Air Conditioning/Heating	17
Audio	18
Auto lock/unlock ^{1,2}	10
Bluetooth® Device Pairing Section	28-37
Clock	23
Cruise control	20
Dynamic Radar Cruise Control (DRCC)	21
EV drive mode	12
Garage door opener (HomeLink®) ³	23
Hill-start Assist Control (HAC)	23
Hybrid Synergy Drive System	10
Lane Departure Alert (LDA)	16
Lights ¹ & turn signals	15
Panoramic roof shades ¹	19
Parking brake	12
Power outlets	20
Seat adjustments-Front	13
Seat heaters	16
Seat-Folding down rear seat	14
Seats-Flattening front seatbacks	13
Seats-Head restraints	13
Steering wheel switches	19
Telephone controls (Bluetooth®)	22
Tilt and telescopic steering wheel	12
Transmission	11
Trip information display	22
Windows-Power	16
Windshield wipers & washers	14

SAFETY & EMERGENCY FEATURES



Doors-Child safety locks	25
Door locks	25
Floor mat installation	27
Seat belts	24
Seat belts-Shoulder belt anchor	24
Spare tire & tools	25
Star Safety System™	26-27
Tire Pressure Monitoring (warning) System (TPMS)	24

¹ Visit your Toyota dealer for information on customizing this feature.

² Programmable by customer. Refer to the Owner's Manual for instructions and more information.


³ HomeLink® is a registered trademark of Gentex Corporation.

Instrument panel

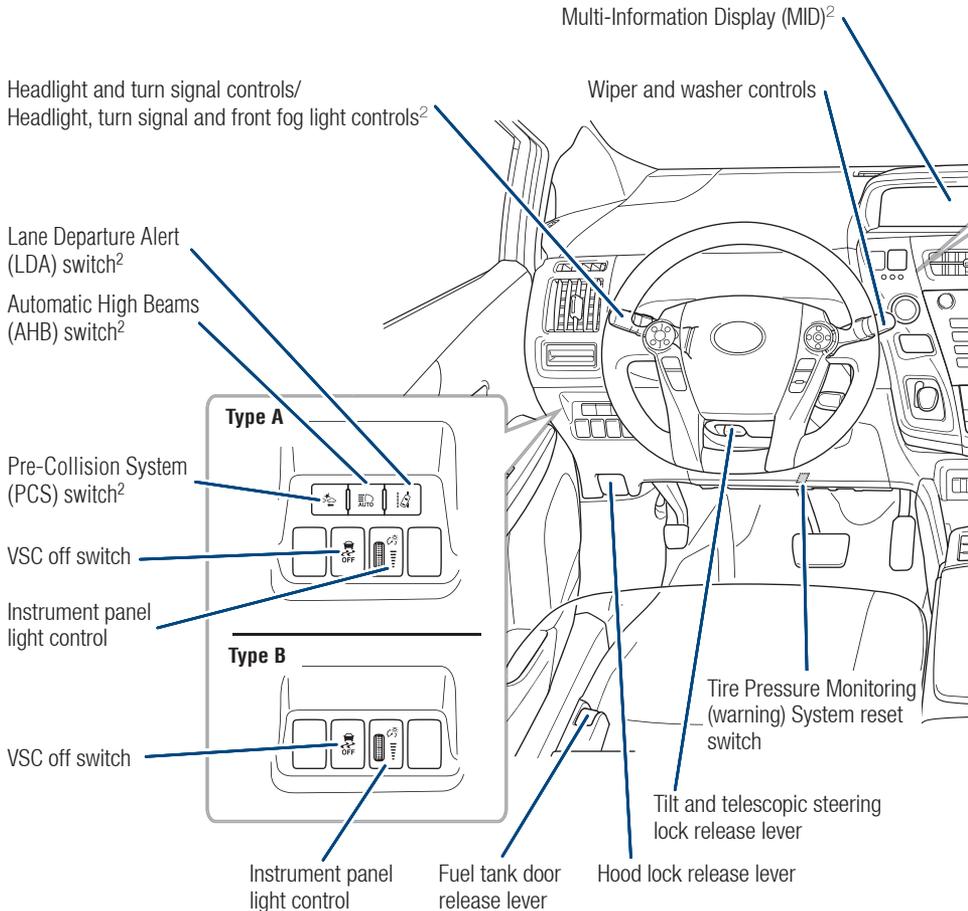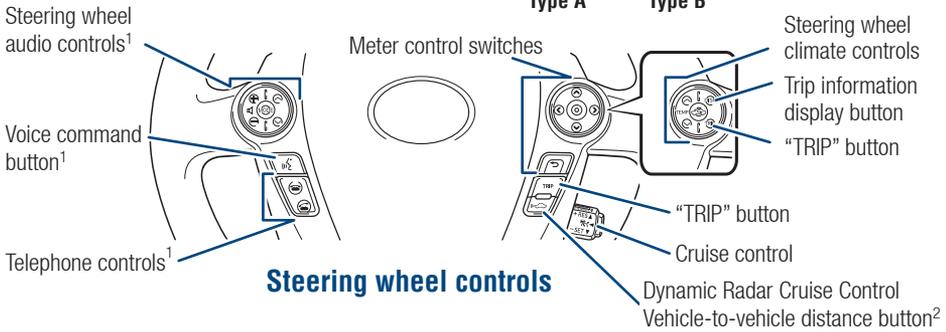

¹ For more details, refer to the “Navigation System Owner’s Manual” and “2017 Entune™ Audio Quick Reference Guide.”


² If equipped.

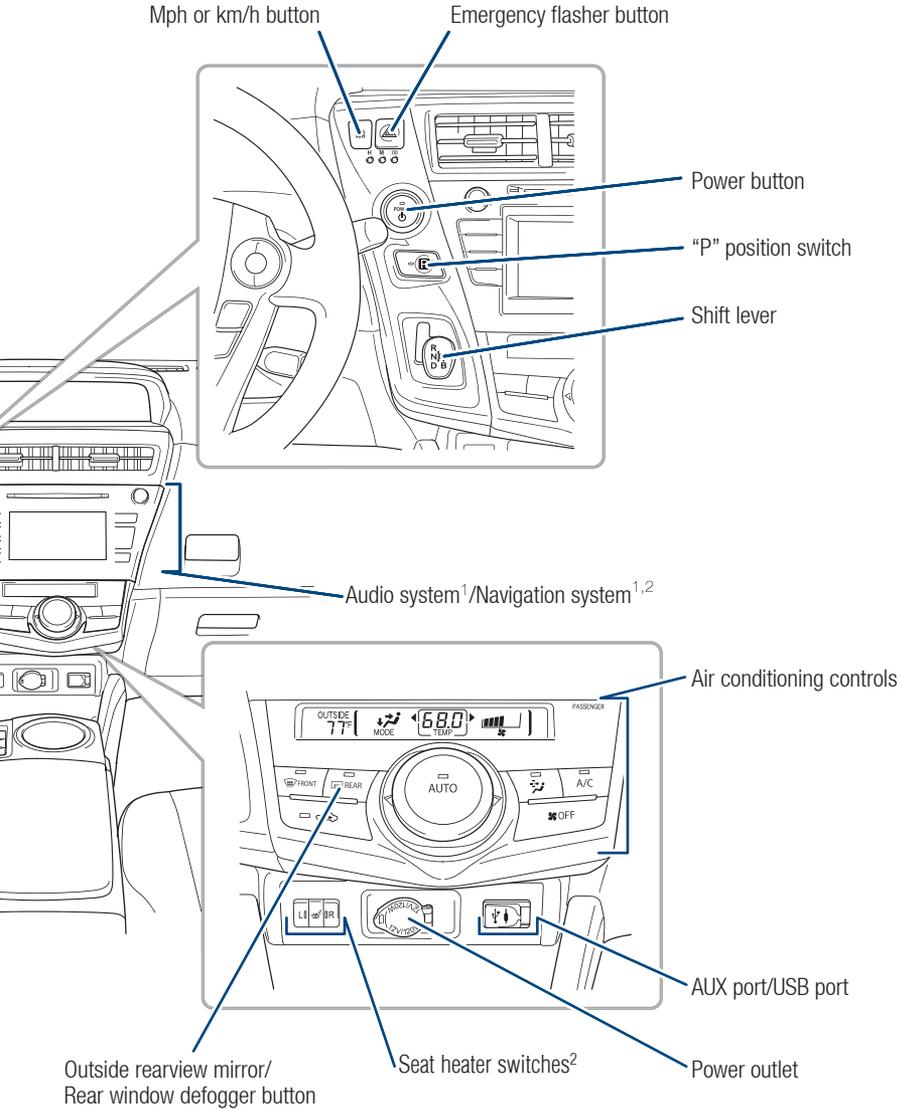


OVERVIEW

Instrument cluster

Vehicles without Multi-Information display

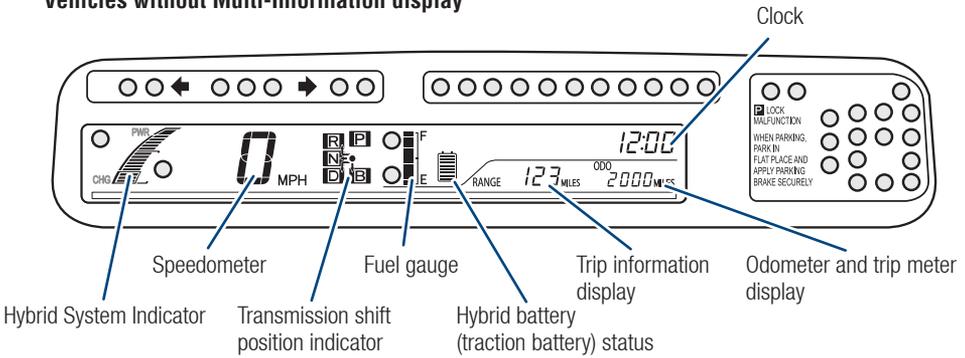

Vehicles with Multi-Information display

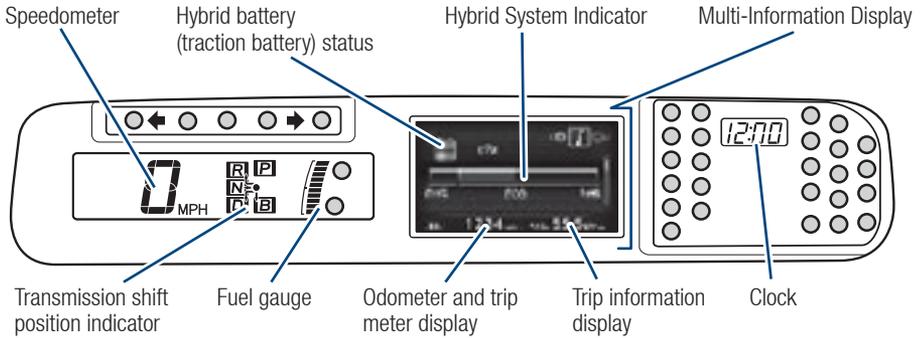

○ Service indicators and reminders

Instrument symbols

For details, refer to “Indicators and warning lights,” Section 2-2, 2017 Owner’s Manual.

	Master warning ^{1,3}		Brake system warning ¹
	Go to service warning ^{1,3}		Brake system warning (yellow indicator) ¹
	Maintenance required reminder ^{1,3}		Anti-lock Brake System warning ¹
	Malfunction/Check Engine indicator ¹		
	Charging system warning ¹		

¹ If indicator does not turn off within a few seconds of starting Hybrid System, there may be a malfunction. Have vehicle inspected by your Toyota dealer.



Parking lock system warning message³



Parking lock system warning^{1,3}



P position request indicator^{1,3}



Smart Key system warning³



High coolant temperature warning¹



Low engine oil pressure warning^{1,3}



Driver seat belt reminder and/or front passenger seat belt reminder (alarm will sound if speed is over 12 mph)



Front passenger occupant classification or front passenger airbag ON/OFF indicator



Airbag SRS warning¹



Open door warning



Low Tire Pressure Warning¹



Electric power steering system warning¹



Immobilizer system indicator



Fuel tank door position



Low fuel level warning



READY indicator



Low hybrid battery (traction battery) warning



Hybrid System overheat warning^{1,3}



Hybrid System warning^{1,3}



ECO Driving Indicator^{1,3}



EV indicator³



EV drive mode indicator



ECO MODE indicator



Power Mode indicator



SET  Cruise control indicators^{2,3}



TRAC OFF Traction Control OFF indicator³



Slip indicator/Hill-start Assist Control indicator¹



VSC OFF indicator



Lane Departure Alert (LDA) indicator³



Pre-Collision System (PCS) warning light^{1,3}



 Headlight low/high beam indicators



LED headlight warning^{1,3}



Automatic headlight leveling system warning^{1,3}



Automatic High Beams indicator³



Front fog light indicator



Turn signal indicator


² If this light flashes, refer to "Cruise control," or "Dynamic Radar Cruise Control," Section 4-5, 2017 Owner's Manual.

³ If equipped

OVERVIEW


Keyless entry

LOCKING OPERATION

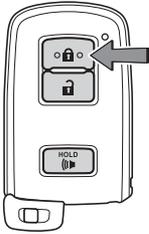

Push

All-door lock

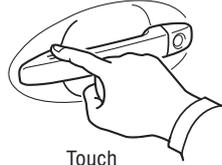


Touch



Carry remote to lock

UNLOCKING OPERATION

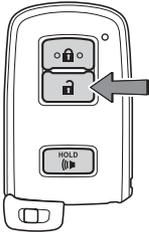

Push

ONCE: Driver door
TWICE: All doors

Driver door unlock*




Grasp



Carry remote to unlock


NOTE: If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.

PANIC BUTTON

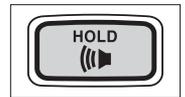

Push and hold

BACK DOOR LOCKING/UNLOCKING

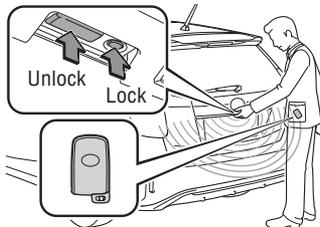


Carry remote to lock/unlock

* Driver door unlocking function can be programmed to unlock driver door only, or all doors. Grasping passenger door handle or pushing unlock button on rear hatch will unlock all doors.

NOTE: Doors may also be locked/unlocked using remote.


Smart key system (and remote entry)

START FUNCTION


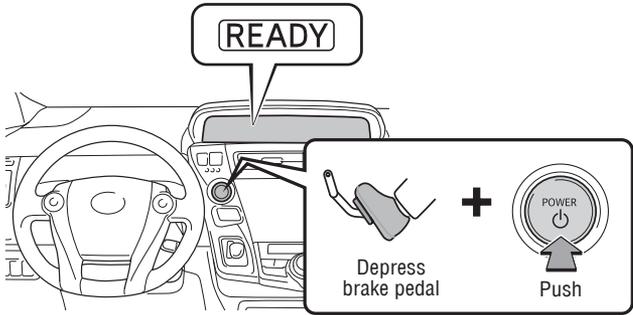


POWER (WITHOUT STARTING HYBRID SYSTEM)

Without depressing the brake pedal, pressing the “POWER” button will change the operation mode in succession from:



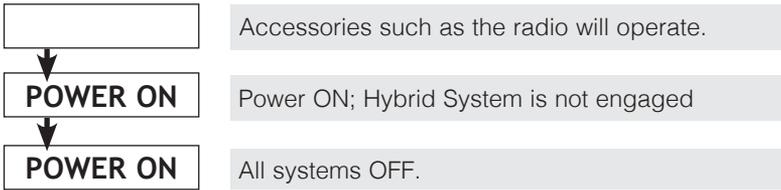


Fuel tank door release and cap

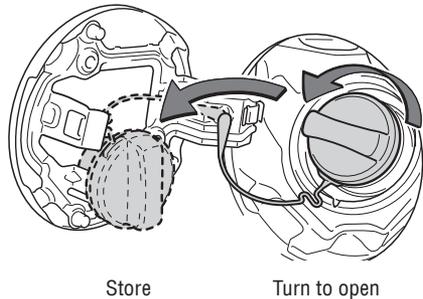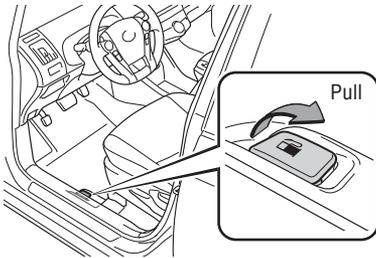


NOTE: Tighten until one click is heard. If the cap is not tightened enough, Check Engine “” indicator may illuminate.


Hood release

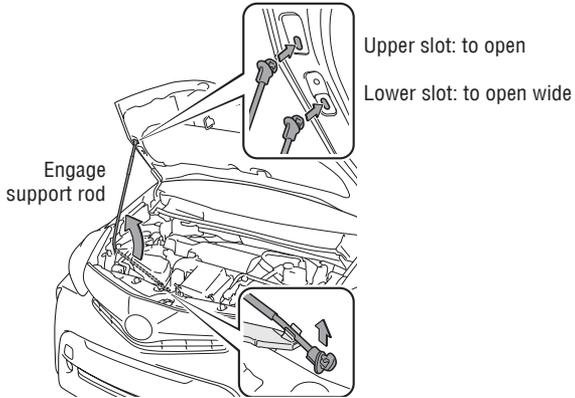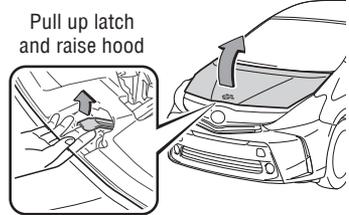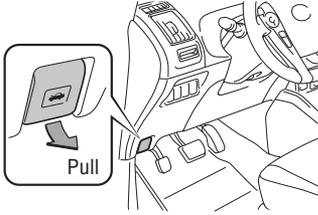

Light control - Instrument panel

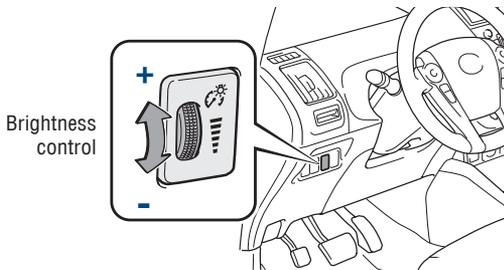

Engine maintenance

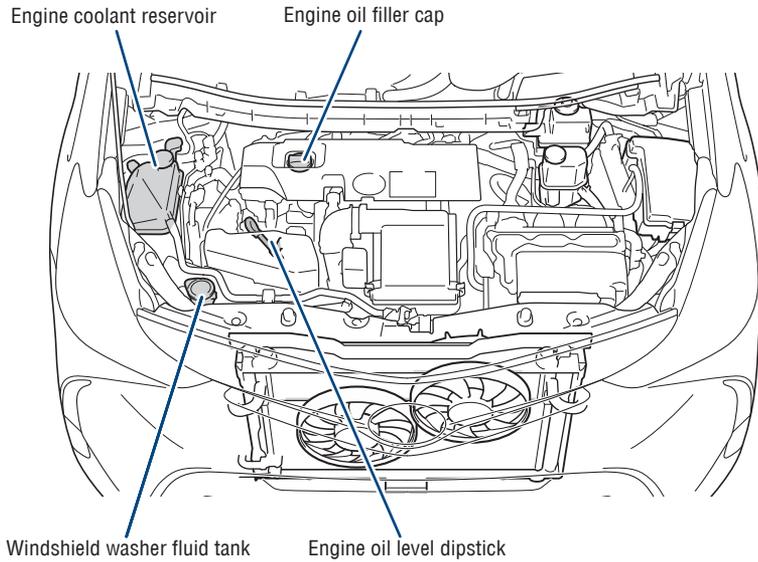

NOTE: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the "Warranty & Maintenance Guide." Maintenance reset light instructions can be found in "Maintenance Requirements Chapter" in Owner's Manual.

FEATURES/OPERATIONS

Hybrid Synergy Drive System


The Hybrid Synergy Drive System utilizes a computer-controlled gasoline engine and electric motor to provide the most efficient combination of power for the vehicle. To conserve energy, when the brakes are applied the braking force generates electricity which is then sent to the traction battery. In addition, the engine shuts off when the vehicle is stopped. The benefits are better fuel economy, reduced vehicle emissions and improved performance.

NOTE: Fuel consumption and energy information of the Hybrid System are shown on the Entune™ Audio system screen or the navigation system.

TIPS FOR IMPROVED FUEL ECONOMY

- Ensure tire pressures are maintained at levels specified in the Owner's Manual.
- When possible, link trips to reduce engine cold starts.
- Avoid driving at speeds that are higher than necessary, especially on the highway.
- When possible, avoid sudden stops to maximize regenerative braking energy.
- Minimize use of the air conditioning.

STARTING YOUR VEHICLE

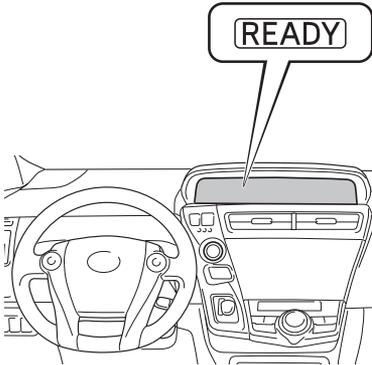

(1) Depress the brake pedal and press the "POWER" switch briefly and firmly.

(2) The "READY" light will blink. After a few seconds, when the light remains steady and a beep sounds, you may begin driving.


Auto lock/unlock

Automatic door locks can be programmed to operate in two different modes, or turned OFF.

- Doors lock when shifting from Park.
- Doors lock when the vehicle speed is approximately 12 mph or higher.
- Doors unlock when shifting into Park.
- Doors unlock when the driver's door is opened within 10 seconds after turning the "POWER" switch OFF.


Refer to the Owner's Manual for more details.

Transmission

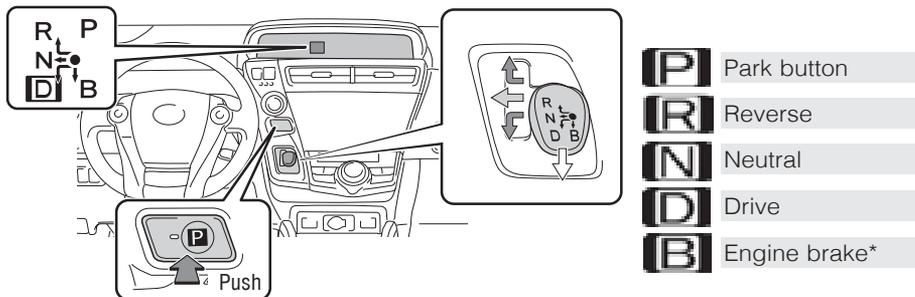

* The engine brake is the equivalent of downshifting. Shift to "B" when engine braking is desired (i.e. downhill driving, coasting to a stop, etc.). While vehicle is stopped, push "P" button to park.


ECO MODE

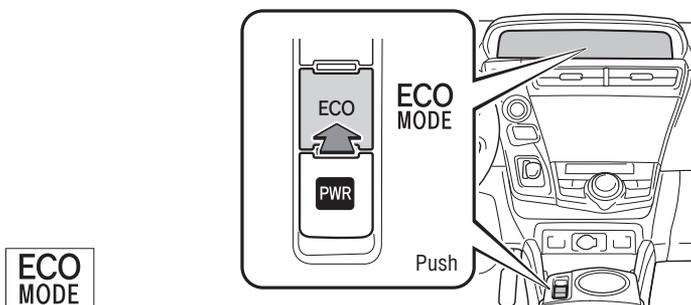

Eco Mode helps achieve low fuel consumption during trips that involve frequent accelerating and braking.

Refer to the Owner's Manual for more details.


POWER MODE

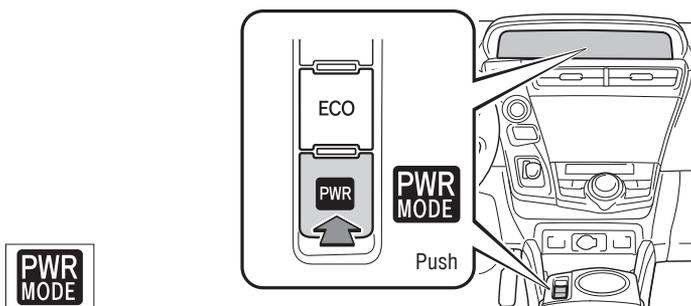

Use when a higher level of response is desired, such as when driving in mountainous regions.

Refer to the Owner's Manual for more details.

EV drive mode

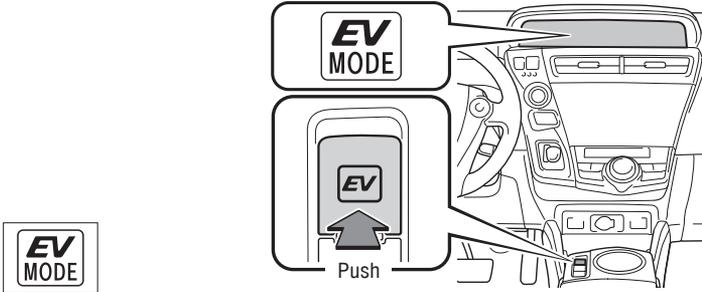


EV drive mode allows the electric motor (traction motor), powered by the hybrid battery (traction battery), to be used to drive the vehicle under certain driving conditions.


Refer to the Owner's Manual for more details.

Tilt and telescopic steering wheel

Lock release lever

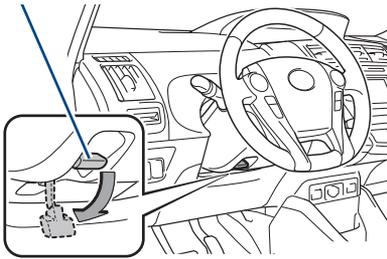

Angle

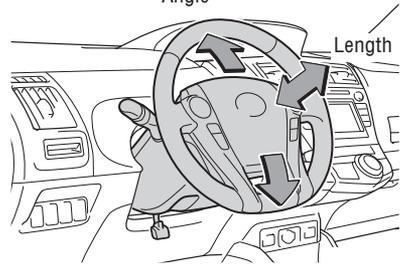


Hold wheel, push lever down, set angle and length, and **return lever**.

NOTE: Do not attempt to adjust while the vehicle is in motion.

Parking brake


Set: Depress
Release: Depress again

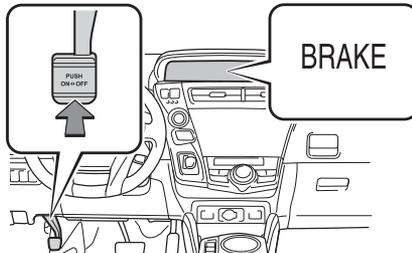


BRAKE

Seat adjustments - Front


Manual seat

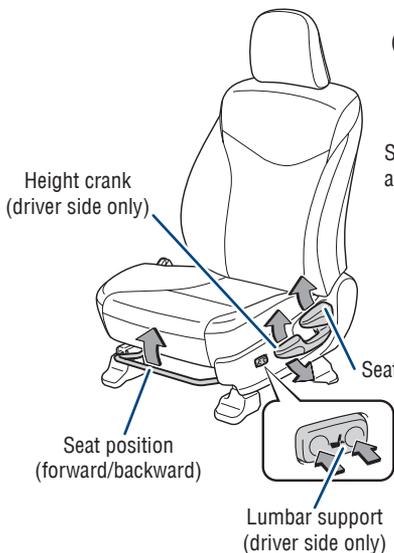


Power seat (driver's side)

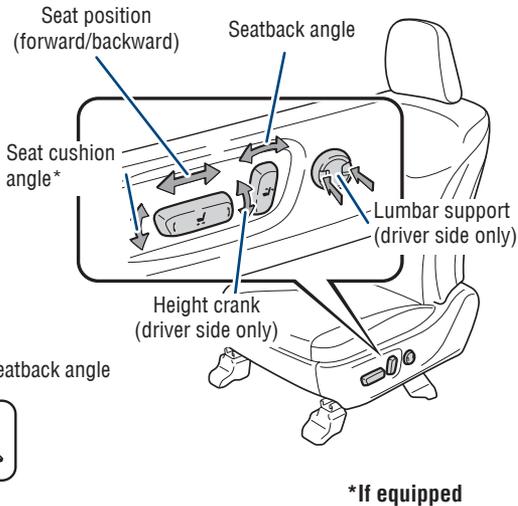


Seats - Head restraints

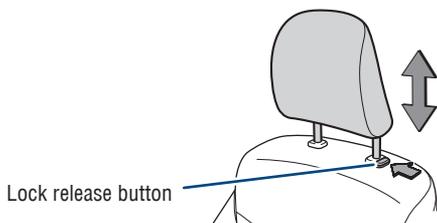

Seats - Flattening front seatbacks

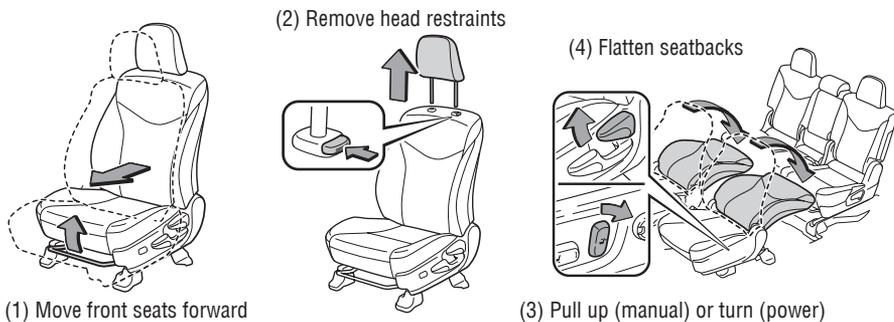


Seat - Folding down rear seat

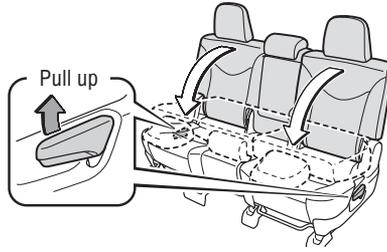


Windshield wipers & washers

FRONT

Type A

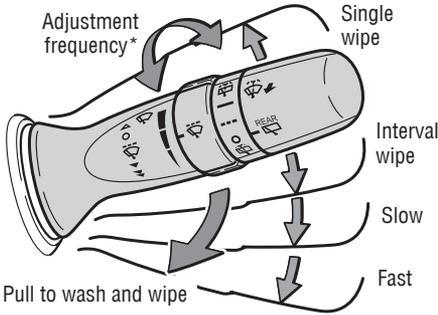


Type B

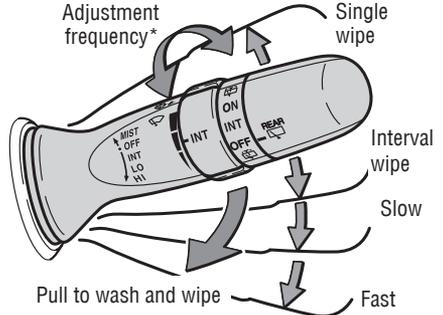


* Intermittent windshield wiper frequency adjustment
Rotate to increase/decrease wipe frequency.

REAR

Type A


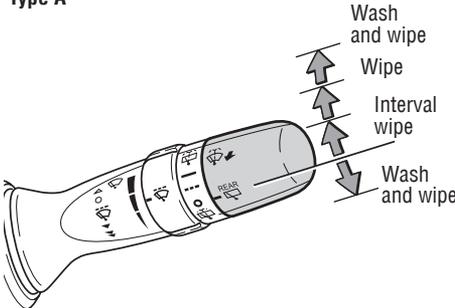


Type A

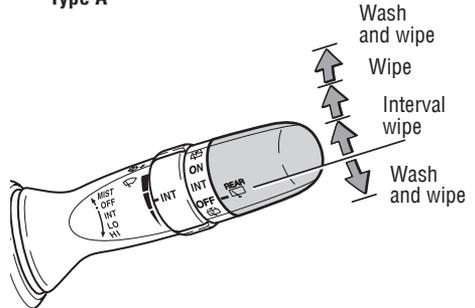

Lights & turn signals


HEADLIGHTS

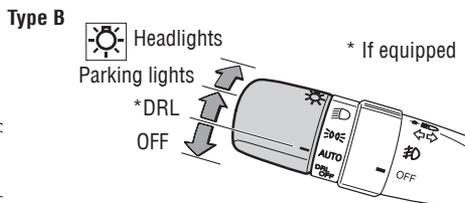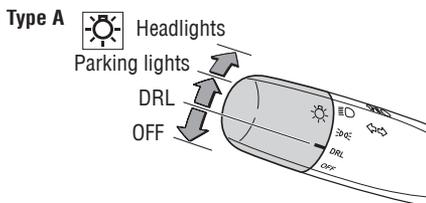


Automatic light cutoff system Automatically turns lights off after a delay of 30 seconds or when lock switch on remote is pushed after all doors are locked.

High beams Push forward to turn high beams ON and pull toward you to flash high beams.

AUTOMATIC HIGH BEAMS (AHB)(IF EQUIPPED)


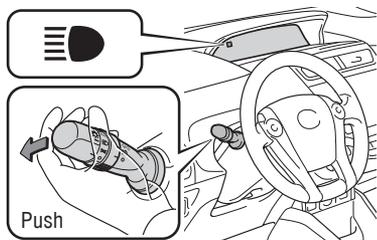


(1) Push the lever away from you with the headlight switch in AUTO or position.

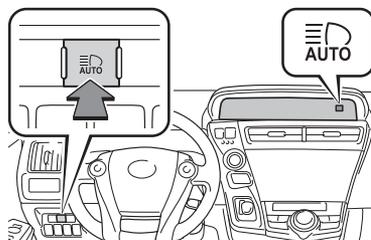


(2) Indicator displays when headlights are turned on automatically and system is active.

FRONT FOG LIGHTS (IF EQUIPPED)

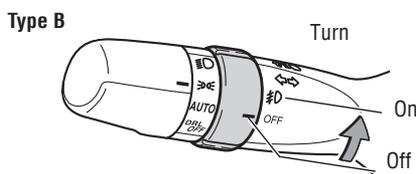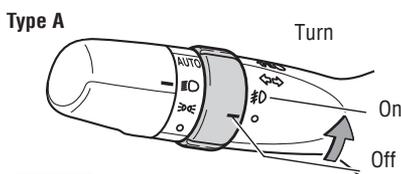


Front fog lights come on only when the headlights are on low beam.

TURN SIGNALS

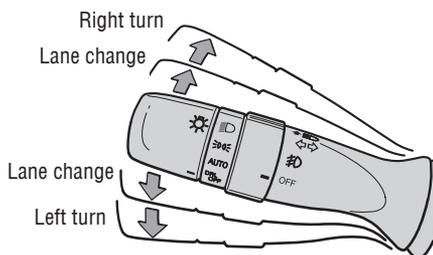


Windows - Power

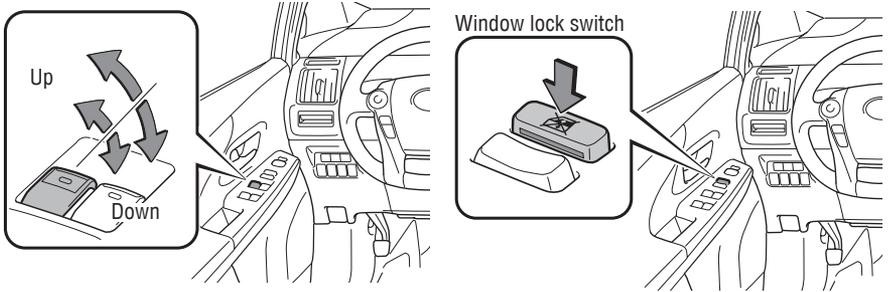



Automatic operation Push the switch completely down or pull it completely up and release to fully open or close. To stop the window partway, operate the switch in the opposite direction.

Window lock switch Deactivates all passenger windows. Driver's window remains operable.

Seat heaters (if equipped)

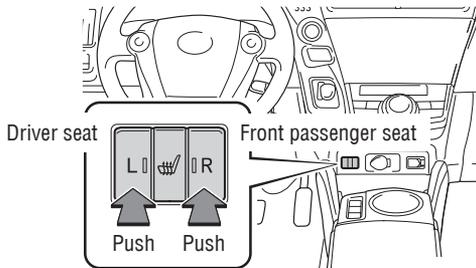


Lane Departure Alert (LDA)(if equipped)

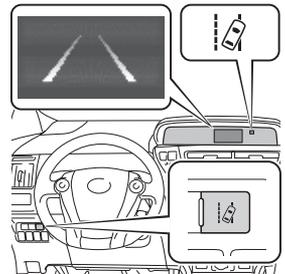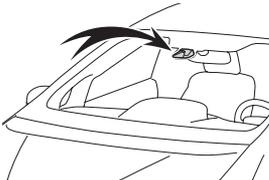

The Lane Departure Alert recognizes the visible lane markers using a camera as a sensor and alerts the driver with beeping and flashing indicators when the vehicle deviates from its lane. Press the LDA switch to activate the system.


Refer to the Owner's Manual for more details on this system before attempting to use it.

Air conditioning/heating

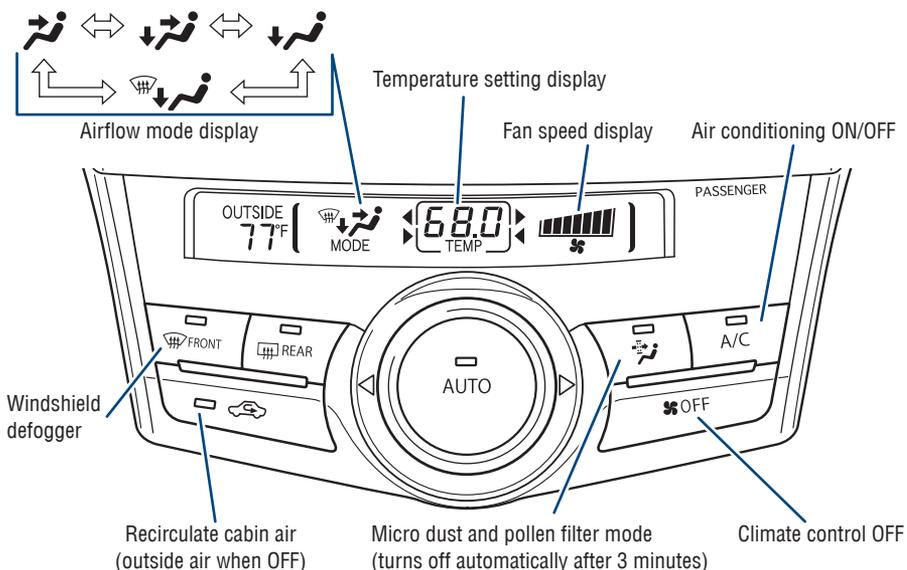

Automatic climate control ON

Adjusting the temperature setting will cause the airflow vents, air intake and fan to adjust automatically.

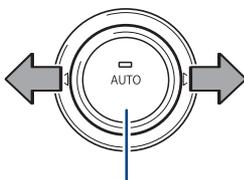

Temperature setting display

Move the dial left and right to select function (a frame displays around selection):

- Fan speed control
- Temperature selector
- Airflow vent

Use “” or “” mode to reduce window fogging (system automatically switches to outside air mode).




Temperature setting display

Adjust/select


FEATURES/OPERATIONS

Audio (if equipped)


Entune™ Audio^{1,2}

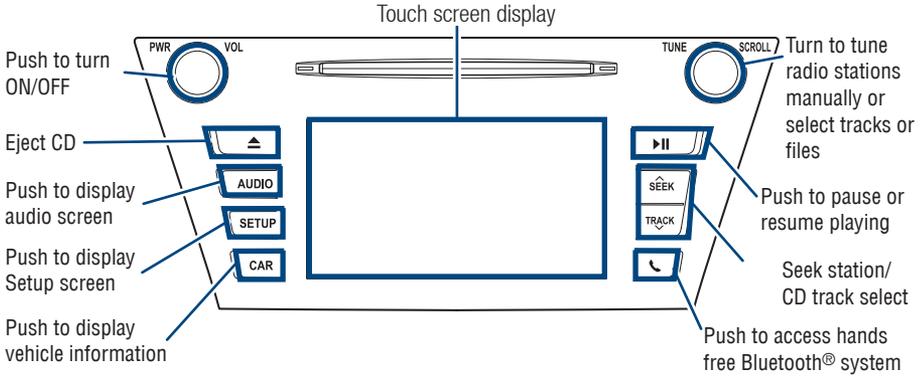

Entune™ Premium Audio with Integrated Navigation and App Suite²

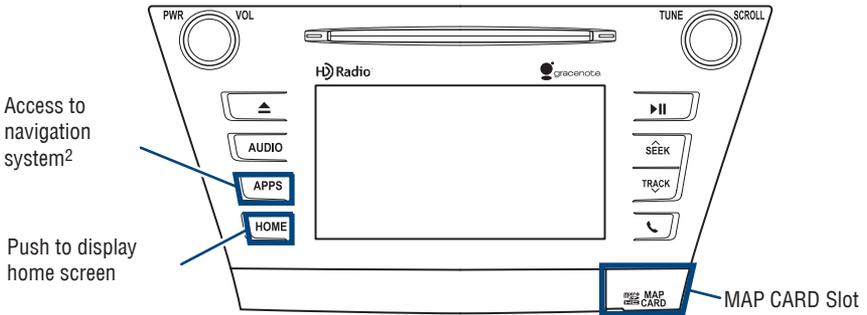

Entune™ Premium JBL® Audio with Integrated Navigation and App Suite²

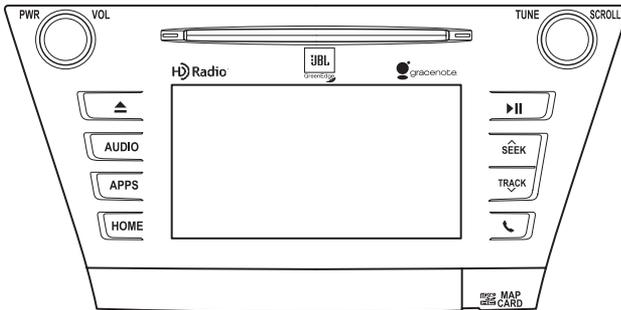

NOTE: Concentrating on the road should always be your first priority while driving. Do not use the Entune system if it will distract you.


¹ Refer to the "OWNER'S MANUAL."

² Refer to the "NAVIGATION SYSTEM OWNER'S MANUAL" and "2017 Entune™ Audio Quick Reference Guide."

Steering wheel switches

Audio/telephone controls


- “+ - ” Volume switch
- “MODE” Push to turn audio ON and select an audio mode.
Push and hold to mute/unmute or pause/resume audio.
- “V A” Use to search within the selected audio medium (radio, CD, etc.).

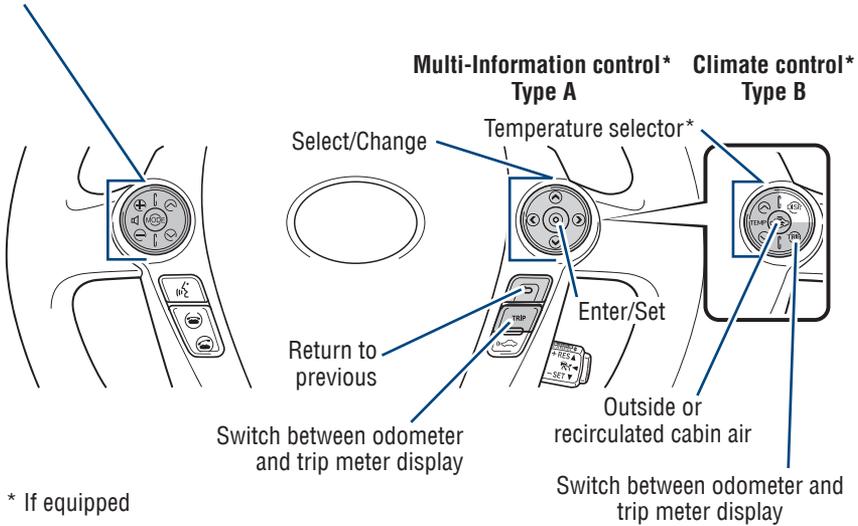

Panoramic roof shades (if equipped)


OPENING OPERATION

Push once to open. To stop partway, press the switch lightly.

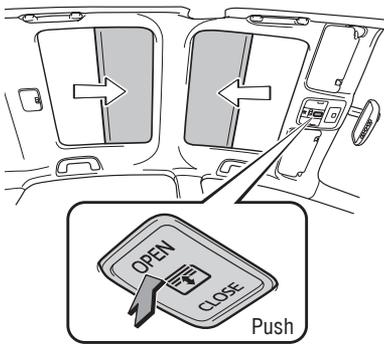


CLOSING OPERATION

Push once to close. To stop partway, press the switch lightly.

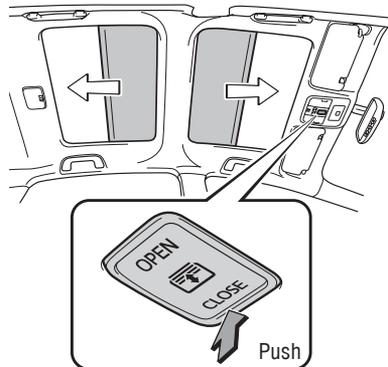


Power outlets

Center console

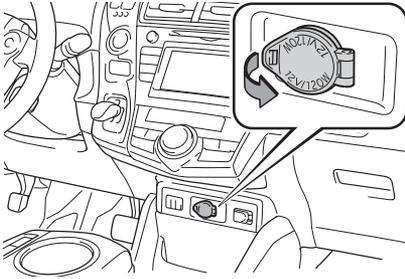


Luggage compartment (if equipped)

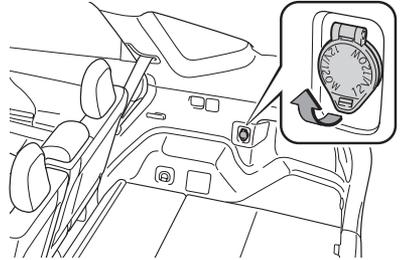

Power switch must be set at "ACCESSORY" or "ON" mode to be used.



Cruise control (if equipped)

TURNING SYSTEM ON/OFF

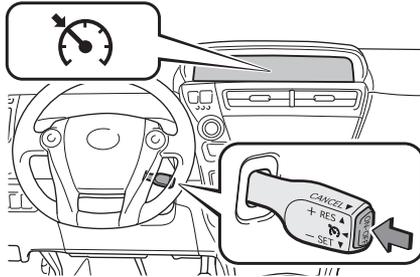

System ON/OFF

FUNCTIONS

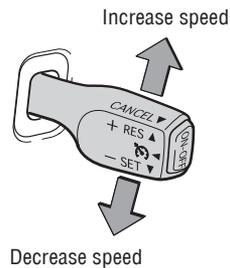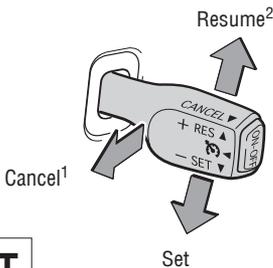

SET


¹ The set speed may also be cancelled by depressing the brake pedal.

² The set speed may be resumed once vehicle speed exceeds 25 mph.

Dynamic Radar Cruise Control (DRCC) (if equipped)


FIXED SPEED MODE

Refer to the Owner's Manual for more details and complete safety precautions before attempting to use "Dynamic Radar Cruise Control."

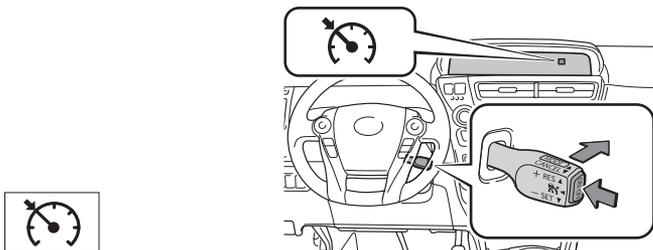

- (1) **To select conventional/fixed speed control** Push the ON-OFF button. Push the lever forward and hold until the "CC" indicator appears.
- (2) **To set, cancel and resume a speed** Refer to instructions in the Cruise Control section.



DISTANCE CONTROL MODE

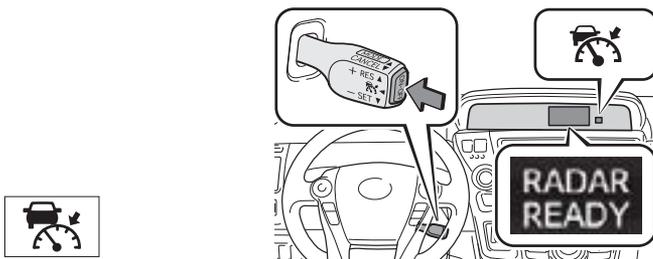

Distance control mode will cruise at a set speed, decelerate to maintain selected distance from a slower vehicle traveling in front of you, and accelerate back up to the selected speed if the vehicle in front of you changes lanes or speeds up.


- (1) **To select distance control mode** Push the ON-OFF button. The "CC" will come on.
- (2) **To set, cancel or resume a speed** Refer to instructions for Cruise Control section.

Preceding vehicle mark

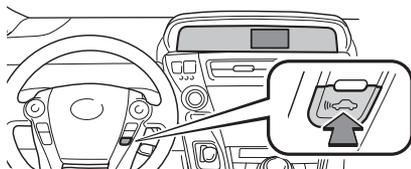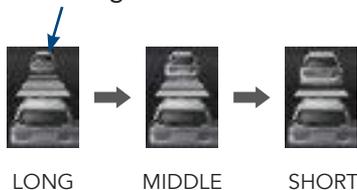

- (3) **To change the vehicle-to-vehicle distance** Push the distance button to cycle through the settings, which will change progressively from LONG to MIDDLE to SHORT.

Trip information display (if equipped)

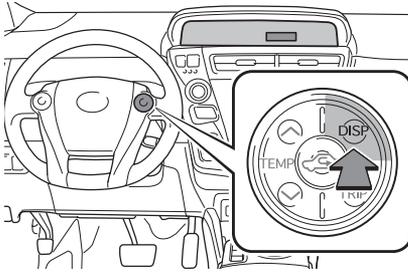


Push “DISP” to change between the following information screens:


- (1) Current fuel consumption
- (2) Average fuel consumption
- (3) Cruising range
- (4) Hybrid System Indicator set up

Telephone controls (Bluetooth®)


Microphone (Type A)

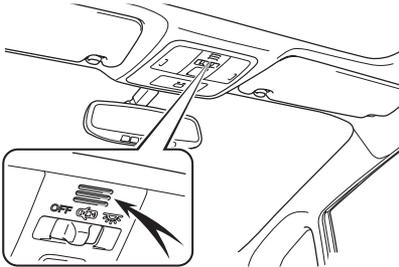


Microphone (Type B)

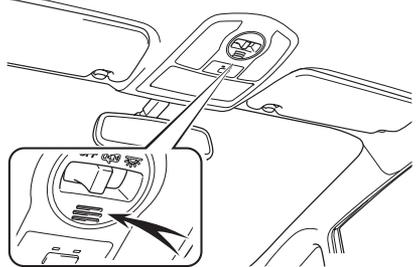

Audio unit

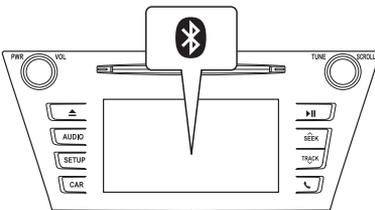

Steering wheel telephone switches

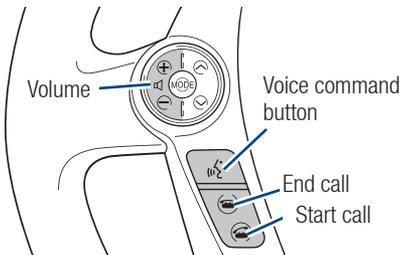


Bluetooth® technology allows dialing or receipt of calls without taking hands from the steering wheel or using a cable to connect the telephone and the system.

Refer to the “Navigation System Owner’s Manual” or the “2017 Entune™ Audio Quick Reference Guide” for more information about phone connections and compatibility.

NOTE: Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.



Clock

- H**- Hour set
- M**- Minute set
- :00**- Round off minutes

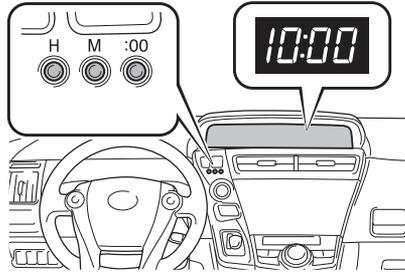

Refer to the Owner's Manual for details on adjusting time.


Hill-start Assist Control (HAC)

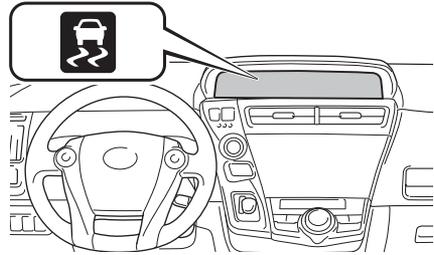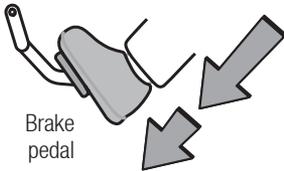

HAC helps prevent rolling backwards on an incline. To engage, push further down on brake pedal while at a complete stop until a beep sounds and slip indicator illuminates. HAC holds for approximately two seconds after releasing brake pedal.

Refer to the Owner's Manual for more details.

Garage door opener (HomeLink®*)(if equipped)

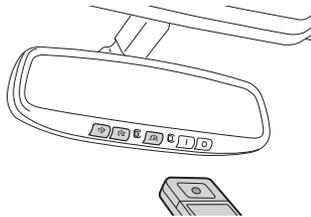

Garage door openers manufactured under license from HomeLink®* can be programmed to operate garage doors, estate gates, security lighting, etc.


Refer to "Garage door opener," Section 6-4 in the Owner's Manual for more details.

For programming assistance, contact HomeLink® at 1-800-355-3515, or visit <http://www.homelink.com>.

* HomeLink® is a registered trademark of Johnson Controls, Inc.

SAFETY AND EMERGENCY FEATURES


Seat belts

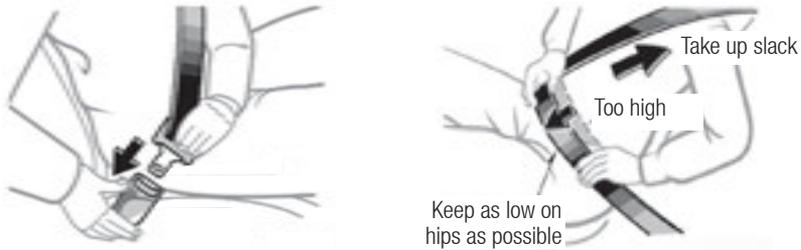

NOTE: If a passenger's seat belt is fully extended, then retracted even slightly, the Automatic Locking Retractor (ALR) will prevent it from being re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the Owner's Manual.

Seat belts - Shoulder belt anchor

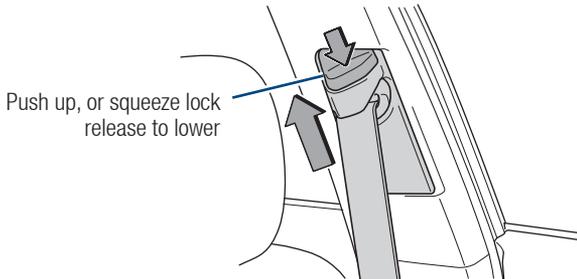

Tire Pressure Monitoring (warning) System (TPMS)


If the Tire Pressure Warning indicator “” illuminates without blinking, adjust tire pressures to factory-specified levels.* The light will turn off after a few minutes. The warning light may come on due to temperature changes or changes in tire pressure from natural air leakage.

If the tire pressure indicator flashes for more than 60 seconds and then remains on, take the vehicle to your local Toyota dealer.

Refer to the Owner's Manual for more details.


* Refer to load label on door jamb or the Owner's Manual for tire inflation specifications.

Door locks

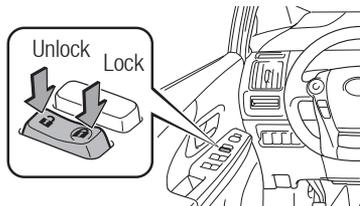

Doors - Child safety locks


Rear door

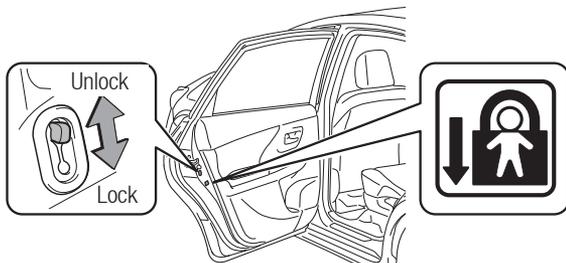


Moving the lever downward will allow the door to be opened only from the outside.

Spare tire & tools

TOOL LOCATION

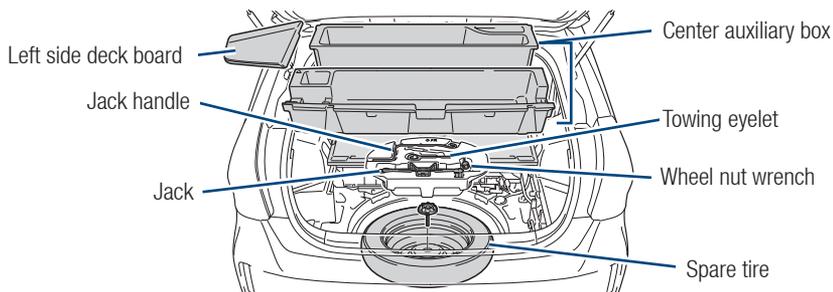

REMOVING THE SPARE TIRE

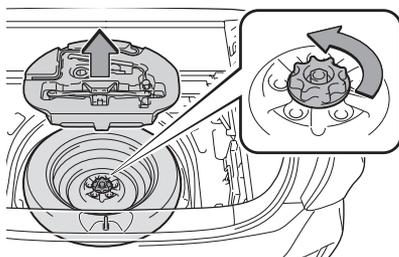

Refer to the Owner's Manual for tire changing and jack positioning procedures.

SAFETY AND EMERGENCY FEATURES

Star Safety System™

All new Toyota vehicles come standard with the Star Safety System™, which combines Vehicle Stability Control (VSC), Traction Control (TRAC), Anti-lock Braking System (ABS), Electronic Brake-force Distribution (EBD), Brake Assist (BA) and Smart Stop Technology (SST).

Refer to the Owner's Manual for more details and important information on limitations to these systems.

ENHANCED VEHICLE STABILITY CONTROL (VSC)

Enhanced Vehicle Stability Control provides cooperative control of the ABS, TRAC, VSC and EPS.

Enhanced VSC helps to maintain directional stability when loss of traction occurs during a turn.

TRACTION CONTROL (TRAC)

VSC helps prevent loss of traction during cornering by reducing Hybrid System output, and Traction Control helps maintain traction on loose gravel and wet, icy, or uneven surfaces by applying brake force to the spinning wheel(s).

Toyota's TRAC sensors are activated when one of the drive wheels starts to slip. TRAC limits Hybrid System output and applies the brakes to the spinning wheel. This transfers power to the wheels that still have traction to help keep you on track.

ANTI-LOCK BRAKE SYSTEM (ABS)

ABS helps prevent brakes from locking up by "pulsing" brake pressure to each wheel. This limits brake lockup and helps provide directional control for the current road conditions.

Toyota's ABS sensors detect which wheels are locking up and limits wheel lockup by "pulsing" each wheel's brakes independently. Pulsing releases brake pressure repeatedly for fractions of a second. This helps the tires attain the traction that current road conditions will allow, helping you to stay in directional control.

ELECTRONIC BRAKE FORCE DISTRIBUTION (EBD)

Toyota's ABS technology has Electronic Brake-force Distribution (EBD) to help maintain control and balance when braking. Abrupt stops can cause a vehicle to tilt forward, reducing the braking power of the rear wheels. EBD responds to sudden stops by redistributing brake force to enhance the braking effectiveness of all four wheels.

BRAKE ASSIST (BA)

Brake Assist is designed to detect sudden or "panic" braking, and then add braking pressure to help decrease the vehicle's stopping distance. When there's only a split second to react, Brake Assist can add additional brake pressure more quickly than just the driver alone can.

SMART STOP TECHNOLOGY (SST)

Smart Stop Technology automatically reduces driving torque when the accelerator and brake pedals are pressed simultaneously under certain conditions.



Floor mat installation

There are two types of Toyota floor mats: carpeted and all-weather. Each vehicle has model-specific floor mats. Installation is easy.

To keep your floor mat properly positioned, follow these steps:

Only use Toyota floor mats designed for your specific model.

Use only one floor mat at a time, using the retaining hooks to keep the mat in place. Install floor mats right side up.

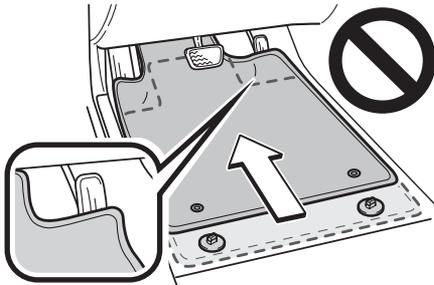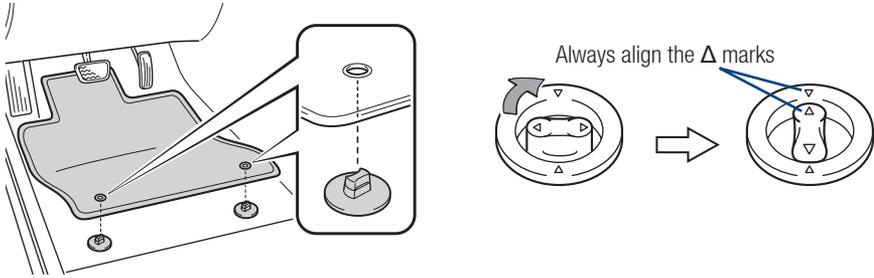

BLUETOOTH® DEVICE PAIRING SECTION


Do not attempt the Bluetooth® Pairing process while driving.

To begin the Bluetooth® Pairing process, press the HOME button on the faceplate of your Toyota Vehicle Entune™ Multimedia Head Unit.¹


Bluetooth® Pairing for Android phone and Entune™ touch screen system

Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all Android mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.²


Initiate Bluetooth® on your Android®

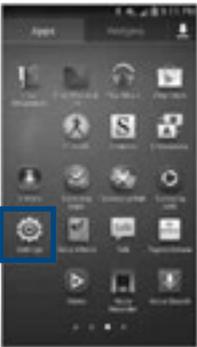

STEP 1
From your **APPS SCREEN**, select **SETTINGS**.

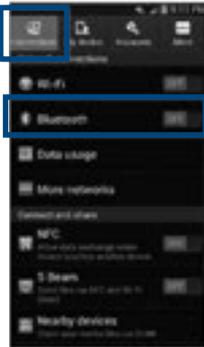

STEP 2
Select **CONNECTIONS** and select **BLUETOOTH**.

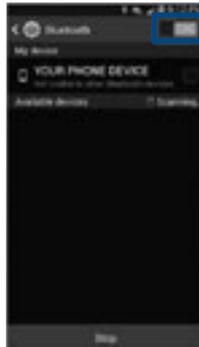

STEP 3
Ensure **BLUETOOTH** is **ON**.



STEP 4
Select **YOUR PHONE DEVICE** to make it discoverable.

Phone will seek out Bluetooth devices while remaining discoverable.



STEP 5

While your Android device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

¹ To determine which head unit is installed in your vehicle, refer to the Audio section in this guide. Entune™ Premium Audio screens are shown in this section. Screens and features may vary by Entune™ system.

² Some Android devices may have slightly different SETTINGS screen layout depending on manufacturer of device and Android OS version.

BLUETOOTH® DEVICE PAIRING

Initiate Bluetooth® on your Entune™ Multimedia Head Unit

Once you have Bluetooth enabled on your phone and ready to pair, you will need to initiate Bluetooth on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.



STEP 6


On your Toyota Vehicle Entune Multimedia Head Unit, Select **SETUP BUTTON** on the Home Screen.



STEP 7

Select **BLUETOOTH**.


Image shown is a sample image, features may vary.

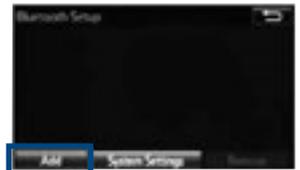

STEP 8

Select **ADD**, to add your phone device.

For Entune™ Audio System, press the **SETUP BUTTON** on the faceplate to access the Setup Screen.

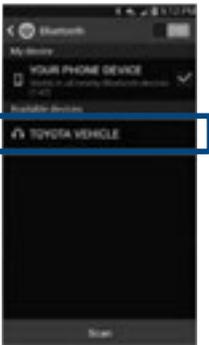

STEP 9

Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.

You may need to enter the provided Bluetooth PIN on your phone.



STEP 10



Your smartphone is now paired with Entune.



STEP 11

Once paired, Entune will attempt to connect audio and contacts on your phone.

Initiate Bluetooth® on your Entune™ Multimedia Head Unit

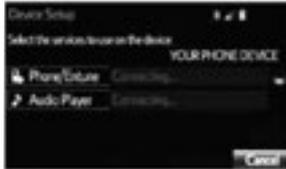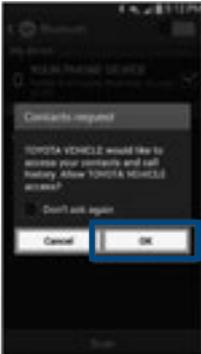

STEP 12

Using your smartphone, you will need to allow Entune access to your messaging and contacts.

It is recommended to check the "Don't ask again" box, so as not to have to press OK every time the phone makes a Bluetooth connection with your Toyota.

STEP 13

A confirmation will appear once your phone has been paired and connected.

Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:
www.toyota.com/connect

Your Toyota Owner's Manual
Located in the vehicle glovebox

Toyota Customer
Experience Center
(800) 331-4331

Disclosures

This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.

1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
3. Android is a trademark of Google Inc.
4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.

Bluetooth® Pairing for iPhone and Entune™ touch screen system

****Do not attempt the Bluetooth® Pairing process while driving.****

Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all iPhone mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.

Initiate Bluetooth® on your iPhone®



STEP 1

From the **HOME SCREEN**, select **SETTINGS**.



STEP 2

Select **BLUETOOTH**.



STEP 3

Ensure **BLUETOOTH** is **ON**.



STEP 4

Your iPhone will seek out Bluetooth devices while remaining discoverable.



STEP 5

While your iPhone device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

Initiate Bluetooth® on your Entune™ Multimedia Head Unit

Once you have Bluetooth enabled on your phone and ready to pair, you will need to initiate Bluetooth on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.



STEP 6

On your Toyota Vehicle Entune Multimedia Head Unit, Select **SETUP BUTTON** on the Home Screen.

For Entune™ Audio System, press the **SETUP BUTTON** on the faceplate to access the Setup Screen.



STEP 7

Select **BLUETOOTH**.

Image shown is a sample image, features may vary.



STEP 8

Select **ADD**, to add your phone device.



STEP 9


Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.

You may need to enter the provided Bluetooth PIN on your phone.



STEP 10


Your smartphone is now paired with Entune.

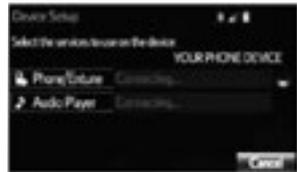

STEP 11

Once paired, Entune will attempt to connect audio and contacts on your phone.

BLUETOOTH® DEVICE PAIRING

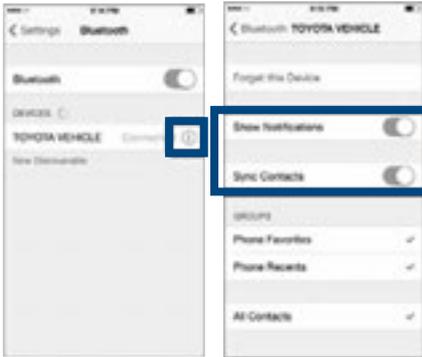

STEP 12

Using your smartphone, you may need to allow Entune access to your messaging and contacts.

Only current iPhone text messages can be viewed on the head unit. iPhone does not allow text message reply.



STEP 13

A confirmation will appear once your phone has been paired and connected.

Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:
www.toyota.com/connect

Your Toyota Owner's Manual
Located in the vehicle glovebox

Toyota Customer
Experience Center
(800) 331-4331

Disclosures

This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.

1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
3. Android is a trademark of Google Inc.
4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.

Bluetooth® Pairing for Windows Phone and Entune™ touch screen system

****Do not attempt the Bluetooth® Pairing process while driving.****


Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all Windows Phone mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.

Initiate Bluetooth® on your Windows Phone®




STEP 1

From your APP LIST, select **SETTINGS**.

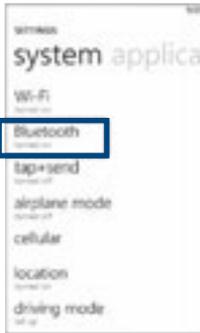


STEP 2

Select **BLUETOOTH**.

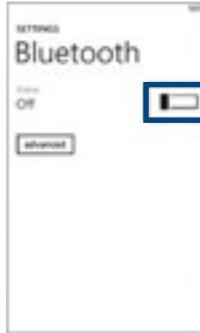

STEP 3

Ensure **BLUETOOTH** is **ON**.

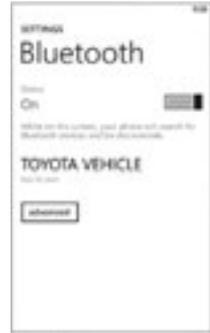

STEP 4

Phone will seek out Bluetooth devices while remaining discoverable.




STEP 5

While your iPhone device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

BLUETOOTH® DEVICE PAIRING

Initiate Bluetooth® on your Entune™ Multimedia Head Unit

Once you have Bluetooth® enabled on your phone and ready to pair, you will need to initiate Bluetooth® on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.

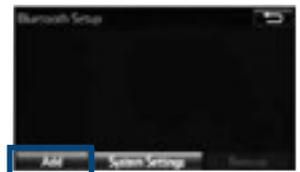

STEP 6

On your Toyota Vehicle Entune Multimedia Head Unit, Select **SETUP BUTTON** on the Home Screen.

STEP 7

Select **BLUETOOTH**.

Image shown is a sample image, features may vary.

STEP 8

Select **ADD**, to add your phone device.

For Entune™ Audio System, press the **SETUP BUTTON** on the faceplate to access the Setup Screen.



STEP 9

Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.

STEP 10

Your smartphone is now paired with Entune.

STEP 11

Once paired, Entune will attempt to connect audio and contacts on your phone.

You may need to enter the provided Bluetooth PIN on your phone.

Initiate Bluetooth® on your Entune™ Multimedia Head Unit



STEP 12

Using your smartphone, you may need to allow Entune access to your contacts.



STEP 13

A confirmation will appear that your phone has been paired and connected.

Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:
www.toyota.com/connect

Your Toyota Owner's Manual
Located in the vehicle glovebox

Toyota Customer
Experience Center
(800) 331-4331

Disclosures

This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.

1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
3. Android is a trademark of Google Inc.
4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.



CUSTOMER EXPERIENCE CENTER
1-800-331-4331

