

86
2 0 1 8

QUICK REFERENCE GUIDE

2018

Toyota 86

This Quick Reference Guide is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The Quick Reference Guide is not intended as a substitute for the Owner's Manual located in your vehicle's glove box. We strongly encourage you to review the Owner's Manual and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor North America, Inc. wish you many years of satisfied driving in your new 86.

A word about safe vehicle operations

This Quick Reference Guide is not a full description of 86 operations. Every 86 owner should review the Owner's Manual that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the Owner's Manual. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this Quick Reference Guide is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

INDEX

OVERVIEW

Engine maintenance	8
Fuel tank door release & cap	7
Hood release	8
Indicator symbols	5
Instrument cluster	4
Instrument panel	2-3
Instrument panel light control	8
Keyless (and remote) entry	6
Smart Key system	7

FEATURES & OPERATIONS

Air conditioning/heating	18
Automatic transmission	9
AUX/USB port	17
Clock	16
Cruise control	10
Cup/bottle holders	15
Door locks	16
Driving modes	10-11
Hill-start Assist Control (HAC)	11
Lights & turn signals	12
Manual transmission	9
Multi-Information Display (MID)	14
Parking brake	9
Power outlets	17
Rear view monitor system	19
Seat adjustments-Front	13
Seats-Fold down rear seats	13
Seats-Head restraints	12
Steering lock release	19
Steering wheel switches	15
Tilt & telescopic steering wheel	16
Trunk release	16
Windows	13
Windshield wipers & washers	12



SAFETY & EMERGENCY FEATURES

Floor mat installation	23
Seat belts	20
Spare tire & tools	21
Star Safety System™	22-23
Tire Pressure Monitoring (warning) System (TPMS)	20


PAIRING BLUETOOTH® PHONE FOR THE FIRST TIME

24-25

Instrument panel

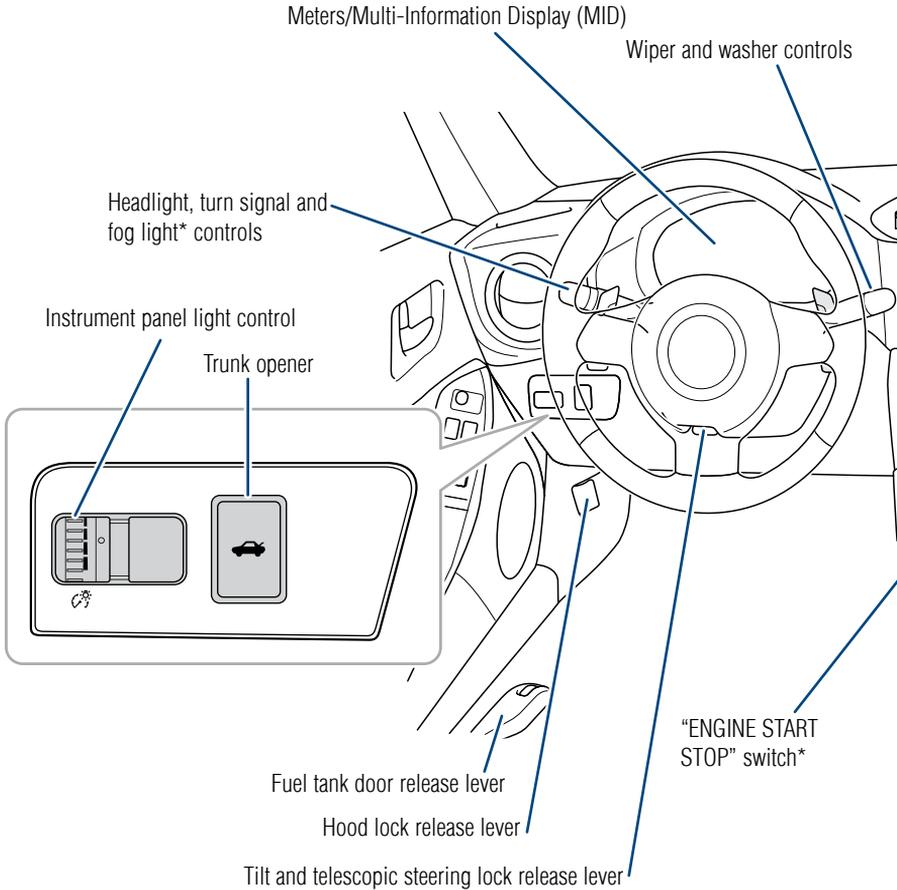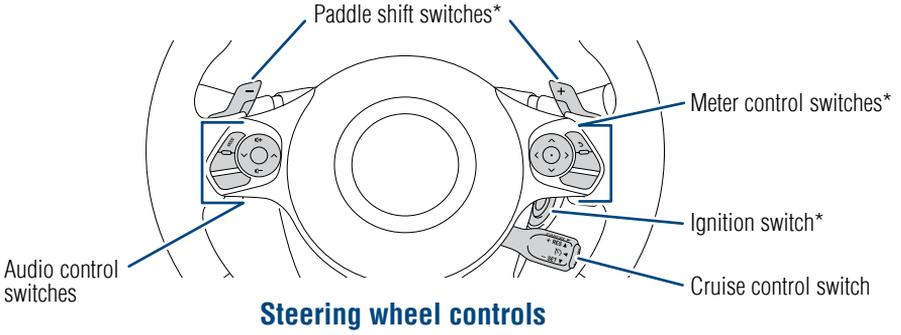


* If equipped

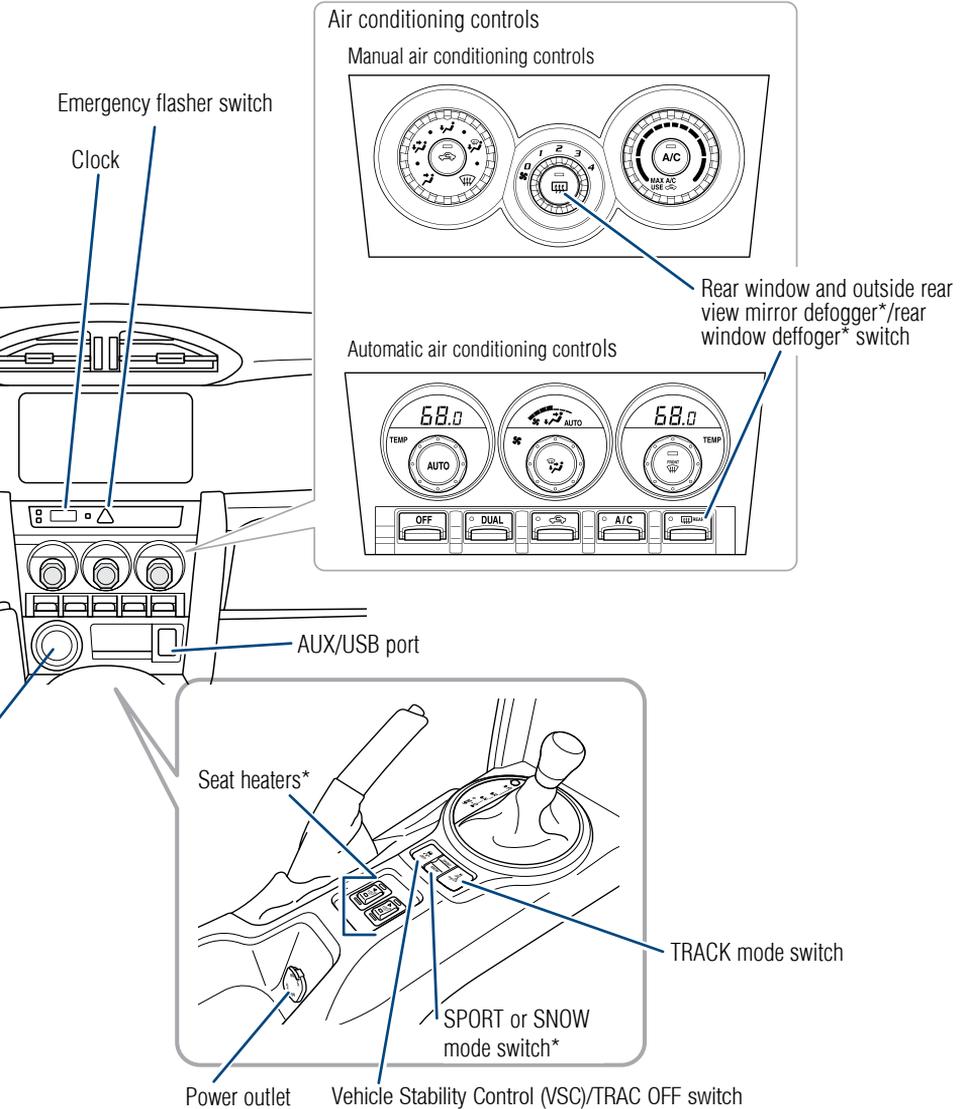


Instrument cluster

Monochrome display

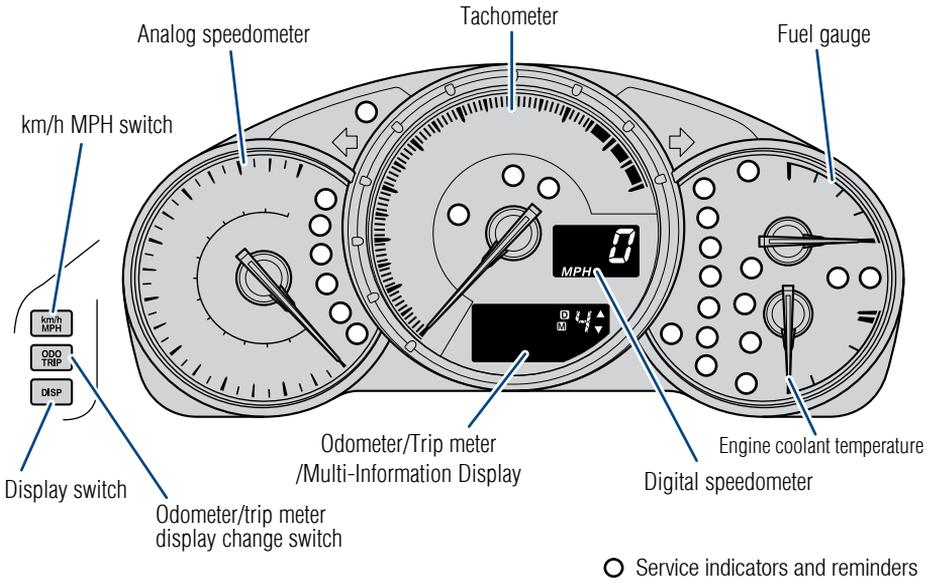

Color display

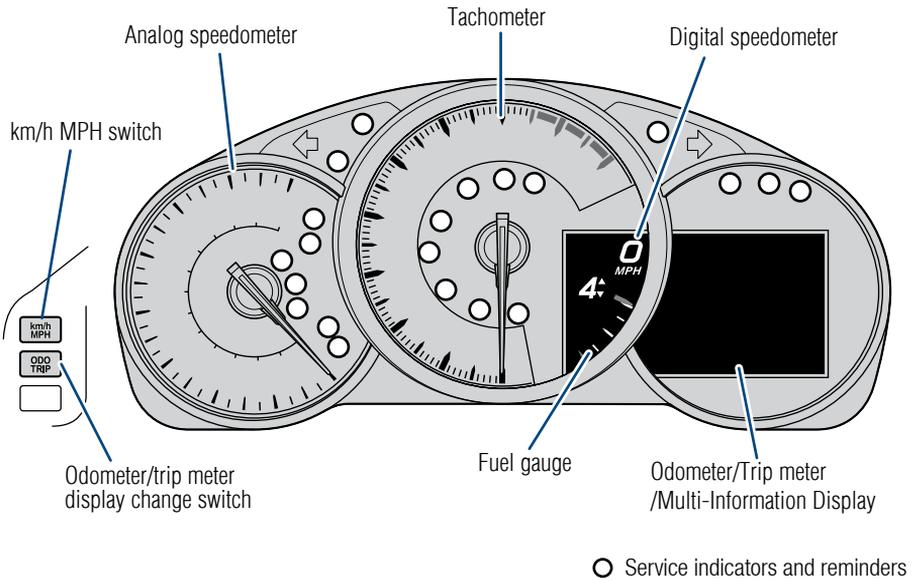

Indicator symbols

For details, refer to "Indicators and warning lights," Section 2-2, 2018 Owner's Manual.



AIR BAG ON/OFF indicator



Airbag SRS warning¹



Anti-lock Brake System (ABS) warning¹



Automatic headlight leveling system warning



Automatic Transmission fluid temperature warning⁵



Brake system warning¹



Charging system warning¹



SET Cruise control indicators²



Electric power steering system warning¹



Front fog light indicator⁵



Fuel tank door position



Headlight high beam indicator



Hill-start assist control ON indicator



Low engine coolant temperature indicator⁵



Low engine oil pressure warning¹



Low fuel level warning¹



Low outside temperature indicator⁵



Low Tire Pressure Warning¹



Malfunction/Check Engine indicator¹



Master warning^{1,5}



Open door warning⁵



REV (engine RPM) indicator



Seat belt reminder (alarm will sound if speed is over 12 mph)



Security indicator



Shift position and shift range indicator^{3,5}



Shift position indicator^{4,5}



Shift-up indicator^{4,5}



Slip indicator¹



Smart Key system indicator⁵



SNOW indicator^{3,5}



SPORT indicator^{3,5}



TRACK mode indicator



TRAC OFF indicator¹



Turn signal indicator



Upshift/downshift indicator^{3,5}



Vehicle Stability Control OFF indicator¹

¹ If indicator does not turn off within a few seconds of starting engine, there may be a malfunction. Have vehicle inspected by your Toyota dealer.

² If these lights come on in yellow, refer to "Cruise control" Section 2-4, 2018 Owner's Manual.

³ Vehicle with an automatic transmission.

⁴ Vehicle with a manual transmission.


⁵ If equipped.

OVERVIEW

Keyless (and remote) entry

UNLOCKING OPERATION

Smart Key

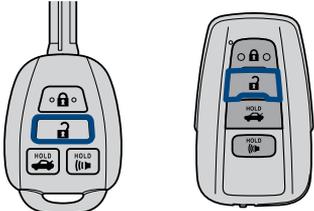

Carry remote
Smart Key feature



Push
ONCE: Driver door
TWICE: All doors

Driver door unlock*




Grasp

NOTE: If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.

* Driver door unlocking function can be programmed to unlock driver door only, or all doors. Grasping passenger door handle will unlock all doors.

LOCKING OPERATION

Smart Key

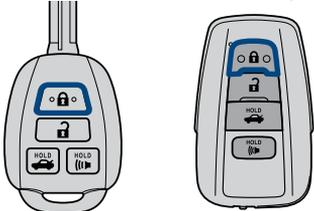

Carry remote
Smart Key feature



Push


All-door lock



Touch

TRUNK LID


Smart Key

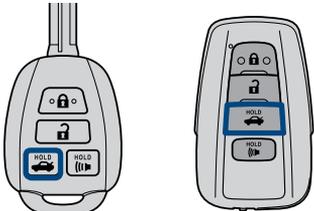

HOLD




Push and hold

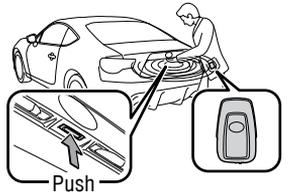

Push

PANIC BUTTON

Smart Key

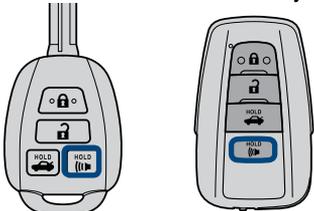

HOLD




Push and hold



Smart Key system (if equipped)

START FUNCTION

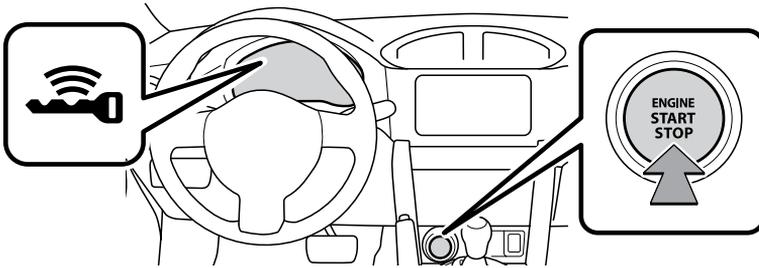

NOTE: Carry the electronic key to enable start function. Gear shift lever must be in P and brake pedal depressed. (Automatic transmission)/Gear shift lever must be in N and clutch pedal depressed. (Manual transmission)

POWER (WITHOUT STARTING ENGINE)

Without depressing the brake pedal (automatic transmission)/ the clutch pedal (manual transmission), pressing the engine switch will change the operation mode in succession from:




Accessories such as the radio will operate.

Power ON; the engine not running.


All systems OFF.

Fuel tank door release & cap

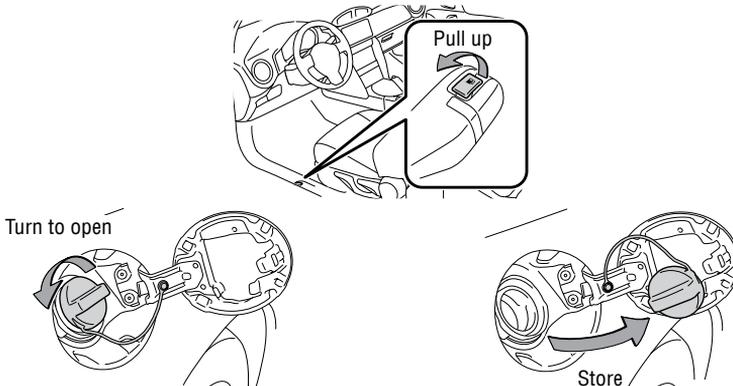


NOTE: Tighten until one click is heard. If the cap is not tightened enough, Check Engine “” indicator may illuminate.

Hood release

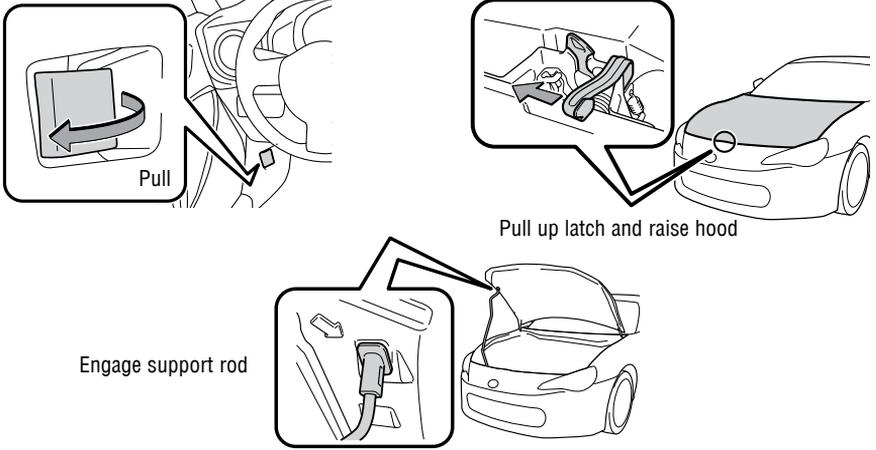


Engine maintenance

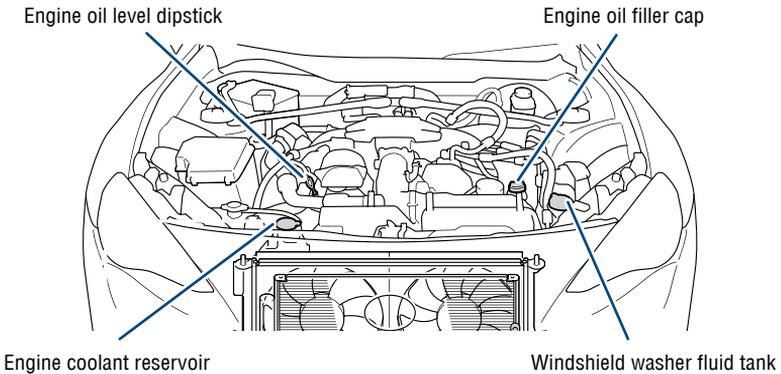


NOTE: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the "Warranty Maintenance Guide."

Instrument panel light control

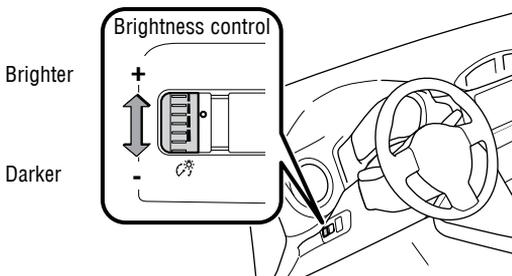

Automatic transmission (if equipped)

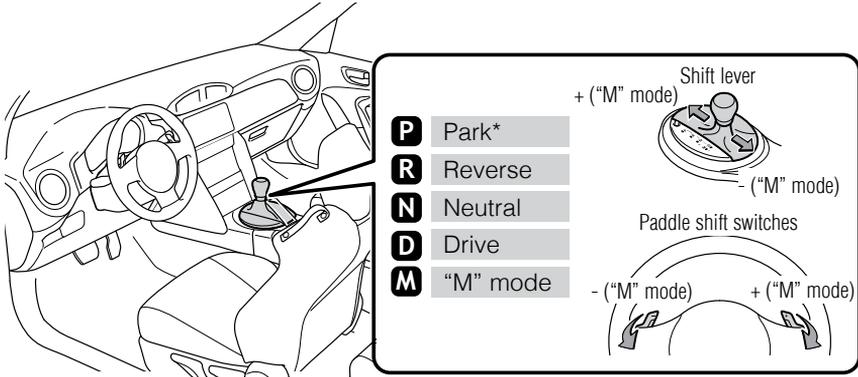

* The ignition switch must be "ON" and the brake pedal depressed to shift from Park.


"M" (MANUAL) MODE

Shift the shift lever to "M" position from "D" position.


- +: Upshifting
- : Downshifting

Refer to the Owner's Manual for more details.

Manual transmission (if equipped)

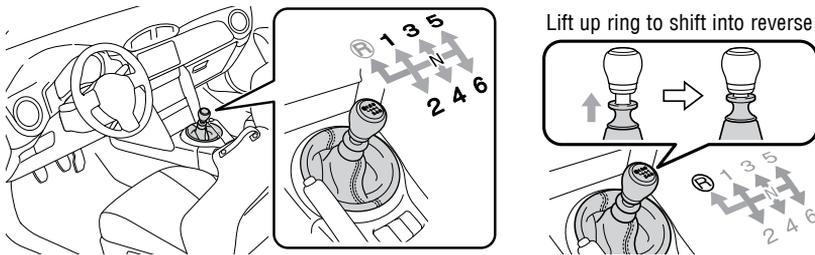


Parking brake

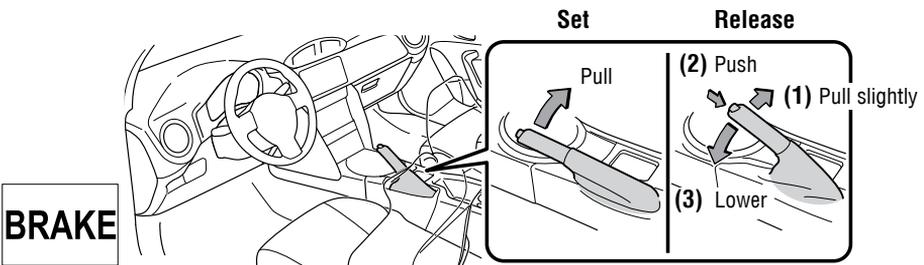


FEATURES & OPERATIONS

Cruise control

TURNING SYSTEM ON/OFF

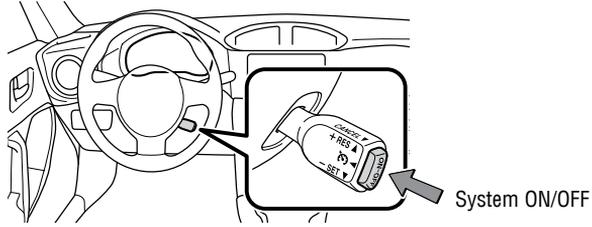


FUNCTIONS

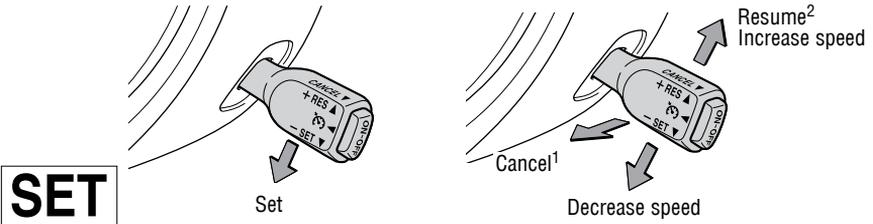

- SET**
- ¹ The set speed may also be cancelled by depressing the brake pedal.
 - ² The set speed may be resumed once vehicle speed exceeds 25 mph.

Driving modes

AUTOMATIC TRANSMISSION (IF EQUIPPED)

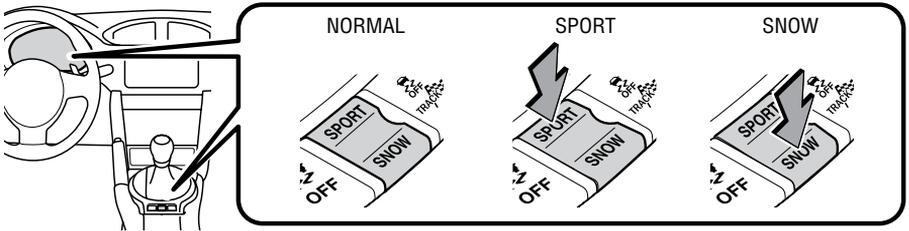

Normal mode

Sport mode


Use for sporty driving or when driving in mountainous regions with lots of curves. Press this switch and the "SPORT" indicator illuminates.

Snow mode

Use for accelerating and driving on slippery road surfaces such as snow. Press this switch and the "SNOW" indicator illuminates.

To cancel SPORT mode or SNOW mode, press the same side of the switch again and it returns to normal driving mode.

Refer to the Owner's Manual for more details.

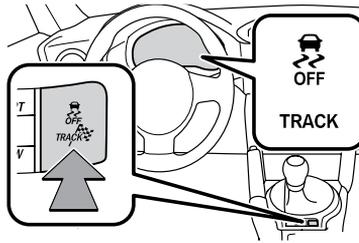

There are two types of control modes to accommodate various driving preferences.

Normal mode


Use for secure and smooth normal driving.

“TRACK” mode

Use for the feeling of added control and maneuverability. Press this switch and the “TRACK” and “VSC OFF” indicators illuminate. To cancel and go back to normal mode while in “TRACK” mode, press “TRACK” or “VSC OFF” switch again.

Refer to the Owner’s Manual for more details.

Hill-start Assist Control (HAC)

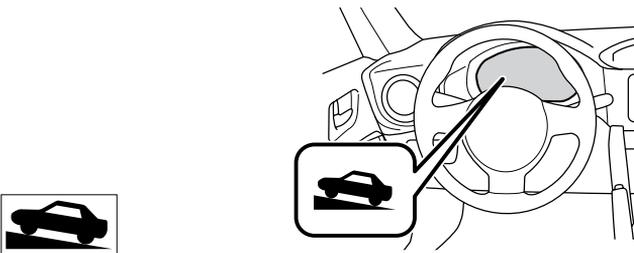

Hill-start assist control (HAC) helps to maintain braking force to assist starting off forward while facing uphill or starting off backward while facing downhill. As HAC is initially disabled, enable the system to make it operable. The enabled/disabled setting will be maintained the next time the engine is started.


The hill-start assist control ON indicator will be illuminated when system is enabled and flash while the system is operating.

To enable system, refer to the Owner’s Manual for limitations and more information.

FEATURES & OPERATIONS

Lights & turn signals


HEADLIGHTS

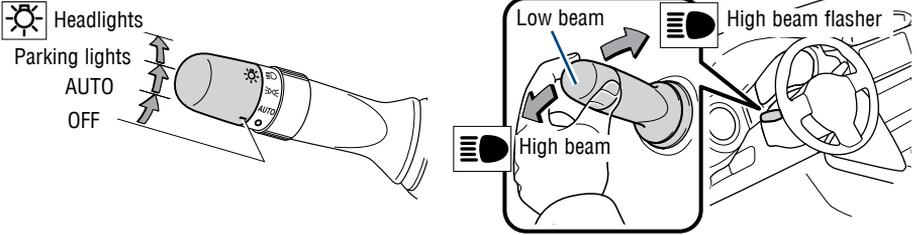



Daytime Running Light system (DRL) Automatically turns on the headlights to make vehicle more visible to other drivers. Not for use at night.

Automatic light cut off system Automatically turns lights off after 30-second delay, or lock switch on remote may be pushed afterlocking.

TURN SIGNALS

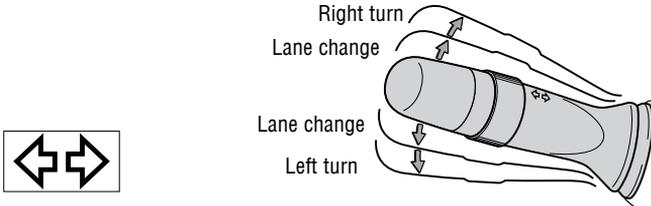


Windshield wipers & washers

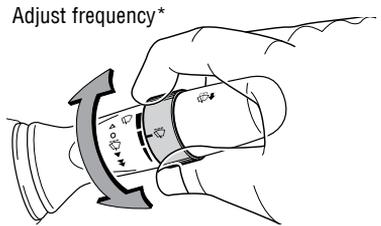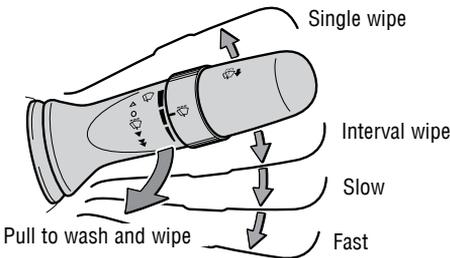


* **Intermittent windshield wiper frequency adjustment.** Rotate to increase/decrease wipe frequency.

For more details, refer to the Owner's Manual.


Seats-Head restraints

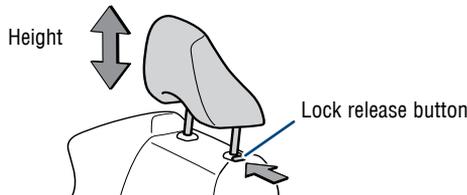

Seat adjustments-Front

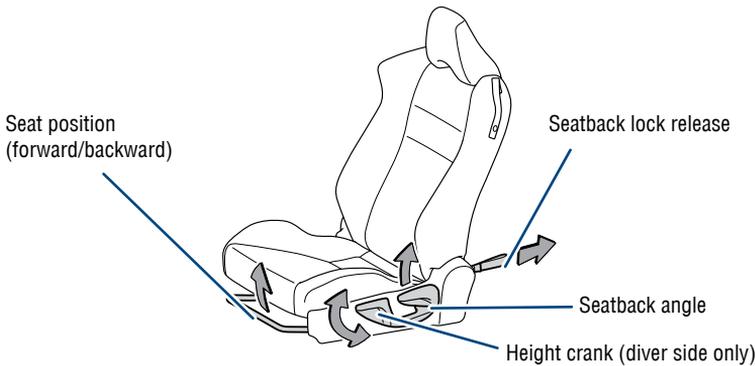


Seats-Fold down rear seats

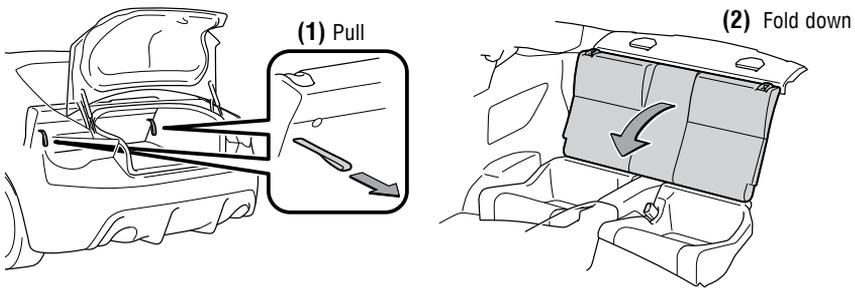

Windows

Driver door window controls

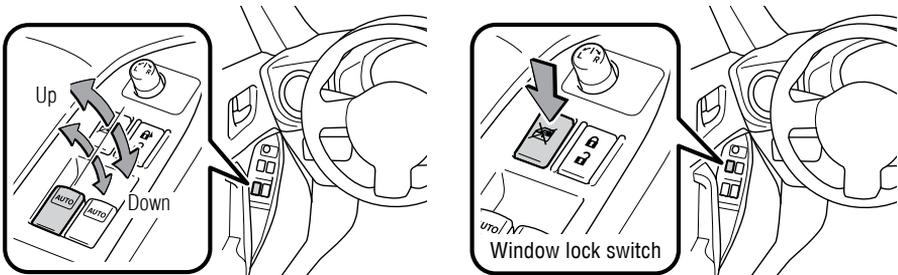


Automatic operation Push the switch completely down or pull it completely up and release to fully open. To stop window midway, operate the switch in the opposite direction.

Window lock switch Deactivates all passenger windows. Driver's window remains operable.

FEATURES & OPERATIONS

Multi-Information Display (MID)

MONOCHROME DISPLAY (IF EQUIPPED)

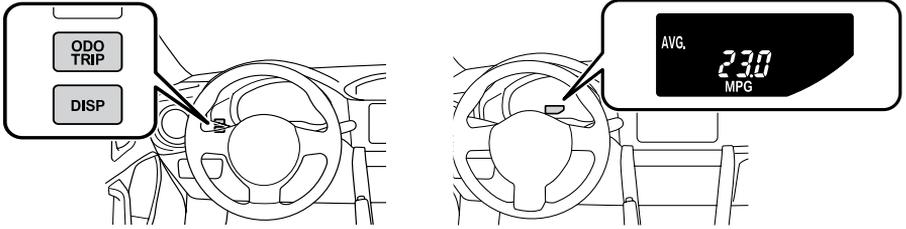

Push “DISP” to change information in the following:

- (1) Outside temperature
- (2) Current fuel consumption
- (3) Average fuel consumption
- (4) Setting screen for the REV (engine RPM) indicator*


Push “ODO TRIP” to change information in the following:

- (1) Odometer
- (2) Trip meter
- (3) Setting screen for shift position indicator and shift-up indicator (manual transmission)

* Only displayed when the vehicle is stopped.

For more details, refer to the Owner's Manual.

COLOR DISPLAY (IF EQUIPPED)

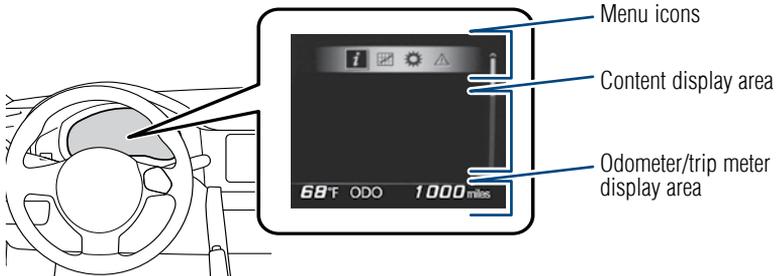

Use meter control switches on the steering wheel to scroll through the following information screens:


-  Drive information
-  Exclusive content for 86
-  Setting display
-  Warning message display

For more details, refer to the Owner's Manual.

Steering wheel switches

Multi-information display (MID)


“< >” Select menu icons.
“^ v” Change displayed content, scroll up/down the screen and move the cursor

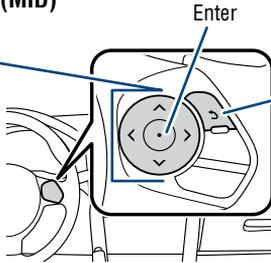


Returns to the previous screen.

Cup/bottle holders


CUP HOLDERS

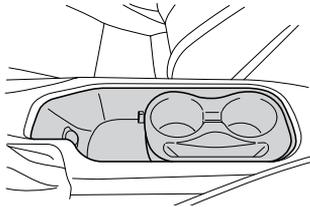


Changing the position

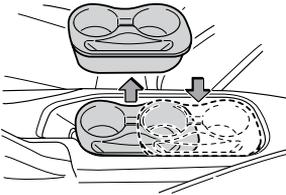


Changing the tray size

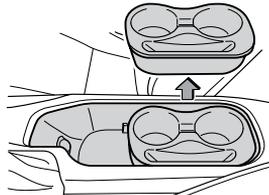

BOTTLE HOLDERS

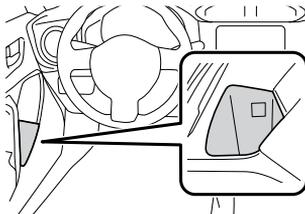


Clock

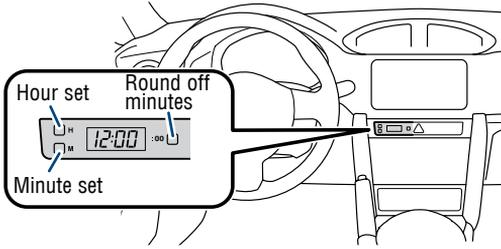


* The ignition switch must be "ON."

Door locks

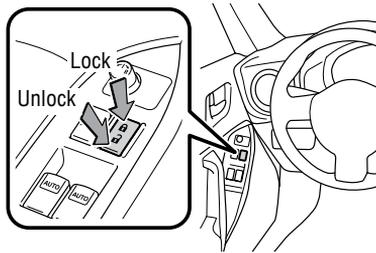


Trunk release



From inside

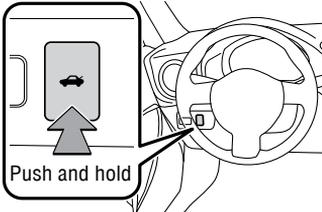

From outside (without Smart Key)

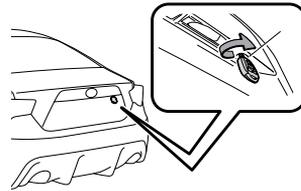


Tilt & telescopic steering wheel

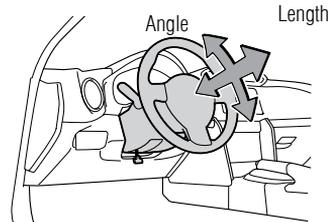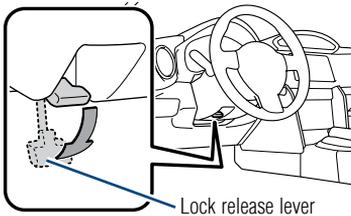

Hold wheel, push lever down, set angle and length, and **return lever**.

NOTE: Do not attempt to adjust while the vehicle is in motion.

AUX/USB port

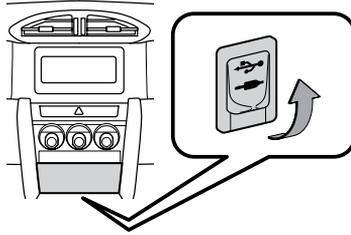

AUX port

By inserting a mini plug (not included) into the AUX port, you can listen to music from a portable audio device through the vehicle's speaker system while in AUX mode.


USB port

By connecting a USB memory or USB-compatible portable audio device to the USB port, you can listen to music from the portable audio device or USB memory through the vehicle's speaker system.


Refer to the Toyota Audio Manual or Toyota.com for more details.

Power outlets

Console tray

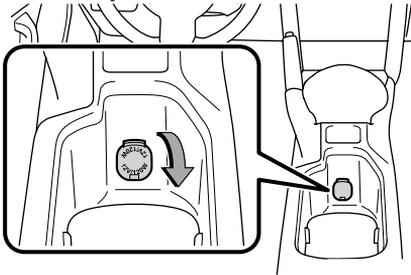

Glove box

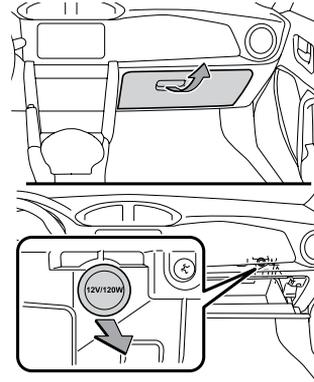


Designed for car accessories. The "ENGINE START STOP"/ignition switch must be in the ACCESSORY or IGNITION ON/"ACC" or "ON" position to be use.


FEATURES & OPERATIONS

Air conditioning/heating

Manual air conditioning

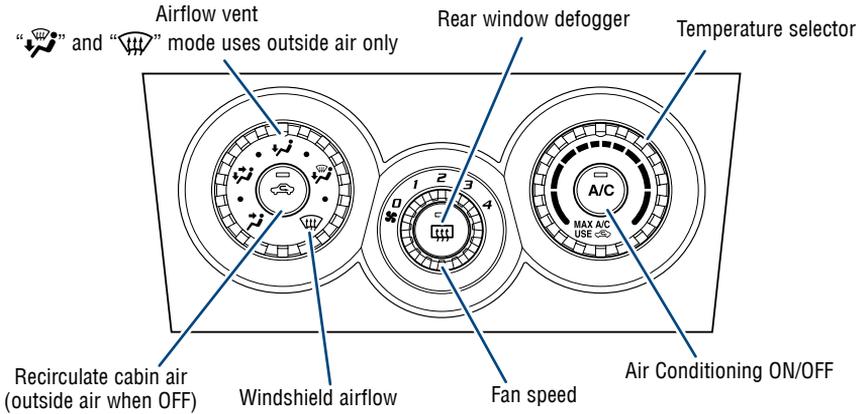

Automatic air conditioning

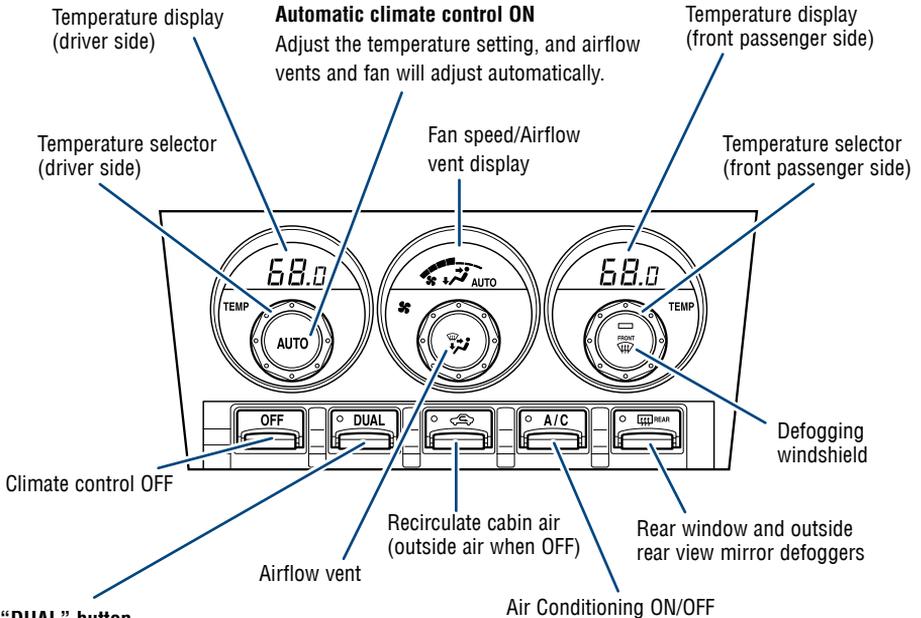

Indicator ON: Separate temperature settings for driver and passenger.
Indicator OFF: Synchronize temperature settings for driver and passenger.

For more details, refer to the Owner's Manual.

Rear view monitor system

The rear view monitor system assists the driver by displaying an image of the camera's view behind the vehicle when in reverse.

To see the camera's image of the view behind the vehicle on the inside rearview mirror, the vehicle ignition switch must be in the ON position and the gear selector must be in the REVERSE position.


If you shift the vehicle out of the "R" position, the screen returns to the previous image.

The backup camera does not provide a comprehensive view of the rear area of the vehicle. You should also look around outside your vehicle and use your mirrors to confirm rearward clearance. Environmental conditions may limit effectiveness and view may become obscured.

For more details, refer to the Owner's Manual details.


Steering lock release

Without Smart Key system

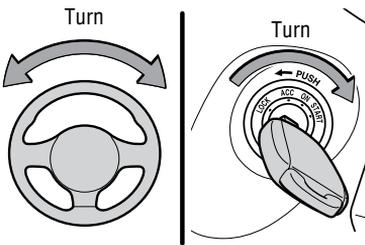

When starting the engine, the engine switch may seem stuck in the "LOCK" position. To free it, turn the key while turning the steering wheel slightly left and right.

With Smart Key system

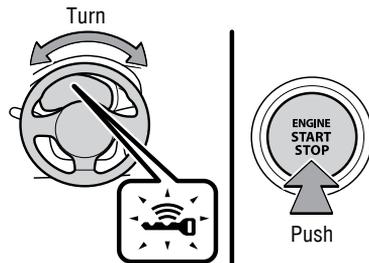

A message will be displayed on the multiinformation display.

Automatic transmission



Check that the shift lever is in P. Press the engine switch while turning the steering wheel left and right.

Manual transmission

Press the engine switch while turning the steering wheel left and right.

SAFETY & EMERGENCY FEATURES

Seat belts

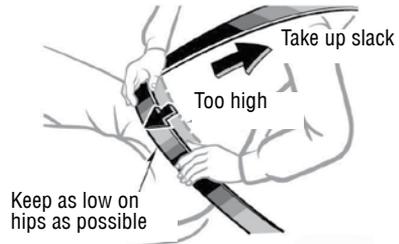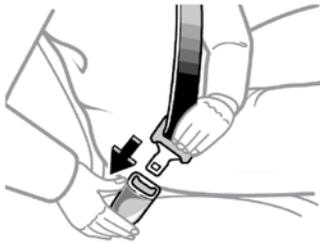

NOTE: If a passenger's seat belt is fully extended, then retracted even slightly, the Automatic Locking Retractor (ALR) will prevent it from being re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the Owner's Manual.

Tire Pressure Monitoring (warning) System (TPMS)


If tire pressure becomes critically low on any of the tires (excluding the spare), "!" indicator will illuminate. Correctly adjusting tire inflation will turn off the light after a few minutes. If the light does not turn off, have the system checked by your Toyota dealer.

If the tire pressure indicator flashes for more than 60 seconds and then remains on, take the vehicle to your local Toyota dealer.


Refer to the Owner's Manual for more details.

Spare tire & tools

TOOL LOCATION

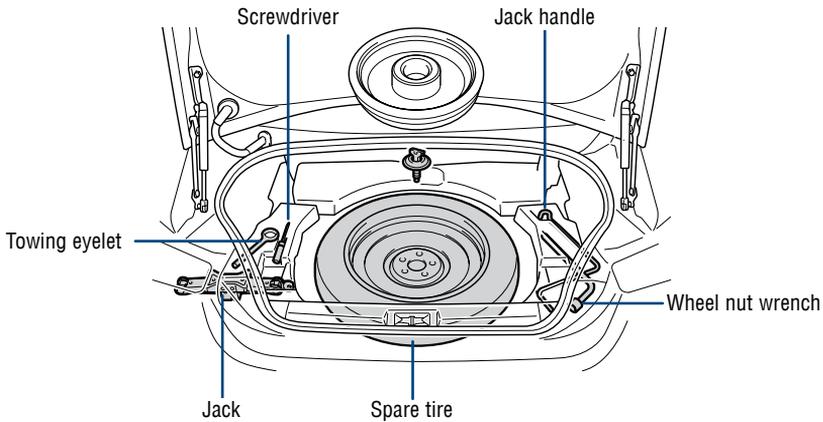

REMOVING THE SPARE TIRE

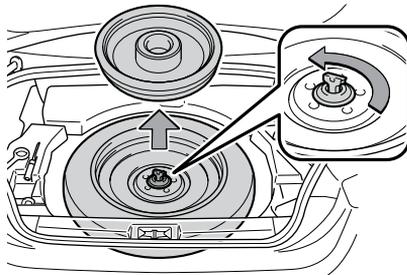

- (1) Remove the spare tire cover.
- (2) Loosen and remove the bolt.

Refer to the Owner's Manual for jack positioning and tire changing procedures.

SAFETY & EMERGENCY FEATURES

Star Safety System™

Your vehicle comes standard with the Star Safety System™, which combines Anti-lock Braking System (ABS), Brake Assist (BA), Electronic Brake-force Distribution (EBD), Smart Stop Technology (SST), Traction Control (TRAC) and Vehicle Stability Control (VSC).

Refer to the Owner's Manual for more details and important information on limitations to these systems.

ANTI-LOCK BRAKE SYSTEM (ABS)

Toyota's ABS sensors detect which wheels are locking up and limits wheel lockup by "pulsing" each wheel's brakes independently. Pulsing releases brake pressure repeatedly for fractions of a second. This helps the tires attain the traction that current road conditions will allow, helping you to stay in directional control.

BRAKE ASSIST (BA)

Brake Assist is designed to detect sudden or "panic" braking, and then add braking pressure to help decrease the vehicle's stopping distance. When there's only a split second to react, Brake Assist can add additional brake pressure more quickly than just the driver alone can.

ELECTRONIC BRAKE FORCE DISTRIBUTION (EBD)

Toyota's ABS technology has Electronic Brake-force Distribution (EBD) to help maintain control and balance when braking. Abrupt stops can cause a vehicle to tilt forward, reducing the braking power of the rear wheels. EBD responds to sudden stops by redistributing brake force to enhance the braking effectiveness of all four wheels.

SMART STOP TECHNOLOGY (SST)

Smart Stop Technology automatically reduces engine power when the accelerator and brake pedals are pressed simultaneously under certain conditions.

SST engages when the accelerator is depressed first and the brakes are applied firmly for longer than one-half second at speeds greater than five miles per hour.

SST doesn't engage if the brake pedal is depressed before the accelerator pedal, allowing vehicles to start on a steep hill and safely accelerate without rolling backward.

VEHICLE STABILITY CONTROL (VSC)

VSC helps prevent loss of traction during cornering by reducing engine power and applying brake force to selected wheels.

Toyota's VSC monitors steering angle and the direction your vehicle is traveling. When it senses that the front or rear wheels begin to lose traction, VSC reduces engine power and applies braking to selected wheels. This helps restore traction and vehicle control.

TRACTION CONTROL (TRAC)

VSC helps prevent loss of traction during cornering by reducing engine power, and Traction Control helps maintain traction on loose gravel and wet, icy, or uneven surfaces by applying brake force to the spinning wheel(s).



Toyota's TRAC sensors are activated when one of the drive wheels starts to slip. TRAC limits engine output and applies the brakes to the spinning wheel. This transfers power to the wheels that still have traction to help keep you on track.

Floor mat installation


There are two types of Toyota floor mats: carpeted and all-weather. Each vehicle has model-specific floor mats. Installation is easy.

To keep your floor mat properly positioned, follow these steps:

- Only use Toyota floor mats designed for your specific model.
- Use only one floor mat at a time, using the retaining hooks to keep the mat in place.
- Install floor mats right side up.

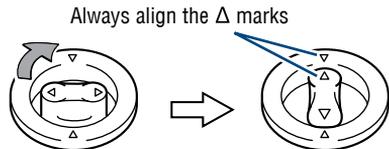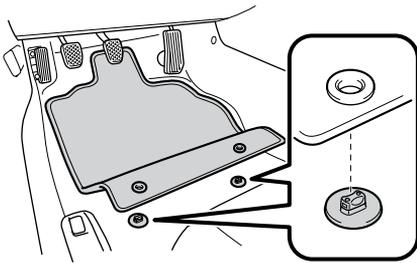

The shape of the retaining hooks (clips) may differ from that shown in the illustration.

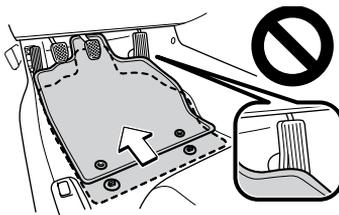

PAIRING BLUETOOTH® PHONE FOR THE FIRST TIME

****Do not attempt the Bluetooth® Pairing process while driving.****

Touch Screen Display Audio and Display Audio with Navigation¹

To use the hands-free system³, it is necessary to pair a **Bluetooth®²** phone with the system. Once the phone has been paired, it is possible to use the hands-free system³. (NOTE: The **Bluetooth®²** pairing process for Non-Navigation and Navigation¹ units differ, as noted below)
You can pair up to 4 devices.

1. Turn the **Bluetooth®²** connection setting of your cellular phone ON.
[See Figures 1 & 2]

a. Pairing is not available when **Bluetooth®²** setting of your phone is set to OFF.



Figure 1: iOS

Figure 2: Android

2. Press the “**Phone**” button to display the “**Phone**” screen. Touch “**Yes**” to register a phone. (Non-Navigation units – skip to step 4)
[See Figure 3]



Figure 3

3. Touch the “**Make system discoverable**”^{*} button. [See Figure 4]
^{*} On Android™ devices, you will need to make your phone visible to searching devices.



Figure 4: With Navigation¹

4. Next, search for **“My Toyota”** from your phone’s *Bluetooth*^{®2} screen and select **“My Toyota”** [See Figure 5]

- To cancel the registration, touch **“Cancel”**.
- **Navigation units** - skip to step 7



Figure 5: *Without Navigation*

5. A message will display on the head unit requesting messaging access.

iPhone^{®4}: Using your smartphone, you may need to allow head unit access to your messaging and contacts. [See Figure 6] Only current iPhone^{®4} text messages can be viewed on the head unit. iPhone^{®4} does not allow text message reply.

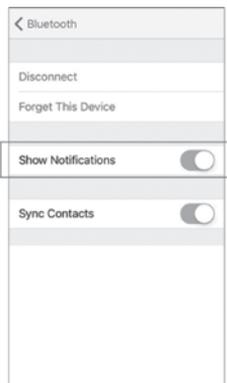


Figure 6: *iOS*

Android[™]: Using your smartphone, you may need to allow head unit access to your messaging and contacts. [See Figure 7] It is recommended to check the **“Don’t ask again”** box, so as not to have to press **OK** every time the phone makes a *Bluetooth*^{®2} connection with your Toyota.



Figure 7: *Android*

6. Touch **“OK”** when the connection status changes from **“Connection waiting...”** to **“Connected”**.

7. **For Navigation¹ Units Only**: Confirm that the passkey number displayed on screen matches the passkey displayed on your *Bluetooth*^{®2} device and press **“Yes”**.

NOTE: A message will display on the head unit requesting messaging access. Please refer to step 5

1. Availability & accuracy of the information provided by the navigation system is dependent upon many factors. Use common sense when relying on information provided. Services & programming subject to change. Services not available in every city or roadway. Updates may be available from your dealer at an additional cost. See Owner's Manual for details. 2. The Bluetooth[®] word mark and logos are registered trademarks owned by Bluetooth[®] SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth[®] enabled phone must first be paired. Phone performance depends on software, coverage & carrier. 3. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you. 4. iPhone[®] is not included. iPhone[®] is registered trademarks of Apple, Inc.



www.toyota.com/owners

CUSTOMER EXPERIENCE CENTER
1-800-331-4331



Printed in U.S.A. 11/17
17-MKG-10194



00505QRG1886