

4RUNNER

2 0 1 8



QUICK REFERENCE GUIDE



TOYOTA

# 2018

## 4RUNNER

This Quick Reference Guide is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The Quick Reference Guide is not intended as a substitute for the Owner's Manual located in your vehicle's glove box. We strongly encourage you to review the Owner's Manual and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor North America, Inc. wish you many years of satisfied driving in your new 4Runner.

### *A word about safe vehicle operations*

This Quick Reference Guide is not a full description of 4Runner operations. Every 4Runner owner should review the Owner's Manual that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the Owner's Manual. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this Quick Reference Guide is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

# INDEX

## OVERVIEW

Engine maintenance	8
Fuel tank door release & cap	7
Hood release	8
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Instrument panel light control	8
Keyless entry <sup>1</sup>	6
Smart Key system <sup>1</sup>	7

## FEATURES & OPERATIONS

Air conditioning/heating	12
Audio	18
Auto lock/unlock <sup>1,2</sup>	9
Automatic running boards	23
Automatic transmission	9
Clock	20
Cruise control	14
Door locks	10
Four-wheel drive	22
Garage door opener (HomeLink®) <sup>3</sup>	23
Lights <sup>1</sup> & turn signals	11
Moonroof <sup>1</sup>	14
Parking brake	9
Power outlets-12V DC	21
Power outlets-120V AC	20
Rear seats-Folding	16
Seat adjustments-Front	15
Seat adjustments-Rear	15
Seat ventilators/heaters	13
Seats-Head restraints	15
Seats-Returning 3rd row	17
Seats-Stowing 3rd row	17
Steering wheel switches & telephone controls (Bluetooth®)	19
Tilt & telescopic steering wheel	10
USB/AUX port	20
VSC OFF button	23
Window-Back window <sup>1</sup>	13
Windows <sup>1</sup>	13
Windshield wipers & washers	10

## SAFETY & EMERGENCY FEATURES

Floor mat installation	27
Rear door child safety locks	24
Seat belts	24
Seat belts-Shoulder belt anchor	24
Spare tire & tools	25
Star Safety System™	26-27
Tire Pressure Monitoring (warning) System (TPMS)	24

## BLUETOOTH® DEVICE PAIRING SECTION

28-37

<sup>1</sup> Visit your Toyota dealer for information on customizing this feature.

<sup>2</sup> Programmable by customer. Refer to the Owner's Manual for instructions and more information.


<sup>3</sup> HomeLink® is a registered trademark of Genex Corporation.

# Instrument panel

Audio remote control switches<sup>2</sup>


Voice command switch<sup>2</sup>

Telephone switches<sup>2</sup>

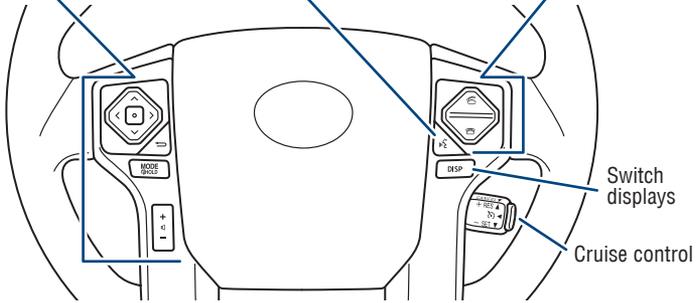


## Steering wheel controls

Headlight, turn signal and front fog light controls  
 Intuitive parking assist switch and indicator<sup>1</sup>  
 Instrument panel light control  
 Power outside rearview mirror controls

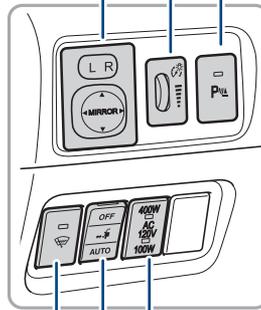


Windshield wiper de-icer switch<sup>1</sup>  
 Automatic running boards switch<sup>1</sup>  
 Power outlet main switch<sup>1</sup>

Meters

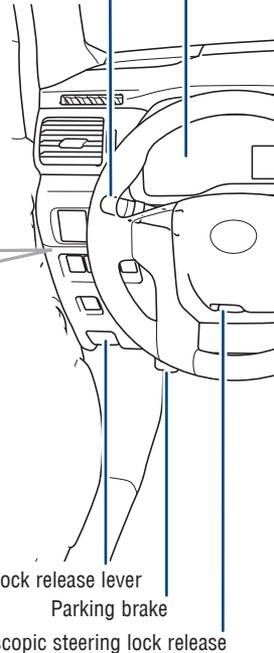

## CENTER CONSOLE BOX

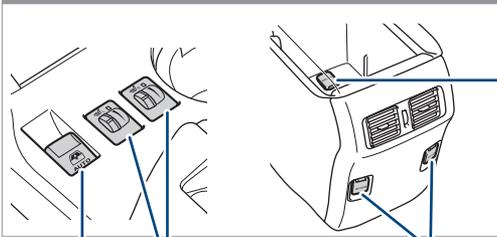

Power outlet

Hood lock release lever

Parking brake

Tilt and telescopic steering lock release

Seat heater switches<sup>1</sup>


Power outlet

Power back window switch

<sup>1</sup> If equipped

<sup>2</sup> For details, refer to the "Navigation System Owner's Manual" and "2018 Entune™ Audio Quick Reference Guide."

### OVERHEAD CONSOLE INSTRUMENT PANEL

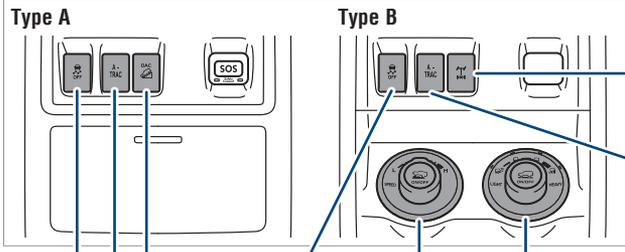


VSC off switch  
Active traction control switch<sup>1</sup>  
Downhill Assist Control system (DAC) switch<sup>1</sup>

VSC off switch  
Multi-terrain Select switch<sup>1</sup>  
Crawl Control switch<sup>1</sup>

Rear differential lock switch<sup>1</sup>

Active traction control switch<sup>1</sup>

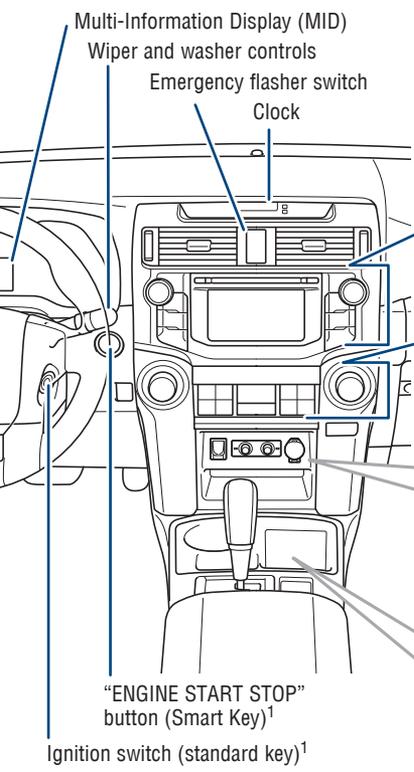

Audio system<sup>2</sup>/navigation system<sup>2</sup>

Manual or Automatic air conditioning/heating<sup>1</sup>

Seat heater<sup>1</sup>/ventilator switches<sup>1</sup>

AUX/USB port<sup>2</sup>

Power outlet


Part-time 4WD

Part-time 4WD/  
full-time 4WD

Front-wheel drive control lever<sup>1</sup>

Front-wheel drive control switch<sup>1</sup>/  
Four-wheel drive control switch<sup>1</sup>

## Instrument cluster

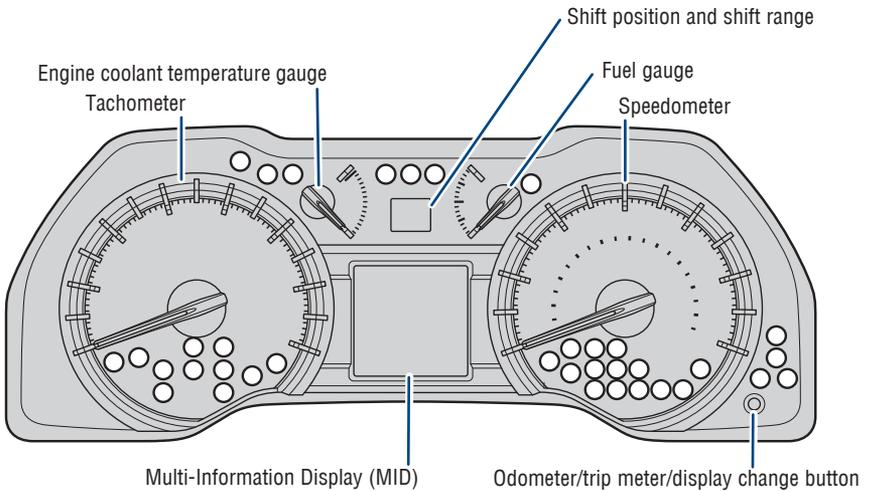

○ Service indicators and reminders

## Indicator symbols

For details, refer to "Instrument cluster," Section 2-2, 2018 Owner's Manual.

 <b>A-TRAC</b> Active traction control indicator <sup>3</sup>	 Center differential lock indicator <sup>2,3</sup>
 <b>AIR BAG OFF</b> <b>AIR BAG ON</b> AIR BAG ON/OFF indicator <sup>1</sup>	 Charging system warning <sup>1</sup>
 Air bag SRS warning <sup>1,2</sup>	 Crawl Control indicator <sup>1,3</sup>
 <b>ABS</b> Anti-lock Brake System warning <sup>1</sup>	 <b>SET</b> Cruise control/Cruise control SET indicator <sup>2</sup>
 Arrow direction indicates fuel tank door position	 Downhill Assist Control indicator <sup>1,3</sup>
 <b>AUTO LSD</b> AUTO Limited Slip Differential indicator <sup>1,3</sup>	 <b>ECO</b> Eco Driving Indicator Light <sup>1</sup>
 Automatic running boards indicator <sup>1,3</sup>	 Engine immobilizer/ Theft deterrent system indicator
 <b>BRAKE</b> Brake system warning <sup>1</sup>	

<sup>1</sup> If indicator does not turn off within a few seconds of starting engine, there may be a malfunction. Have vehicle inspected by your Toyota dealer.

<sup>2</sup> For details, see "Warning light and warning buzzer list" Section 7-2, 2018 Owner's Manual.



Four-wheel drive indicator<sup>2,3</sup>



Front fog light indicator



Headlight low/  
high beam indicator



KDSS Kinetic Dynamic Suspension System indicator<sup>1,3</sup>



Low engine oil pressure warning<sup>1</sup>



Low fuel level warning



Low Tire Pressure Warning<sup>1</sup>



4LO Low speed four-wheel drive indicator<sup>2,3</sup>



Malfunction/Check Engine indicator<sup>1</sup>



Master warning<sup>1</sup>



Multi-terrain select indicator<sup>3</sup>



Open door warning



Power steering system warning<sup>1</sup>



Rear differential lock indicator<sup>3</sup>



Seat belt reminder  
(alarm will sound if speed is over 12 mph)



Slip indicator<sup>1</sup>



Smart Key system warning<sup>3</sup>



Traction Control OFF indicator<sup>1</sup>



Turn signal indicator



A/T P Unengaged Park warning light<sup>3</sup>



Vehicle Stability Control (VSC) OFF indicator<sup>1</sup>


<sup>3</sup> If equipped.

# OVERVIEW

## Keyless entry

### UNLOCKING OPERATION

**Smart Key**

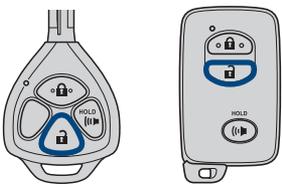


**Push**



Push **ONCE**: Driver door  
Push **TWICE**: All doors

Carry Smart Key remote  
Front door unlock\*

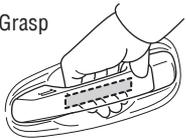


Grasp

**NOTE: If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.**

### LOCKING OPERATION

**Smart Key**

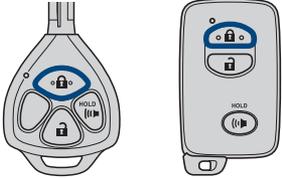

**Push**



Push


Carry Smart Key remote  
Front door lock



Touch

### PANIC BUTTON

**Smart Key**

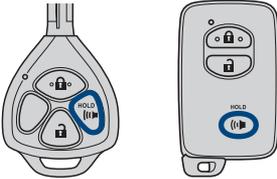

**HOLD**




Push and hold




**NOTE: Power back door will not open if glass hatch is open.**

### BACK DOOR LOCK/UNLOCK/OPEN (IF EQUIPPED)


#### Unlock

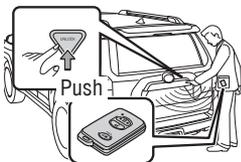

#### Lock

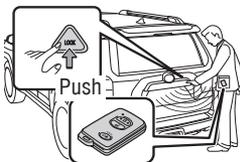

#### Open

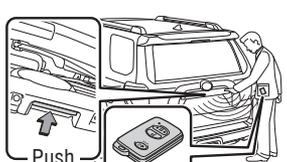


**NOTE: Carry remote to unlock/lock/open.**

\* Driver door unlocking function can be programmed to unlock driver door only, or all doors. Grasping front passenger door handle will unlock all doors.

## Smart Key system (if equipped)


### START FUNCTION

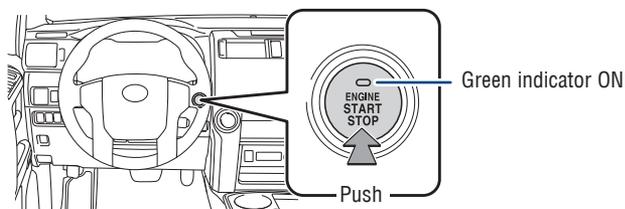


**NOTE:** Carry the electronic key to enable start function. Gear shift lever must be in Park and brake pedal depressed.

### POWER (WITHOUT STARTING ENGINE)

Without depressing the brake pedal, pressing the “ENGINE START STOP” switch will change the operation mode in succession from:

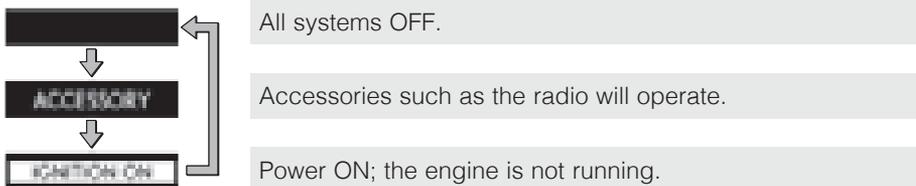


## Fuel tank door release & cap

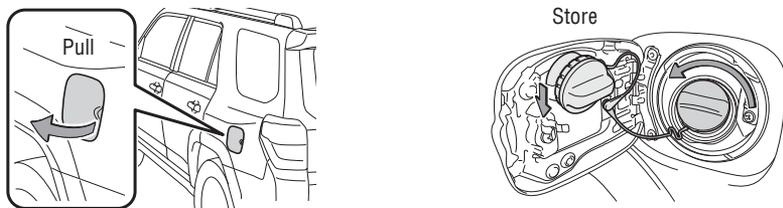


**NOTE:** Tighten until one click is heard. If the cap is not properly sealed, Check Engine “” indicator may illuminate.

# OVERVIEW


## Hood release

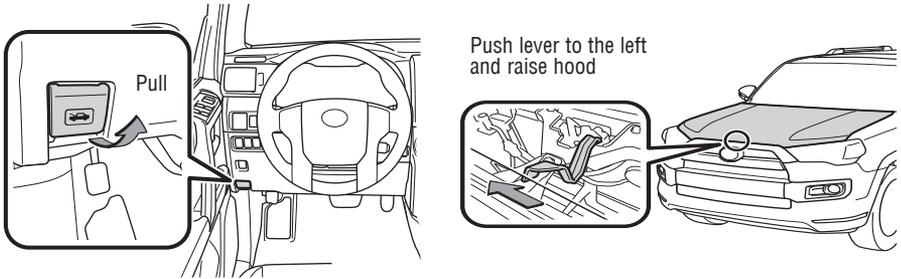

## Instrument panel light control

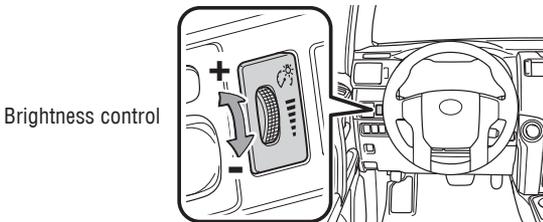

## Engine maintenance

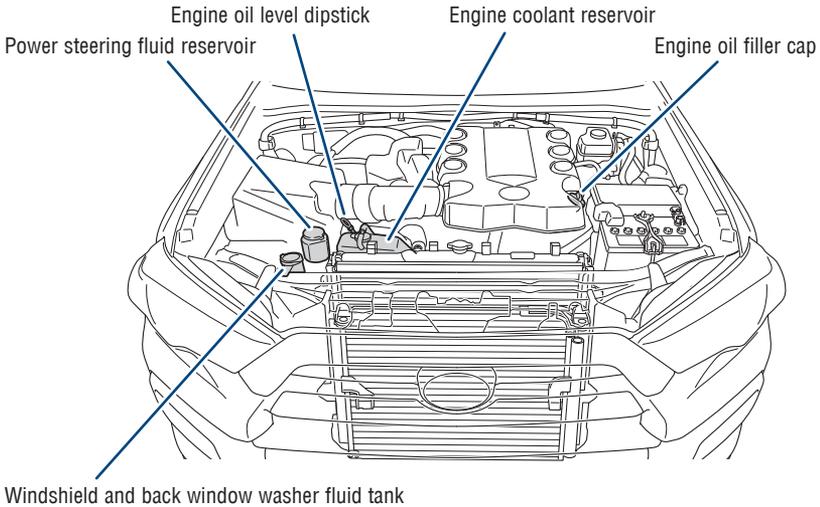

**NOTE: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the “Warranty & Maintenance Guide.”**

# FEATURES & OPERATIONS

## Auto lock/unlock

Automatic door locks can be programmed to operate in different modes, or turned OFF.

### Shift position linked door locking/unlocking function

- Doors lock when shifting from Park.
- Doors unlock when shifting into Park.

### Speed linked door locking function


- Doors lock when the vehicle speed goes above approximately 12 mph.

### Driver's door linked door unlocking function

- (Without a smart key system) Doors unlock when the engine switch is set from "ON" to "ACC" or "LOCK" within 10 seconds of opening the driver's door.
- (With a smart key system) Doors unlock when the engine switch is set to OFF within 10 seconds of opening the driver's door.

Refer to the Owner's Manual for more details.

## Automatic transmission

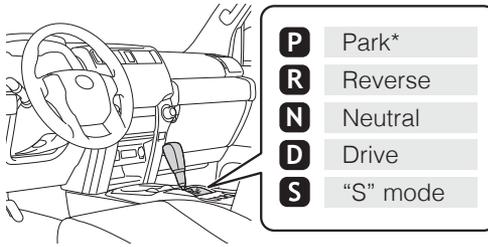

\* The ignition/"ENGINE START STOP" switch must be "ON" and the brake pedal depressed to shift from Park.


### "S" (SEQUENTIAL) MODE

Shift the shift lever to "S" position from "D" position.

- + : Upshift (push and release)
- : Downshift (pull and release)

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.


## Parking brake

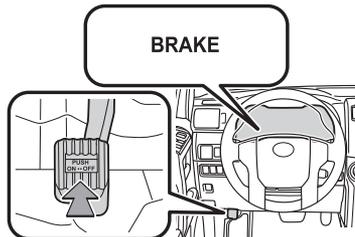

Set: Depress  
Release: Depress again


## Tilt & telescopic steering wheel

Lock release lever

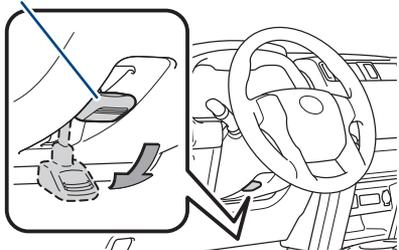

Angle


Length

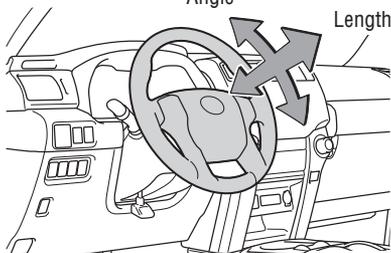

Hold wheel, push lever down, set angle and length, and return lever.

**NOTE: Do not attempt to adjust while the vehicle is in motion.**

## Door locks

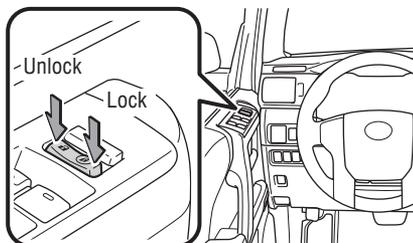


## Windshield wipers & washers

FRONT


**Type A**

Adjust frequency\*

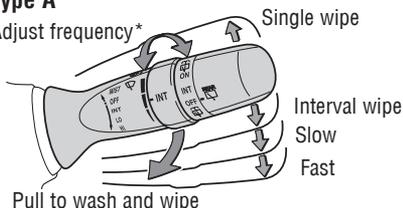

**Type B**


Adjust frequency\*

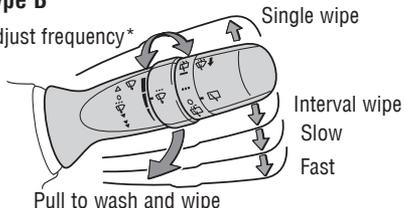


\* **Intermittent windshield wiper frequency adjustment** Rotate to increase/decrease wipe frequency.

REAR

**Type A**

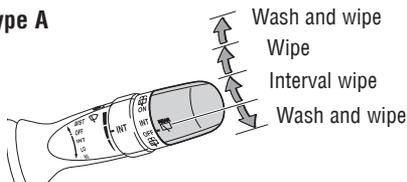

**Type B**

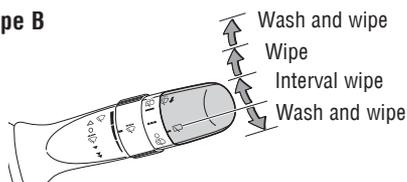


**NOTE: Rear wiper and washer operate only when back window is fully closed.**


# Lights & turn signals

## HEADLIGHTS


### Type A

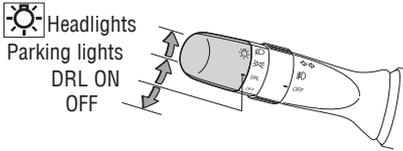



### Type B

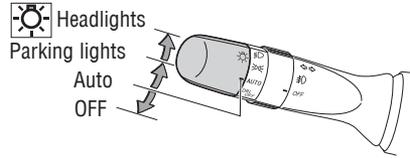

### Type C

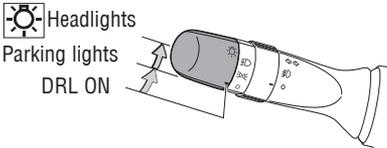


### Type D

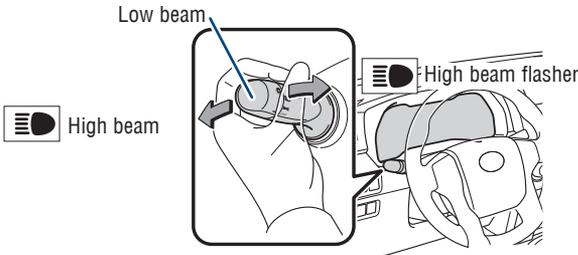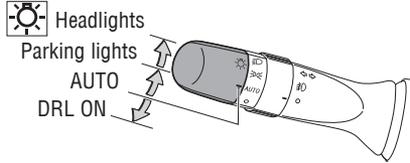


**Automatic light cut off system** Will automatically turn lights off after a delay of 30 seconds, or the lock switch on remote may be pushed after locking.

## TURN SIGNALS

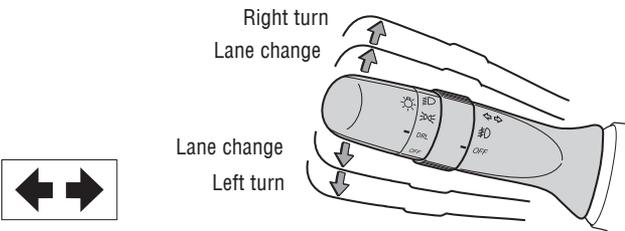

## FRONT FOG LIGHTS

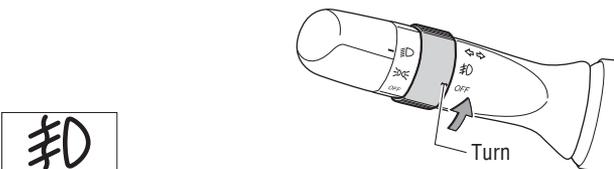

Front fog lights come on only when the headlights are on low beam.

# FEATURES & OPERATIONS

## Air conditioning/heating (if equipped)

### AUTOMATIC AIR CONDITIONING


Temperature selector (driver side)

Temperature selector (front passenger side)

Recirculate cabin air (outside air when OFF)

Air Conditioning ON/OFF

Fan speed

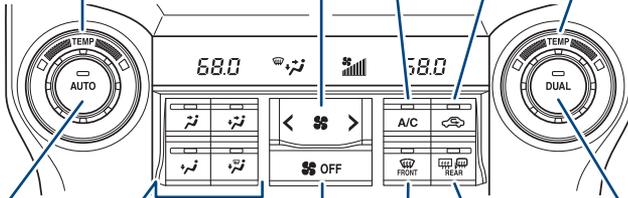

Climate control OFF

Defogging windshield

Rear window and outside rear view mirror defoggers

#### Airflow vent

In “” mode, use outside air (“” indicator OFF) to reduce window fogging. “” mode uses outside air only.

#### Automatic climate control ON

Adjust the temperature setting, and airflow vents and fan will adjust automatically.

#### “DUAL” button

**Indicator ON:** Separate temperature settings for driver and passenger.


**Indicator OFF:** Synchronize temperature settings for driver and passenger.

### MANUAL AIR CONDITIONING

#### Airflow vent

In “” mode, use outside air (“” indicator OFF) to reduce window fogging. “” mode uses outside air only.

For maximum cooling. Air intake will automatically be set to recirculate.

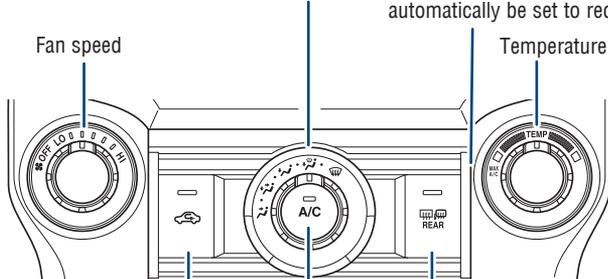

Fan speed

Temperature selector

Recirculate cabin air (outside air when OFF)


Rear window and outside rear view mirror defoggers

Air Conditioning ON/OFF


## Seat ventilators/heaters (if equipped)

### FRONT SEATS

#### With ventilators


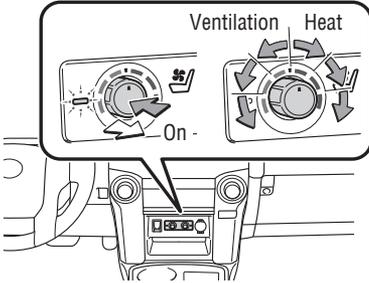


#### Heater only

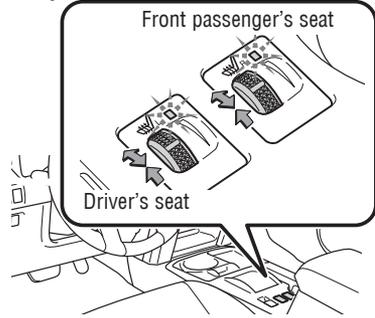

## Windows

### Driver side

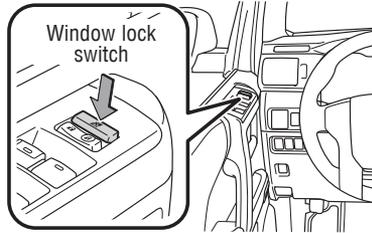
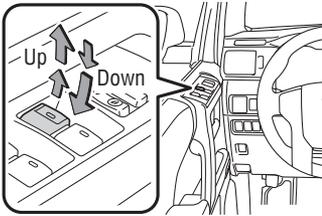


**Automatic operation** Push the switch completely down or pull it completely up and release to fully open or close. To stop the window partway, operate the switch in the opposite direction.

**Window lock switch** Deactivates all passenger windows. Driver's window remains operable.


## Window-Back window

### OPERATING FROM INSIDE

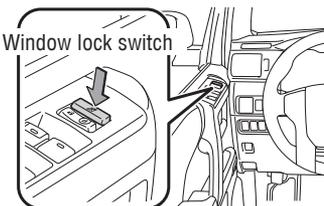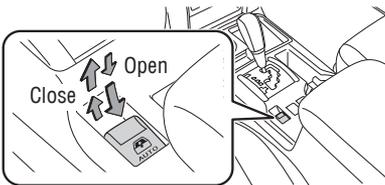


### OPERATING FROM OUTSIDE

#### With Smart Key system

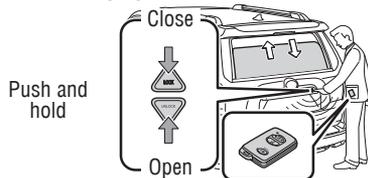


#### Without Smart Key system

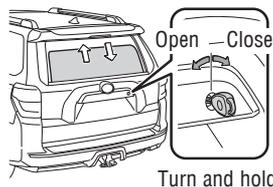

# FEATURES & OPERATIONS



## Cruise control

### TURN SYSTEM ON/OFF

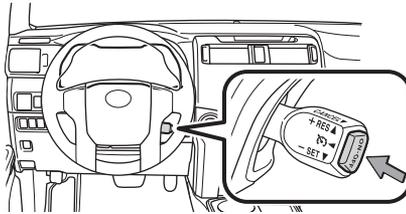

System ON/OFF

### FUNCTIONS

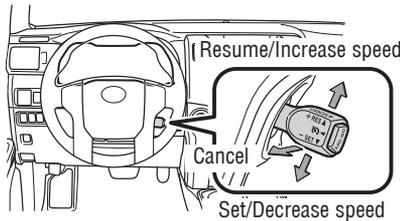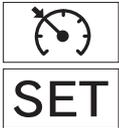


Refer to the Owner's Manual for more details.


## Moonroof (if equipped)

### SLIDING OPERATION

Recommended open position to minimize wind noise.

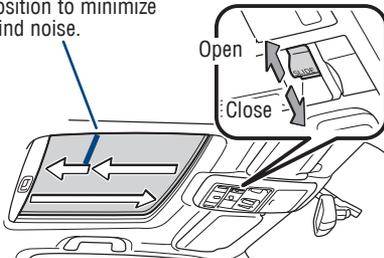

### TILTING OPERATION

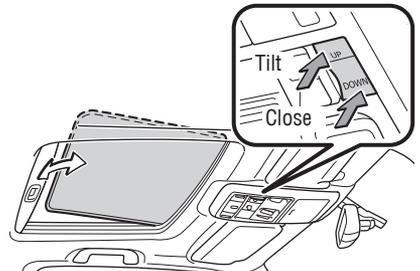


Push once to open partway; again to open completely.  
Push once to close completely. To stop partway, press switch lightly.

## Seat adjustments-Front

### MANUAL SEAT


Seatback angle

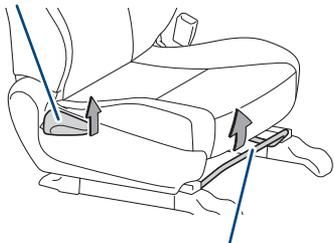

Seat position (forward/backward)

### POWER SEAT

Driver seat: seat position, cushion angle and height  
 Passenger seat: seat position (forward/backward)

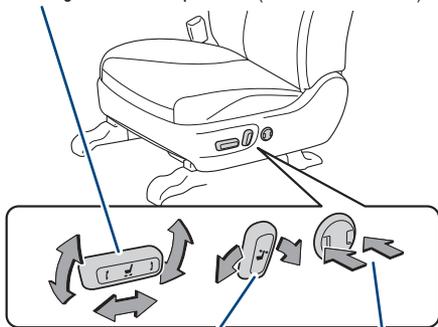


Seatback angle

Lumbar support  
 (driver side only)

## Seat adjustments-Rear

### VEHICLES WITH 2ND ROW SEATS

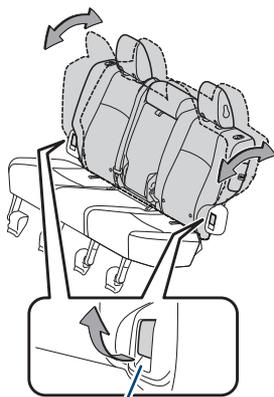


Seatback angle

### VEHICLES WITH 3RD ROW SEATS\*

Seat position  
 (forward/backward)

\*if equipped

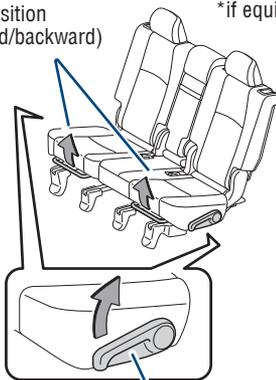

Seatback angle


## Seats-Head restraints

### FRONT & 2ND ROW


### 2ND ROW

### 3RD ROW (IF EQUIPPED)

Vehicles without 3rd row seats

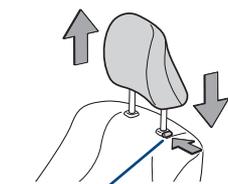






Lock release button

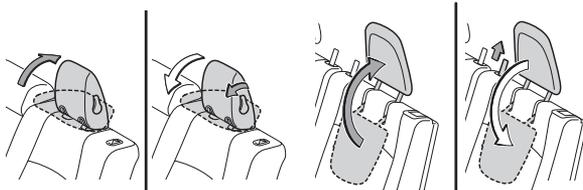




# FEATURES & OPERATIONS

## Rear seats-Folding

### WITH 2ND ROW SEATS

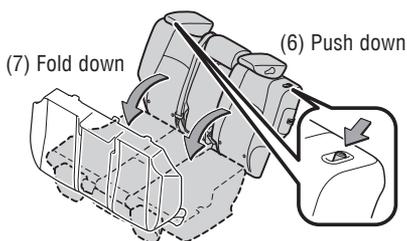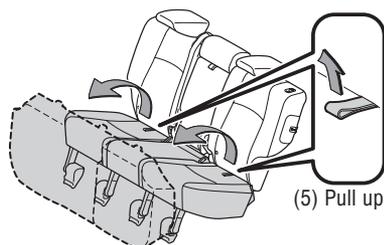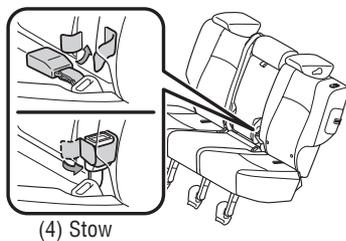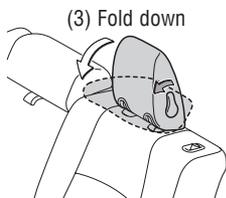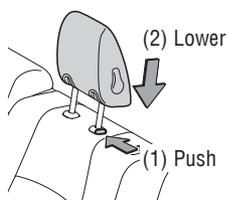


### WITH 3RD ROW SEATS (IF EQUIPPED)

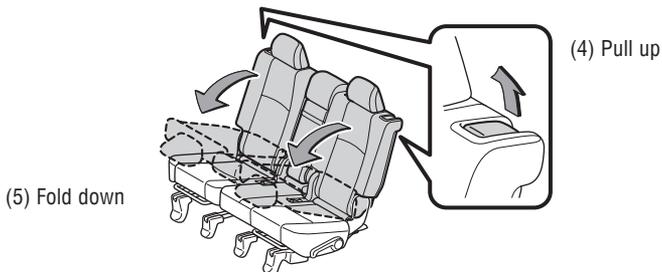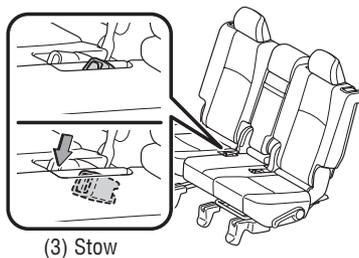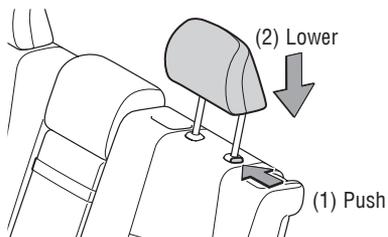


## Seats-Stowing 3rd row (if equipped)


From inside

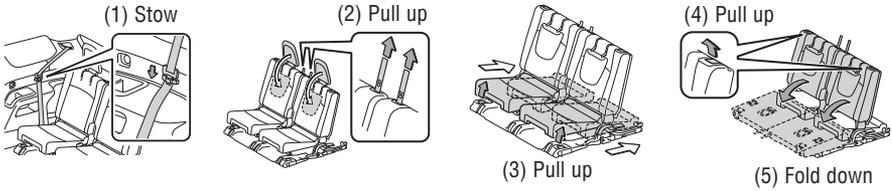

From outside

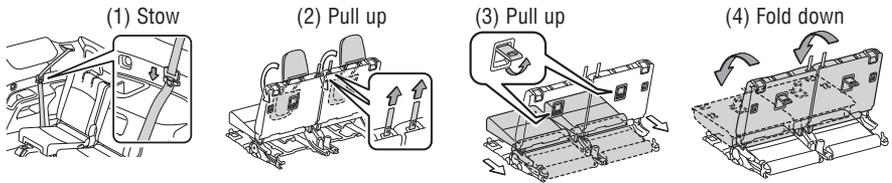

## Seats-Returning 3rd row (if equipped)

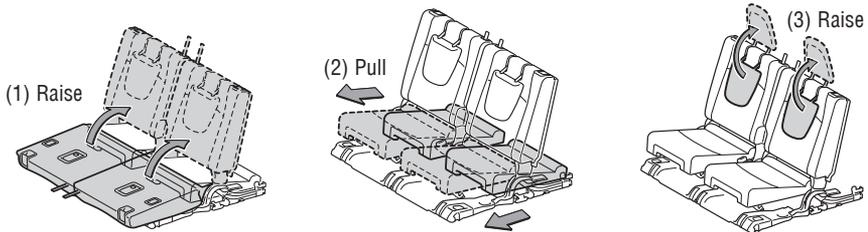


# FEATURES & OPERATIONS


## Audio

Refer to the "Navigation System Owner's Manual" and "2018 Entune™ Audio Quick Reference Guide" for instructions and more information.

### ENTUNE™ AUDIO PLUS WITH CONNECTED NAVIGATION APP

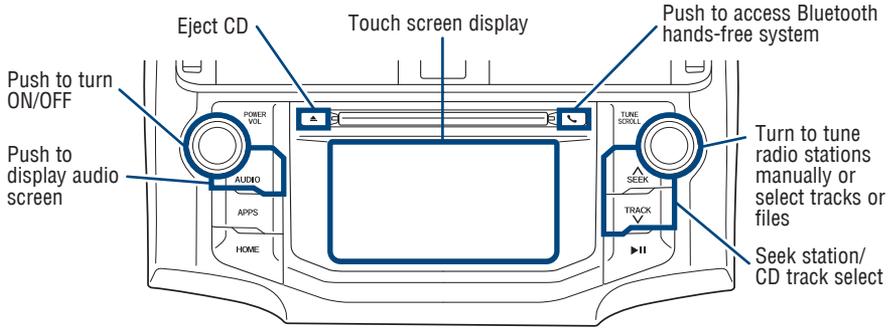

### ENTUNE™ PREMIUM AUDIO WITH INTEGRATED NAVIGATION AND APP SUITE

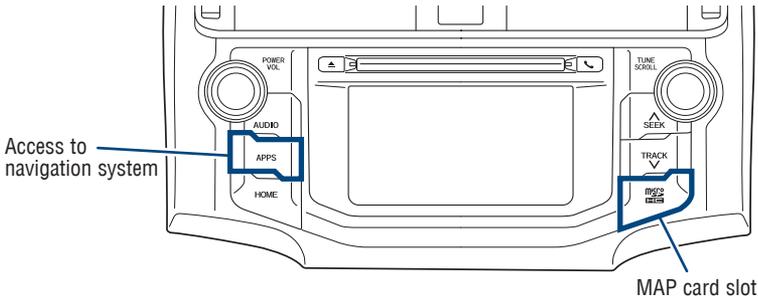

# Steering wheel switches & telephone controls (Bluetooth®)

## Audio switches


“◀▶” and “◀▶”

Use to search within the selected audio medium (radio, CD, etc.).


“MODE/HOLD”

Push to change an audio mode.  
Push and hold to mute or pause the audio.

Volume control

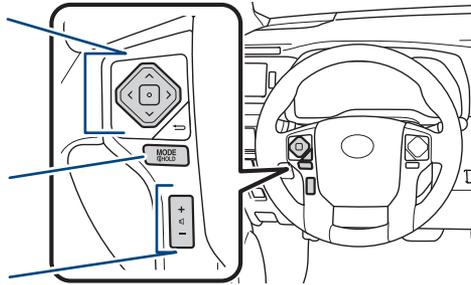

## Telephone switches

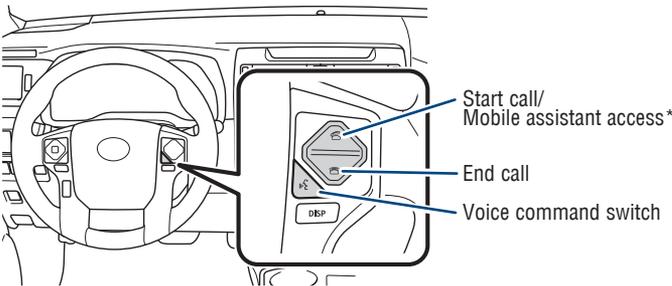

Start call/  
Mobile assistant access\*

End call

Voice command switch

Bluetooth® technology allows dialing or receipt of calls without removing your hands from the steering wheel or using a cable to connect the compatible telephone and the system.

\* Push and hold to access Mobile Assistant. Once you connect a compatible, registered mobile phone, you can access Siri® Eyes Free using Mobile Assistant access switch.

Refer to the Navigation System Owner's Manual for more details.


Refer to the “Bluetooth® Device Pairing Section” in this guide for more information about phone connections and compatibility.

**NOTE: Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.**


# FEATURES & OPERATIONS

## USB/AUX port

Type A

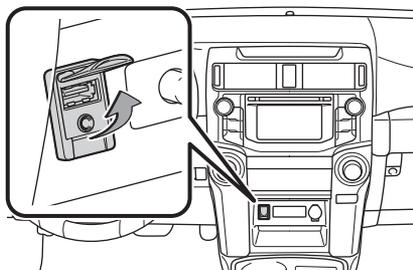

Type B

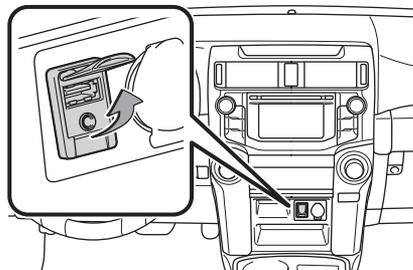


By inserting a mini plug into the USB/AUX port, you can listen to music from a portable audio device through the vehicle's speaker system while in USB/AUX mode.


Refer to the "Navigation System Owner's Manual" for instructions and more information.

## Power outlets-120V AC (if equipped)

ON/OFF  
Main switch

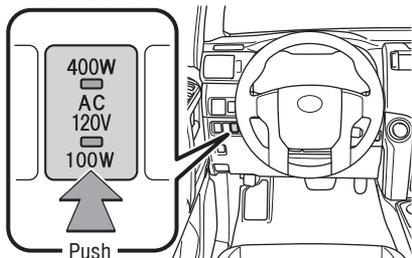


Luggage compartment

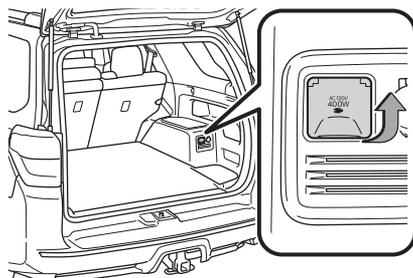

**NOTE:** The 120V AC power outlet can only be used when engine is running.


## Clock

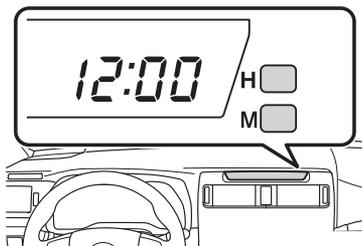

H- Hour set  
M- Minute set


# Power outlets-12V DC

## CENTER PANEL

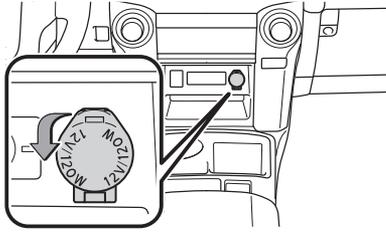


## CONSOLE BOX

### Outside

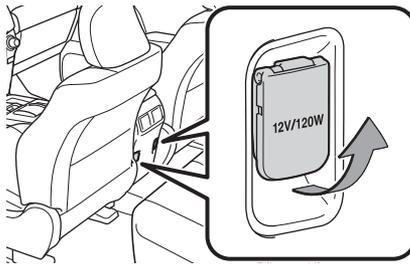


### Inside

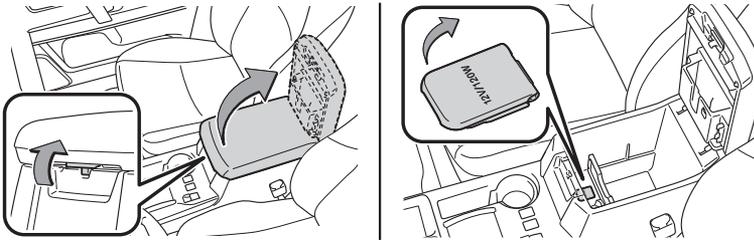


## LUGGAGE COMPARTMENT

### With 120V AC outlet

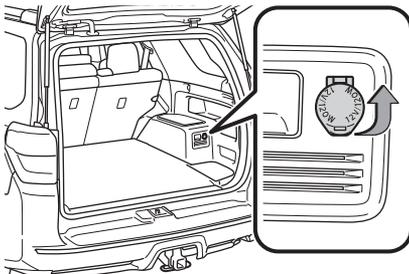

### Without 120V AC outlet

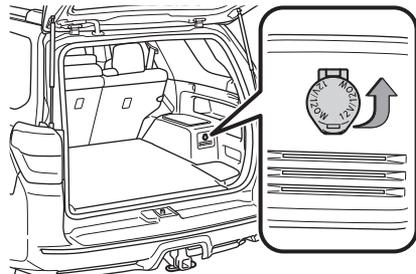

**NOTE:** Designed for car accessories. Ignition switch/“ENGINE START STOP” switch must be in the “ACC” or “ON” position to be used.

# FEATURES & OPERATIONS

## Four-wheel drive (if equipped)

### PART-TIME FOUR-WHEEL DRIVE MODELS

Push “UNLOCK” button and then push and turn the selector (type B.)

**H2** High speed (2WD)

**H4** High speed (4WD)


Shift to “H4” with speed below 50 mph (type A) or 62 mph (type B.)

**N** Neutral


**L4** Low speed (4WD)

Stop vehicle, shift to “N” position, then move the lever to “L4” (type A) or push and turn to “L4” (type B.)

Type A

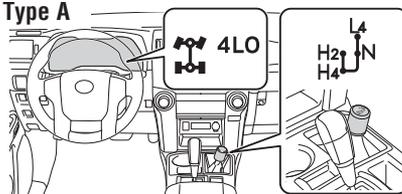

Type B

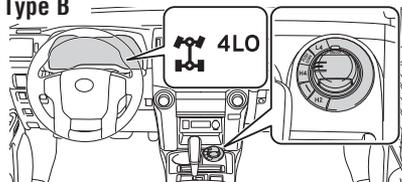

### FULL-TIME FOUR-WHEEL DRIVE MODELS

Push “UNLOCK” button and then push and turn the selector.

**H4F** High speed


**H4L** High speed

(center differential locked)



**L4L** Low speed

(center differential locked)

Stop vehicle, shift to “N” position, then push and turn to “L4L.”

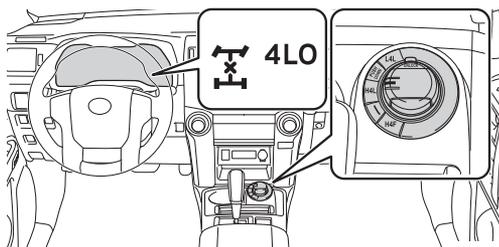


## VSC OFF button

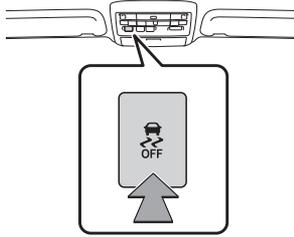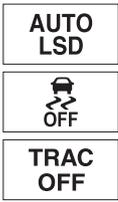


The VSC OFF button is used to switch between modes related to the TRAC, VSC and Auto LSD (2WD) functions.

Refer to Section 4-5 of the Owner's Manual for more information.

## Automatic running boards (if equipped)

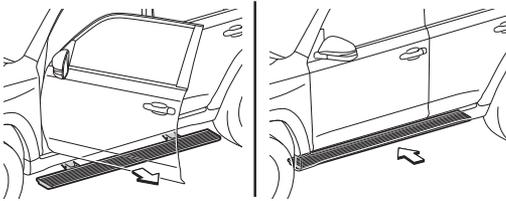


ON/OFF switch

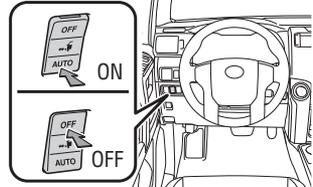

The automatic running boards are linked to side door operation. When a side door is opened or closed, the board on the same side extends or retracts.

## Garage door opener (HomeLink®)\* (if equipped)

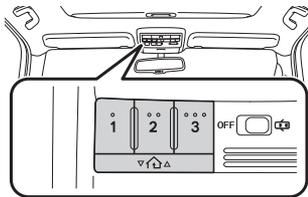

Garage door openers manufactured under license from HomeLink®\* can be programmed to operate garage doors, estate gates, security lighting, etc.

Refer to the Owner's Manual for more details.

For programming assistance, contact HomeLink® at 1-800-355-3515, or visit <http://www.homelink.com>.

\* HomeLink® is a registered trademark of Johnson Controls, Inc.

# SAFETY & EMERGENCY FEATURES


## Seat belts



**NOTE:** If a passenger's seat belt is fully extended, then retracted even slightly, the Automatic locking retractor (ALR) will prevent it from being re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the Owner's Manual.

## Seat belts-Shoulder belt anchor

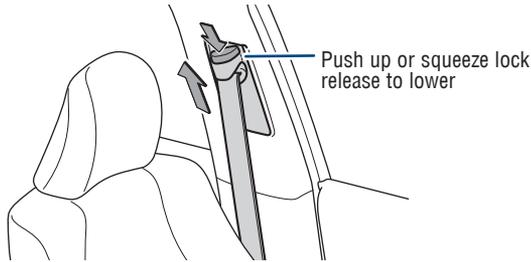


## Tire Pressure Monitoring (warning) System (TPMS)

If tire pressure becomes critically low on any of the tires, "(!)" indicator light will come on. Correctly adjusting tire inflation will turn off the light after a few minutes. If the light does not turn off, have the system checked by your Toyota dealer.

Refer to the Owner's Manual for more details.


## Rear door child safety locks

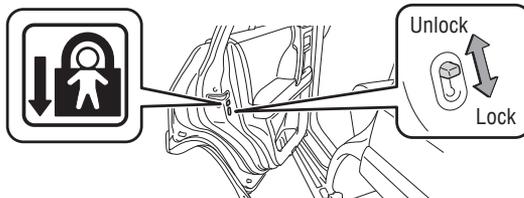

Moving the lever downward will allow the door to be opened only from the outside.


# Spare tire & tools

## TOOL LOCATION

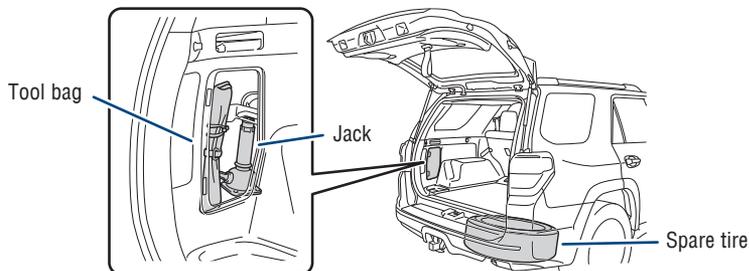


## REMOVING THE SPARE TIRE

(1)

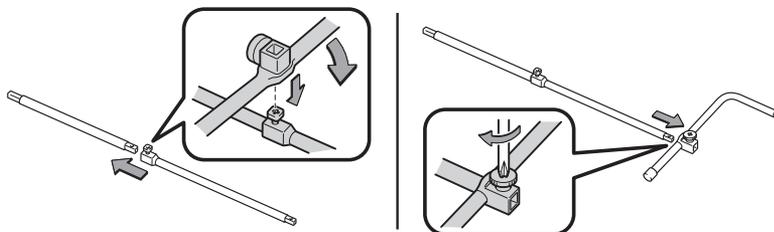


Assemble the jack handle.

(2)

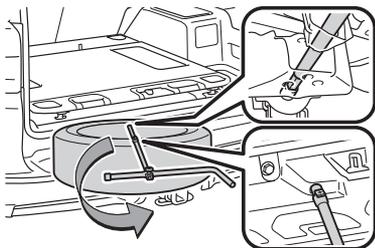

Insert the jack handle end through the opening in the bumper, and into the lowering screw.

(3)

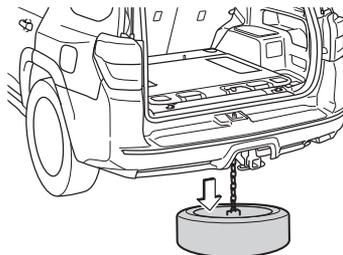

Turn the jack handle counterclockwise.

*Refer to the Owner's Manual for tire changing and jack positioning procedures.*

## SAFETY & EMERGENCY FEATURES

### **Star Safety System™**

Your vehicle comes standard with the Star Safety System™, which combines Anti-lock Braking System (ABS), Brake Assist (BA), Electronic Brake-force Distribution (EBD), Smart Stop Technology (SST), Traction Control (TRAC) and Vehicle Stability Control (VSC).

*Refer to the Owner's Manual for more details and important information on limitations to these systems.*

#### ANTI-LOCK BRAKE SYSTEM (ABS)

Toyota's ABS sensors detect which wheels are locking up and limits wheel lockup by "pulsing" each wheel's brakes independently. Pulsing releases brake pressure repeatedly for fractions of a second. This helps the tires attain the traction that current road conditions will allow, helping you to stay in directional control.

#### BRAKE ASSIST (BA)

Brake Assist is designed to detect sudden or "panic" braking, and then add braking pressure to help decrease the vehicle's stopping distance. When there's only a split second to react, Brake Assist can add additional brake pressure more quickly than just the driver alone can.

#### ELECTRONIC BRAKE FORCE DISTRIBUTION (EBD)

Toyota's ABS technology has Electronic Brake-force Distribution (EBD) to help maintain control and balance when braking. Abrupt stops can cause a vehicle to tilt forward, reducing the braking power of the rear wheels. EBD responds to sudden stops by redistributing brake force to enhance the braking effectiveness of all four wheels.

#### SMART STOP TECHNOLOGY (SST)

Smart Stop Technology automatically reduces engine power when the accelerator and brake pedals are pressed simultaneously under certain conditions.

SST engages when the accelerator is depressed first and the brakes are applied firmly for longer than one-half second at speeds greater than five miles per hour.

SST doesn't engage if the brake pedal is depressed before the accelerator pedal, allowing vehicles to start on a steep hill and safely accelerate without rolling backward.

#### VEHICLE STABILITY CONTROL (VSC)

VSC helps prevent loss of traction during cornering by reducing engine power and applying brake force to selected wheels.

Toyota's VSC monitors steering angle and the direction your vehicle is traveling. When it senses that the front or rear wheels begin to lose traction, VSC reduces engine power and applies braking to selected wheels. This helps restore traction and vehicle control.

## TRACTION CONTROL (TRAC)

VSC helps prevent loss of traction during cornering by reducing engine power, and Traction Control helps maintain traction on loose gravel and wet, icy, or uneven surfaces by applying brake force to the spinning wheel(s).



Toyota's TRAC sensors are activated when one of the drive wheels starts to slip. TRAC limits engine output and applies the brakes to the spinning wheel. This transfers power to the wheels that still have traction to help keep you on track.

## Floor mat installation

There are two types of Toyota floor mats: carpeted and all-weather. Each vehicle has model-specific floor mats. Installation is easy.

To keep your floor mat properly positioned, follow these steps:

- Only use Toyota floor mats designed for your specific model.
- Use only one floor mat at a time, using the retaining hooks to keep the mat in place.
- Install floor mats right side up.

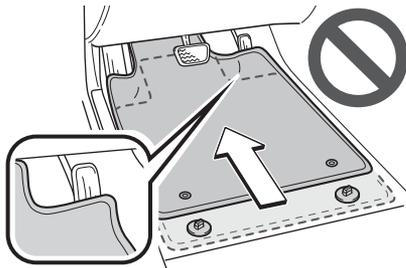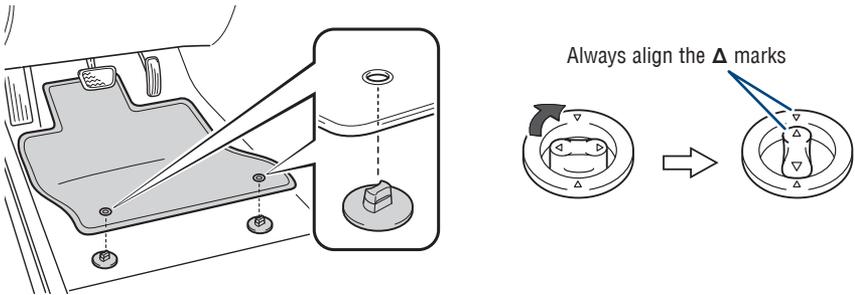

# **BLUETOOTH® DEVICE PAIRING SECTION**

Do not attempt the Bluetooth® Pairing process while driving.

To begin the Bluetooth® Pairing process, press the HOME button on the faceplate of your Toyota Vehicle Entune™ Multimedia Head Unit.<sup>1</sup>


## Bluetooth® Pairing for Android phone and Entune™ touch screen system

Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all Android mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.<sup>2</sup>

### Initiate Bluetooth® on your Android®



**STEP 1**  
From your **APPS SCREEN**, select **SETTINGS**.

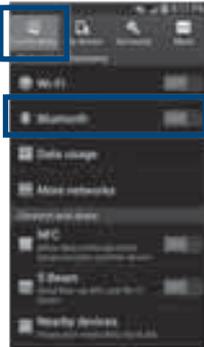

**STEP 2**  
Select **CONNECTIONS** and select **BLUETOOTH**.



**STEP 3**  
Ensure **BLUETOOTH** is **ON**.



**STEP 4**  
Select **YOUR PHONE DEVICE** to make it discoverable.

*Phone will seek out Bluetooth devices while remaining discoverable.*



### STEP 5

While your Android device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

<sup>1</sup> To determine which head unit is installed in your vehicle, refer to the Audio section in this guide. Entune™ Premium Audio screens are shown in this section. Screens and features may vary by Entune™ system.

<sup>2</sup> Some Android devices may have slightly different SETTINGS screen layout depending on manufacturer of device and Android OS version.

# BLUETOOTH® DEVICE PAIRING


## Initiate Bluetooth® on your Entune™ Multimedia Head Unit

Once you have Bluetooth enabled on your phone and ready to pair, you will need to initiate Bluetooth on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.



### STEP 6

On your Toyota Vehicle Entune Multimedia Head Unit, Select **SETUP BUTTON** on the Home Screen.

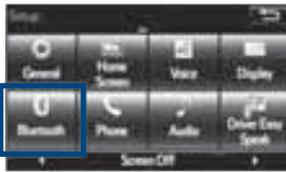

### STEP 7

Select **BLUETOOTH**.


*Image shown is a sample image, features may vary.*



### STEP 8

Select **ADD**, to add your phone device.

For Entune™ Audio System, press the **SETUP BUTTON** on the faceplate to access the Setup Screen.

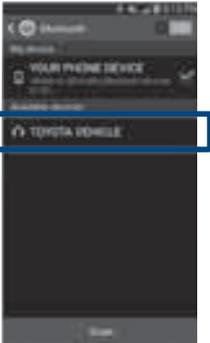

### STEP 9

Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.

*You may need to enter the provided Bluetooth PIN on your phone.*



### STEP 10

Your smartphone is now paired with Entune.



### STEP 11

Once paired, Entune will attempt to connect audio and contacts on your phone.

## Initiate Bluetooth® on your Entune™ Multimedia Head Unit



### STEP 12

Using your smartphone, you will need to allow Entune access to your messaging and contacts.

*It is recommended to check the "Don't ask again" box, so as not to have to press OK every time the phone makes a Bluetooth connection with your Toyota.*



### STEP 13

A confirmation will appear once your phone has been paired and connected.

#### Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:  
[www.toyota.com/connect](http://www.toyota.com/connect)

Your Toyota Owner's Manual  
Located in the vehicle glovebox

Toyota Customer  
Experience Center  
(800) 331-4331

#### Disclosures

This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.

1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
3. Android is a trademark of Google Inc.
4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See [Toyota.com/entune](http://Toyota.com/entune) for details.

## Bluetooth® Pairing for iPhone and Entune™ touch screen system


**\*\*Do not attempt the Bluetooth® Pairing process while driving.\*\***

Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all iPhone mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.

### Initiate Bluetooth® on your iPhone®



**STEP 1**  
From the **HOME SCREEN**, select **SETTINGS**.

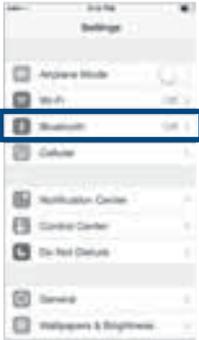

**STEP 2**  
Select **BLUETOOTH**.



**STEP 3**  
Ensure **BLUETOOTH** is **ON**.



**STEP 4**  
Your iPhone will seek out Bluetooth devices while remaining discoverable.



**STEP 5**  
While your iPhone device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

## Initiate Bluetooth® on your Entune™ Multimedia Head Unit


Once you have Bluetooth enabled on your phone and ready to pair, you will need to initiate Bluetooth on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.



### STEP 6

On your Toyota Vehicle Entune Multimedia Head Unit, Select **SETUP BUTTON** on the Home Screen.

For Entune™ Audio System, press the **SETUP BUTTON** on the faceplate to access the Setup Screen.

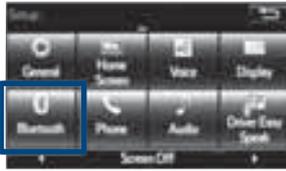

### STEP 7

Select **BLUETOOTH**.

*Image shown is a sample image, features may vary.*



### STEP 8

Select **ADD**, to add your phone device.



### STEP 9


Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.

*You may need to enter the provided Bluetooth PIN on your phone.*



### STEP 10


Your smartphone is now paired with Entune.

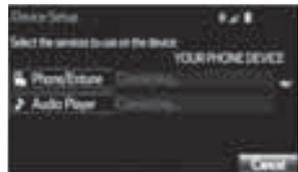

### STEP 11

Once paired, Entune will attempt to connect audio and contacts on your phone.

# BLUETOOTH® DEVICE PAIRING

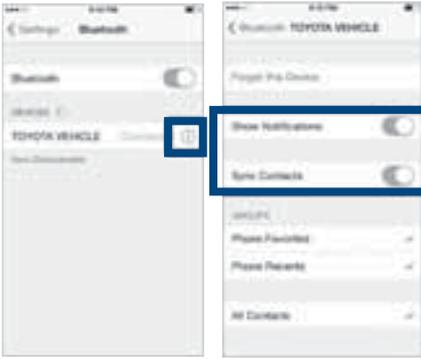

## STEP 12

Using your smartphone, you may need to allow Entune access to your messaging and contacts.

*Only current iPhone text messages can be viewed on the head unit. iPhone does not allow text message reply.*



## STEP 13

A confirmation will appear once your phone has been paired and connected.

### Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:  
[www.toyota.com/connect](http://www.toyota.com/connect)

Your Toyota Owner's Manual  
Located in the vehicle glovebox

Toyota Customer  
Experience Center  
(800) 331-4331

### Disclosures

This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.

1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
3. Android is a trademark of Google Inc.
4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.

## Bluetooth® Pairing for Windows Phone and Entune™ touch screen system

**\*\*Do not attempt the Bluetooth® Pairing process while driving.\*\***

Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all Windows Phone mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.

### Initiate Bluetooth® on your Windows Phone®



#### STEP 1

From your APP LIST, select **SETTINGS**.



#### STEP 2

Select **BLUETOOTH**.



#### STEP 3

Ensure **BLUETOOTH** is **ON**.



#### STEP 4

Phone will seek out Bluetooth devices while remaining discoverable.



#### STEP 5

While your iPhone device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

# BLUETOOTH® DEVICE PAIRING


## Initiate Bluetooth® on your Entune™ Multimedia Head Unit

Once you have Bluetooth® enabled on your phone and ready to pair, you will need to initiate Bluetooth® on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.



### STEP 6

On your Toyota Vehicle Entune Multimedia Head Unit, Select **SETUP BUTTON** on the Home Screen.

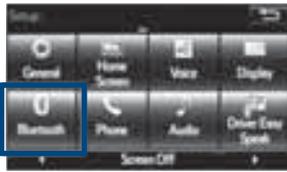

### STEP 7

Select **BLUETOOTH**.


*Image shown is a sample image, features may vary.*



### STEP 8

Select **ADD**, to add your phone device.

For Entune™ Audio System, press the **SETUP BUTTON** on the faceplate to access the Setup Screen.

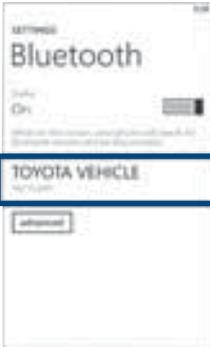

### STEP 9


Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.

*You may need to enter the provided Bluetooth PIN on your phone.*



### STEP 10

Your smartphone is now paired with Entune.

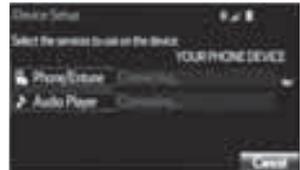

### STEP 11


Once paired, Entune will attempt to connect audio and contacts on your phone.

## Initiate Bluetooth® on your Entune™ Multimedia Head Unit



### STEP 12

Using your smartphone, you may need to allow Entune access to your contacts.

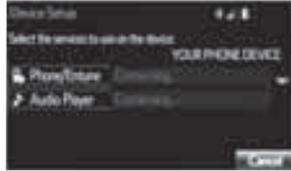

### STEP 13

A confirmation will appear that your phone has been paired and connected.

#### Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:  
[www.toyota.com/connect](http://www.toyota.com/connect)

Your Toyota Owner's Manual  
Located in the vehicle glovebox

Toyota Customer  
Experience Center  
(800) 331-4331

#### Disclosures

This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.

1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
3. Android is a trademark of Google Inc.
4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See [Toyota.com/entune](http://Toyota.com/entune) for details.



[www.toyota.com/owners](http://www.toyota.com/owners)

CUSTOMER EXPERIENCE CENTER  
1-800-331-4331



Printed in U.S.A. 8/17  
17-MKG-10181



00505QRG184RUN