

# MIRAI

## 2 0 1 8

QUICK REFERENCE GUIDE

# 2018

## MIRAI

This Quick Reference Guide is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The Quick Reference Guide is not intended as a substitute for the Owner's Manual located in your vehicle's glove box. We strongly encourage you to review the Owner's Manual and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor North America, Inc. wish you many years of satisfied driving in your new Mirai.

### *A word about safe vehicle operations*

This Quick Reference Guide is not a full description of Mirai operations. Every Mirai owner should review the Owner's Manual that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the Owner's Manual. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this Quick Reference Guide is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

# INDEX

## OVERVIEW

Fuel door release button and cap	8
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Instrument panel light control	8
Keyless entry <sup>1,2</sup>	6-7
Smart Key System <sup>1,2</sup>	7

## HYDROGEN FUEL CELL SYSTEM & SAFETY FEATURES

Hydrogen Fuel Cell System	9-11
Water release (H <sub>2</sub> O) switch	12

## FEATURES & OPERATIONS

Audio	23
Auto lock/unlock <sup>1,2</sup>	13
Automatic air conditioning system	22
Automatic High Beams (AHB)	20
Automatic transmission	14-15
Blind Spot Monitor with Rear Cross Traffic Alert (BSM w/RCTA)	19
Clock	26
Door locks	15
Dynamic Radar	
Cruise Control (DRCC)	28-29
Garage door opener (Homelink®) <sup>3</sup>	29
Lane Departure Alert (LDA)	17
Lights <sup>1</sup> & turn signals	21
Luggage security system	13
Multi-Information Display (MID)	27
Parking brake	13
Power outlets	24
Pre-Collision System (PCS)	18
Seat adjustments-Front	16
Seat heaters	16
Seats-Folding down rear seats	17
Seats-Head restraints	16
Steering wheel switches & telephone controls (Bluetooth®)	25

## FEATURES & OPERATIONS (continued)

Tilt & telescopic steering wheel	15
USB/AUX port	23
Windows-Power	21
Windshield wipers & washer	20
Wireless charger	24

## SAFETY & EMERGENCY FEATURES

Emergency tire puncture repair kit	30
Floor mat installation	33
Rear door child safety locks	31
Seat belts	31
Seat belts-Shoulder belt anchor	31
Star Safety System™	32-33
Tire Pressure Monitoring (warning) System (TPMS)	30


## BLUETOOTH® DEVICE PAIRING SECTION 34-36

<sup>1</sup> Visit your Toyota dealer for information on customizing this feature.


<sup>2</sup> Programmable by customer. Refer to the Owner's Manual for instructions and more information.

<sup>3</sup> HomeLink® is a registered trademark of Gentex Corporation.

# Instrument panel

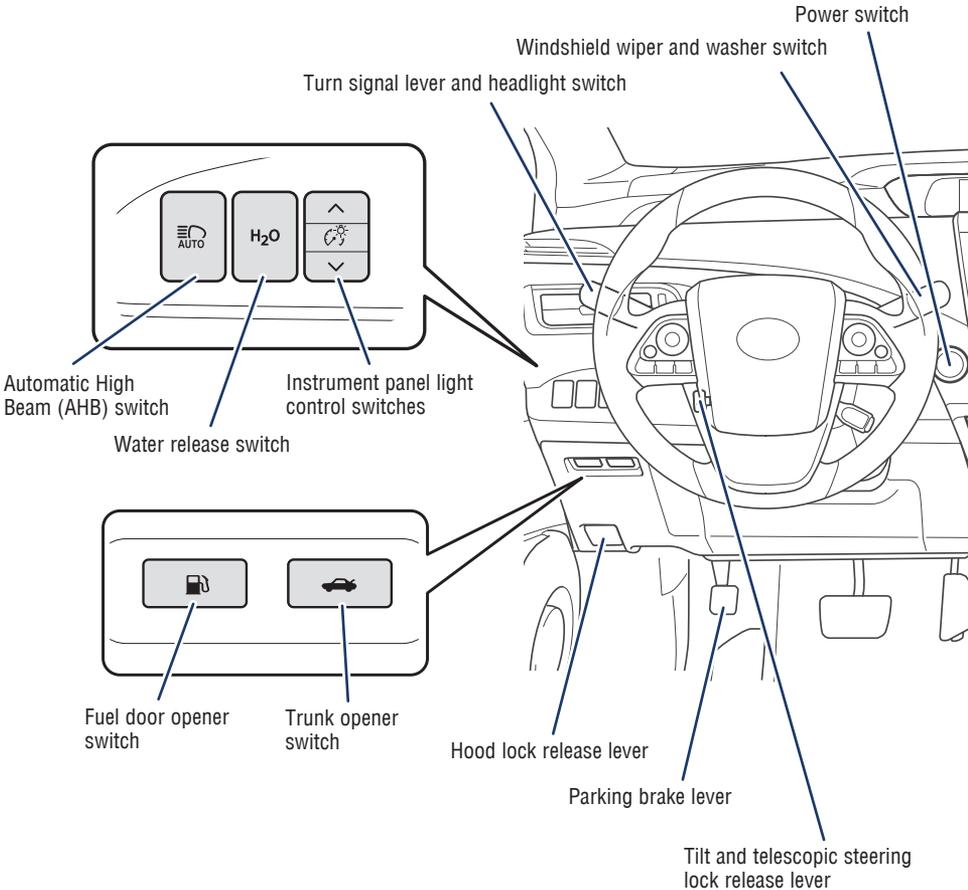


<sup>1</sup> For details, refer to the “Navigation System Owner’s Manual” or “2018 Entune™ 3.0 Audio Quick Reference Guide.”

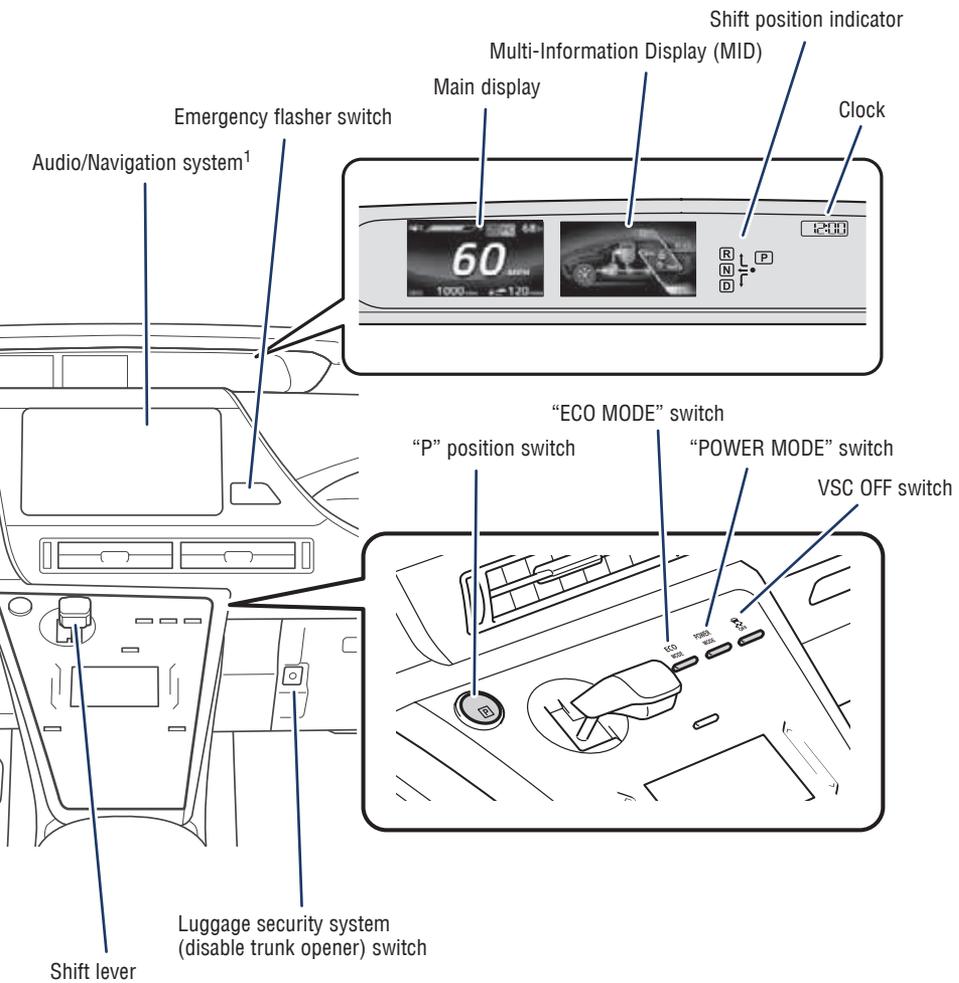

# OVERVIEW

## Instrument cluster

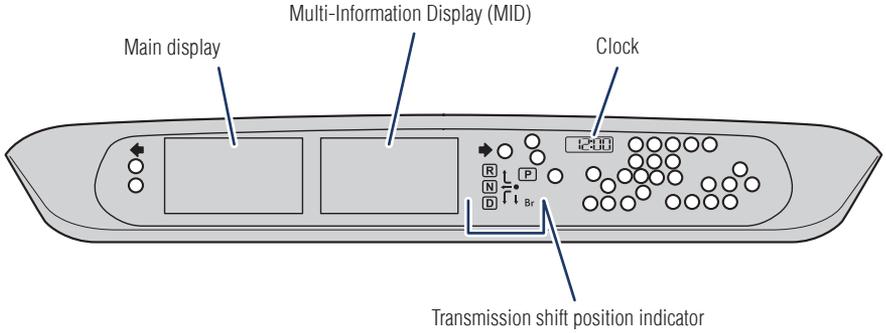

## Indicator symbols

For details, refer to "Indicators and warning lights," Section 3, 2018 Owner's Manual.



Airbag ON/OFF indicator



Airbag SRS warning<sup>1</sup>



Anti-lock Brake System (ABS) warning<sup>1</sup>



Automatic high beam (AHB) indicator



Blind Spot Monitor (BSM) indicator



Blind Spot Monitor (BSM) outside rearview mirror indicator



Brake Override System/  
Drive-Start Control warning light



Brake system warning<sup>1</sup>



Brake system warning  
(yellow indicator)<sup>1</sup>



Charging system warning<sup>1</sup>



**SET**

Constant speed cruise control indicator<sup>2</sup>/Constant speed cruise control SET indicator<sup>2</sup>



Driver's and passenger's seat belt reminder (alarm will sound if speed is over 12 mph)



**SET**

Dynamic Radar Cruise Control (DRCC) indicator<sup>2</sup>/DRCC SET indicator<sup>2</sup>



ECO mode indicator



Electric power steering system warning<sup>1</sup>



Engine brake (Br) mode indicator



Headlight low/high beam indicator



High coolant temperature warning<sup>1</sup>



H<sub>2</sub> Hydrogen leak warning<sup>1</sup>



H<sub>2</sub>O H<sub>2</sub>O indicator



Intuitive parking assist indicator



Lane Departure Alert (LDA) indicator



Low fuel level warning



Low tire pressure warning<sup>1</sup>



Master warning<sup>1</sup>



Open door warning



Parking brake warning<sup>1</sup>



POWER mode indicator



Power restriction indicator



Pre-Collision System (PCS) warning<sup>1</sup>



READY indicator



Security indicator



Shift position indicator



Slip indicator<sup>1</sup>



Turn signal indicator



Vehicle Stability Control OFF indicator

<sup>1</sup> If indicator does not turn off within a few seconds of starting Hydrogen Fuel Cell System, there may be malfunction. Have vehicle inspected by your Toyota dealer.

<sup>2</sup> If this light flashes, refer to "Dynamic Radar Cruise Control," Section 5-5, 2018 Owner's Manual.

# OVERVIEW

## Keyless entry

### UNLOCKING



Push  
ONCE: Driver door  
TWICE: All doors

Carry remote  
Smart key feature

Driver door unlock\*

Grasp



**NOTE: If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.**

### LOCKING




Push

Carry remote  
Smart key feature

All-door lock

Touch

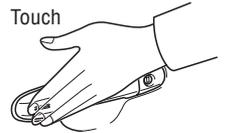

### TRUNK LID




**HOLD**



Push and hold

Carry remote  
Smart key feature

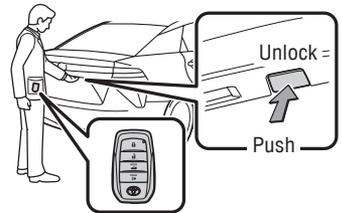

\* Driver door unlocking function can be programmed to unlock driver door only, or all doors. Grasping passenger door handle will unlock all doors.

**NOTE: Doors may also be locked/unlocked using remote.**

## PANIC BUTTON



**HOLD**  
  
Push and hold



## Smart Key system


### START FUNCTION




- (1) Depress the brake pedal, and press the “POWER” switch briefly and firmly.
- (2) The “READY” light will blink. After a few seconds, when the light remains steady and a beep sounds, you may begin driving.

### POWER (WITHOUT STARTING THE FUEL CELL SYSTEM)


Without depressing the brake pedal, pressing the “POWER” switch will change the operation mode in succession from:

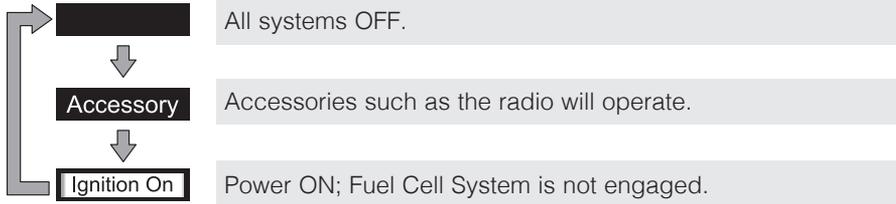


## Instrument panel light control

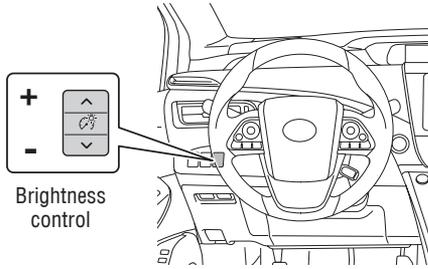

## Fuel door release button and cap

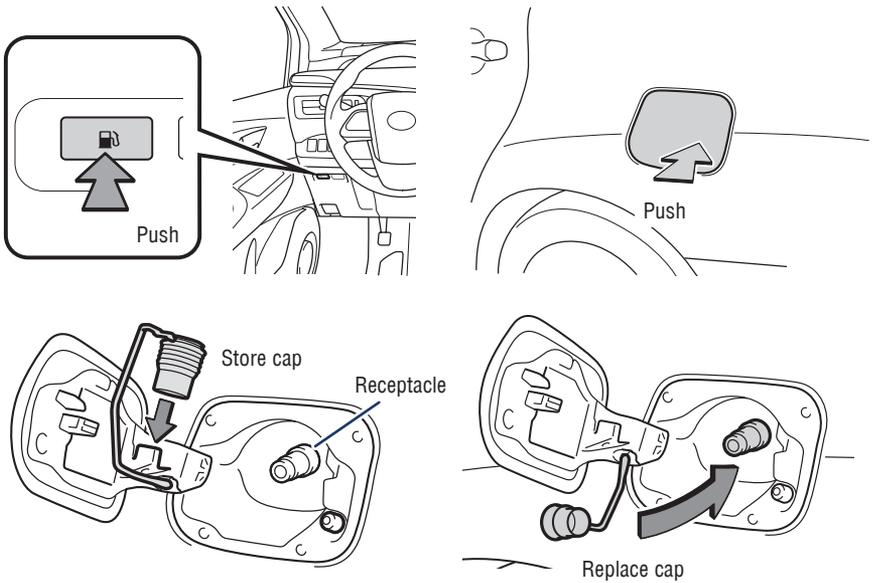

### Alternate fuel door release (located in left rear of trunk)

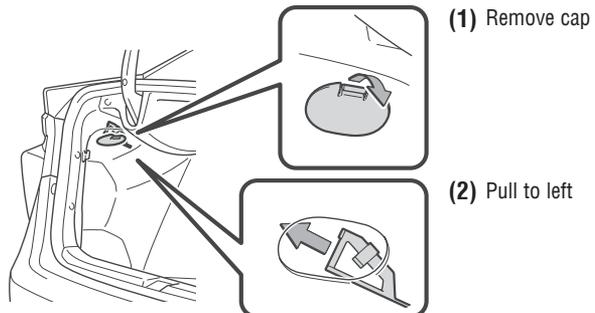

When the fuel door is open, the fuel cell system will not start. When the "READY" indicator is on, the fuel door will not open.

# HYDROGEN FUEL CELL SYSTEM & SAFETY FEATURES

## Hydrogen Fuel Cell System

Fuel cell vehicles efficiently use electricity, which is generated by a chemical reaction between hydrogen and oxygen in a fuel cell stack. Excess electricity is stored in a traction battery that is used to power high voltage systems and assist on initial acceleration.

The fuel is H<sub>2</sub> (compressed hydrogen gas), so the exhaust, when running, is only water and water vapor. As they do not emit CO<sub>2</sub> (Carbon Dioxide) and NO<sub>x</sub> (Nitrogen Oxides) at the tailpipe, fuel cell vehicles are considered zero emission vehicles.

**NOTE: Fuel consumption and energy information of the Hydrogen Fuel Cell System are shown on the Multi-Information Display.**

### TIPS FOR IMPROVED FUEL ECONOMY

- Ensure tire pressures are maintained at levels specified in the Owner's Manual.
- Drive vehicle smoothly. Avoid abrupt acceleration and deceleration.
- Avoid driving at speeds that are higher than necessary, especially on the highway.
- When possible, avoid sudden stops to maximize regenerative braking energy.
- Minimize use of the air conditioning.

Fill with fuel at hydrogen stations compliant with SAE J2601.

If you have questions about hydrogen station compliance, consult your Authorized Mirai Fuel Cell Toyota Dealer.

Observe the notices and cautions shown at the hydrogen station.

The filling time and amount may differ depending on the equipment of the hydrogen station. It may make the possible driving distance shorter.

### BEFORE FUELING

When you arrive at the station, prepare for fueling:

- 1) Ensure vehicle is OFF and in Park with parking brake set.
- 2) Press the fuel door release button and refer to instructions in 'Fuel door release button and cap section' to prepare the vehicle to accept hydrogen fuel.


**Note: Fuel door will not release the lock if power switch is ON or if READY indicator is on. The fuel door will automatically re-lock if you don't open within 30 seconds.**

- 3) Now you are ready to refuel. Outside the vehicle at the pump, use the station's best practice guidelines and instructions on how to refuel using their nozzle.

For assistance, call Customer Support toll free at 1-800-331-4331.


# HYDROGEN FUEL CELL SYSTEM & SAFETY FEATURES

## WEH H70 HYDROGEN GAS NOZZLE

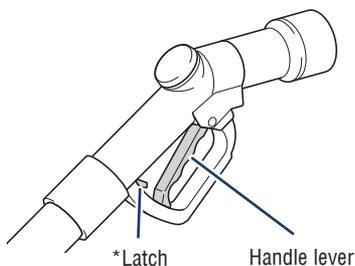


**\*The integrated hand grip locks and unlocks the nozzle, creating a secure connection for safe fueling.**

### Seat nozzle on receptacle

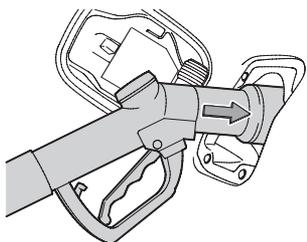

**(1)** Seat nozzle onto receptacle fully.

**(2)** Squeeze handle lever to lock. (To unlock nozzle, release latch on hand grip when you are finished dispensing fuel.)

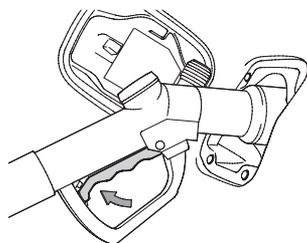


**(3)** Gently pull back on nozzle to ensure it is locked onto receptacle.


Once nozzle is secure, you can follow station's instructions to begin dispensing fuel.

**CAUTION:** It is important to ensure that the nozzle lock is properly engaged to the vehicle. Failure to do this may result in the nozzle **coming off when the flow of hydrogen begins**. This may result in damage to the nozzle, station, vehicle, your own person or people near the fueling station.

**(4)** After fueling is complete, pull the latch to unlock the hand grip and remove the hydrogen gas nozzle.

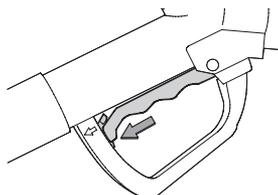


## WEH H35 HYDROGEN GAS NOZZLE

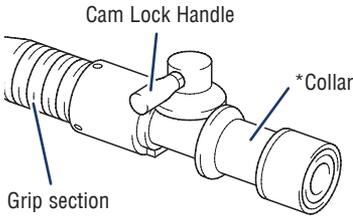


**\*Integrated collar snaps into place with a 'click.' Rotate cam lock clockwise to secure connection for safe fueling.**

### Seat nozzle on receptacle


(1) Make sure handle is in the OFF position.

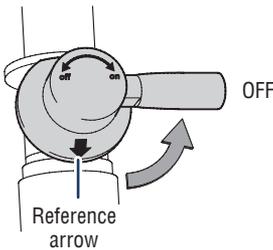


(2) Holding grip section and collar, seat nozzle onto receptacle.

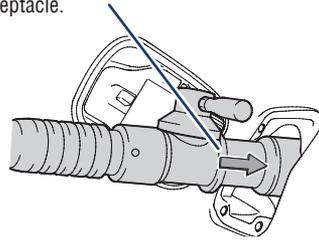

(3) Rotate handle clockwise to ON position to lock nozzle.

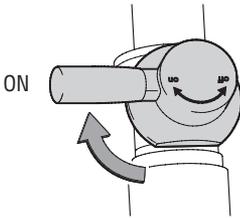

(4) Holding grip section, pull back on collar to make sure nozzle is securely locked. Once nozzle is secure, you can follow station's instructions to begin dispensing fuel.

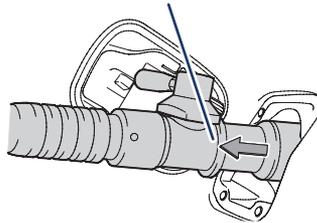

### Remove nozzle

(5) After filling is complete, rotate handle back to the OFF position.

(6) Holding grip section, pull back on collar to unlock and remove the fuel nozzle.


### TIP-AFTER REFUELING

**NOTE: If the nozzle cannot be removed after fueling, it may be frozen to the vehicle. Wait for the hydrogen nozzle to thaw before attempting to remove. Do not pull or rotate the hydrogen nozzle forcibly. Failure to follow these precautions may cause damage.**

*Refer to the Refueling section in the Owner's Manual for additional warnings/notices.*

# HYDROGEN FUEL CELL SYSTEM & SAFETY FEATURES

## Water release (H<sub>2</sub>O) switch

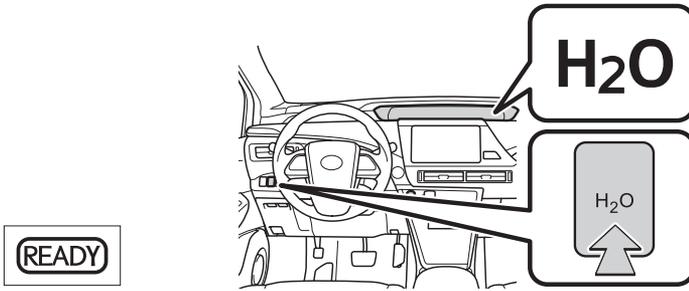

Water is a natural by-product of the fuel cell process. The system is designed to automatically purge water from the drain pipe at the rear of the vehicle while driving and sometimes while it is shut off.

Water can be manually purged before parking in certain situations by pressing the "H<sub>2</sub>O" switch with the vehicle in "READY" mode. The system will regulate water levels automatically. Drivers should typically let the vehicle handle this as opposed to using this switch.

*Refer to the Owner's Manual for more details on this system before attempting to use it.*

# FEATURES & OPERATIONS

## Auto lock/unlock

Automatic door lock functions can be set, or turned OFF.

- Doors lock when shifting to any positions other than P.
- Doors lock when the vehicle speed is approximately 12 mph or higher.
- Doors unlock when shifting into P.
- Doors unlock when the driver's door is opened.

Refer to the Owner's Manual for more details.


## Parking brake

**BRAKE**



Set: Depress  
Release: Depress again

### P POSITION SWITCH

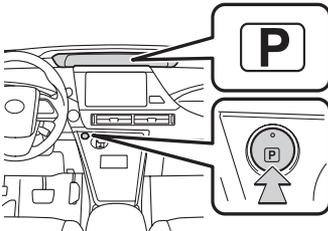


- (1) Fully stop the vehicle
- (2) Keep depressing the brake pedal
- (3) Press the P position switch.

The shift position can be changed to P through the use of the P position switch.

## Luggage security system

To protect luggage stored in the trunk against theft, the luggage security system can be set to on.

### Trunk opener main switch (in the glove box)

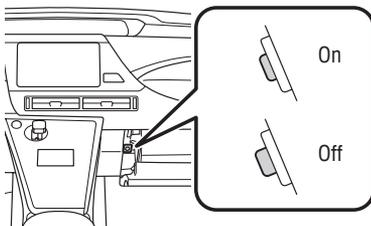


To disable the trunk opener switch, turn the main switch.

When the main switch is off, the trunk lid cannot be opened even with the wireless remote control or the entry function.


# FEATURES & OPERATIONS

## Automatic transmission

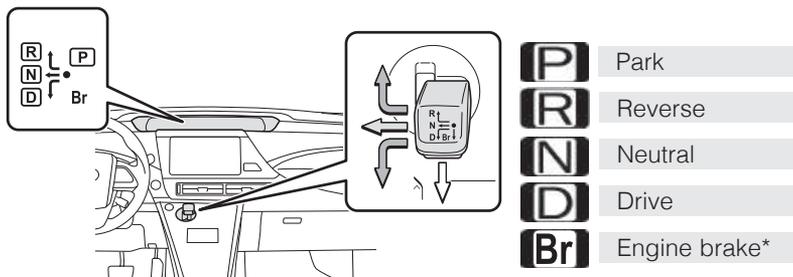


\* The engine brake is the equivalent of downshifting. Shift to “Br” when strong regenerative braking is desired (i.e. downhill driving, coasting to a stop, etc.).

### ECO MODE

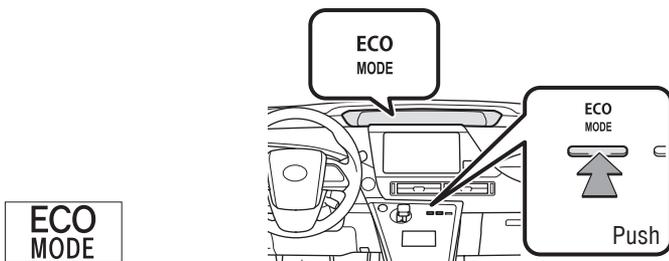


ECO Mode helps achieve low fuel consumption during trips that involve frequent accelerating and braking.

### POWER MODE

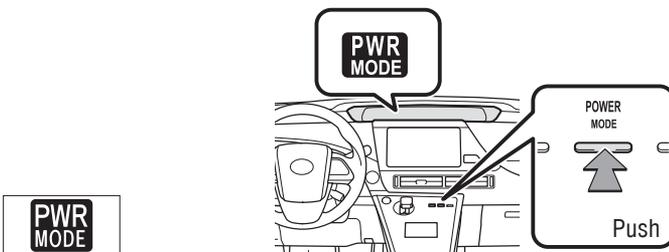


Use when a higher level of response is desired, such as when driving in mountainous regions or overtaking.

Br

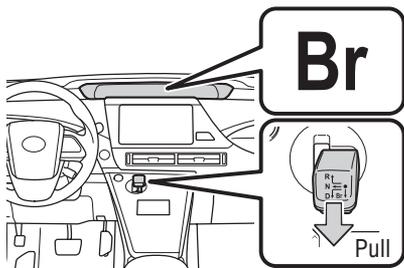

Suitable for driving that requires strong regenerative braking, such as down-hill driving, etc. To select Br mode, shift the shift lever down.

## Tilt & telescopic steering wheel

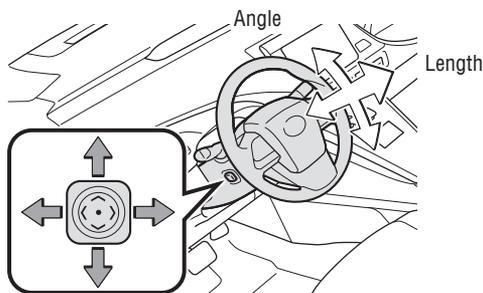


Push lever to move steering wheel:

- up, down to adjust angle,
- left, right to adjust length (toward driver and away from driver.)

**NOTE: Do not attempt to adjust while the vehicle is in motion.**


## Door locks

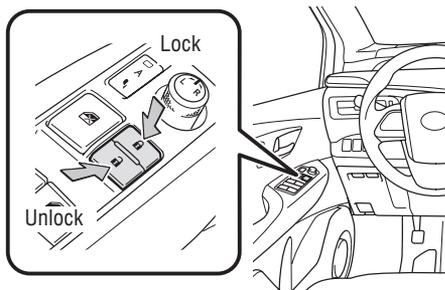

# FEATURES & OPERATIONS

## Seat adjustments-Front


DRIVER'S SIDE

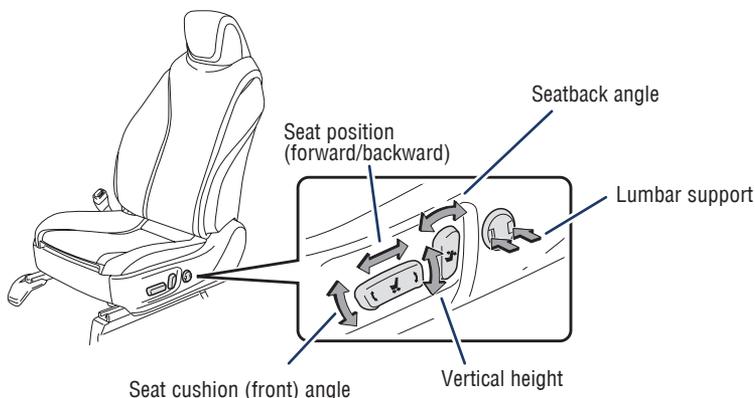

**Note:** Be careful to not allow the head rest to touch the ceiling.


## Seats-Head restraints

Front vertical adjust

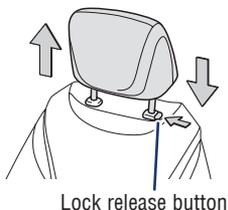


Lock release button

Front horizontal adjust

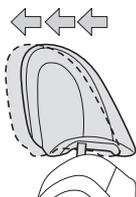


Rear vertical adjust

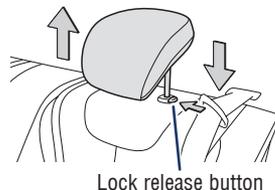

Lock release button

## Seat heaters


Front seat

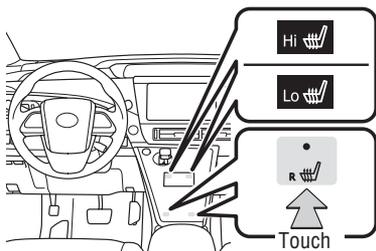

Touch switch to change temperature intensity.



Rear passenger seat

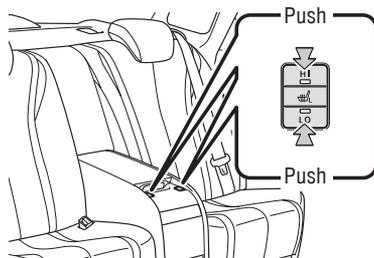

Push button to change temperature intensity. Depress again and light indicates heater is off.

## Lane Departure Alert (LDA)


Camera sensor



While driving on a road that has visible lane markers, this system is designed to recognize lane markers using a camera sensor and alerts the driver when the vehicle deviates from its lane.

Refer to the Owner's Manual for more details on this system before attempting to use it.

### TURNING THE LDA SYSTEM ON

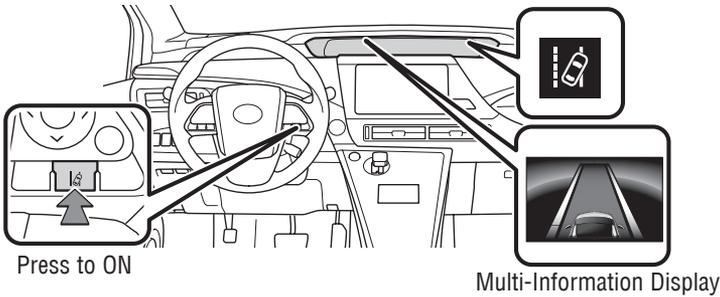

Press the LDA switch (in steering wheel) to turn the LDA system ON, the indicator will illuminate. Press again to turn OFF.

### INDICATION ON THE MULTI-INFORMATION DISPLAY (MID)



When the inside of both lane lines turn white:

- Indicates that both right and left lane markers are recognized.

When the inside of either lane line turns white:

- Indicates that the lane marker on the white-marked side is recognized.

When the inside of both lane lines are black:

- Indicates that no lane markers are recognized or the LDA system is temporarily canceled.

## FEATURES & OPERATIONS

### Pre-Collision System (PCS)




When a high possibility of a frontal collision is detected by the radar sensor, a buzzer sounds and a message urging the driver to take evasive action appears on the multi-information display. If the driver then applies brakes, the system applies greater brake force in relation to how strongly the brake pedal is depressed. If the system determines that a collision is unavoidable, the brakes are automatically applied to reduce the collision speed. The system is enabled each time the power switch is turned to ON mode.


Refer to the Owner's Manual for more details on this system before attempting to use it.

#### CHANGING THE PRE-COLLISION WARNING TIMING

Each time the Pre-Collision System switch is pressed, the response to the distance changes as follows:

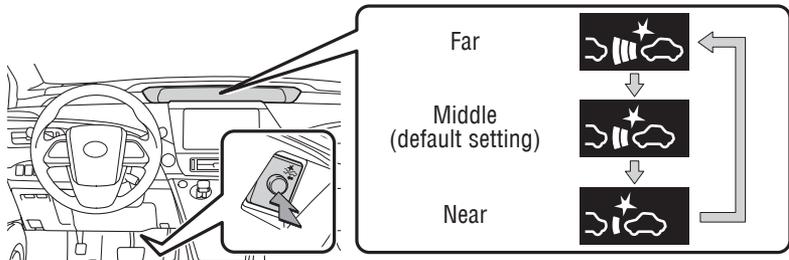


#### DISABLING THE PRE-COLLISION SYSTEM

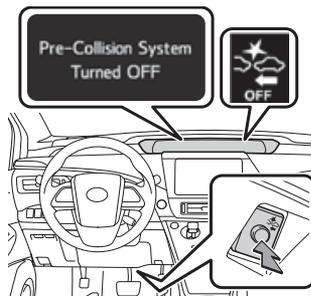


Press the PCS switch for 3 seconds or more.

# Blind Spot Monitor with Rear Cross Traffic Alert (BSM w/RCTA)

Outside rear view mirror indicators

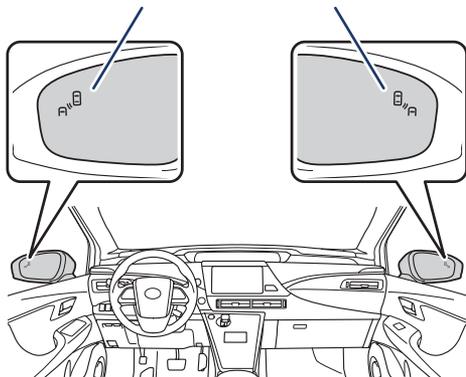

Rear cross Traffic Alert buzzer

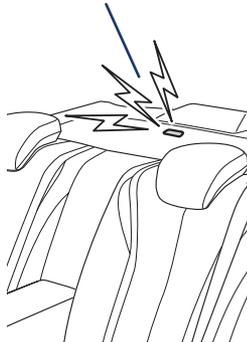


## The Blind Spot Monitor is a system that has two functions:

- The Blind Spot Monitor function (assists the driver in making the decision when changing lanes)
- The Rear Cross Cross Traffic Alert function (assists the driver when backing up)

The system is designed to use radar sensors to detect vehicles traveling in the Mirai's blind spot and advises the driver of the vehicles' presence via the outside rear view mirror indicator

Refer to the Owner's Manual for more details on this system before attempting to use it.

## TURN THE BSM SYSTEM ON

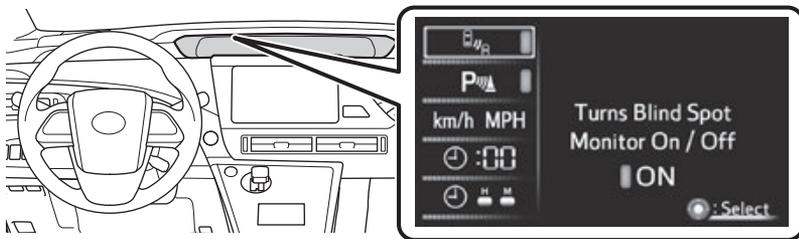


To turn ON (activate)/OFF (deactivate) from multi-information display, select .

# FEATURES & OPERATIONS

## Windshield wipers & washer

### OPERATING WIPER LEVER

\* When AUTO is selected, wipers will operate automatically when sensor detects falling rain.

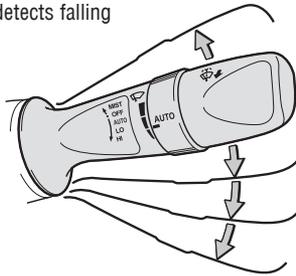

Single wipe


Off

Interval wipe\*

Slow

Fast


Increase

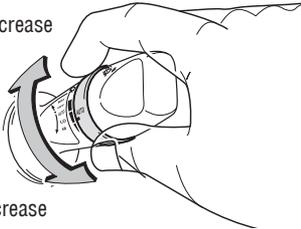


Decrease

Select AUTO to increase or decrease sensor sensitivity.


Pull to wash and wipe

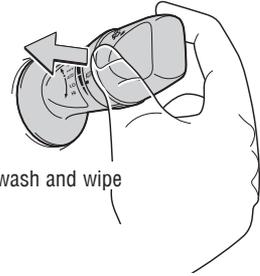

## Automatic High Beams (AHB)

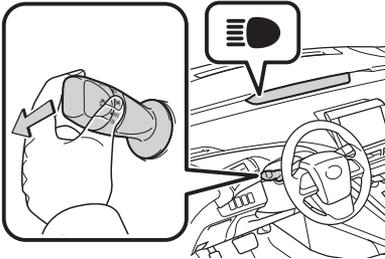

1) Activate the system

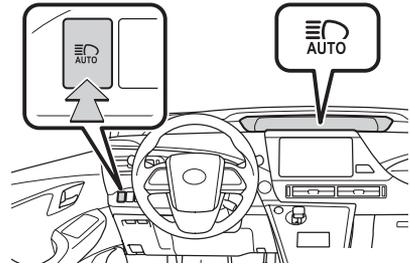

2) Press the Automatic High Beam switch


The Automatic High Beam uses an in-vehicle camera sensor to assess the brightness of streetlights, the headlights of oncoming vehicles and the taillights of preceding vehicles and is designed to automatically turn high beams on or off as necessary.

To turn the high beams on/off manually, pull the lever to the original position or press the switch.

Refer to the Owner's Manual for more details on this system before attempting to use it.

# Lights & turn signals

## HEADLIGHTS

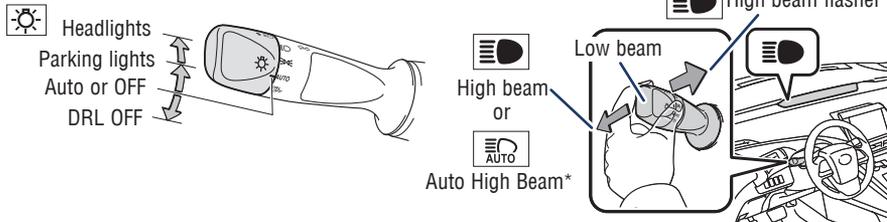


**Daytime Running Light system (DRL)** Automatically turns on the headlights at a reduced intensity on some models.

**Automatic light cut off system** Automatically turns lights off after a delay of 30 seconds, or the lock switch on remote is pushed after all doors are locked.


**Automatic High Beam (AHB) system** Automatically switches between high and low beams as appropriate to provide the most light possible and enhance forward visibility. *Refer to the Owner's Manual for more details on the Automatic High Beam feature.*

\* Operating conditions must be met. Refer to Owner's Manual for details.

## TURN SIGNALS

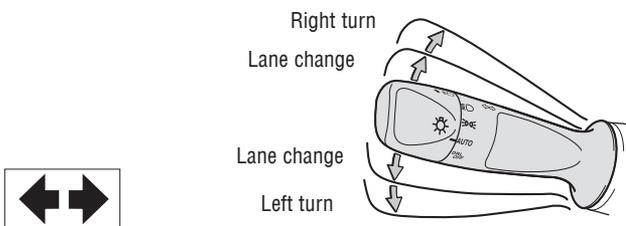


# Windows-Power

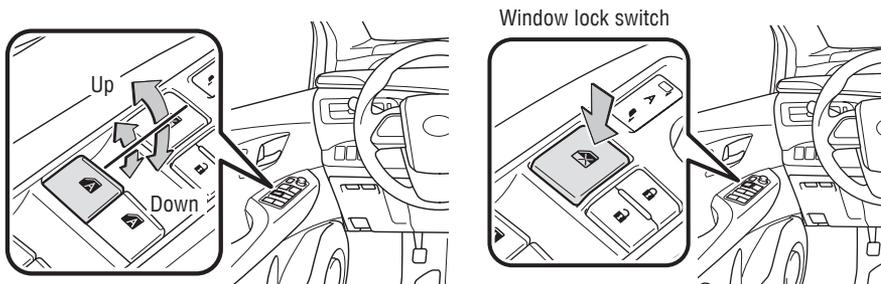

**Automatic operation** Push the switch completely down or pull it completely up and release to fully open or close. To stop the window partway, operate the switch in the opposite direction.

**Window lock switch** Deactivates all passenger windows. Driver's window remains operable.

# Automatic air conditioning system

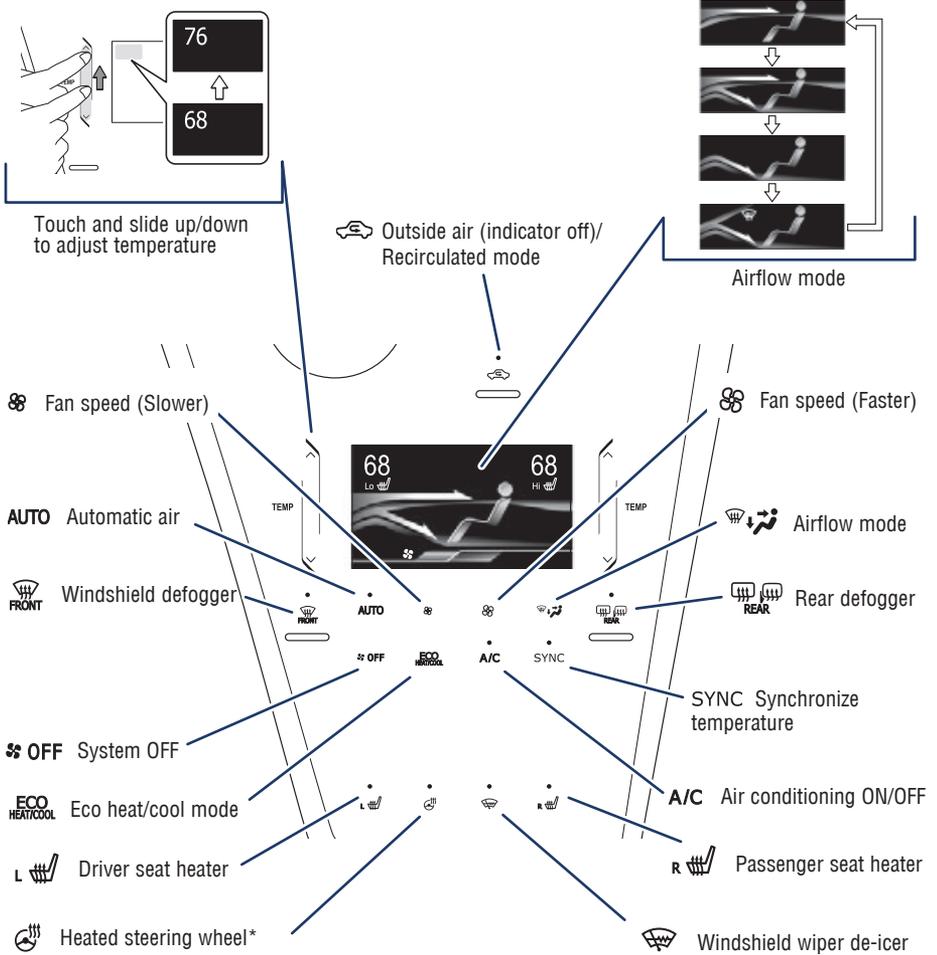


When adjusting the temperature setting a sound buzzes and automatically sets temperature, fan outlet and speed.

\*Turns off automatically after 30 minutes


# Audio

## Entune™ 3.0 Audio

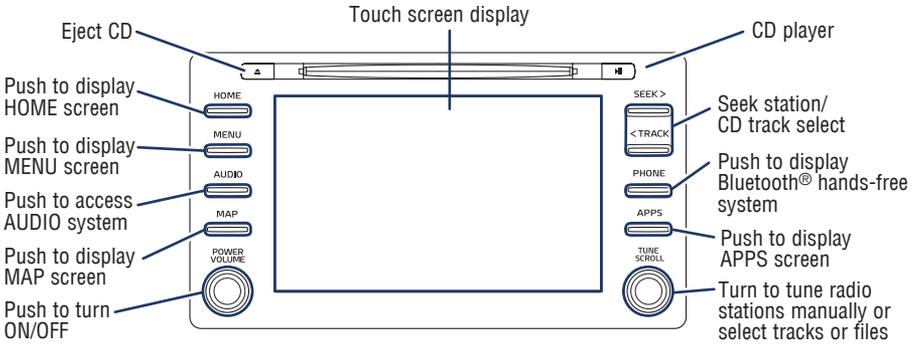

Refer to the Navigation System Owner's Manual and 2018 Entune™ 3.0 Audio Quick Reference Guide for more details.

## USB/AUX port

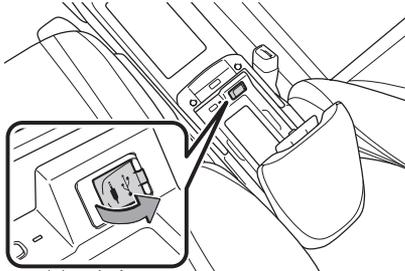


By inserting a USB or an auxiliary cable plug into the USB/AUX port, you can listen to music from a portable audio device through the vehicle's speaker system while in USB/AUX mode.

# FEATURES & OPERATIONS

## Power outlets


12V DC

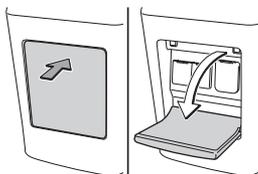

Push to open cover



## USB CHARGERS

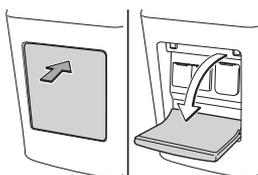


Push to open cover




Designed for car accessories. Power switch must be set at "ACCESSORY" or "ON" in order to use power outlets.


## Wireless charger

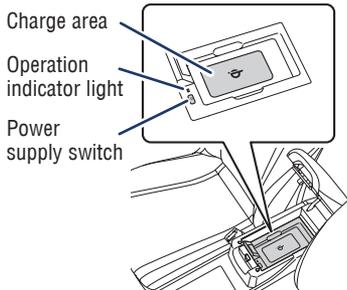

(1) Open console box

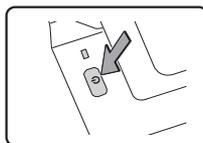

(2) Press power button, indicator light turns on when in operation. (green)

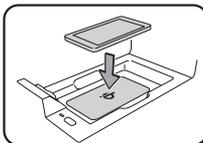


(3) Place charging side of portable device down and light indicates when it is charging. (orange)


Designed for car accessories. Power switch must be set at "ACCESSORY" or "ON" in order to use power outlets.

# Steering wheel switches & telephone controls (Bluetooth®)

## Steering wheel telephone switches

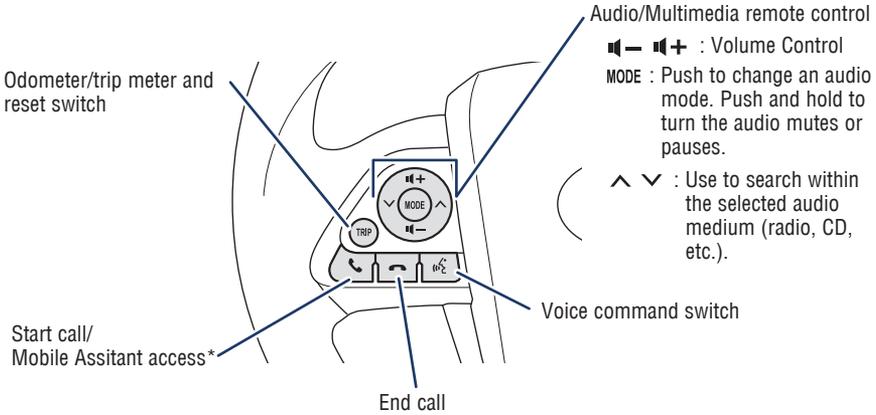

## Microphone

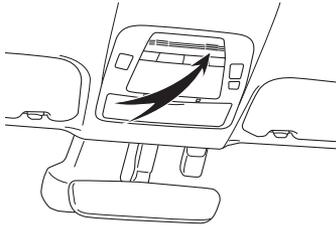

Bluetooth® technology allows dialing or receipt of calls without removing your hands from the steering wheel or using a cable to connect the compatible telephone and the system.


\* Push and hold to access Mobile Assistant. Once you connect a compatible, registered mobile phone, you can access Siri® Eyes Free using Mobile Assistant access switch.

Refer to the “Bluetooth® Device Pairing Section” in this guide for more information about phone connections and compatibility.

Refer to the “Navigation System Owner’s Manual” for more details.

**NOTE: Concentrating on the road should always be your first priority while driving. Do not use the Entune system if it will distract you.**


## Clock

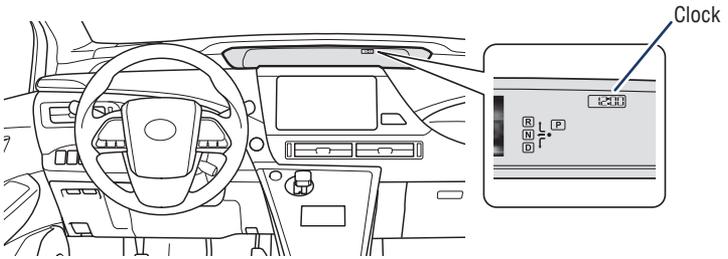

Using steering wheel switches, select “Home” from multi-information screen, then select “” to set clock:

- (1) Round to the nearest hour, press  or , select   and press .
- (2) Time adjustment, press  or , select    and press .
- (3) Press  or , select hours and minutes or press  or , to select 12-24 hour clock and adjust.
- (4) Press  when finished.

# Multi-Information Display (MID)

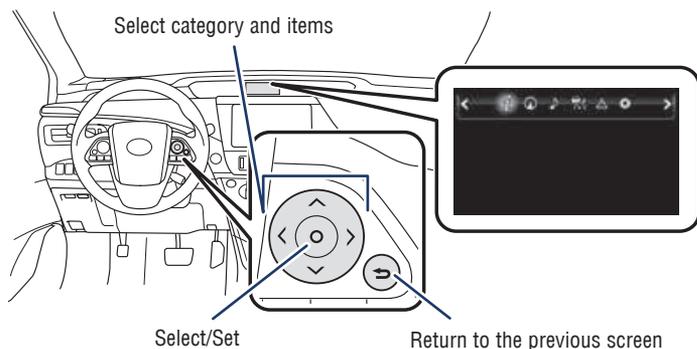

## Drive information

- Energy monitor
- Fuel cell system indicator and ECO meter
- Fuel consumption history display
- Drive monitor
- ECO diary
- Power meter

## Navigation system-linked display

Select to display the following navigation system-linked information.

- Route guidance
- Compass display (north-up display/heading-up display)

## Audio system-linked display

Select to enable selection of an audio source or track on the display using the meter control switches.

## Driving assist systems display

Displays when each driving assistance system is used.

- Dynamic Radar Cruise Control (DRCC)
- Lane Departure Alert (LDA)
- Intuitive parking assist
- Pre-Collision System (PCS)

## Warning message display

Select to display warning messages and measures to be taken if a malfunction is detected.

## Setting display

- Intuitive parking assist
- Blind Spot Monitor (BSM)
- Clock
- Customize


# FEATURES & OPERATIONS

## Dynamic Radar Cruise Control (DRCC)


Refer to the Owner's Manual for more details and complete safety precautions before attempting to use "Dynamic Radar Cruise Control."

### DISTANCE CONTROL MODE

Vehicle-to-vehicle distance button

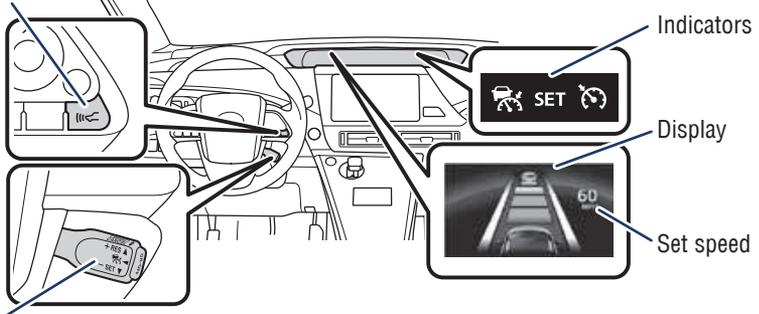

Dynamic radar control switch

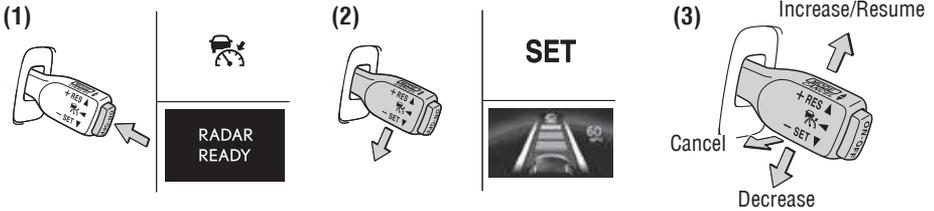

In distance control mode, the vehicle is designed to cruise at a set speed, decelerate to maintain a selected distance from a slower vehicle traveling in front, and accelerate back up to the selected speed if the vehicle in front changes lanes or speeds up.

(1) Push the ON-OFF button to activate/deactivate the system.


(2) To set, pull the lever down.

(3) To increase the set speed, push the lever up.

To decrease, push the lever down. Move the lever momentarily to adjust in 1 mph increments. Hold the lever up/down to adjust in 5 mph increments.


(4) To cancel cruise control, pull the lever toward you or depress the brake pedal.

To resume, push the lever up.

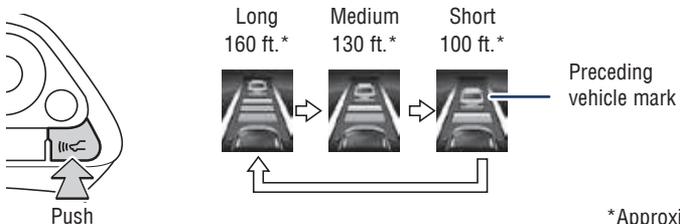

\*Approximately

Push the vehicle-to-vehicle distance button to change distance.

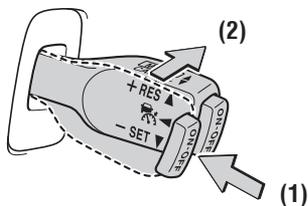


To select constant speed mode

(1) Push the ON-OFF button.

(2) Push the lever away from you and hold until the “” indicator appears.

To set, cancel and resume a speed refer to Distance control mode.

## Garage door opener (Homelink®)\*

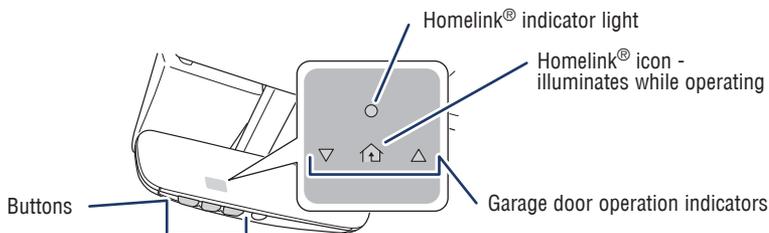

Garage door openers manufactured under license from HomeLink®\* can be programmed to operate garage doors, estate gates, security lighting, etc.

Refer to “Garage door opener,” Section 6-4 in the Owner’s Manual for more details.

For programming assistance, contact HomeLink® at 1-800-355-3515, or visit <http://www.homelink.com>.

\* HomeLink® is a registered trademark of Gentex Corporation.


## SAFETY & EMERGENCY FEATURES

### **Emergency tire puncture repair kit**

Your vehicle is not equipped with a spare tire, but instead is equipped with an emergency tire puncture repair kit (bottle of sealant and compressor.) After temporarily repairing the tire with the repair kit, have the tire repaired or replaced by your Toyota dealer.

*Refer to the Owner's Manual for more details.*

#### LOCATION

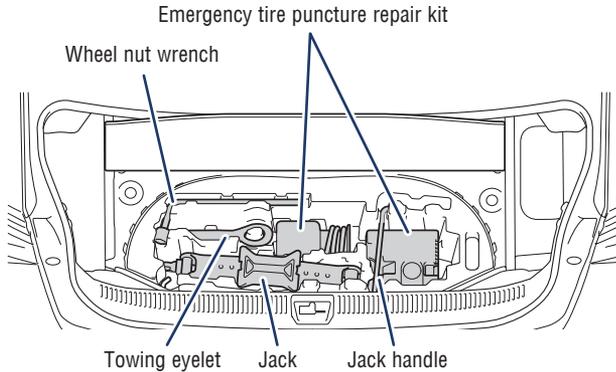

### **Tire Pressure Monitoring (warning) System (TPMS)**


If the Tire Pressure Warning indicator “” illuminates without blinking, adjust tire pressures to factory-specified levels.\* The light will turn off after a few minutes. The warning light is designed to turn on when tire pressure is critically low, but it may also come on due to temperature changes or changes in tire pressure from natural air leakage.

If the tire pressure indicator flashes for more than 60 seconds and then remains on, take the vehicle to your local Toyota dealer.

*Refer to the Owner's Manual for more details.*

\* Refer to load label on door jamb or the Owner's Manual for tire inflation specifications.


## Seat belts

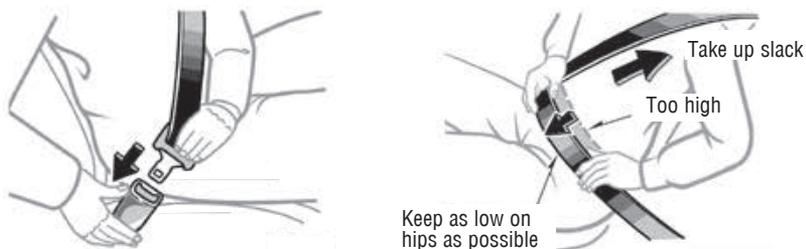

**NOTE:** If a passenger's seat belt is fully extended, then retracted even slightly, the Automatic locking retractor (ALR) will prevent it from being re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.


To find more information about seat belts, and how to install a child restraint system, refer to the Owner's Manual.

## Seat belts-Shoulder belt anchor

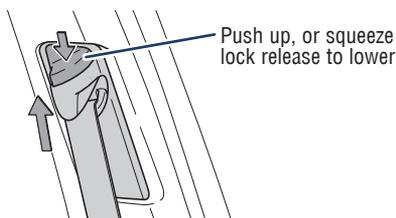

## Rear door child safety locks

Rear door

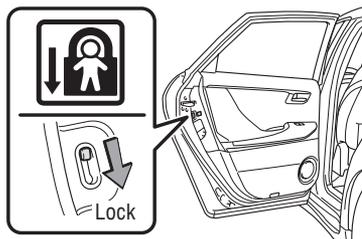

Moving the lever to lock position will allow the door to be opened only from the outside.

# SAFETY & EMERGENCY FEATURES

## **Star Safety System™**

---

Your vehicle comes standard with the Star Safety System™, which combines Anti-lock Braking System (ABS), Brake Assist (BA), Electronic Brake-force Distribution (EBD), Smart Stop Technology (SST), Traction Control (TRAC) and Vehicle Stability Control (VSC).

*Refer to the Owner's Manual for more details and important information on limitations to these systems.*

### ANTI-LOCK BRAKE SYSTEM (ABS)

---

Toyota's ABS sensors detect which wheels are locking up and limits wheel lockup by "pulsing" each wheel's brakes independently. Pulsing releases brake pressure repeatedly for fractions of a second. This helps the tires attain the traction that current road conditions will allow, helping you to stay in directional control.

### BRAKE ASSIST (BA)

---

Brake Assist is designed to detect sudden or "panic" braking, and then add braking pressure to help decrease the vehicle's stopping distance. When there's only a split second to react, Brake Assist can add additional brake pressure more quickly than just the driver alone can.

### ELECTRONIC BRAKE FORCE DISTRIBUTION (EBD)

---

Toyota's ABS technology has Electronic Brake-force Distribution (EBD) to help maintain control and balance when braking. Abrupt stops can cause a vehicle to tilt forward, reducing the braking power of the rear wheels. EBD responds to sudden stops by redistributing brake force to enhance the braking effectiveness of all four wheels.

### SMART STOP TECHNOLOGY (SST)

---

Smart Stop Technology automatically reduces engine power when the accelerator and brake pedals are pressed simultaneously under certain conditions.

SST engages when the accelerator is depressed first and the brakes are applied firmly for longer than one-half second at speeds greater than five miles per hour.

SST doesn't engage if the brake pedal is depressed before the accelerator pedal, allowing vehicles to start on a steep hill and safely accelerate without rolling backward.

### ENHANCED VEHICLE STABILITY CONTROL (VSC)

---

Enhanced Vehicle Stability Control provides cooperative control of the ABS, TRAC, VSC and EPS.

Enhanced VSC helps to maintain directional stability when loss of traction occurs during a turn.

## TRACTION CONTROL (TRAC)

VSC helps prevent loss of traction during cornering by reducing Motor power output, and Traction Control helps maintain traction on loose gravel and wet, icy, or uneven surfaces by applying brake force to the spinning wheel(s).


Toyota's TRAC sensors are activated when one of the drive wheels starts to slip. TRAC limits Motor power output and applies the brakes to the spinning wheel. This transfers power to the wheels that still have traction to help keep you on track.

## Floor mat installation


There are two types of Toyota floor mats: carpeted and all-weather. Each vehicle has model-specific floor mats. Installation is easy.

To keep your floor mat properly positioned, follow these steps:

- Only use Toyota floor mats designed for your specific model.
- Use only one floor mat at a time, using the retaining hooks to keep the mat in place.
- Install floor mats right side up.

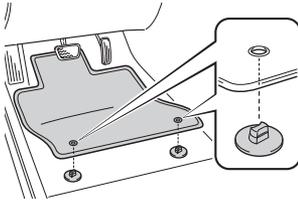

Always align the  $\Delta$  marks

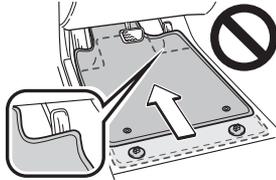

# **BLUETOOTH® DEVICE PAIRING SECTION**

Do not attempt the Bluetooth® Pairing process while driving.

To begin the Bluetooth® Pairing process, press the HOME button on the faceplate of your multimedia system.

## Bluetooth® Pairing for your phone

Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy. All you have to do is setup the phone and multimedia system to form a connection.<sup>1</sup>



Entune Audio/Entune Audio Plus




Entune Premium Audio

**STEP 1** Press [MENU] on the faceplate, then select "Setup" on display screen.



iPhone bluetooth Menu

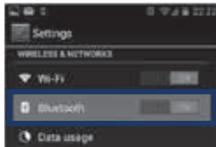

Android bluetooth Menu

**STEP 2** Ensure Bluetooth is turned on for your device.



**STEP 3** Select "Bluetooth", then select "Add New Device" on display screen.



**STEP 4** Select "Device Name".



**STEP 5** Check the display on your smart phone. Does the PIN XXXX match the PIN displayed? If it does select "Pair".

<sup>1</sup> Some Android devices may have slightly different SETTINGS screen layout depending on manufacturer of device and Android OS version.

## Bluetooth® Pairing for your phone (cont.)




**STEP 6** "Connecting" displays while device is forming the connection to your multimedia system.



**STEP 7** Enable Notifications (text message). While pairing your device message will display: **"You may need to allow message access on your phone"**.

Note: You may also select "Skip" on display screen to skip enabling notifications. If skipped proceed to **Step 8**.

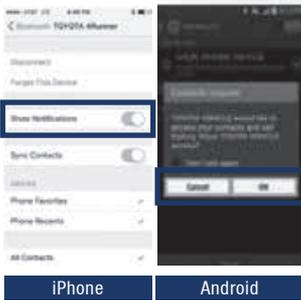

**STEP 8** Turn on "Show Notifications" for iPhone or "ON" for Android.



**STEP 9** A confirmation will appear once your phone has been paired and connected.

# NOTES



[www.toyota.com/owners](http://www.toyota.com/owners)

CUSTOMER EXPERIENCE CENTER

1-800-331-4331



Printed in U.S.A. 12/17  
17-MKG-10240



00505QRG18MIR