

QUICK REFERENCE GUIDE



PRIUS

2022

2022

PRIUS

This Quick Reference Guide is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The Quick Reference Guide is not intended as a substitute for the Owner's Manual located in your vehicle's glove box. We strongly encourage you to review the Owner's Manual and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor North America, Inc. wish you many years of satisfied driving in your new Prius.

A word about safe vehicle operations

This Quick Reference Guide is not a full description of Prius operations. Every Prius owner should review the Owner's Manual that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the Owner's Manual. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this Quick Reference Guide is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

OVERVIEW

Engine maintenance	9
Fuel tank door release & cap	7
Hood release	8
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Instrument panel light control	8
Keyless entry ^{1,2}	6
Smart Key system ^{1,2}	7

FEATURES & OPERATIONS

Air conditioning/heating ^{1,2}	22-23
Audio	18-19
Auto lock/unlock ^{1,2}	10
Blind Spot Monitor ¹ with Rear	
Cross Traffic Alert (BSM w/RCTA)	30
Clock	31
Color Dual Multi-Information	
Display (MID) ²	24-25
Color Head-up Display (HUD) ²	25
Door locks	14
Driving mode select switch	11
EV drive mode	11
Front and Rear Parking Assist with	
Automated Braking (PA w/AB)	26
Garage door opener (HomeLink®) ³	18
Heated seats	22
Heated steering wheel	21
Hybrid Synergy Drive System	10
Hybrid transmission	11
Intelligent Parking Assist (IPA) ¹	28-29
Intuitive Parking Assist ¹	27
Lights ^{1,2} & turn signals ¹	16-17
Moonroof ¹	14
Parking brake	12
Power outlet-12V DC	20
Power windows ¹	14
Qi Wireless charger	20
Rear seats-Folding	13
Rear view monitor system	31
Seat adjustments-Front	13

FEATURES & OPERATIONS (continued)

Seats-Head restraints	13
Steering lock release	12
Steering wheel switches &	
Telephone controls (Bluetooth®)	17
Tilt & telescopic steering wheel	12
USB charge ports	21
USB media/AUX Port	21
Vehicle Stability Control (VSC)/	
TRAC OFF switch	29
Windshield wipers & washers ¹	15

TOYOTA SAFETY SENSE™ 2.0 (TSS 2.0)

Automatic High Beams (AHB)	46
Full-Speed Range Dynamic Radar	
Cruise Control (DRCC)	43-45
Lane Departure Alert with	
Steering Assist (LDA w/SA)	36-39
Lane Tracing Assist (LTA)	39-42
Pre-Collision System with Pedestrian	
Detection (PCS w/PD)	33-35
Quick overview-Toyota Safety	
Sense™ 2.0 (TSS 2.0)	32
Road Sign Assist (RSA)	47
Sensors	33

SAFETY & EMERGENCY FEATURES

Floor mat installation	54
Rear door child safety locks	48
Safety Connect®	49
Seat belts	48
Seat belts-Shoulder belt anchor	48
Spare tire & tools	50
Star Safety System™	53-54
Tire Pressure Monitoring	
(warning) System (TPMS)	52
Tire repair kit & tools	51

BLUETOOTH® DEVICE PAIRING SECTION



56-58

¹ Visit your Toyota dealer for information on customizing this feature.

² Programmable by customer. Refer to the Owner's Manual for instructions and more information.


³ HomeLink® is a registered trademark of Gentex Corporation.

Instrument panel

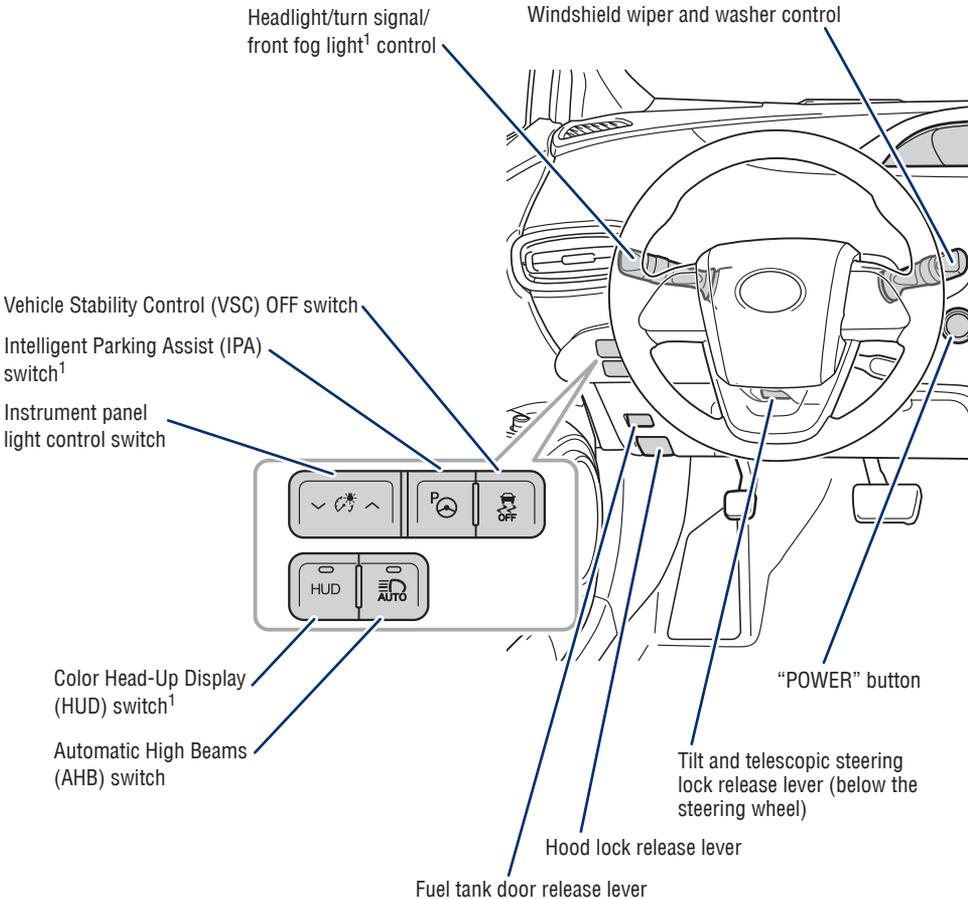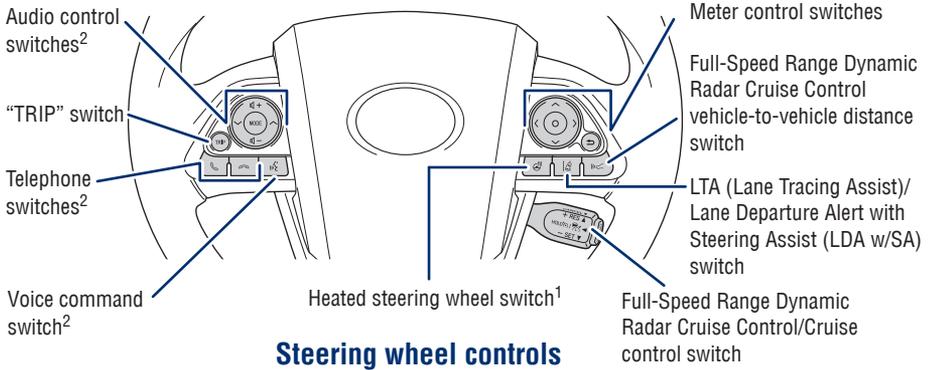

¹ If equipped

² For details, refer to the “Navigation System Owner’s Manual,” “Multimedia Owner’s Manual” or visit www.toyota.com/audio-multimedia for additional resources.

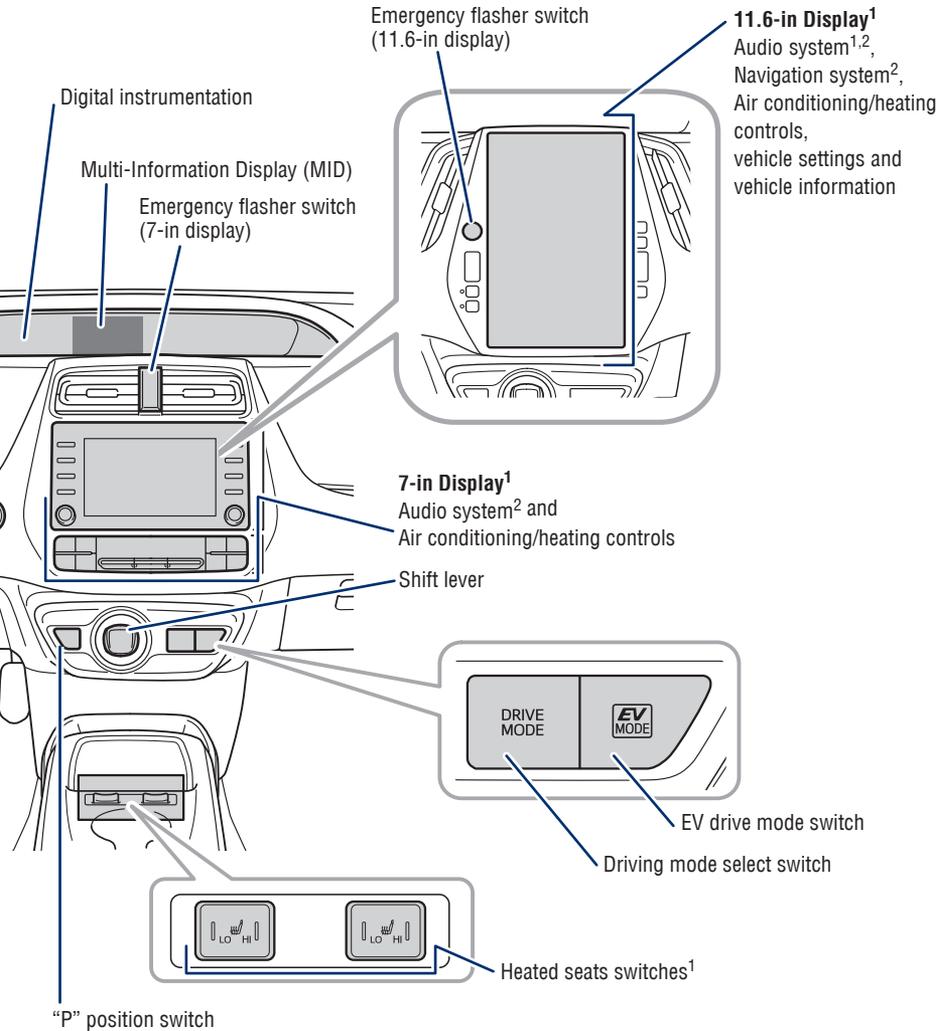


OVERVIEW

Instrument cluster


Transmission shift position indicator

Clock

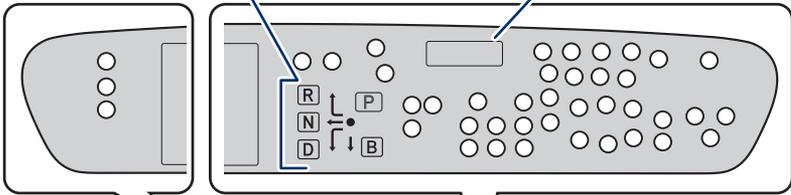

Main Display

Multi-Information Display (MID)

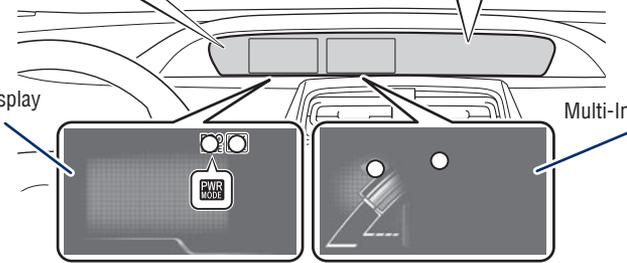

○ Service indicators and warning lights

Indicator symbols

For details, refer to “Warning lights and indicators,” Section 2, 2022 Owner’s Manual.



Air bag ON/OFF indicator¹



Airbag SRS warning¹



AFS OFF indicator^{2,4}



Anti-lock Brake System (ABS) warning¹



Automatic High Beams (AHB) indicator



Blind Spot Monitor (BSM) indicator⁴



Brake system warning¹



Brake system warning [yellow]¹



Charging system warning¹



Constant speed cruise control/
Full-Speed Range Dynamic Radar
Cruise Control (DRCC) indicator



Constant speed cruise control/
Full-Speed Range DRCC SET indicator



Driver's and front passenger's seat belt
reminder (alarm will sound when the
vehicle is on)



ECO MODE indicator



EV indicator



EV drive mode indicator



Electric power steering system warning
[red/yellow]¹



Fog light indicator⁴



Front and Rear Parking Assist with Automated Braking OFF indicator^{1,2,4,5}



Fuel tank door position



Headlight low/high beam indicators



Heated steering wheel indicator⁴



High coolant temperature warning¹



Inappropriate pedal operation warning⁵



Intelligent Parking Assist (IPA) indicator^{1,4}



Intuitive Parking Assist indicator⁴



Lane Tracing Assist (LTA)/Lane Departure Alert with Steering Assist indicator (LDA w/ SA) [green/orange³]



Lane Tracing Assist (LTA)/Lane Departure Alert (LDA) with Steering Assist indicator



Lane Tracing Assist (LTA)/Lane Departure Alert (LDA) Sway Control indicator



Low engine oil pressure warning¹



Low fuel level warning



Low tire pressure warning¹



Malfunction/Check Engine indicator¹



Master warning¹



Open door warning



Parking brake indicator



Power Mode indicator



Pre-Collision System (PCS) warning^{1,2}



READY indicator



Rear passengers' seat belt reminder



Security indicator



Shift position indicators



Smart Key system indicator



Slip indicator/Hill-start Assist Control indicator^{1,3}



Steering Control indicator



Turn signal indicator



VSC OFF indicator¹

¹ If the indicator does not turn off within a few seconds of starting the vehicle, there may be a malfunction. Have the vehicle inspected by your Toyota dealer.

² If the indicator flashes, there may be a malfunction. Refer to the Owner's Manual.

³ If the indicator flashes, it indicates that the system is operating.

⁴ If equipped.

⁵ Refer to section PKSB (Parking Support Braking function) in the Owner's Manual.

OVERVIEW

Keyless entry

UNLOCKING OPERATION




Push
ONCE: Driver door
TWICE: All doors

Carry Smart
Key remote

Driver door unlock*

Grasp

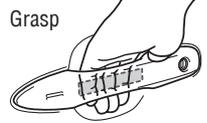

NOTE: If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.

LOCKING OPERATION



Push

Carry Smart
Key remote

All-door lock

Touch



PANIC BUTTON





HOLD
Push and hold



BACK DOOR LOCKING/UNLOCKING

Carry Smart
Key remote

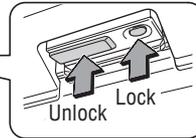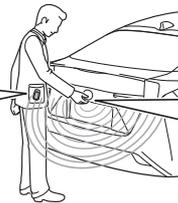



* Driver door unlocking function can be programmed to unlock driver door only, or all doors. Grasping passenger door handle or pushing unlock button on rear hatch will unlock all doors.

Please refer to the Owner's Manual for more details on how to program the doors.

NOTE: Doors may also be locked/unlocked using the mechanical key.

Smart Key system


START FUNCTION

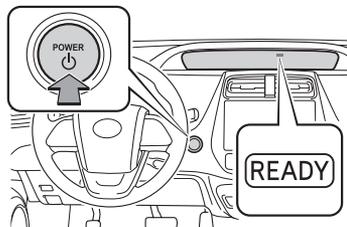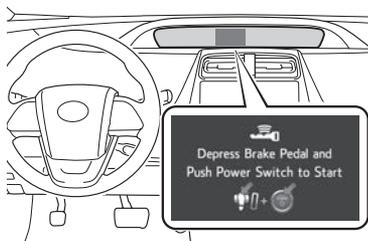




NOTE: The Smart Key must be carried to enable the start function. Depress the brake pedal and push the “POWER” button.

POWER (WITHOUT STARTING VEHICLE)

Without depressing the brake pedal, pressing the power button will change the operation mode in succession from:

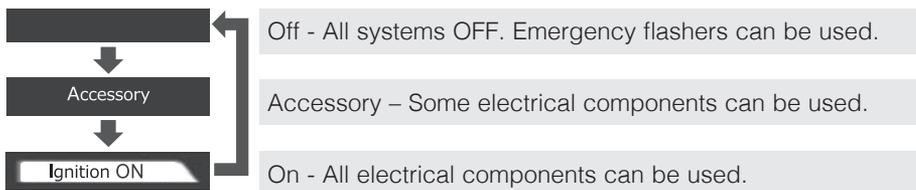


Fuel tank door release & cap

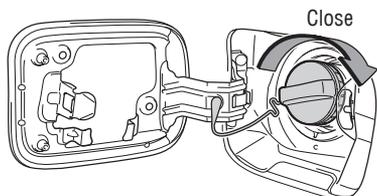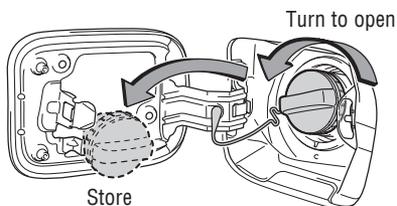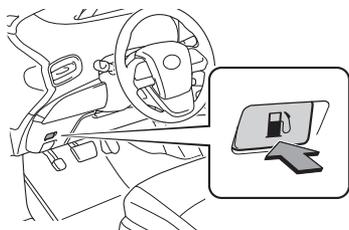


NOTE: Tighten until one click is heard. If the cap is not locked or tightened enough, the Check Engine indicator “” may illuminate.

Hood release

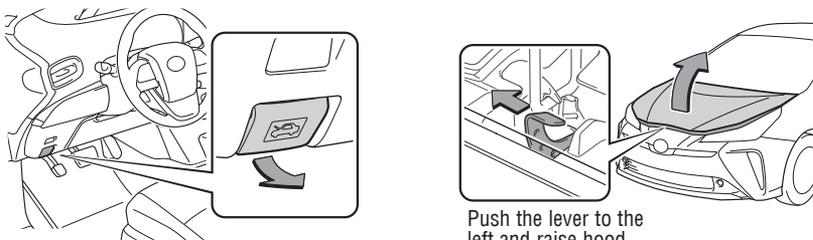


Push the lever to the left and raise hood

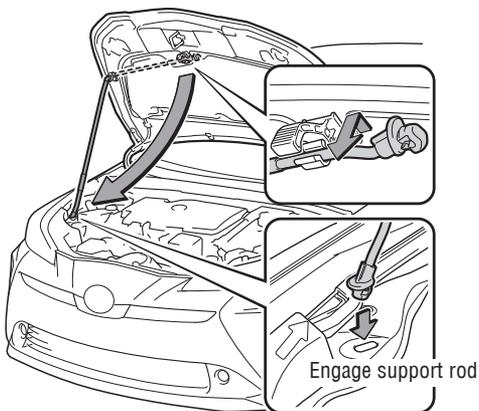


Engage support rod

Instrument panel light control

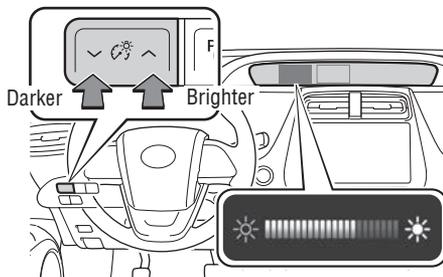

Engine maintenance

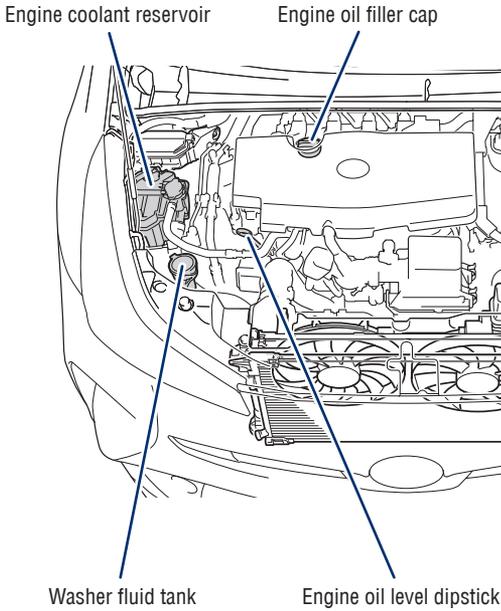

NOTE: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the “Warranty & Maintenance Guide.” Maintenance reset light instructions can be found in “Maintenance Requirements Chapter” in Owner’s Manual.

FEATURES & OPERATIONS

Auto lock/unlock

Automatic door locks can be programmed to operate in different modes, or turned OFF.

DEFAULT SETTING

Shift position linked door locking/unlocking function

- Doors lock when shifting from Park.
- Doors unlock when shifting into Park.

CUSTOMIZED SETTING

Speed linked door locking function

- Doors lock when the vehicle speed goes above approximately 12 mph (20 km/h) or higher.

Driver's door linked door unlocking function

- Doors unlock when the driver's door is opened within approximately 45 seconds after turning the vehicle is turned off.

Refer to the Owner's Manual for more details.

Hybrid Synergy Drive System


The Hybrid Synergy Drive System utilizes a computer-controlled gasoline engine and electric motor to provide the most efficient combination of power for the vehicle. To conserve energy, when the brakes are applied, the braking force generates electricity which is then sent to the traction battery. In addition, the engine shuts off when the vehicle is stopped. The benefits are better fuel economy and reduced vehicle emissions.

NOTE: Fuel consumption and energy information of the Hybrid System are shown on the Multi-Information Display (MID) and Audio Multimedia System screen.

TIPS FOR IMPROVED FUEL ECONOMY


1. Ensure tire pressures are maintained at levels specified in the Owner's Manual.
2. When possible, link trips to reduce engine cold starts.
3. Avoid driving at speeds that are higher than necessary, especially on the highway.
4. When possible, avoid sudden stops to maximize regenerative braking energy.
5. Minimize use of the air conditioning.

STARTING YOUR VEHICLE

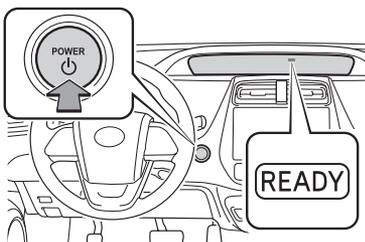

- (1) Depress the brake pedal, and “” will be displayed on the Multi-Information Display (MID).
- (2) Press the power button briefly and firmly.
- (3) The “READY” light will indicate. After a few seconds, when the light remains steady and a beep sounds, shift the lever to the desired position and you may begin driving.

Hybrid transmission

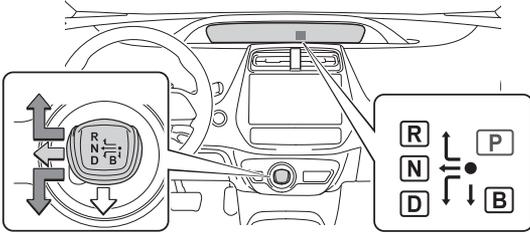

P	Park
R	Reverse
N	Neutral
D	Drive
B	Engine brake*


* The engine brake is the equivalent of downshifting. Shift to “B” when engine braking is desired (i.e. downhill driving, coasting to a stop, etc.)

Driving mode select switch

Normal - Suitable for normal driving.


Power mode - Use when a higher level of response is desired, such as when driving in mountainous regions.

ECO drive mode - Helps achieve lower fuel consumption during trips that involve frequent accelerating and braking.

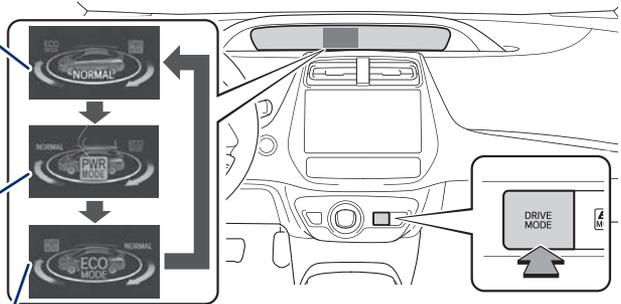

Refer to the Owner's Manual for more details.

EV drive mode

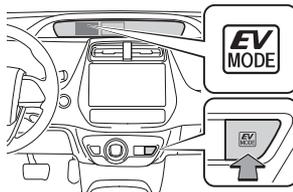


EV Drive Mode ON/OFF switch

EV Drive Mode allows the electric motor (traction motor), powered by the hybrid battery (traction battery), to be used to drive the vehicle under certain driving conditions (sufficient battery level, low vehicle speed, etc.)


Refer to the Owner's Manual for more details.

Tilt & telescopic steering wheel

Lock release lever

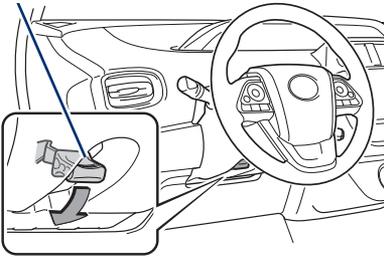


Angle

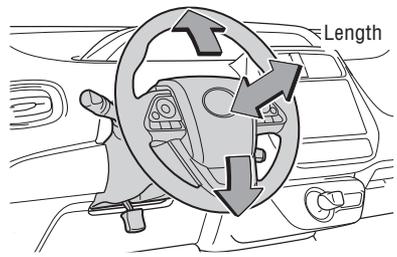

Hold the steering wheel, push the lever down, set angle and length, and return the lever.

NOTE: Do not attempt to adjust while the vehicle is in motion.


Steering lock release

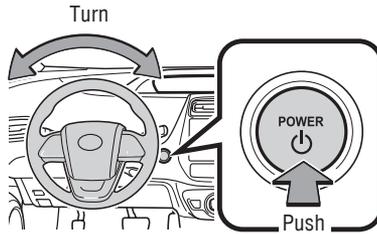

The green indicator light on the power button will flash and a message will be shown on the Multi-Information Display (MID). Press the power button while turning the steering wheel left and right.

Parking brake

Set: Depress
Release: Depress again

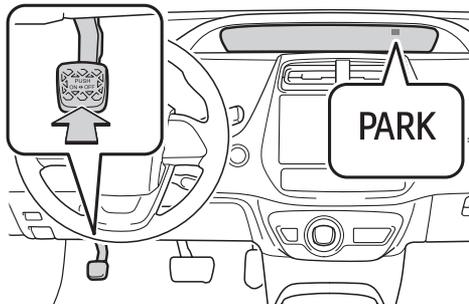


PARK

Seat adjustments - Front


MANUAL SEAT

POWER SEAT (IF EQUIPPED*)

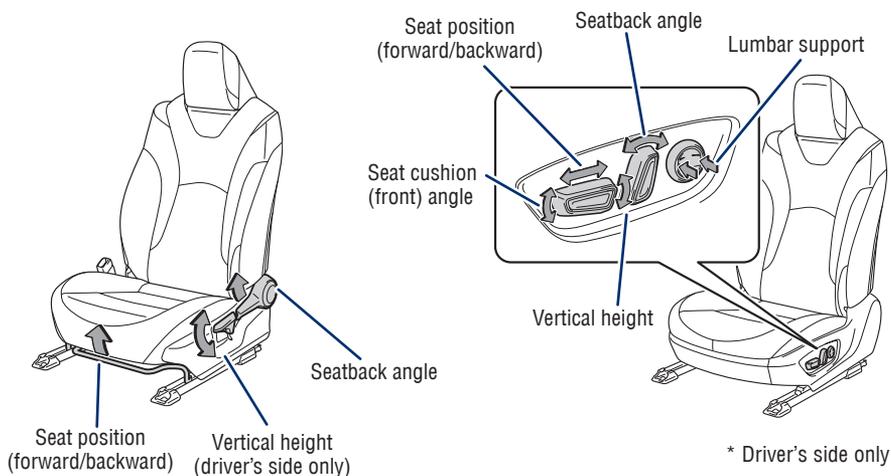


Seats - Head restraints

Front

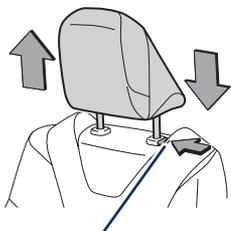


Lock release button

Rear center

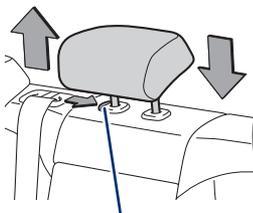

Lock release button


Rear outboard

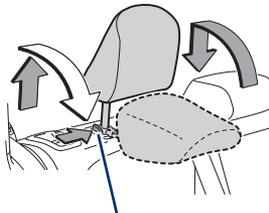

Lock release button


Rear seats-Folding

(2) Fold down

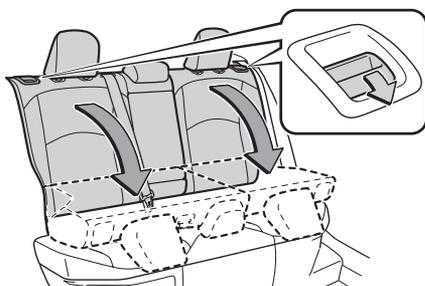


(1) Release lever

Door locks

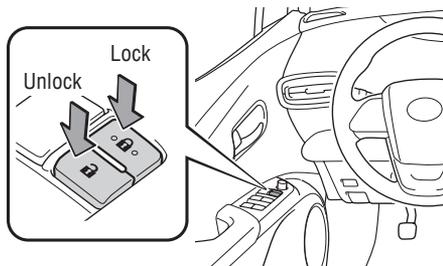

Power windows

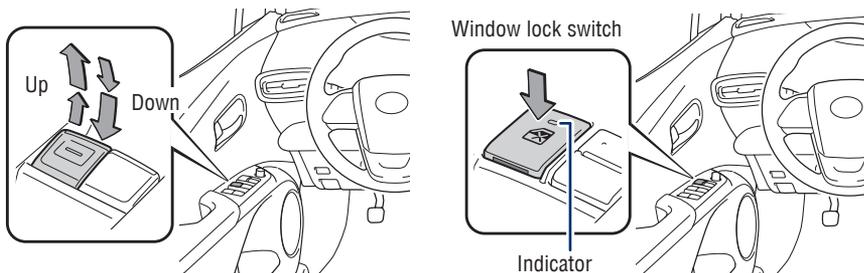


All window auto up/down Push the switch completely down or pull it completely up and release to fully open or close. To stop the window partway, operate the switch in the opposite direction.

Window lock switch Deactivates all passenger windows. Driver's window remains operable.

Moonroof (if equipped)


SLIDING OPERATION

Recommended open position to minimize wind noise

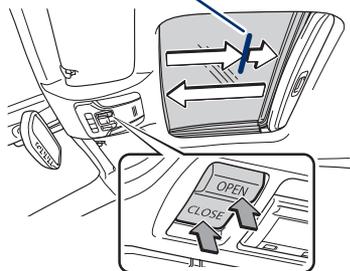

Push once to open partway.
Push again to open completely.

TILTING OPERATION

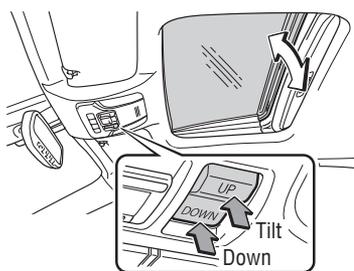


Push once to open completely.

Lightly press either side of the moonroof switch while opening/tilting is in progress, the moonroof stops partway.

Windshield wipers & washers

FRONT-INTERMITTENT (IF EQUIPPED)


Type A	Type B
MIST	△
OFF	○
INT	▽
LO	▽
HI	▽

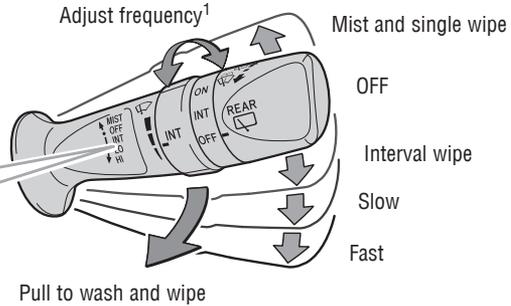

¹ **Intermittent windshield wiper frequency adjustment:** Rotate to increase/decrease wiper frequency.

FRONT-AUTO (RAIN-SENSING) (IF EQUIPPED)


Type A	Type B
MIST	△
OFF	○
AUTO	AUTO
LO	▽
HI	▽

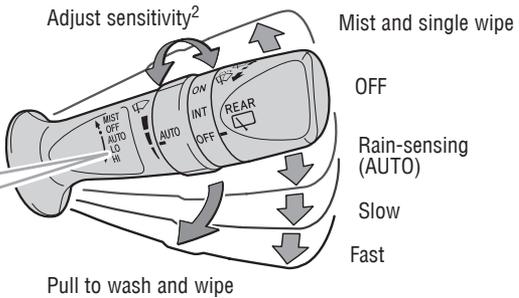

² **Rain-sensing windshield wipers:** Rotate to increase/decrease sensor sensitivity. Refer to the Owner's Manual for more details on customizing AUTO mode operation.

REAR (IF EQUIPPED)


Type A	Type B
ON	—
INT	---
OFF	○

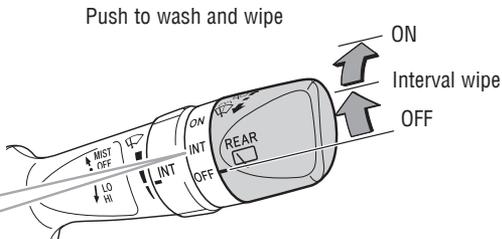


Lights & turn signals

HEADLIGHTS


Type A

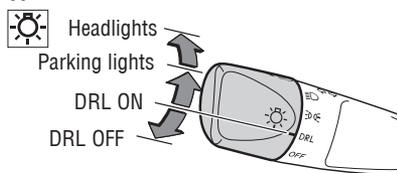

Type B

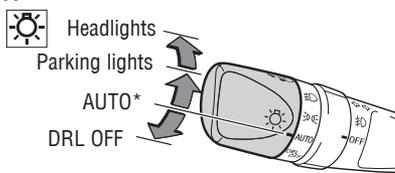

* if equipped

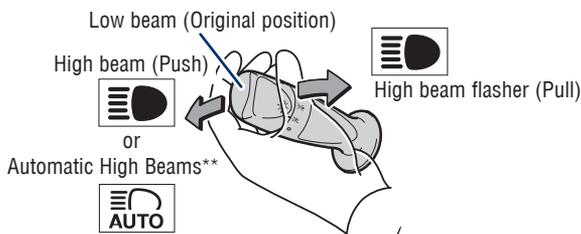

Daytime Running Light system (DRL) Automatically turns on under certain conditions to make vehicle more visible to other drivers. Not for use at night.

Automatic light cut off system


- Headlights are on: The lights will turn off automatically 30 seconds after the vehicle is turned from ON to ACC or OFF and a door is opened and closed. (If the lock switch on the Smart Key remote is pushed after all doors are closed, the lights will turn off immediately.)
- Only the tail lights are on: The tail lights will turn off automatically if the vehicle is turned from ON to ACC or OFF and the driver's door is opened.

Automatic High Beams (AHB) system Automatically switches between high and low beams as appropriate to enhance vision at night.

Refer to *Toyota Safety Sense™ 2.0 (TSS 2.0)* in this guide or the *Owner's Manual* for more details on the Automatic High Beams feature.


** Operating conditions must be met. Refer to the *Owner's Manual* for details.

FRONT FOG LIGHTS (IF EQUIPPED)

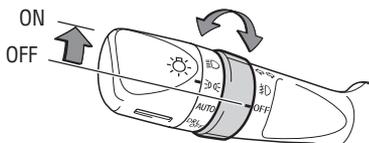


Front fog lights come on only when the headlights are on low beam.

TURN SIGNALS

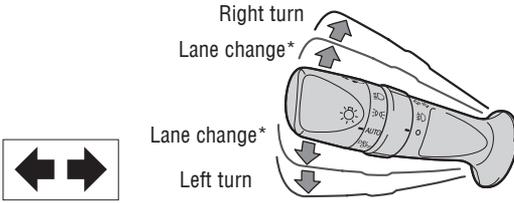


* Move lever partway and release. The signals will flash three times.


Steering wheel switches & telephone controls (Bluetooth®)

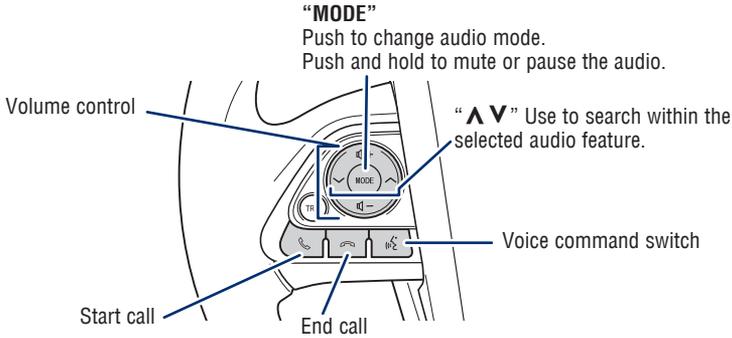

Without moonroof

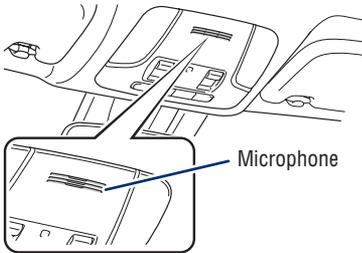

With moonroof

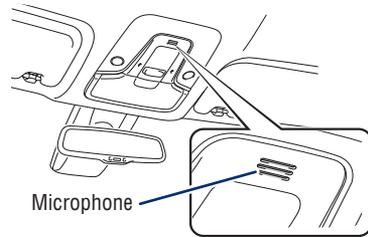


Bluetooth® technology allows dialing or receipt of calls without removing your hands from the steering wheel.

Refer to the Bluetooth® device pairing in this guide or the Navigation and Multimedia System Owner's Manual for additional user instructions.

NOTE: Always use safe driving practices and follow all traffic rules.

FEATURES & OPERATIONS

Garage door opener (HomeLink®) (if equipped)

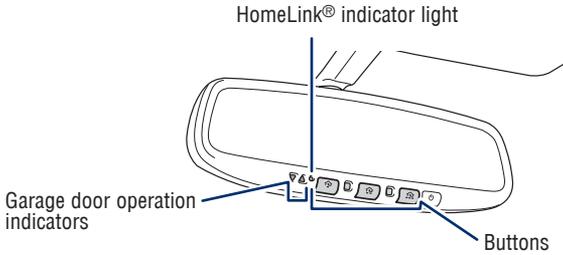

Garage door openers manufactured under license from HomeLink®* can be programmed to operate garage doors, estate gates, security lighting, etc.


Refer to the Owner's Manual for more details.

For programming assistance, contact HomeLink® at 1-800-355-3515, or visit <http://www.homelink.com/toyota>.

* HomeLink® is a registered trademark of Gentex Corporation.


Audio

VEHICLES EQUIPPED WITH 7-in DISPLAY

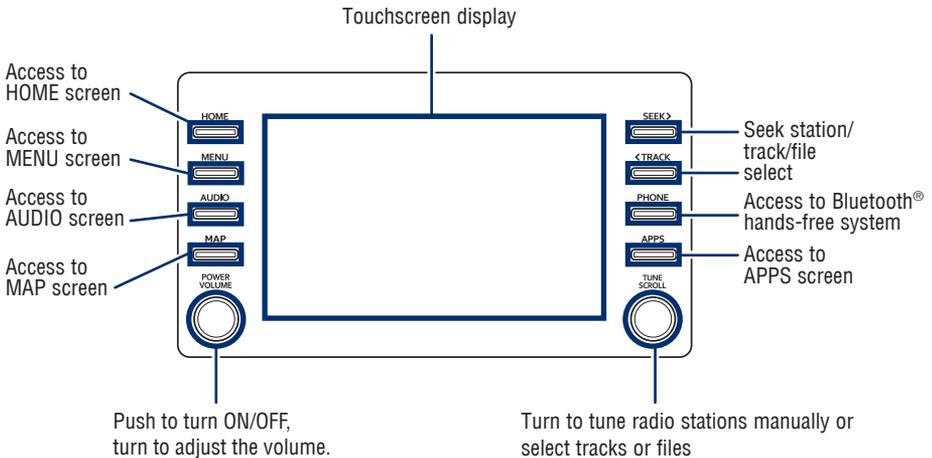

Refer to the Multimedia Owner's Manual or visit www.toyota.com/audio-multimedia for additional resources.

NOTE: Always use safe driving practices and follow all traffic rules.

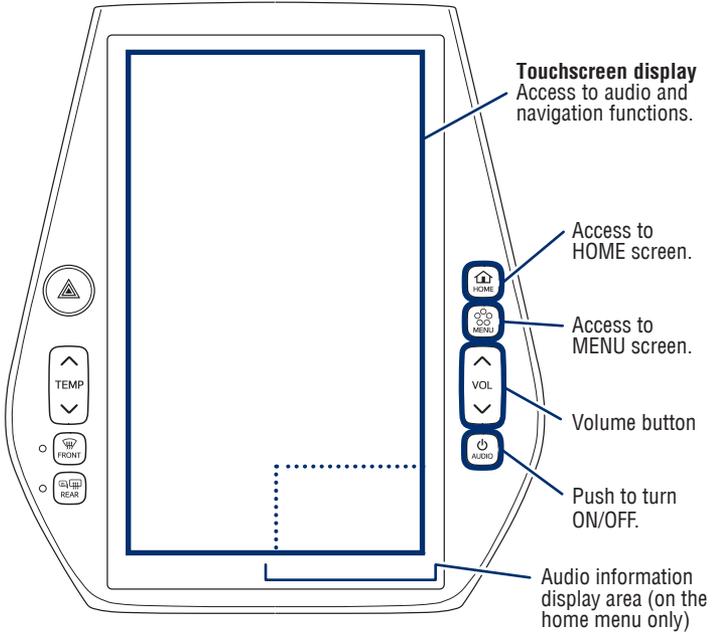


Refer to the Navigation System Owner's Manual or visit www.toyota.com/audio-multimedia for additional resources.

NOTE: Always use safe driving practices and follow all traffic rules.



FEATURES & OPERATIONS

Power outlet-12V DC

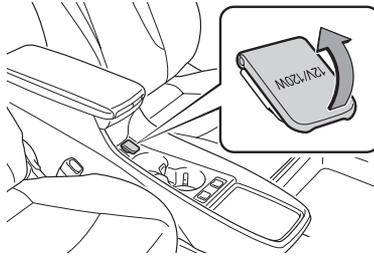

The vehicle must be in the “ACCESSORY” or “IGNITION ON” mode for use.

Qi Wireless charger (if equipped)

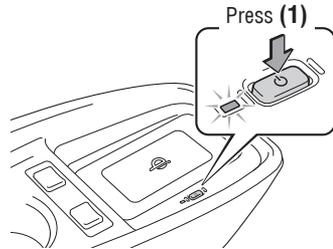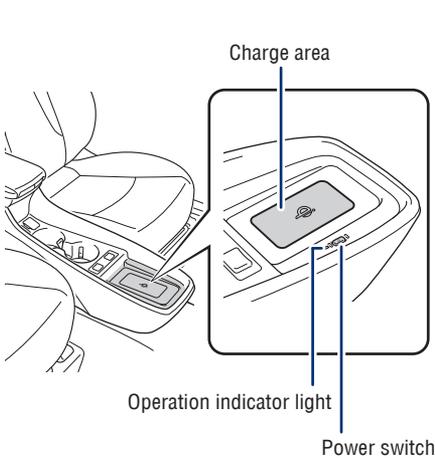

When the vehicle is turned off, the last state (ON/OFF) of the charger is retained.




Place device nearest the center of charging area for best results. Moving device may result in stopping or restarting the charging process.

A mobile device can be charged wirelessly on the tray. **(1)** Press the wireless charger power switch and the green operation indicator light turns on. **(2)** Place a compatible mobile device on the tray as shown in the illustration. An amber indicator illuminates while charging is in progress. When charging is complete, the indicator illuminates green. Some phones, cases or cover type wireless chargers may not cause the green indicator to illuminate even though it is fully charged.


Refer to the Owner's Manual for limitations and more details on this system before attempting to use it.

USB media/AUX port

Vehicles equipped with 7-in display

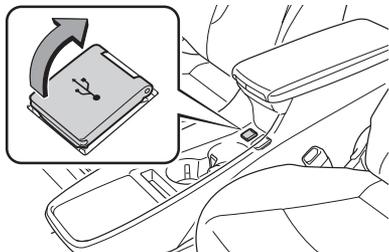

Vehicles equipped with 11.6-in display

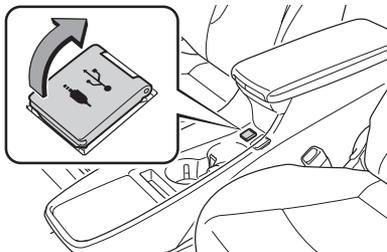


USB media port

Connecting a compatible device and cable into the USB media port will support charging and music playback through the audio multimedia system.

AUX port


By inserting an AUX cable into the AUX port, you can listen to music from a portable audio device through the vehicle's speaker system while in AUX mode.

USB charge ports

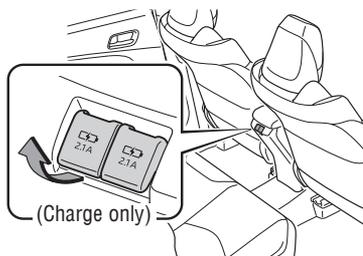

The vehicle must be in the "ACCESSORY" or "IGNITION ON" mode for use.

Heated steering wheel (if equipped)

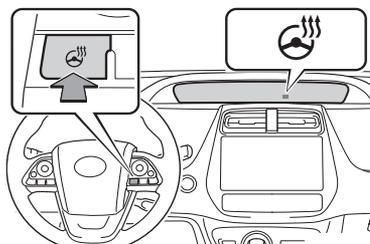


The vehicle must be on for use.

The heater switch will be turned off after about 30 minutes.

FEATURES & OPERATIONS

Heated seats (if equipped)

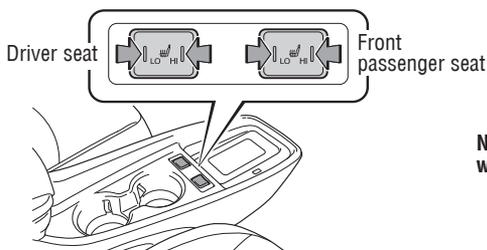

NOTE: Turn system off when not in use.

The vehicle must be on for use.


Air conditioning/heating

AUTOMATIC AIR CONDITIONING - VEHICLES EQUIPPED WITH 7-in DISPLAY

Automatic climate control ON:


Adjusting the temperature setting will cause the airflow vents, air intake and fan to adjust automatically to the set temperature.

Smart-flow (S-Flow) mode: Gives airflow priority to the front seats, reducing the airflow and air conditioning effect on rear seats when there are no passengers.

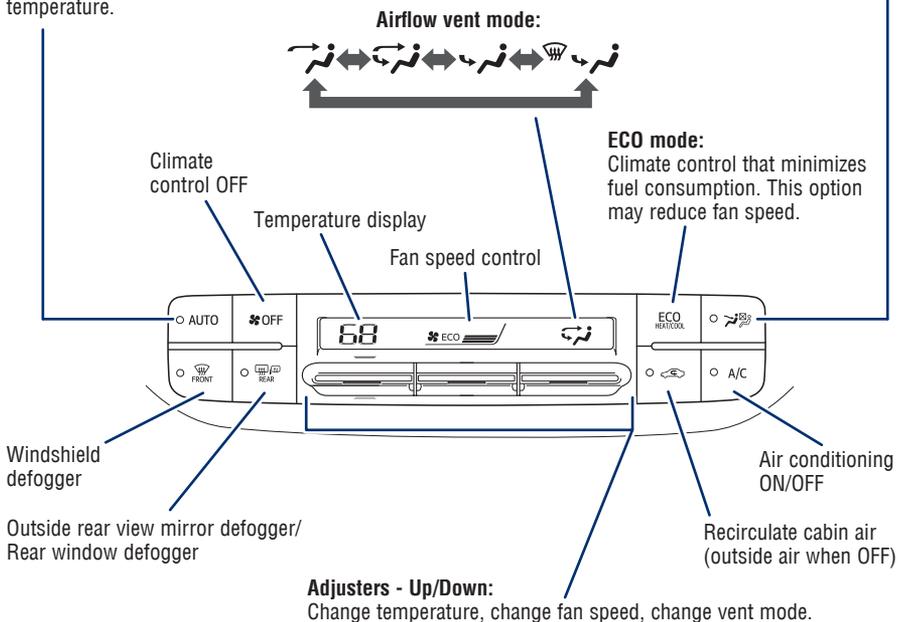





Air conditioning control screen

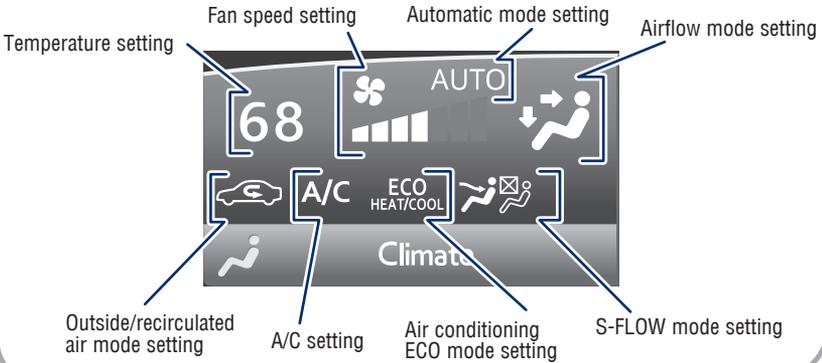

Color Dual Multi-Information Display (MID)

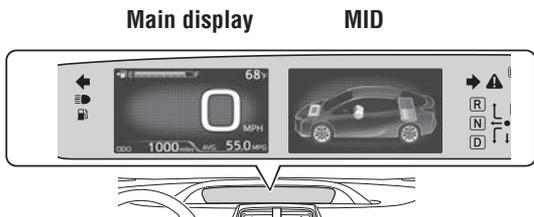

MAIN DISPLAY

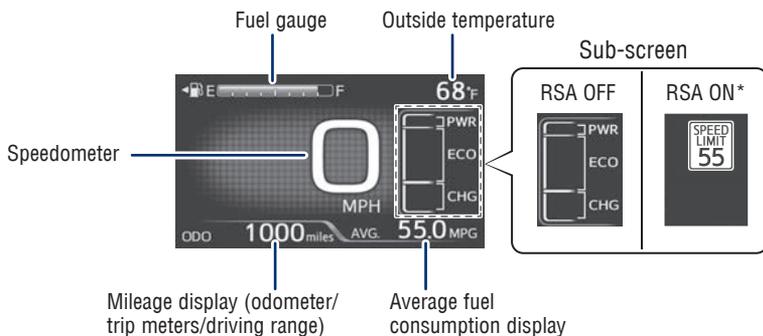


* When RSA (Road Sign Assist) information is displayed in the "ON" screen of the Multi-Information Display, RSA (Road Sign Assist) information is not displayed on the sub-screen.

The default split screen mode can also be viewed in simple screen mode shown above. The main display shows basic drive information. Push "TRIP" to view more info for mileage and average fuel consumption display.

Refer to the Owner's Manual for more details.

MULTI-INFORMATION DISPLAY (MID)

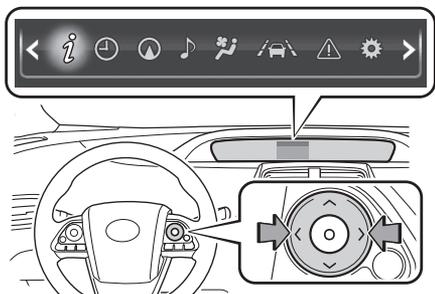

-  Drive information
-  Clock setting display
-  Navigation system-linked display (if equipped)
-  Audio system-linked display (if equipped)
-  Air conditioning system settings screen
-  Driving assist system information
-  Warning message display
-  Settings display

Push “ ” to change between the following information screens, “” to select, “ ” to switch contents and “” to go back.

Refer to the Owner's Manual for more details.

Color Head-Up Display (HUD) (if equipped)



Cruise control display shows Cruise control indicators

Hybrid system current driving and energy regeneration status

Insert display driving support system information

Route guidance display (available only on vehicles with navigation system)

Vehicle speed display

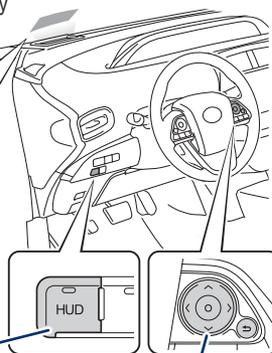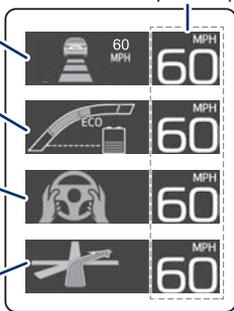

Head-Up Display (HUD) switch activates or switches between items

Meter control switches adjust position and brightness of HUD

The color head-up display can display the current vehicle speed and hybrid system indicator in front of the driver. Also, it can display various types of information to assist the driver.


Refer to the Owner's Manual for more details.

FEATURES & OPERATIONS


Front and Rear Parking Assist with Automated Braking (PA w/AB) (if equipped)

When a collision may occur with an obstacle while parking or traveling at low speeds, when the vehicle suddenly moves forward due to mistaken accelerator pedal operation, or when the vehicle moves due to the wrong shift position being selected, the sensors are designed to detect obstacles to the front or rear in the traveling direction of the vehicle, and the system operates to lessen impact with obstacles such as walls, and reduce resulting damage.


FUNCTIONS

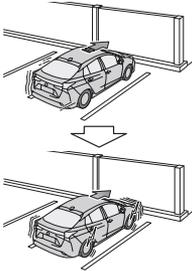

When traveling at a low speed and the brake pedal is not depressed, or is depressed late.

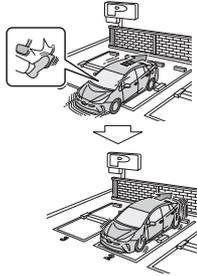

When the accelerator pedal is depressed excessively.

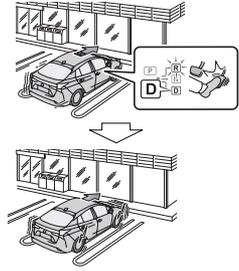

When the vehicle moves in the unintended direction due to the wrong shift position being selected.



CHANGE SETTINGS

- (1) Press “ ” switches and select “” from the Multi-Information Display (MID).
- (2) Press “ ” switches and select “” and then press “.” The setting screen is displayed.
- (3) Press “” to select the desired setting (ON/OFF).
- (4) Press “” to go back to the menu.

The system will continue in the last state it was in (ON or OFF) when the vehicle is turned on again.

Refer to section PKSB (Parking Support Brake function) in the Owner's Manual for limitations and more details.

Intuitive Parking Assist (if equipped)

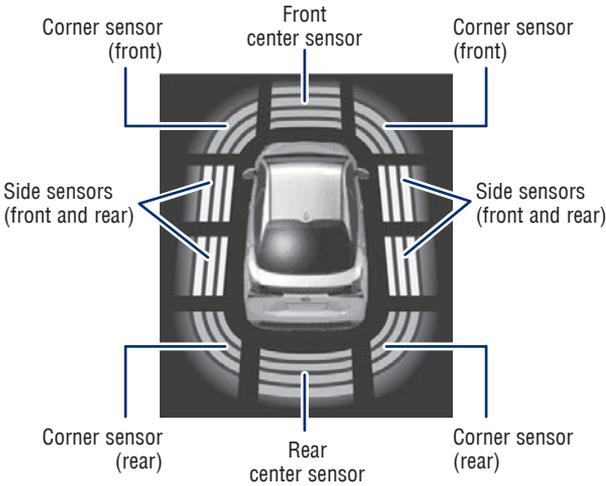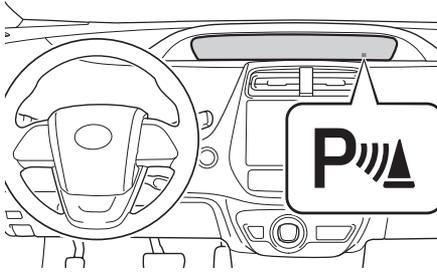

If the sensors detect an obstacle, the buzzer and MID inform the driver of the approximate position and distance of the obstacle by illuminating continuously (far) or blinking (near).

SYSTEM ON/OFF

- (1) Press “ ” switches and select “” from the Multi-Information Display (MID).
- (2) Press “ ” switches and select “” and then press “.” The setting screen is displayed.
- (3) Press “” to select the desired setting (ON/OFF).
- (4) Press “” to go back to the menu.

Note: Once off is selected, the intuitive parking assist will not return to on until it is turned to on by the screen of Multi-Information Display again. (The system does not automatically return to on even when the hybrid system is restarted.)

Refer to the Owner's Manual for limitations and more details.

FEATURES & OPERATIONS

Intelligent Parking Assist (IPA)* (if equipped)


The Intelligent Parking Assist (IPA) system automatically operates the steering wheel to provide support when backing into an area near a target parking spot, and when departing from a parallel parking spot. (Changing the shift position and speed adjustment when moving forward or backing up are not performed automatically.)

While the IPA is operating, if the system detects an obstacle that could result in a collision, the emergency brakes operate, regardless of whether the Front and Rear Parking Assist with Automated Braking function** is on or off.


* Refer to section S-APGS (Simple Advanced Parking Guidance System) in the Owner's Manual for limitations and more details.

** Refer to section PKSB (Parking Support Brake function) in the Owner's Manual for limitations and more details.

TURNING IPA ASSIST MODE ON

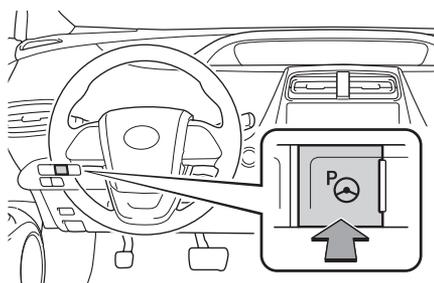

IPA GUIDANCE SCREEN

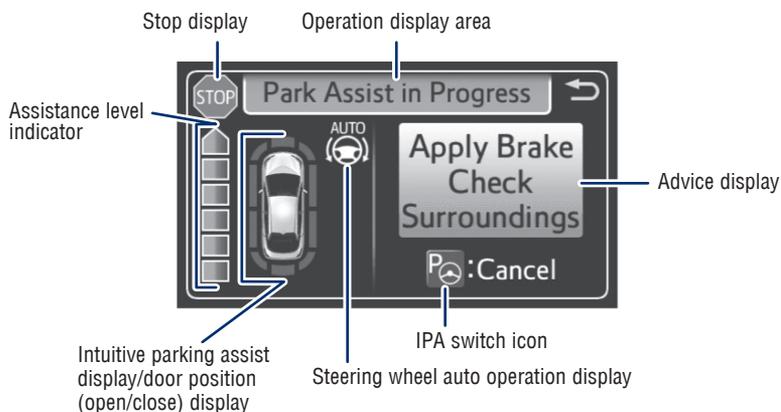

CANCELING OR STOPPING ASSIST MODE

Assist mode will be canceled or stopped in the following cases.

Assist control is canceled when

- The system temperature preservation function operates
- There is a system malfunction
- System determined that the parking environment is not suitable for assist to continue

When assist control is canceled, firmly grasp the steering wheel, depress the brake pedal and stop the vehicle.

Start again from the beginning, as the system will already be canceled. When continuing to park manually, operate the steering wheel as you normally would.

Assist control is stopped when

- The steering wheel is operated
- The vehicle speed exceeds 4 mph (7 km/h) during assist control
- The Front and Rear Parking Assist with Automated Braking** operates


When assist control is stopped, it can be resumed by following the guidance shown on the screen.

The Intelligent Parking Assist (IPA) system requires driver brake control. Always look around outside the vehicle and use mirrors to confirm clearance.

* Refer to section S-APGS (Simple Advanced Parking Guidance System) in the Owner's Manual for limitations and more details.

** Refer to section PKSB (Parking Support Brake function) in the Owner's Manual for limitations and more details.

Vehicle Stability Control (VSC)/ TRAC OFF switch

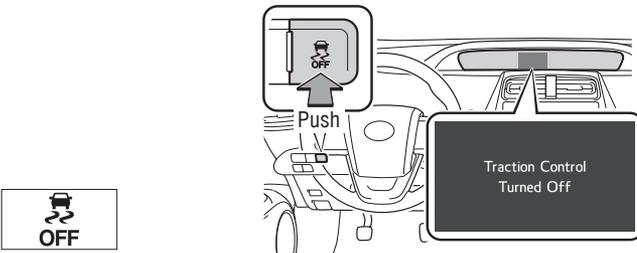


The VSC OFF switch can be used to help free a stuck vehicle in surroundings like mud, dirt or snow. While the vehicle is stopped, press switch to disable the TRAC system.

To disable both VSC and TRAC systems, press and hold the switch for at least 3 seconds.

Refer to the Owner's Manual for limitations and more details.

FEATURES & OPERATIONS

Blind Spot Monitor with Rear Cross Traffic Alert (BSM w/RCTA) (if equipped)

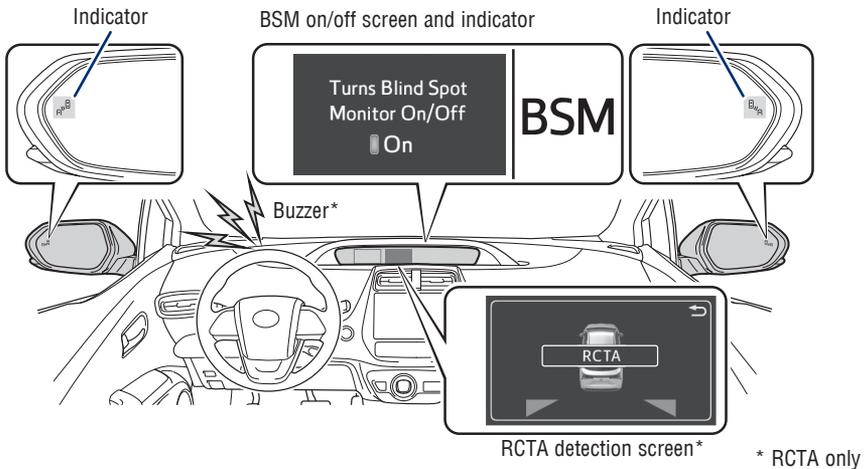

The Blind Spot Monitor is a system that has two functions:

- The Blind Spot Monitor function (assists the driver in making the decision when changing lanes)
- The Rear Cross Traffic Alert function (assists the driver when backing up)

The system is designed to use radar sensors to detect vehicles traveling in the Prius's blind spot. If a vehicle is detected, the driver will be alerted via the outside rear view side mirror indicators.

Rear Cross Traffic Alert function:

While in reverse, when a vehicle approaching from the right or left rear of the Prius is detected, the outside rear view mirror indicators will flash. Also, the RCTA detection screen will be shown on the display and the RCTA buzzer will sound.


SYSTEM ON/OFF

- (1) Press “◀ ▶” switches and select “⚙️” from the Multi-Information Display (MID).
- (2) Press “⏪ ⏩” switches and select “🚗” and then press “⏵.” The setting screen is displayed.
- (3) Press “⏵” to select the desired setting (ON/OFF).
- (4) Press “⏪” to go back to the menu.

Note: Once the systems are disabled, the systems will not be enabled until they are enabled by the screen of Multi-Information Display (MID) again. (The systems are not automatically enabled even when the hybrid system is restarted.)

Refer to the Owner's Manual for limitations and more details on this system before attempting to use it.

Rear view monitor system

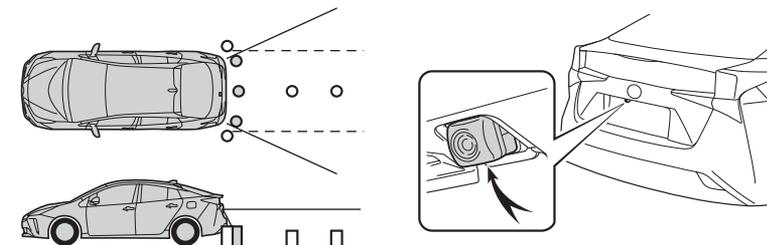


The rear view monitor system displays an image of the view from the bumper of the rear area of the vehicle. The camera for the rear view monitor system is located above the license plate.

To adjust the image on the rear view monitor screen, press the “MENU” button and select “Display.” Select “Camera” to adjust the screen contrast and brightness.

Refer to the *Navigation System Owner’s Manual* or *Multimedia Owner’s Manual* for limitations and more details on this system.


Clock

Vehicles equipped with 7-in display

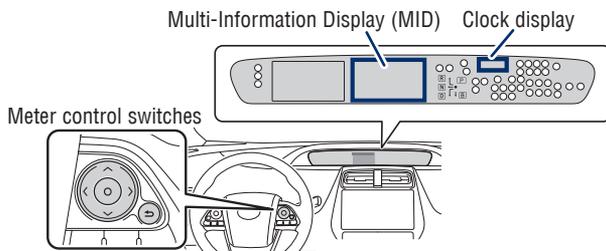

To adjust the time, use meter control switches to go to the  screen on the MID. Then, select the    option to access the clock setting.

Vehicles equipped with 11.6-in display

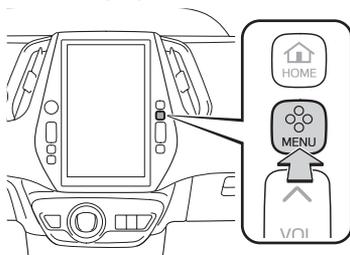

To adjust the time, press  to select . Then select  to access General Settings screen. From here, select “System Time” to access clock setting.

Quick overview-Toyota Safety Sense™ 2.0

Toyota Safety Sense™ 2.0 (TSS 2.0) is a set of active safety technologies designed to help mitigate or prevent collisions across a wide range of traffic situations, in certain conditions. TSS 2.0 is designed to help support the driver's awareness, decision making and vehicle operation contributing to a safe driving experience.

Refer to the Owner's Manual for operation, setting adjustments, limitations and more details to understand these functions and complete safety precautions. For more information, please go to www.toyota.com/safety-sense.



Pre-Collision System with Pedestrian Detection (PCS w/PD)

PCS w/PD is designed to provide alert, mitigation, and/or avoidance support in certain conditions, when the system detects a potential collision with a preceding vehicle is likely to occur.

The advanced grille-mounted radar system is designed to work with the forward-facing camera to help recognize a preceding pedestrian or bicyclist, and provide an alert, mitigation and/or avoidance support in certain conditions.



Lane Departure Alert with Steering Assist (LDA w/SA)

LDA w/SA is designed to provide notification when the system detects an unintended lane departure.

The Steering Assist function is designed to provide small corrective steering inputs to the steering wheel for a short period of time to help keep the vehicle in its lane.

The Sway Warning function is designed to detect vehicle swaying (based on the vehicle location and steering wheel operation) and alert drivers with an audio and visual alert, urging them to take a break.



Lane Tracing Assist (LTA)

LTA is designed to help keep the vehicle in the center of a lane by assisting the driver in steering control when using Full-Speed Range DRCC.



 
Full-Speed Range Dynamic Radar Cruise Control (DRCC)

Full-Speed Range DRCC is designed to help maintain a pre-set distance to a preceding vehicle when the preceding vehicle is traveling at a lower speed. The minimum set speed is approximately 20 MPH, but once activated, the operating speed range is 0-110 MPH.



Automatic High Beams (AHB)

AHB is designed to detect the headlights of oncoming vehicles and the tail lights of preceding vehicles and switch between high beams and low beams as appropriate.




Road Sign Assist (RSA)


RSA is designed to recognize specific road signs using the forward-facing camera to provide information to the driver via the display.

Sensors

TSS 2.0 combines a forward-facing camera mounted in front of the inside rear view mirror and a grille-mounted radar mounted in the front grille. These sensors support the driver assist systems.

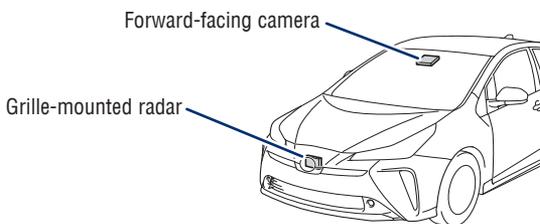

Pre-Collision System with Pedestrian Detection (PCS w/PD)

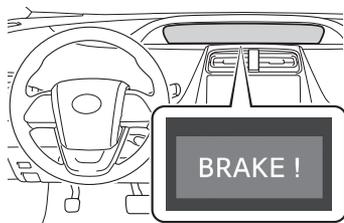

The Pre-Collision System with Pedestrian Detection (PCS w/PD) is designed to help detect a vehicle, a bicyclist, or a pedestrian in certain situations. Using both a camera and radar, PCS w/ PD can provide an audio/visual alert to warn you of a possible collision under certain circumstances. If you don't react, the system is designed to automatically brake.

As there is a limit to the degree of recognition accuracy and control performance that this system can provide, do not overly rely on this system. This system will not prevent collisions or lessen collision damage or injury in every situation. Do not use PCS instead of normal braking operations under any circumstances. Do not attempt to test the operation of the Pre-Collision System yourself, as the system may not operate or engage, possibly leading to an accident. In some situations, such as when driving in inclement weather such as heavy rain, fog, snow or a sandstorm or while driving on a curve and for a few seconds after driving on a curve, a vehicle or pedestrian or bicyclist may not be detected by the radar and camera sensors, preventing the system from operating or engaging properly.

See www.toyota.com/safety-sense for more information.

Refer to the Toyota Owner's Manual for a list of additional situations in which the system operation may be limited.

PRE-COLLISION SYSTEM (CONTINUED)

Pre-Collision Warning

When the system determines that the possibility of a frontal collision is high, a buzzer will sound and a warning message will be displayed on the Multi-Information Display (MID) to urge the driver to take evasive action.

Pre-Collision Brake Assist

If the driver notices the hazard and brakes, the system may provide additional braking force using Brake Assist. This system may prime the brakes and may apply greater braking force in relation to how strongly the brake pedal is depressed.


Pre-Collision Braking

If the driver does not brake in a set time and the system determines that the possibility of a frontal collision with a preceding vehicle is extremely high, the system may automatically apply the brakes, reducing speed in order to help the driver reduce the impact and in certain cases avoid the collision.

Refer to the Toyota Owner's Manual for additional information on PCS w/PD operation, settings, adjustments, limitations, and precautions before attempting to use it.

PCS PEDESTRIAN DETECTION


Under certain conditions, the PCS w/PD included with the TSS 2.0 package may also help to detect a pedestrian or bicyclist in front of your vehicle using the forward-facing camera and front grille-mounted radar. The forward-facing camera of PCS detects a potential pedestrian or bicyclist based on size, profile, and motion of the detected pedestrian or bicyclist. However, a pedestrian or bicyclist may not be detected depending on the conditions, including the surrounding brightness and the motion, posture, size, and angle of the potential detected pedestrian or bicyclist, preventing the system from operating or engaging.

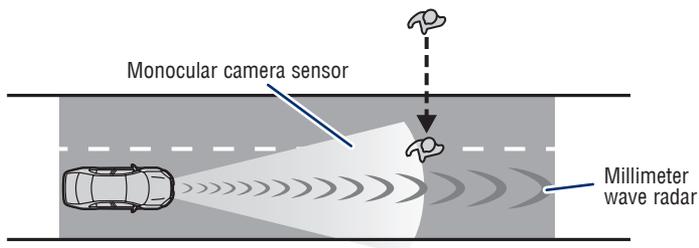

As part of the Pre-Collision System, this function is also designed to first provide an alert and then automatic braking if needed.

Refer to the Toyota Owner's Manual for additional limitations and information.


CHANGING PRE-COLLISION ALERT TIMING

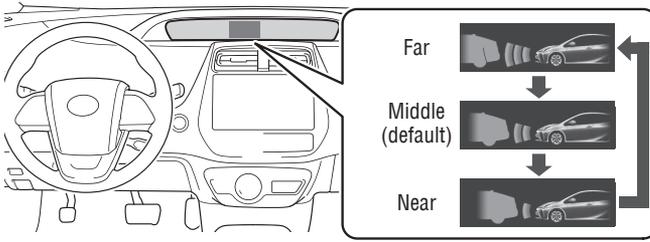

- (1) Press “ ” switches and select “” from the Multi-Information Display (MID).
- (2) Press “ ” switches and select “” and then press “.” The setting screen is displayed.
- (3) Press “” to select the desired setting. Each time it is pressed, the response to the PCS warning timing changes as shown above.
- (4) Press “” to go back to the menu.

Note: PCS is enabled each time the vehicle is turned on. The system can be disabled/enabled and the alert timing of the system can be changed. (Alert timing only, brake operation remains the same.)

DISABLING PRE-COLLISION SYSTEM (PCS)

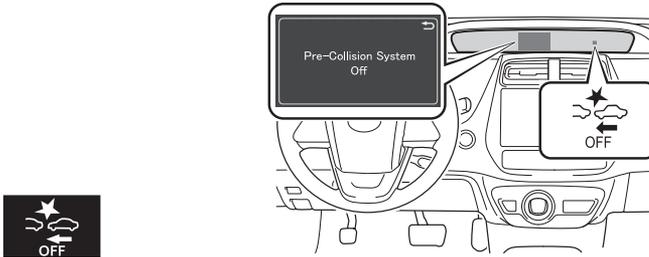


- (1) Press “ ” switches and select “” from the Multi-Information Display (MID).
- (2) Press “ ” switches and select “” and then press “.” The setting screen is displayed.
- (3) Press “” to select the desired setting (ON/OFF).
- (4) Press “” to go back to the menu.

Note: The system is enabled each time the vehicle is turned on.

Refer to the Toyota Owner's Manual for additional information on PCS w/PD operation, settings, adjustments, limitations, and precautions before attempting to use it.

Lane Departure Alert with Steering Assist (LDA w/SA)

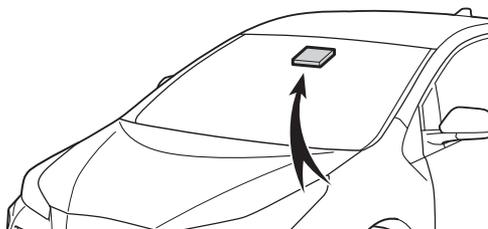


By detecting visible white/yellow lane markings or the road's edge at speeds above 32 mph, Lane Departure Alert with Steering Assist (LDA w/SA) is designed to issue an audio/visual alert if an inadvertent lane departure is detected. If the driver does not take corrective action, the Steering Assist function is designed to provide gentle corrective steering.*

* See www.toyota.com/safety-sense for more information.

Refer to the Toyota Owner's Manual for a list of additional situations in which the system operation may be limited.

TURNING THE LDA SYSTEM ON/OFF

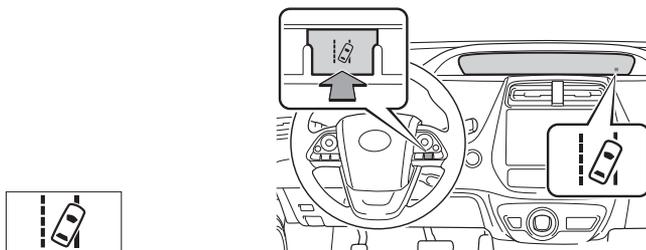


Press the LDA switch to turn the LDA system on. Depress again to turn it off.

Note: Operation of the LDA system and setting adjustments continues in the same condition regardless of ignition cycle until changed by the driver or the system is reset.

Refer to the Toyota Owner's Manual for additional information on LDA operation, settings, adjustments, limitations, and precautions before attempting to use it.


LDA function display

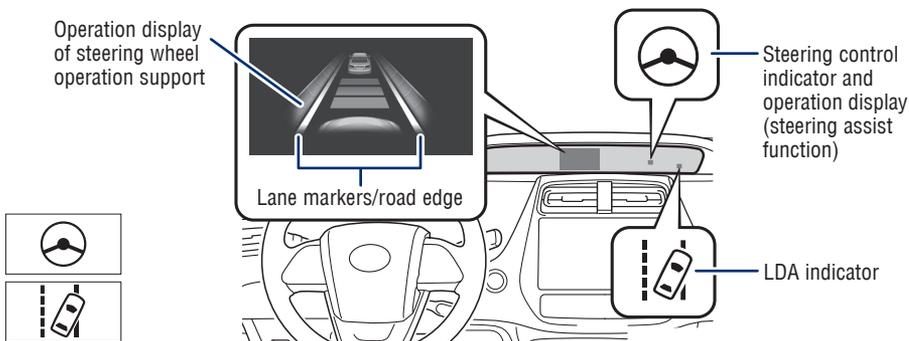

Lane Departure Alert (LDA) indicator flashes orange when operating.



(1)

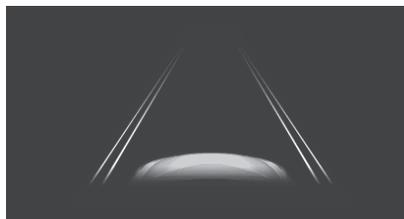

(2)

The LDA function “” displays when the Multi-Information Display (MID) is switched to the driving assist system information screen.

- (1) The system displays solid white lines on the LDA indicator when visible lane markers or the road are detected. A side flashes orange to alert the driver when the vehicle deviates from its lane.
- (2) The system displays outlines on the LDA indicator when lane markers or the road are not detected or the function is temporarily canceled.

Note: When operation conditions are no longer met, a function may be temporarily canceled. However, when the operation conditions are met again, operation of the function is automatically restored. For example, LDA may not function on the side(s) where white/yellow lines are not detectable.

DISABLING STEERING ASSIST

- (1) Press “◀ ▶” switches and select “” from the Multi-Information Display (MID).
- (2) Press “▲ ▼” switches and select the “” and then press “.” The setting screen is displayed.
- (3) Press “” to select the desired setting (ON/OFF).
- (4) Press “” to go back to the menu.

Note: Operation of the LDA system and setting adjustments continues in the same condition regardless of ignition cycle until changed by the driver or the system is reset.

ADJUSTING LDA ALERT SENSITIVITY

The driver can adjust the sensitivity of the LDA (warning) function from the Multi-Information Display (MID) customization screen.

High - Is designed to warn approximately before the front tire crosses the lane marker.

Normal - Is designed to warn approximately when the front tire crosses the lane marker.

- (1) Press “◀ ▶” switches and select “” from the Multi-Information Display (MID).
- (2) Press “▲ ▼” switches and select the “” and then press “.” The setting screen is displayed.
- (3) Press “” to select the desired setting (High/Standard).
- (4) Press “” to go back to the menu.

SWAY WARNING SYSTEM



Continuous lane deviations from swaying.



Gentle swaying from driver's inattentiveness.



Acute steering wheel operation after the number of operations decrease due to driver's inattentiveness.

SWS is a function of LDA and is designed to detect swaying based on the vehicle location in the lane and the driver's steering wheel operation. To help prevent swaying, the system alerts the driver using a buzzer sound and a warning display on the MID.

DISABLING LDA SWAY WARNING ALERT

- (1) Press “< >” switches and select “⚙️” from the Multi-Information Display (MID).
- (2) Press “⬆️ ⬇️” switches and select the “☕” and then press “⊙.” The setting screen is displayed.
- (3) Press “⊙” to select the desired setting (ON/OFF).
- (4) Press “➡️” to go back to the menu.


Note: Operation of the LDA system and setting adjustments continues in the same condition regardless of ignition cycle until changed by the driver or the system is reset.

ADJUSTING SWAY ALERT SENSITIVITY

- (1) Press “< >” switches and select “⚙️” from the Multi-Information Display (MID).
- (2) Press “⬆️ ⬇️” switches and select the “☕📶” and then press “⊙.” The setting screen is displayed.
- (3) Press “⊙” to select the desired setting. Each time it is pressed, the response to the sway warning sensitivity changes.
- (4) Press “➡️” to go back to the menu.

Refer to the Toyota Owner's Manual for additional information on LDA operation, settings, adjustments, limitations, and precautions before attempting to use it.

Lane Tracing Assist (LTA)

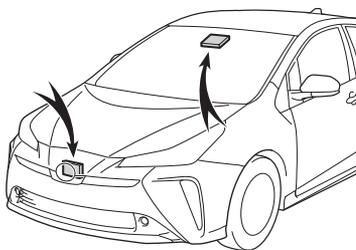


When Full-Speed Range Dynamic Radar Cruise Control (DRCC) is enabled and lane markers are detectable, Lane Tracing Assist (LTA) uses the lines on the road and/or preceding vehicles to help keep the vehicle centered in its lane.

See www.toyota.com/safety-sense for more information.

Refer to the Toyota Owner's Manual for a list of additional situations in which the system operation may be limited.

TURNING THE LTA SYSTEM ON/OFF

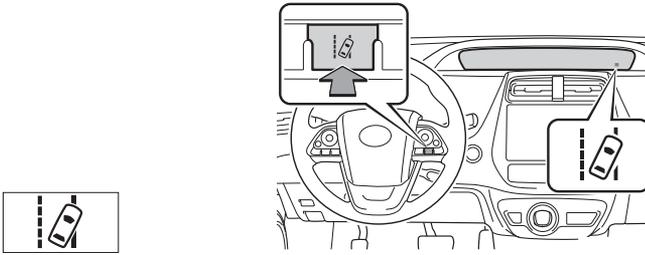


Press the LTA switch to turn the LTA system on. Depress again to turn it off.

Note: Operation of the LTA system and setting adjustments continues in the same condition regardless of Ignition cycle until changed by the driver or the system is reset.

Refer to the Toyota Owner's Manual for additional information on LTA operation, settings, adjustments, limitations, and precautions before attempting to use it.

LANE TRACING ASSIST

LTA function display

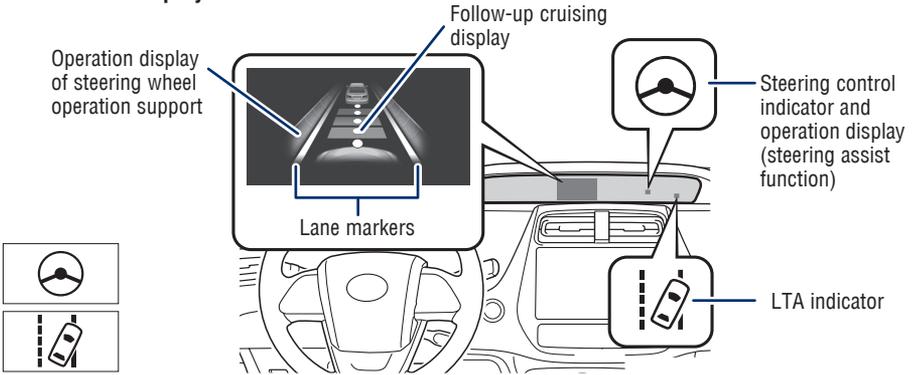

Lane departure alert (LDA) indicator flashes orange when operating.



(1)



(2)

LANE TRACING ASSIST (CONTINUED)

The LTA function  displays when the Multi-Information Display (MID) is switched to the driving assist system information screen.

- (1) The system displays solid white lines on the LTA indicator when visible lane markers on the road are detected. A side flashes orange to alert the driver when the vehicle deviates from its lane.
- (2) The system displays outlines on the LTA indicator when lane markers on the road are not detected or the function is temporarily canceled.

Note: When operation conditions are no longer met, a function may be temporarily canceled. However, when the operation conditions are met again, operation of the function is automatically restored. For example, LTA may not function on the side(s) where white/yellow lines are not detectable.

DISABLING STEERING ASSIST

- (1) Press “ ” switches and select  from the Multi-Information Display (MID).
- (2) Press “ ” switches and select the  and then press “.
 The setting screen is displayed.
- (3) Press “” to select the desired setting (ON/OFF).
- (4) Press “” to go back to the menu.

Note: Operation of the LTA system and setting adjustments continues in the same condition regardless of Ignition cycle until changed by the driver or the system is reset.

ADJUSTING LTA ALERT SENSITIVITY


The driver can adjust the sensitivity of the LTA (warning) function from the Multi-Information Display (MID) customization screen.

High - Is designed to warn approximately before the front tire crosses the lane marker.

Normal - Is designed to warn approximately when the front tire crosses the lane marker.

- (1) Press “ ” switches and select  from the Multi-Information Display (MID).
- (2) Press “ ” switches and select the  and then press “.
 The setting screen is displayed.
- (3) Press “” to select the desired setting (High/Standard).
- (4) Press “” to go back to the menu.

LANE CENTERING

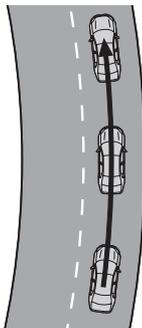

The lane centering function is linked with Full-Speed Range Dynamic Radar Cruise Control (DRCC) and provides the required assistance by operating the steering wheel to keep the vehicle in its current lane.

When Full-Speed Range Dynamic Radar Cruise Control (DRCC) is not operating, the lane centering function does not operate.

DISABLING LANE CENTERING FUNCTION

- (1) Press “ ” switches and select “” from the Multi-Information Display (MID).
- (2) Press “ ” switches and select the “ LTA” and then press “.” The setting screen is displayed.
- (3) Press “” to select the desired setting (ON/OFF).
- (4) Press “” to go back to the menu.

Note: Operation of the LTA system and setting adjustments continues in the same condition regardless of Ignition cycle until changed by the driver or the system is reset.


Refer to the Toyota Owner's Manual for additional information on LTA operation, settings, adjustments, limitations, and precautions before attempting to use it.

Full-Speed Range Dynamic Radar Cruise Control (DRCC)

Intended for highway use, Full-Speed Range Dynamic Radar Cruise Control (DRCC) lets you drive at a preset speed. The system is designed to function between 0-110 mph* and uses vehicle-to-vehicle distance control, helping maintain a preset distance from the vehicle ahead of you.*

* See www.toyota.com/safety-sense for more information.


Refer to the Toyota Owner's Manual for a list of additional situations in which the system operation may be limited.

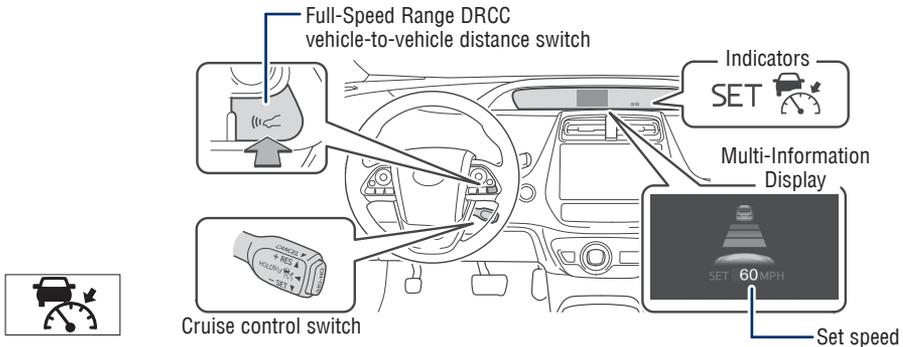

TURNING SYSTEM ON/OFF



(1)

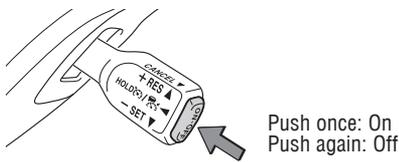


Refer to page 45 for switching to Constant Speed (Cruise) Control Mode.


ADJUSTING SET SPEED



(2)

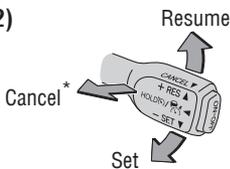

(3)

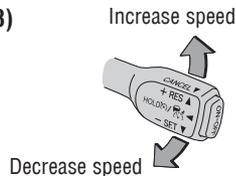


Vehicle will cruise at a set speed, decelerate to maintain a selected distance from a slower vehicle traveling in front and accelerate back up to the selected speed if the vehicle in front changes lanes or speeds up.

- (1) Push the ON-OFF button. The "RADAR READY" and "🚗" indicator will come on the Multi-Information Display (MID).
- (2) Push the lever down to set speed, push it up to resume and pull it or depress brake to cancel the speed control.
- (3) Push up to increase the set speed, push down to decrease (1 mph [1.6 km/h] or 1 km/h [0.6 mph] increments.)

* The speed control may also be canceled by depressing the brake pedal.

ADJUSTING DISTANCE

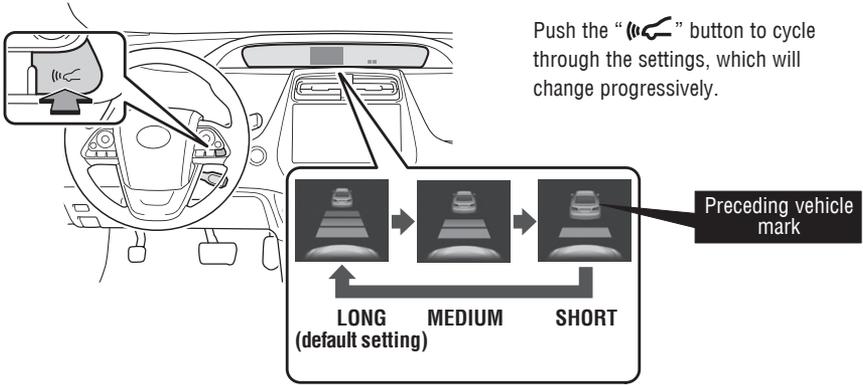


To change the vehicle-to-vehicle distance

Push the “” button to cycle through the settings, which will change progressively.

This mode employs a radar sensor to detect the presence of a preceding vehicle up to approximately 328 ft (100 m) ahead, determines the current vehicle-to-vehicle following distance and operates to maintain a preset following distance from the vehicle ahead. These distances vary based on vehicle speed.

Note: Vehicle-to-vehicle distance will close in when traveling on long downhill slopes.

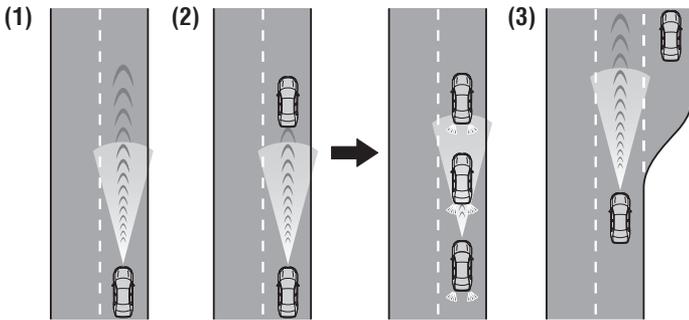

(1) Constant speed cruising when there are no vehicles ahead

The vehicle travels at the speed set by the driver. The desired vehicle-to-vehicle distance can also be set by operating the vehicle-to-vehicle distance control switch.

(2) Deceleration cruising and follow-up cruising when a preceding vehicle driving slower than the set speed appears

When a slower vehicle is detected running ahead of you, the system automatically decelerates your vehicle. When a greater reduction in vehicle speed is necessary, the system may apply the brakes (the brake lights will come on at this time.) The system will respond to changes in the speed of the vehicle ahead in order to maintain the vehicle-to-vehicle distance set by the driver. A warning tone warns you when the system cannot decelerate sufficiently to prevent your vehicle from closing in on the vehicle ahead.


ADJUSTING DISTANCE (CONTINUED)

(3) Acceleration when there are no longer any preceding vehicles driving slower than the set speed

The system accelerates until the set speed is reached. The system then returns to constant speed cruising.

Note: When your vehicle is too close to a vehicle ahead, and sufficient automatic deceleration via the cruise control is not possible, the display will flash and the buzzer will sound to alert the driver. An example of this would be if another driver cuts in front of you while you are following a vehicle. Depress the brake pedal to ensure an appropriate vehicle-to-vehicle distance.

SWITCHING TO CONSTANT SPEED (CRUISE) CONTROL MODE

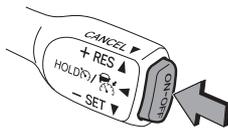


1.5 seconds

If you are already using DRCC “,” push ON-OFF button to turn the system off first, then push and hold ON-OFF button for at least 1.5 seconds to switch.

Note: When the vehicle is turned off, it will automatically default to DRCC.

SETTING CONSTANT SPEED (CRUISE) CONTROL

SET

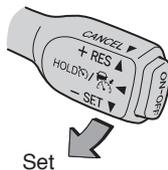


Set

To adjust speed or cancel, see steps (2) and (3) of ADJUSTING SET SPEED on page 43.

Refer to the Toyota Owner's Manual for additional information on DRCC operation, settings, adjustments, limitations, and precautions before attempting to use it.

Automatic High Beams (AHB)

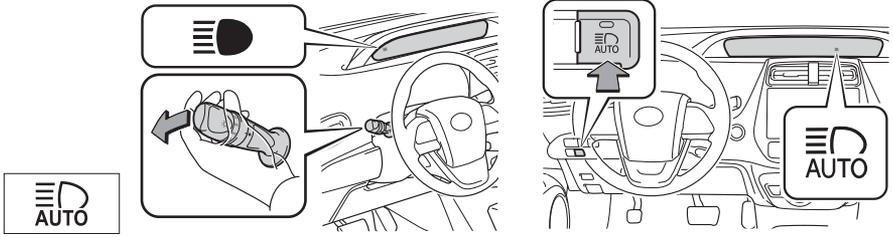

The Automatic High Beams (AHB) safety system is designed to help you see more clearly at night. At speeds above 25 mph, AHB can detect the headlights of oncoming vehicles and taillights of preceding vehicles, then automatically toggles between high and low beams accordingly.

See www.toyota.com/safety-sense for more information.

Refer to the Toyota Owner's Manual for a list of additional situations in which the system operation may be limited.

ACTIVATING THE AHB SYSTEM

- (1) Push the lever away from you with the headlight switch is in the "AUTO" or "☰D" position.
- (2) Press the "☰D AUTO" switch.

The AHB indicator will come on when the headlights are turned on automatically to indicate that the system is active.

Note: Pull the lever back toward you or press the AHB switch to turn the AHB system off.

The AHB indicator will turn off and "☰D" or "☰D" will turn on. To activate the system again, push the lever away from you or press the "☰D AUTO" switch.

CONDITIONS WHERE AHB WILL TURN ON/OFF AUTOMATICALLY

When all of the following conditions are met, the high beams will be automatically turned on (after approximately 1 second):

- Vehicle speed is above approximately 21 mph (34 km/h).
- The area ahead of the vehicle is dark.
- There are no oncoming or preceding vehicles with headlights or tail lights turned on.
- There are few street lights on the road ahead.

If any of the following conditions occur, the high beams will be automatically turned off:

- Vehicle speed drops below approximately 17 mph (27 km/h).
- The area ahead of the vehicle is not dark.
- Oncoming or preceding vehicles have headlights or tail lights turned on.
- There are many streetlights on the road ahead.

Road Sign Assist (RSA)


Using an intelligent camera, Road Sign Assist (RSA) is designed to detect speed limit signs, stop signs, do not enter signs and yield signs, and display them on the Multi-Information Display (MID).*

* All vehicle actions must be driver-initiated and are not automated.


See www.toyota.com/safety-sense for model applicability.

Refer to the Toyota Owner's Manual for a list of additional situations in which the system operation may be limited.

RSA DISPLAY

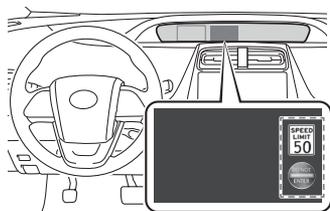

When the driving assist system information is selected, a maximum of 2 signs can be displayed.

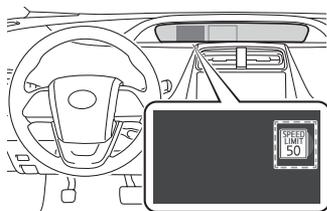

When a tab other than the driving assist system information is selected, the following types of road signs will be displayed.

- Speed limit sign
- Do Not Enter sign (when notification is necessary)

SUPPORTED TYPES OF ROAD SIGNS



Speed limit



Stop



Do Not Enter



Yield

SETTING RSA


- (1) Press “◀ ▶” switches and select “⚙️” from the Multi-Information Display (MID).
- (2) Press “⏪ ⏩” switches and select the “🚗” setting function and then press “⊙”.
- (3) Press “⊙” to select the desired setting (ON/OFF).
- (4) Press “➡” to go back to the menu.

Note: If the vehicle was last turned off while a speed limit sign was displayed on the Multi-Information Display (MID), the same sign displays again when the vehicle is turned on.

Refer to the Toyota Owner's Manual for additional information on RSA operation, settings, adjustments, limitations, and precautions before attempting to use it.

SAFETY & EMERGENCY FEATURES


Seat belts

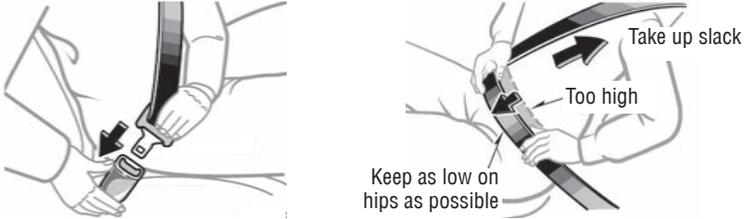

NOTE: If a passenger's seat belt is fully extended, then retracted even slightly, the Automatic Locking Retractor (ALR) will prevent it from being re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the Owner's Manual.

Seat belts - Shoulder belt anchor

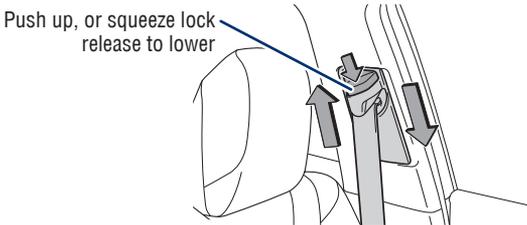


Rear door child safety locks

Rear door



Moving the lever downward will allow the door to be opened only from the outside.

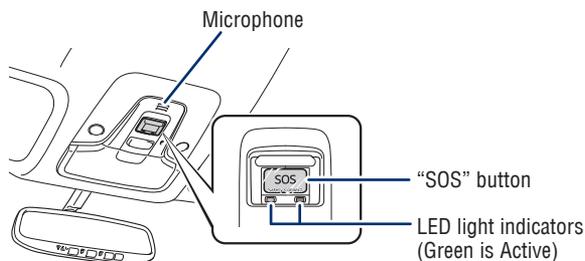

Safety Connect is a subscription-based telematics service that uses Global Positioning System (GPS) data and embedded cellular technology to provide safety and security features to subscribers. Safety Connect is staffed with live agents at the Toyota response center, which operates 24 hours per day, 7 days per week.

Services for subscribers include:

- Automatic collision notification
- Stolen vehicle locator
- Emergency assistance ("SOS" button)
- Enhanced roadside assistance


For limitations and additional information, refer to the "Owner's Manual" or visit www.toyota.com/connected-services.

SAFETY & EMERGENCY FEATURES


Spare tire & tools (if equipped)

TOOL LOCATION

With compact spare tire (if equipped)

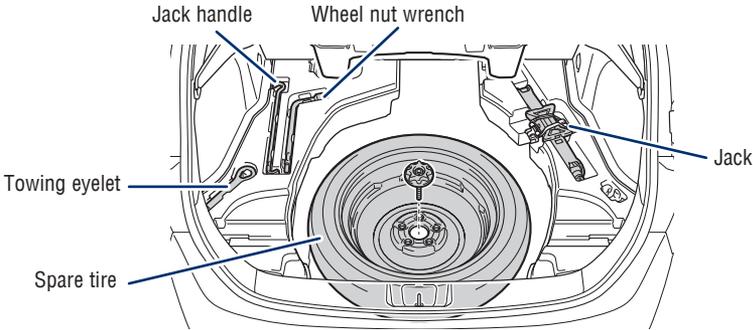


With full-size spare tire (if equipped)


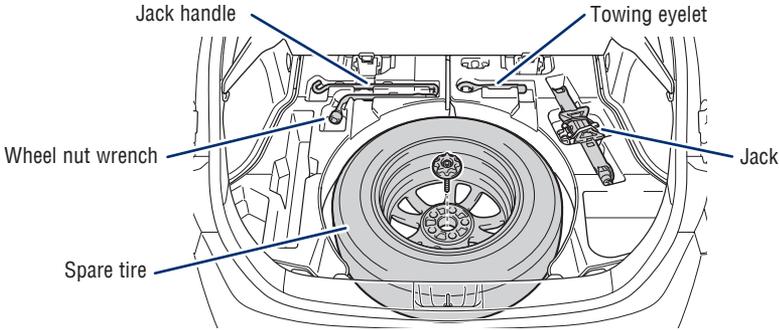


REMOVING THE SPARE TIRE

With compact spare tire

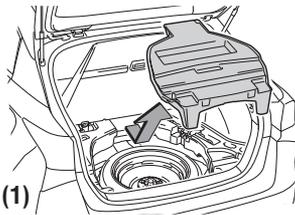

With full-size spare tire

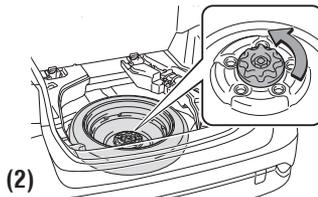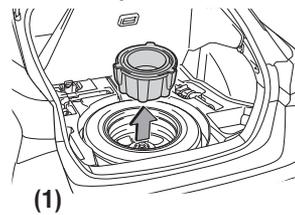


Refer to the Owner's Manual for tire changing and jack positioning procedures.


Tire repair kit & tools (if equipped)

TOOL LOCATION


2WD models

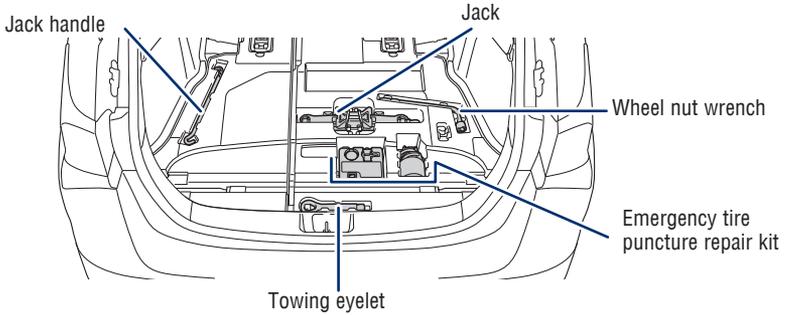

AWD models

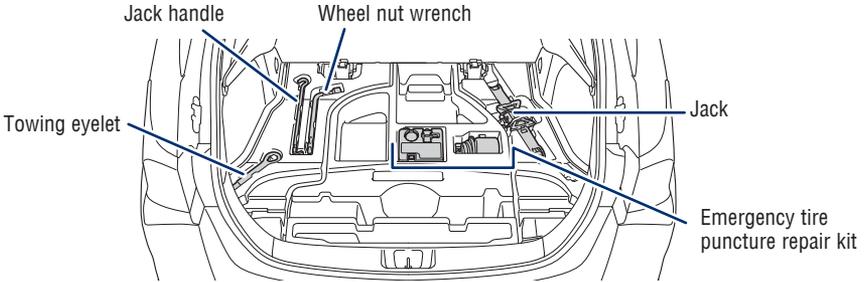


Tire repair kit components

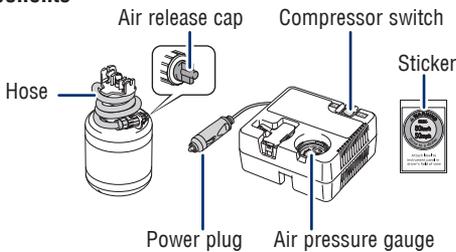

Refer to the Owner's Manual for more details.

SAFETY & EMERGENCY FEATURES

Tire Pressure Monitoring (warning) System (TPMS)

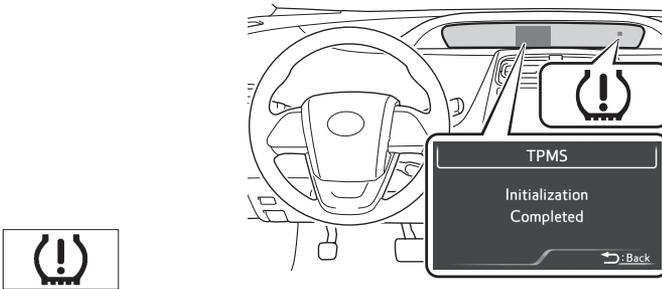

The tire pressure warning system can be selected on “” of the Multi-Information Display (MID).

System reset initialization

- (1) Press “ ” switches and select “” from the Multi-Information Display (MID).
- (2) Press “ ” switches and select the “”, then press “.”
- (3) Press “ ” switches and select “Maintenance System” and then press “.”
- (4) Press “ ” switches and select “TPMS” then push and hold “” until the message is displayed on the Multi-Information Display (MID) and the tire pressure warning light illuminates.

The tire pressure detected by the tire pressure warning system can be displayed on the Multi-Information Display (MID).

If the tire pressure indicator flashes for 1 minute and then remains on, take the vehicle to your local Toyota dealer.

Refer to the load label on the door jamb or the Owner's Manual for tire inflation specifications.

NOTE: The warning light may come on due to temperature changes or changes in tire pressure from natural air leakage. If the system has not been initialized recently, setting the tire pressures to factory specifications should turn off the light.

Star Safety System™

Your vehicle comes standard with the Star Safety System™, which combines Anti-lock Braking System (ABS), Brake Assist (BA), Electronic Brake-force Distribution (EBD), Smart Stop Technology (SST), Traction Control (TRAC) and Vehicle Stability Control (VSC).

Refer to the Owner's Manual for more details and important information on limitations to these systems.

ANTI-LOCK BRAKE SYSTEM (ABS)

Toyota's Anti-lock Brake System detects which wheels are locking up and limits wheel lockup by "pulsing" each wheel's brakes independently. Pulsing releases brake pressure repeatedly for fractions of a second. This helps the tires attain the traction that current road conditions will allow, helping you to stay in directional control.

BRAKE ASSIST (BA)

Brake Assist is designed to detect sudden or "panic" braking, and then add braking pressure to help decrease the vehicle's stopping distance. When there's only a split second to react, Brake Assist can add additional brake pressure more quickly than just the driver alone can.

ELECTRONIC BRAKE FORCE DISTRIBUTION (EBD)

Toyota's ABS technology has Electronic Brake-force Distribution (EBD) to help maintain control and balance when braking. EBD responds to sudden stops by redistributing brake force to enhance the braking effectiveness of all four wheels.

SMART STOP TECHNOLOGY (SST)

Smart Stop Technology automatically reduces engine power when the accelerator and brake pedals are pressed simultaneously under certain conditions.

SST engages when the accelerator is depressed first and the brakes are applied firmly for longer than one-half second at speeds greater than five miles per hour.

SST doesn't engage if the brake pedal is depressed before the accelerator pedal, allowing vehicles to start on a steep hill and safely accelerate without rolling backward.

Refer to the Brake Override System section in the Owner's Manual for more information on Smart Stop Technology.

ENHANCED VEHICLE STABILITY CONTROL (VSC)

Enhanced Vehicle Stability Control provides cooperative control of the ABS, TRAC, VSC and EPS.

Enhanced VSC helps to maintain directional stability when loss of traction occurs during a turn.

SAFETY & EMERGENCY FEATURES

TRACTION CONTROL (TRAC)

VSC helps prevent loss of traction during cornering by reducing Hybrid System output, and Traction Control helps maintain traction on loose gravel and wet, icy, or uneven surfaces by applying brake force to the spinning wheel(s).


Toyota's TRAC sensors are activated when one of the drive wheels starts to slip. TRAC limits Hybrid System output and applies the brakes to the spinning wheel. This transfers power to the wheels that still have traction to help keep you on track.

Floor mat installation

There are two types of Toyota floor mats: carpeted and all-weather. Each vehicle has model-specific floor mats. Installation is easy.

To keep your floor mat properly positioned, follow these steps:

- Only use Toyota floor mats designed for your specific model.
- Only use one floor mat at a time, using the retaining hooks to keep the mat in place.
- Install floor mats right side up.

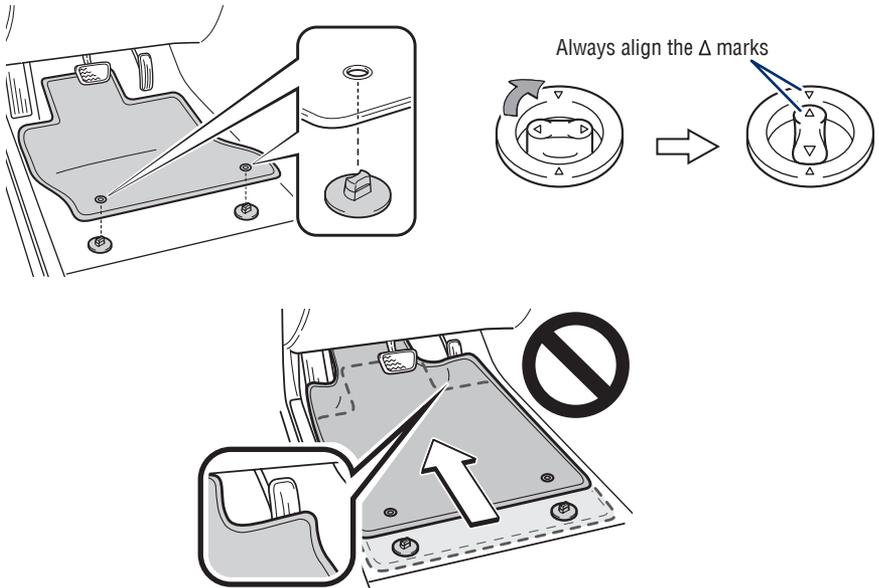

BLUETOOTH® DEVICE PAIRING SECTION

Do not attempt the Bluetooth® Pairing process while driving.

To begin the Bluetooth® Pairing process, press the HOME button.

 
Bluetooth® Pairing for your phone

Pairing your phone is the first step in connecting with your Toyota. This pairing process is quick and easy. All you have to do is setup the phone and multimedia system to form a connection.




Audio / Audio Plus / Premium Audio

STEP 1 Press [MENU], then select "Setup" on display screen.



iPhone bluetooth Menu

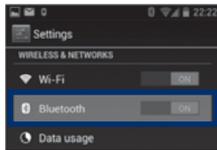


Android bluetooth Menu¹




STEP 2 Ensure Bluetooth is turned on for your phone.

STEP 3 Select "Bluetooth," then select "Add New Device" on display screen.

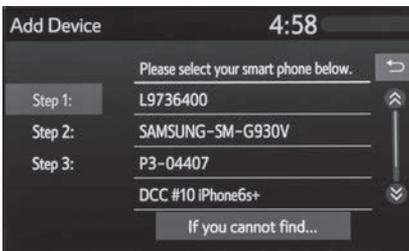

STEP 4 Select "Phone Name."

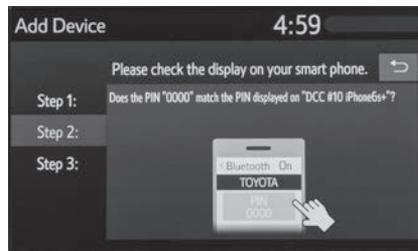

STEP 5 Check the display on your phone. Does the PIN XXXX match the PIN displayed? If it does, select "Pair."

¹ Some Android devices may have slightly different SETTINGS screen layout depending on manufacturer of device and Android OS version.

Bluetooth® Pairing for your phone (cont.)




STEP 6 "Connecting" displays while phone is forming the connection to the multimedia system.



STEP 7 Enable Notifications (text message). While pairing your phone, a message will be displayed: **"You may need to allow message access on your phone."**

Note: You may also select "Skip" on display screen to skip enabling notifications. If skipped, proceed to **Step 8**.

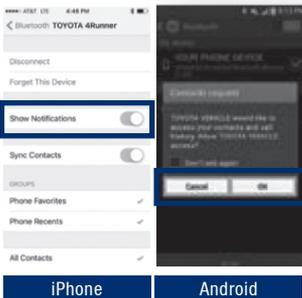

STEP 8 Turn on "Show Notifications" for iPhone or "ON" for Android.



STEP 9 A confirmation will appear once your phone has been paired and connected.

NOTES

NOTES



PRIUS

Quick Reference Guide 2022



00505QRG22PRI



Printed in U.S.A. 5/21
21-MKG-15667

toyota.com